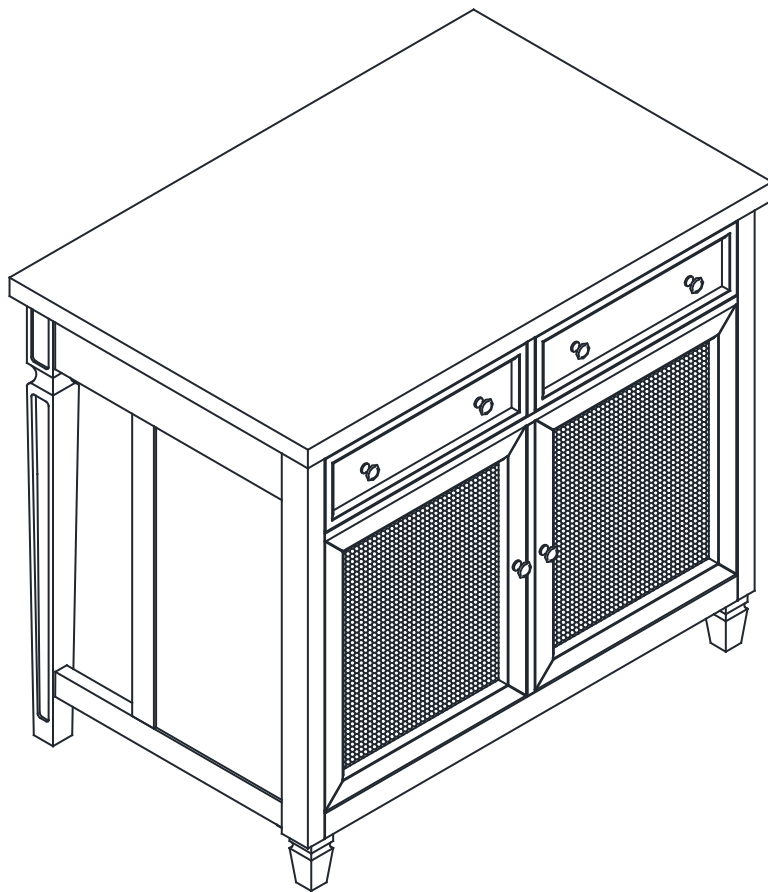




















CROSLEY

FURNITURE










Faux Marble Top Kitchen Island CF3048



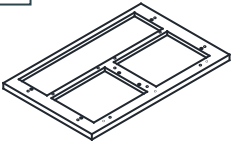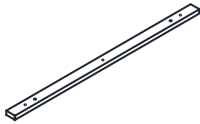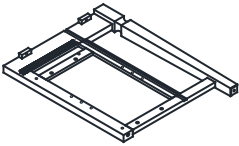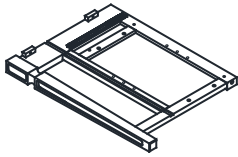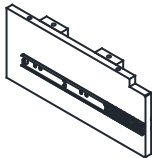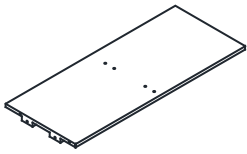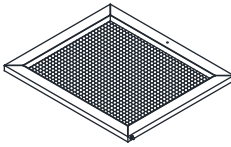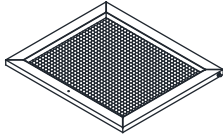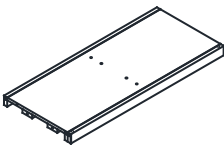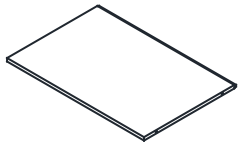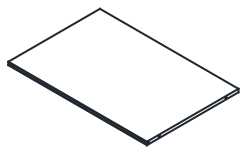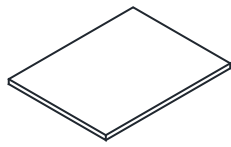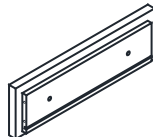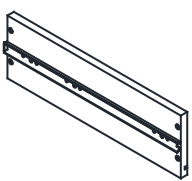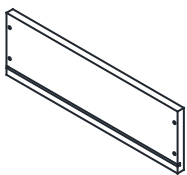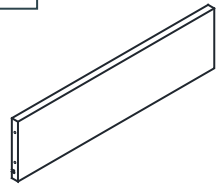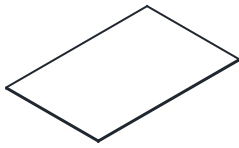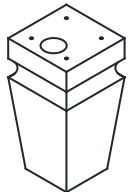PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Front Top Rail 1 PC	Left Panel 1 PC	Right Panel 1 PC	Upper Partition Panel 1 PC
F 	G 	H 	I 	J 
Middle Shelf Panel 1 PC	Lower Partition Panel 1 PC	Left Door 1 PC	Right Door 1 PC	Bottom Panel 1 PC
K 	L 	M 	N 	O 
Left Back Panel 1 PC	Right Back Panel 1 PC	Adjustable Shelf 2 PCS	Drawer Front Panel 2 PCS	Drawer Right Panel 2 PCS
P 	Q 	R 	S 	
Drawer Left Panel 2 PCS	Drawer Back Panel 2 PCS	Drawer Bottom Panel 2 PCS	Leg 2 PCS	

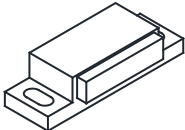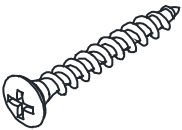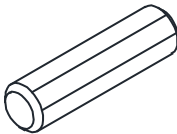HARDWARE LIST

#1  Ø8mm*1-1/8"	#2  Ø1/4"*1-1/4"	#3  Ø1/4"*3/4"	#4 	#5 
Small Wood Dowel 26 PCS (Extra 1)	Long Bolt 20 PCS (Extra 1)	Short Bolt 4 PCS (Extra 1)	Spring Washer 20 PCS (Extra 1)	Flat Washer 20 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10  Ø5/32"*1"
Shelf Holder 8 PCS (Extra 1)	Magnet 2 PCS	Round Head Screw 4 PCS (Extra 1)	Knob 6 PCS	Round Head Bolt 6 PCS (Extra 1)
#11 	#12 	#13 	#14 	#15  4mm
Flat Head Screw 27 PCS (Extra 1)	Left Metal Plate 1 PC	Right Metal Plate 1 PC	Big Wood Dowel 2 PCS	Allen Wrench 1 PC

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

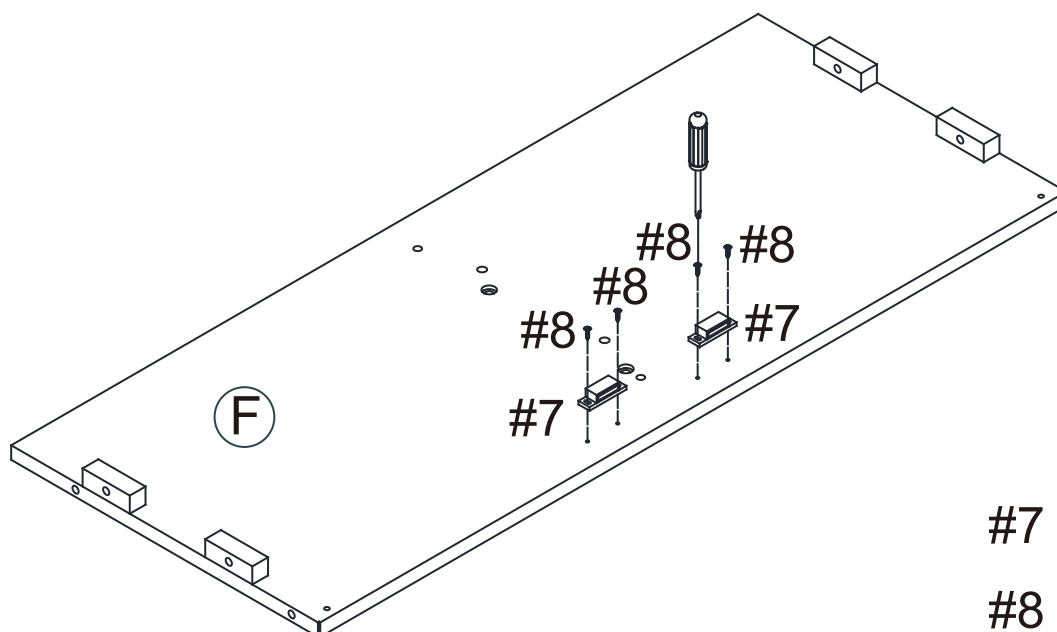Step 1. Attach magnets (part #7) to middle shelf panel (part F) using round head screws (part #8) and phillips head screwdriver.




#7		X 2
#8		X 4

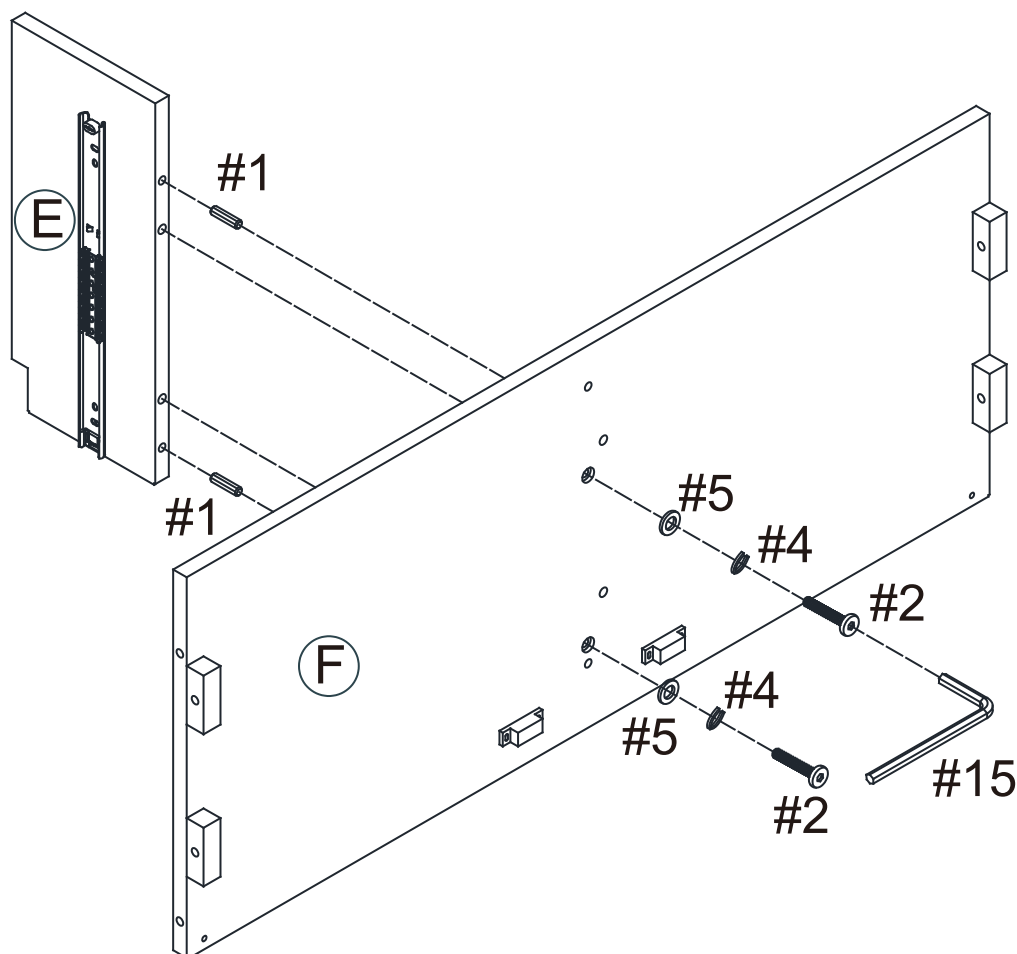
Step 2. Attach upper partition panel (part E) to middle shelf panel (part F) using small wood dowels (part #1), long bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #15).




#1		X 2
#2		X 2
#4		X 2
#5		X 2
#15		X 1

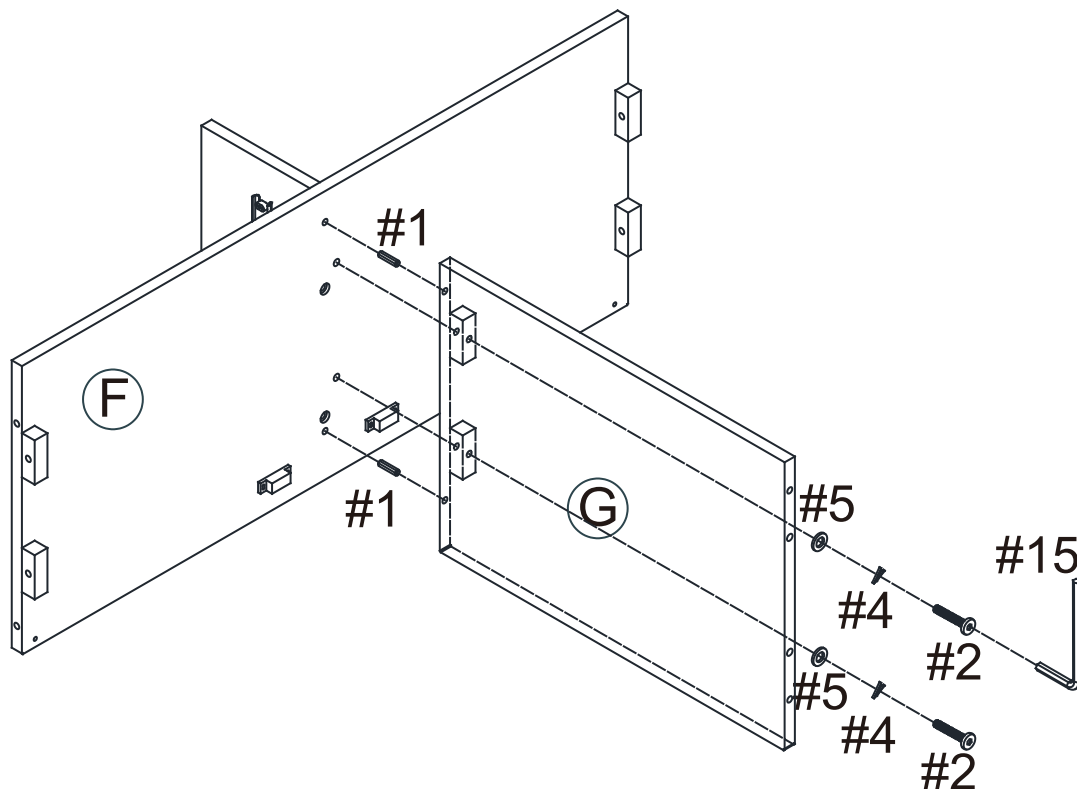
Step 3. Attach lower partition panel (part G) to middle shelf panel (part F) using small wood dowels (part #1), long bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #15).



#1		X 2
#2		X 2
#4		X 2
#5		X 2
#15		X 1

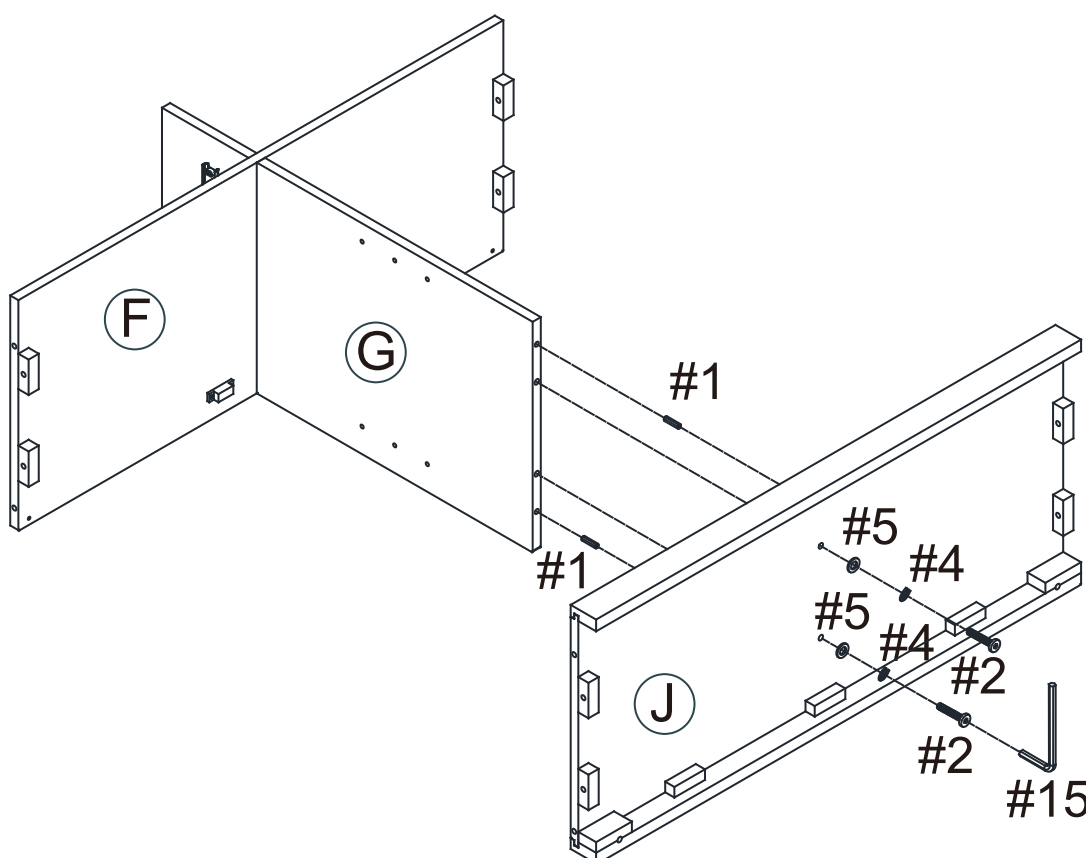Step 4. Attach bottom panel (part J) to lower partition panel (part G) using small wood dowels (part #1), long bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #15).



#1		X 2
#2		X 2
#4		X 2
#5		X 2
#15		X 1



Step 5. Attach left panel (part C) to assembled unit (parts F & J) using small wood dowels (part #1), long bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #15).

#1		X 4
#2		X 4
#4		X 4
#5		X 4
#15		X 1

Step 6. Attach right panel (part D) to assembled unit (parts F & J) using small wood dowels (part #1), long bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #15).

#1		X 4
#2		X 4
#4		X 4
#5		X 4
#15		X 1

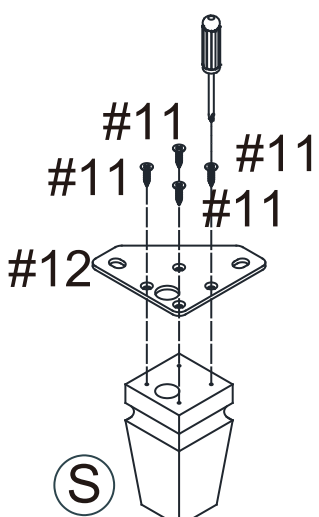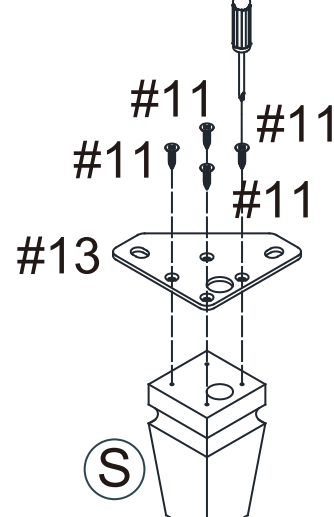Step 7. Attach left metal plate (part #12) and right metal plate (part #13) to legs (part S) using flat head screws (part #11) and phillips head screwdriver.

#11



X 8

#12



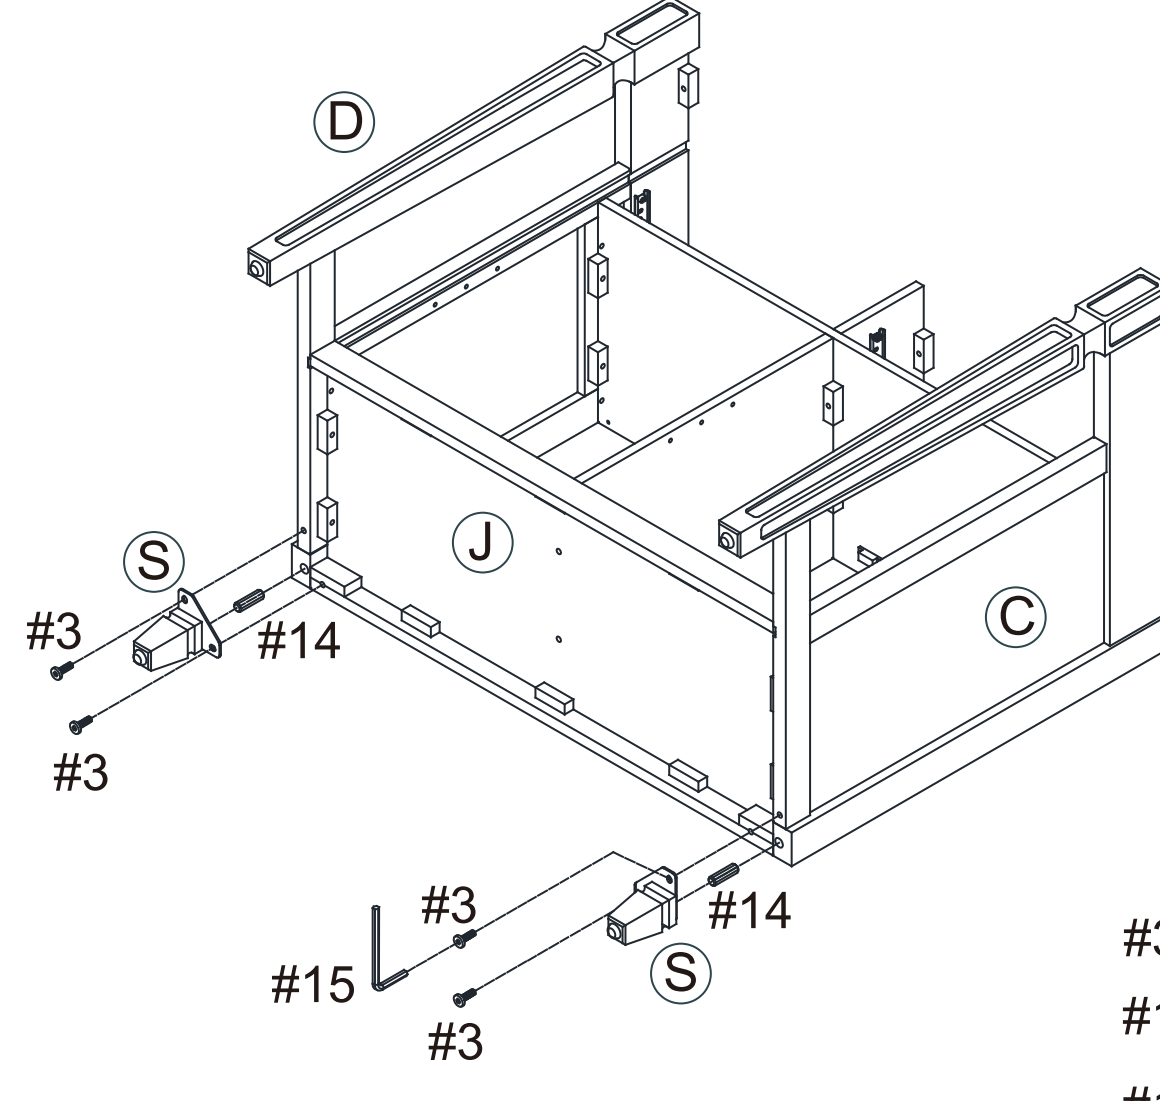
X 1

#13



X 1

Step 8. Attach legs (part S) to assembled unit (parts C, D & J) using big wood dowels (part #14), short bolts (part #3) and allen wrench (part #15).



#3



X 4

#14



X 2

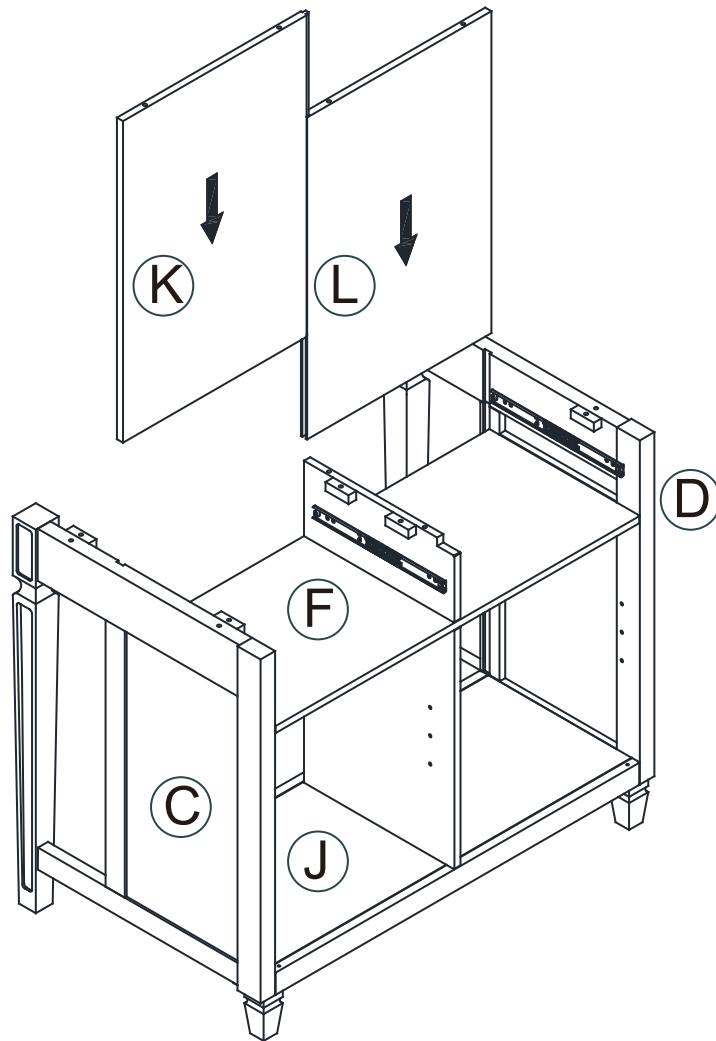
#15




X 1

Step 9. Carefully turn unit upright.

Slide back panels (parts K & L) into the grooves of assembled unit (parts C, D & J).



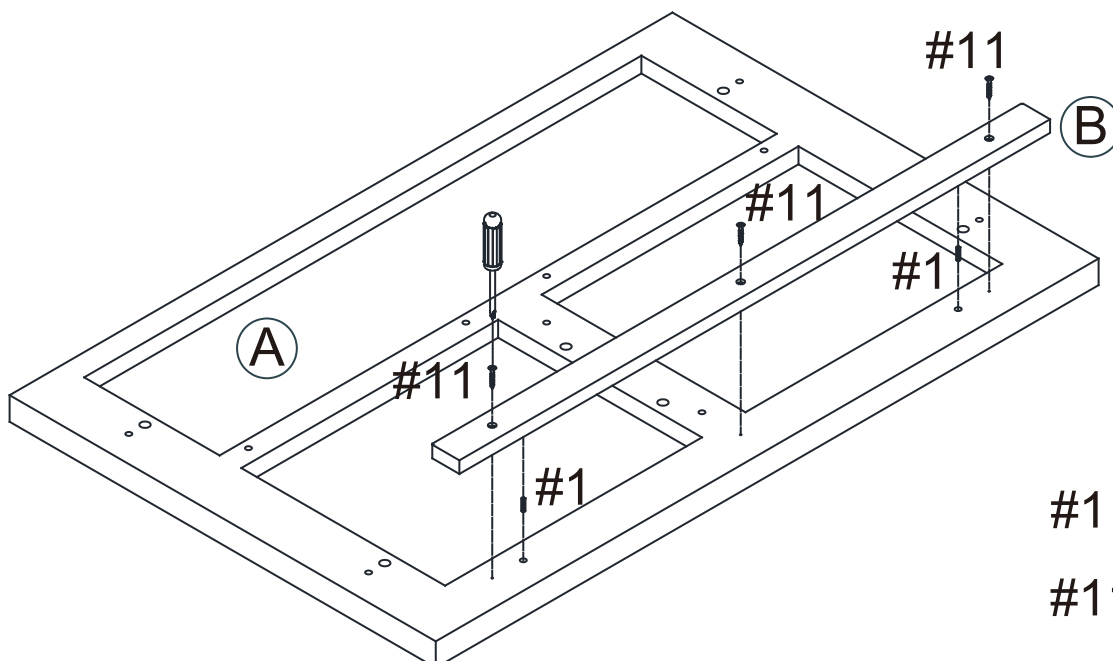
Step 10. Attach front top rail (part B) to top panel (part A) using small wood dowels (part #1), flat head screws (part #11) and phillips head screwdriver.




#1  X 2

#11  X 3

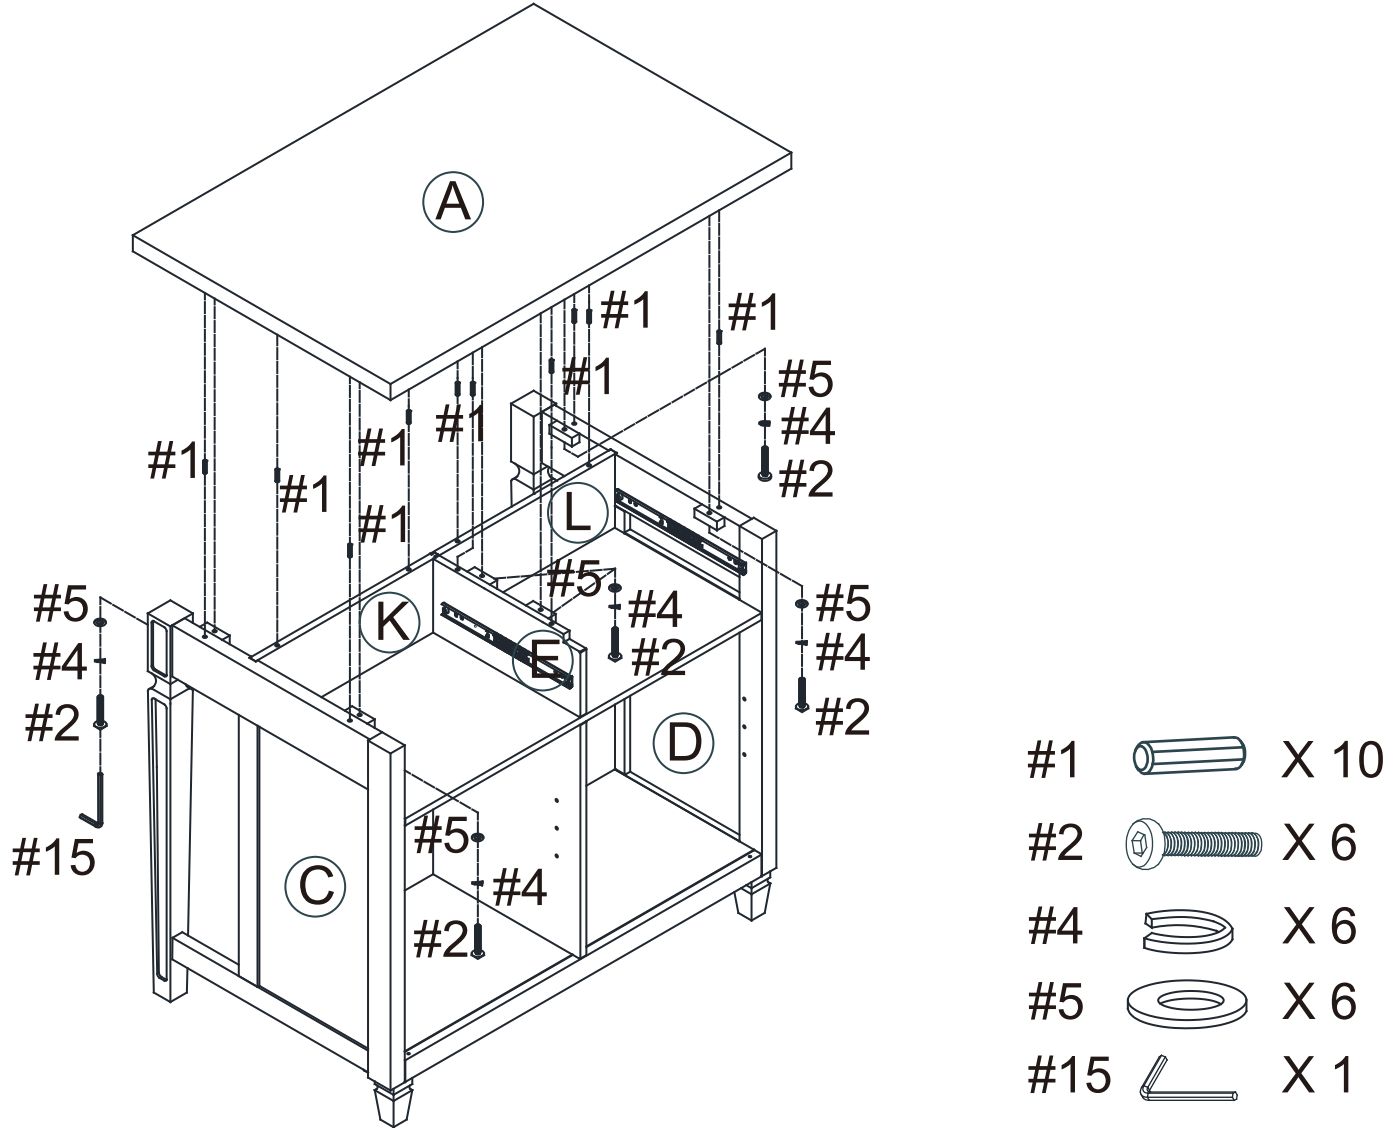
Step 11. Attach top panel (part A) to assembled unit (parts C, D, E, K & L) using small wood dowels (part #1), long bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #15).



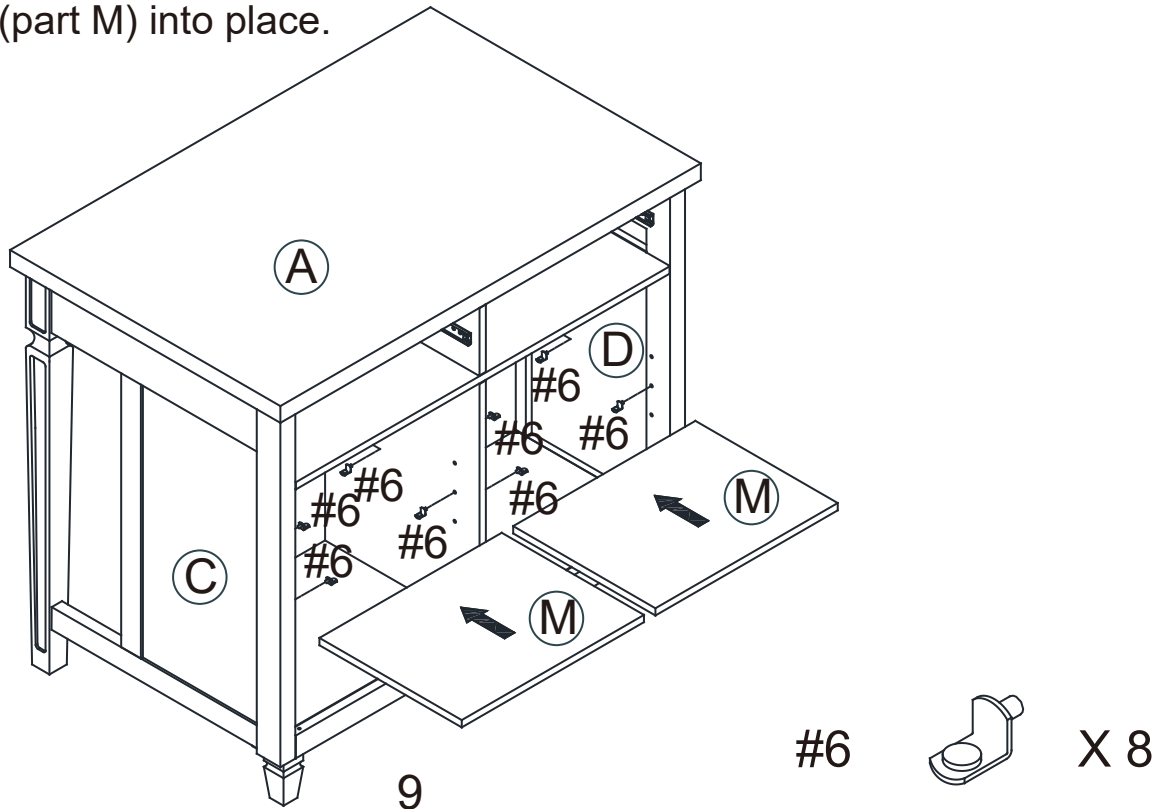Step 12. Place shelf holders (part #6) into desired position and slide adjustable shelves (part M) into place.



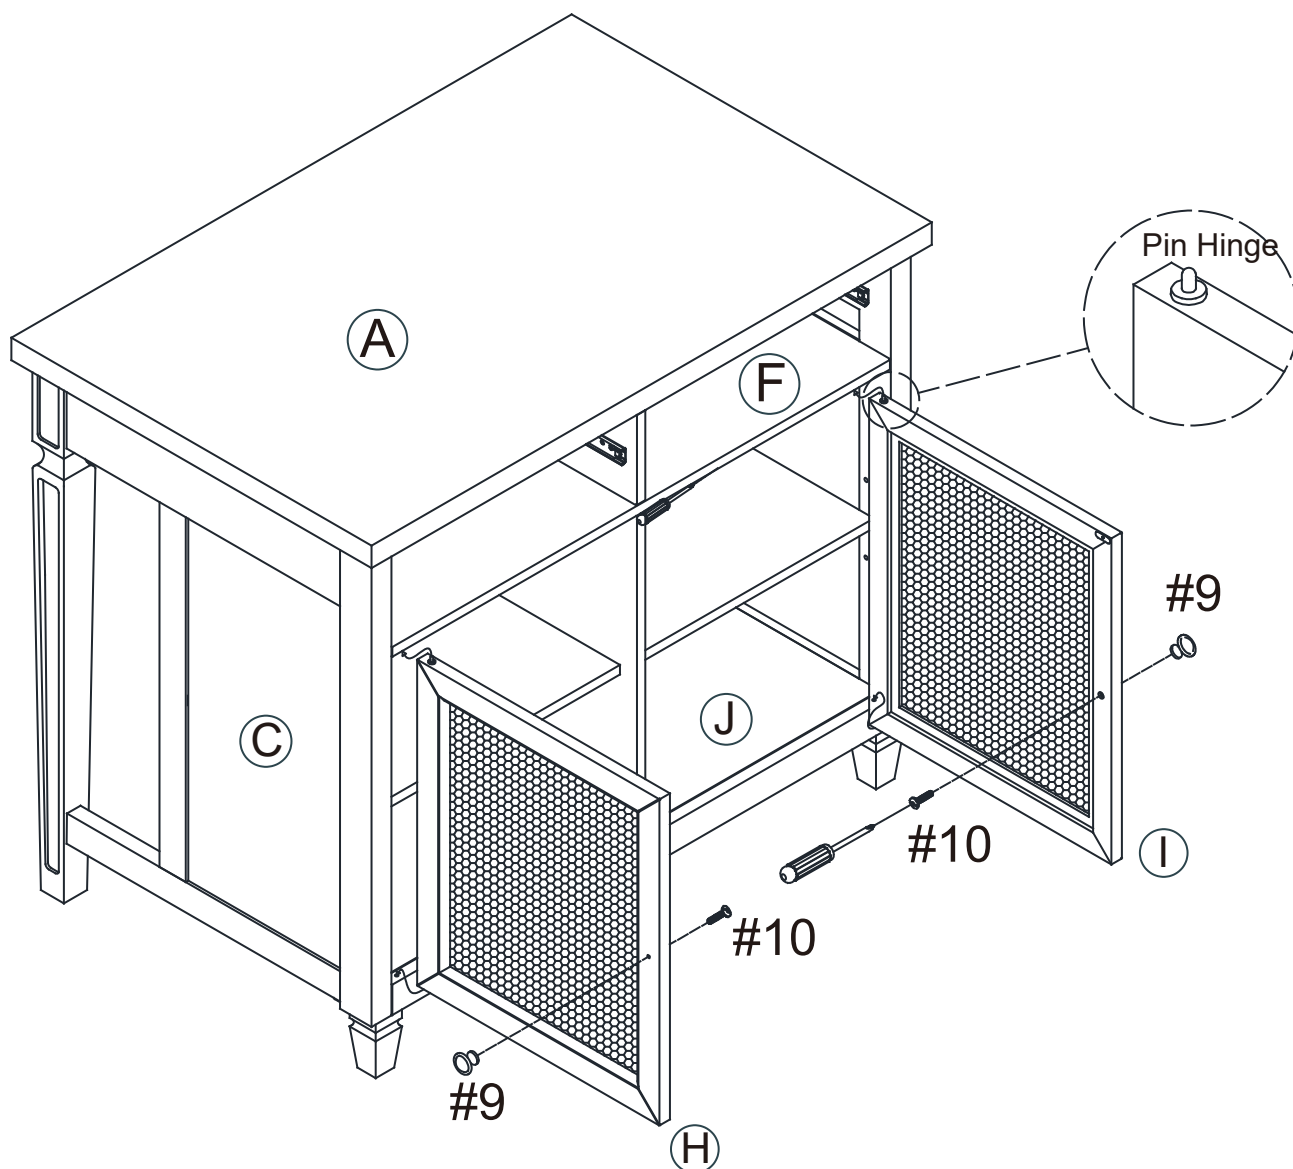
Step 13. Attach doors (parts H & I) by placing pin hinges (pre-installed in door) in the pre-drilled hole of bottom panel (part J).
 Then depress the top spring-loaded pin hinges so it can be placed in the pre-drilled hole of middle shelf panel (part F).
 Attach knobs (part #9) to doors (parts H & I) using round head bolts (part #10) and phillips head screwdriver.
 Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.




#9		X 2
#10		X 2

Step 14. Attach drawer side panels (parts O & P) to drawer front panels (part N) using flat head screws (part #11) and phillips head screwdriver. Slide drawer bottom panels (part R) into grooves of assembled unit (parts N, O & P). Attach drawer back panels (part Q) to assembled unit (parts O, P & R) using flat head screws (part #11) and phillips head screwdriver.

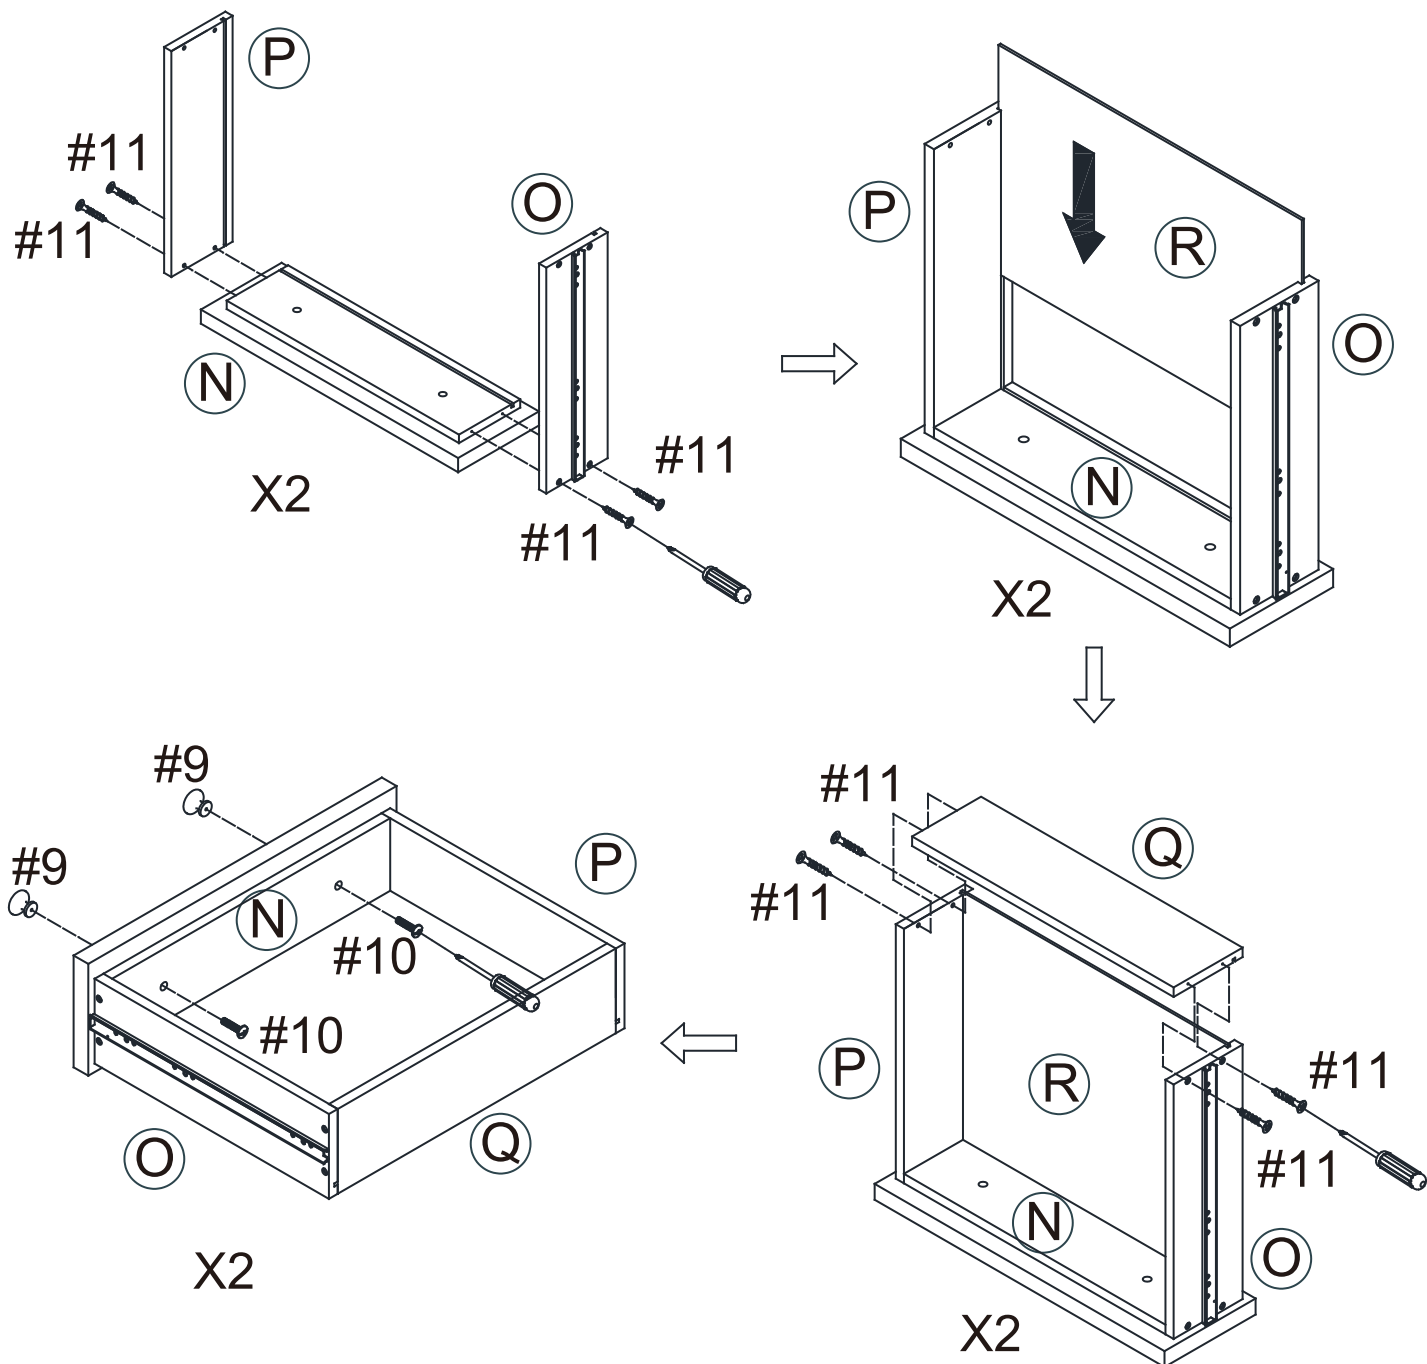
Attach knobs (part #9) to drawer front panels (part N) using round head bolts (part #10) and phillips head screwdriver.






#9		X 4
#10		X 4
#11		X 16

Step 15. Slide assembled drawers into place.

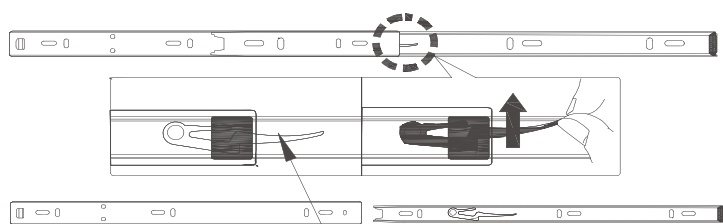NOTE: To release trigger disconnect levers push one side up and the other down.



Trigger Disconnect Lever

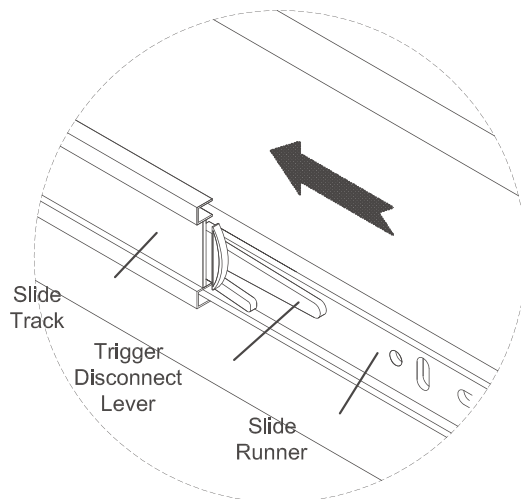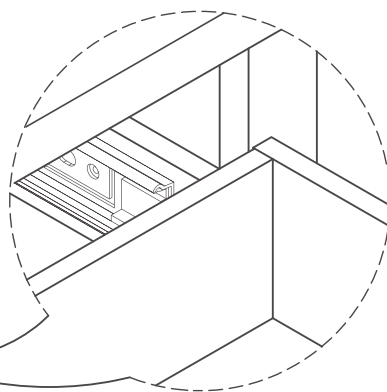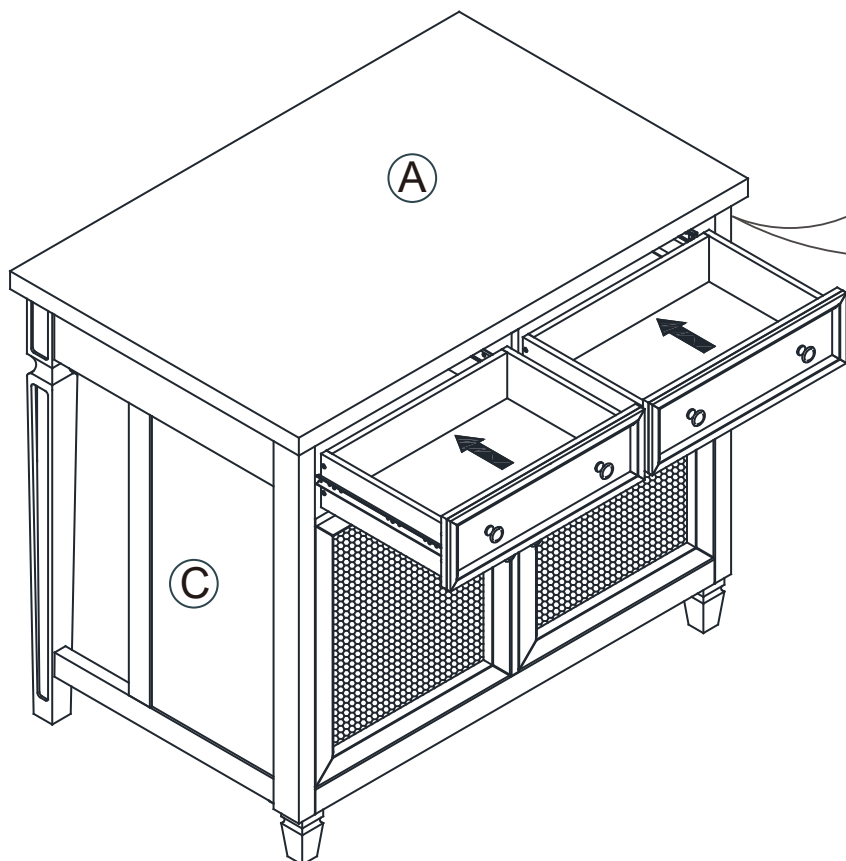

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

