


Triple-Hole Faucet Installation Guide

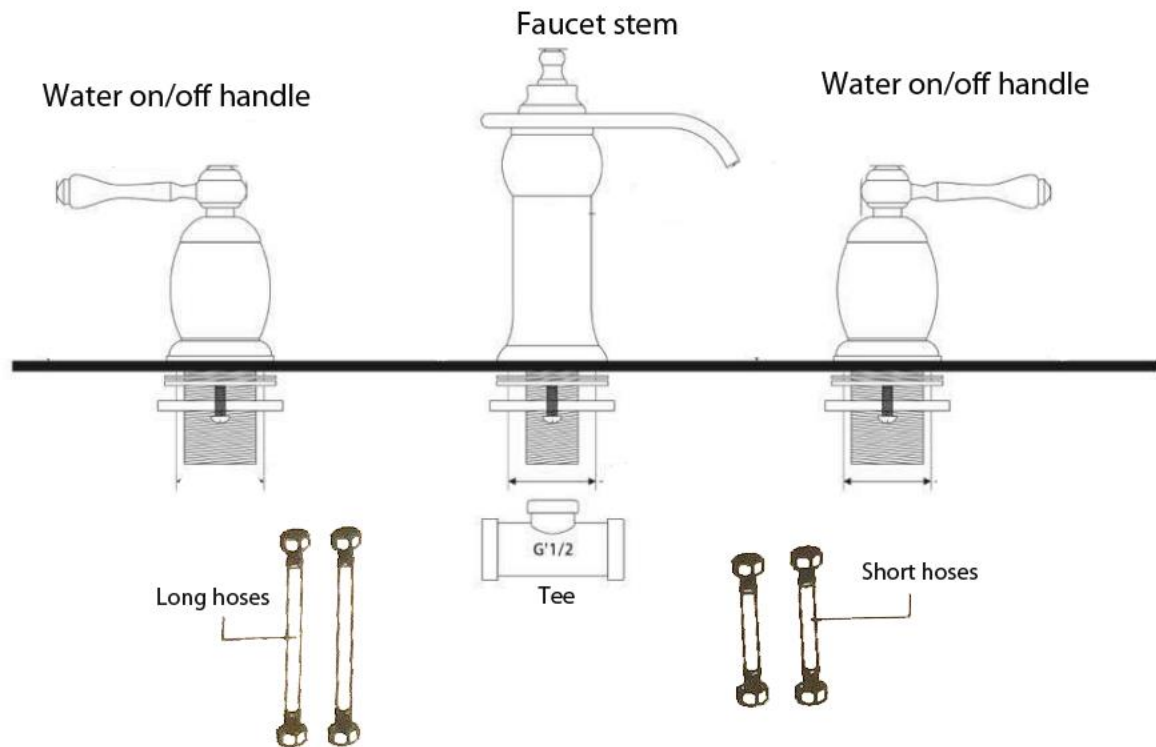

1. For each water-on/off handle, unscrew and remove the brass nut with 2 tightening screws, rubber gasket, and steel washer.
2. Attach the male end of one of the short hoses to the shorter brass fitting at the bottom of each water-on/off handle.
3. Attach the male end of one of the longer hoses to the longer brass fitting at the bottom of each water-on/off handle.
4. Put the water-on/off handle into its designated hole in vanity, loose end of the hose first.
5. From under the sink, slip the #1 rubber gasket, #2 steel washer, and #3 brass nut with 2 tightening screws (in that order) over the hoses and up to the threaded part of the water-on/off handle.
6. From under the sink, screw the brass nut with 2 tightening screws onto the threaded part of the water-on/off handle. Do not screw more than finger tight.
7. For the faucet stem, unscrew and remove the brass nut with 2 tightening screws, rubber gasket, and steel washer.

8. Put the faucet stem into its designated (center) hole in vanity and from under the sink, attach rubber gasket, steel washer, and brass nut with 2 tightening screws in the same manner as for the water-on/off handles. Screw only finger tight.
9. From under the sink, screw the brass Tee onto the bottom of the faucet stem.
10. From under the sink, attach the hoses from the water-on/off handles to the appropriate ends of the brass Tee, which connects the handles to the faucet.
11. From under the sink, attach the longer hoses to the longer brass fitting at the bottom of each water-on/off handle, and attach the other end to the water valves.
12. From under the sink, with a Phillips screwdriver, tighten the tightening screws until firm, but not too tight. Over-tightening can damage the vanity top.