

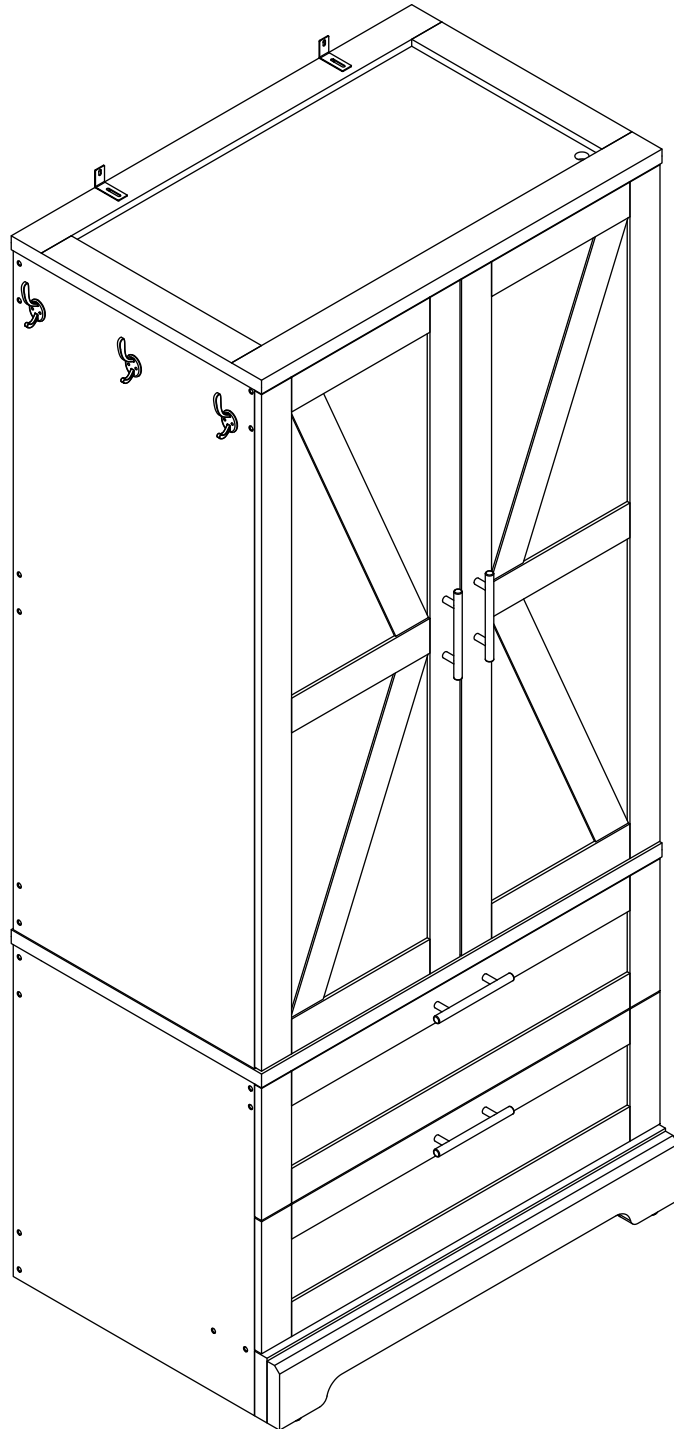



# ASSEMBLY INSTRUCTIONS

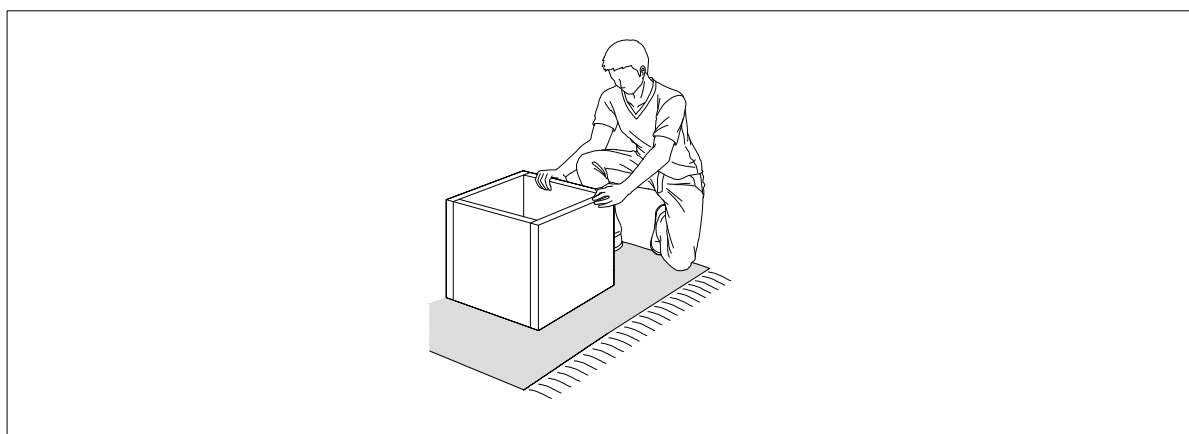

# WARNING !

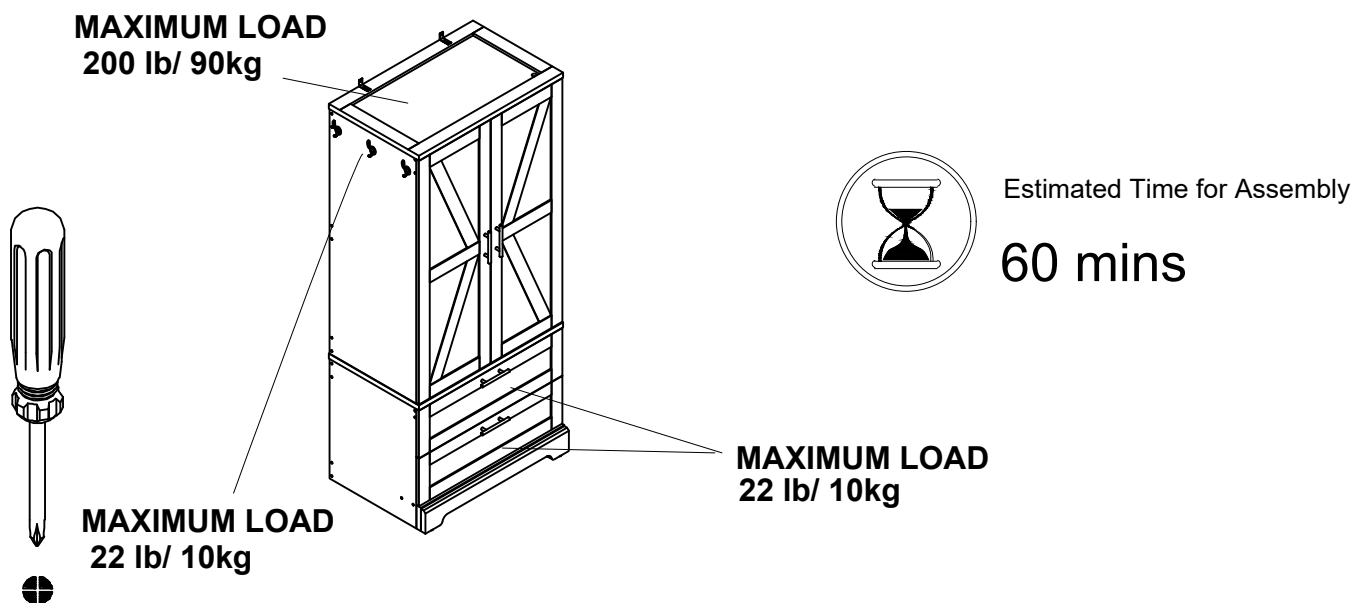

**Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.**

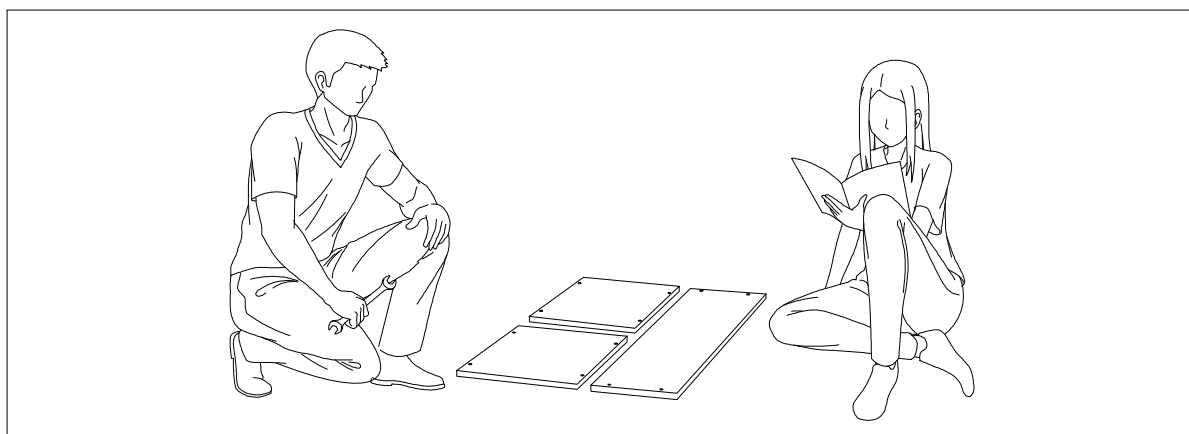


**This furniture requires 2 people to assembly.**

**Make sure no parts are missing or damaged before assembly.**


# Board Identification

Not actual size

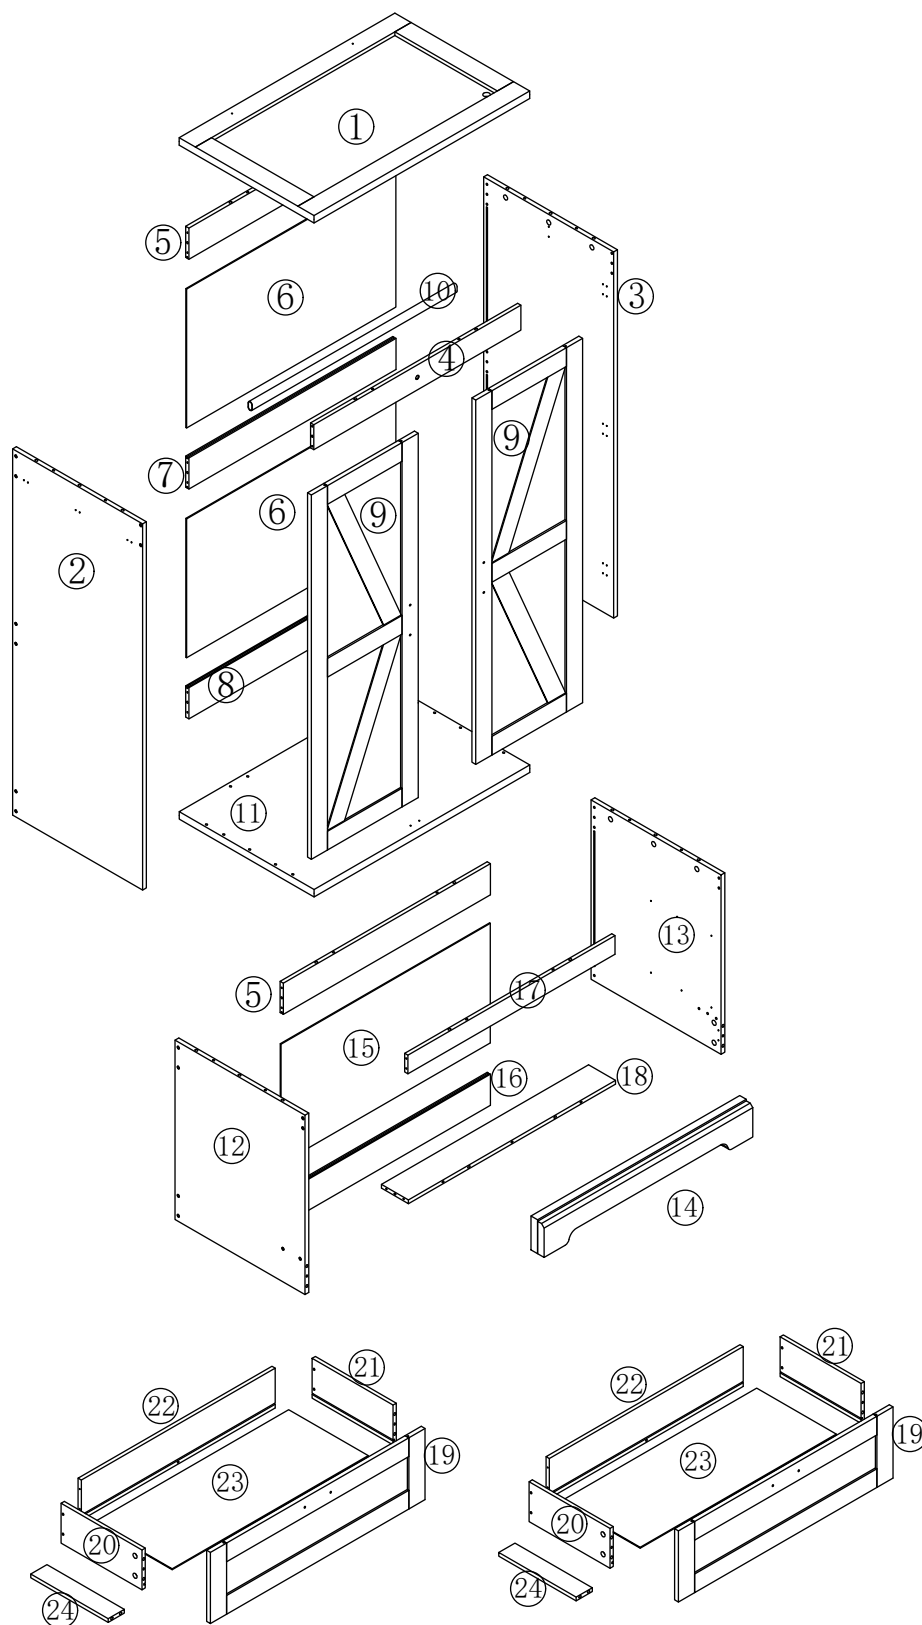


# BOARD IDENTIFICATION


Not actual size

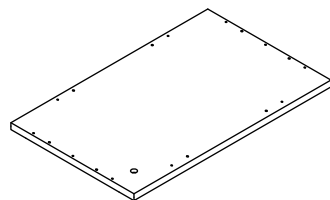


① x1

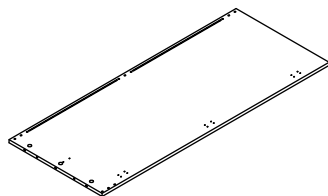


② x1

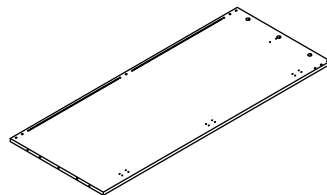


③ x1

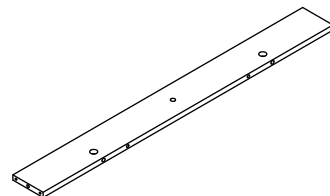


④ x1

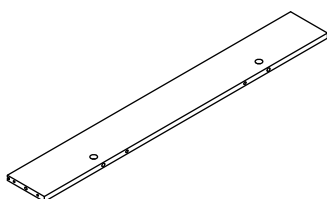


⑤ x2

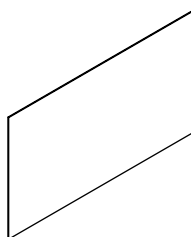


⑥ x2

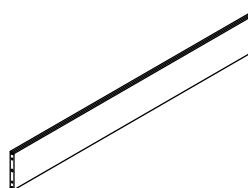


⑦ x1

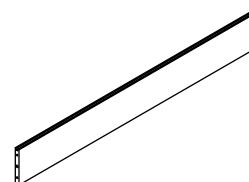


⑧ x1




⑨ x2

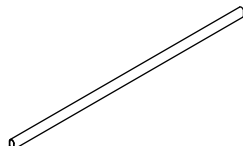


⑩ x1

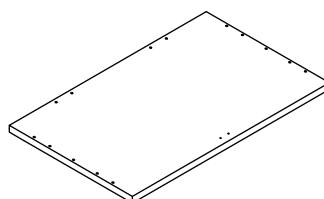


⑪ x1

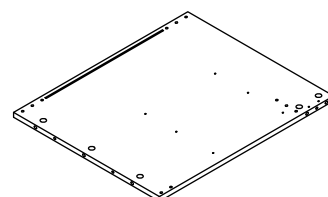


⑫ x1

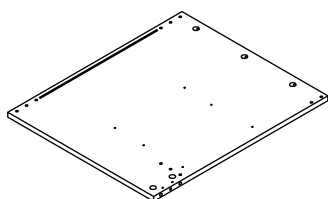


⑬ x1

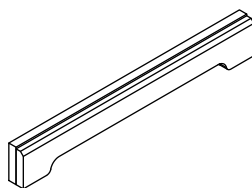


⑭ x1

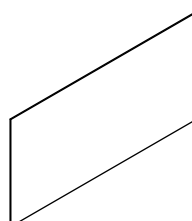


⑮ x1

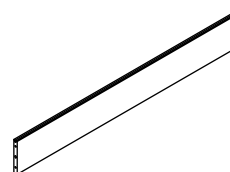


⑯ x1

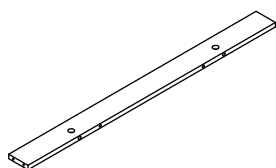


⑰ x1

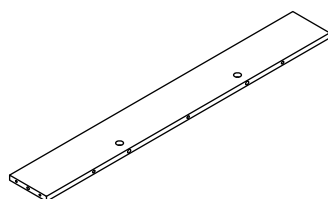

⑱ x1

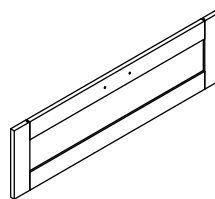


⑲ x2

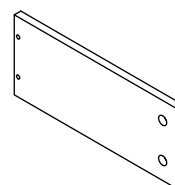


⑳ x2

# BOARD IDENTIFICATION


Not actual size

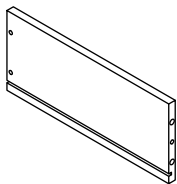


②1 x2

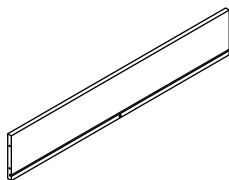

②2 x2

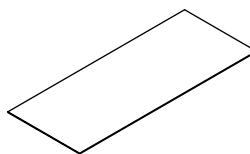





②3 x2

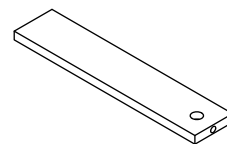













②4 x2

## Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

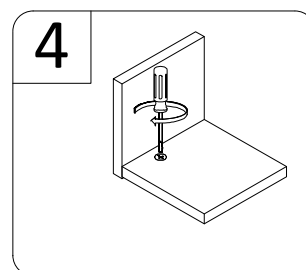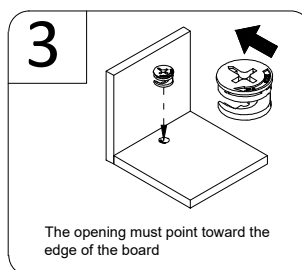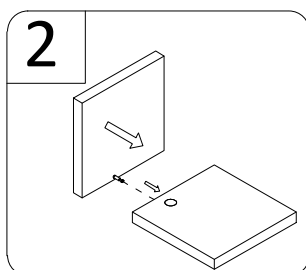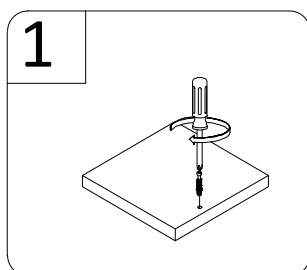


# HARDWARE LIST

|                                                                                                           |                                                                                                           |                                                                                                            |                                                                                                           |
|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| <br>Ø6*33.5mm<br>A x36+2 | <br>Ø15*9.5mm<br>B x36+2 | <br>Ø6*30mm<br>C x45+2   | <br>Ø5*40mm<br>D x40+2 |
| <br>Ø4*40mm<br>E x12+1   | <br>Ø4*20mm<br>F x8+2    | <br>Ø3.5*12mm<br>G x76+3 | <br>Ø3*14mm<br>H x12+1 |
| <br>I x3                 | <br>J x4                 | <br>K x1                 | <br>L x2               |
| <br>M x5               | <br>N x2               | <br>O x6               | <br>P x1             |
| <br>Q x32              | <br>R x12+1            | <br>S x1               | <br>T x1             |
| <br>U x1               | <br>V x2               | <br>W x1               | <br>X x2             |
| <br>CL x2              | <br>CR x2              | <br>DL x2              | <br>DR x2            |


# STEP 1

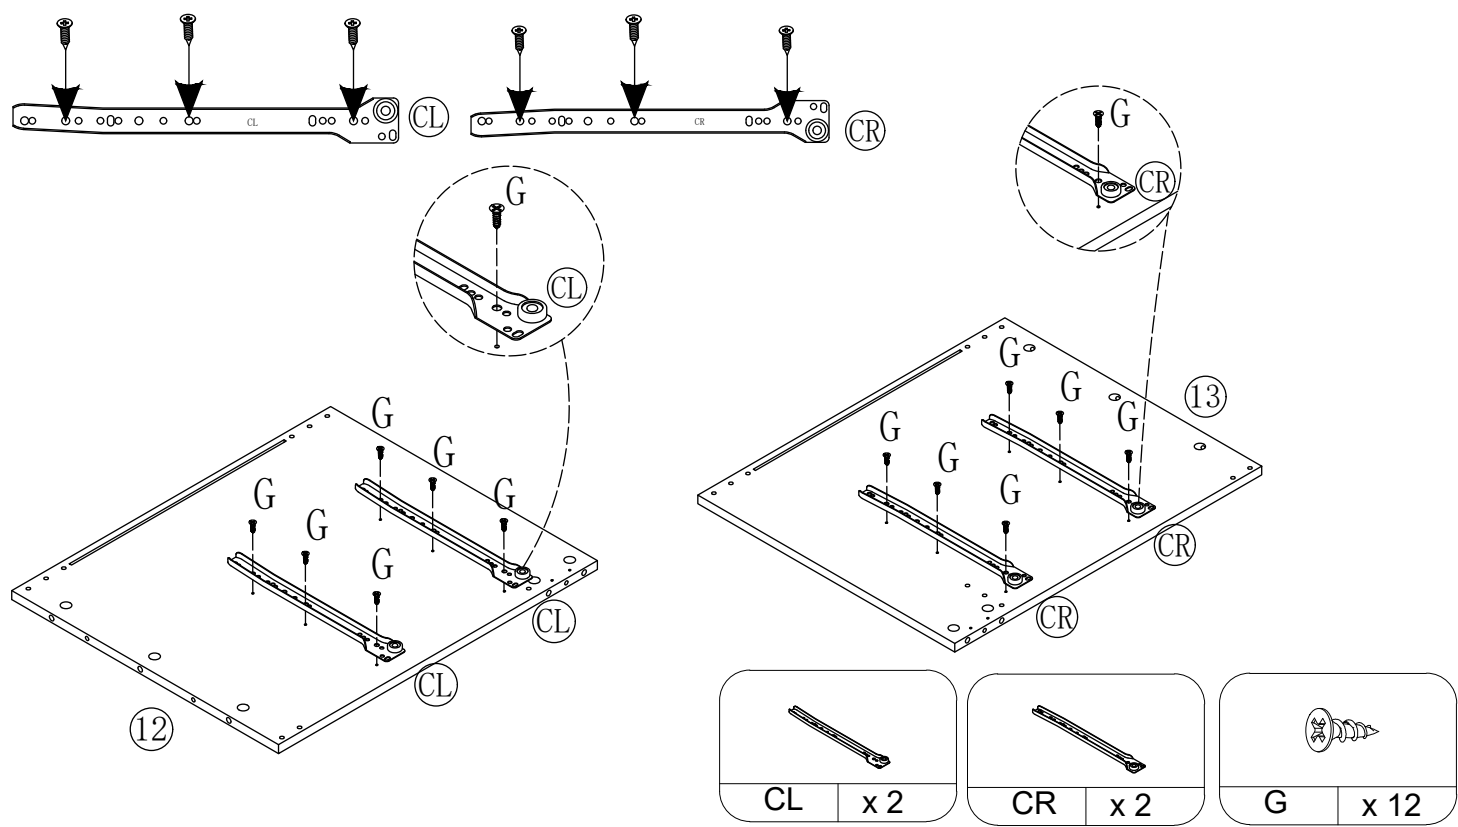


# STEP 2

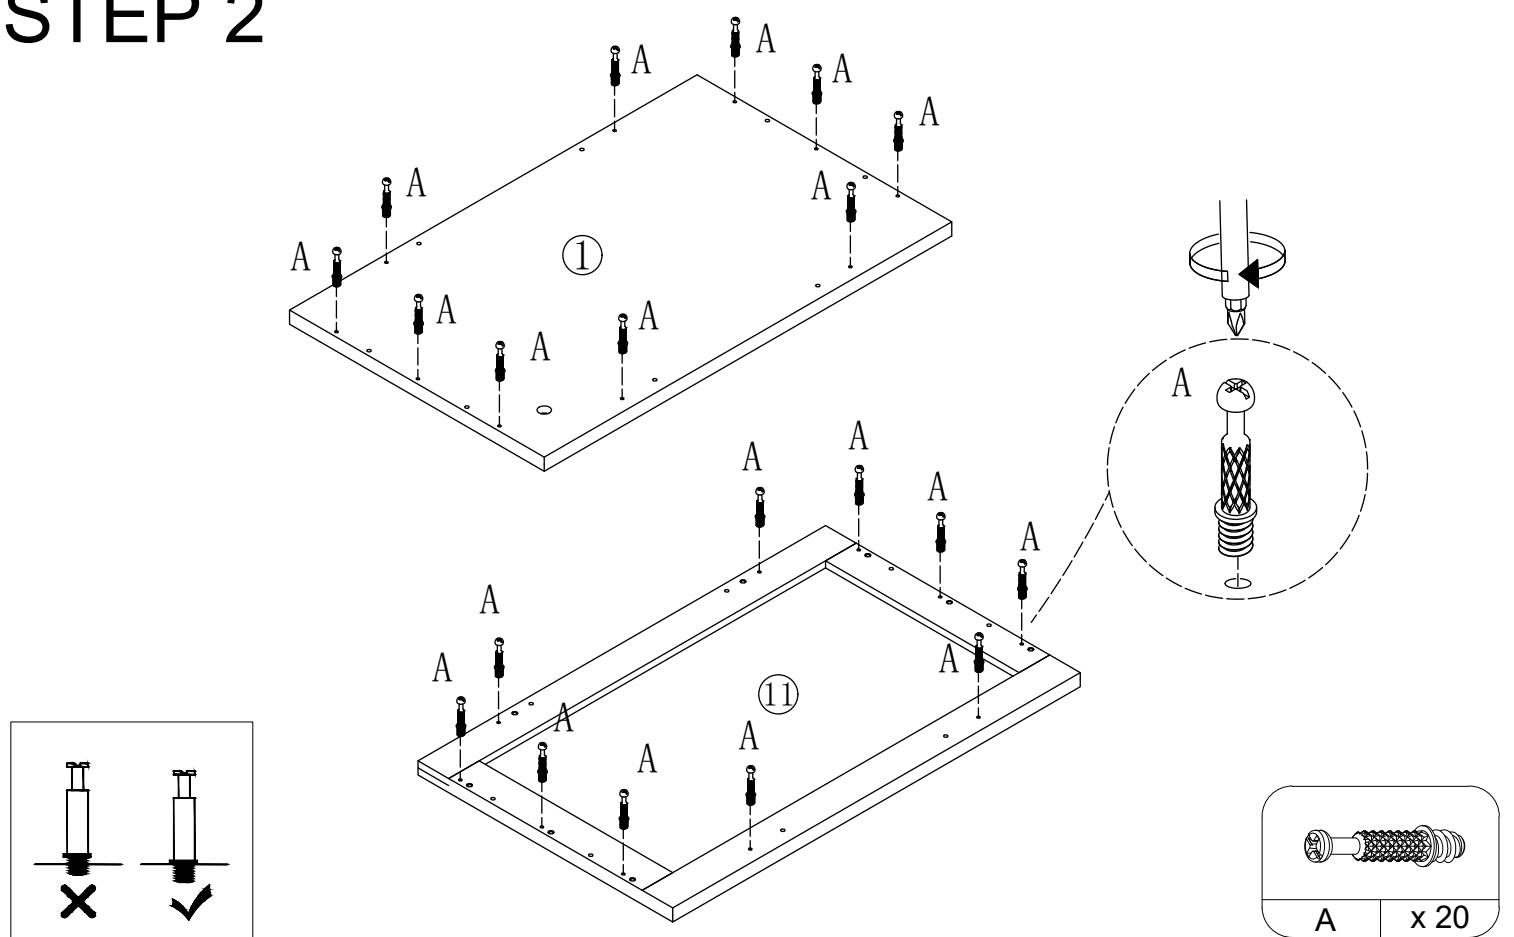

# STEP 3

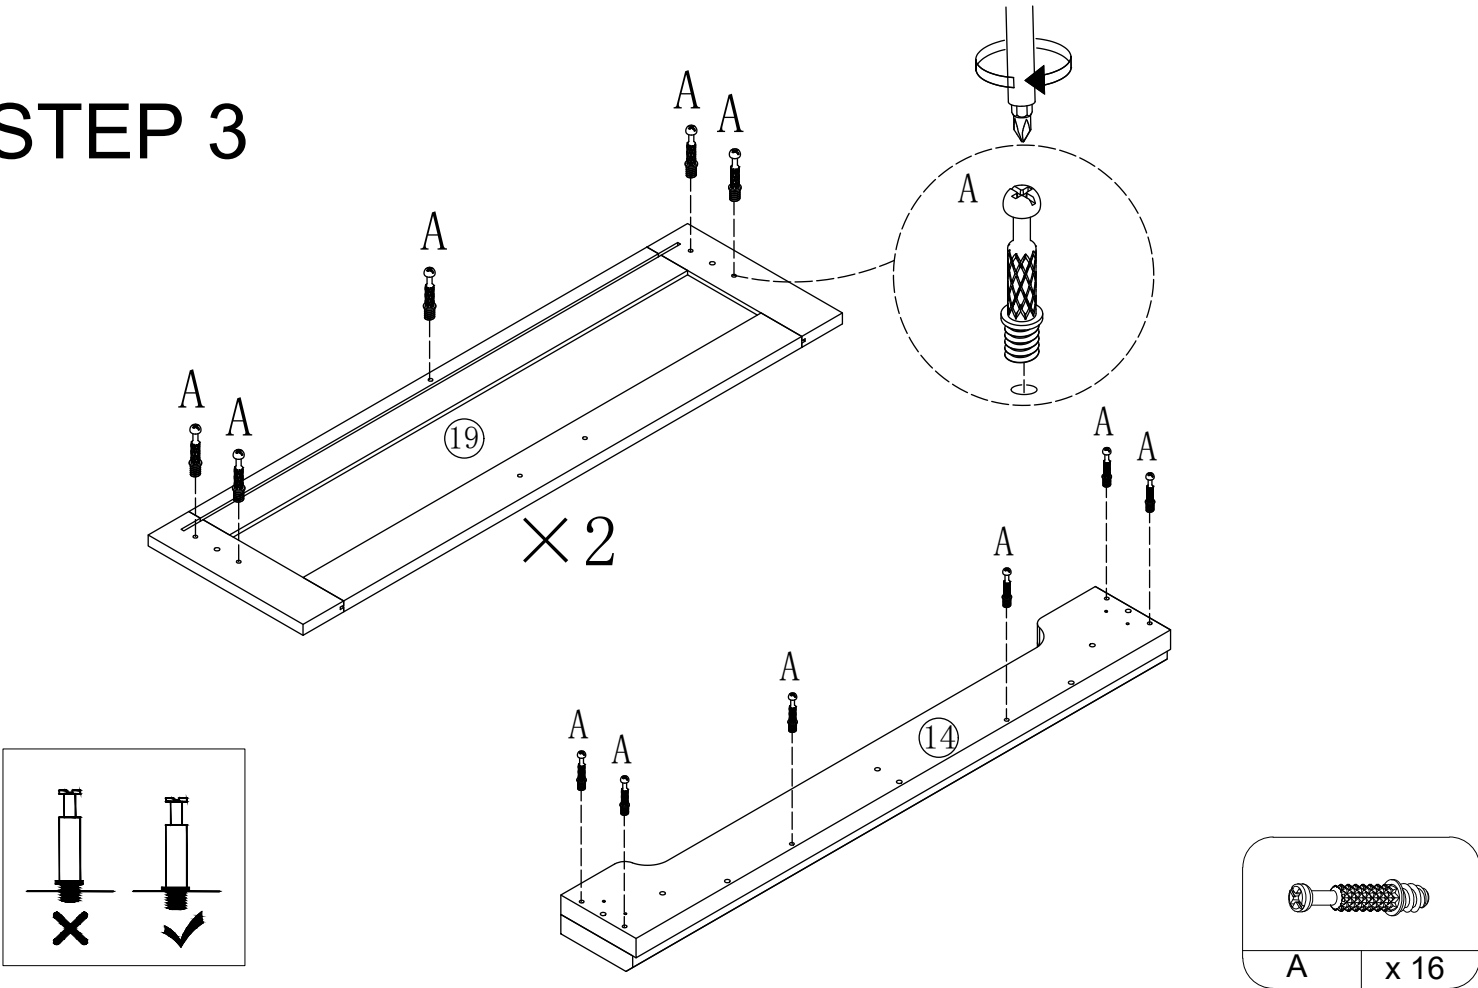


# STEP 4

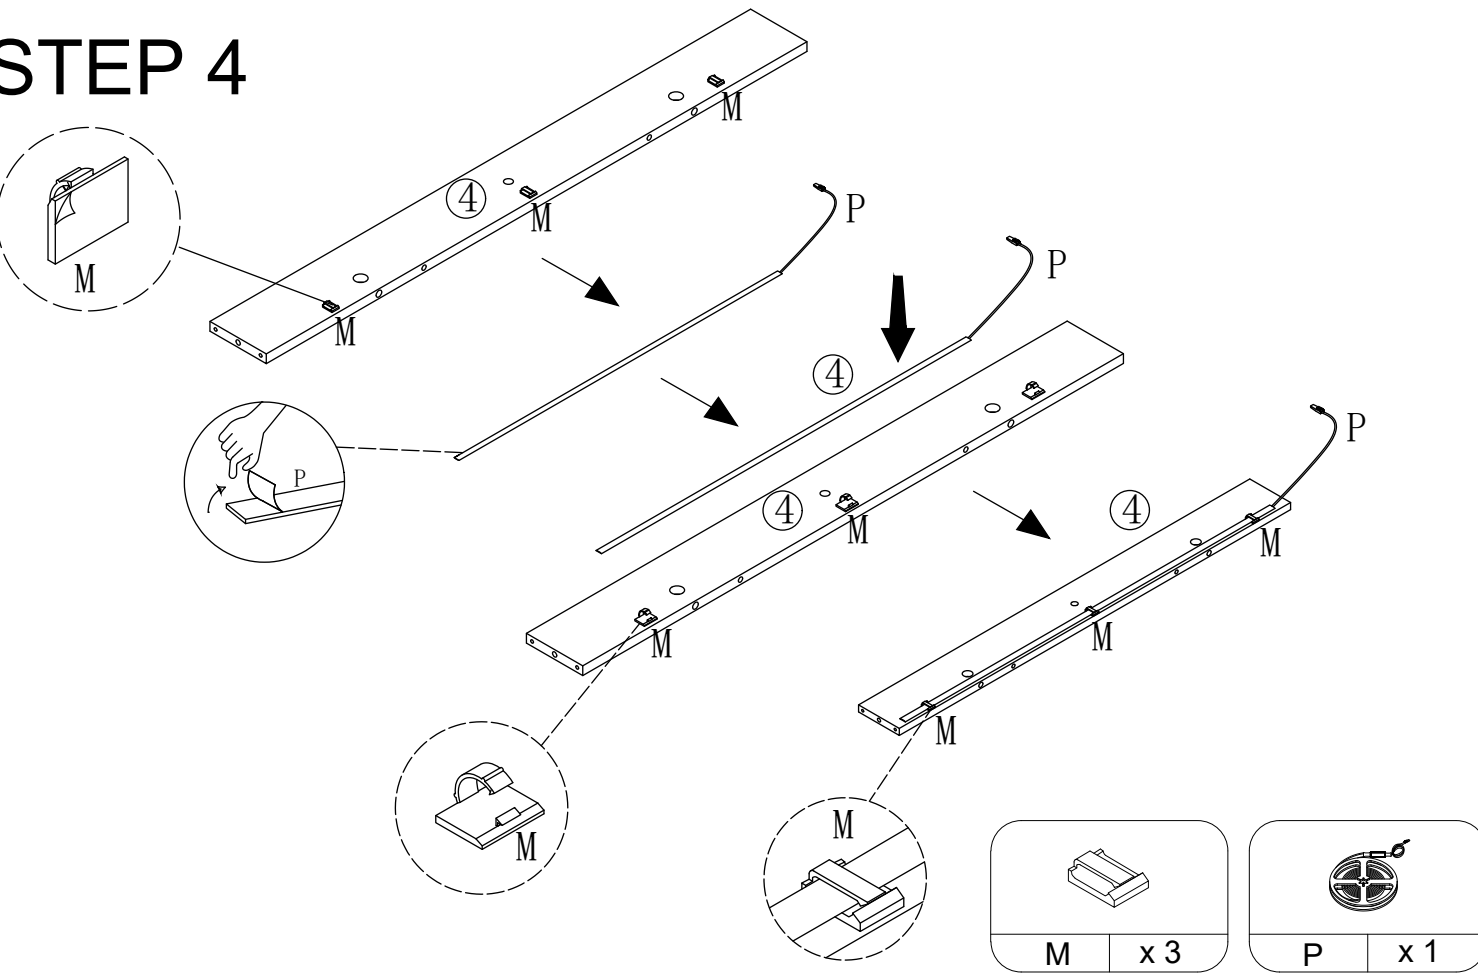


## STEP 5


Handle with care during installation

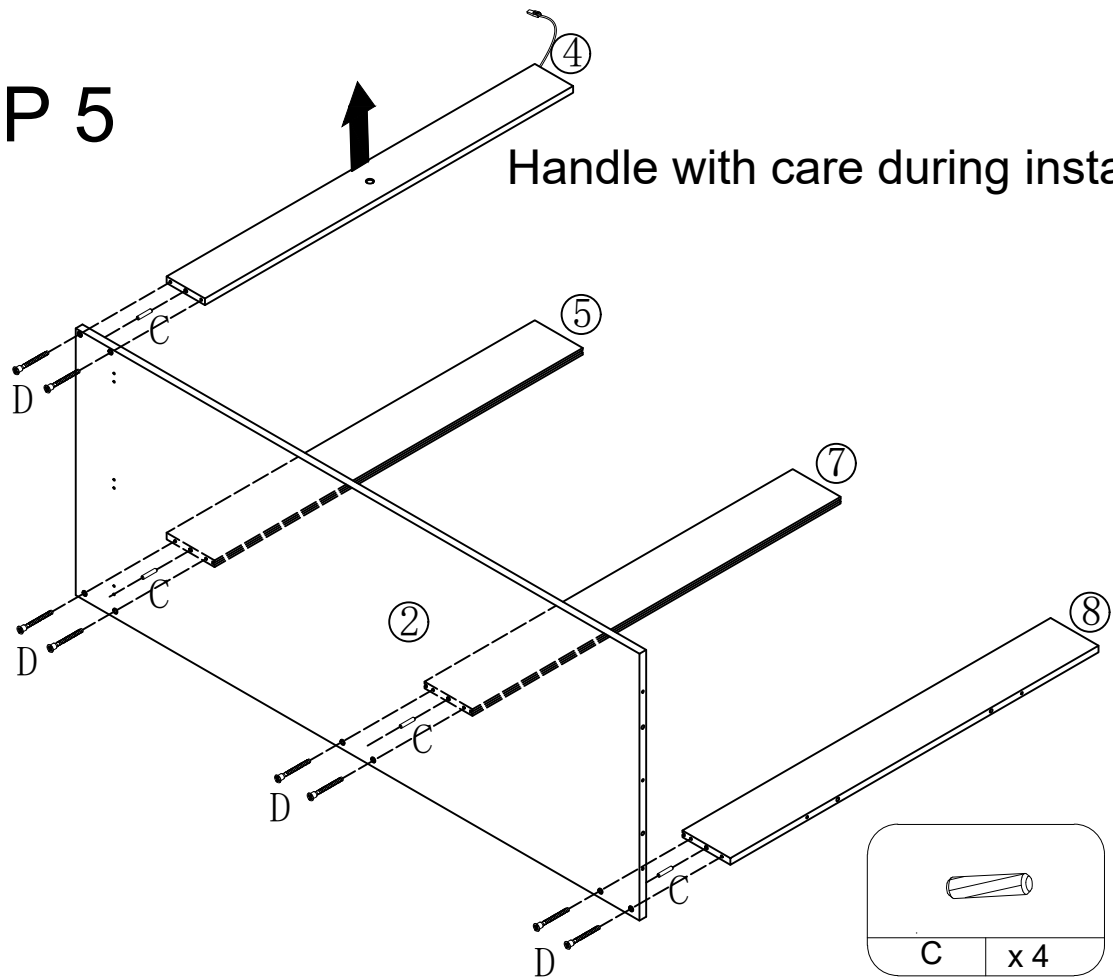


## STEP 6


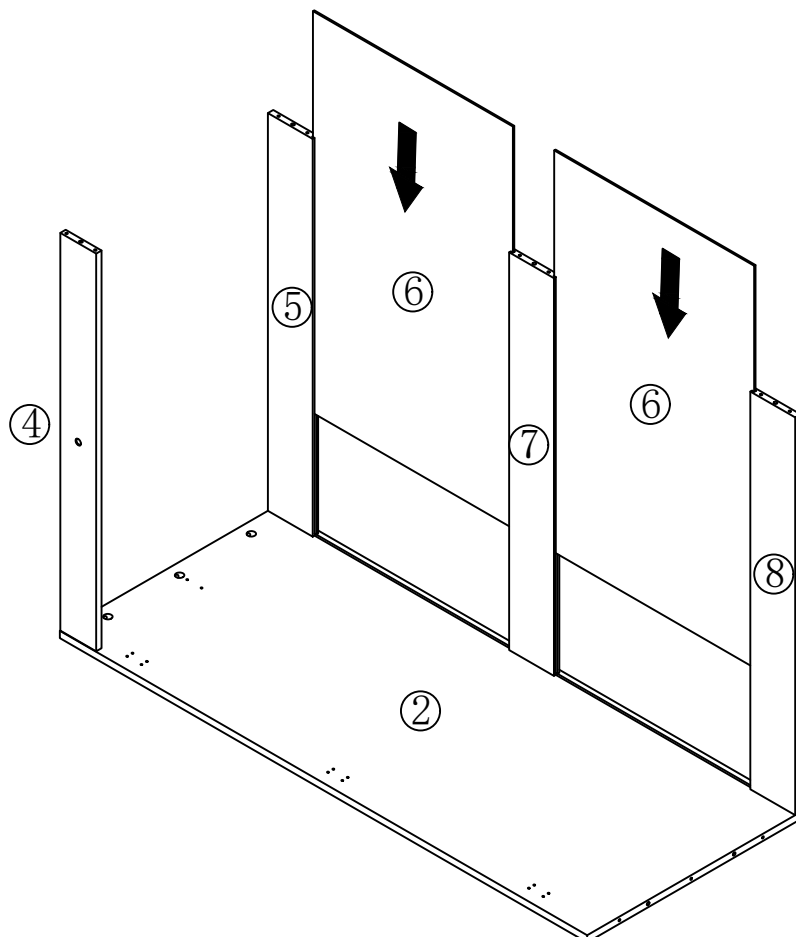


# STEP 7

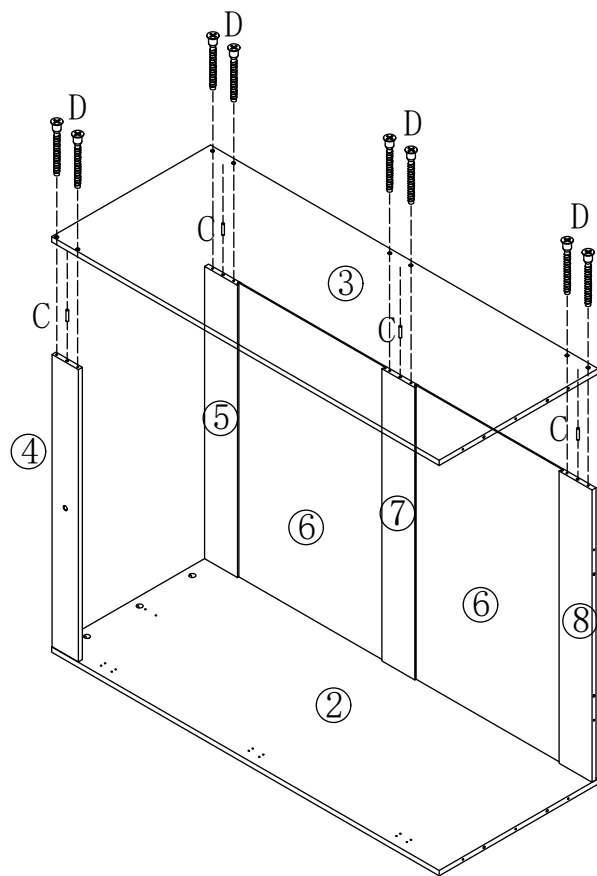


|                                                                                      |                                                                                      |
|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  |  |
| C                                                                                    | D                                                                                    |
| x 4                                                                                  | x 8                                                                                  |

# STEP 8

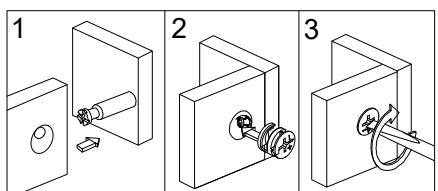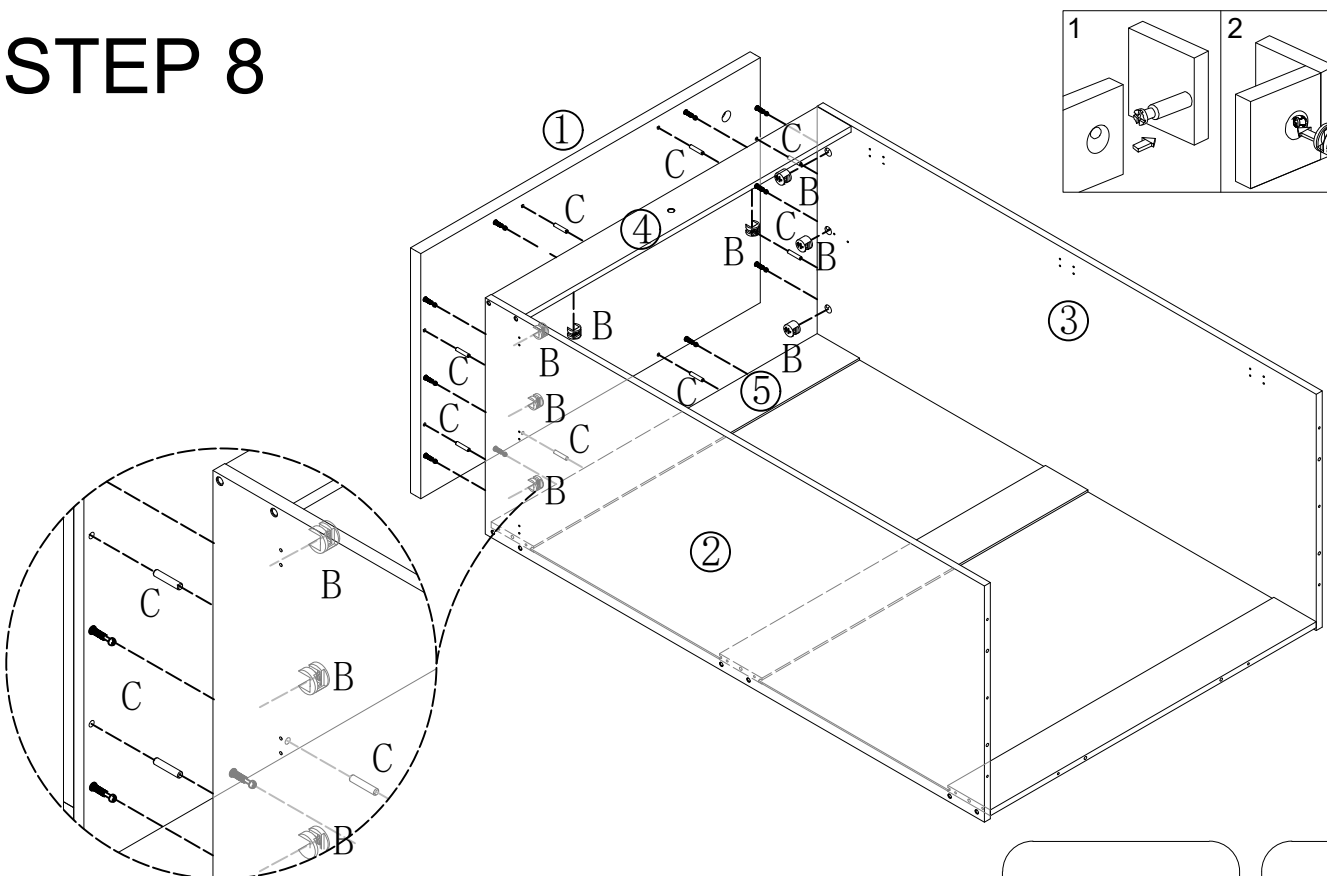


|                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |
| C                                                                                     | B                                                                                     |
| x 8                                                                                   | x 8                                                                                   |


# STEP 9

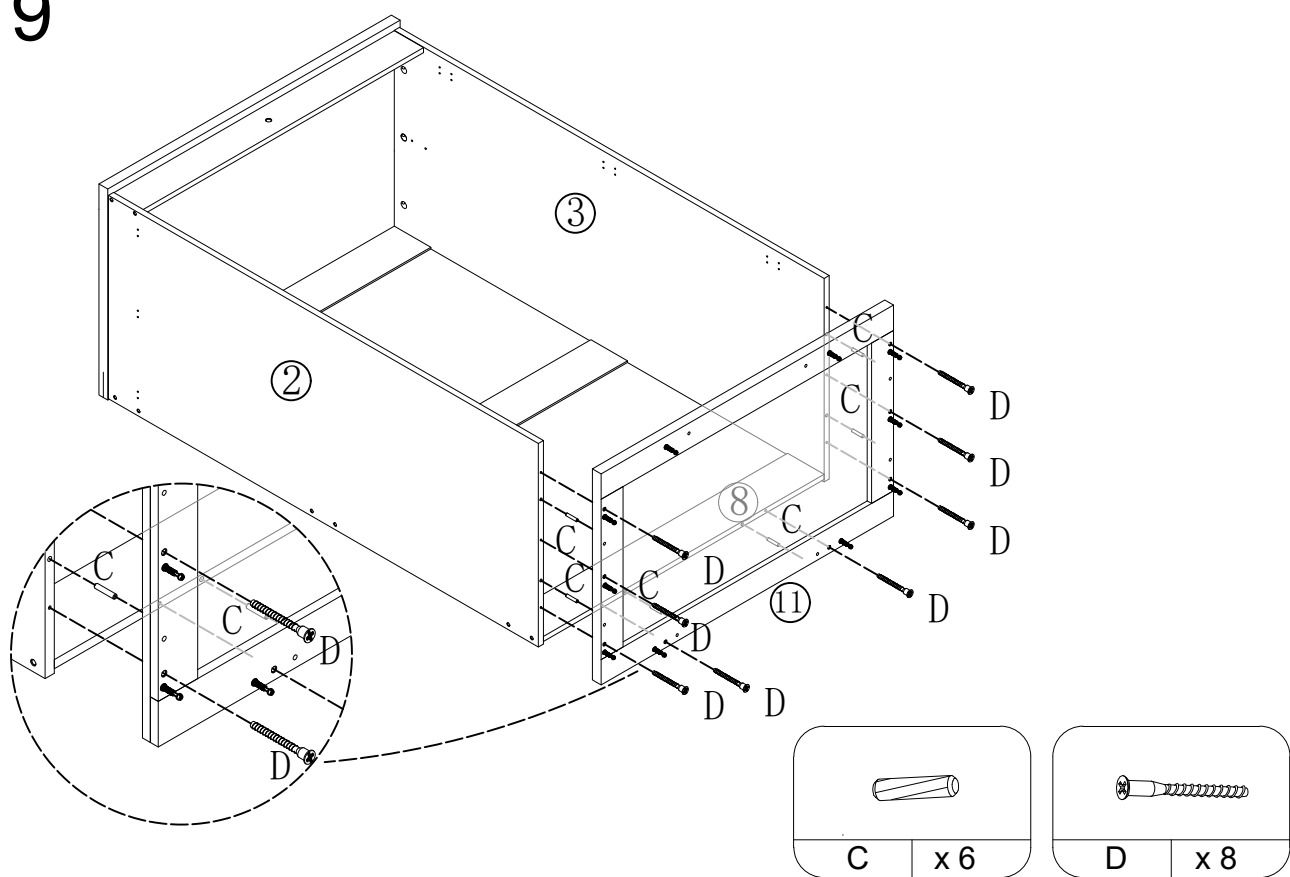


# STEP 10

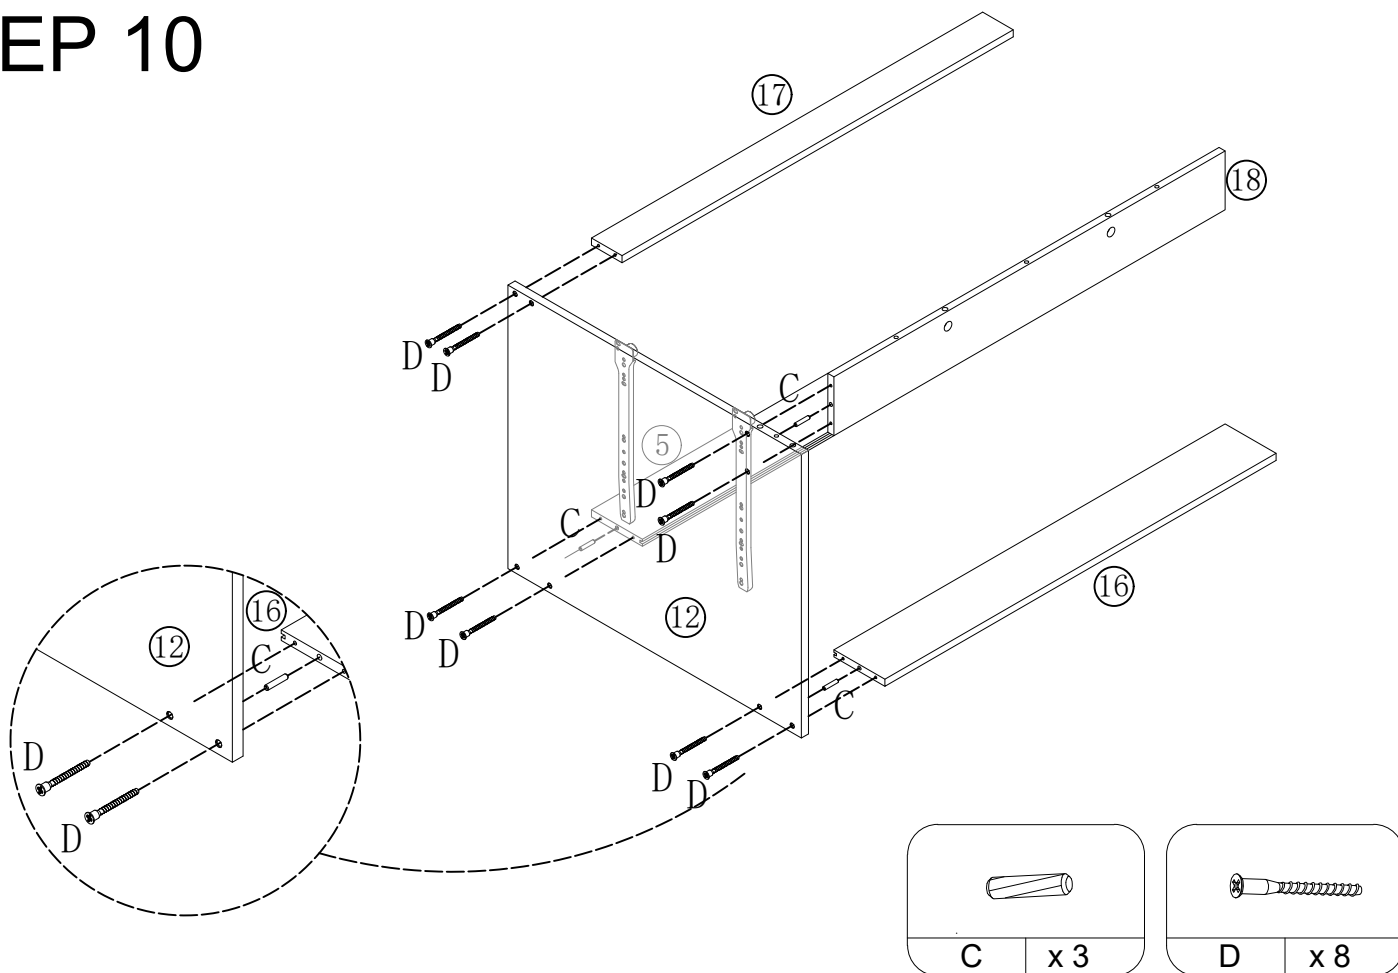


# STEP 11

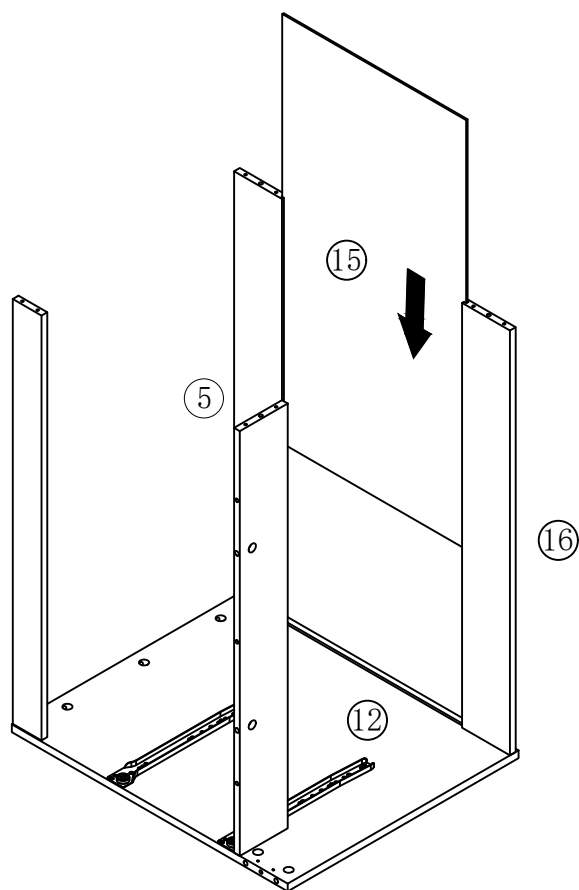


# STEP 12

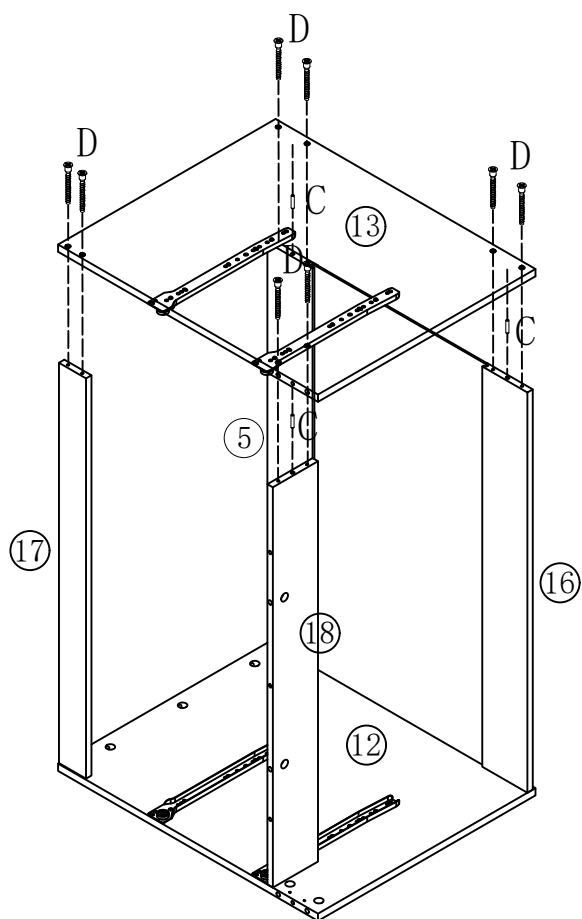


|                                                                                       |     |                                                                                       |     |
|---------------------------------------------------------------------------------------|-----|---------------------------------------------------------------------------------------|-----|
|  |     |  |     |
| C                                                                                     | x 3 | D                                                                                     | x 8 |


# STEP 13

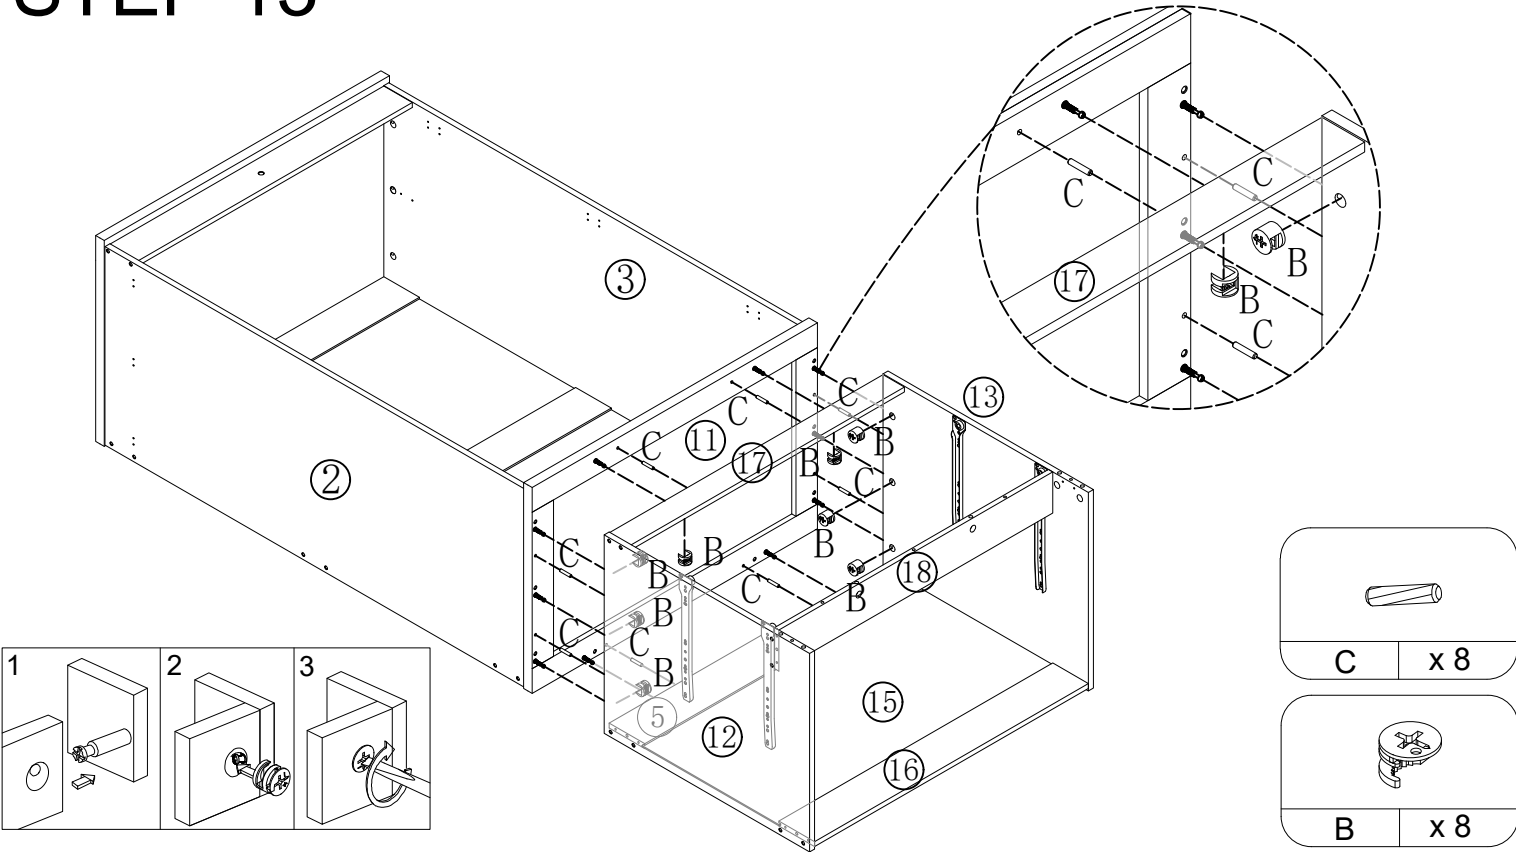


# STEP 14

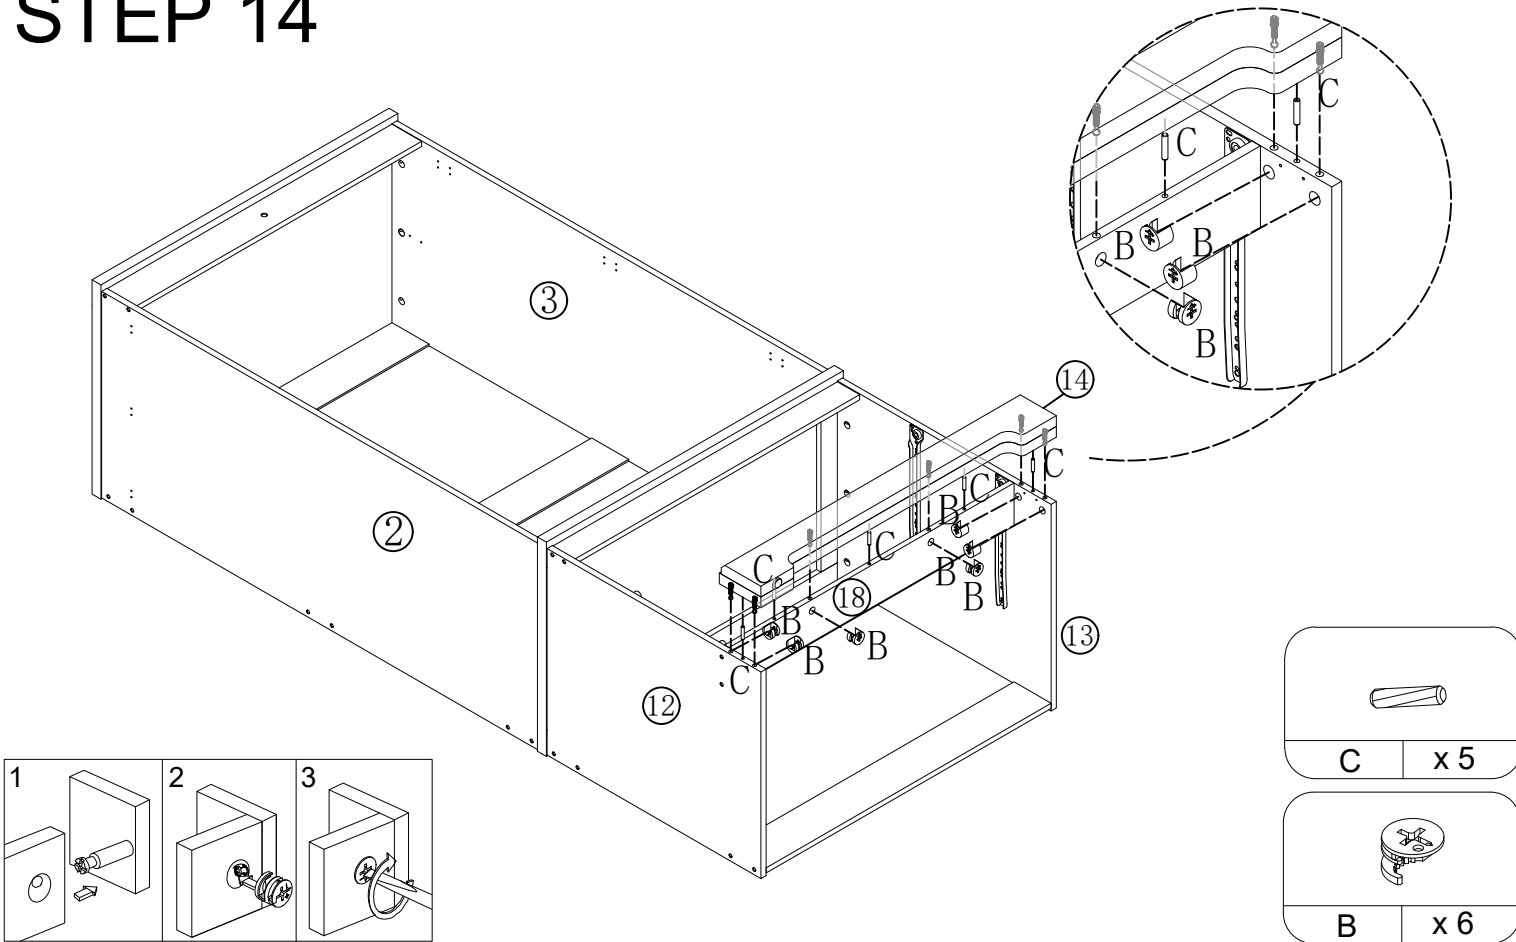






# STEP 15

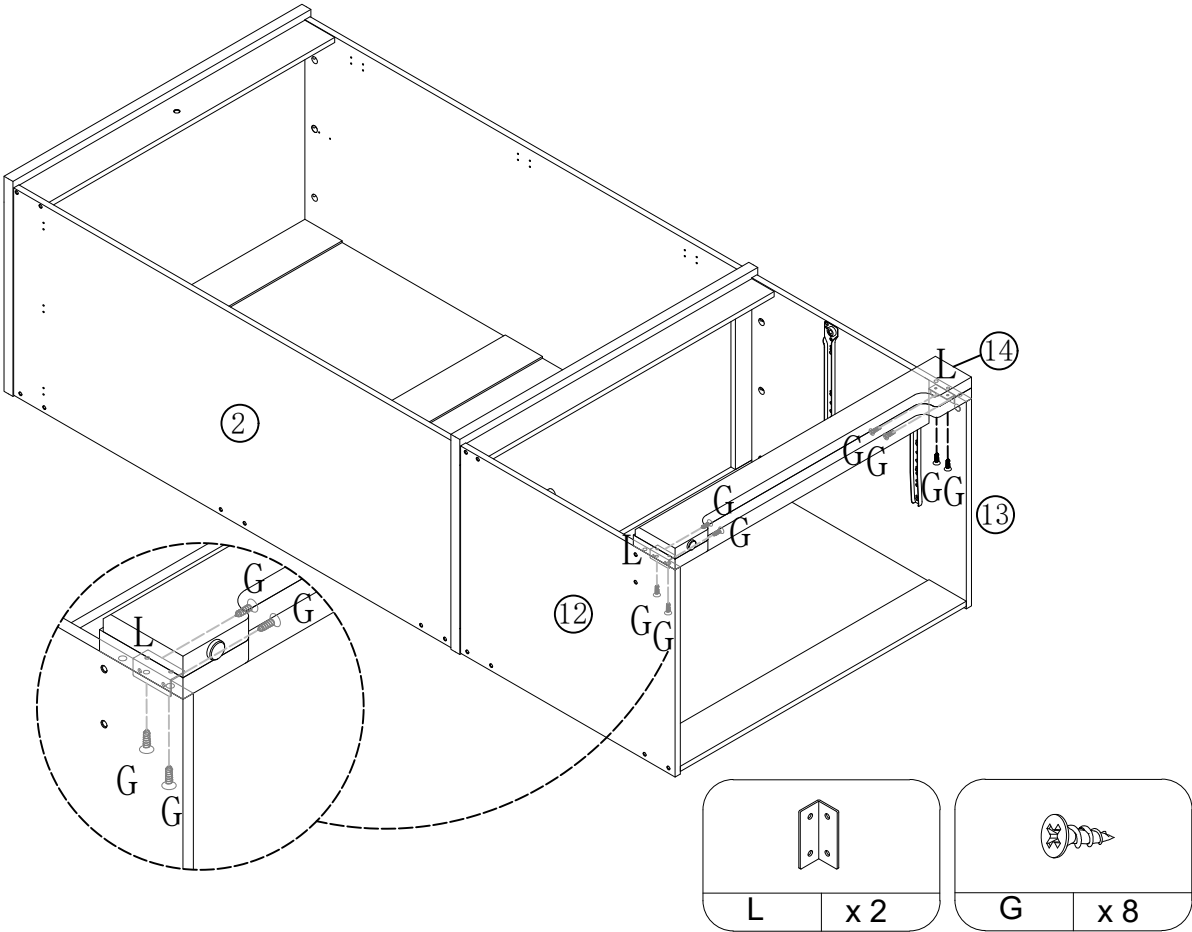





# STEP 16

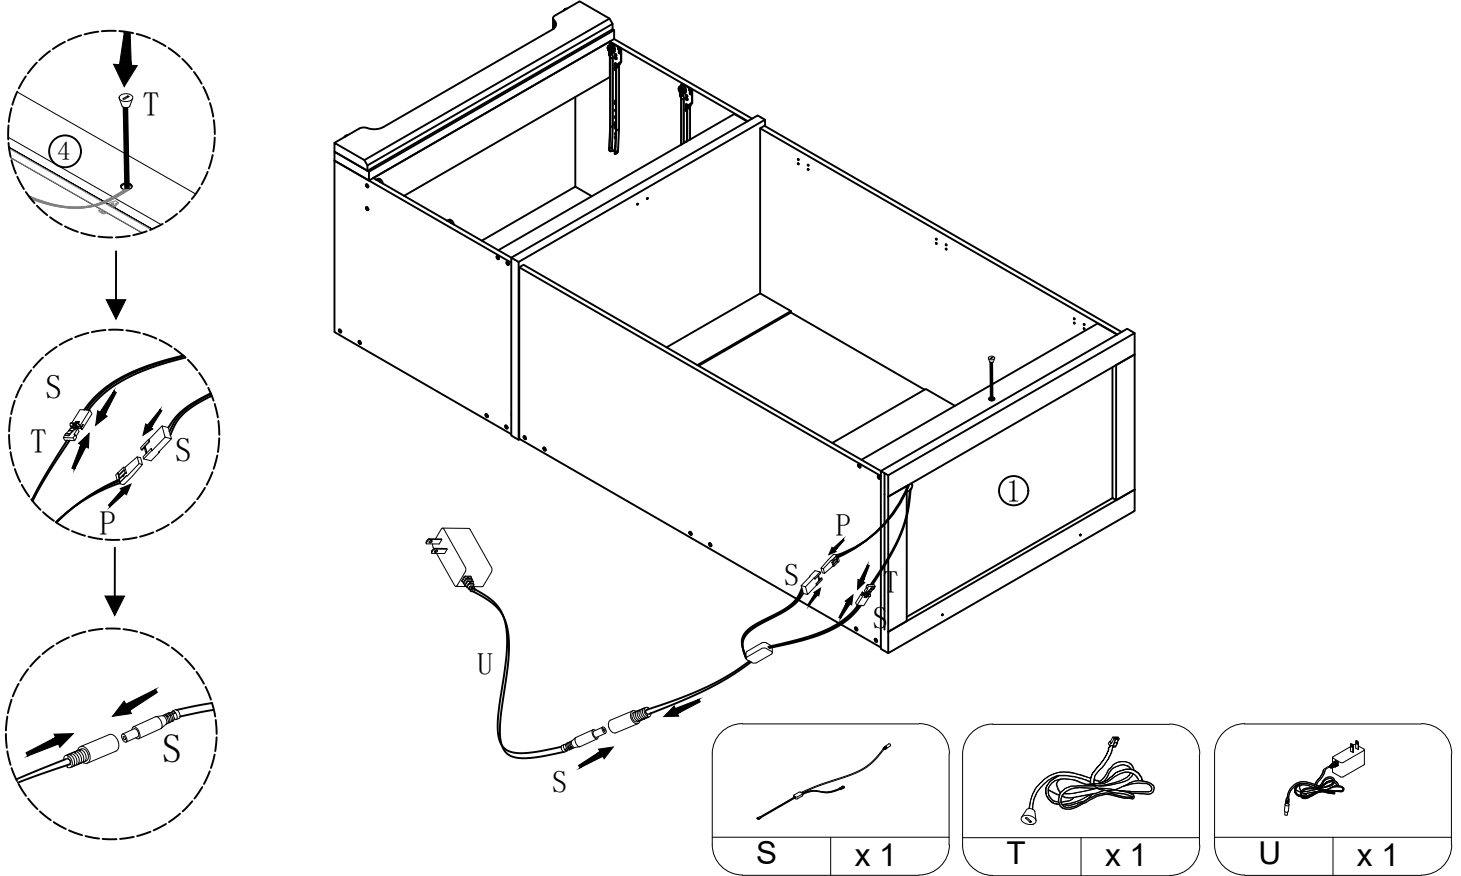


# STEP 17

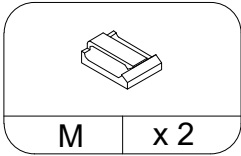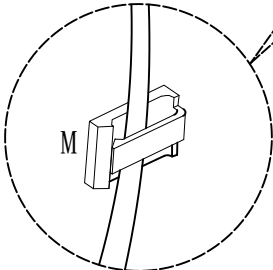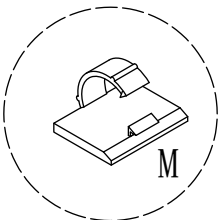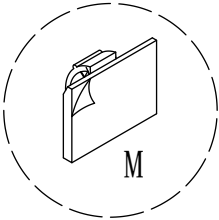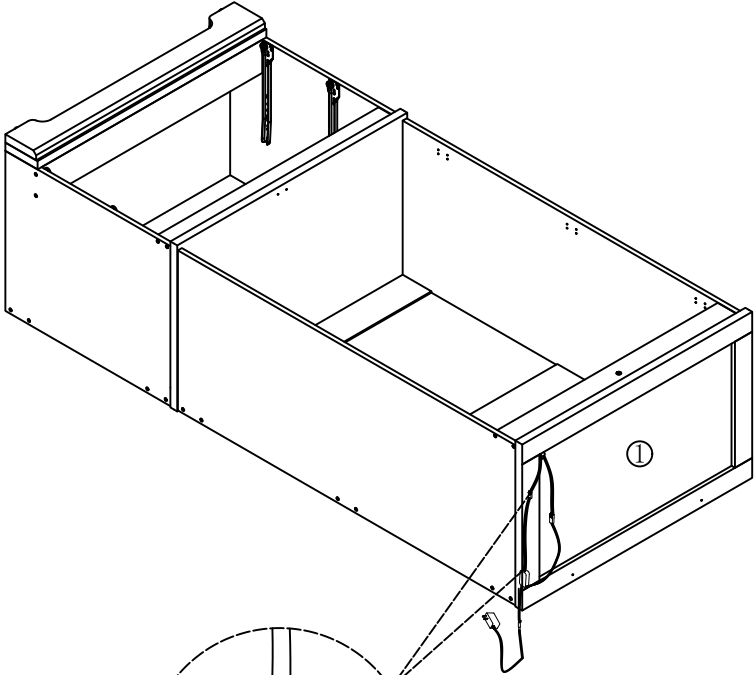


# STEP 18

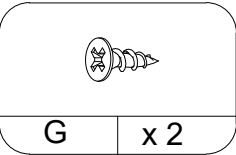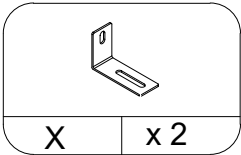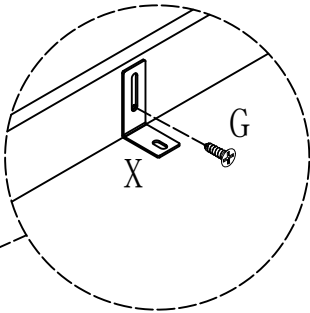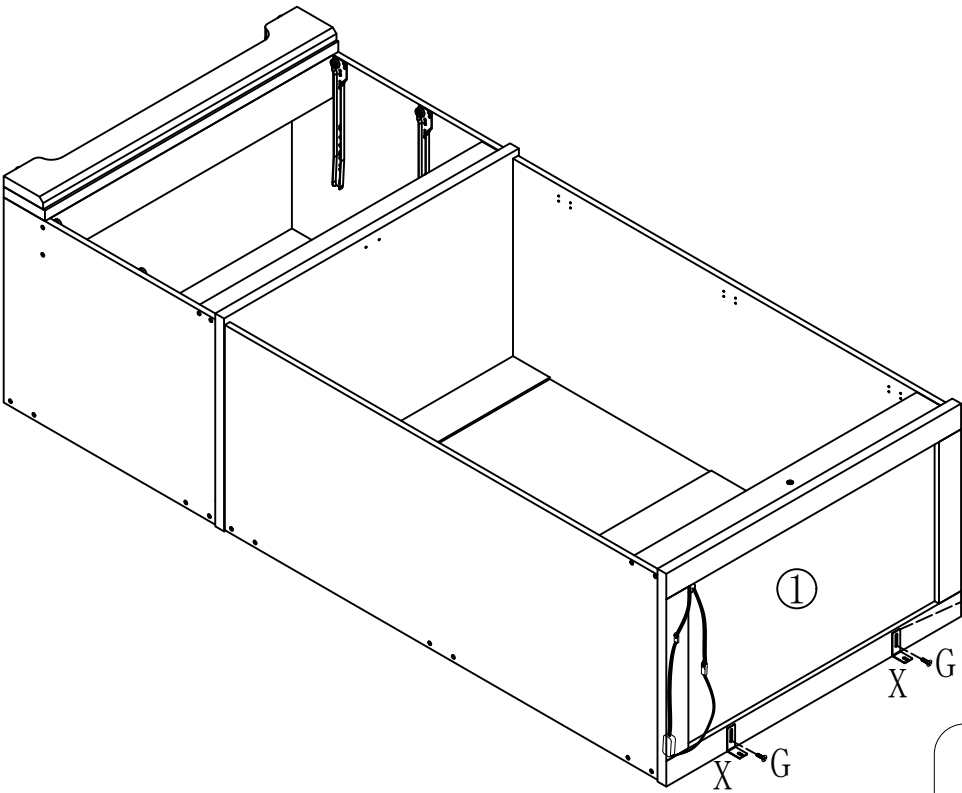


# STEP 19

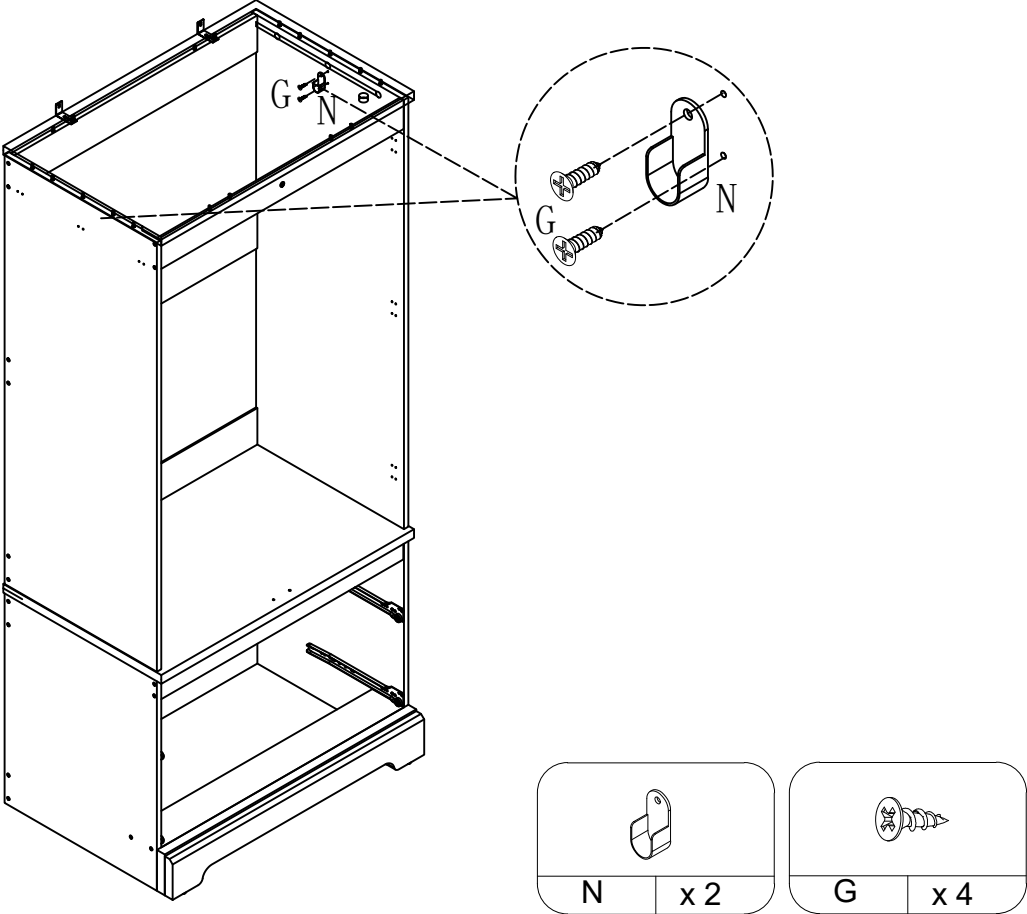


# STEP 20

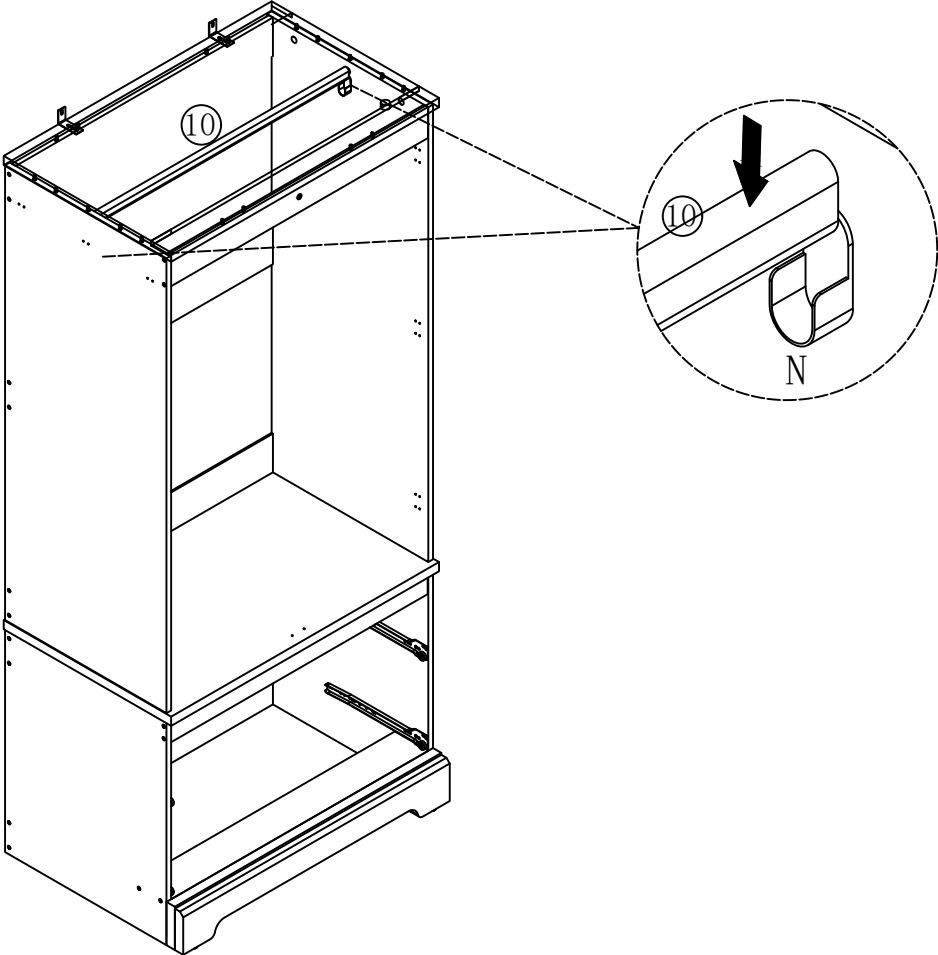


# STEP 21

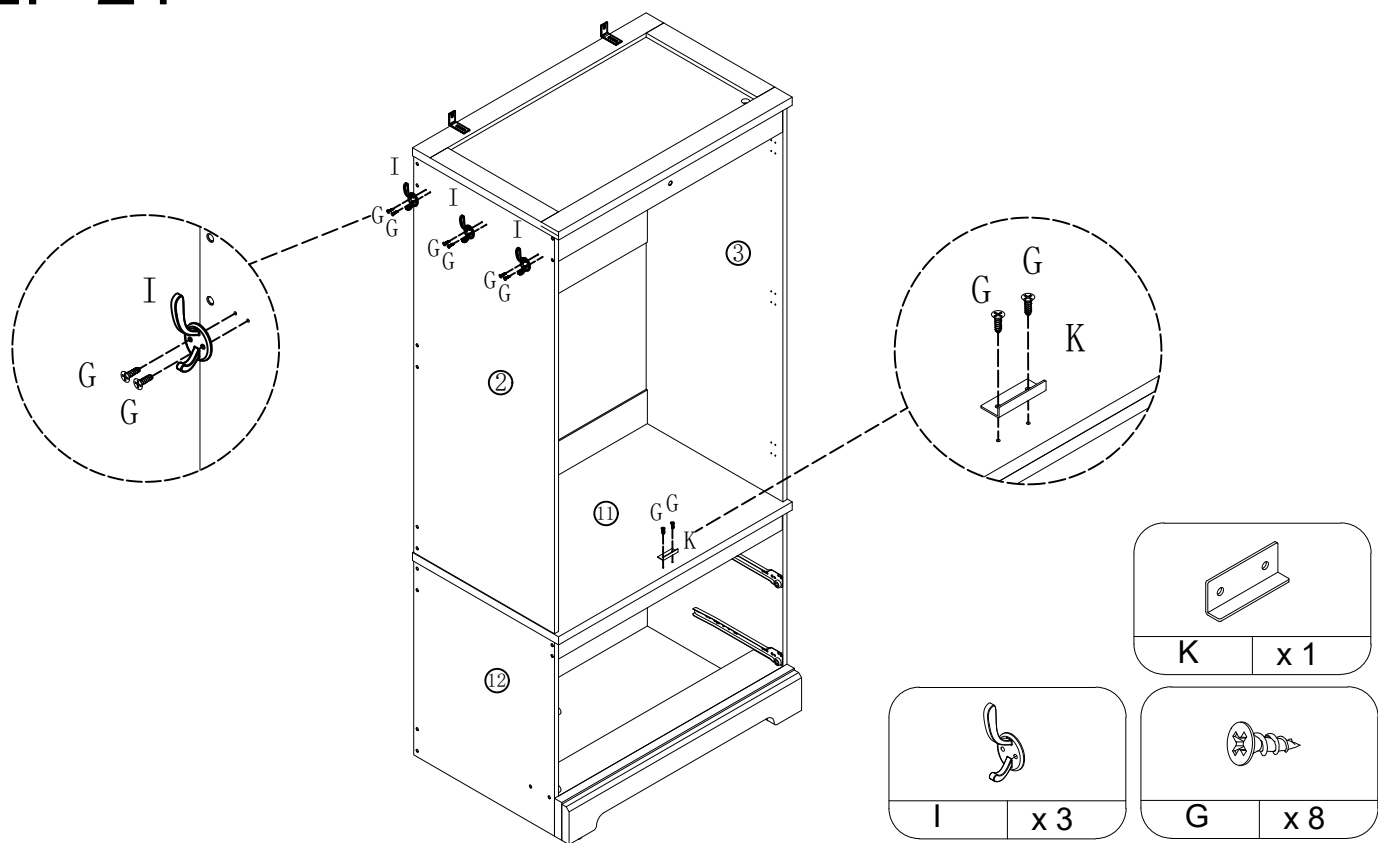



# STEP 22

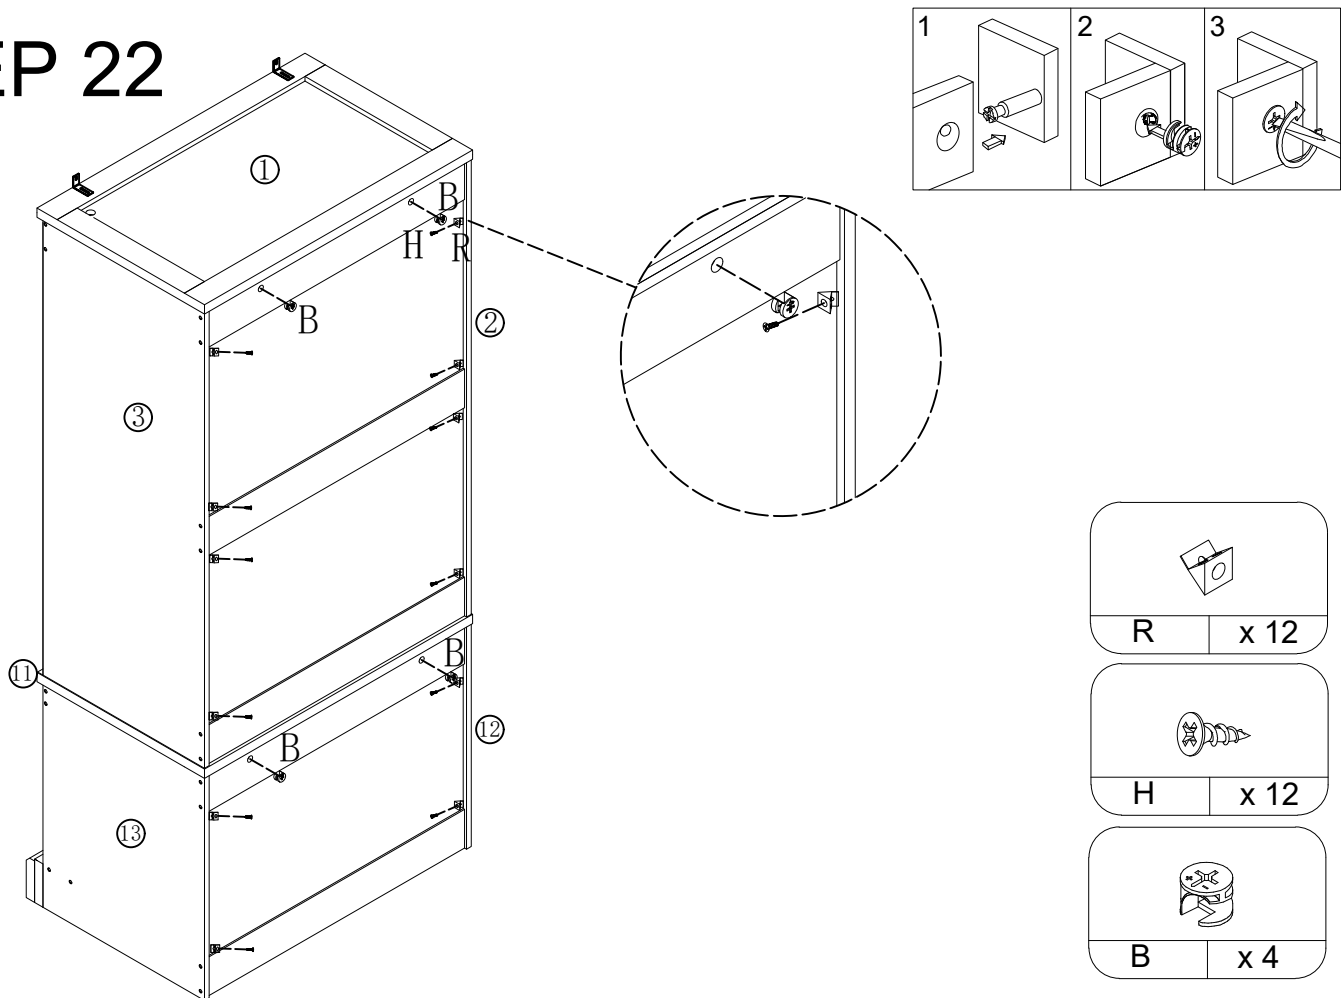


# STEP 23

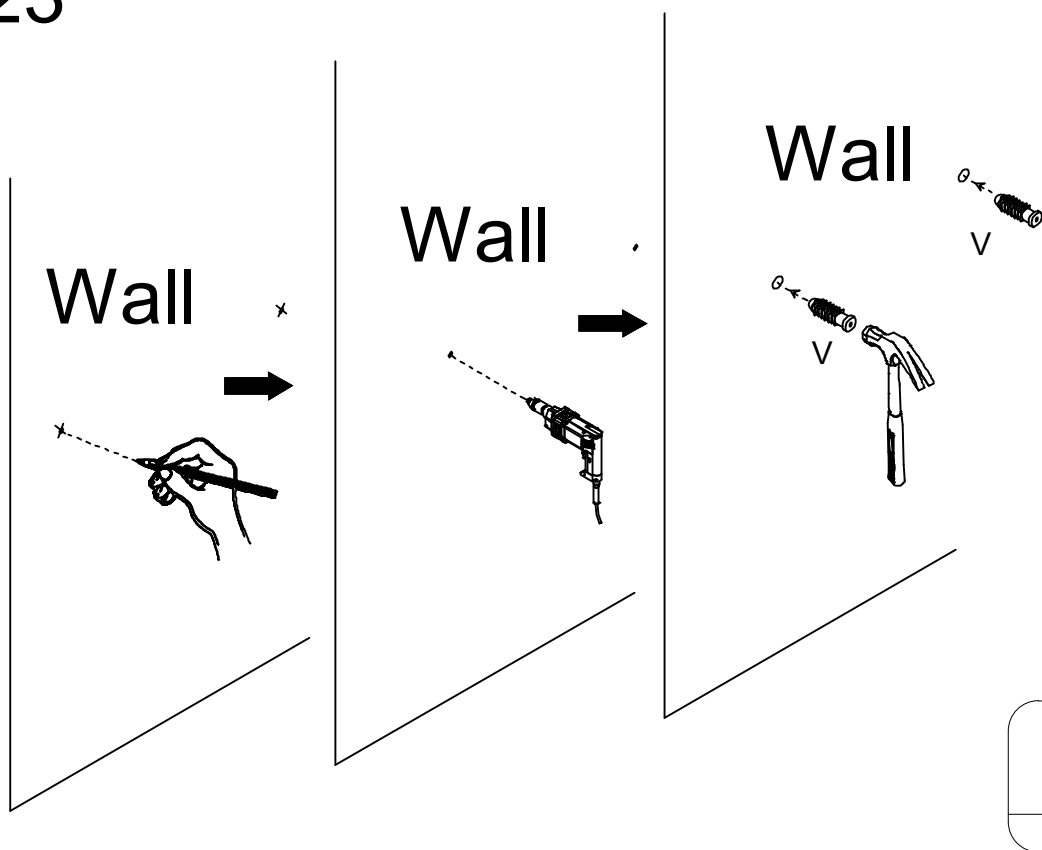


# STEP 24

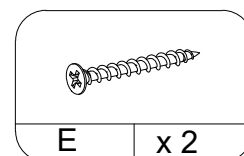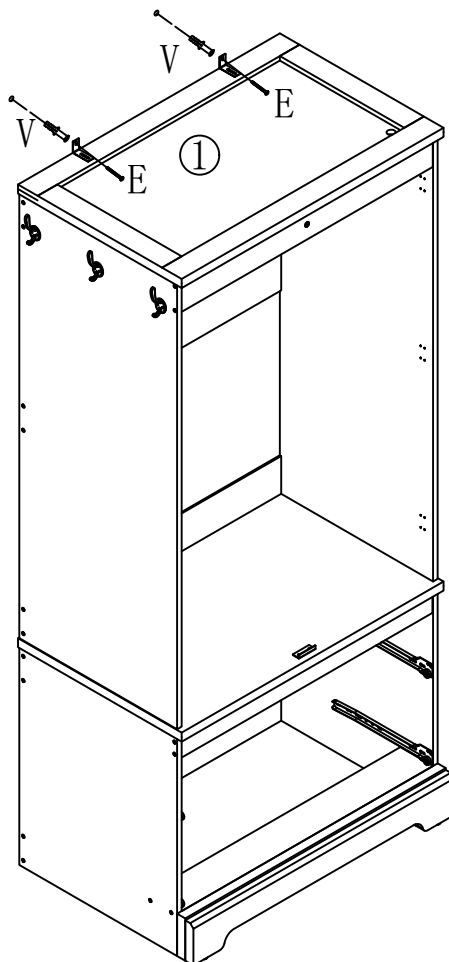


# STEP 25

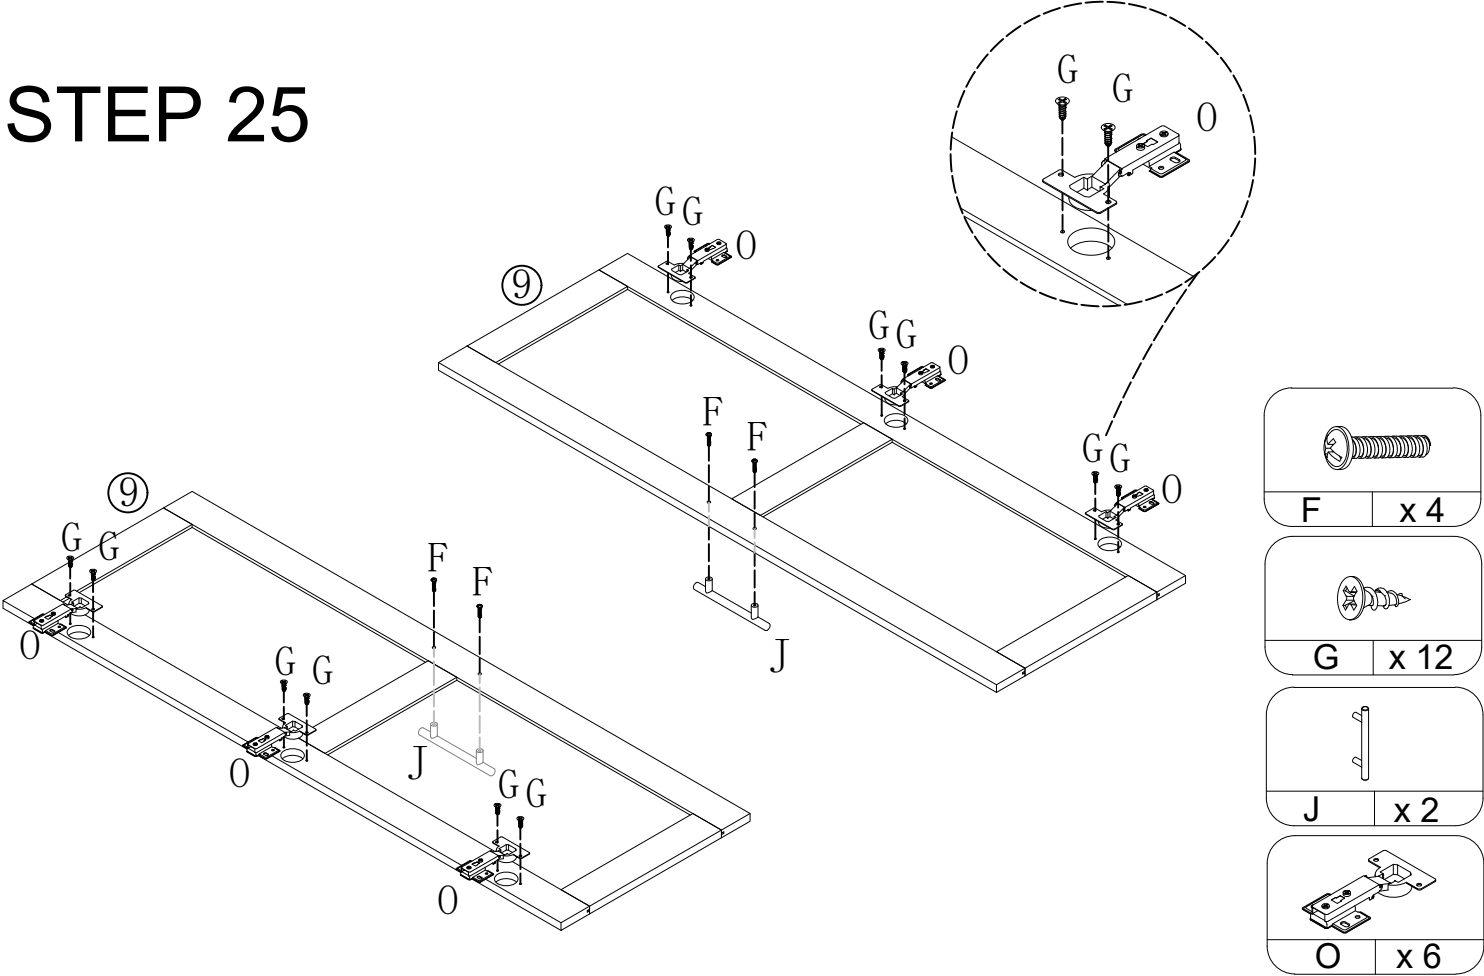


# STEP 26

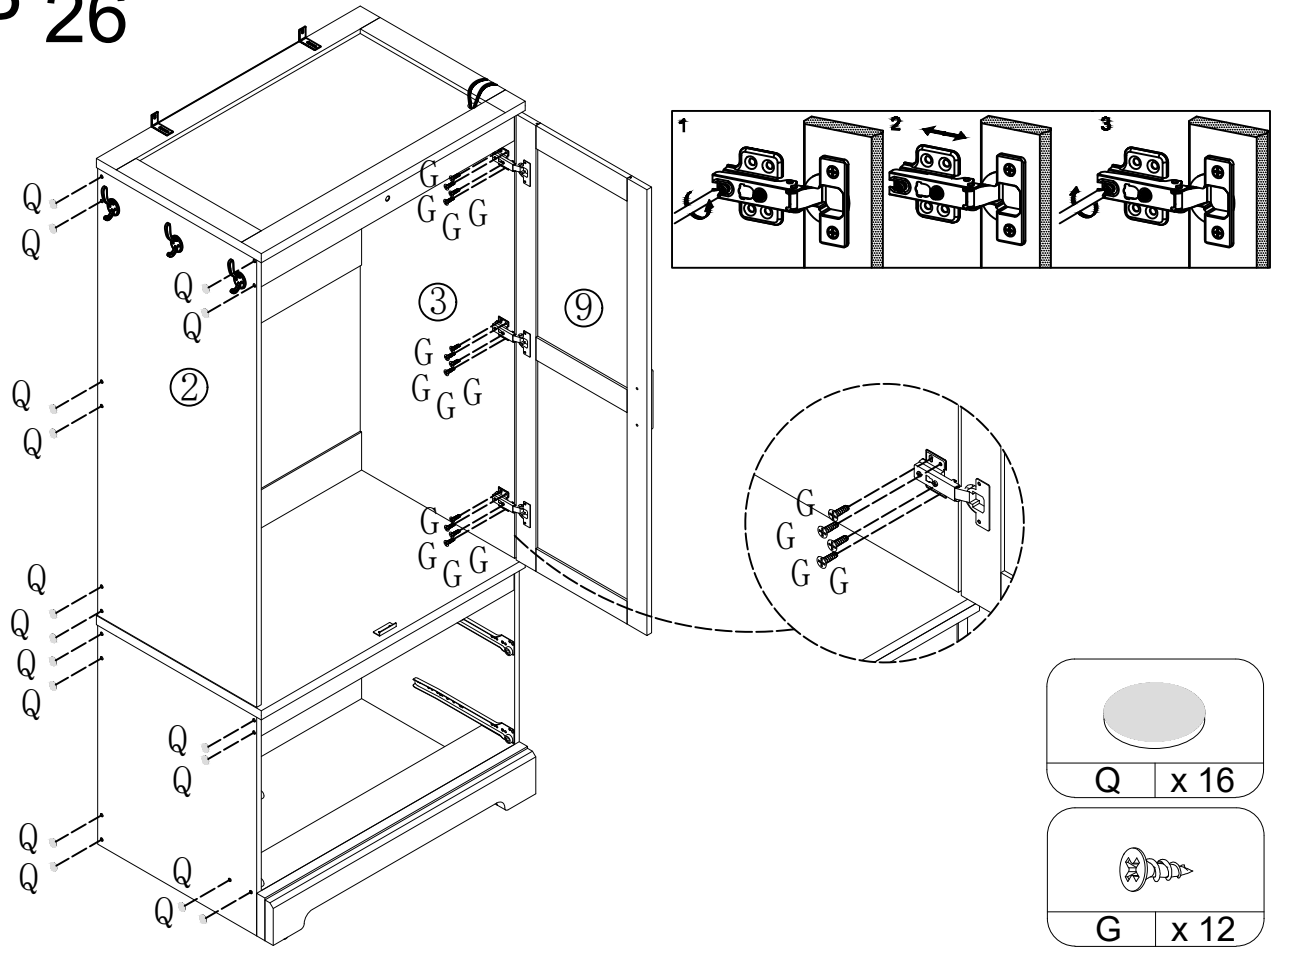


STEP 27

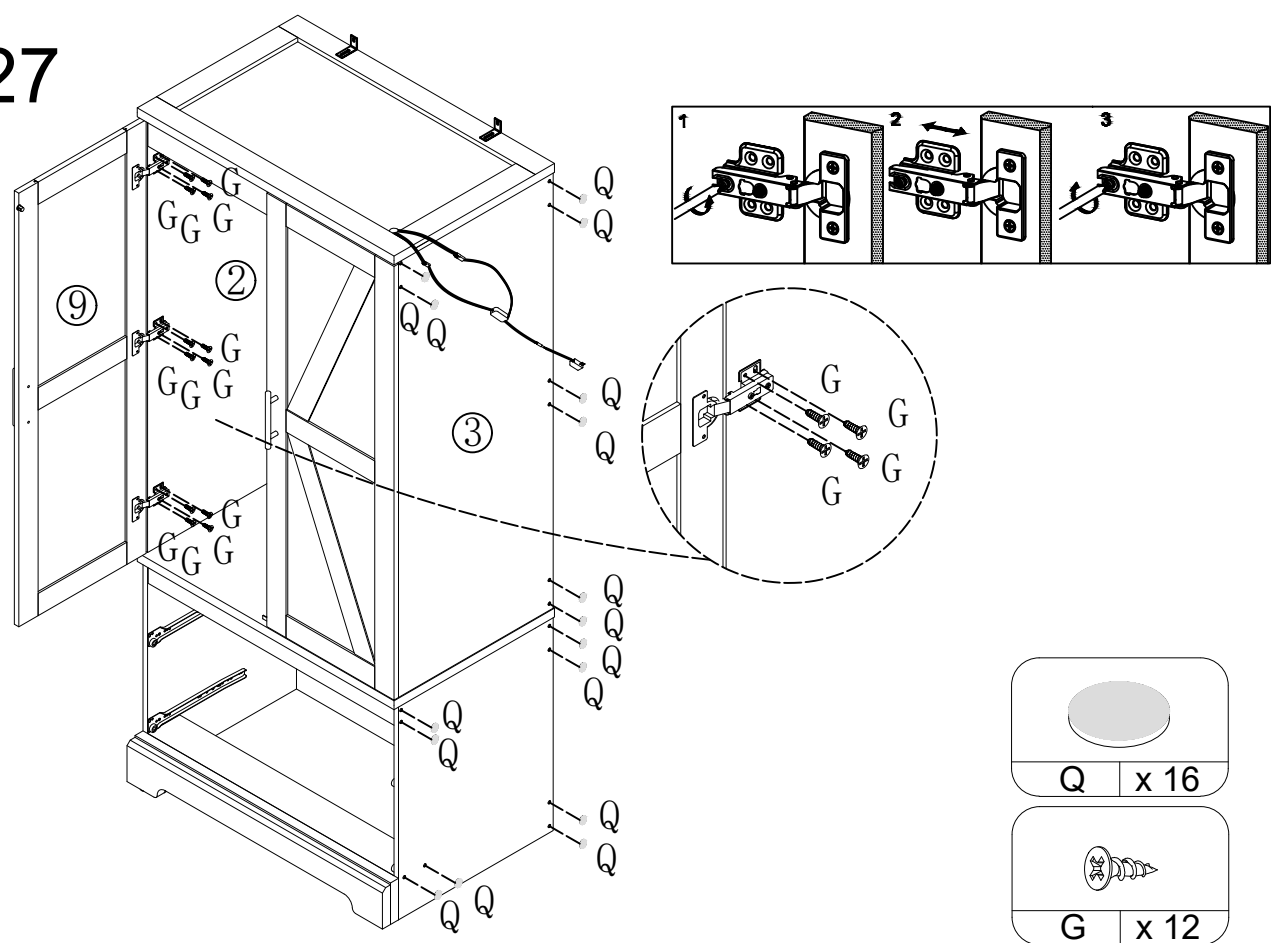


STEP 28

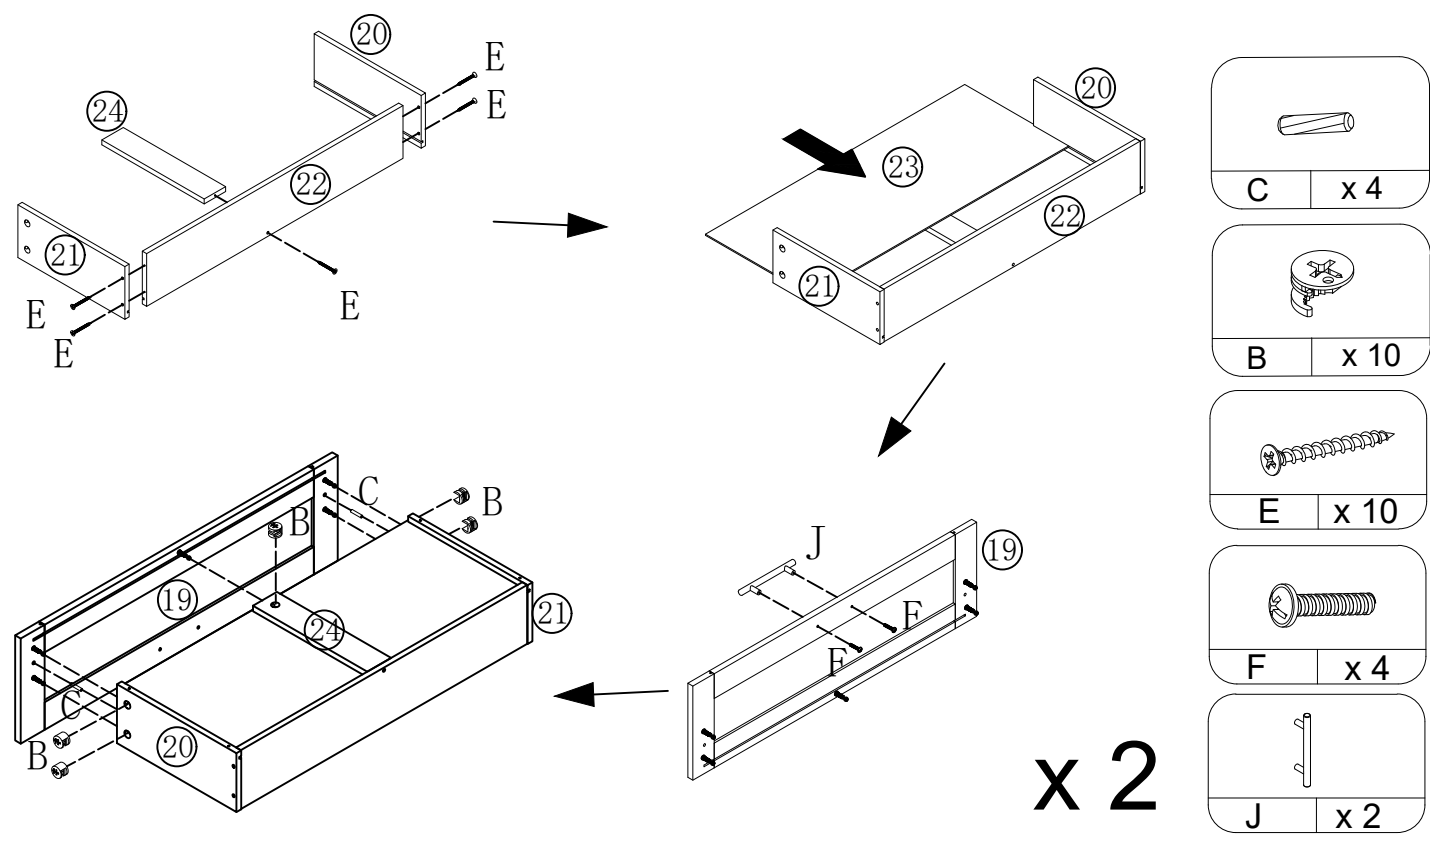


# STEP 29

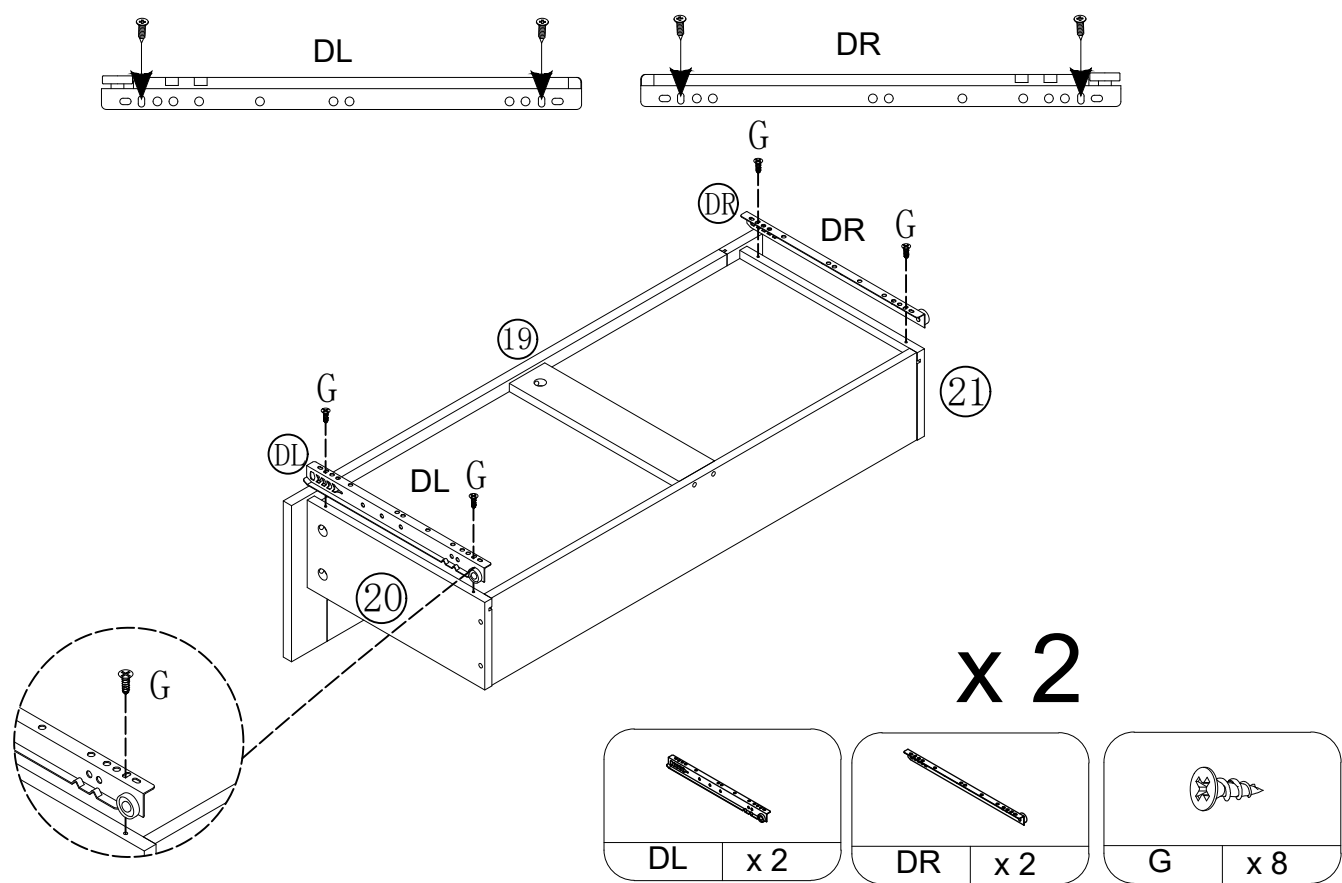

# STEP 30

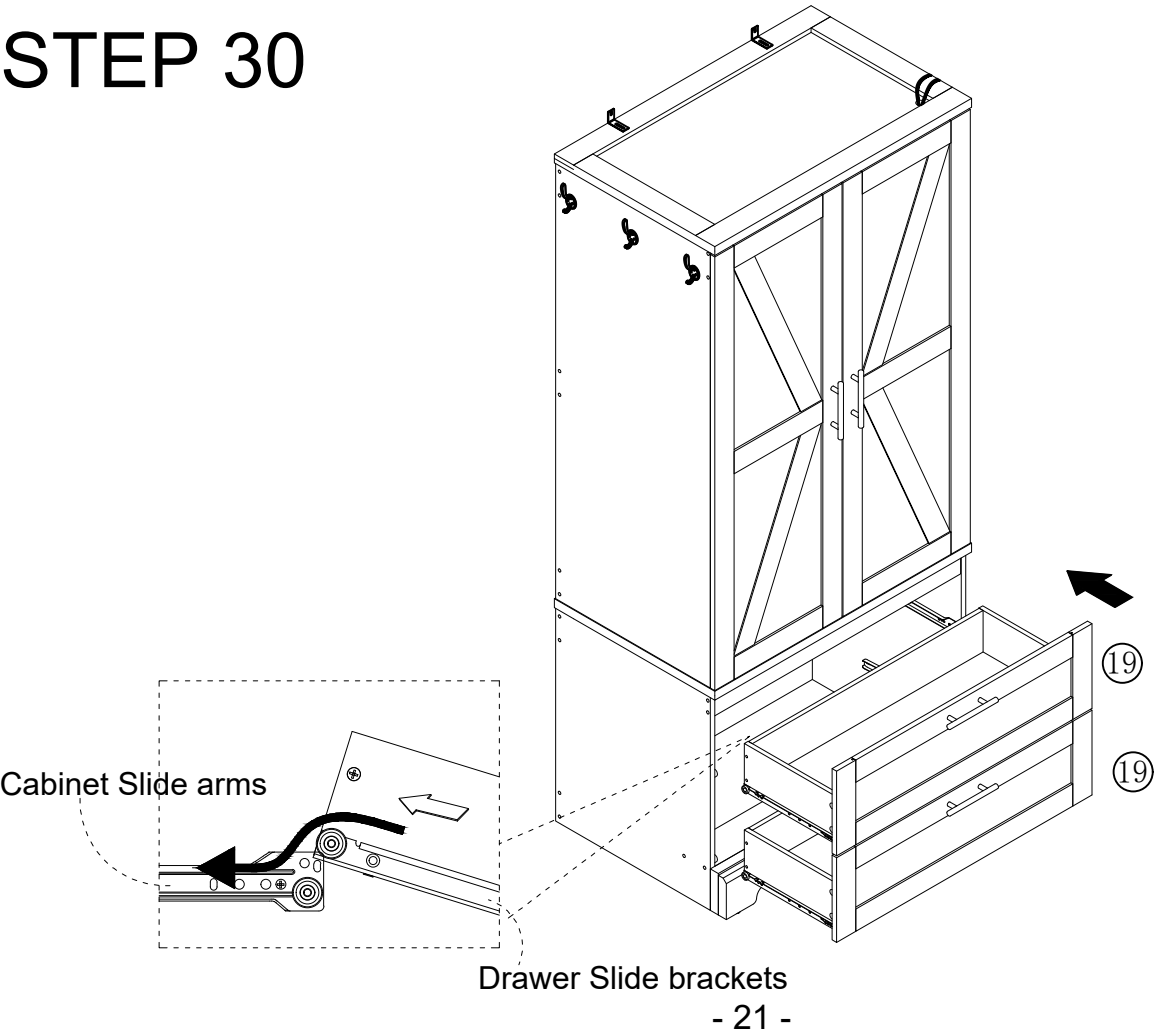

# STEP 31

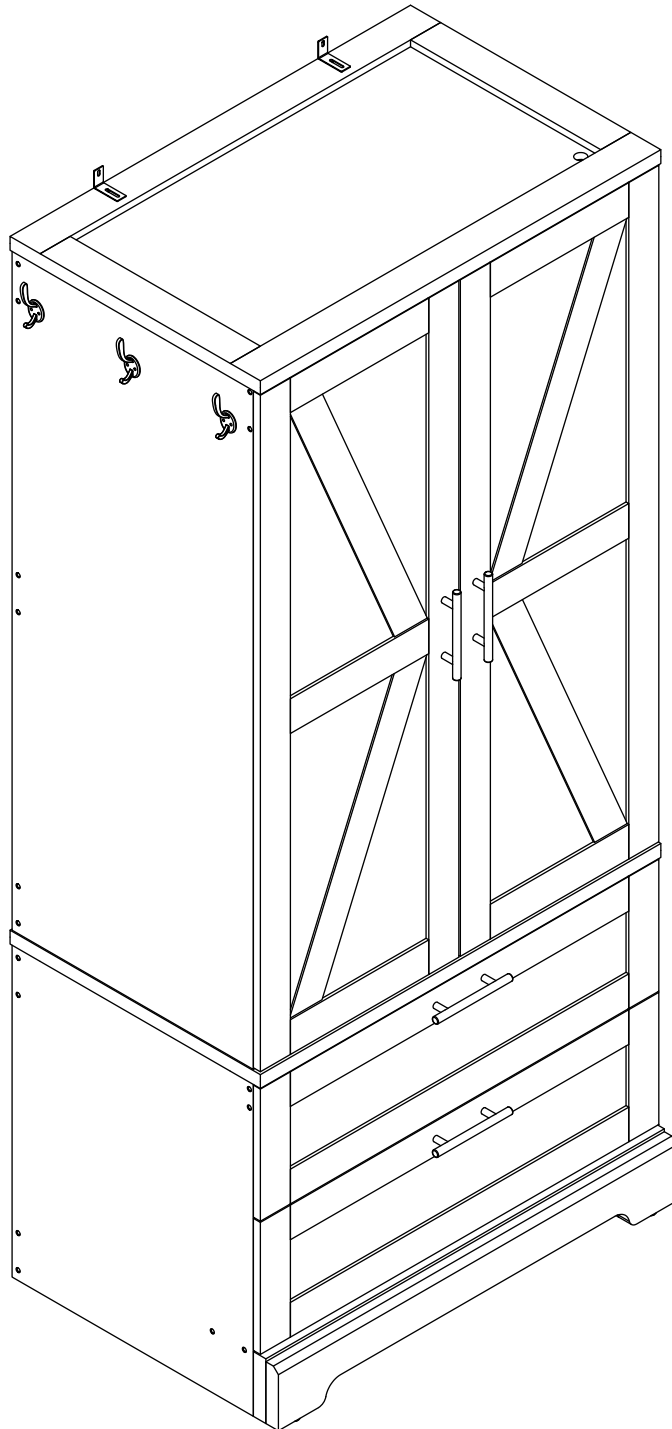

# FURNITURE CARE AND MAINTENANCE

## Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



### MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



### CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning