

ASSEMBLY INSTRUCTION
(Instructions de montage)

x4

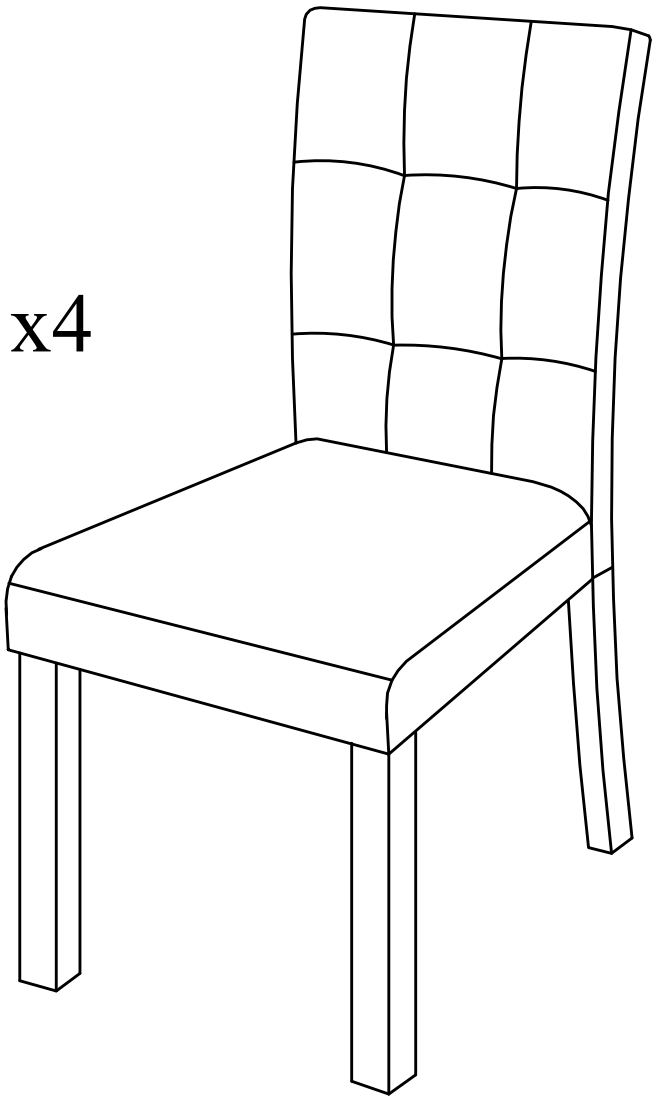



NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS
(REMARQUE: SERRER À 50% AVANT DE FIXER TOUS LES BOULONS)

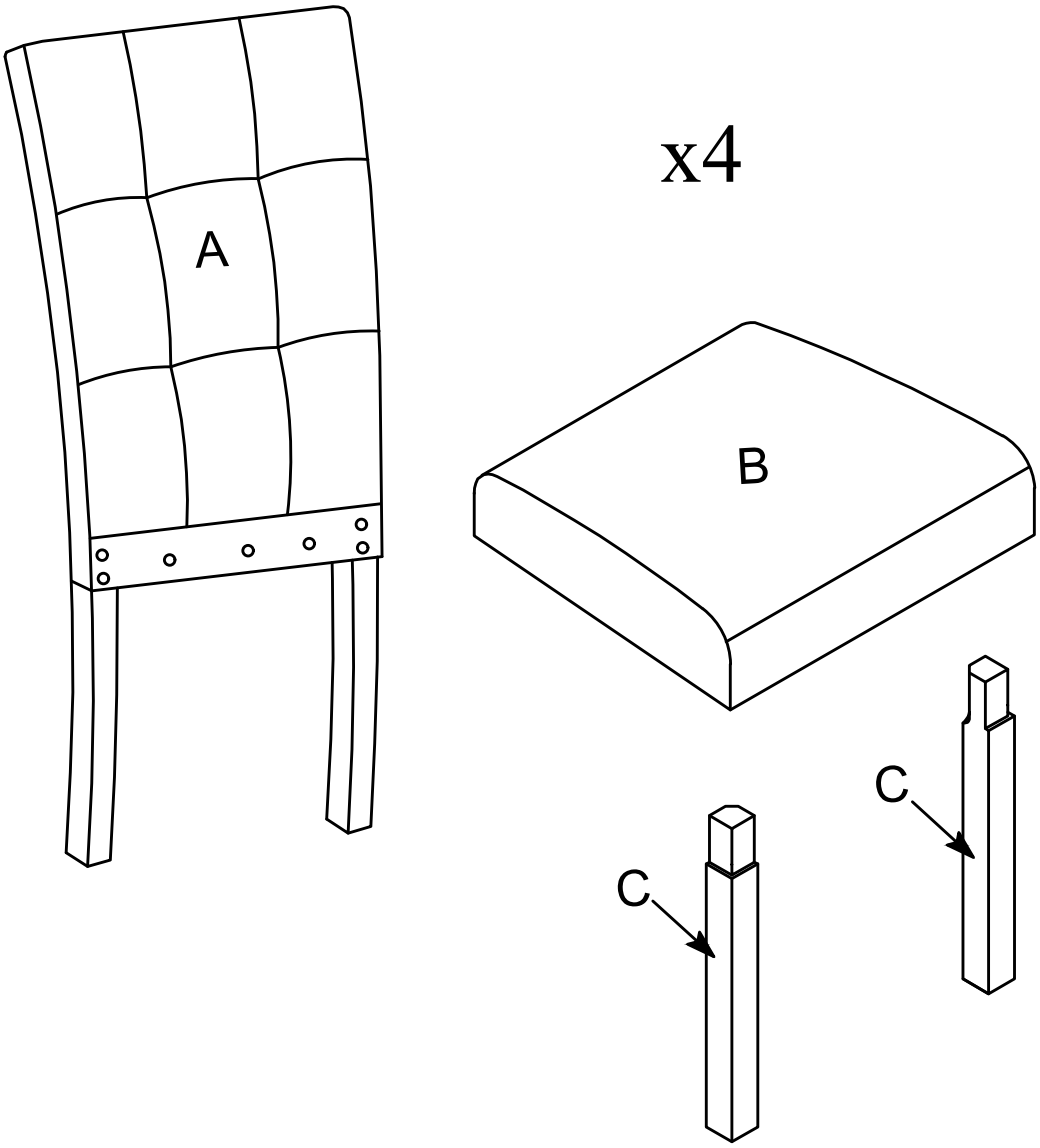




Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure itremains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all thescrews, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly,chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustmen tof the screws.

PART LIST FOR 4 (LISTE DES PIÈCES POUR 4)

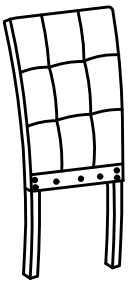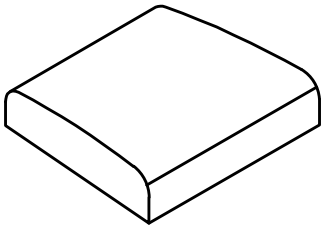
A  Chair Back (4PCS) (Dossier de chaise)	B  Chair Seat (4PCS) (Siège de chaise)	C  Front Leg (8PCS) (Patte de devant)

HARDWARE LIST FOR 4 (LISTE DU MATÉRIEL POUR 4)

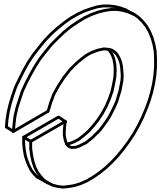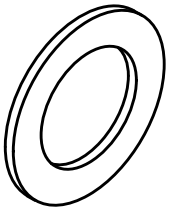1  Bolt 5/16" x 50mm (24PCS) (Boulon)	2  Bolt 5/16" x 80mm (16PCS) (Boulon)	3  Spring Washer 5/16" (40PCS) (Rondelle élastique)
4  Flat Washer 5/16"*22MM (40PCS) (Rondelle plate)	5  Allen Key 5mm (1PC) (Clé Allen)	6  Wood dowel Ø10*30mm (4PCS)

STEP 1


x4

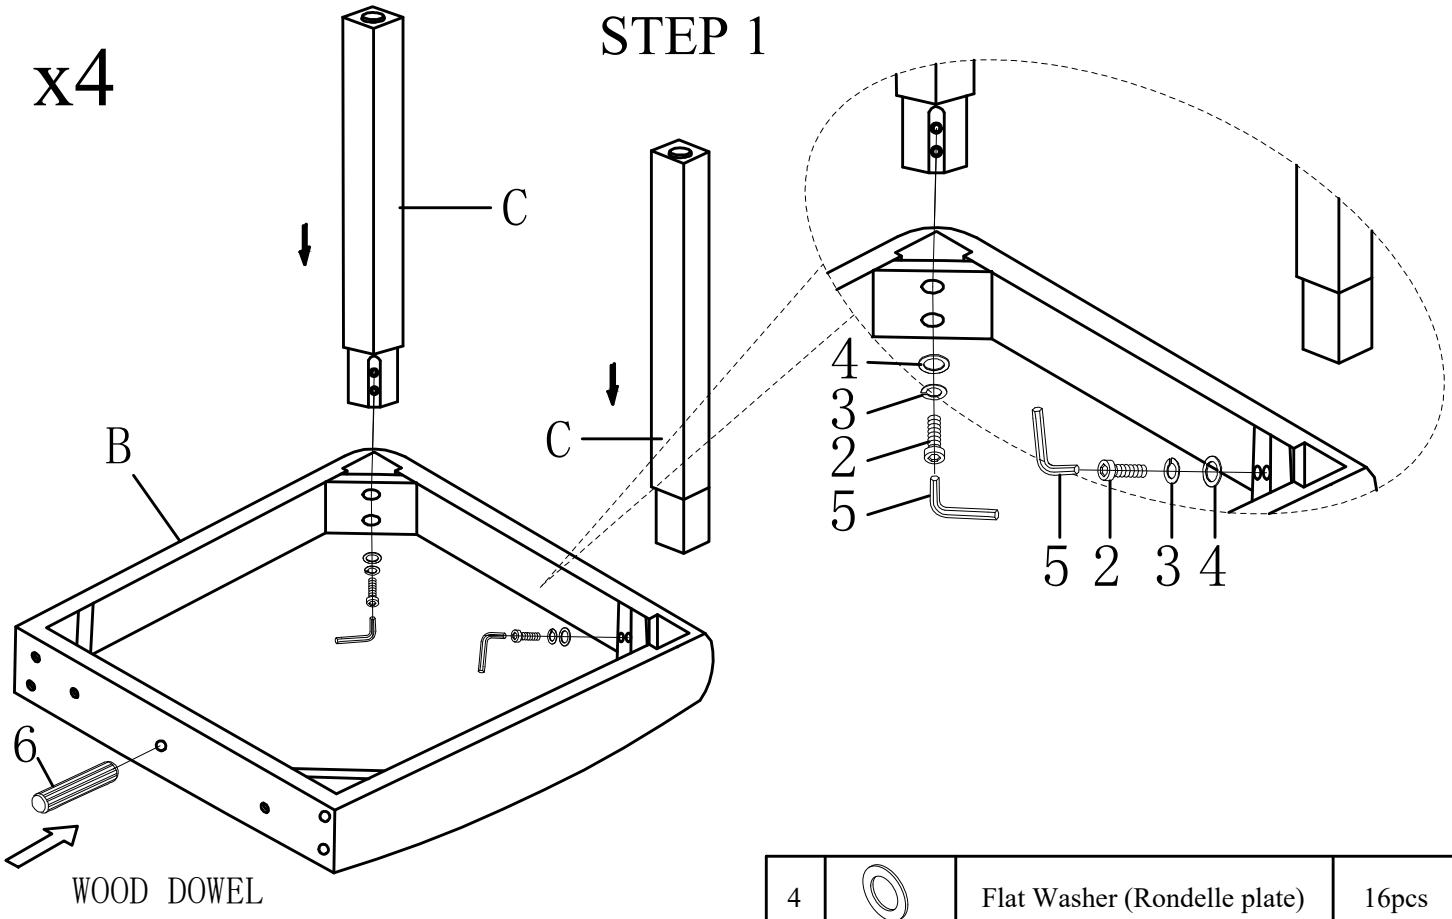

1		Bolt 5/16"x50mm (Boulon)	16pcs
3		Spring Washer (Rondelle élastique)	16pcs

4		Flat Washer (Rondelle plate)	16pcs
5		Allen Key 5mm (Clé Allen)	1pc
6		Wood dowel Ø10*30mm	4pcs


STEP 2

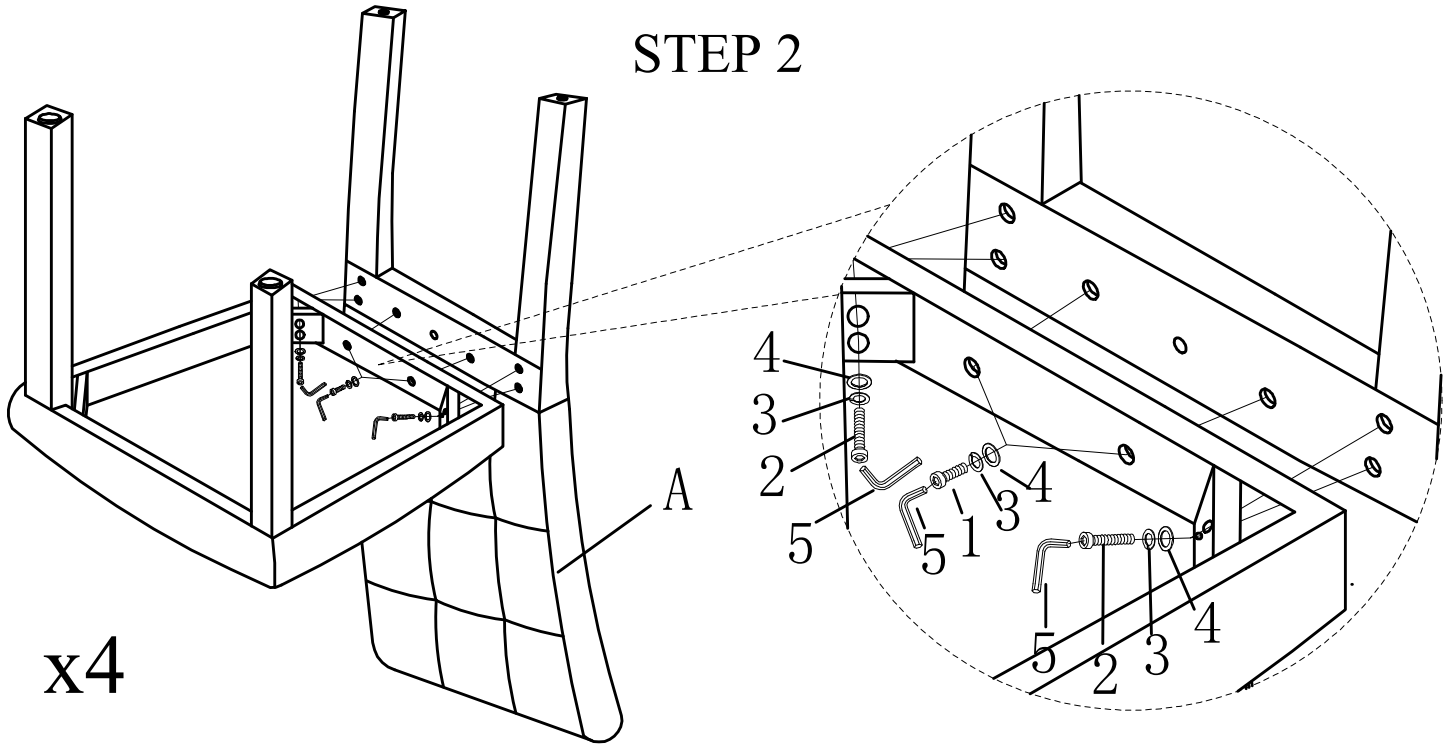

1		Bolt 5/16"x50mm (Boulon)	8pcs
2		Bolt 5/16"x80mm (Boulon)	16pcs
3		Spring Washer (Rondelle élastique)	24pcs

4		Flat Washer (Rondelle plate)	24pcs
5		Allen Key 5mm (Clé Allen)	1pc


STEP 3

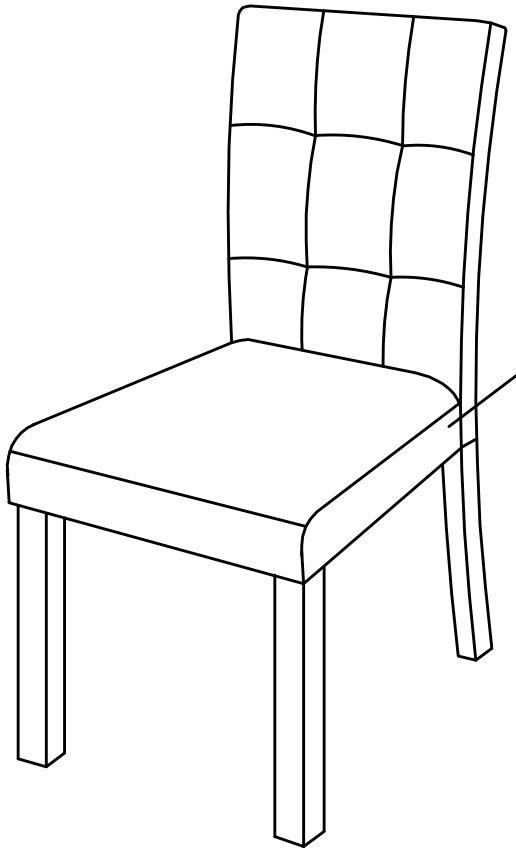

Please balance all 4chair legs on the same level&tightem all the screws.

x4

5		Allen Key 5mm (Clé Allen)	1pc

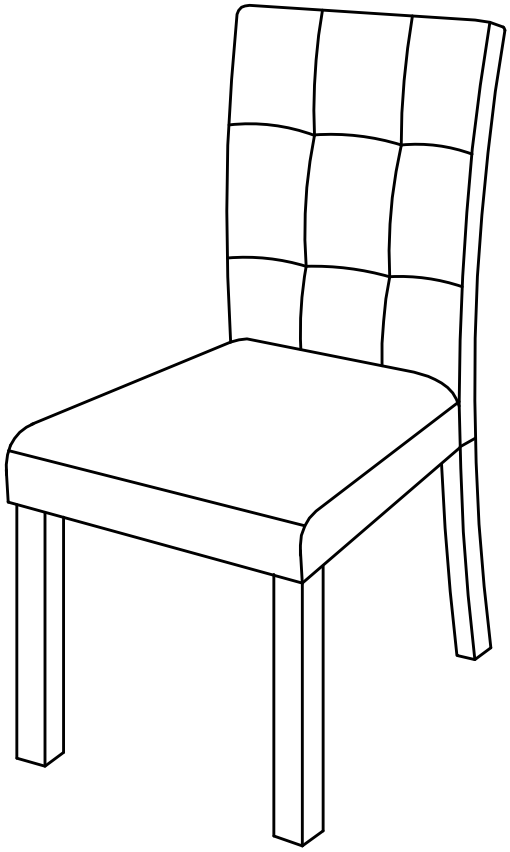

x4