




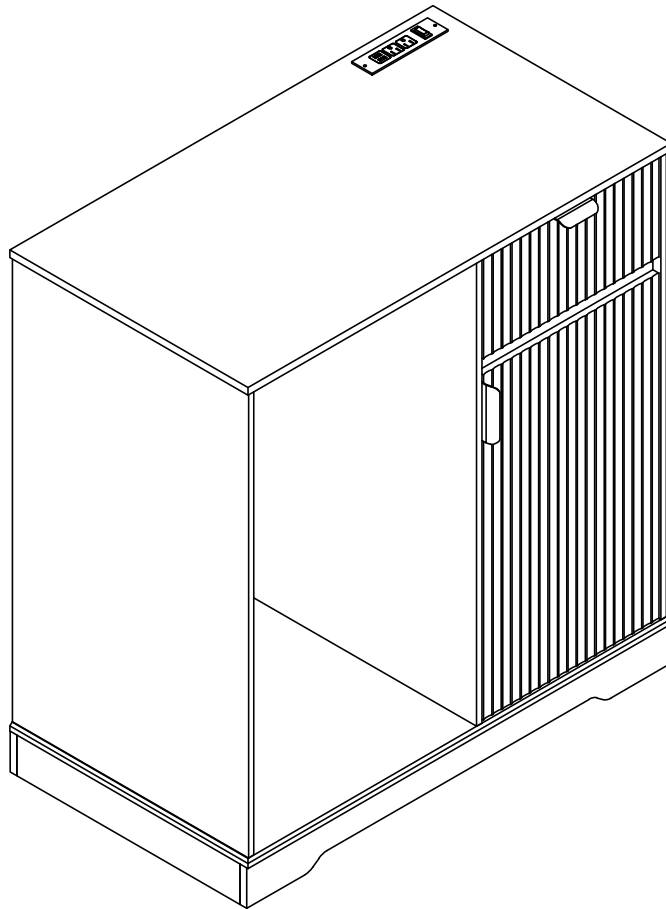


Please note: Items cannot be returned once assembled.


Installation & Assembly



IT IS RECOMMENDED
TO USE POWER TOOLS

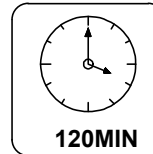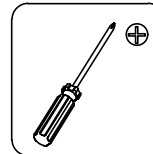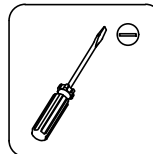

120MIN

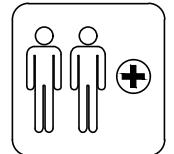

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!




---NEED HELP WITH YOUR FURNITURE?---

If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US

- ▶ Log in to your account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

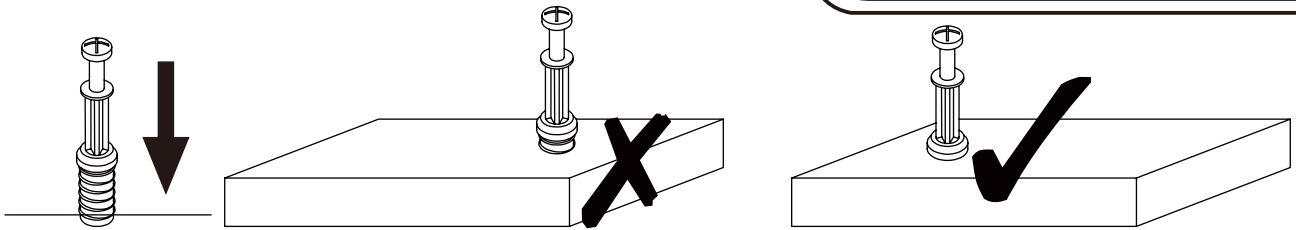


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

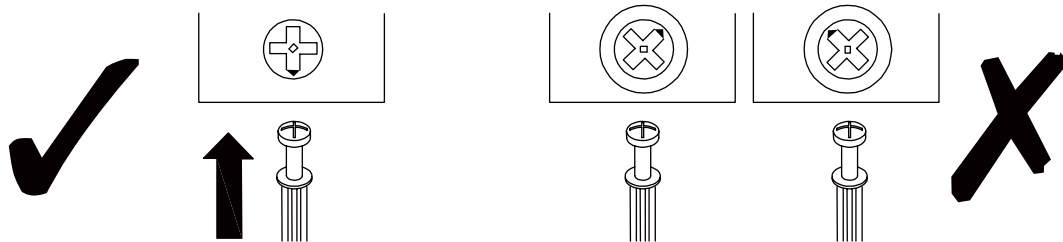











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










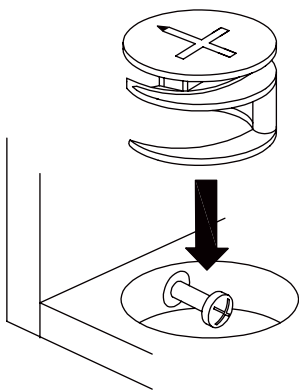





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

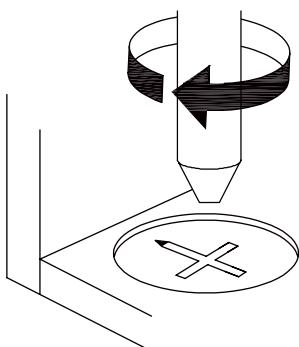
















EN_Turn cam lock clockwise to tighten.

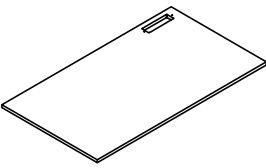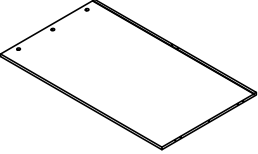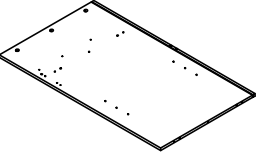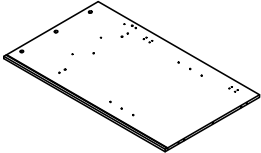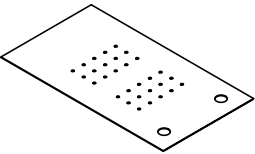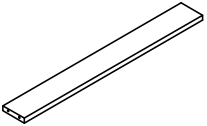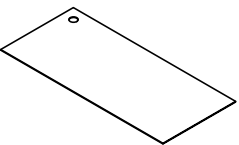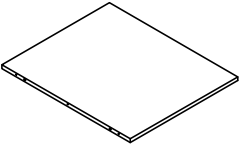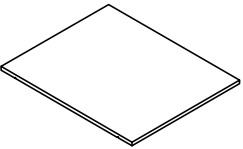NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x1	
7		x1	
8		x1	
9		x1	
10		x1	

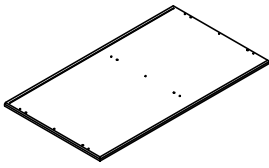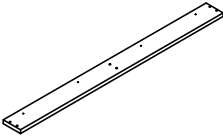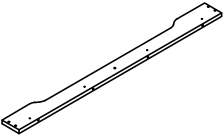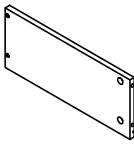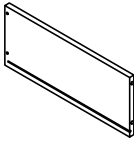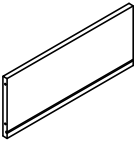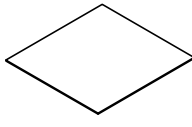NO.	PARTS	QTY	SPARE
11		x1	
12		x1	
13		x1	
14		x1	
15		x1	
16		x1	
17		x1	
18		x1	
19		x1	
20		x1	

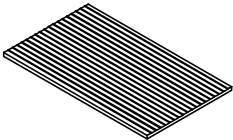NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
	 Hardware Kit	x1	

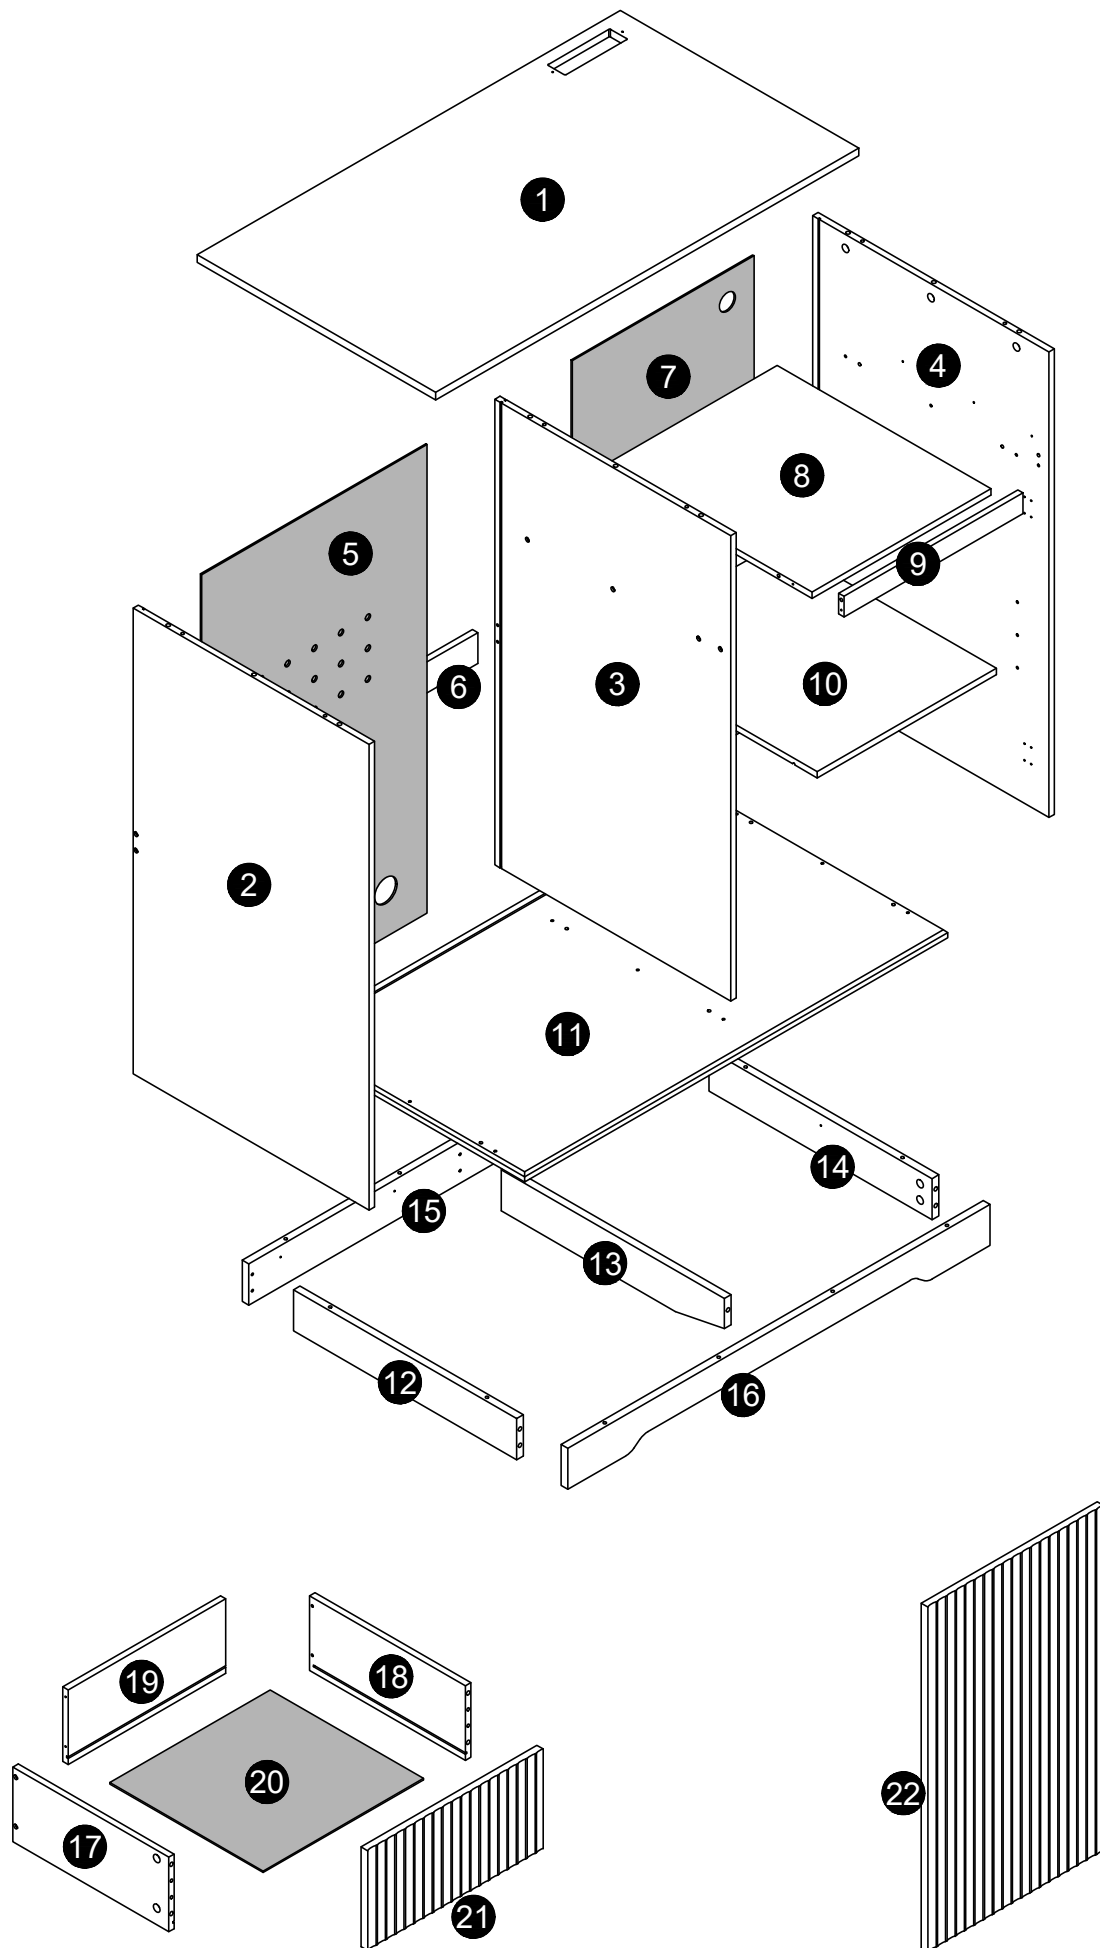

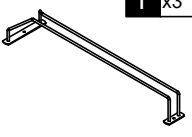
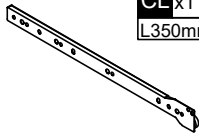
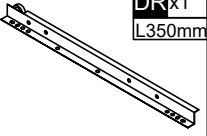
 A x18 Ø6x35mm +1(spare)	 B x18 Ø15x10mm +1(spare)	 C x34 Ø6x30mm +3(spare)	 D x33 Ø4x35mm +3(spare)	 E x48 Ø3.5x12mm +4(spare)	 F x1
 G x1	 H x1 H-1 H-2	 I x3	 J x6	 K x10	 L x4
 M x1	 N x2 Ø3.5x12mm	 O x2	 P x8 Ø3x16mm +1(spare) P-1 P-2	 Q x10 +4(spare)	 R x2 Ø4x14mm R-1 R-2
 S x2 Ø6x30mm	 CL x1 L350mm	 CR x1 L350mm	 DL x1 L350mm	 DR x1 L350mm	

A x4

B x4

C x4

D x4

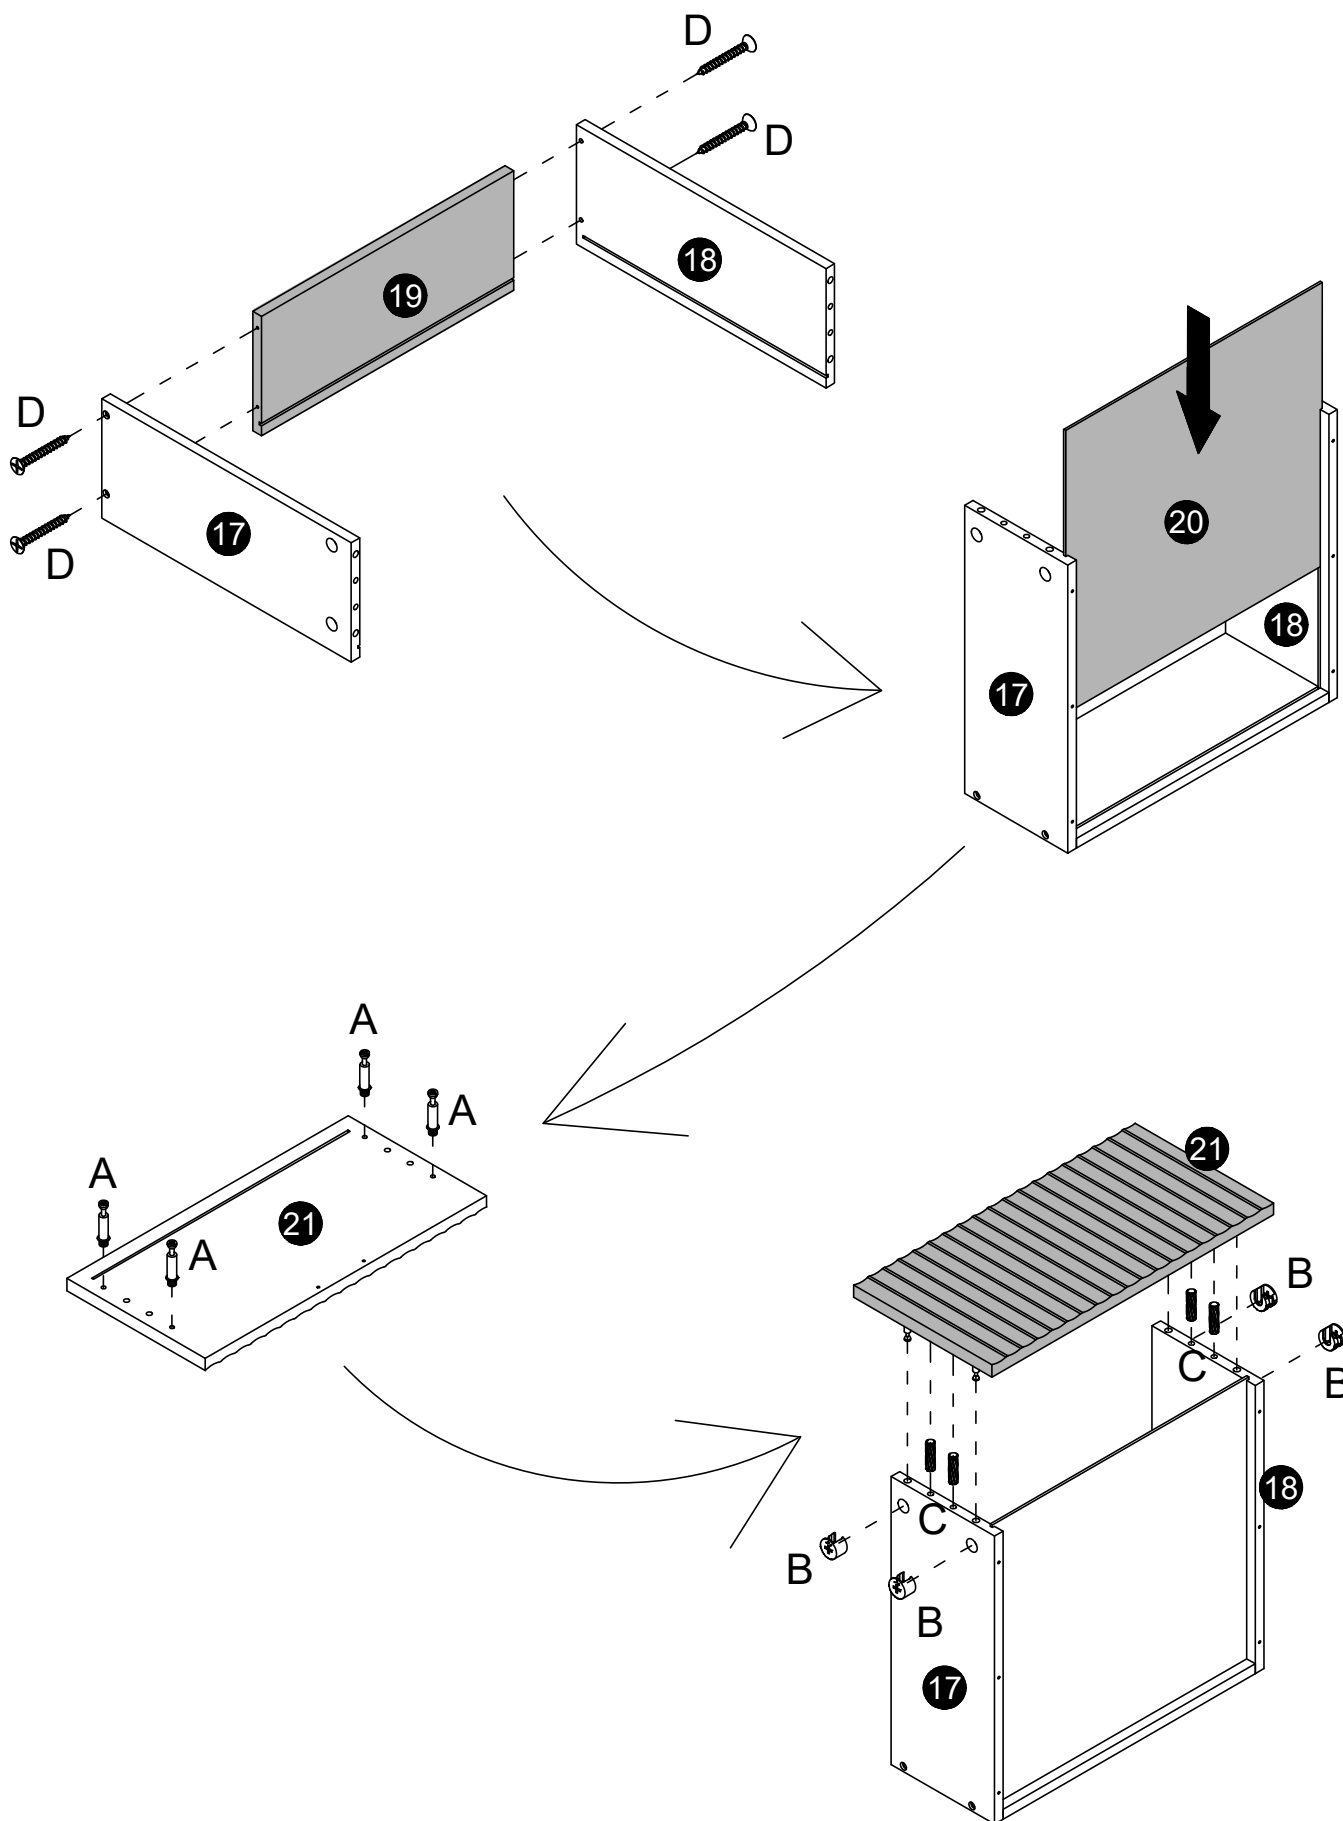



E x6



DL x1





DR x1

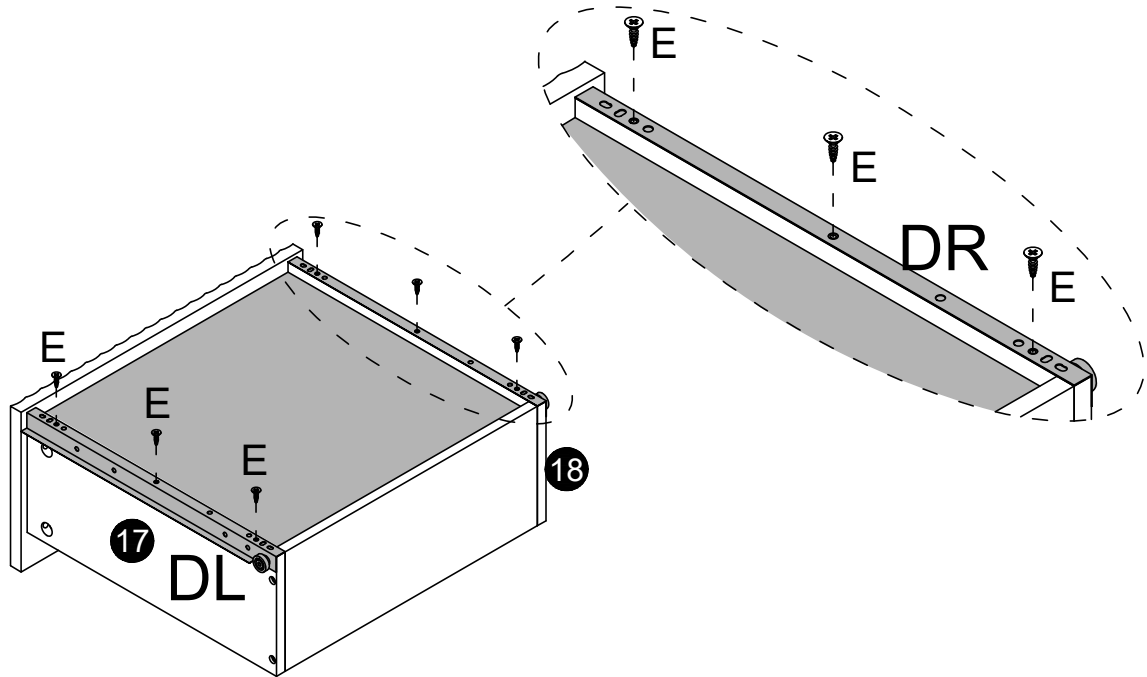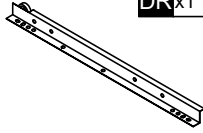

E x2




F x1

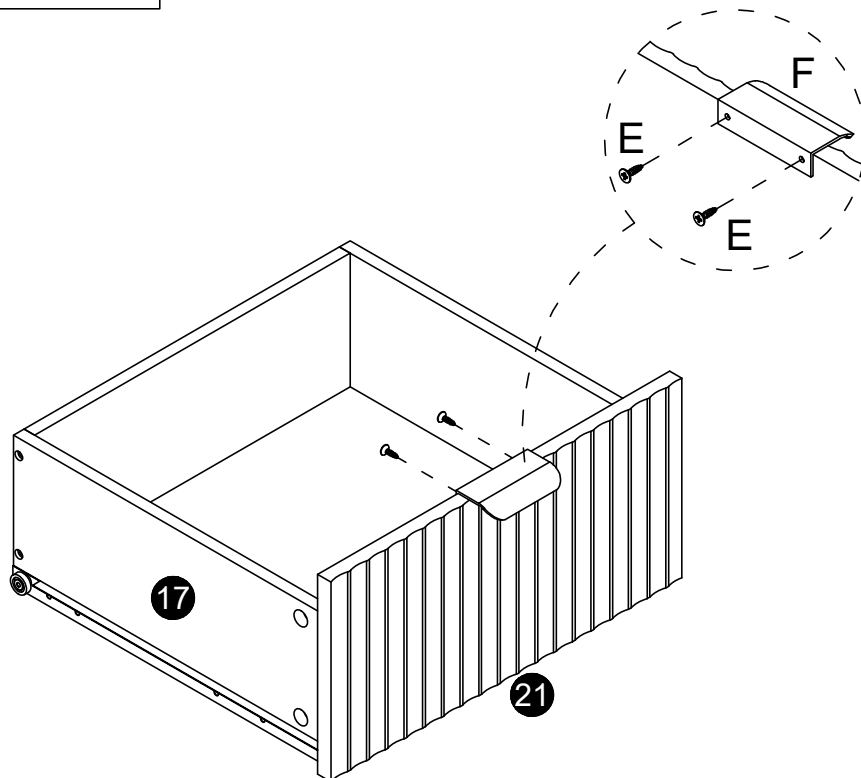

E x3



H x1





H-1



H-2


CL x1

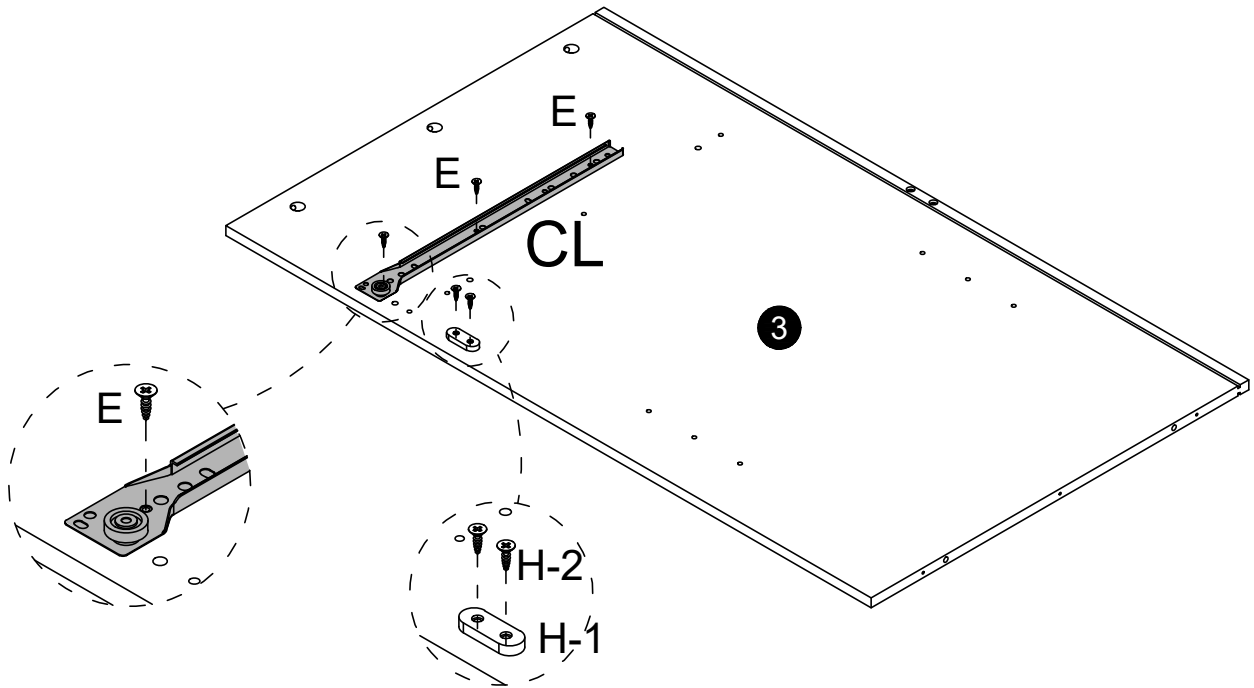
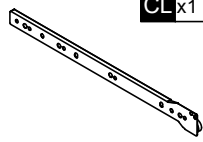


E x3



CR x1



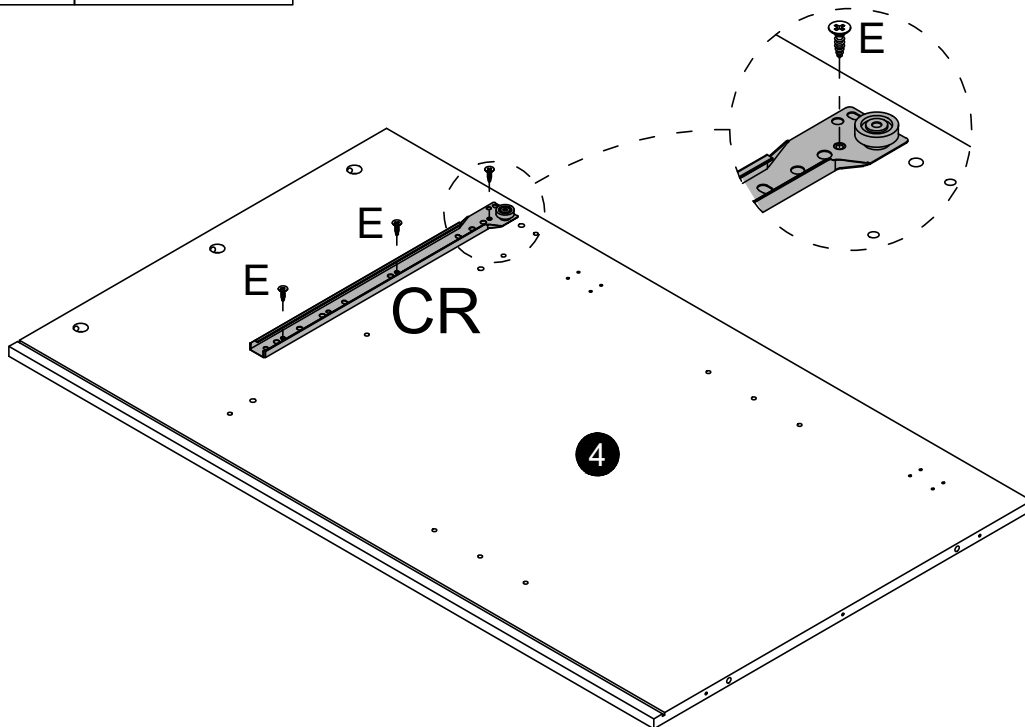


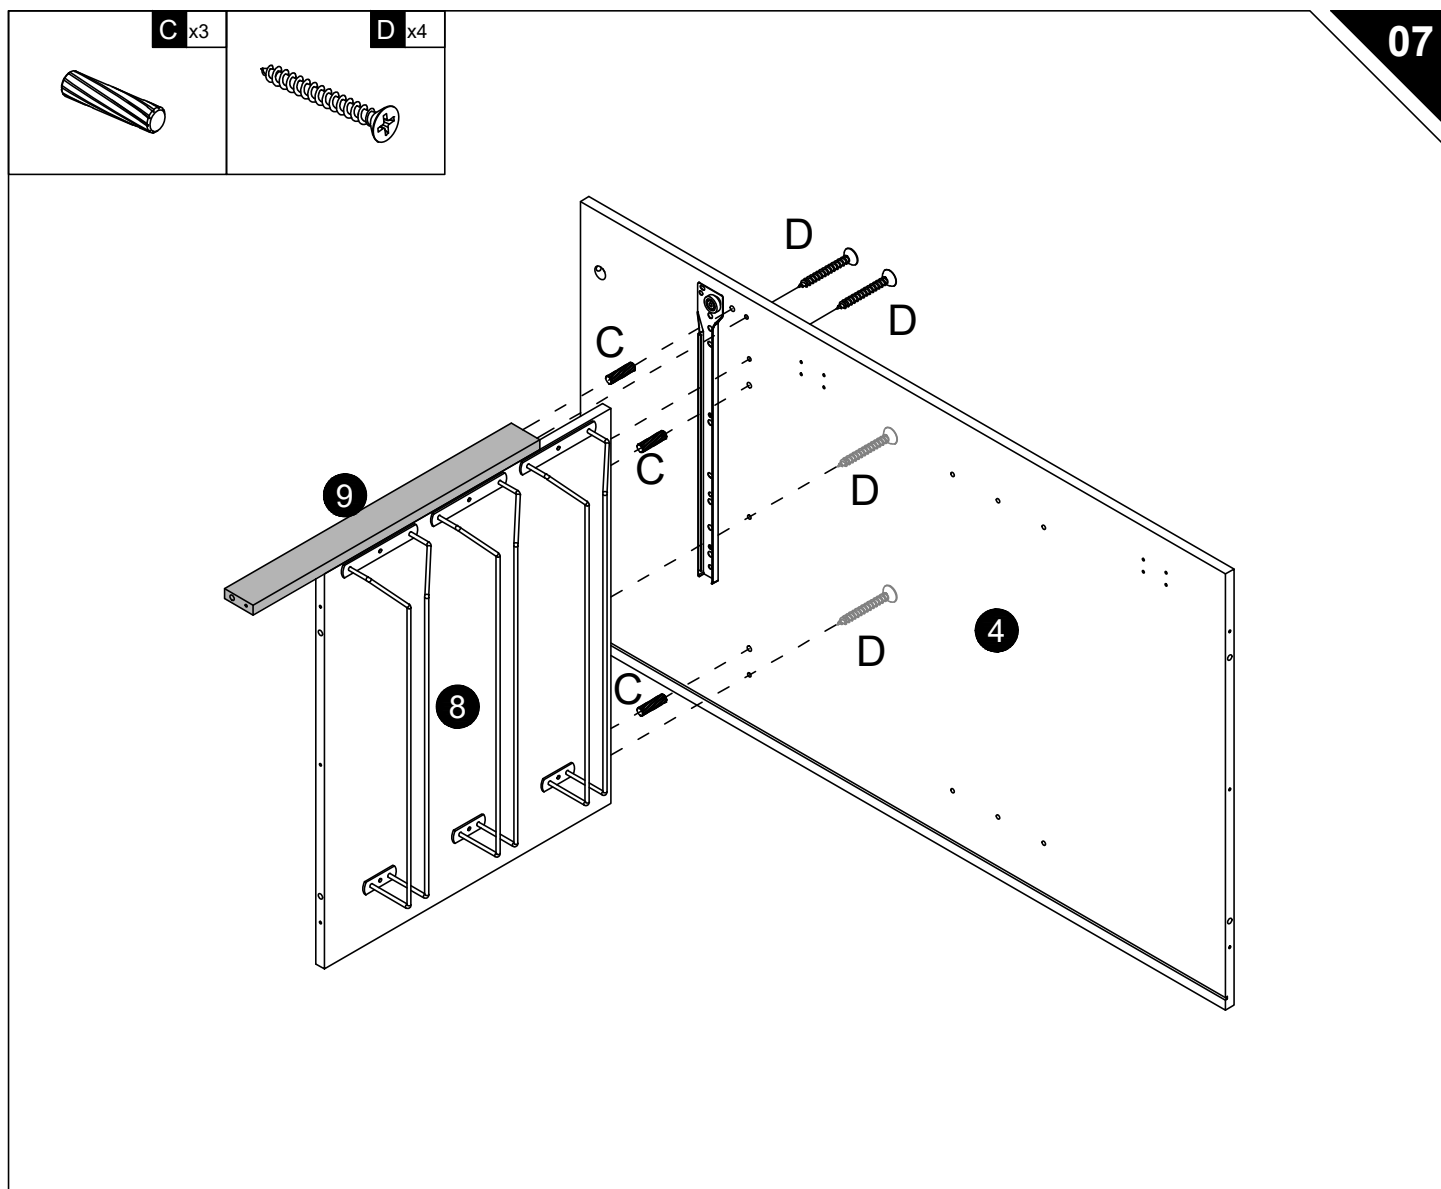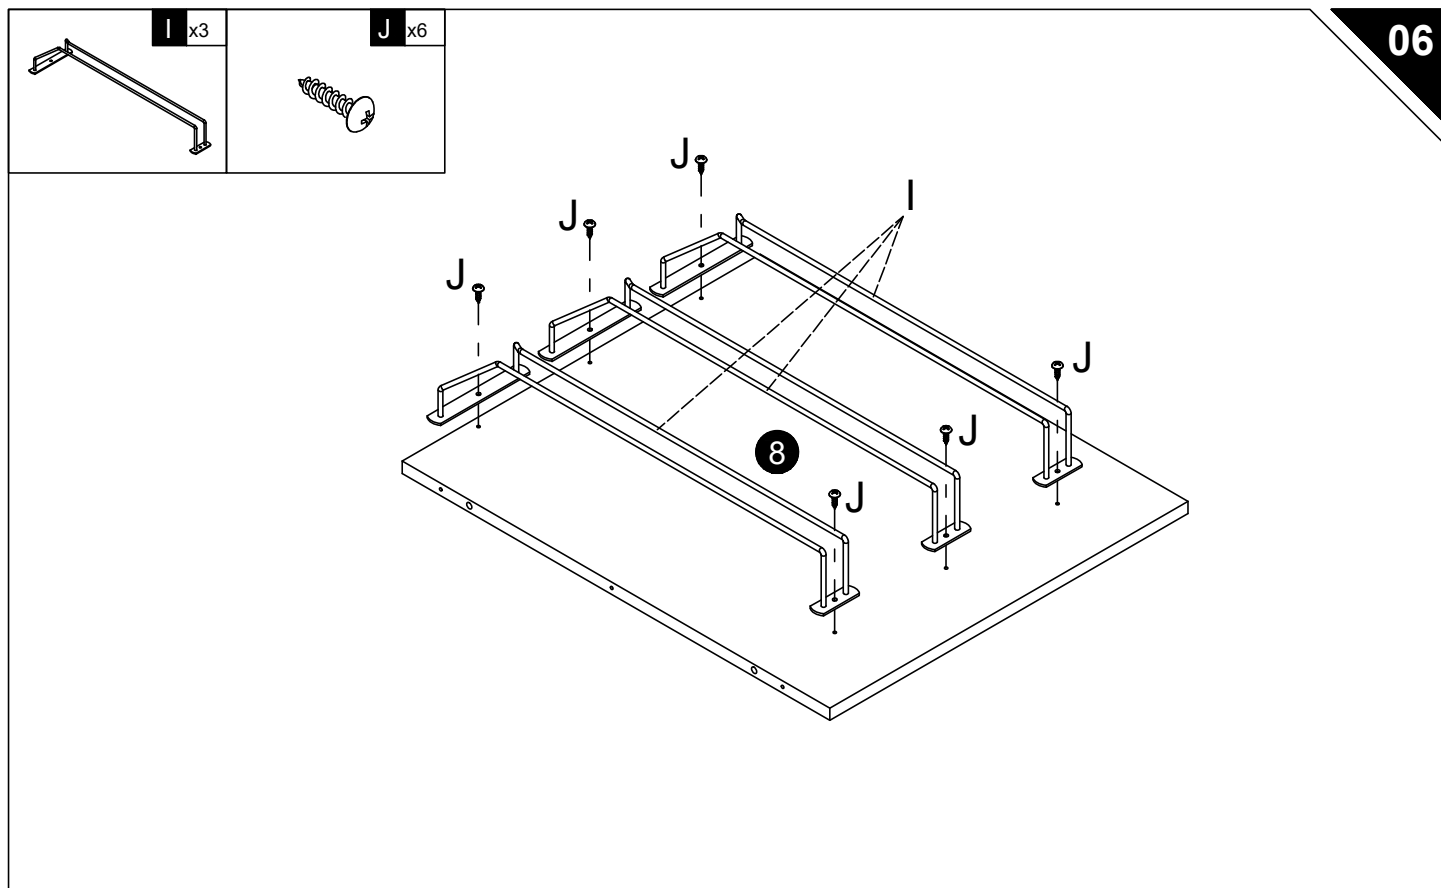


C x3



D x8


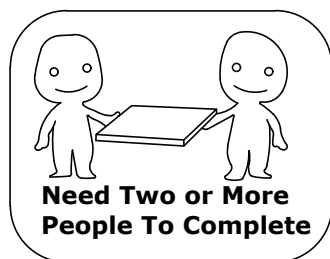
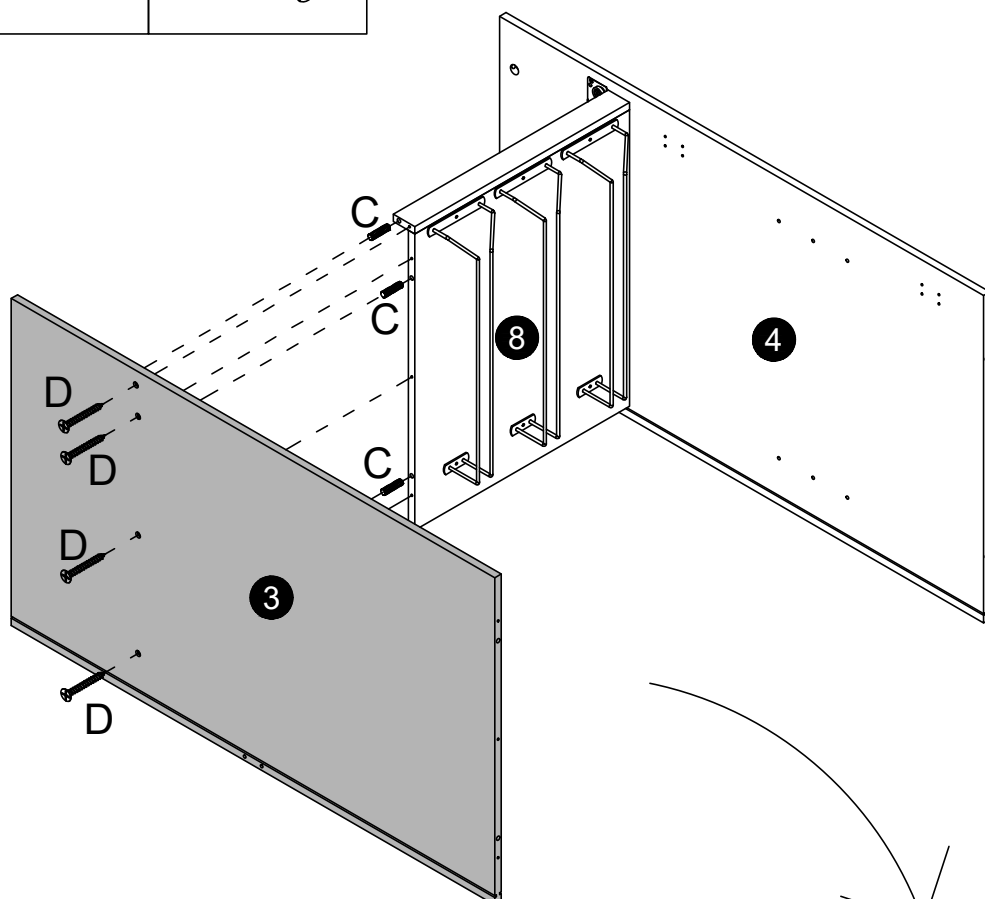



**Need Two or More
People To Complete**

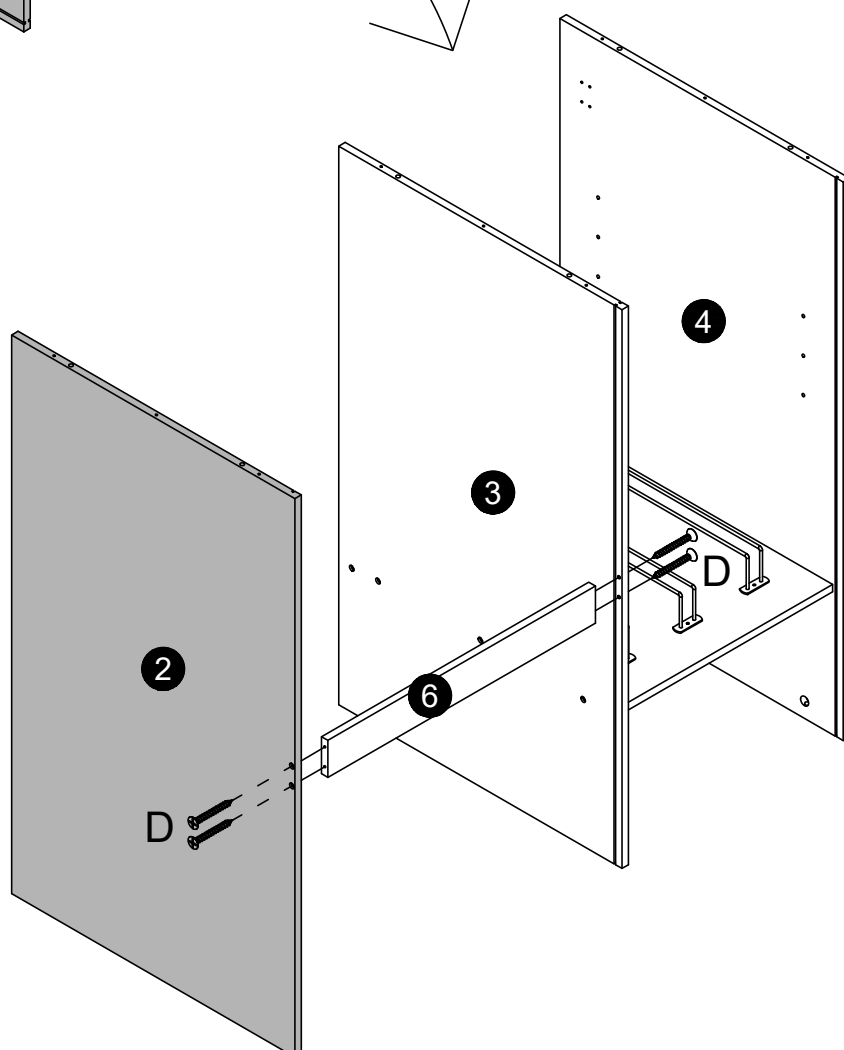


C x6

D x9

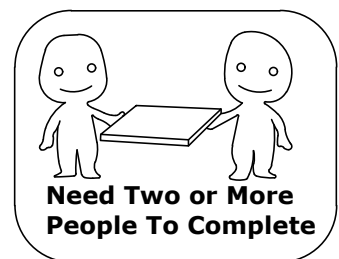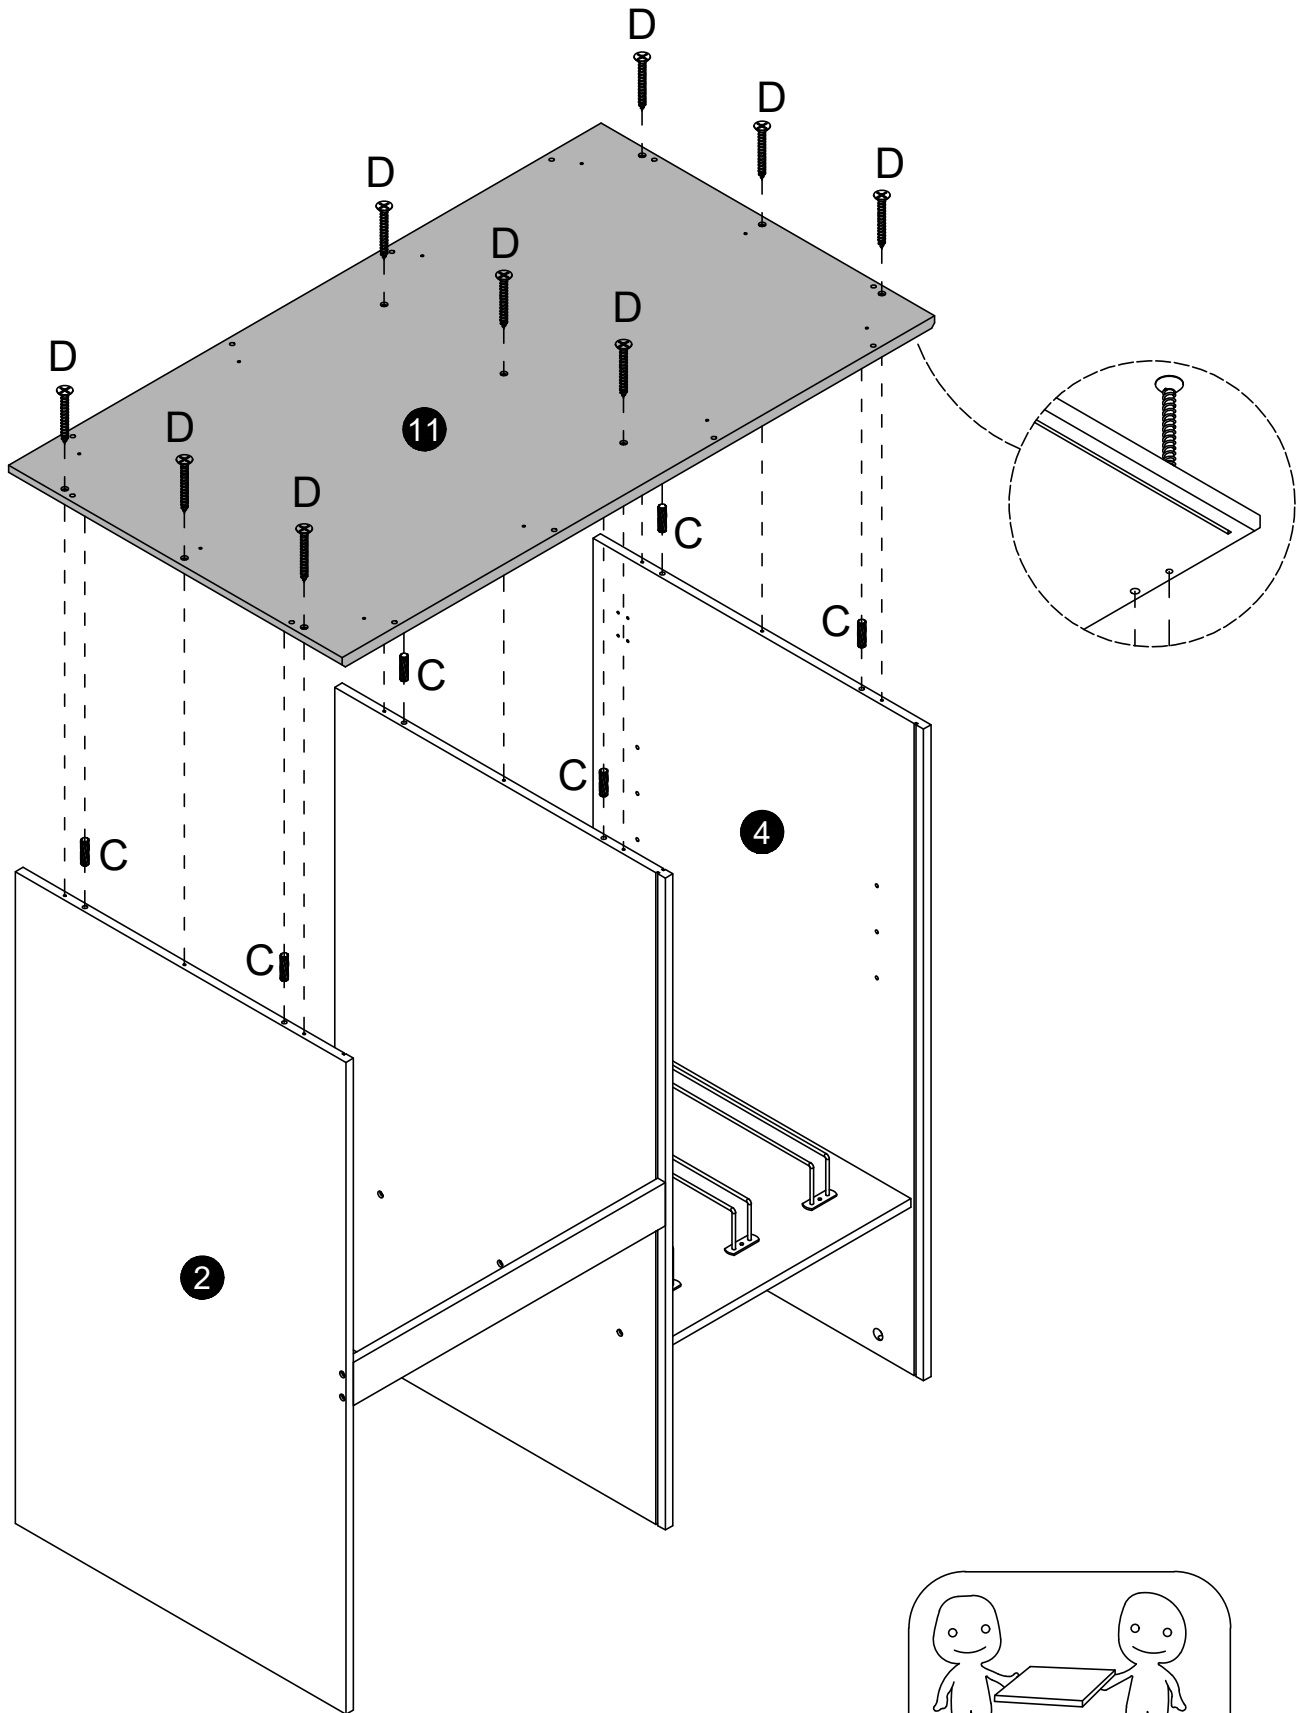


A x5



E x10





K x10

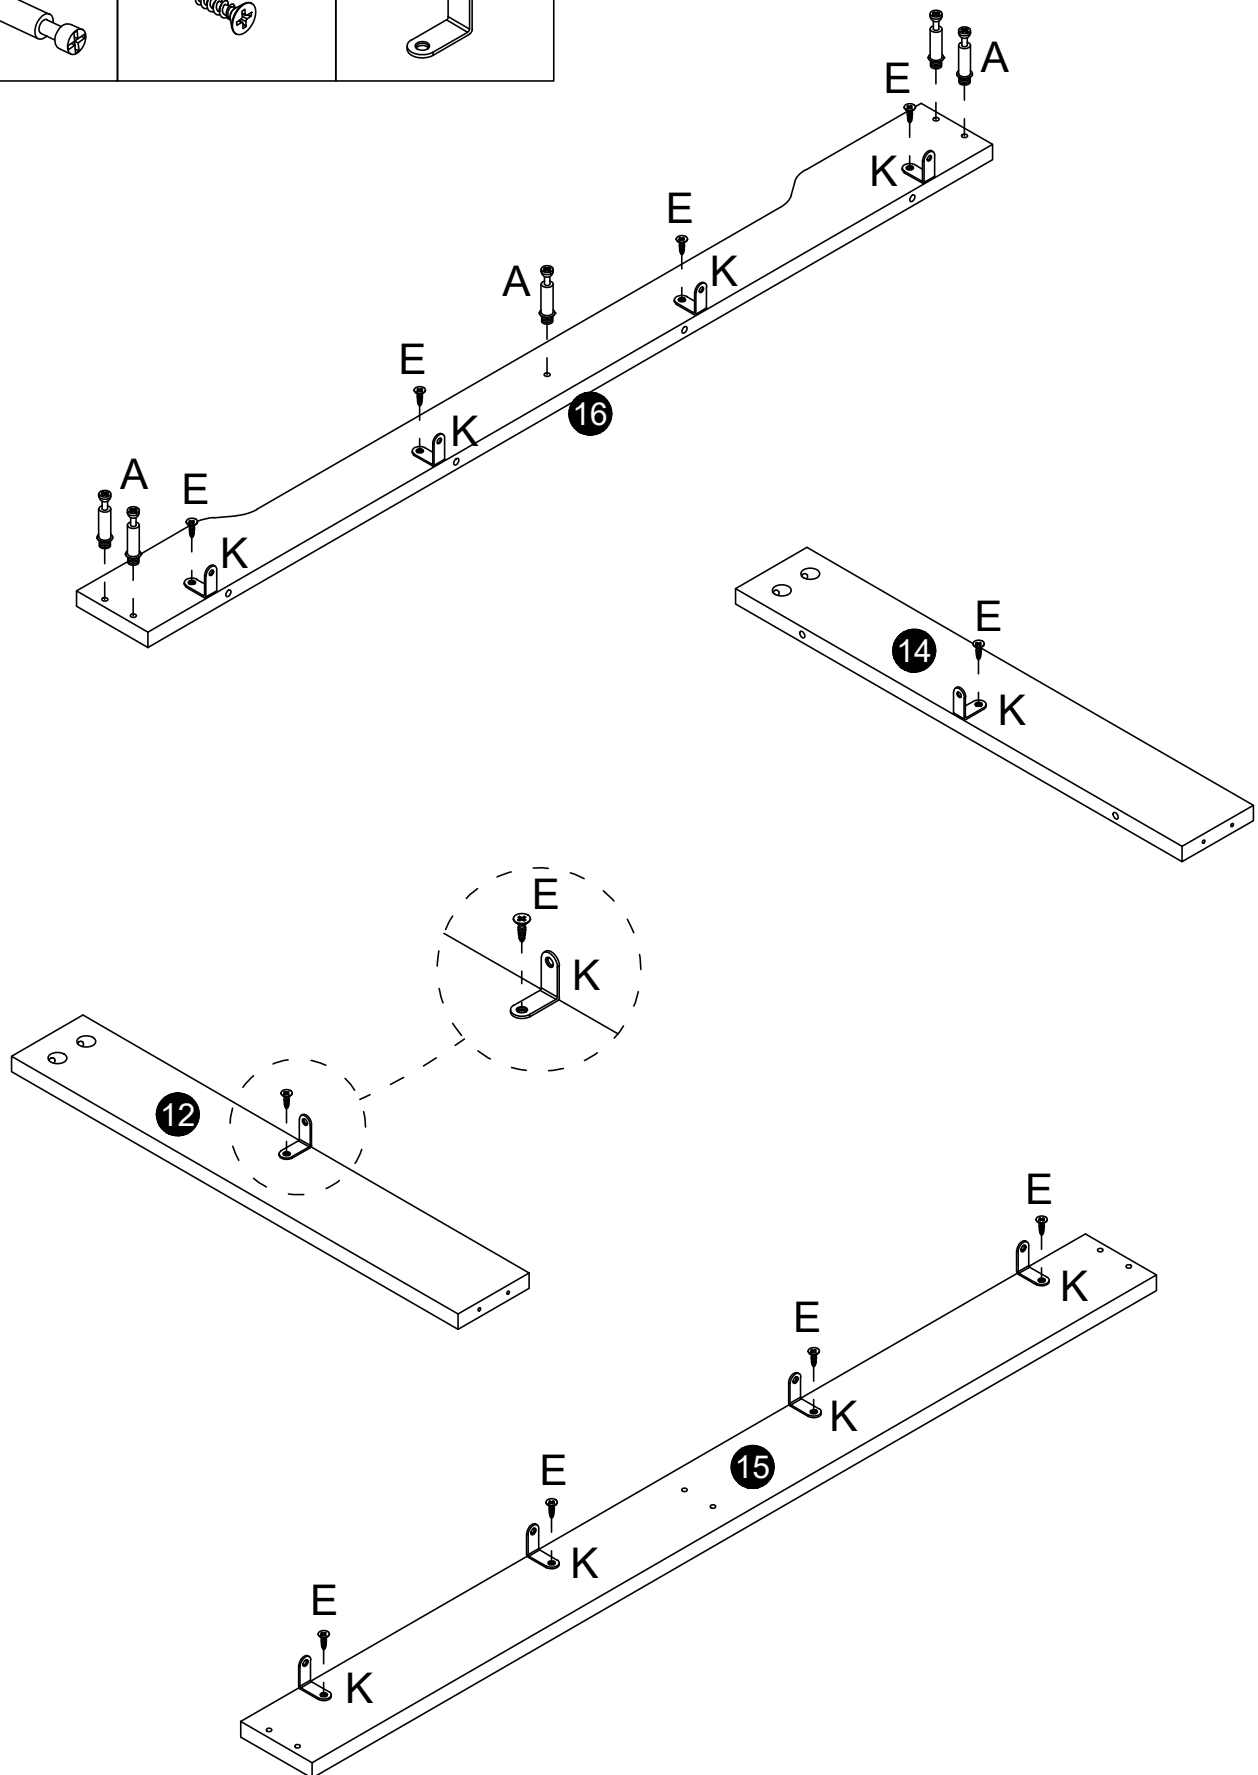


B x5




D x6

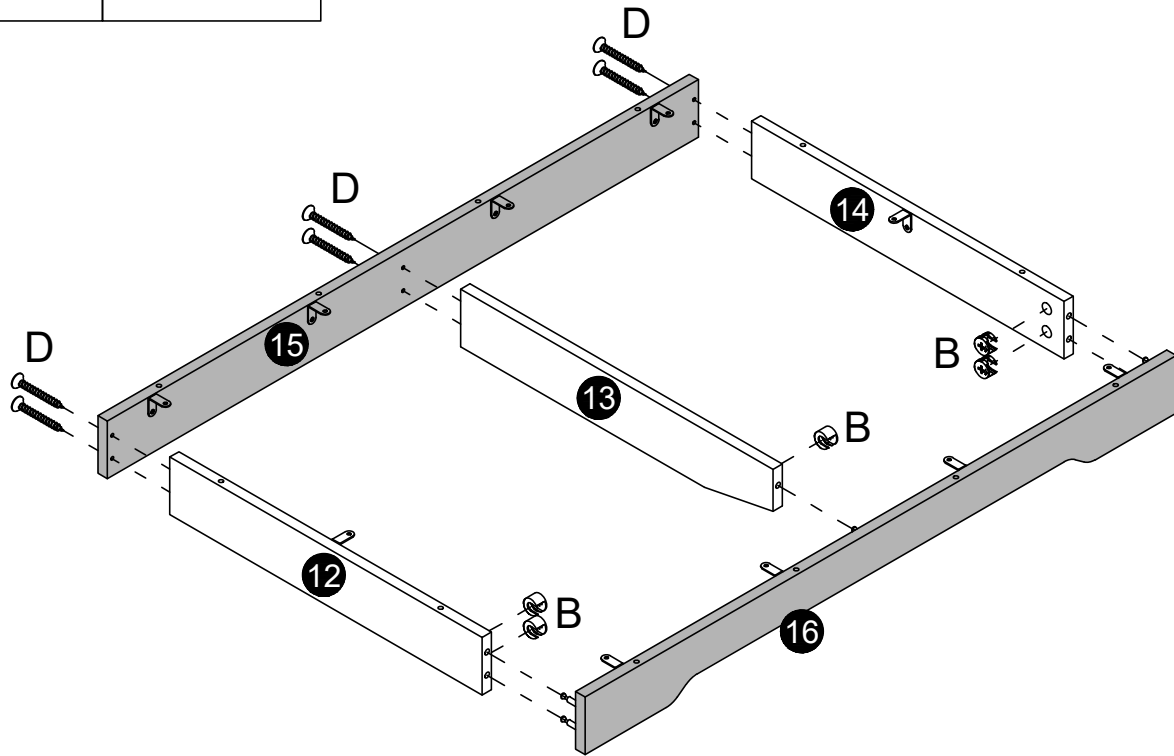

C x12

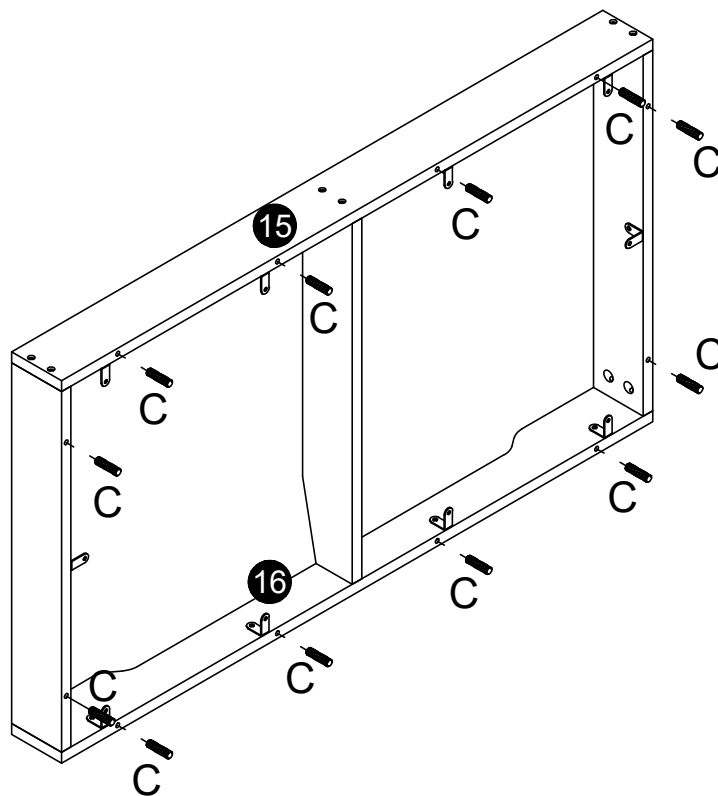


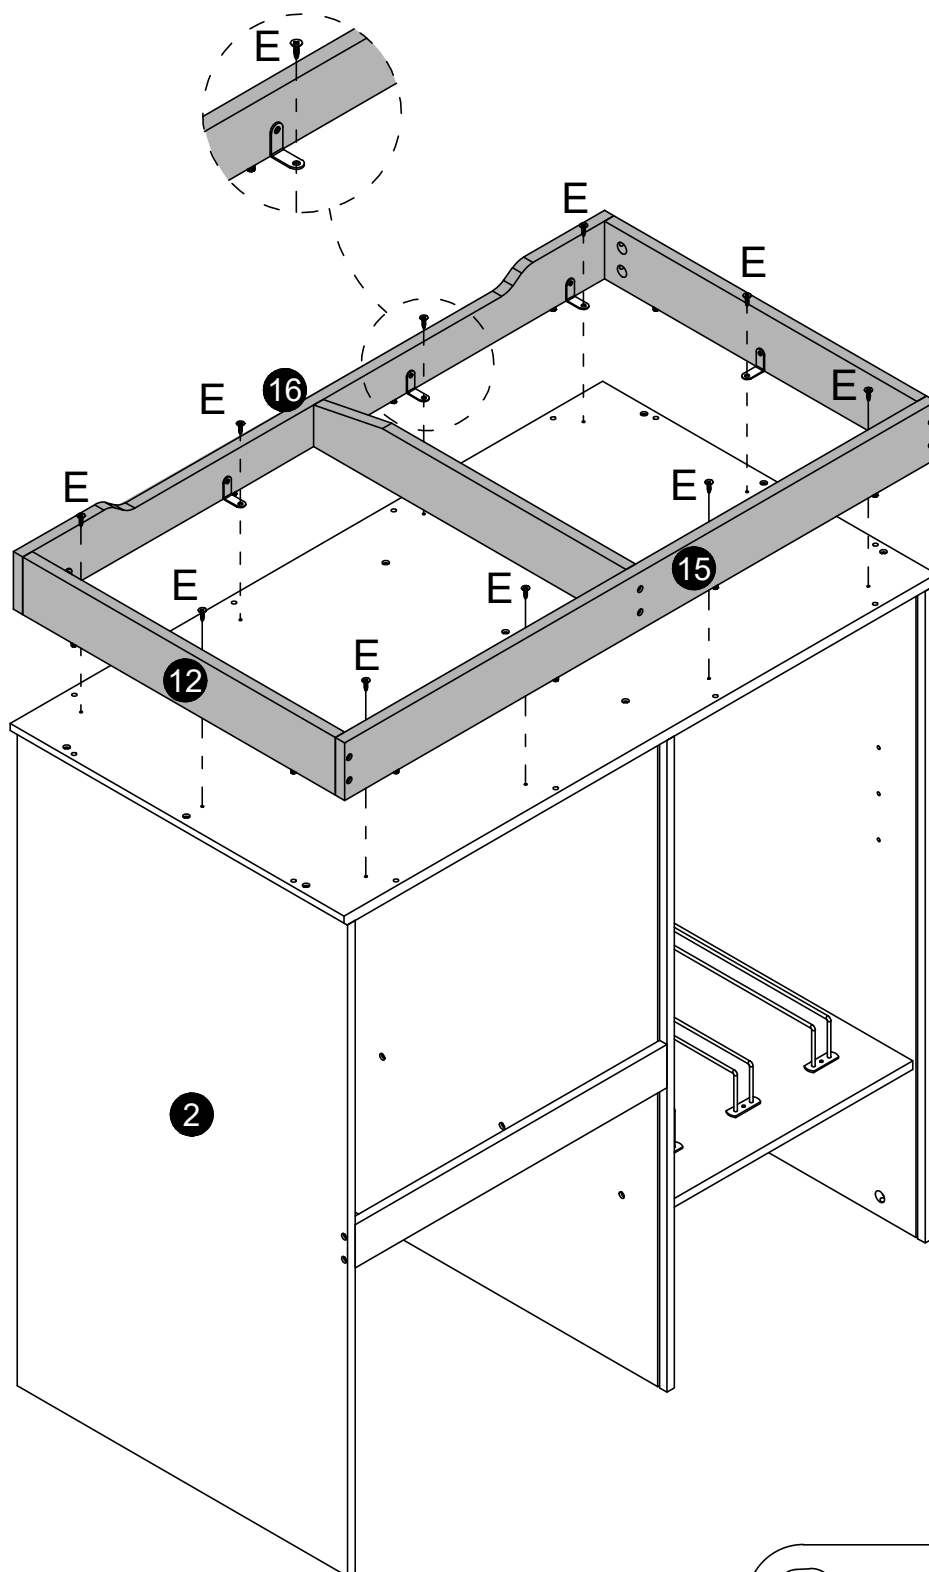

C x6




14

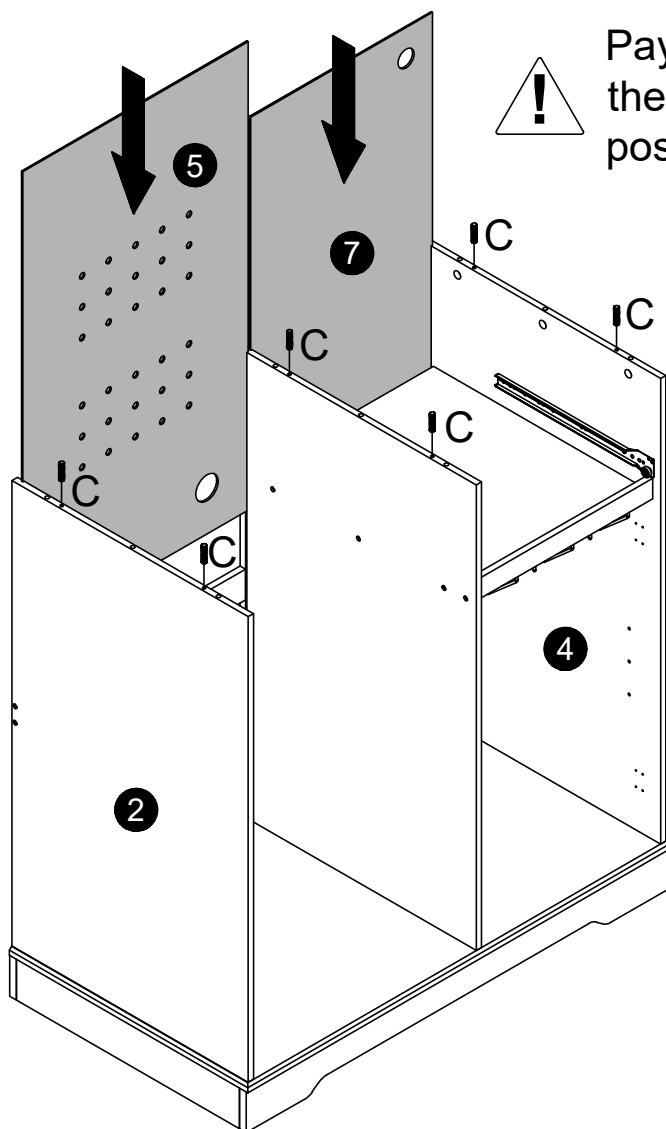



Pay attention to the installation position of the holes.

A x9





15

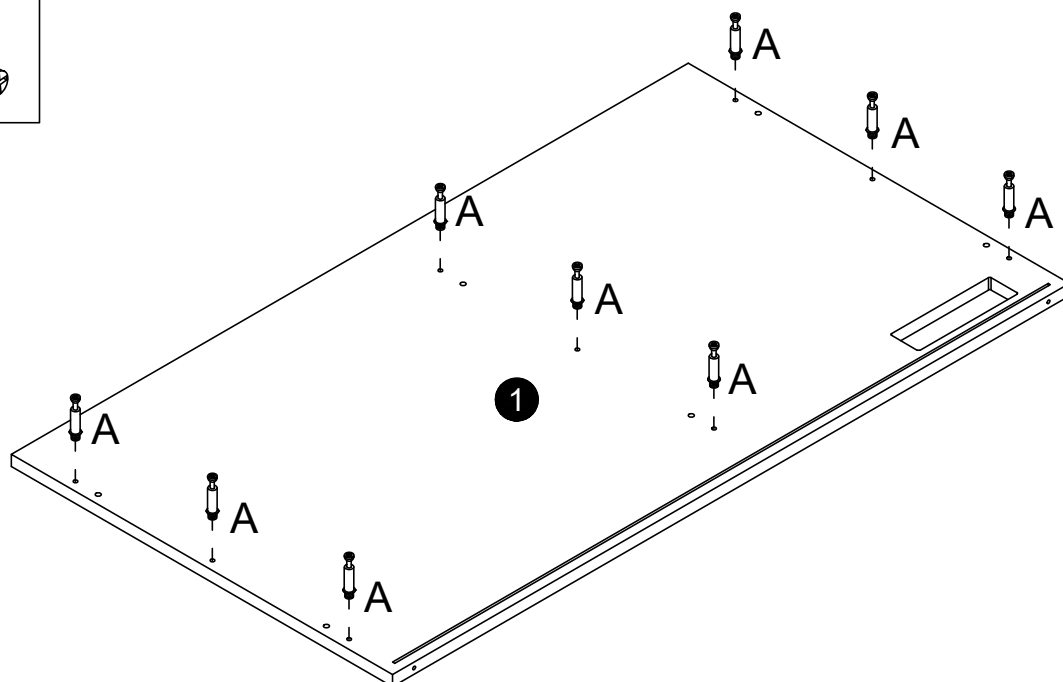

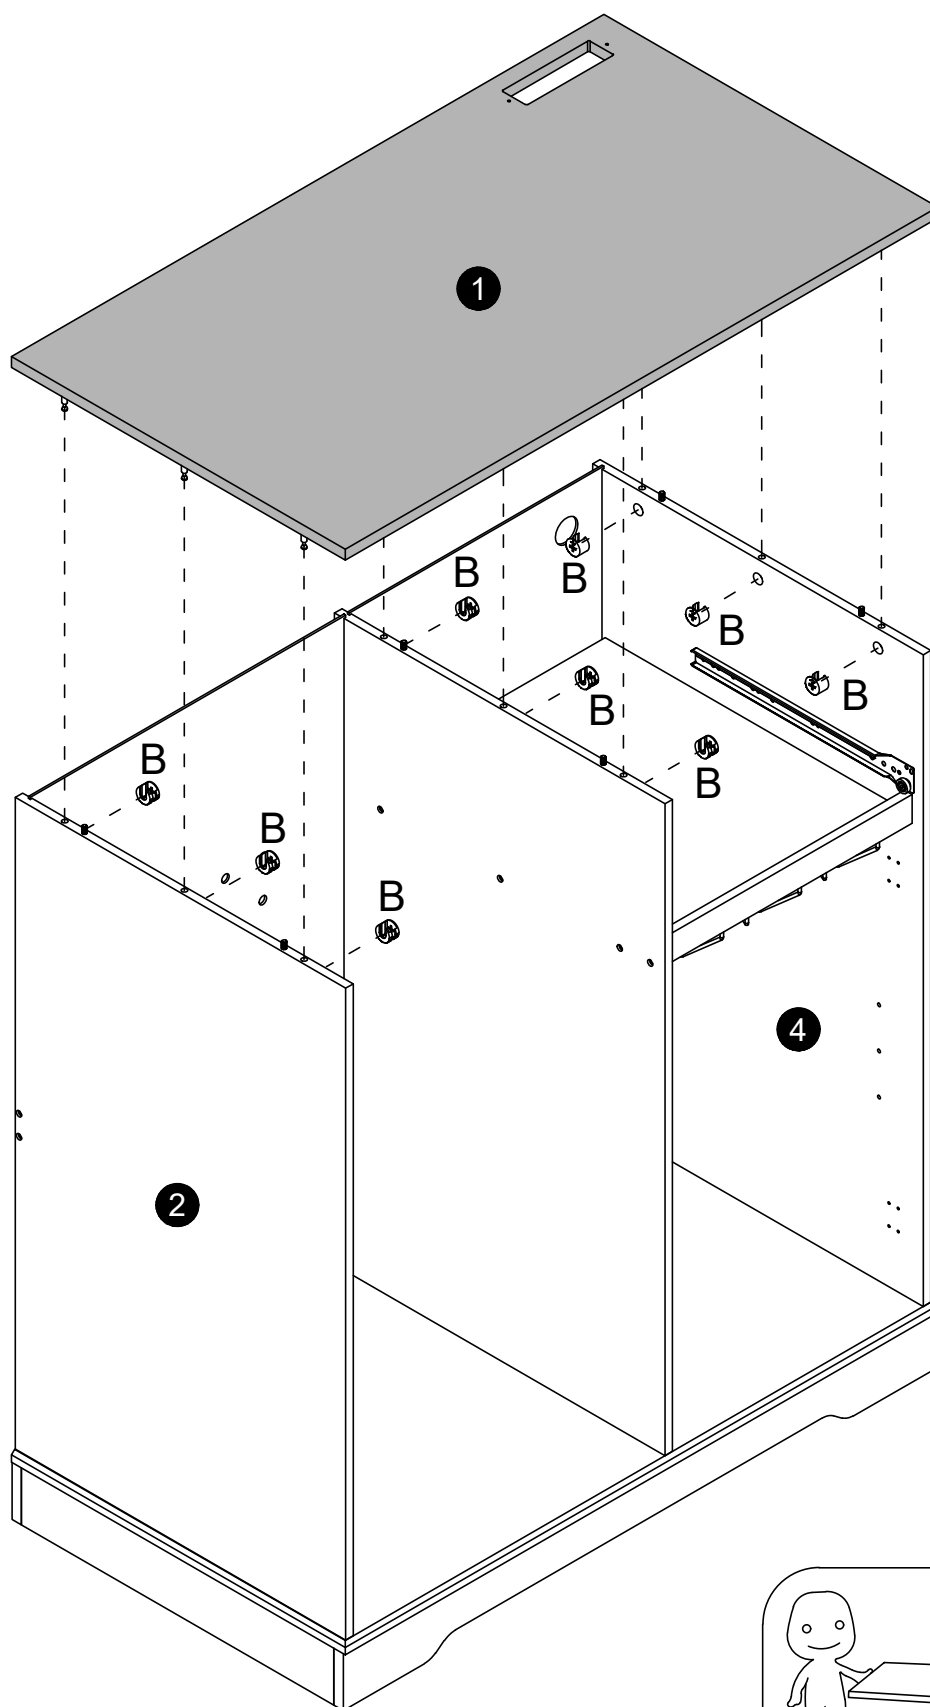





**Need Two or More
People To Complete**

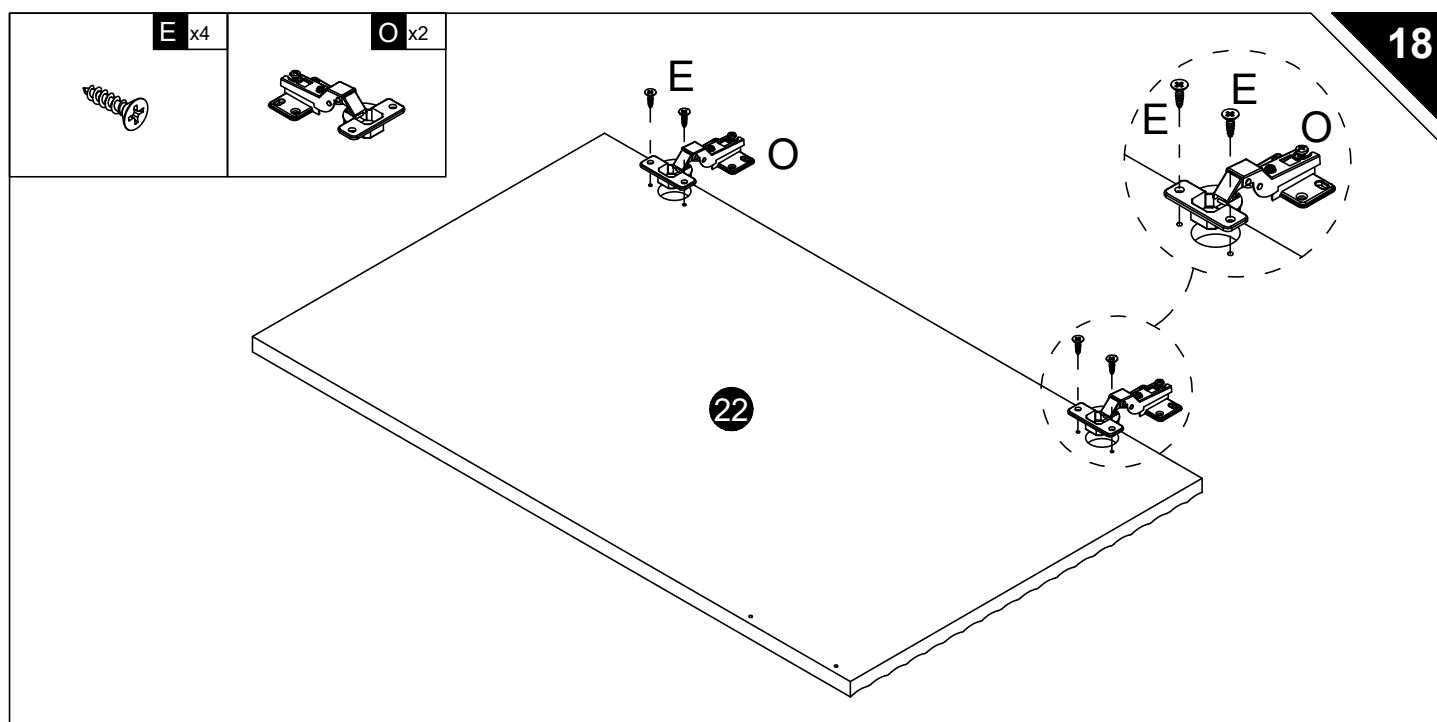
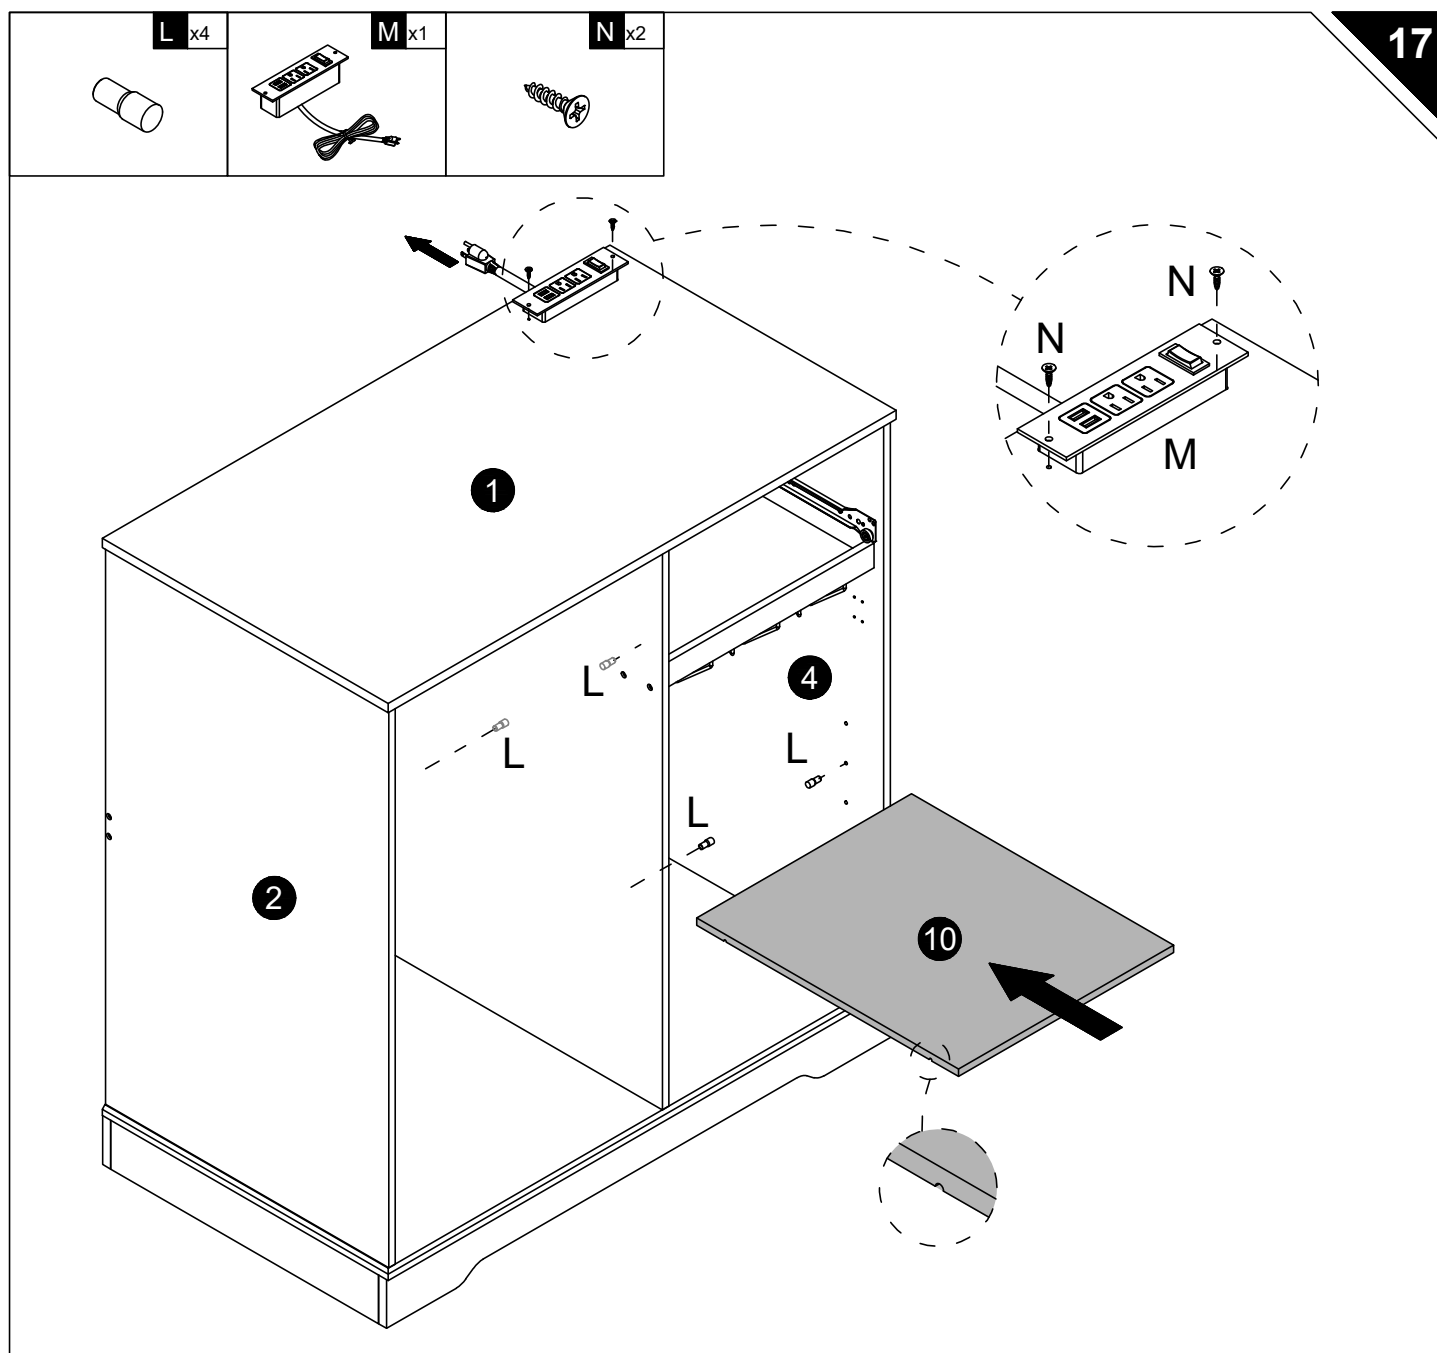


E x10







G x1

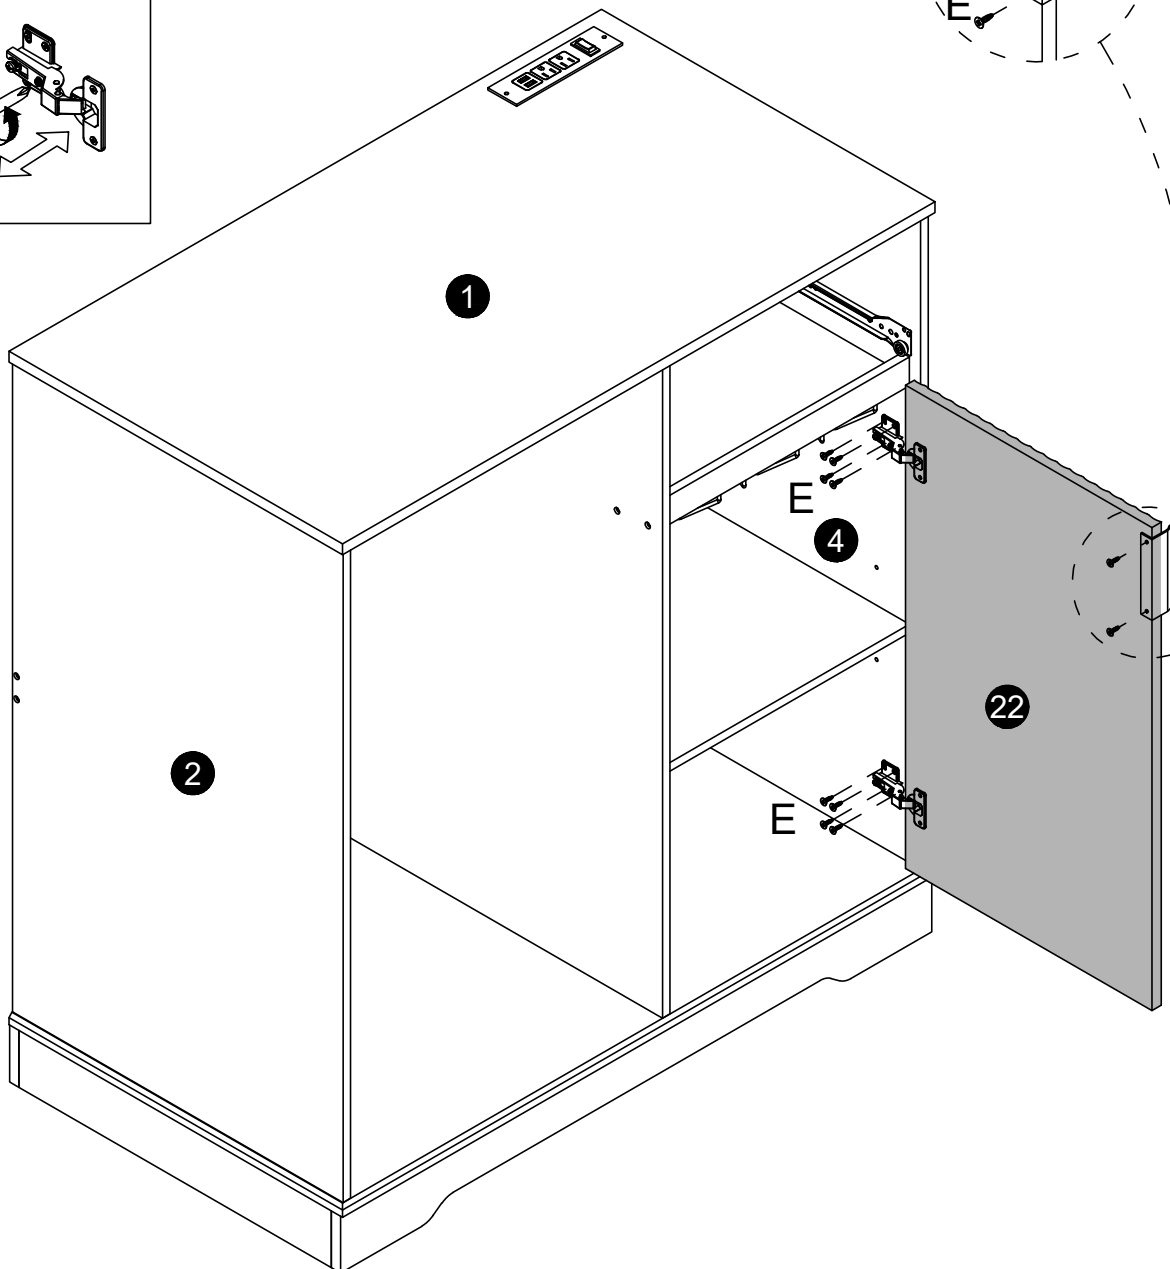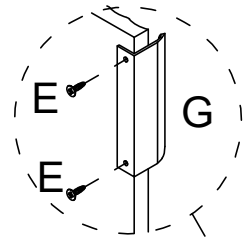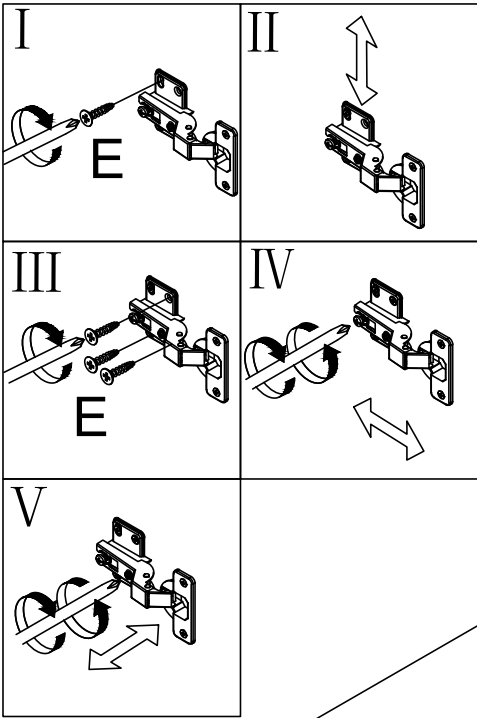


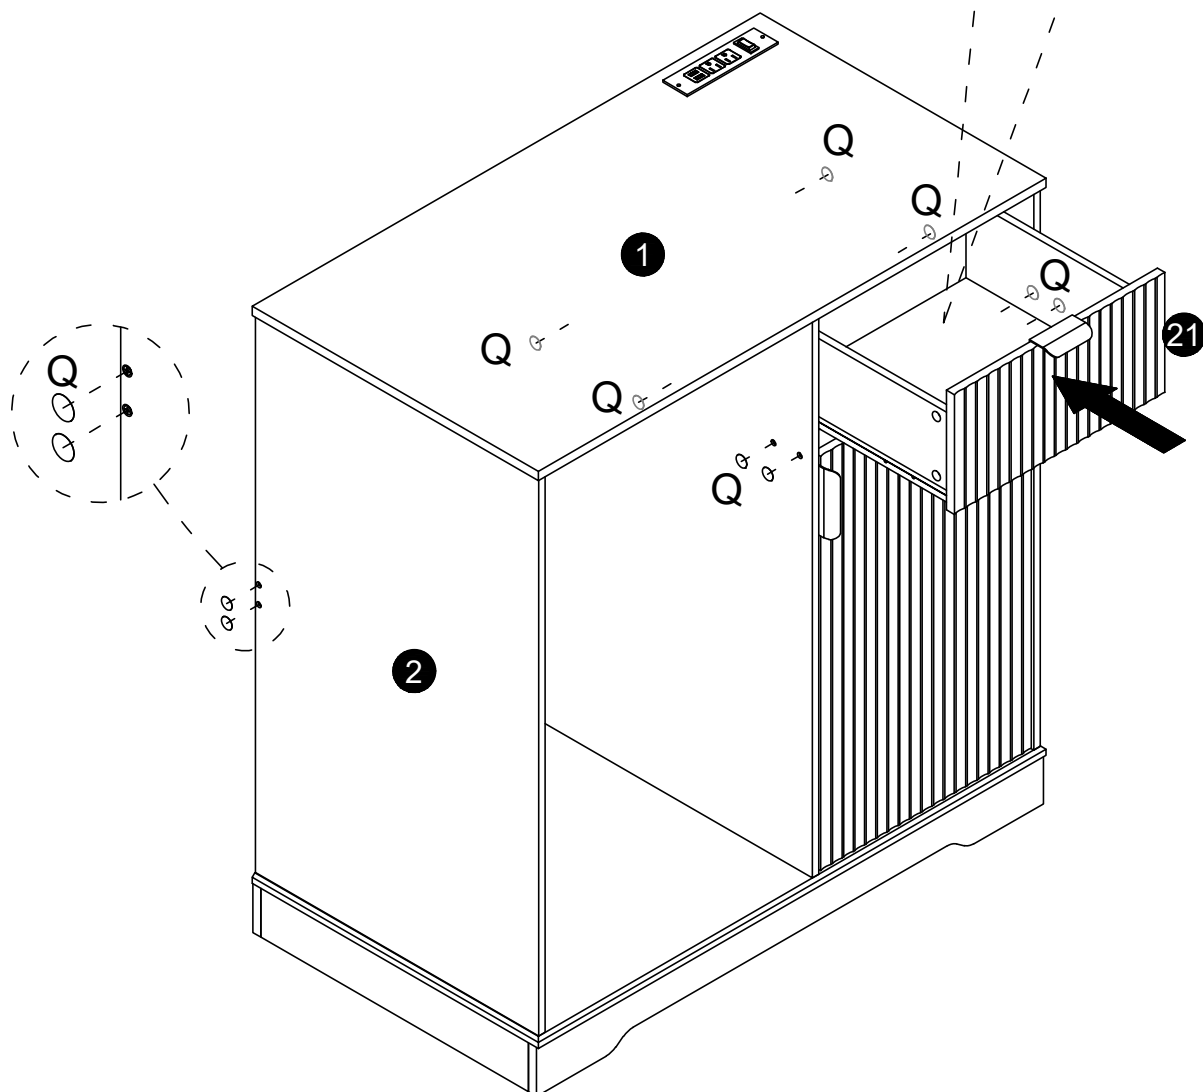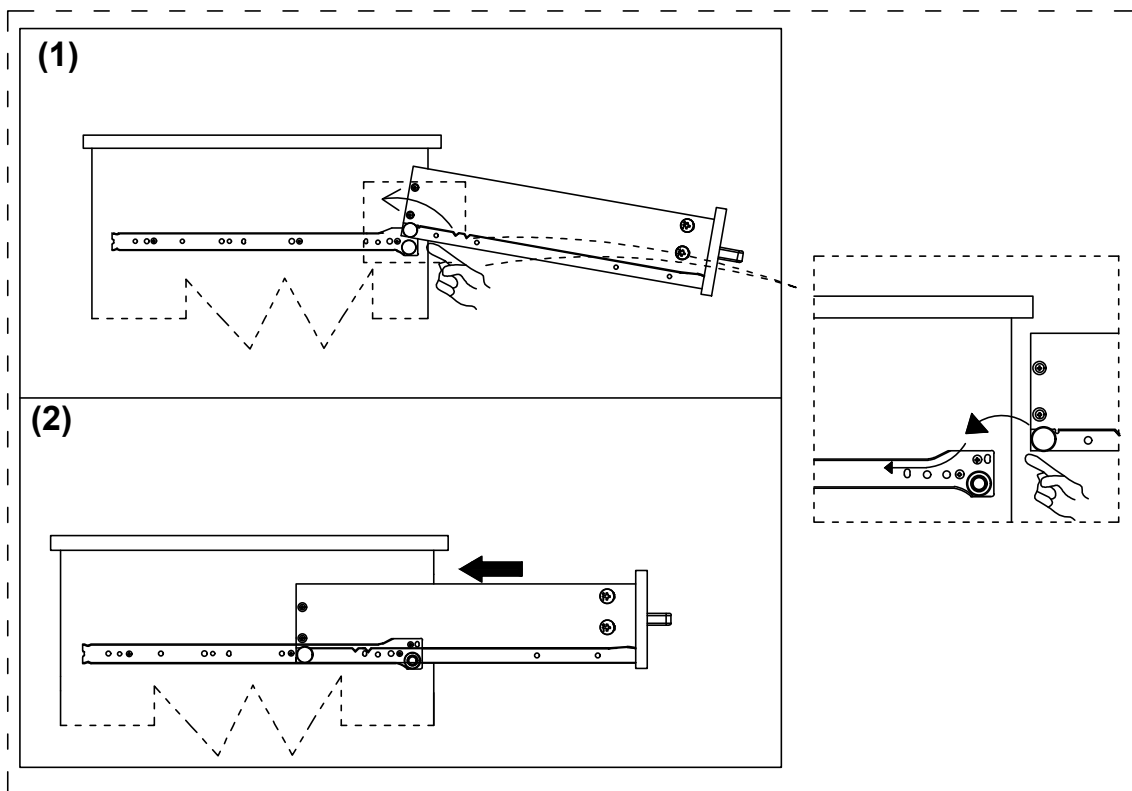


P x8

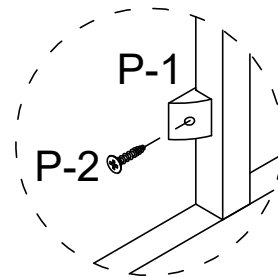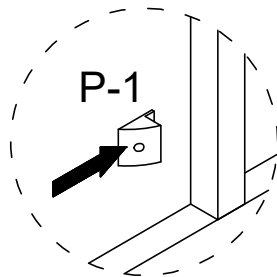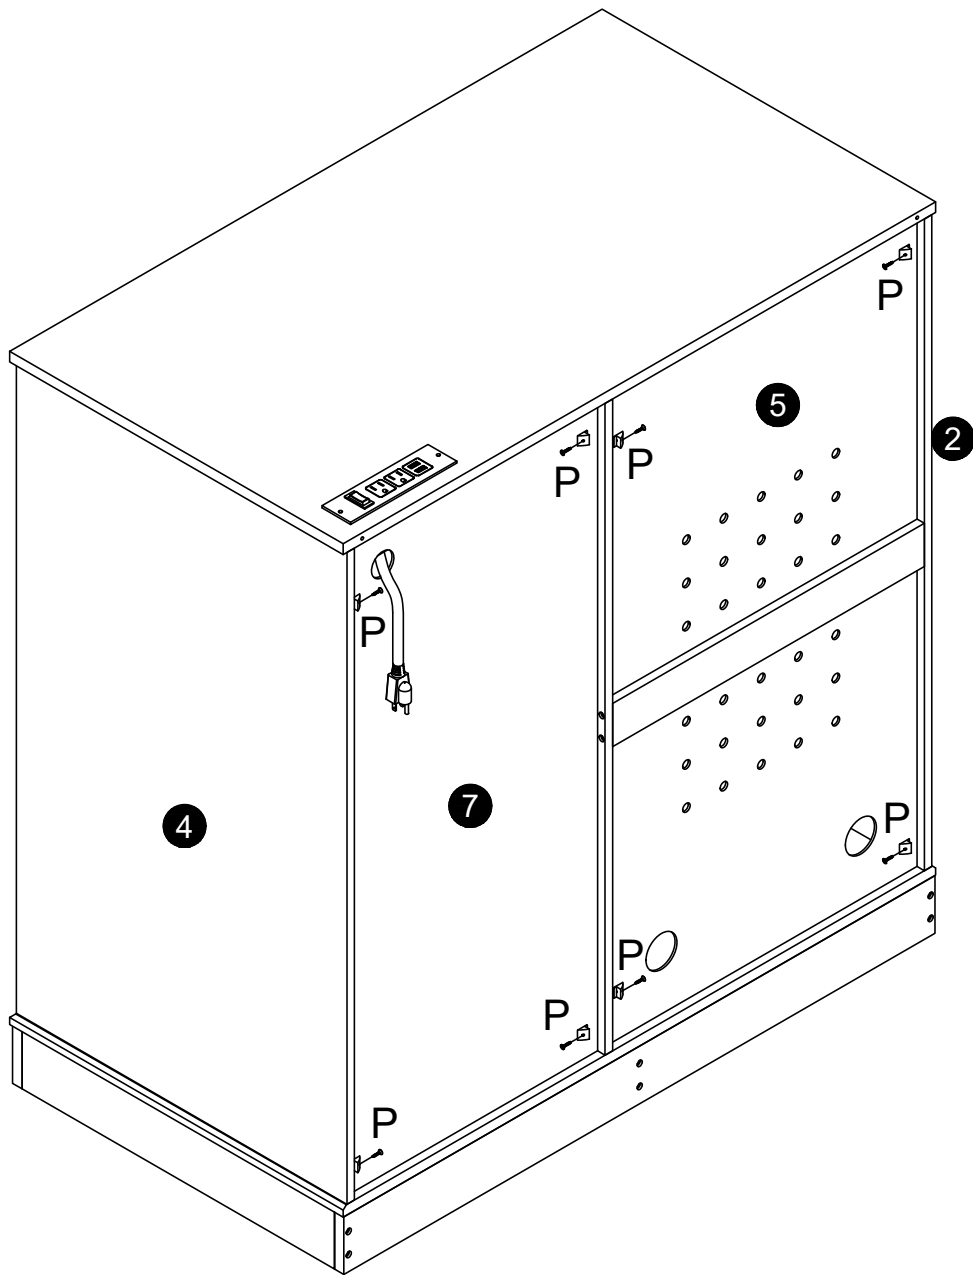



D x2




R x2




S x2

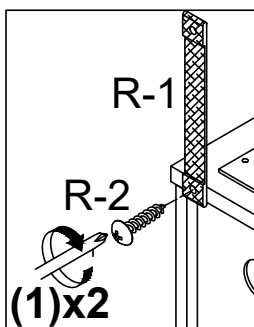


First fix the anti-rewind screw in the reserved hole of the product.

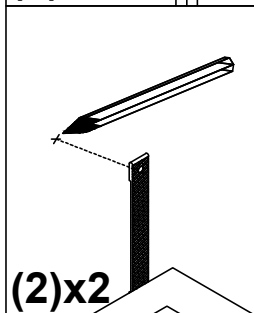


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

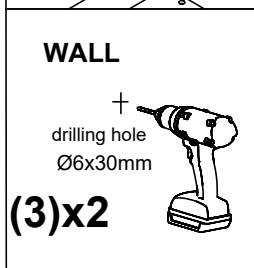

Then use a tape drill to make holes in the wall that are suitable for the product screws.

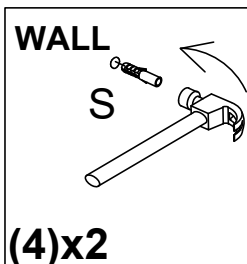

Then, put the expansion bolt into the hole

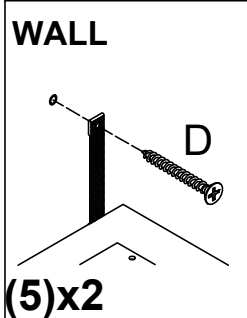

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

WALL

