

INSTRUCTION MANUAL ENCLOSED

ONE OF THE TWO CHAIRS


ATTENTION

**IF YOU HAVE ANY PROBLEMS OR QUESTIONS, EMAIL OR CALL
CUSTOMER SERVICE BEFORE YOU RETURN THIS PRODUCT TO THE
STORE WHERE IT WAS PURCHASED.**

INSTRUCTION MANUAL ENCLOSED



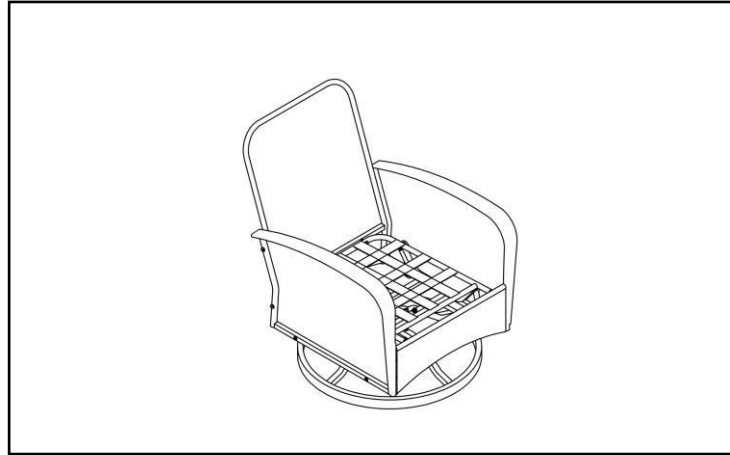



SWIVEL CHAIR






SWIVEL CHAIR ASSEMBLY INSTRUCTION



PARTS LIST


Part	Description	Quantity
PARTS		
A	Right Armrest	1
B	Left Armrest	1
C	Chair Seat	1
D	Chair Back	1
E	Rocking Track	1
F	Swivel Chair Base	1
HARDWARE		
H	Bolts M6 *40mm	18
I	Washers	18
K	Screw Nuts	8
L	Allen Key	1
M	Hex Spanner	1

A	B	C	D	E	F
					
X1	X1	X1	X1	X1	X1


H	I	K	L	M
 M6*40				
X18	X18	X8	X1	X1

***Tips: Do not fasten all bolts completely tight until finish all steps.


1. Locate the Armrests(A & B) to the Chair Back(D) by the pre-drilled threads. Fasten Bolts(H) with Washers (I) by using Allen Key(L) to combine armrests and chair back together. 4 bolts should be fastened totally. (Step 1)

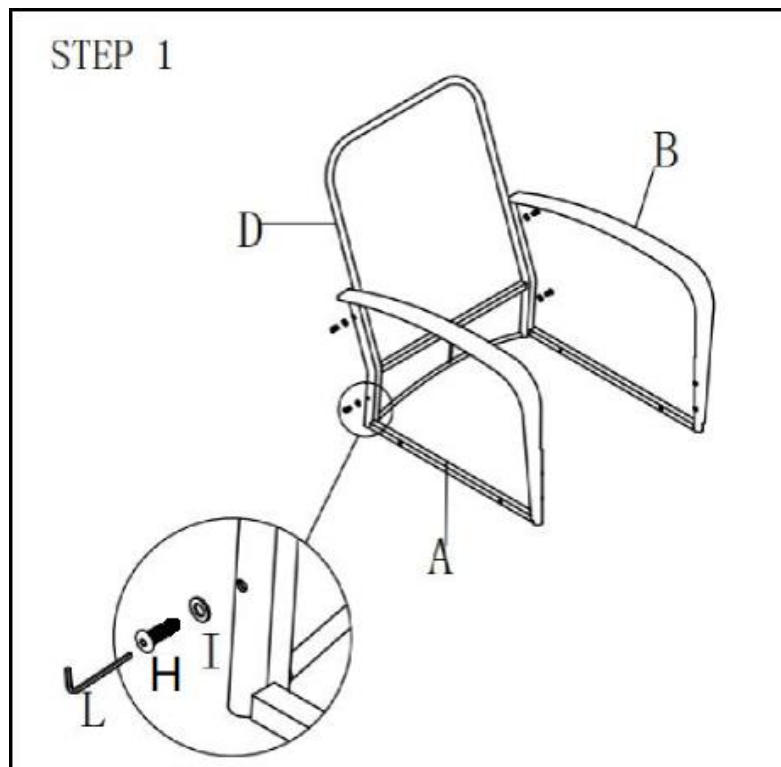


2. Locate the Chair Seat(C) to the Armrests(A & B) by the pre-drilled threads. Fasten Bolts(H) with Washers (I) by using Allen Key(L) to combine armrests and chair seat together. 4 bolts should be fastened totally. (Step 2)

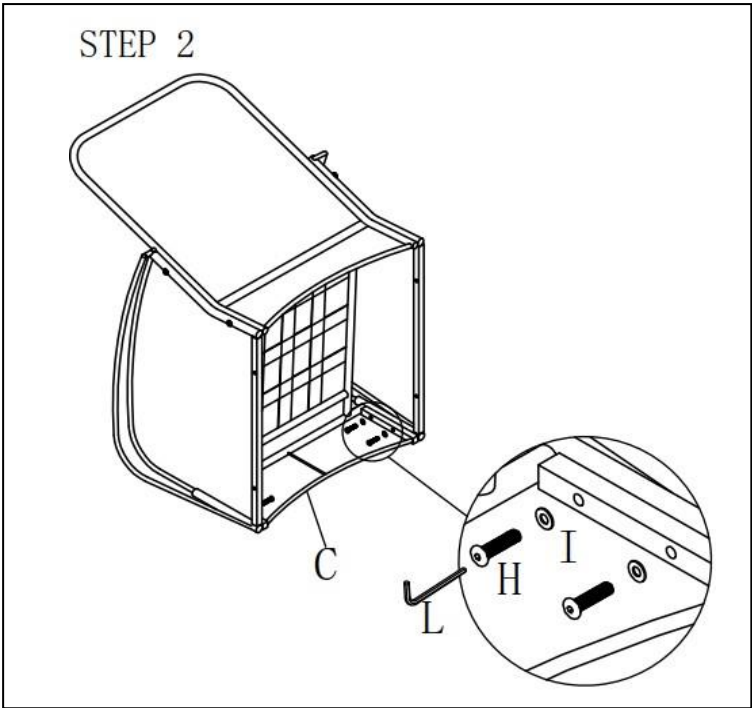


3. Locate the Chair Seat(C) to the Chair Back(D) by the pre-drilled threads. Fasten Bolts(H) with Washers (I) by using Allen Key(L) to combine chair seat and chair back together. 2 bolts should be fastened totally. (Step 3).

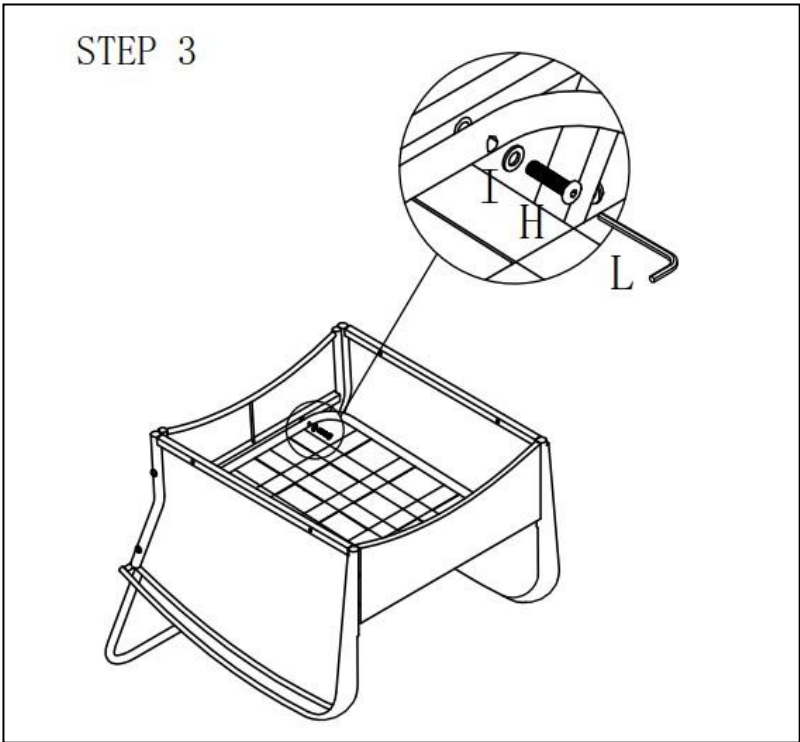

4. Locate the Rocking Track(E) to the Armrests' bottom(A & B) by the pre-drilled threads. Fasten Bolts(H) into Screw Nuts(K) by using Allen Key(L) and Hex Spanner(M) to combine rocking rack and the chair main part together. 4 bolts should be fastened totally. (Step 4).

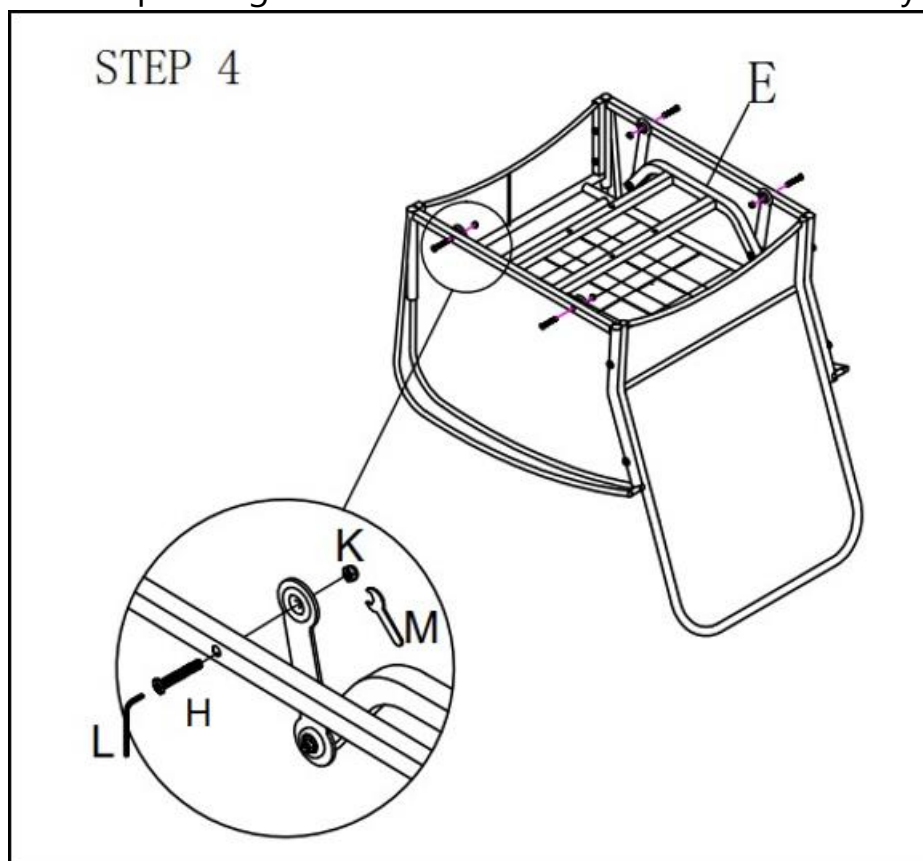

5. Locate the Rocking Track(F) to the Rocking Rack(E) by the pre-drilled threads. Fasten Bolts(H) with Washers (I) into Screw Nuts(K) by using Allen Key(L) and Hex Spanner(M). 4 bolts should be fastened totally. 8 Washers A and 4 Washers B are needed for this step (Step 5).

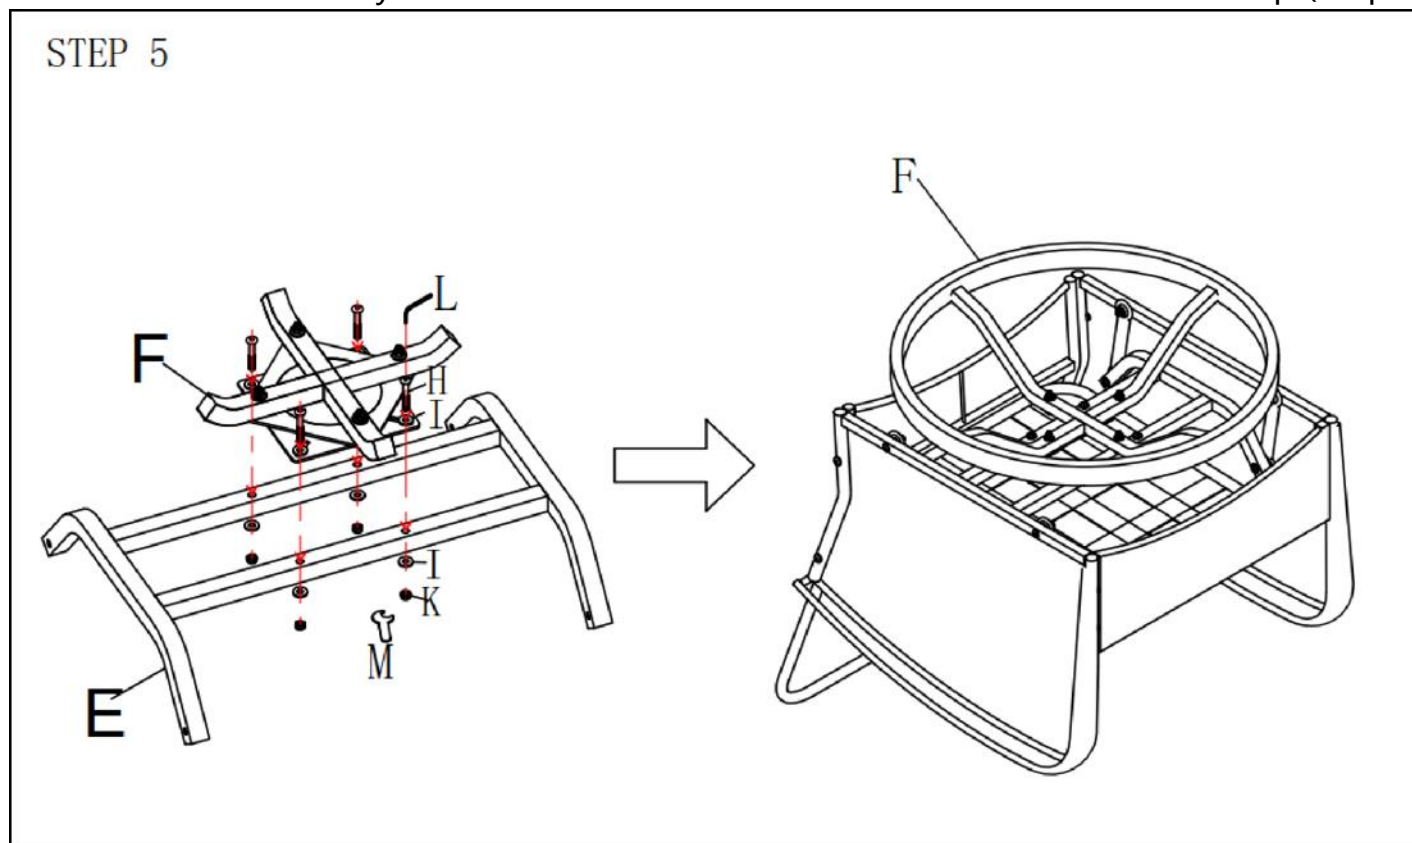

6. Fasten all bolts tight.

Till now you have finished the whole assembly and enjoy your chair!!