

DREAMS

IDEA

Instruction Manual




ABOUT US

DREAMSIDEA IS A ONE-STOP HOME
FURNISHING AND SERVICE COMPANY BASED IN USA.
WE ARE DEDICATED TO BRING YOUR DREAM HOME TO LIFE.
OUR SERVICES COVER FROM DESIGN, PRODUCTION,
DIRECT SELL, STORAGE, AND TRANSPORTATION.
IF REALITY IS THE NEAR SHORE
AND IDEALISM THE FAR SHORE,
DREAMSIDEA
AS THE FERRY BETWEEN THEM,
EAGER TO ACCOMPANY YOU ON A JOURNEY
TO YOUR IDEAL HOME.

ITEM NO.OD0012-SOFA

WARRANTY

We strive to offer high quality product and we also try our best to satisfy each customer that order from us, no matter on products or services as needed. Each customer receives a record of their order, such as the order number or item receipt. For any items that are out of warranty period, you may still be able to purchase the replacement parts from our company if they are available.

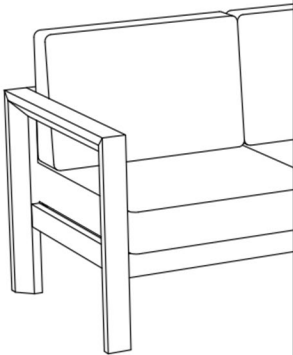

Are you having difficulty
with assembly? Missing parts?

Please contact us : info@firstopintl.com

Tel:(562)-781-3327

send an email with your order No. to us

For return, please check the return policy with
the retailer or platforms you bought from.

Appreciate your purchasing from us.

Pop up your life by our furniture !

MAINTENANCE AND WARNING

Please read the manual thoroughly
before you start installing.

Please keep the product away from
sharp object.

Packaging and small parts may have
chocking hazard, please keep them away
from children and pets.

Please clean the product according to each
clean code, check the product description
for more information.

Please keep the product away from
fire.

If you have any other questions, please
contact us, we will be glad to help you out.

If the product is placed under direct
sunlight, the pattern or color might fade
away overtime.

Check the product periodically to make
sure everything is secured and tightened.

Always use proper tools for installation.

Do not jump on the product.



Around 45 min

PRODUCT DESCRIPTION

Outdoor solid wood patio set, includes various seating, side table and coffee table. Features a square geometric cut design with clean, sharp lines. The overall look is simple, offering a modern architectural feel that elevates the style of patios and decks.

Thickened high-density foam filling. The seat and back cushions are plump and substantial, offering excellent resilience and sinking comfort for prolonged, relaxed seating.

Modular design: single chair/loveseat + coffee table/side table, four modules are able to arrange by your needs or like.

Water-resistance cotton-blend fabric. Offers good water and stain resistance, protecting against common outdoor splashes and dampness. Easy to maintain with a simple wipe.

Heavy frame made of natural solid teak wood. High density and natural oils provide inherent rot resistance, insect resistance, and exceptional stability. The robust frame and joinery ensure superior load-bearing capacity and long-term durability.

Dream




House

EXPLODED VIEW




The product's left and right are determined by sitting posture

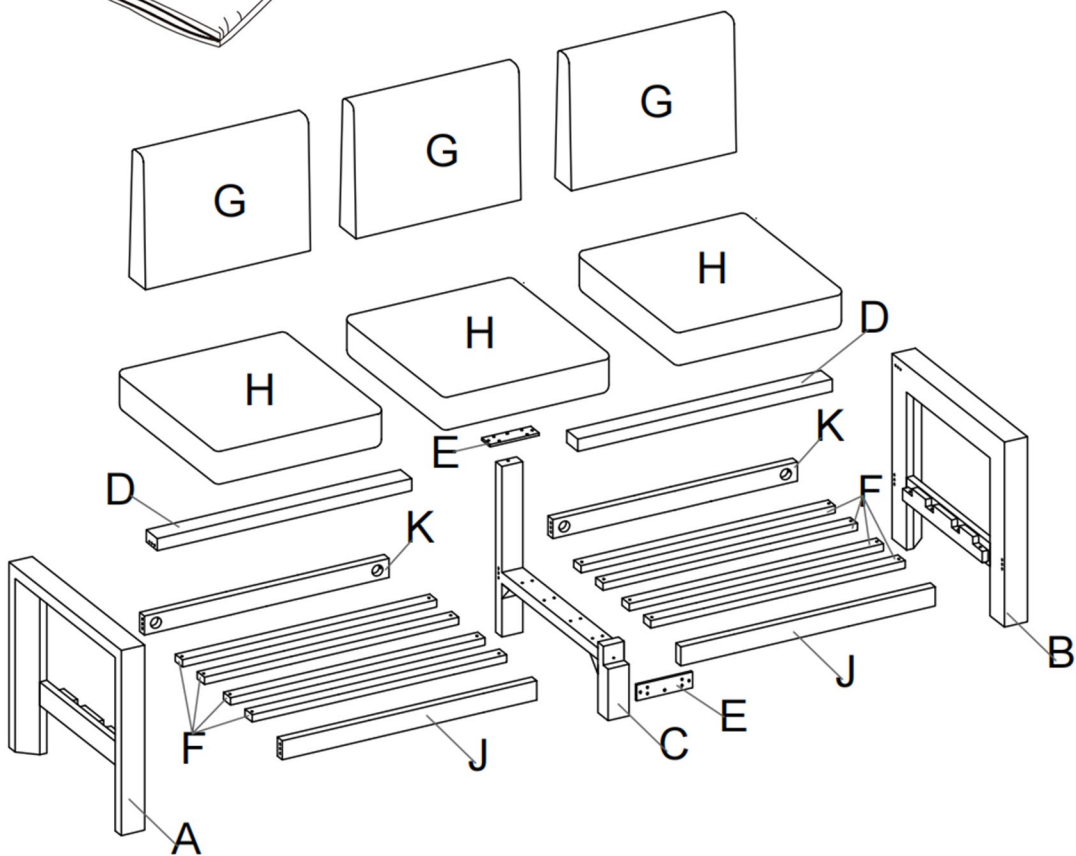


PARTS

A*1

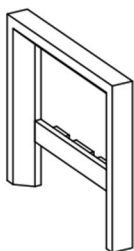


Right leg

B*1

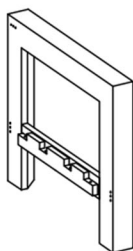


Left Leg

C*1

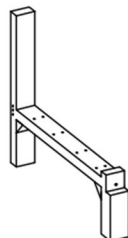

Middle Leg

D*2



Rear Top Frame

E*2




Metal connector

F*8




Seat Frame Bar

G*3

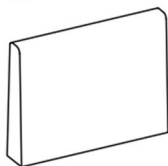


Back cushion

H*3

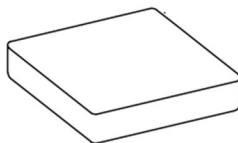

Seat cushion

Ox3

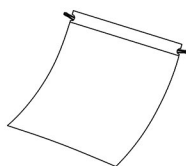

Bag

J*2



Front Panel

K*2



Back panel

Mx3



Seat cushion cover
(Hide in bag)

Nx3



Backrest cover
(Hide in bag)

★The Cover with the washing label is the Backrest Cover

HARDWARE

TOOL LIST

NOTE: Designated with (★) We provide additional spare parts in the hardware package

①x16



★ Bolt
M6*35mm

②x16



★ Flat washer

③x16



★ Wooden dowel

④x8



★ Nut

⑤x8



★ Half-moon nut

⑥x8




★ Bolt
M8*70mm

⑦x1



Spanner

⑧x1

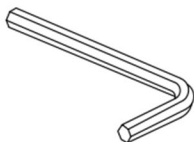

Allen key

⑨x14



★ Bolt
M6*16mm

Please make sure all hardware&packing material fitting the list.

Especially some small accessories may be missing during transportation. Please contact us if you have any question.

step 1 ---Cut the plastic air compression bags





Cut the plastic air compression bags, and take out the cushion (G&H). Let it recover to its original shape, the whole recovery process might take **72** hours, you may gently slap on it to speed up the process.



Please exercise caution when opening the packaging to avoid injury or damage to the product.




Use care when opening the bag to avoid injury from sudden expansion. Keep away from face and body while cutting.

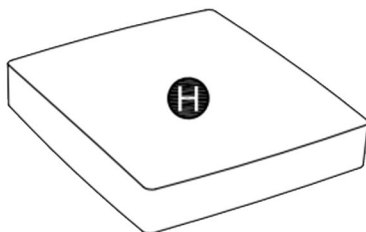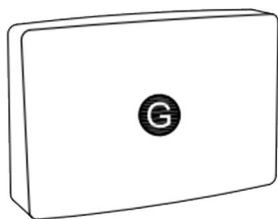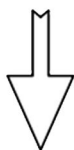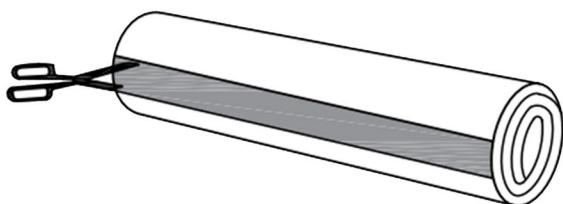

X3


step 2 ---Take out the cushion cover

Open the bag, take out the back cushion cover (N) and seat cushion cover (M).

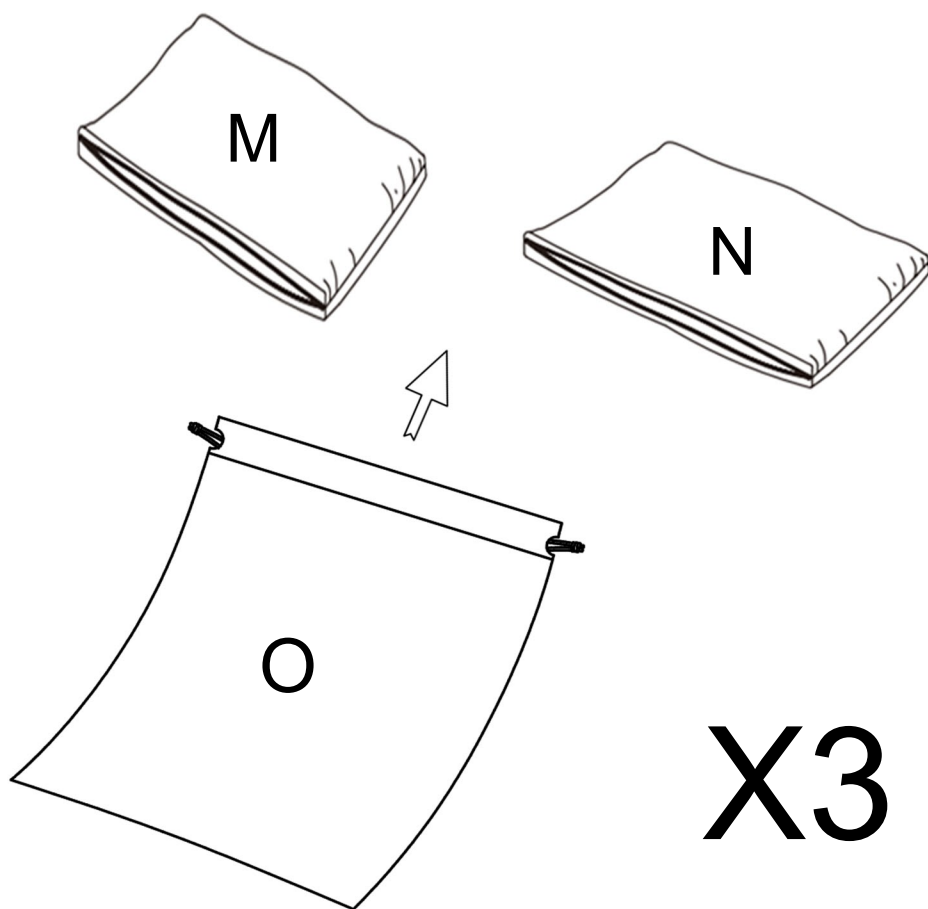


step 3 ---Put on the cushion cover


How to Put on the Cushion Cover

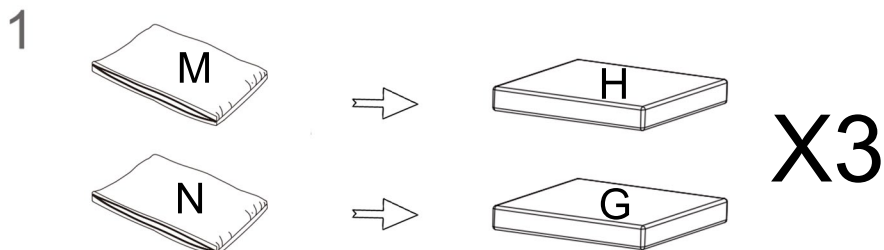


1.Take the cushion covers and inner out of the carton.

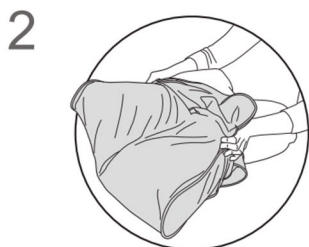


2.Fold the inner in half, pushing the sides together,then begin to slide the cover onto it.

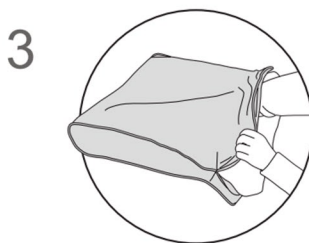

3.Align both far corners, then gently compress insert while fitting cover around it.

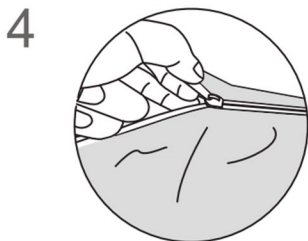


4.To avoid a stuck zipper, please pull the fabric away from the zipper before moving forward.

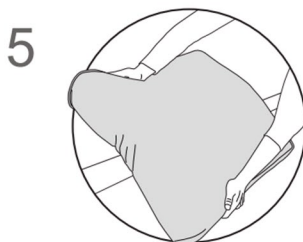

5.When all done, please pat the cushion or give it a little shake to make it more flat.

step 4 ---Install the iron plate (E)

Secure the iron plate (E) to the Middle Leg (C). Use the provided allen wrench (8) to tighten the bolt (9).

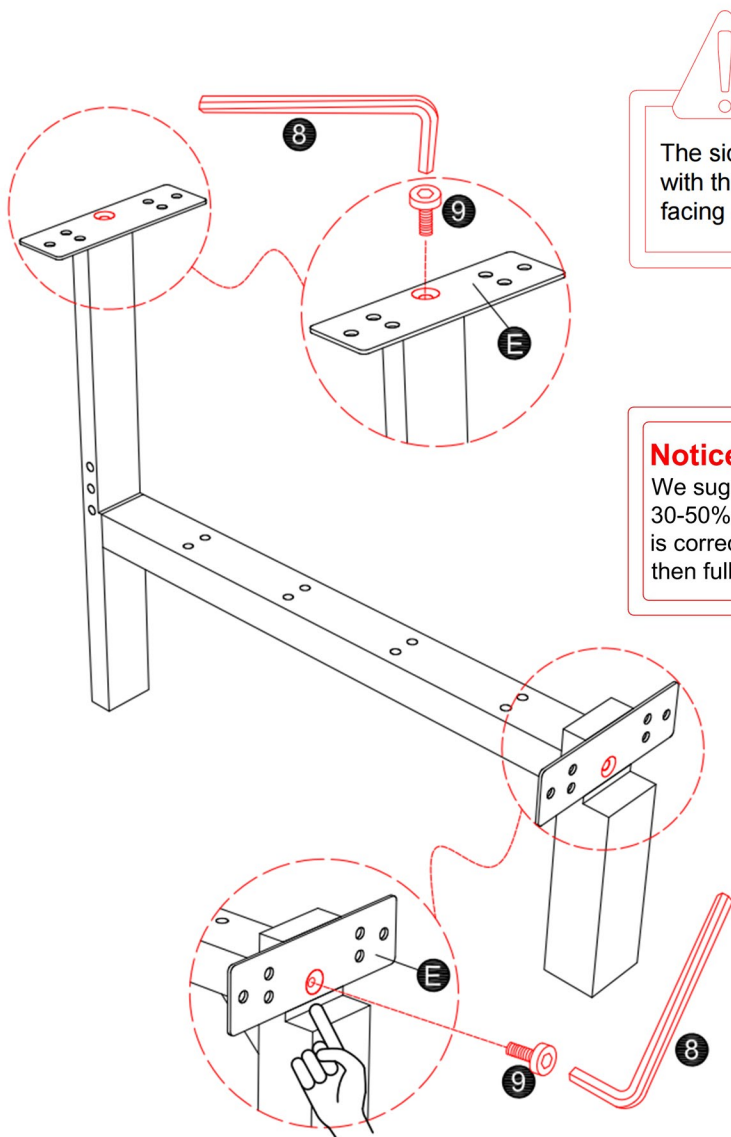


The side of the iron sheet with the threaded holes is facing outward.

Notice:

We suggest tightening the bolts for 30-50% first, make sure the process is correct and bolt holes are aligned, then fully tightening them all.

step 5 ---Connect the Front Bars (J)

Align the Front Bars (J) with the iron plate installed in the previous step. Use the provided allen wrench (8) to tighten the bolts (9) on both parts of the Iron Plate as shown.

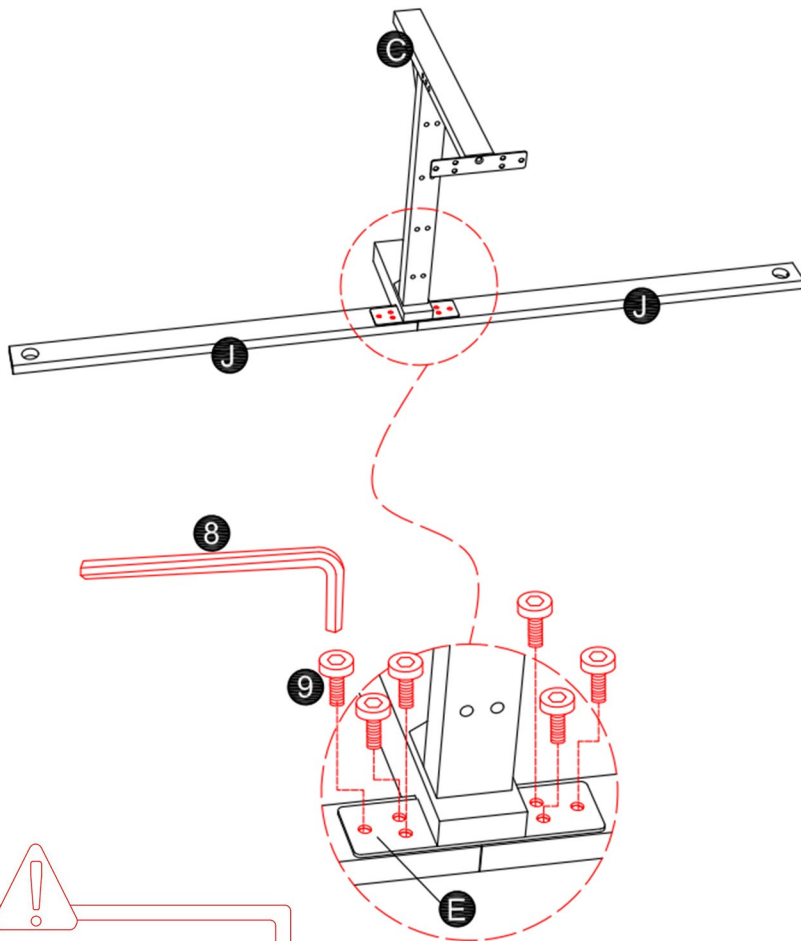


Notice:

We suggest tightening the bolts for 30-50% first, make sure the process is correct and bolt holes are aligned, then fully tightening them all.

step 6 ---Connect the Rear top frame (D)

Align the Rear top frame (D) with the iron plate installed in the previous step. Use the provided allen wrench (8) to tighten the bolts (9) on both parts of the Iron Plate as shown.

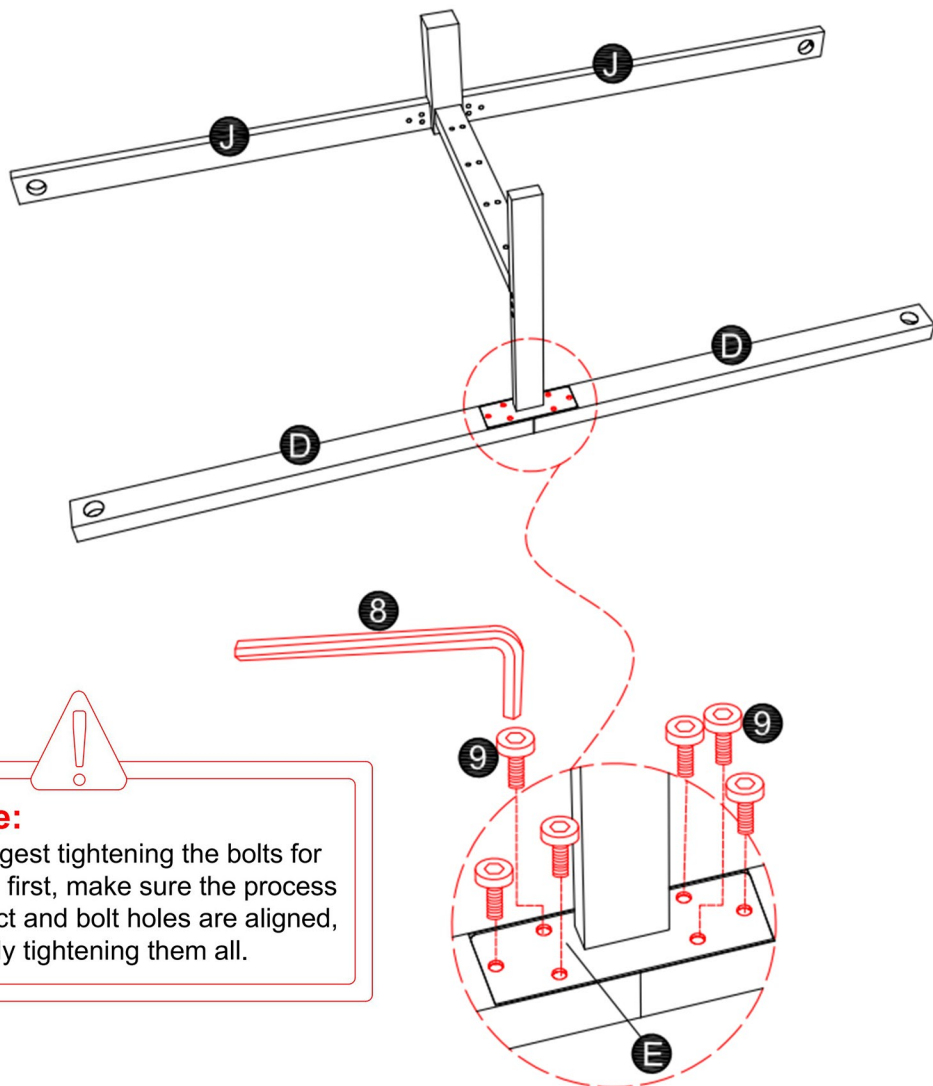


Notice:

We suggest tightening the bolts for 30-50% first, make sure the process is correct and bolt holes are aligned, then fully tightening them all.


step 7---Attach the Frame

Align the Back panel (K) with the exposed bolts and dowels on the opposite side of the frame. Ensure all fasteners are correctly positioned, then secure them by tightening the half-moon nuts (5) and bolt nuts (4) as shown.

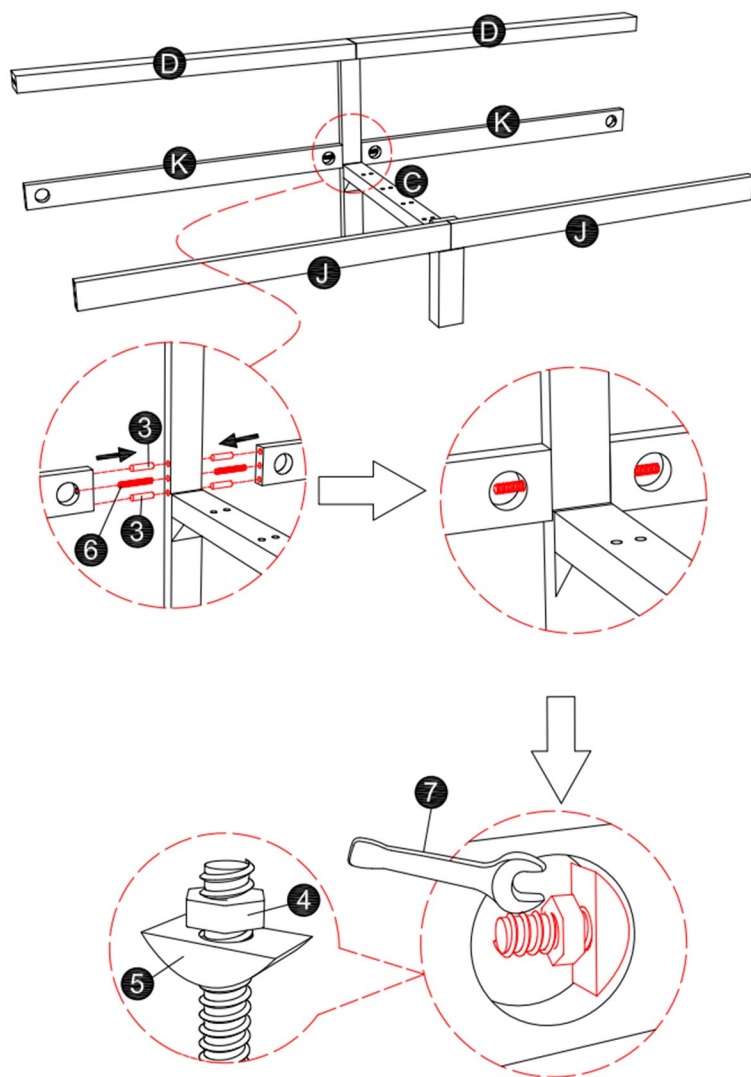


step 8 ---Insert Fasteners into Armrest

Insert the threaded bolts and wood dowels into the pre-drilled holes on one armrest, as illustrated.

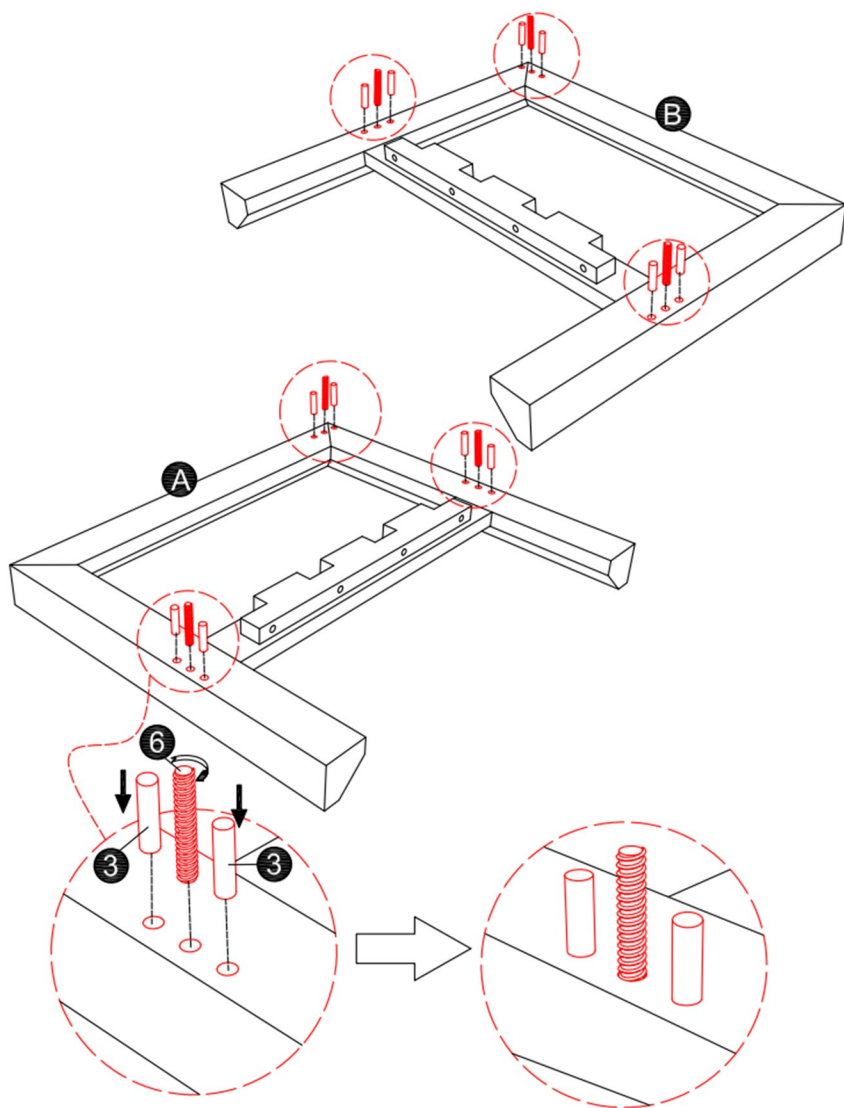


step 9 ---Install the Armrest (A&B)

Align the second armrest with the exposed bolts and dowels on the opposite side of the frame. Ensure all fasteners are correctly positioned.

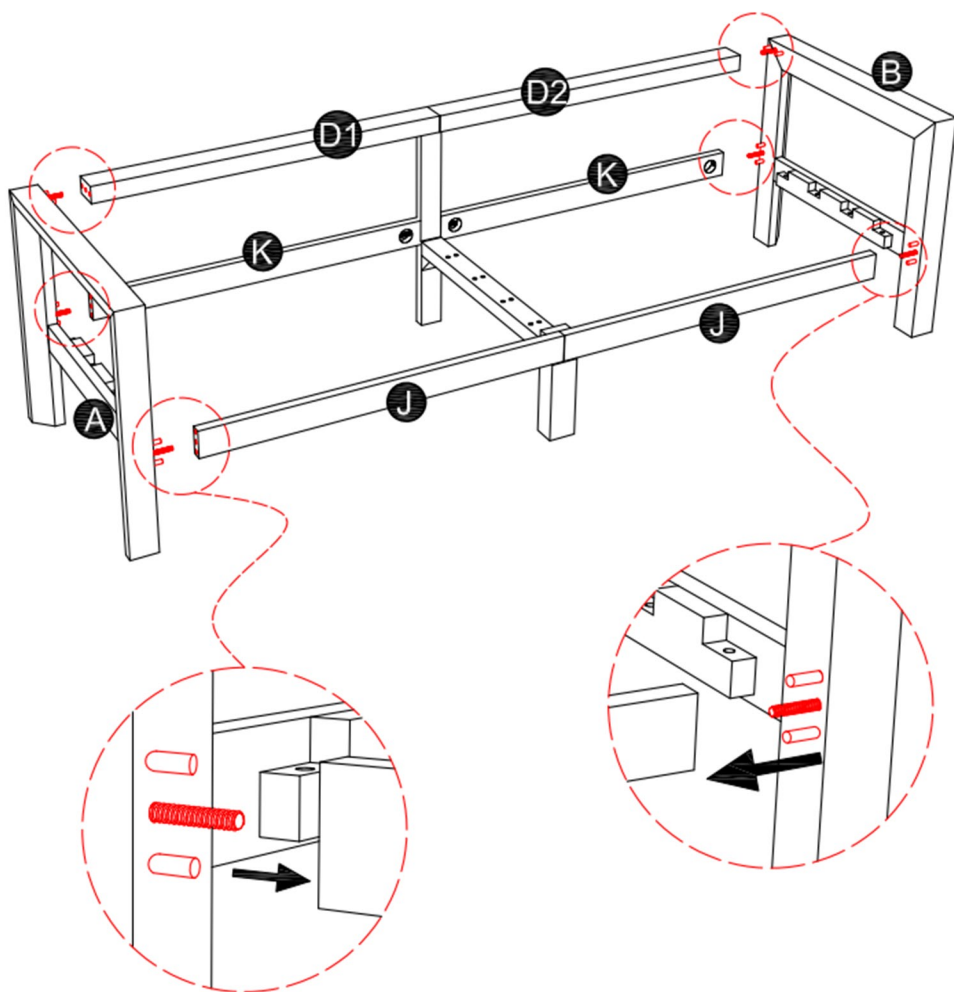


step 10 ---Install the Rear Top Frame (D) and Back panel (K)

Then secure them by tightening the half-moon nuts (5) and bolt nuts (4) as shown.

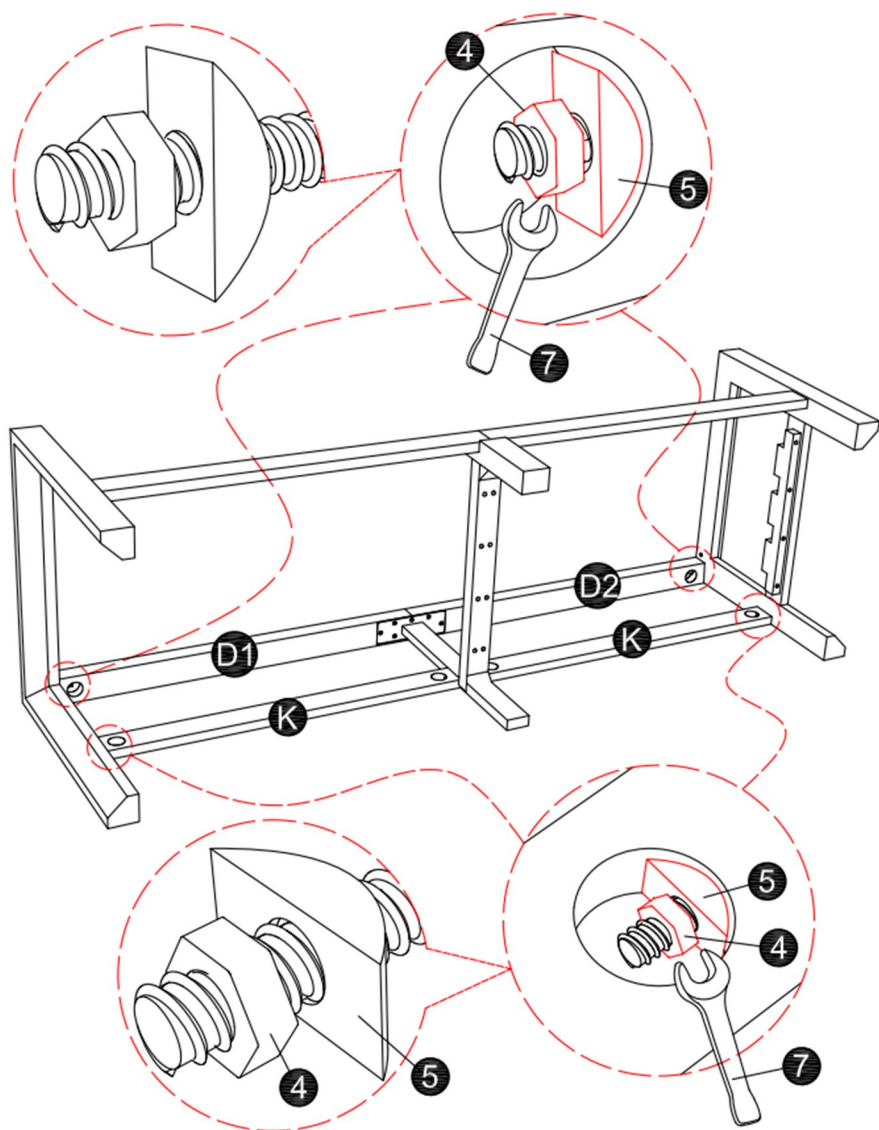


step 11 ---Install the Armrest

Then secure them by tightening the half-moon nuts (5) and bolt nuts (4) as shown.

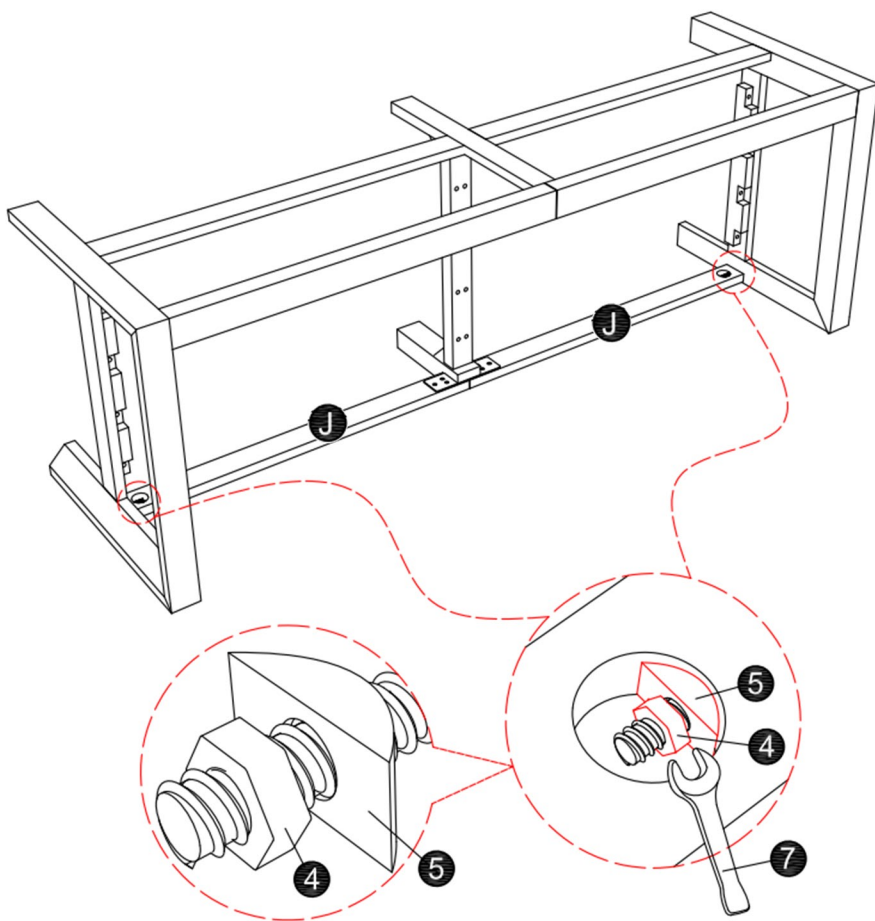

step 12 ---Install the Seat Frame Bars (F)


Align the Seat Frame Bars (F) with the designated grooves on both the Left and Right Arms (B&A), as shown. Place one washer (2) on each bolt (1), then use the provided allen wrench (8) to tighten all bolts.

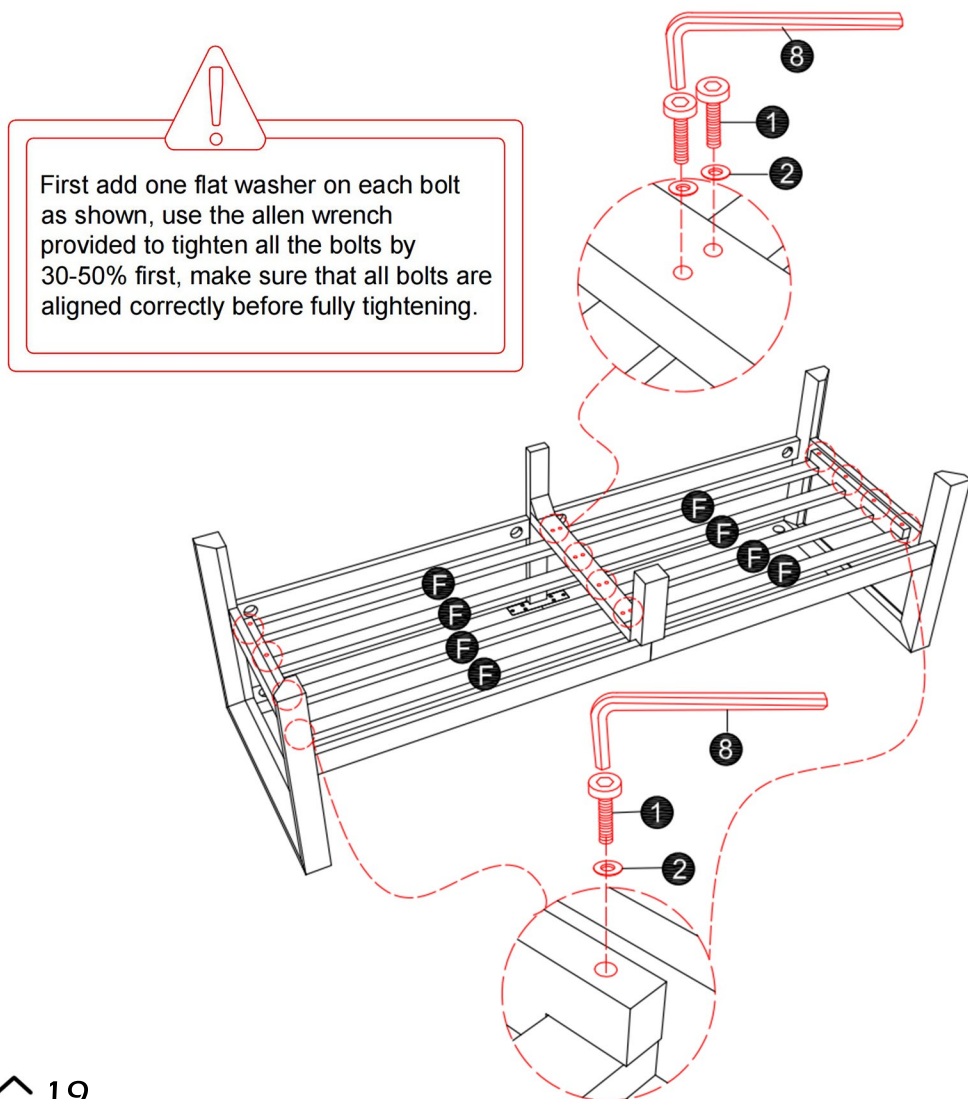

step 13 ---Place the seat cushion (H) and back cushion (G)


Turn the Back cushion & Seat cushion with the labeled side facing up.

- 1.Place the Seat cushion(H) on it.
- 2.Place the Back cushion(G) on it.

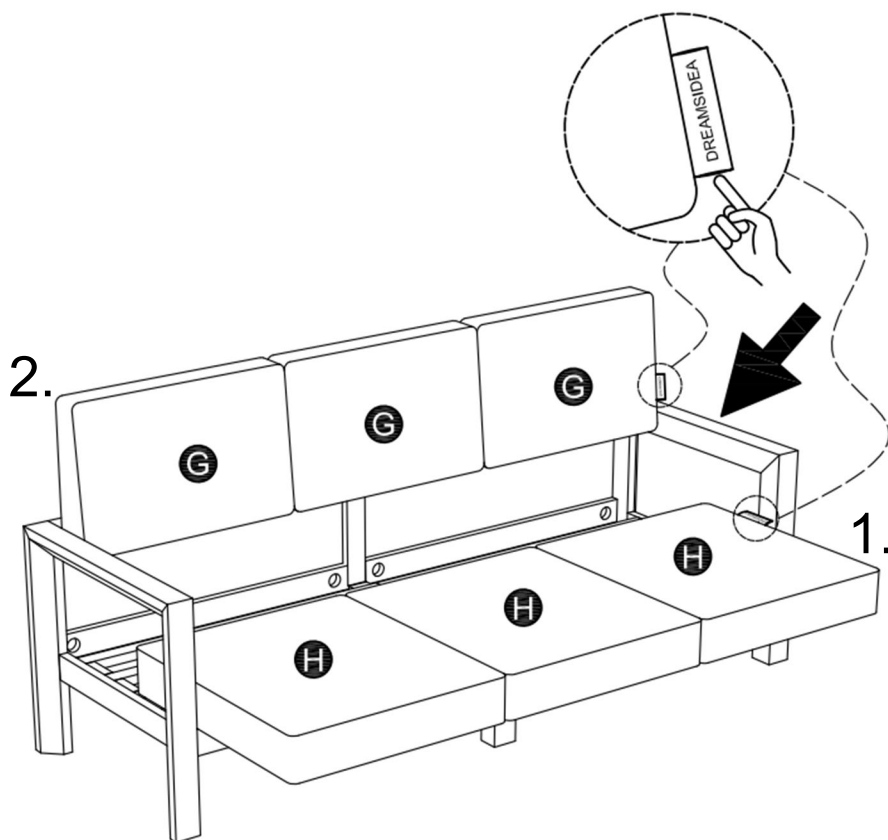

step 14 --- Assemble complete

Congratulations! You have finished the assembly, thank you again for choosing our product! Please enjoy!

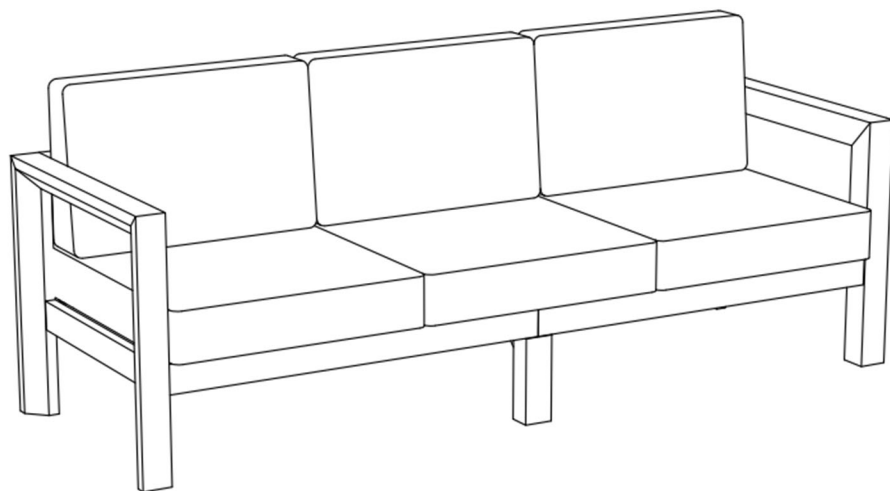





ASSEMBLY INSTRUCTIONS

Tel.(562)-781-3327

Please contact us:info@firstopintl.com

<https://www.dreamsidea.com>