


ASSEMBLY INSTRUCTIONS




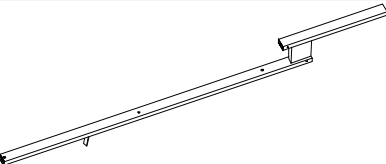
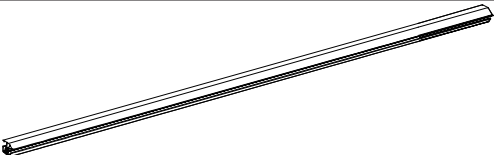


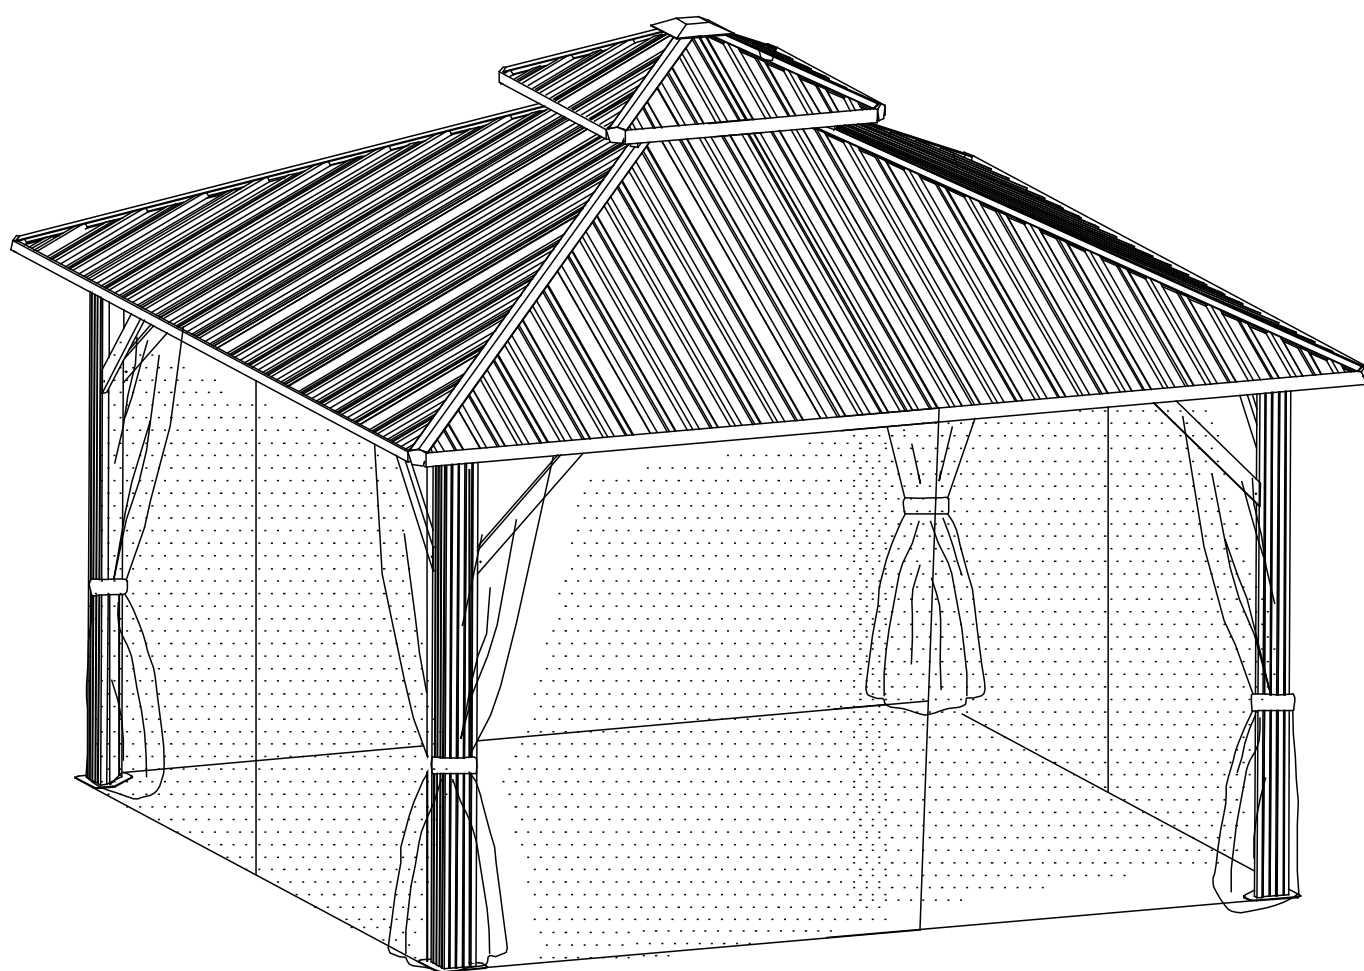

12X12 FT HARDTOP GAZEBO














ASSEMBLY INSTRUCTIONS
















1. Two or more people are required for assembly.
2. A ladder and electric drill may be necessary.
3. Do not erect the structure in heavy winds or inclement weather.
4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
5. Do not use candles, matches, or any open flames near the tent.
6. To better align the screws for practical situations, do not fully tighten screws initially.
7. Professional installation is highly recommended.

Item no.	Reference Image	Qty.
A		X4
B		X4
B1		X4
E1		X4
Ea		X4
Eb		X4
F1		X8

























ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
G1		X4
G3		X4
G5		X4
G6		X4
H		X4
H1		X4
J		X4
K		X4
K1		X4
L		X1
M		X1
N		X12
N1		X4

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
P		X4
Q1		X4
Q2		X4
Q3		X4
Q4		X4
Q5		X4
Q6		X4
Q7		X4
Q8		X4
S		X4
Sa		X4
T		X4
T1		X4

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
U		X112	V1		X4
W		X4	W1		X4
W3		X4	Y		X116
Z		X72	Z1		X16
1	 M6X16mm	X144	2	 M6X23mm	X72
3	 M6X25mm	X9	4	 ST4.8X12mm	X16
5	 M6X10mm	X8	6	 M6X42mm	X4
7	 M6X47mm	X32	8		X16
9		X12	12	 M5X12mm	X12
13		X1	14		X1
15		X1	16		X12
17		X12	18		X4


ASSEMBLY INSTRUCTIONS

1

X4





Ⓐ 4pcs



ⓙ 4pcs




① 12pcs

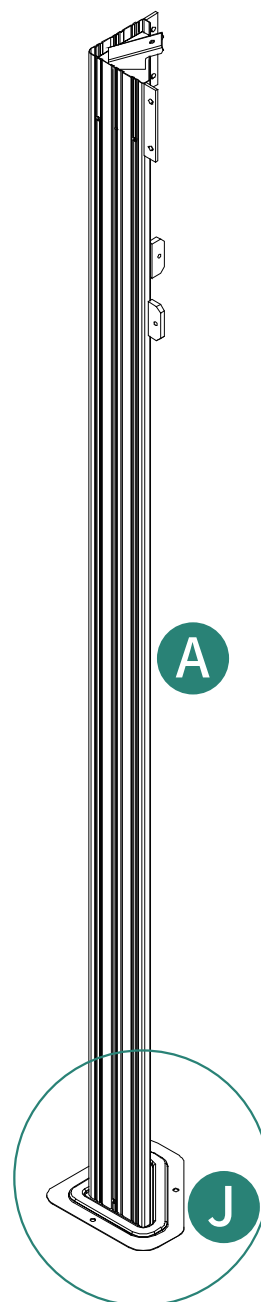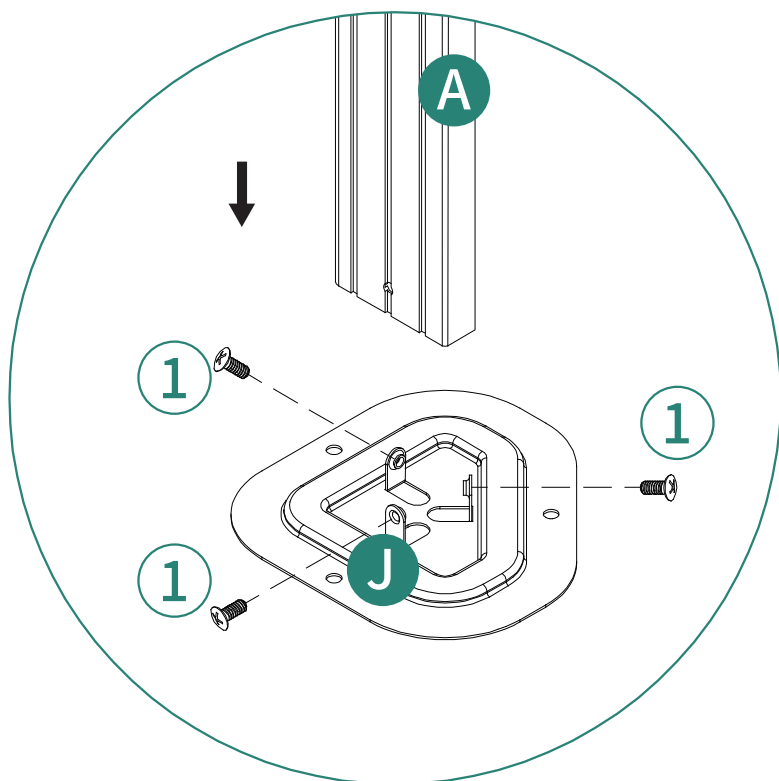

ASSEMBLY INSTRUCTIONS

2


X4



Ⓑ 4pcs



Ⓑ1 4pcs



Ⓟ 4pcs




Ⓢ 112pcs



① 32pcs

When connecting B and B1 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

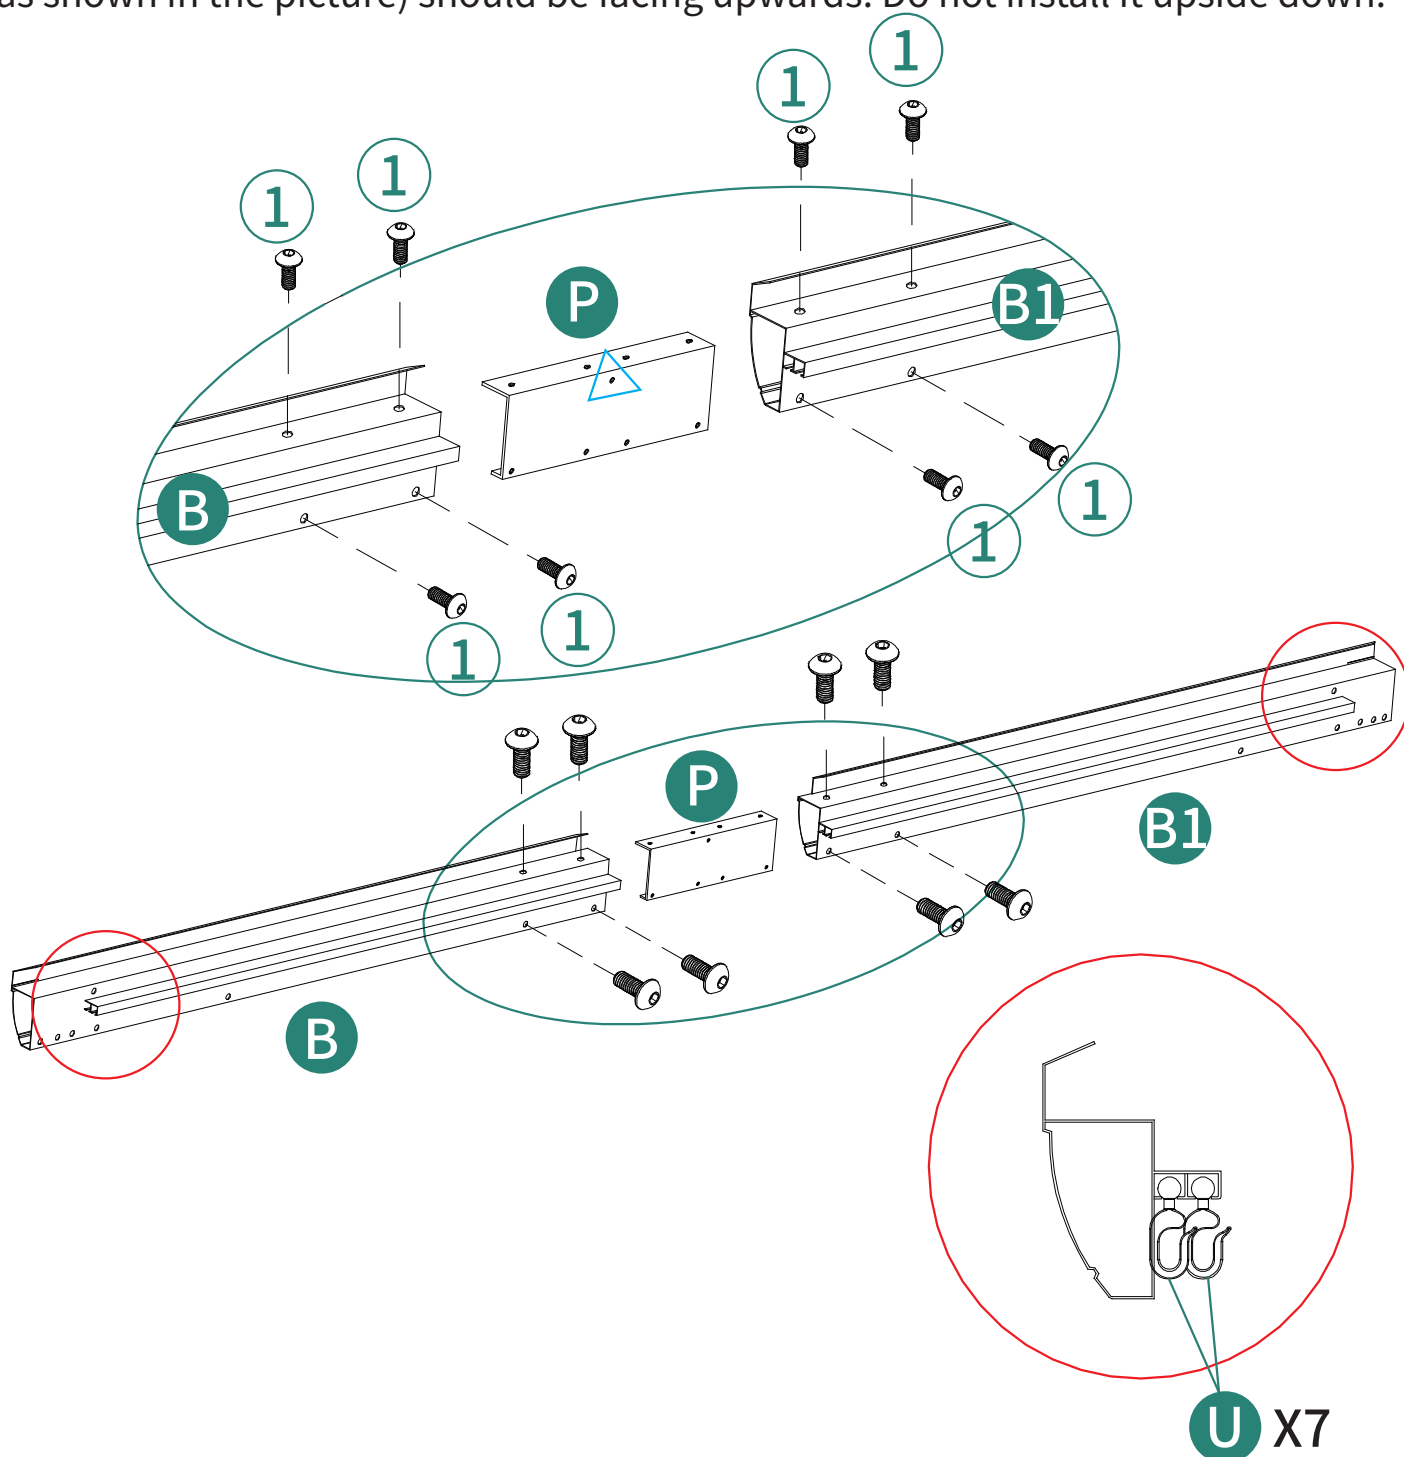


ASSEMBLY INSTRUCTIONS




3



① 16pcs




⑧ 16pcs

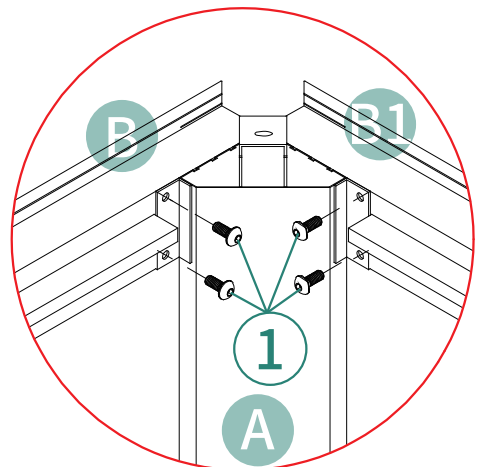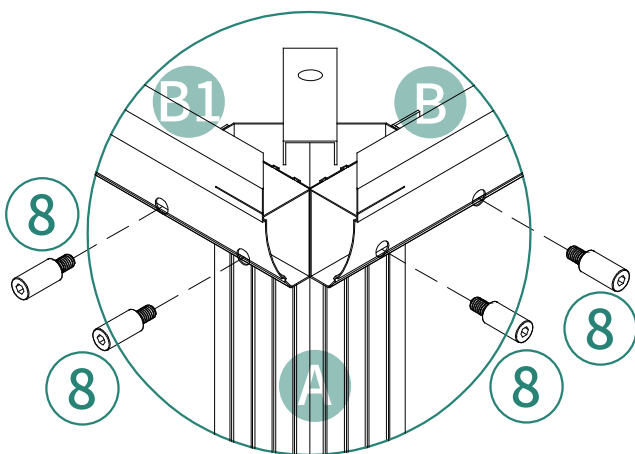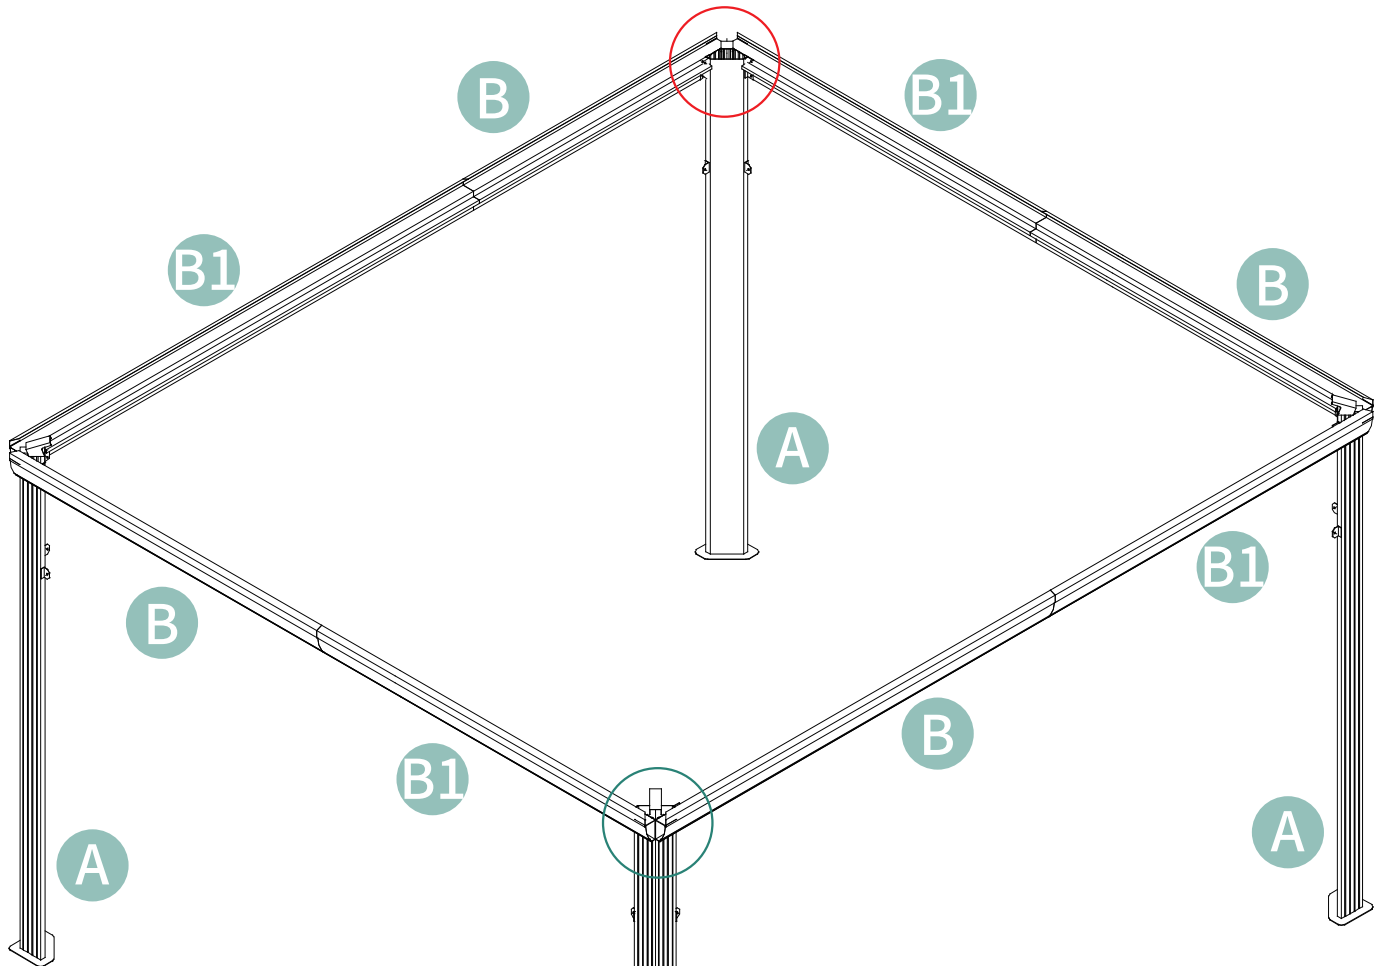


ASSEMBLY INSTRUCTIONS

4

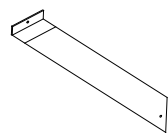


Ⓜ4pcs



Ⓜ14pcs




①16pcs

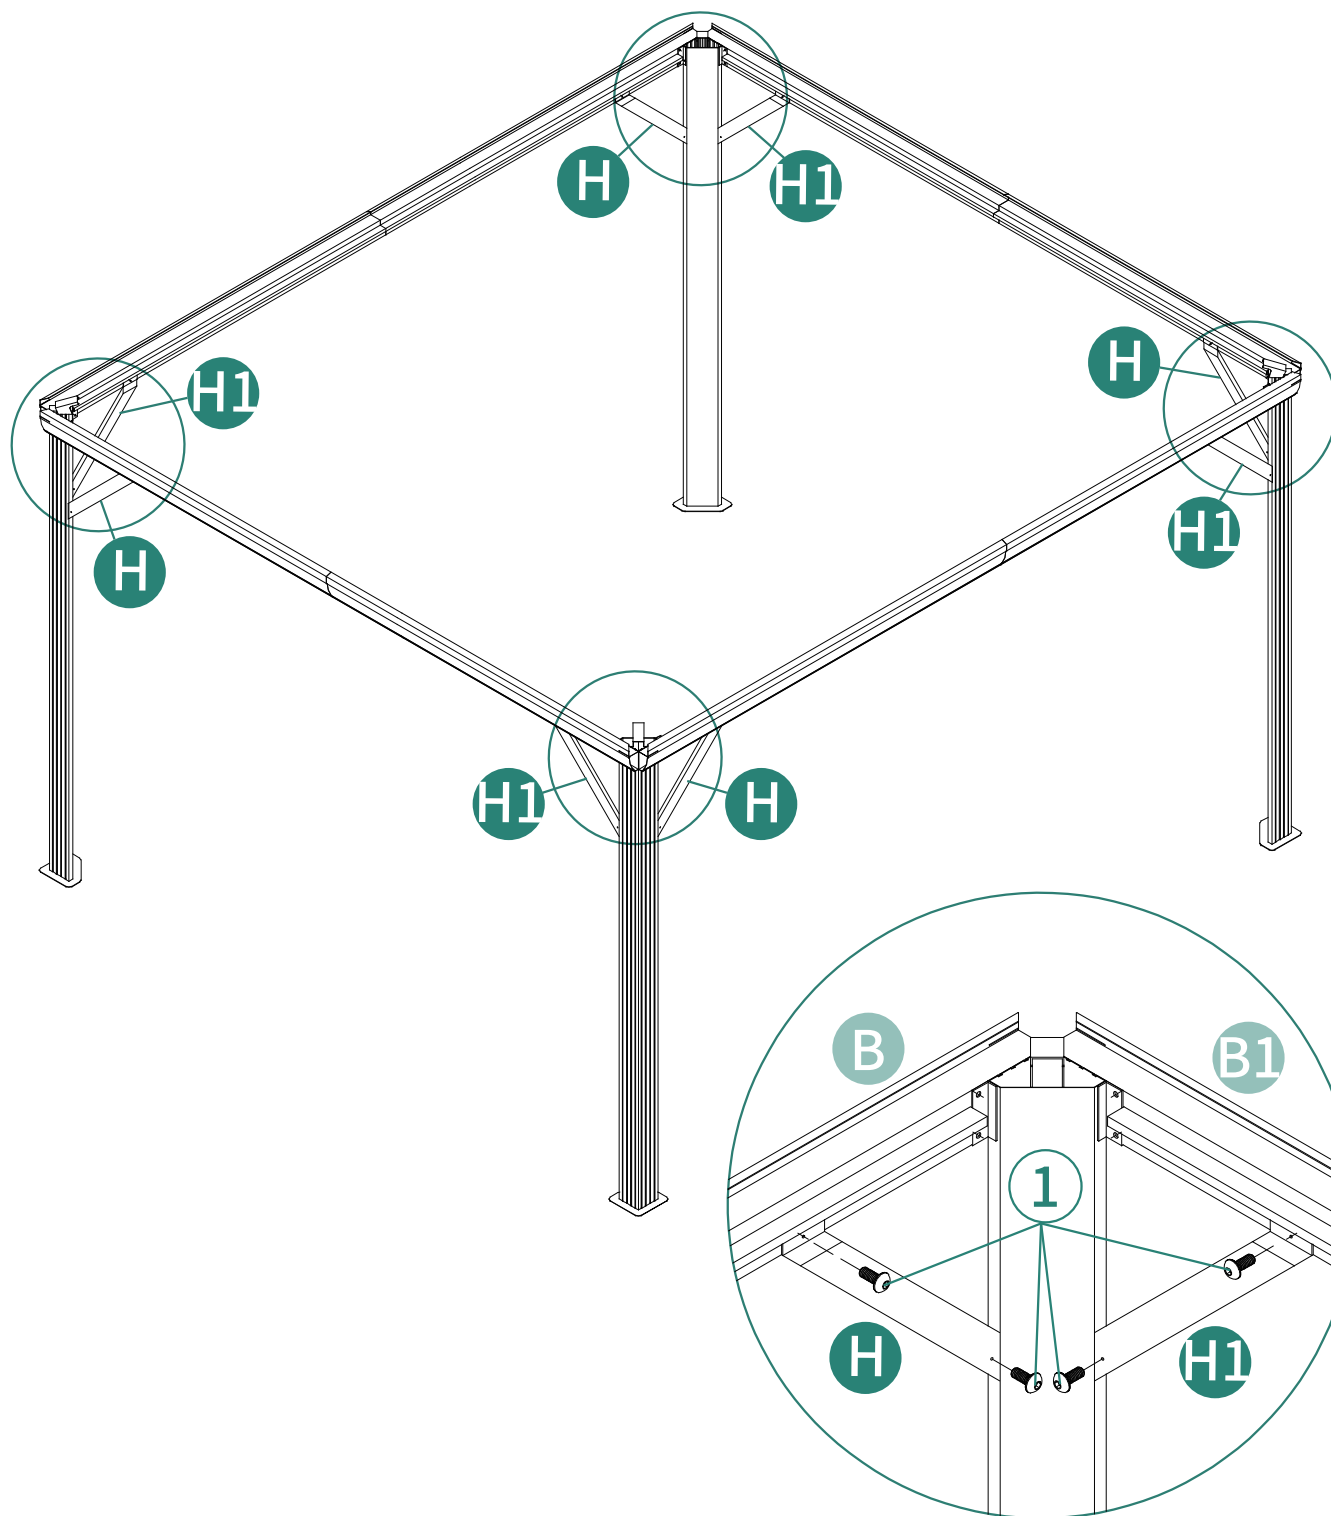


ASSEMBLY INSTRUCTIONS

5



Ⓚ4pcs




Ⓚ14pcs



④16pcs



⑫4pcs

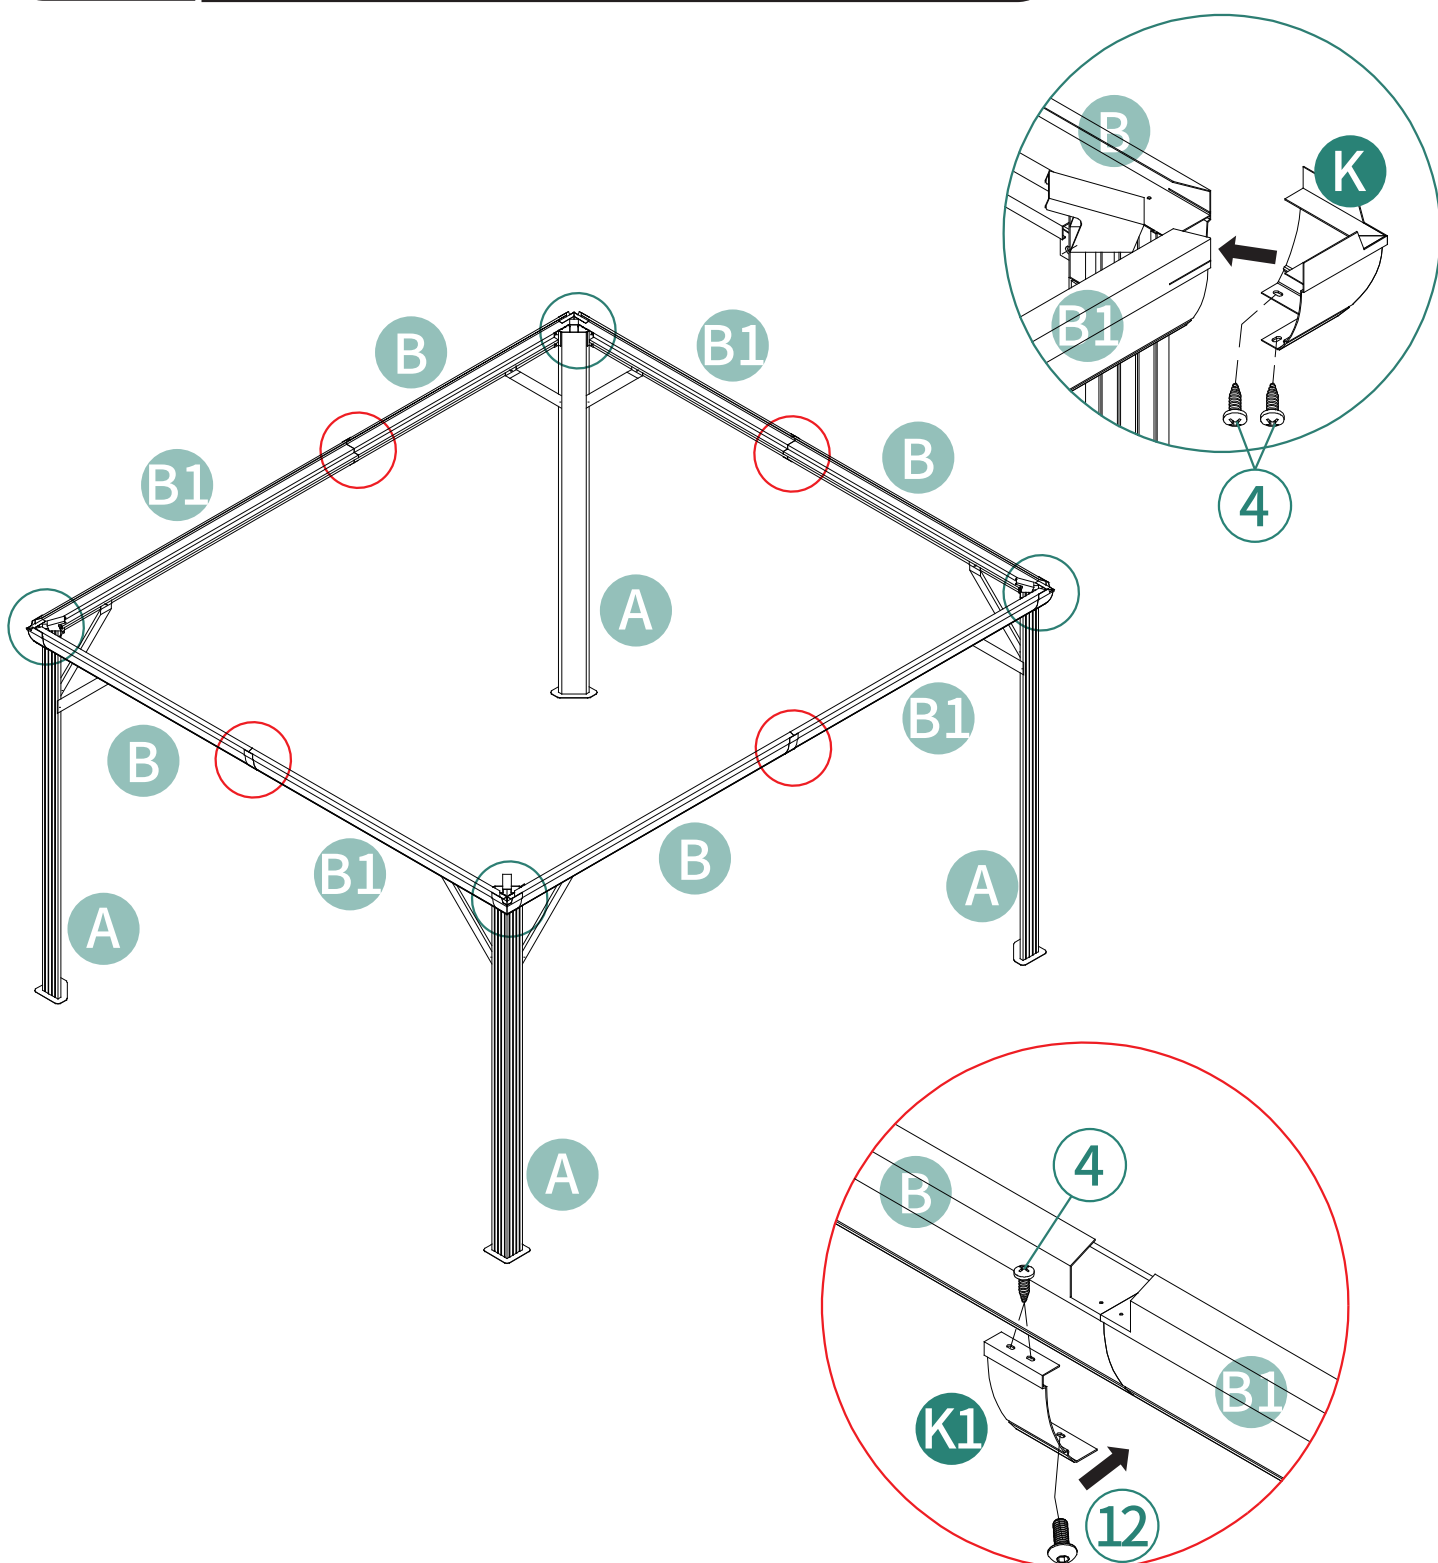

ASSEMBLY INSTRUCTIONS

6

X4



①Ea4pcs




①Eb4pcs




①1612pcs






①1712pcs



①184pcs

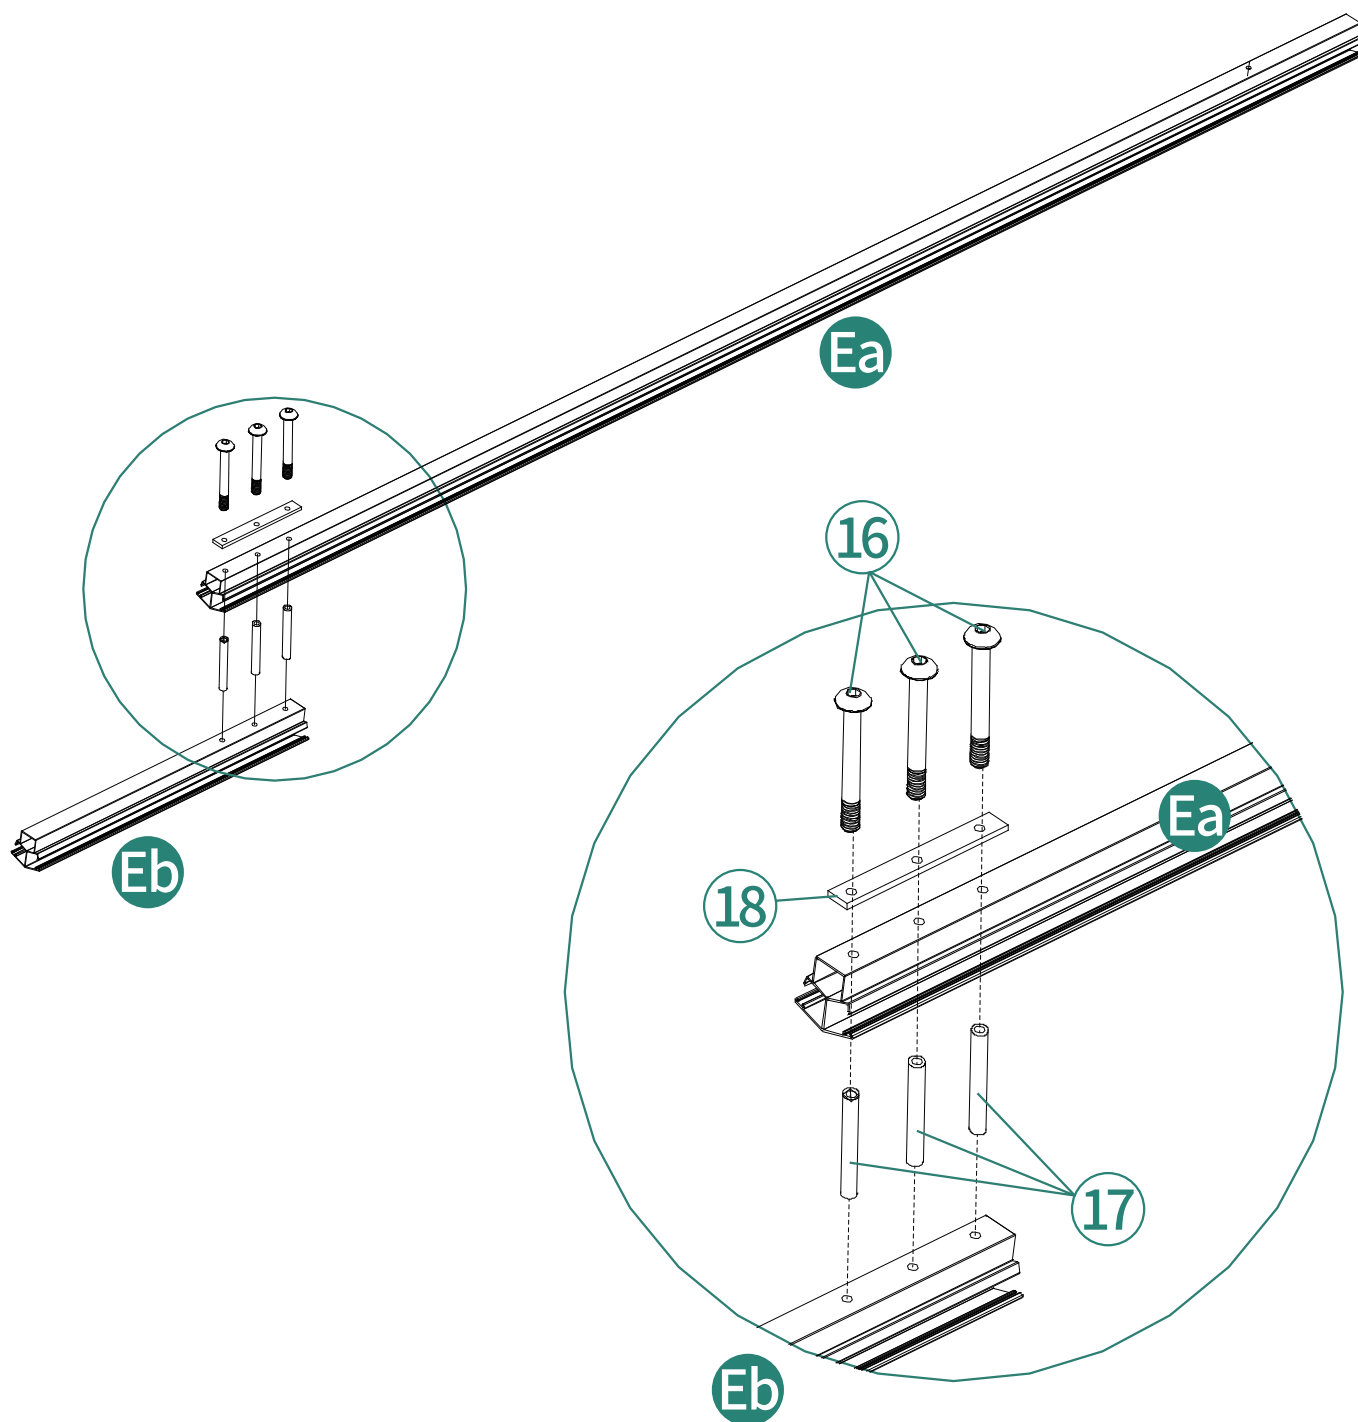

ASSEMBLY INSTRUCTIONS

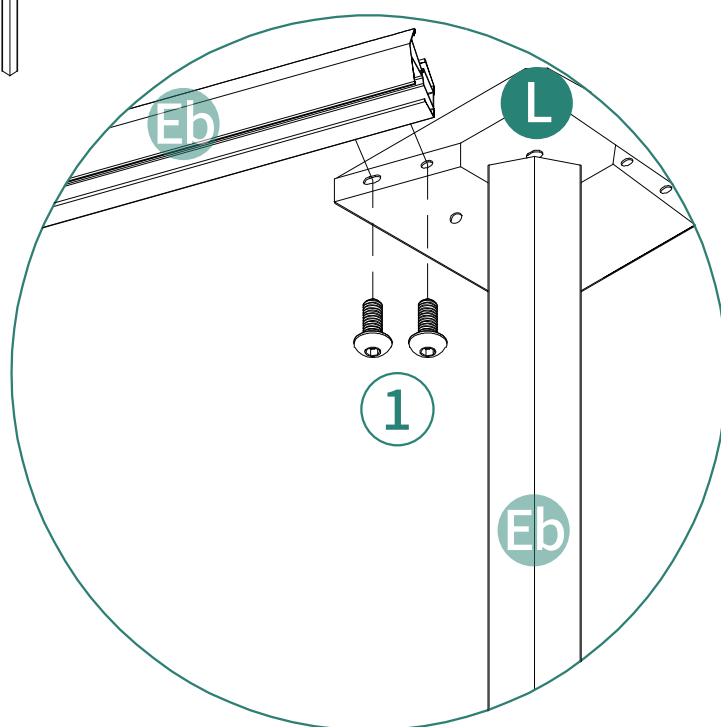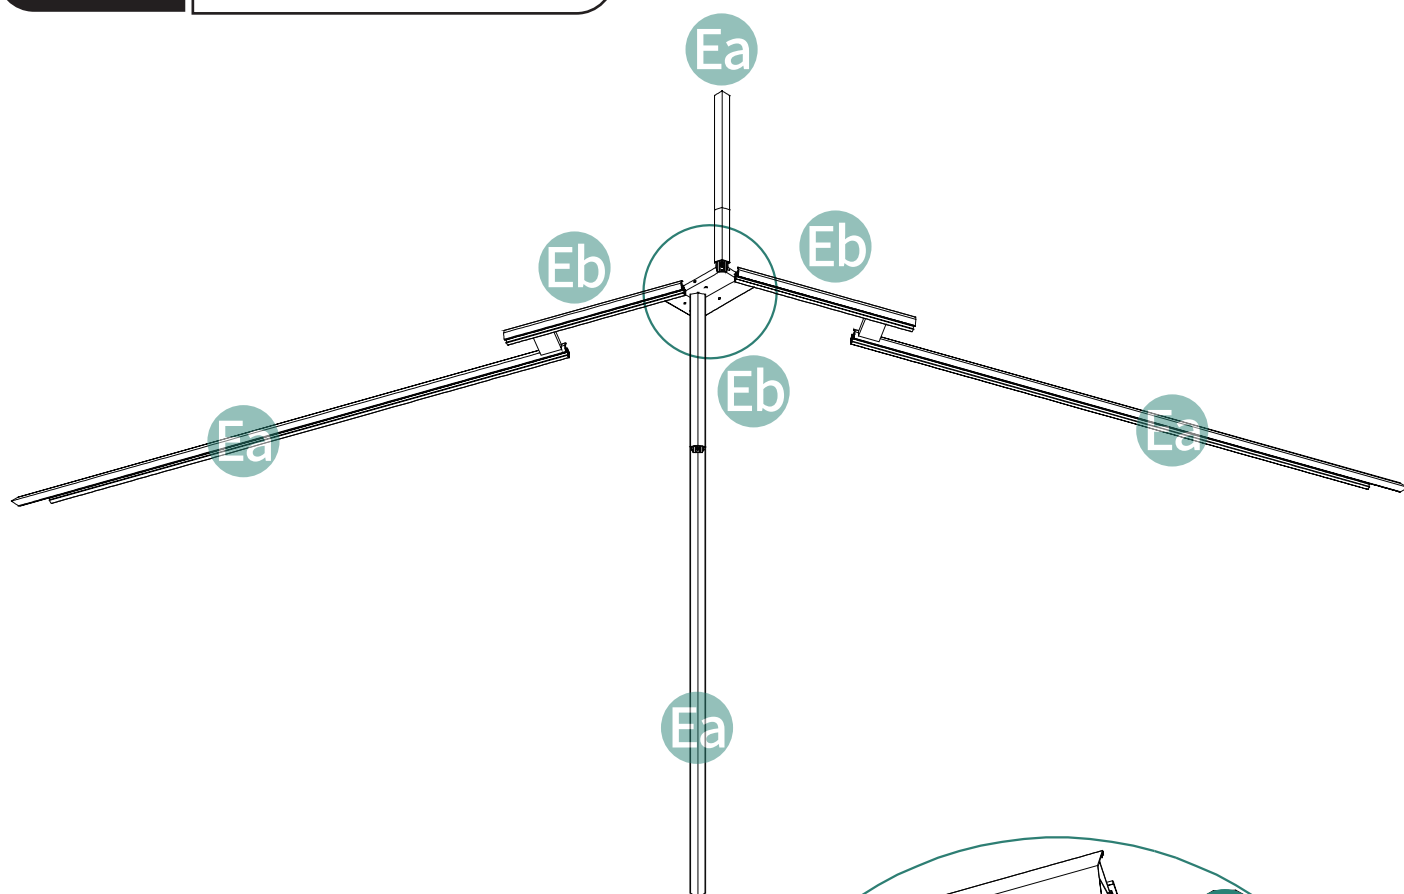
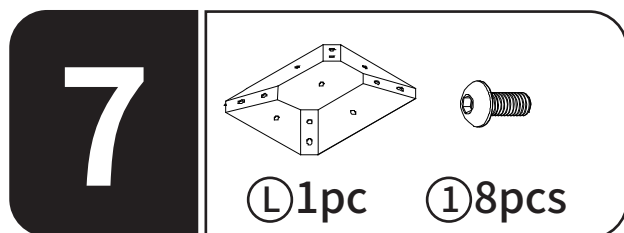


ASSEMBLY INSTRUCTIONS

8




① 4pcs

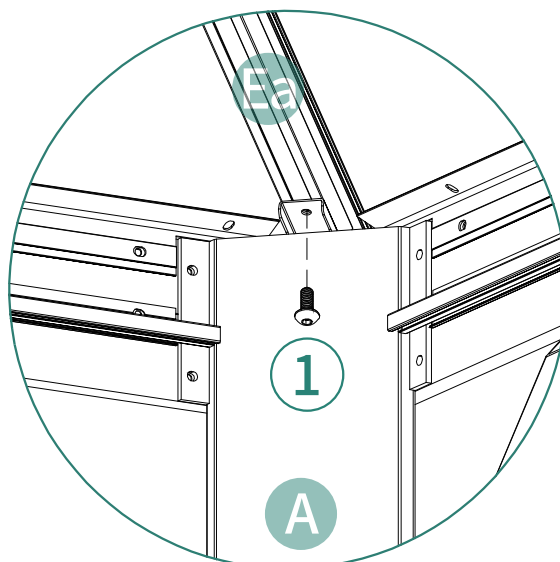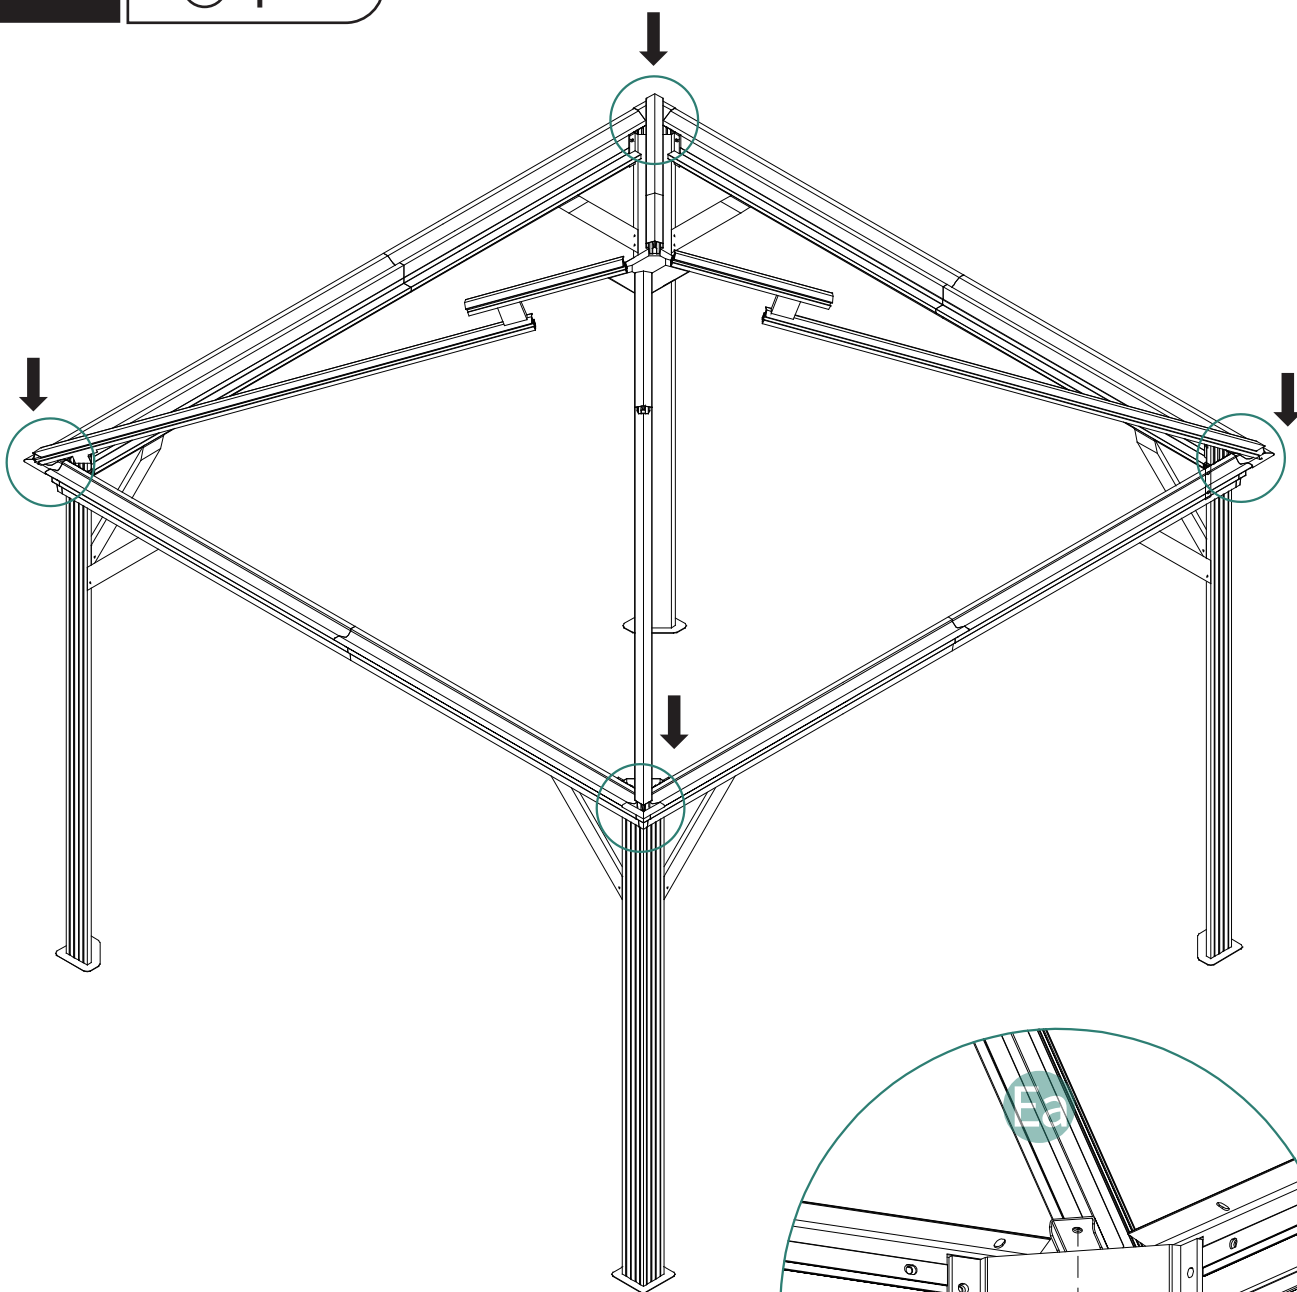


ASSEMBLY INSTRUCTIONS

9

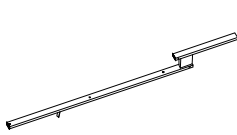

E1 4pcs






W3 4pcs



1 8pcs




12 8pcs

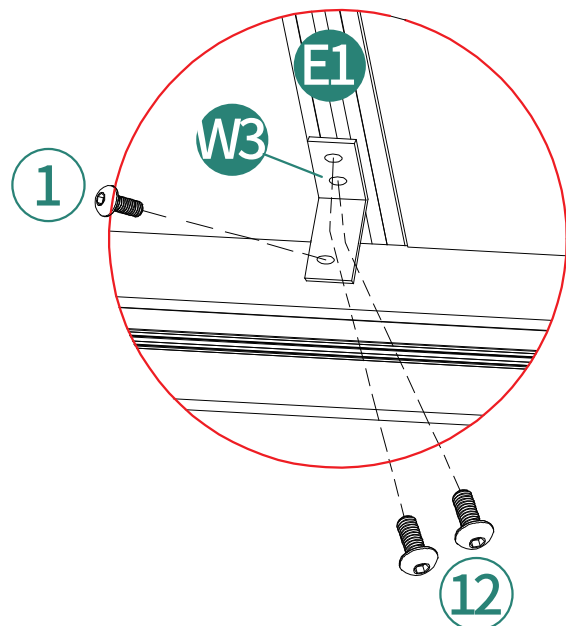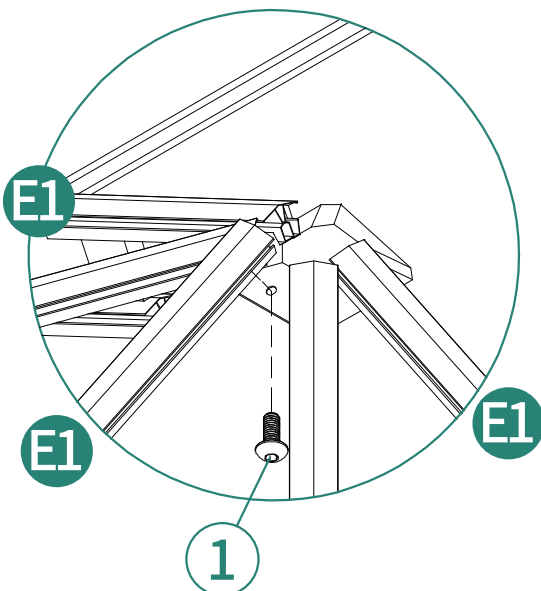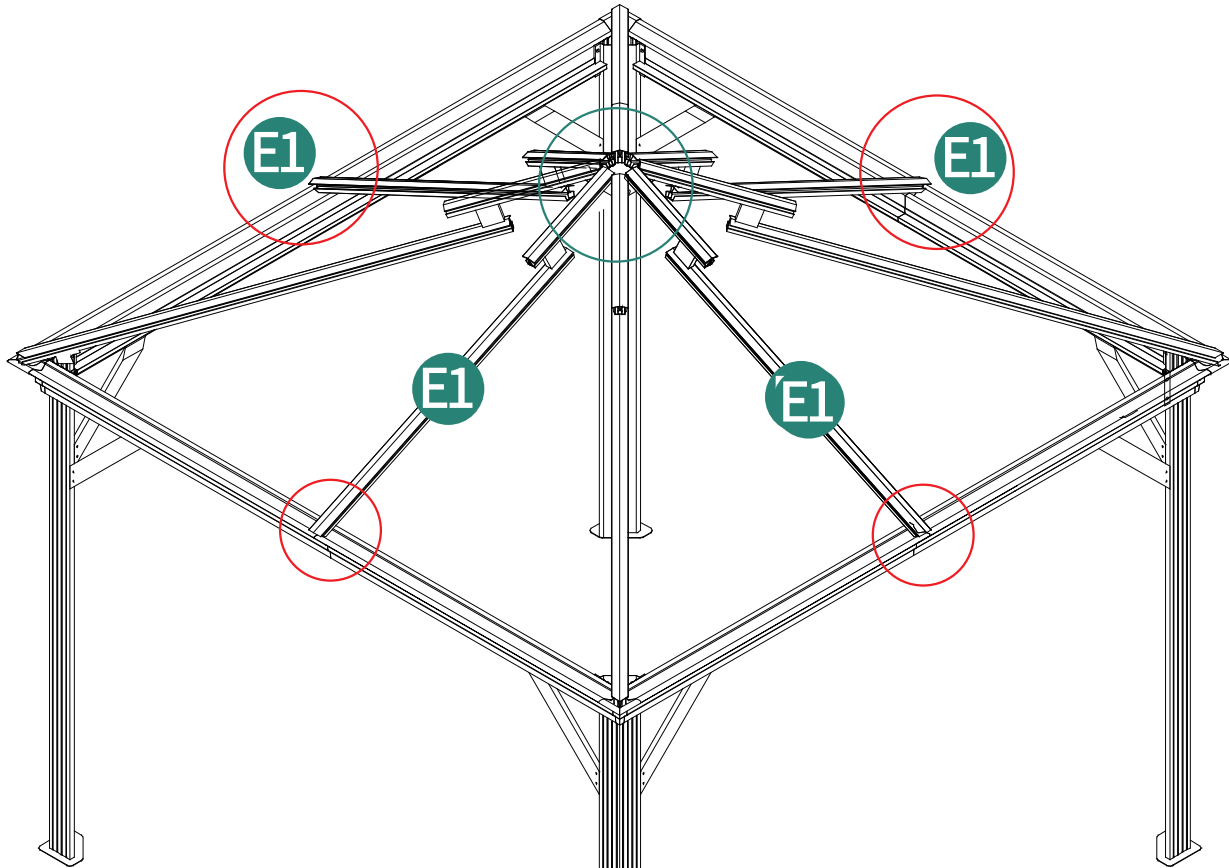


ASSEMBLY INSTRUCTIONS



10



Ⓜ1pc




③1pc


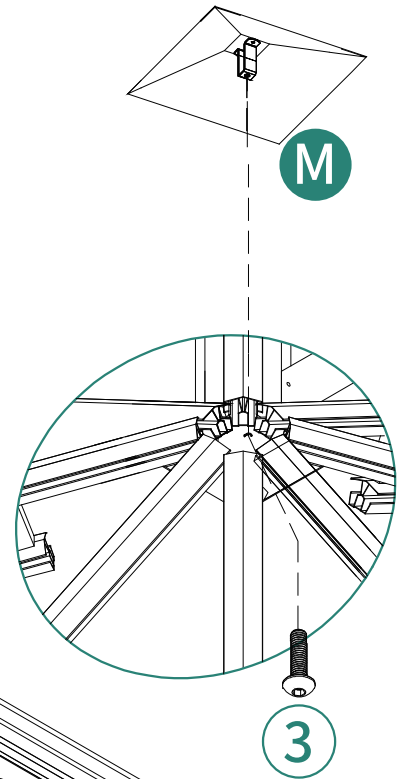
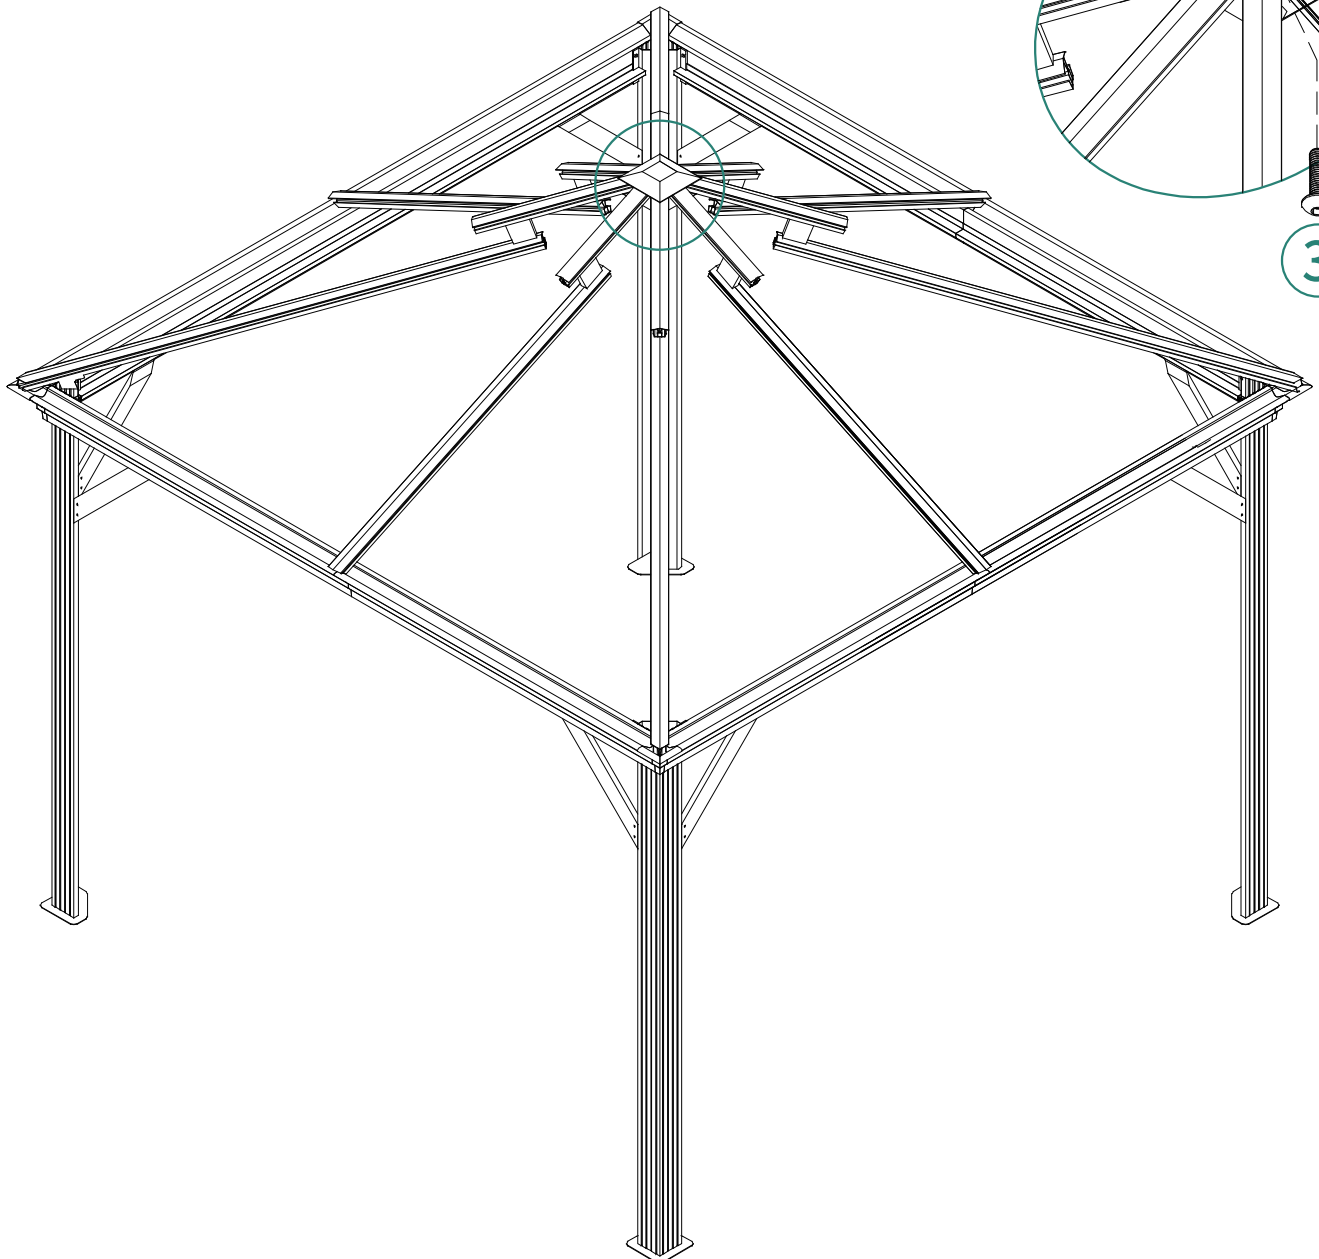


ASSEMBLY INSTRUCTIONS

11





G3 4pcs N 4pcs V1 4pcs 1 8pcs 5 8pcs

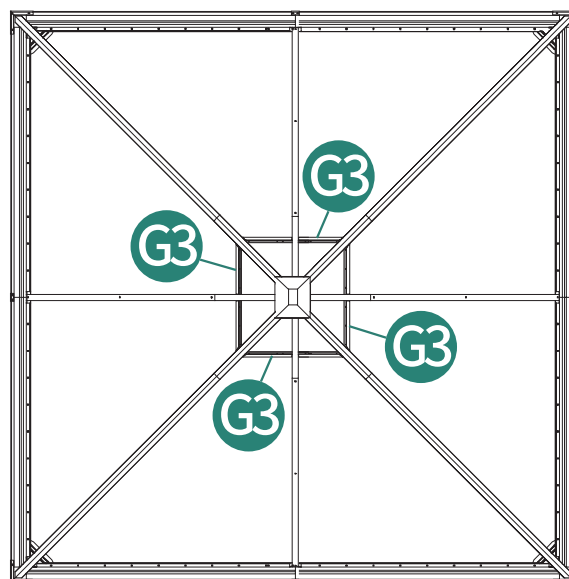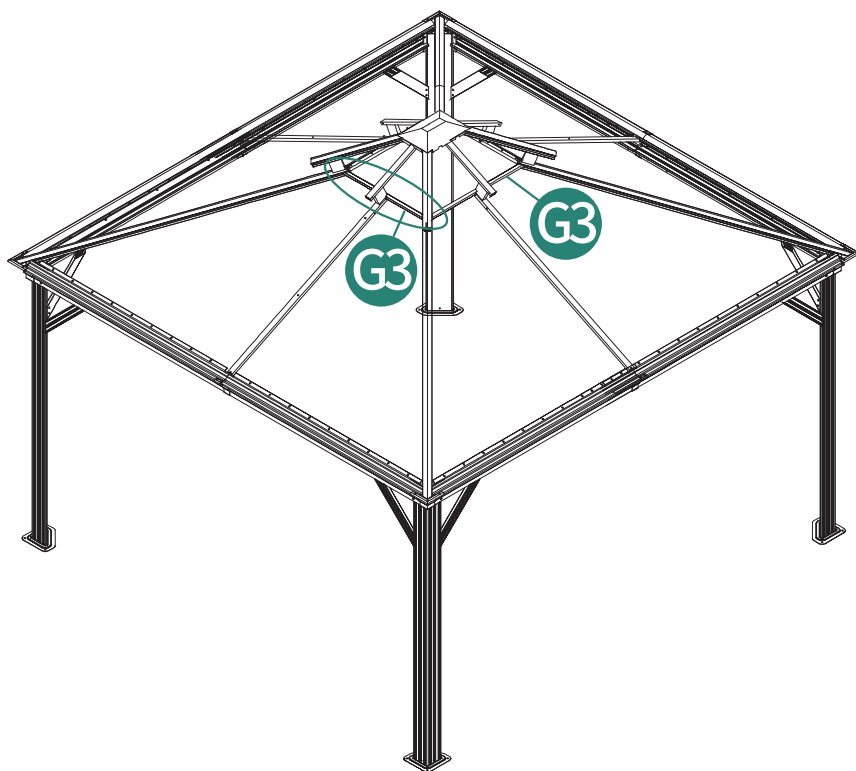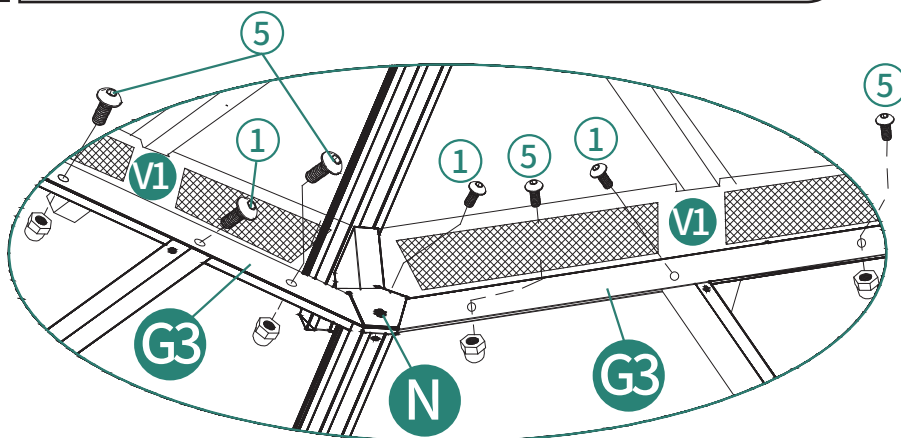


ASSEMBLY INSTRUCTIONS

12

X4




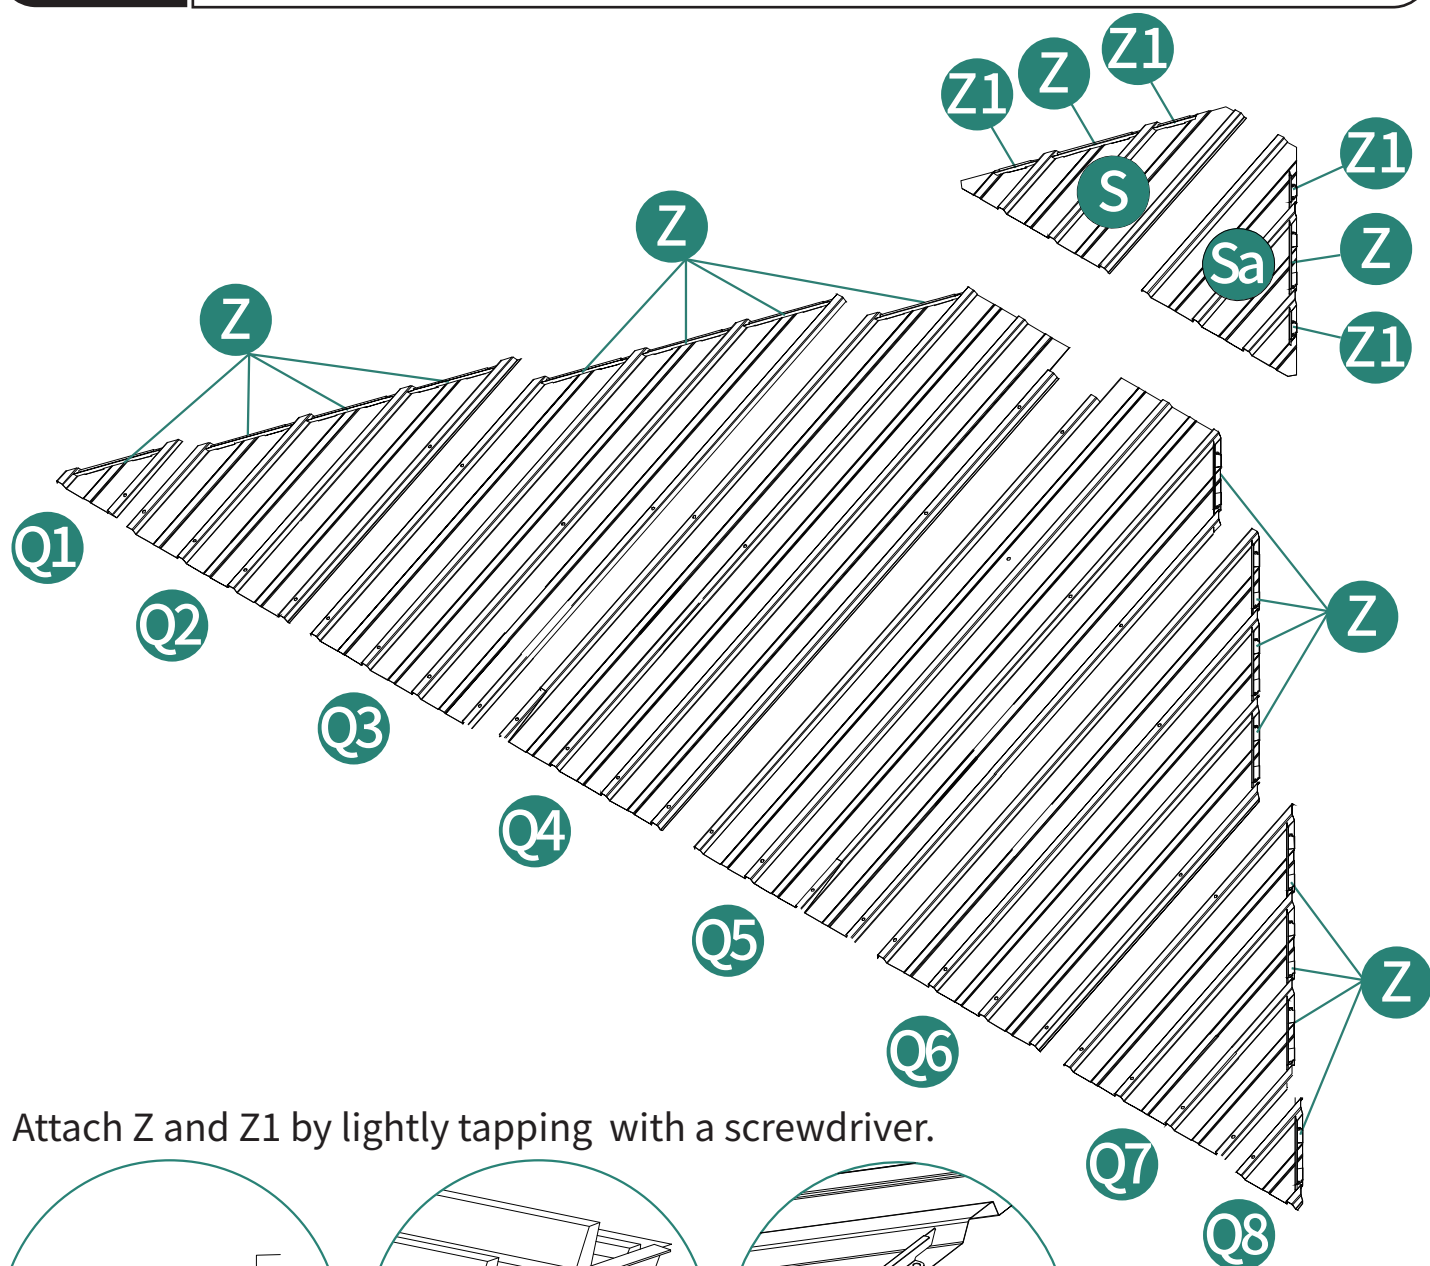
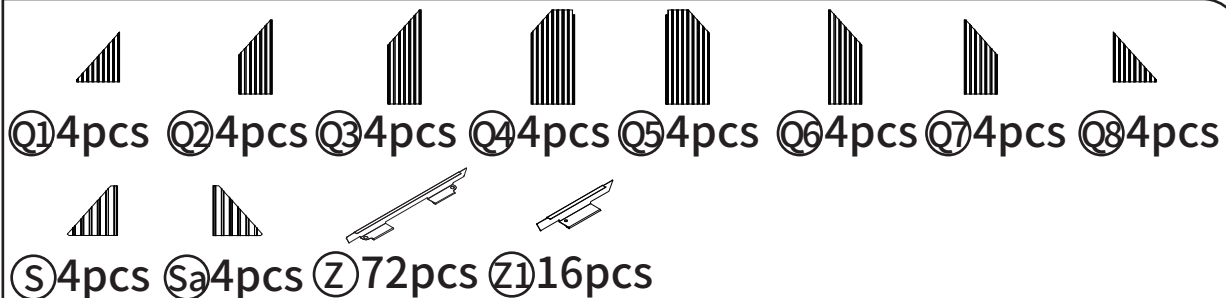


Attach Z and Z1 by lightly tapping with a screwdriver.

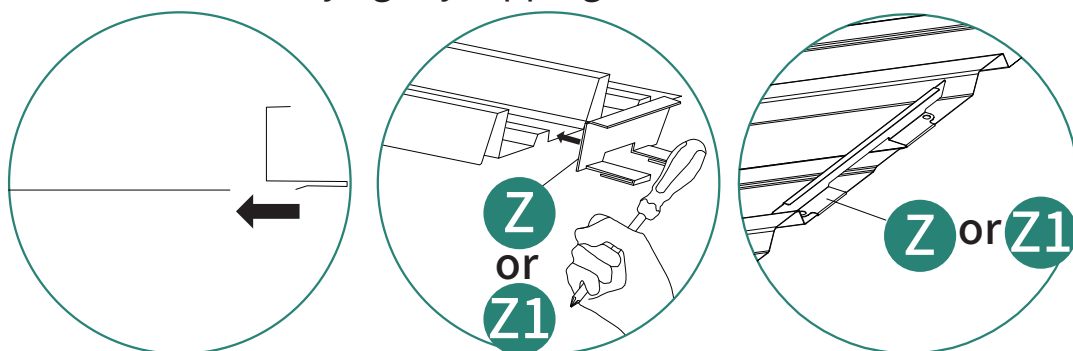


ASSEMBLY INSTRUCTIONS

13

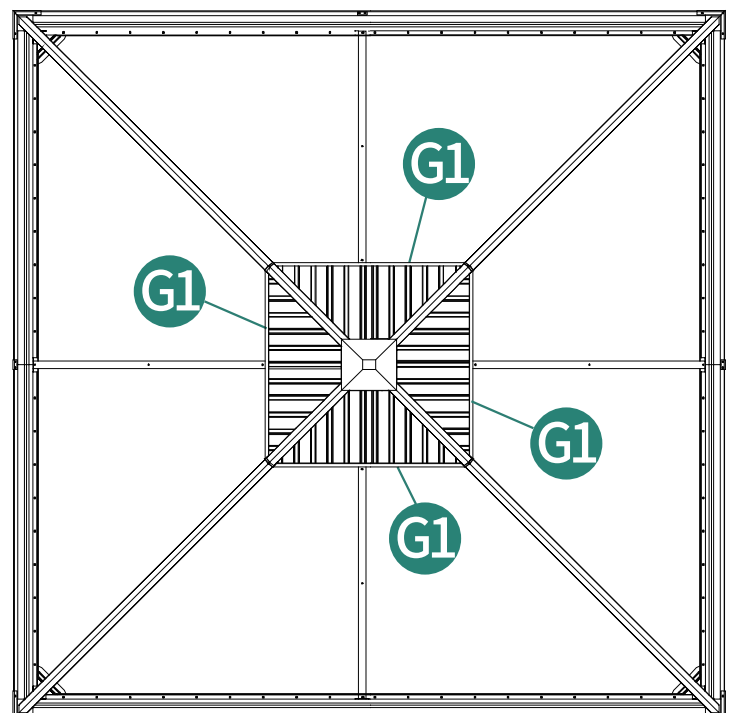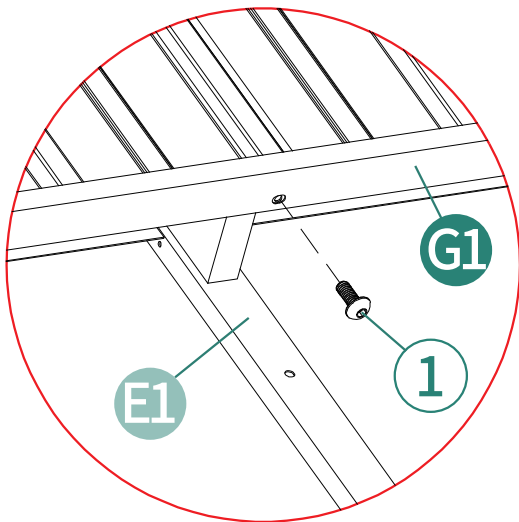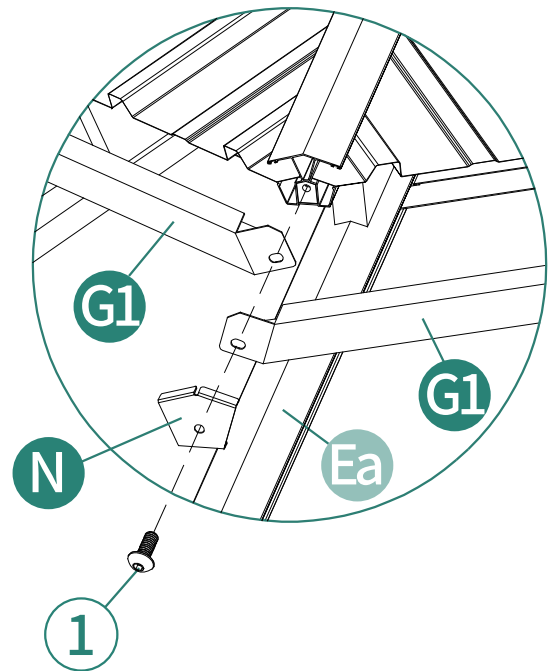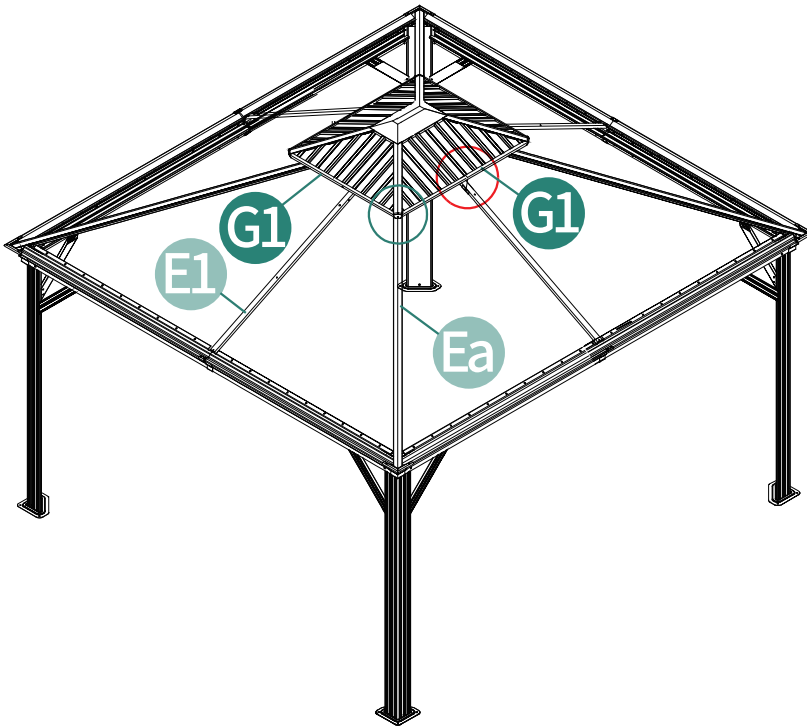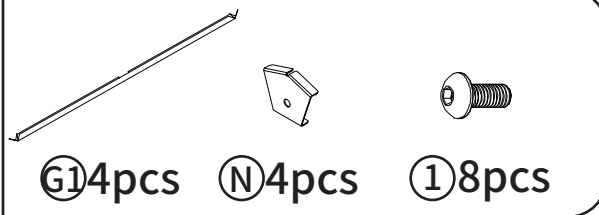


ASSEMBLY INSTRUCTIONS


14



F18pcs







W4pcs




W14pcs




124pcs

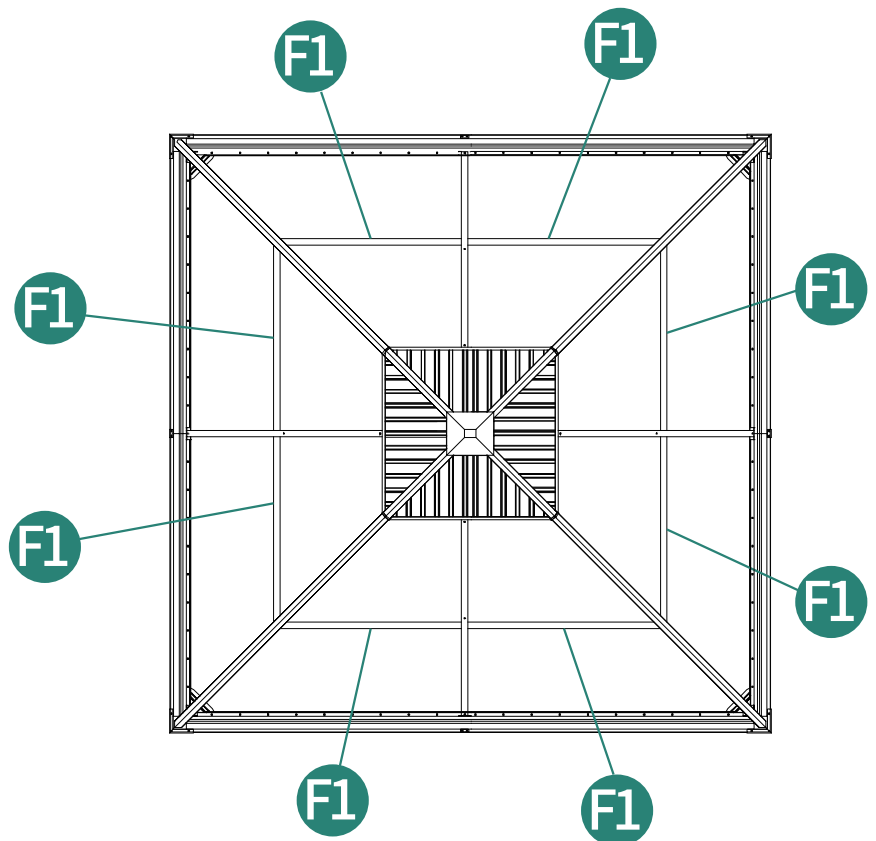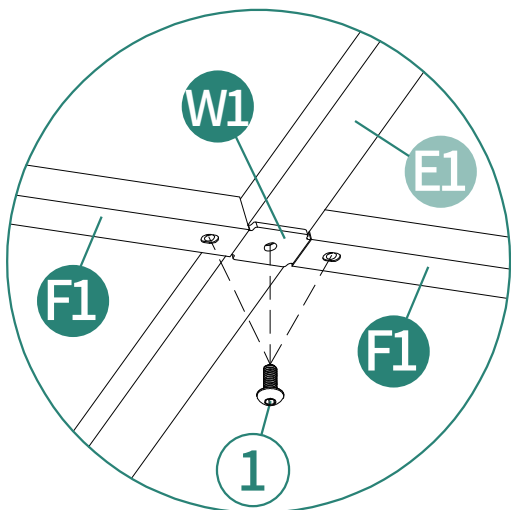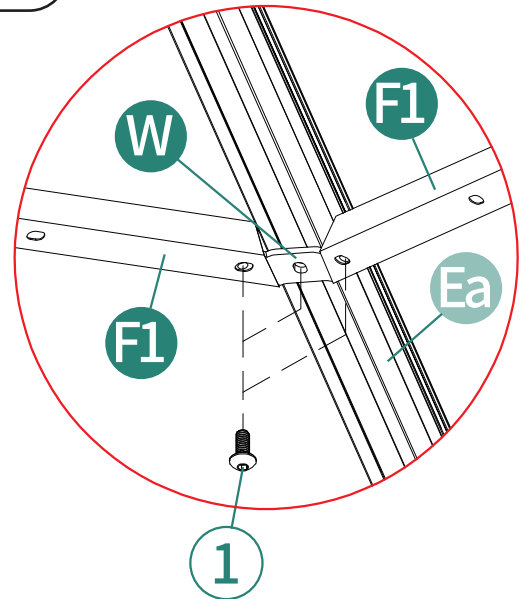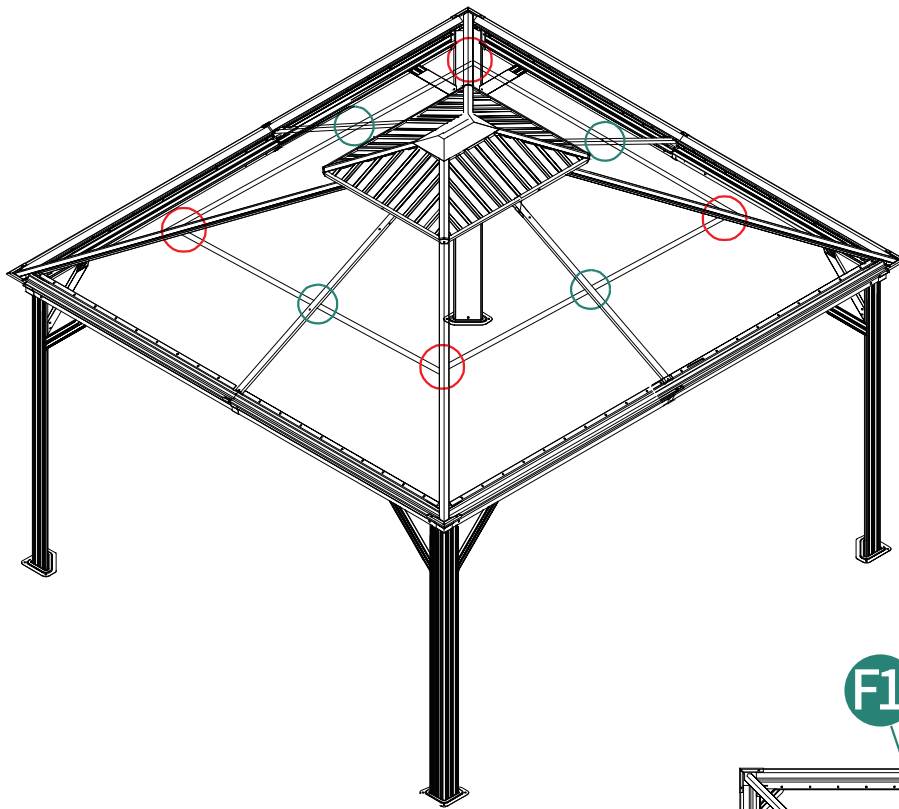

15

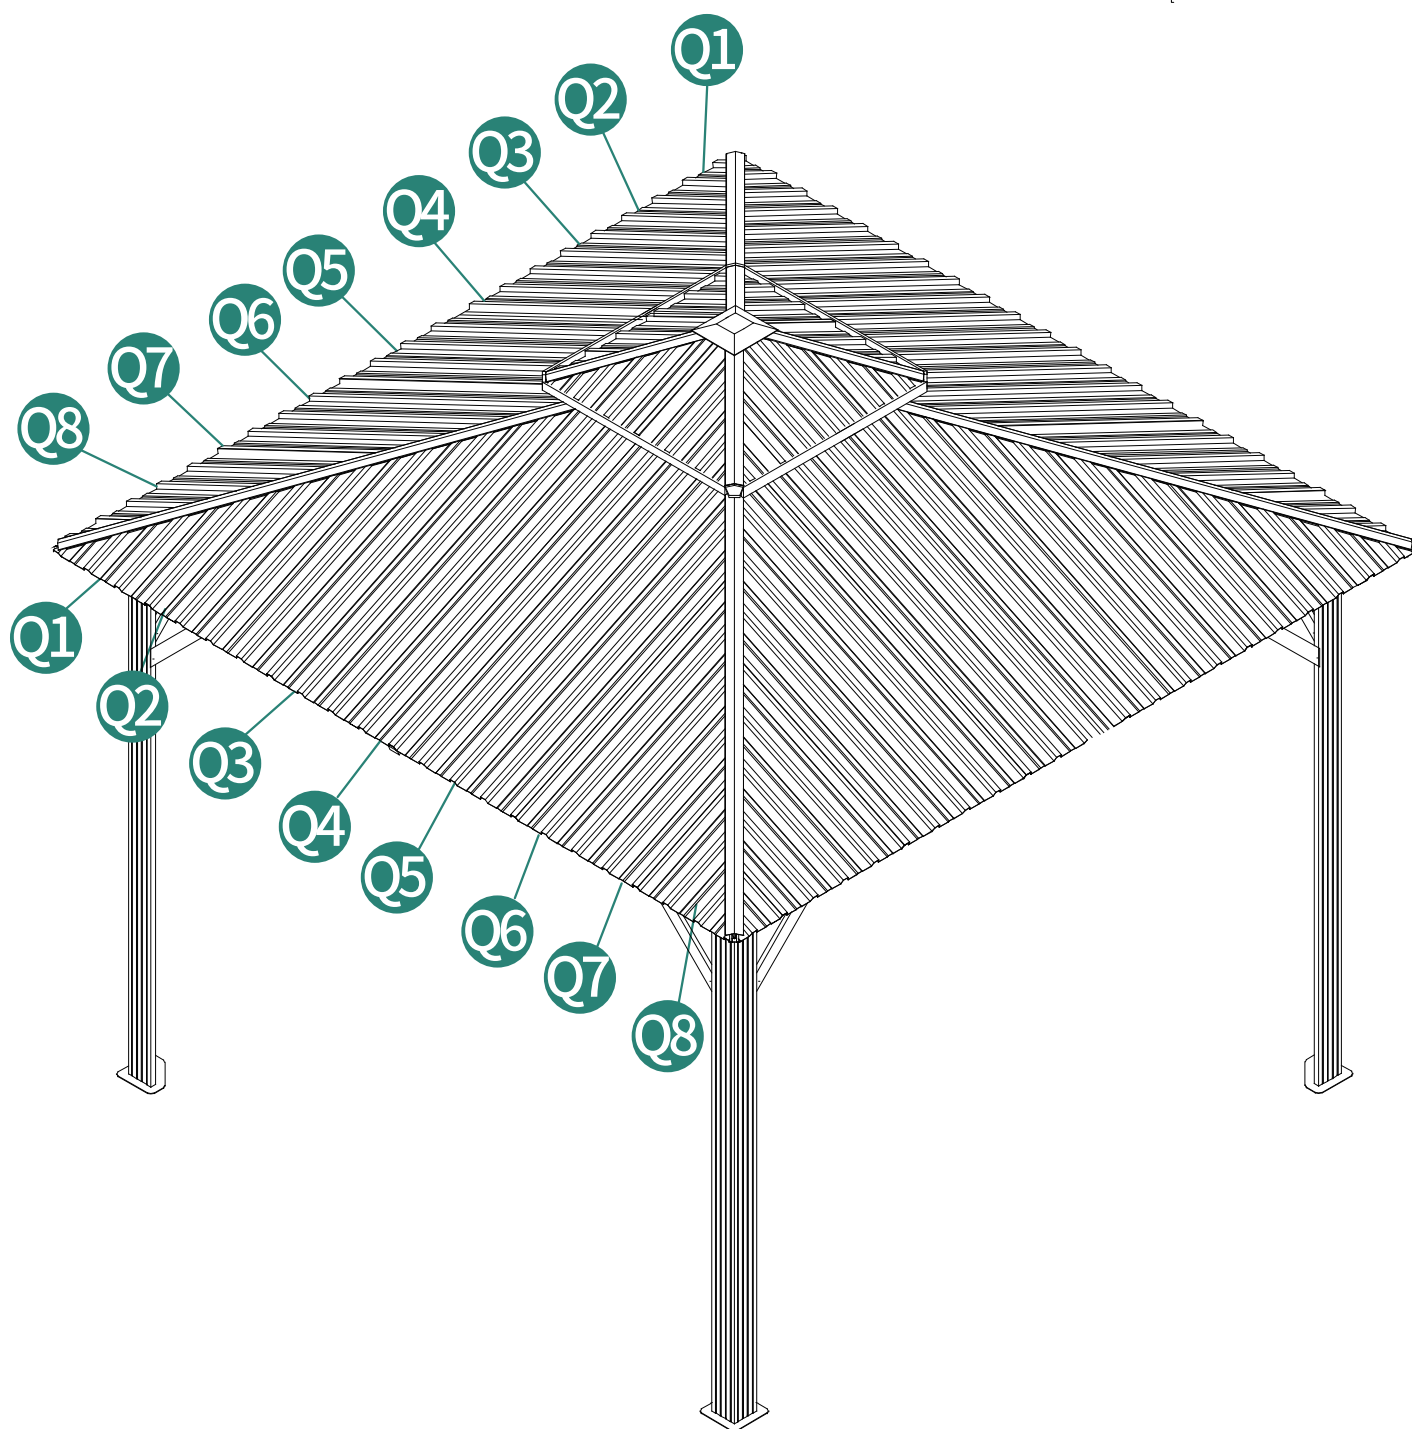

16

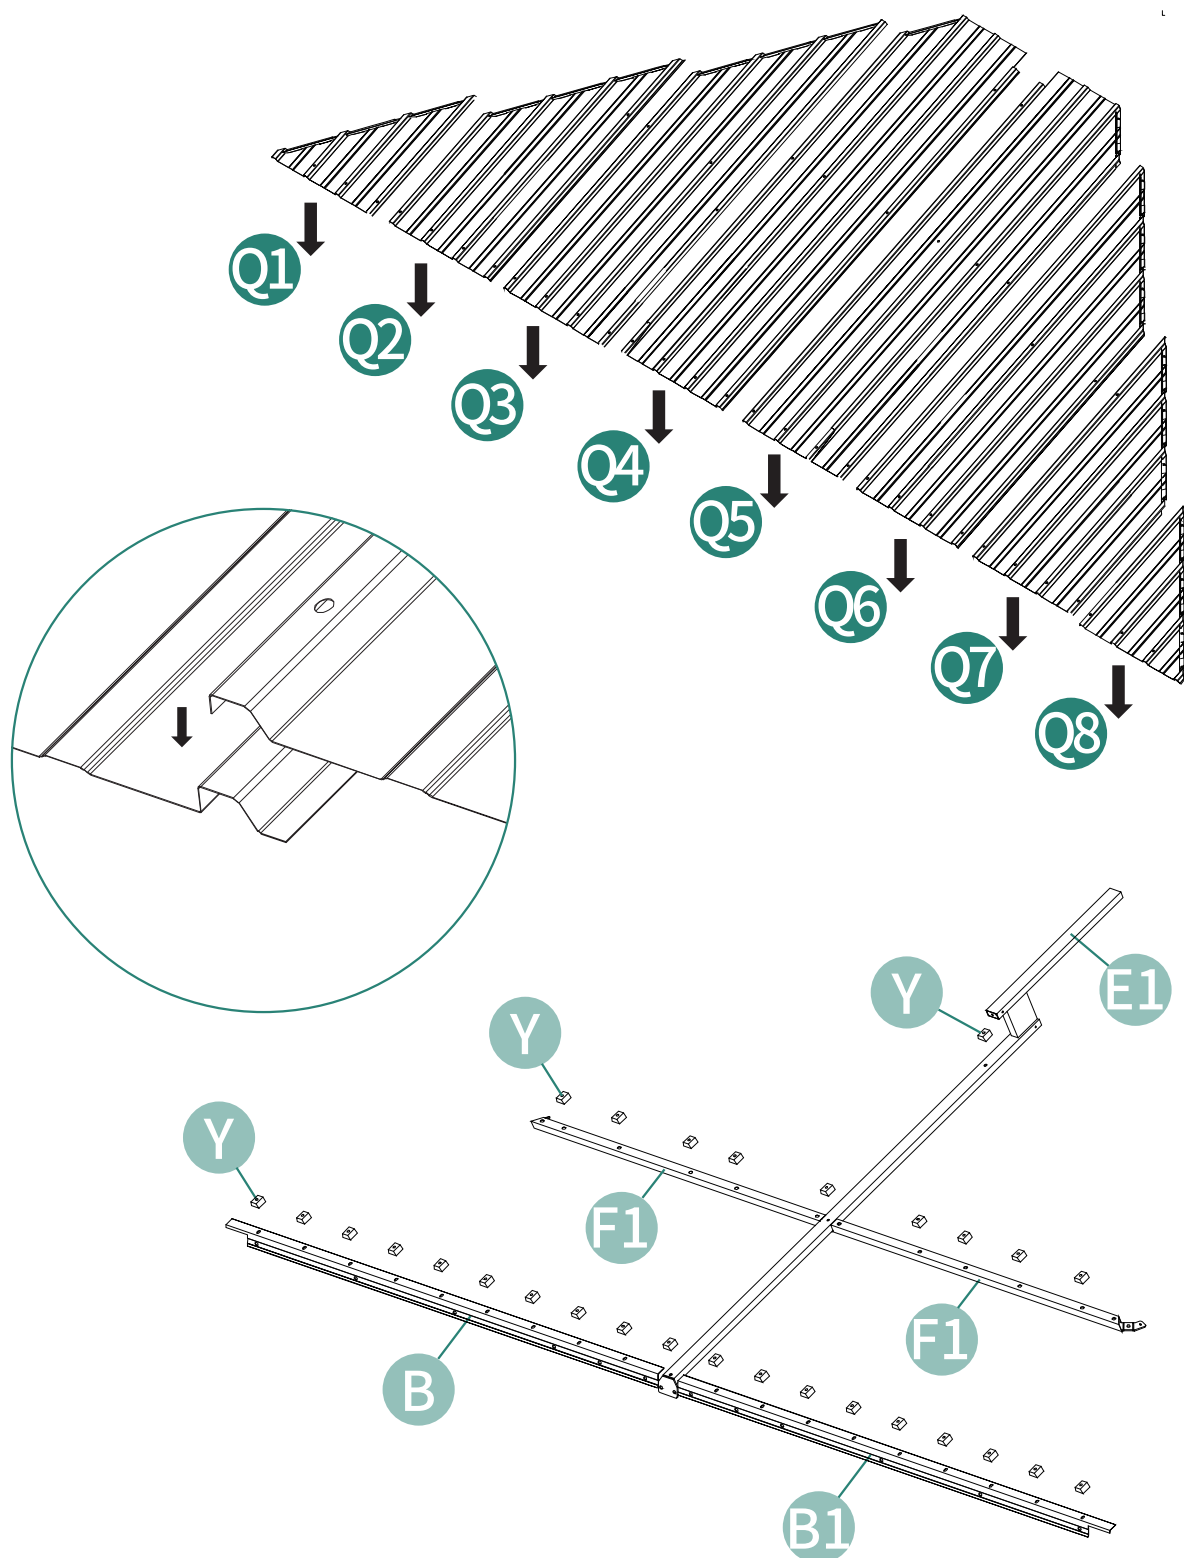

ASSEMBLY INSTRUCTIONS

17



Y 116pcs



2 72pcs




3 8pcs



6 4pcs







7 32pcs

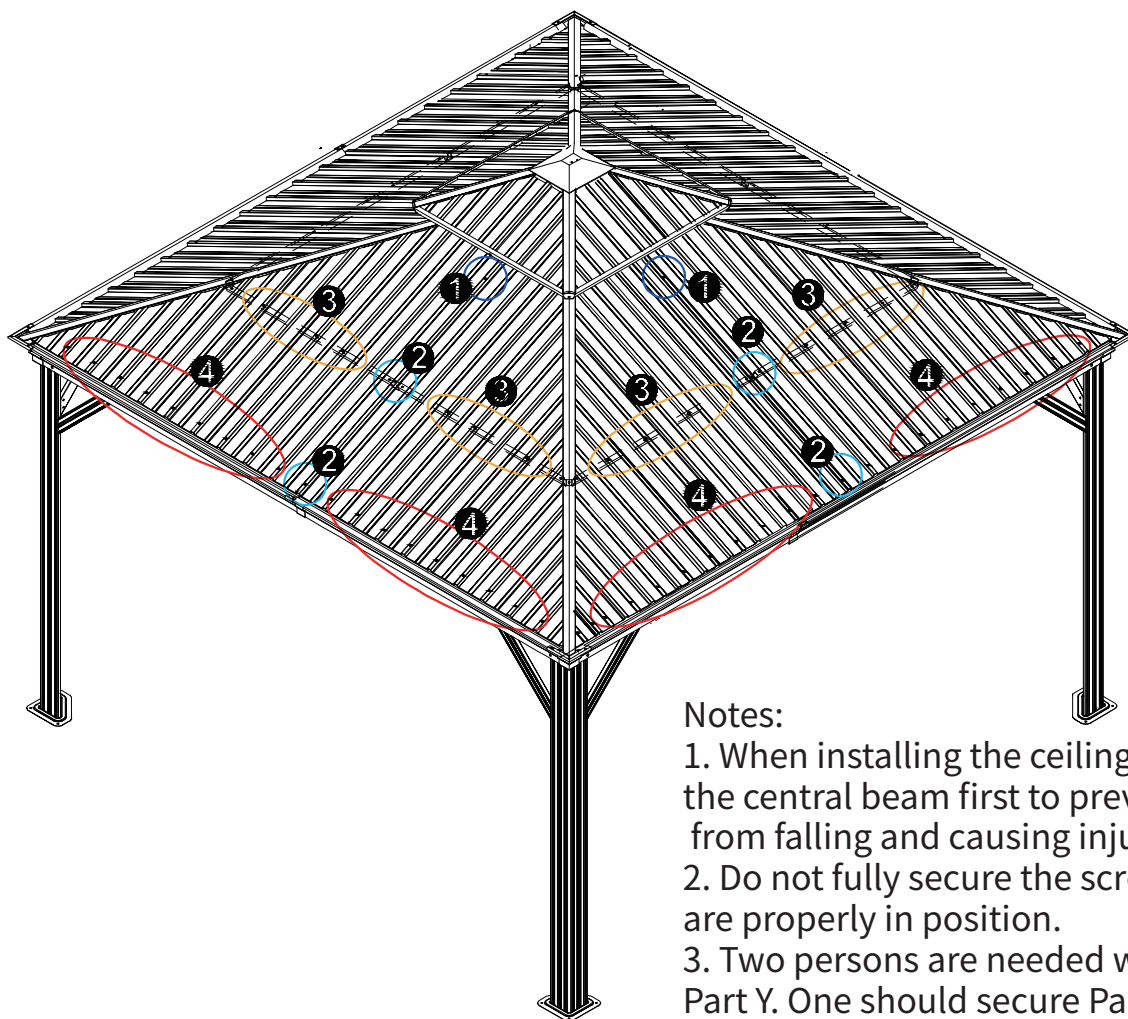






Notes:

1. When installing the ceiling, fix the screws on the central beam first to prevent the iron sheet from falling and causing injury.
2. Do not fully secure the screw until all screws are properly in position.
3. Two persons are needed when installing Part Y. One should secure Part Y's position from inside the gazebo, while the other inserts screws into Part Y from outside the gazebo.

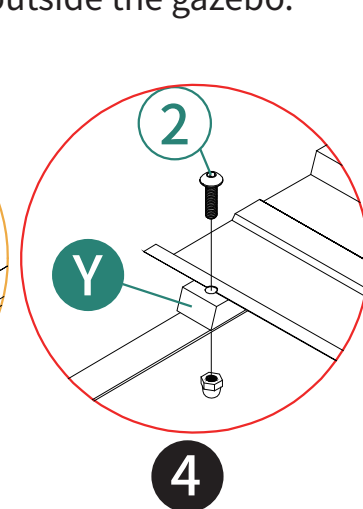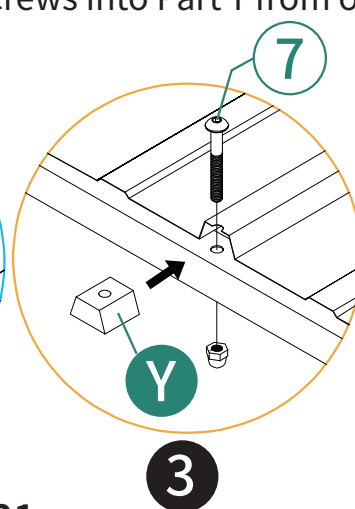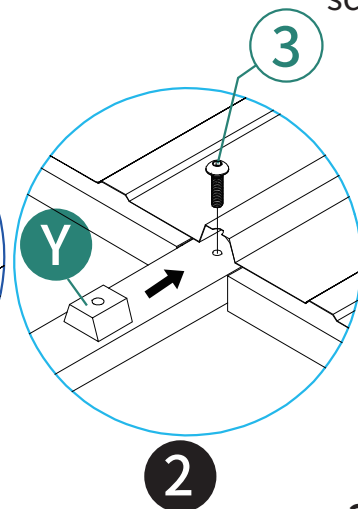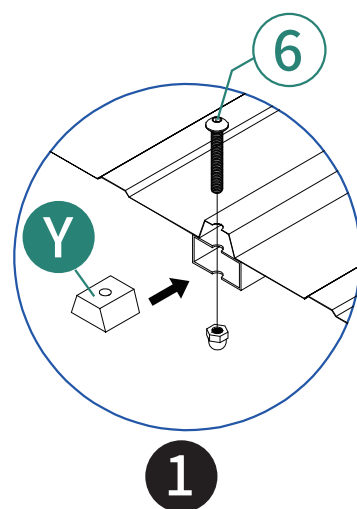





ASSEMBLY INSTRUCTIONS

18

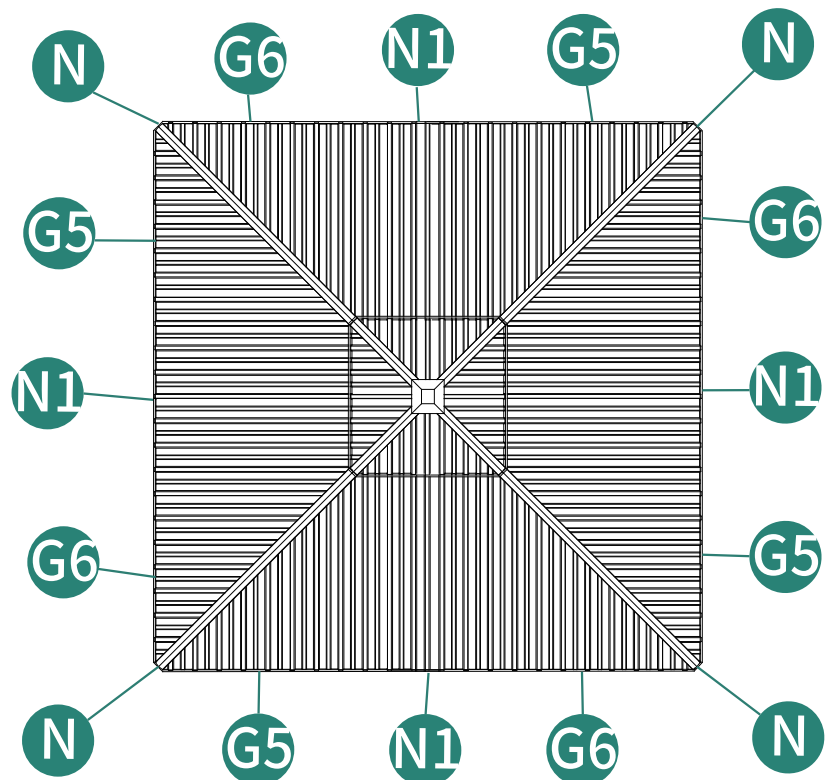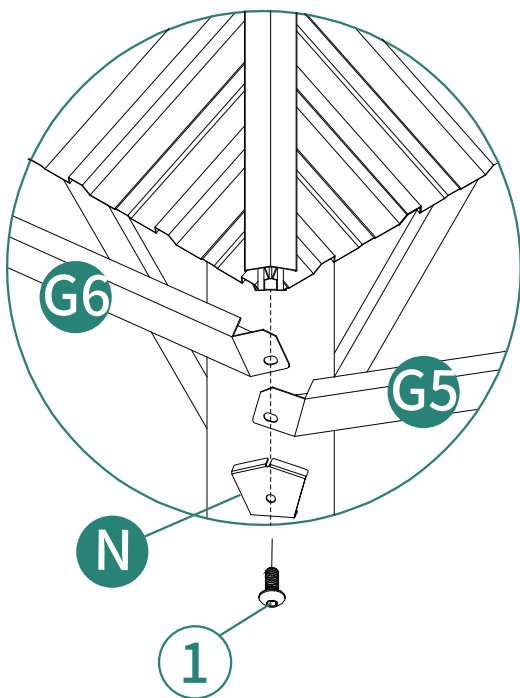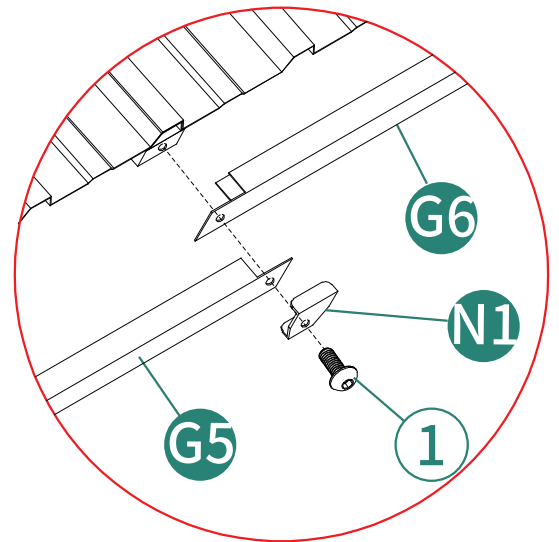
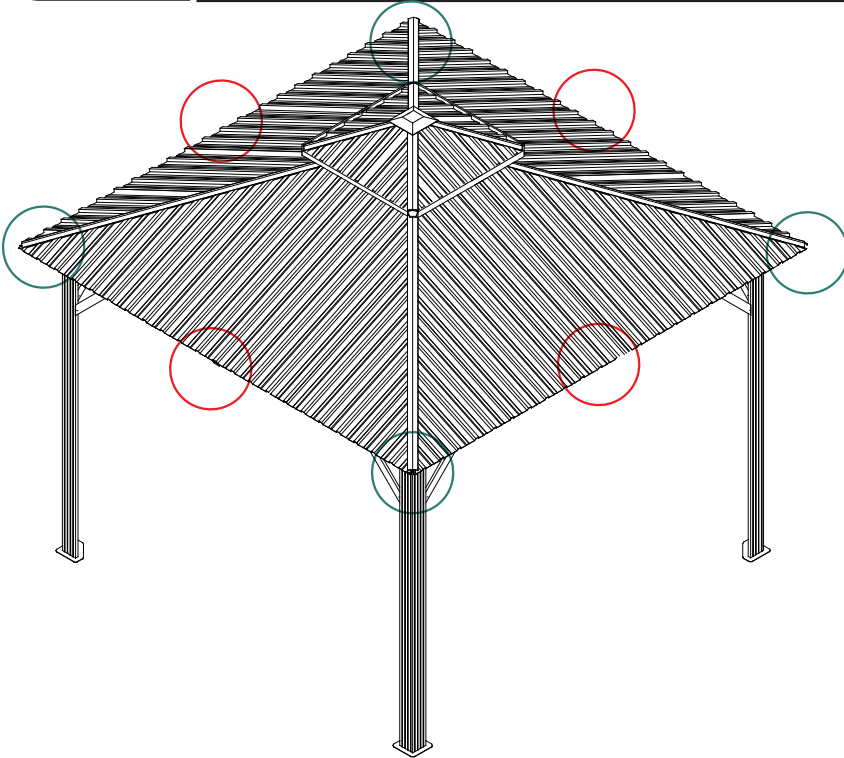
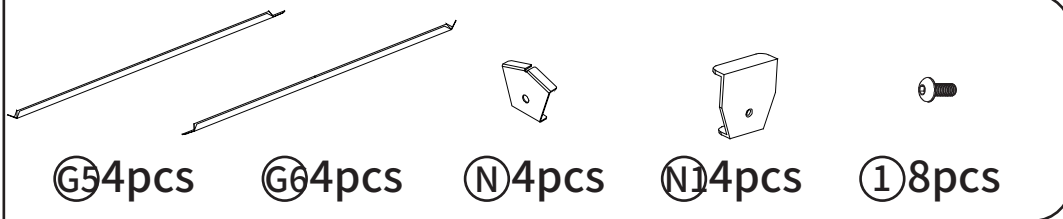


ASSEMBLY INSTRUCTIONS

19

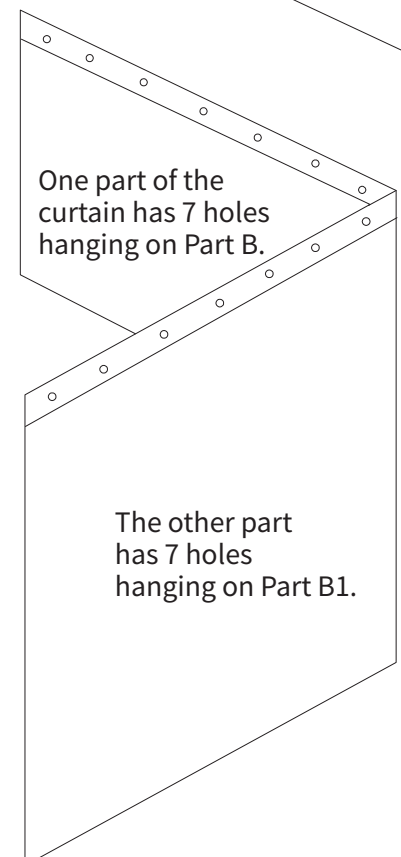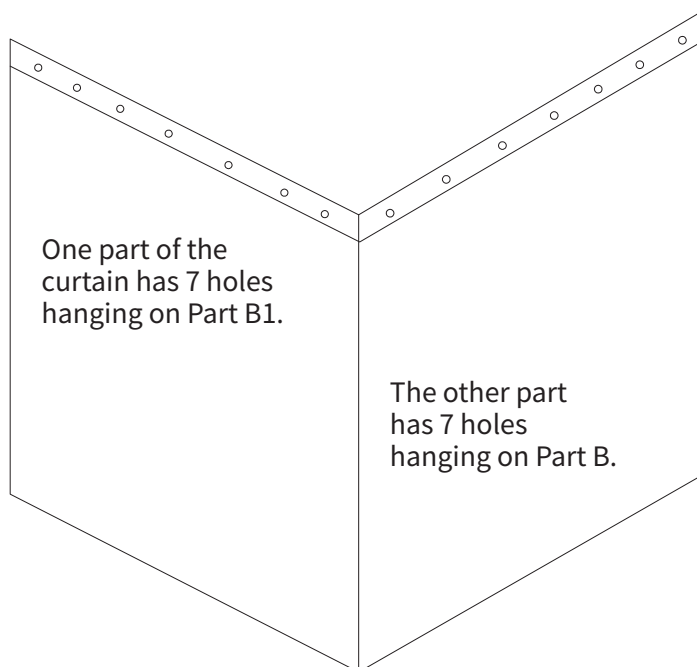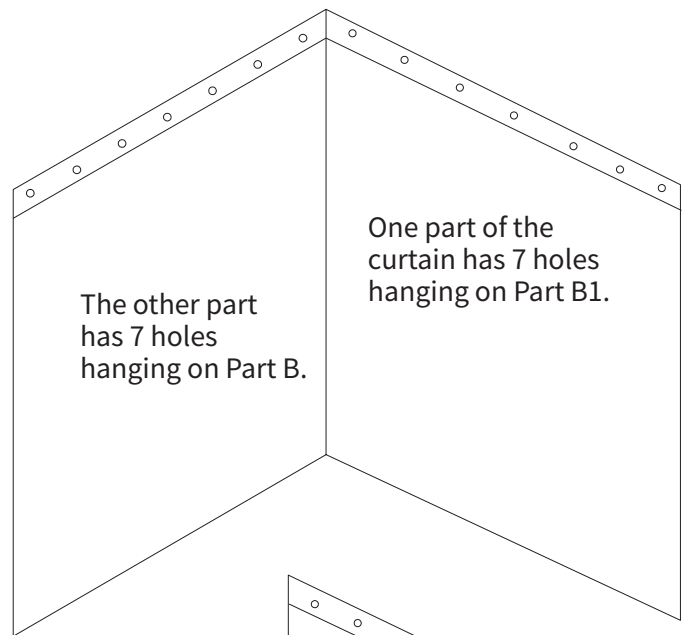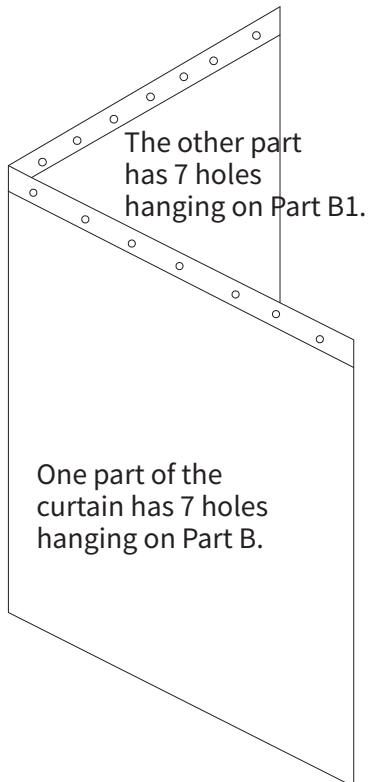


20

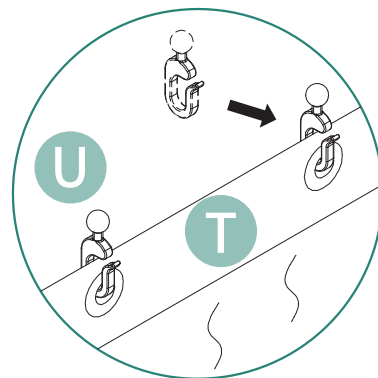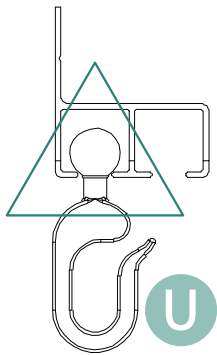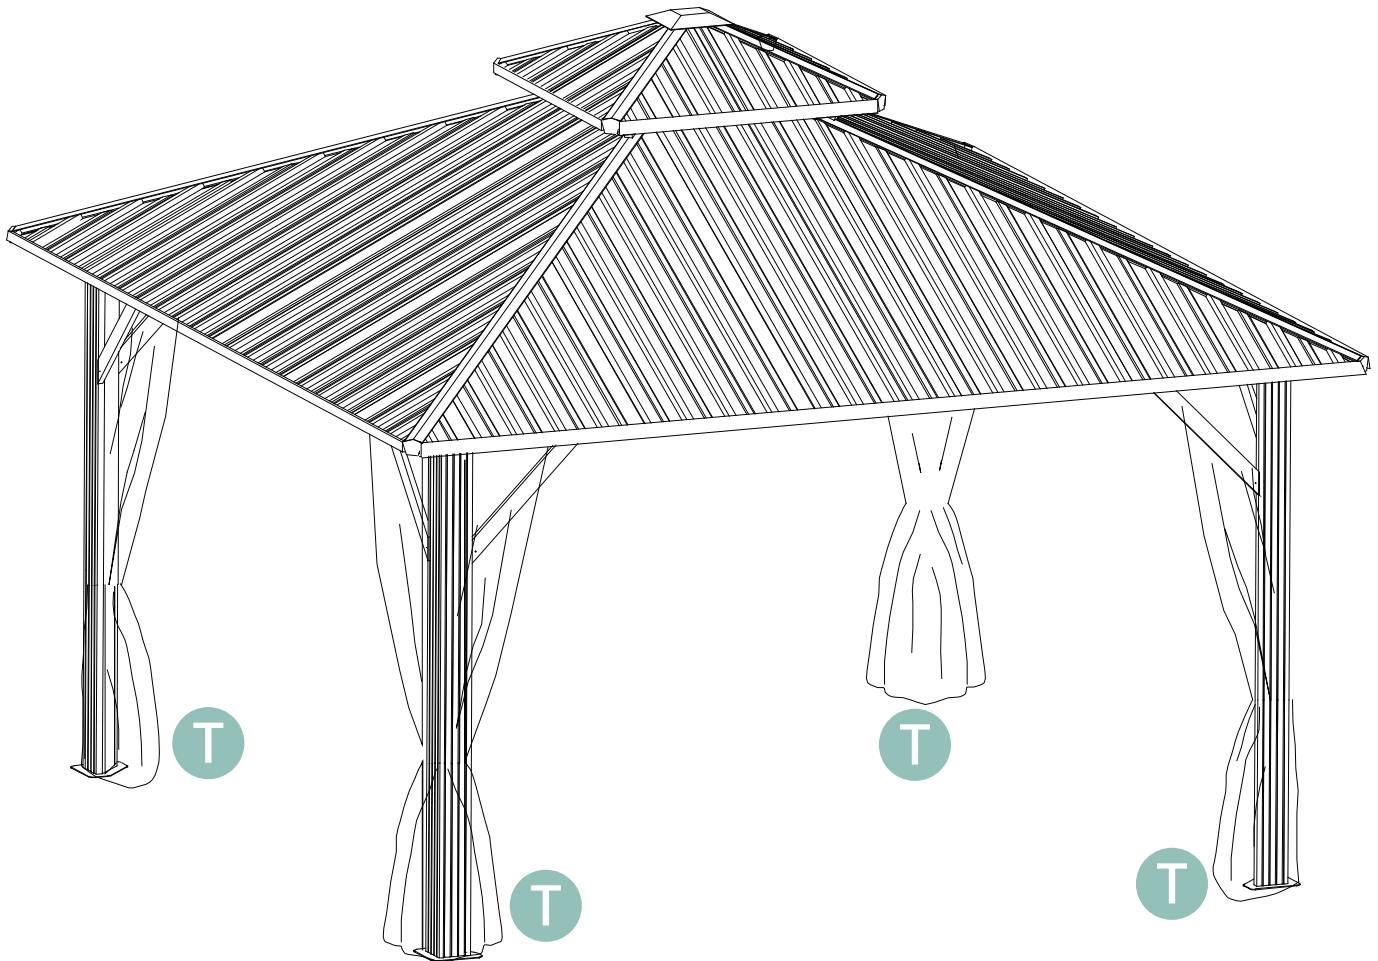





Pay attention to the sidewall curtain's installation position.

ASSEMBLY INSTRUCTIONS

21





T1 4pcs

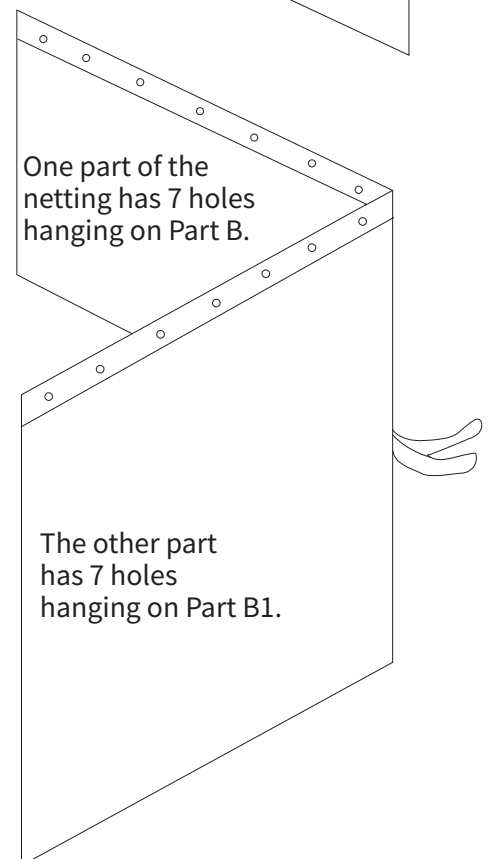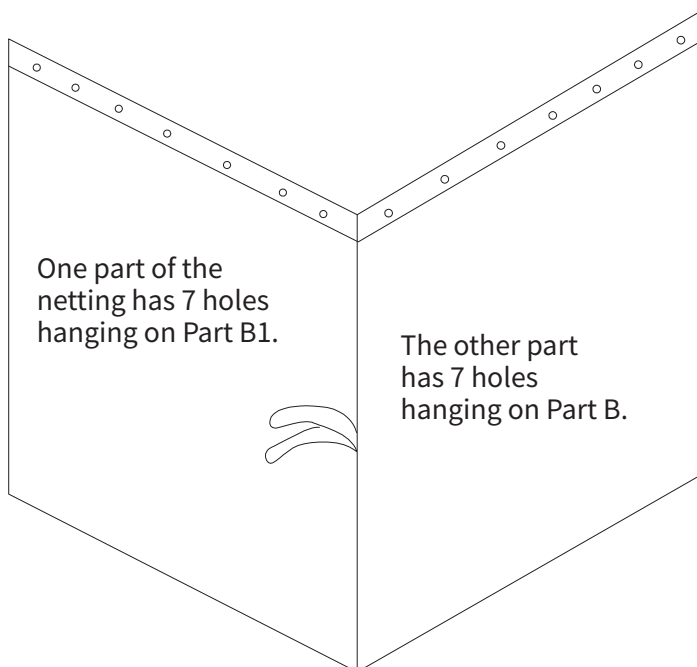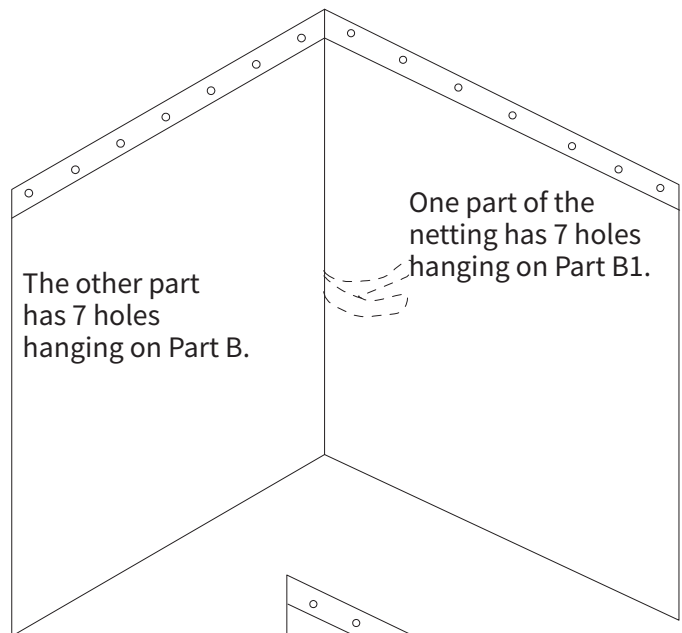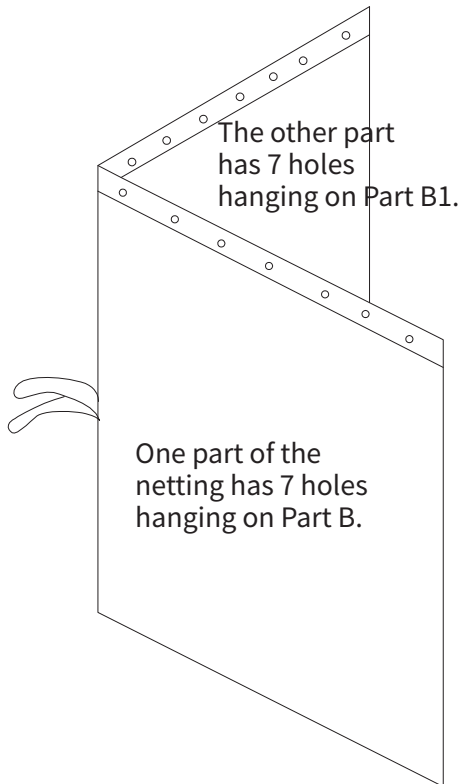


ASSEMBLY INSTRUCTIONS



22

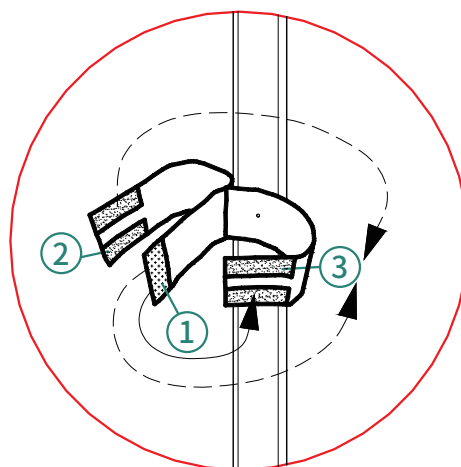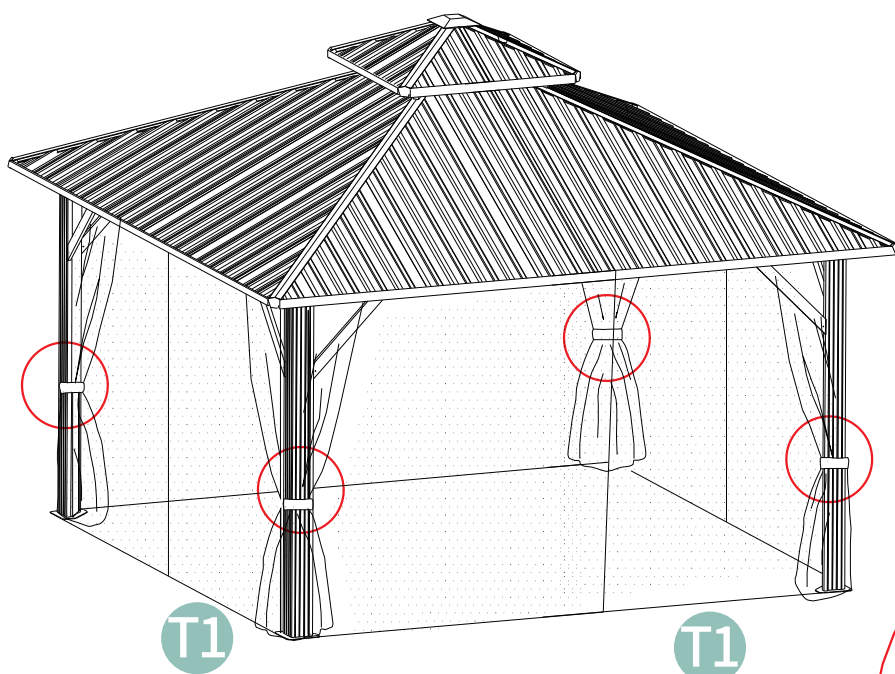

Note:
Attach 1 to 2 to secure parts T1 and T (curtains) together.
Attach 1 to 3 to secure the back curtain (T).
Attach 1 to 3 to secure the front curtain (T1).

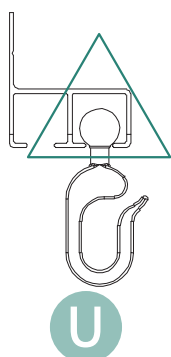

Pay attention to the sidewall netting's installation position.

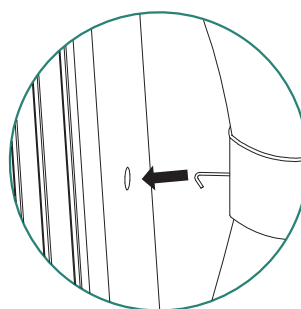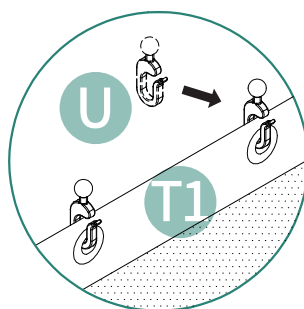


Hang the hook attached to the netting on Part A.

ASSEMBLY INSTRUCTIONS


23



⑨12pcs




⑩12pcs


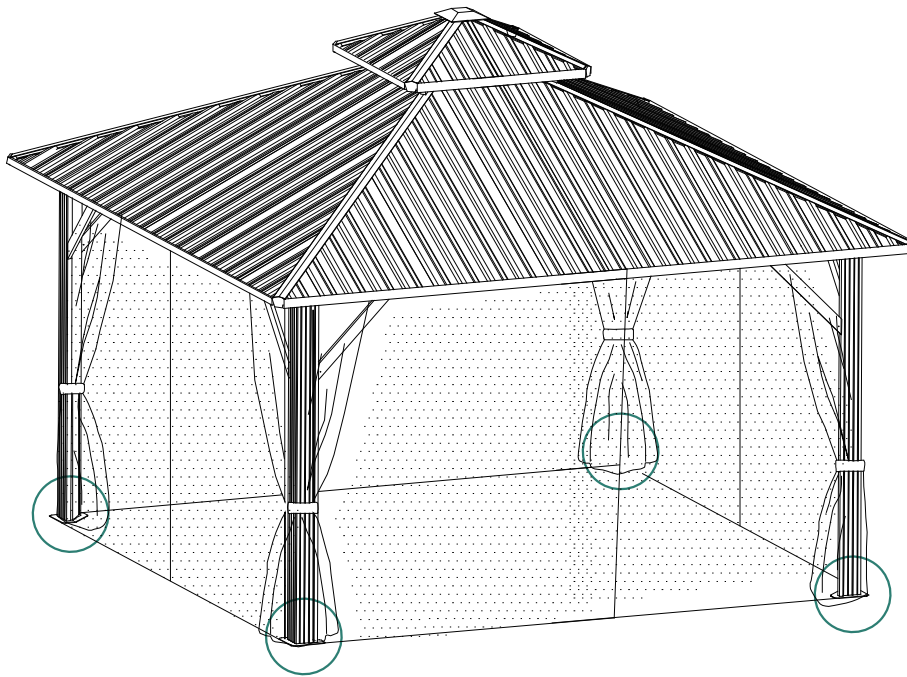


To improve wind resistance, **be sure to complete this installation step. If expansion screws or ground nails are not installed, strong winds may topple the gazebo.**


Expansion screws are included in the package while ground nails are not provided.

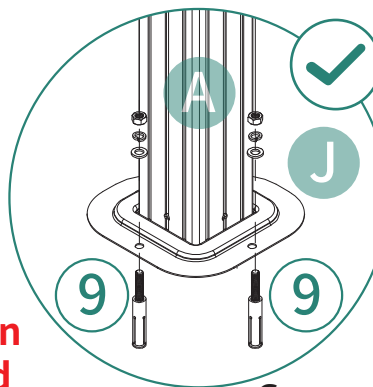


Cement surfaces

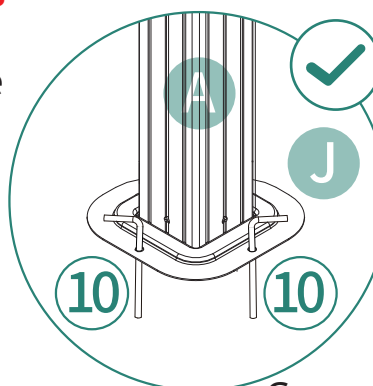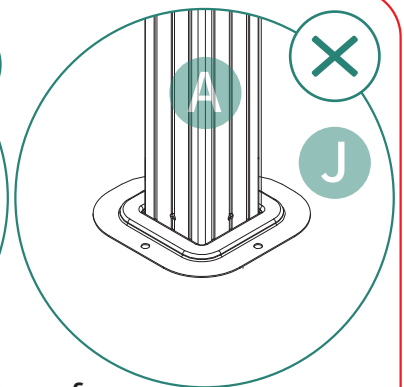

Grassy surfaces

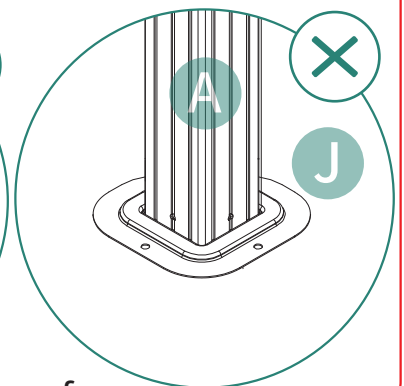

24

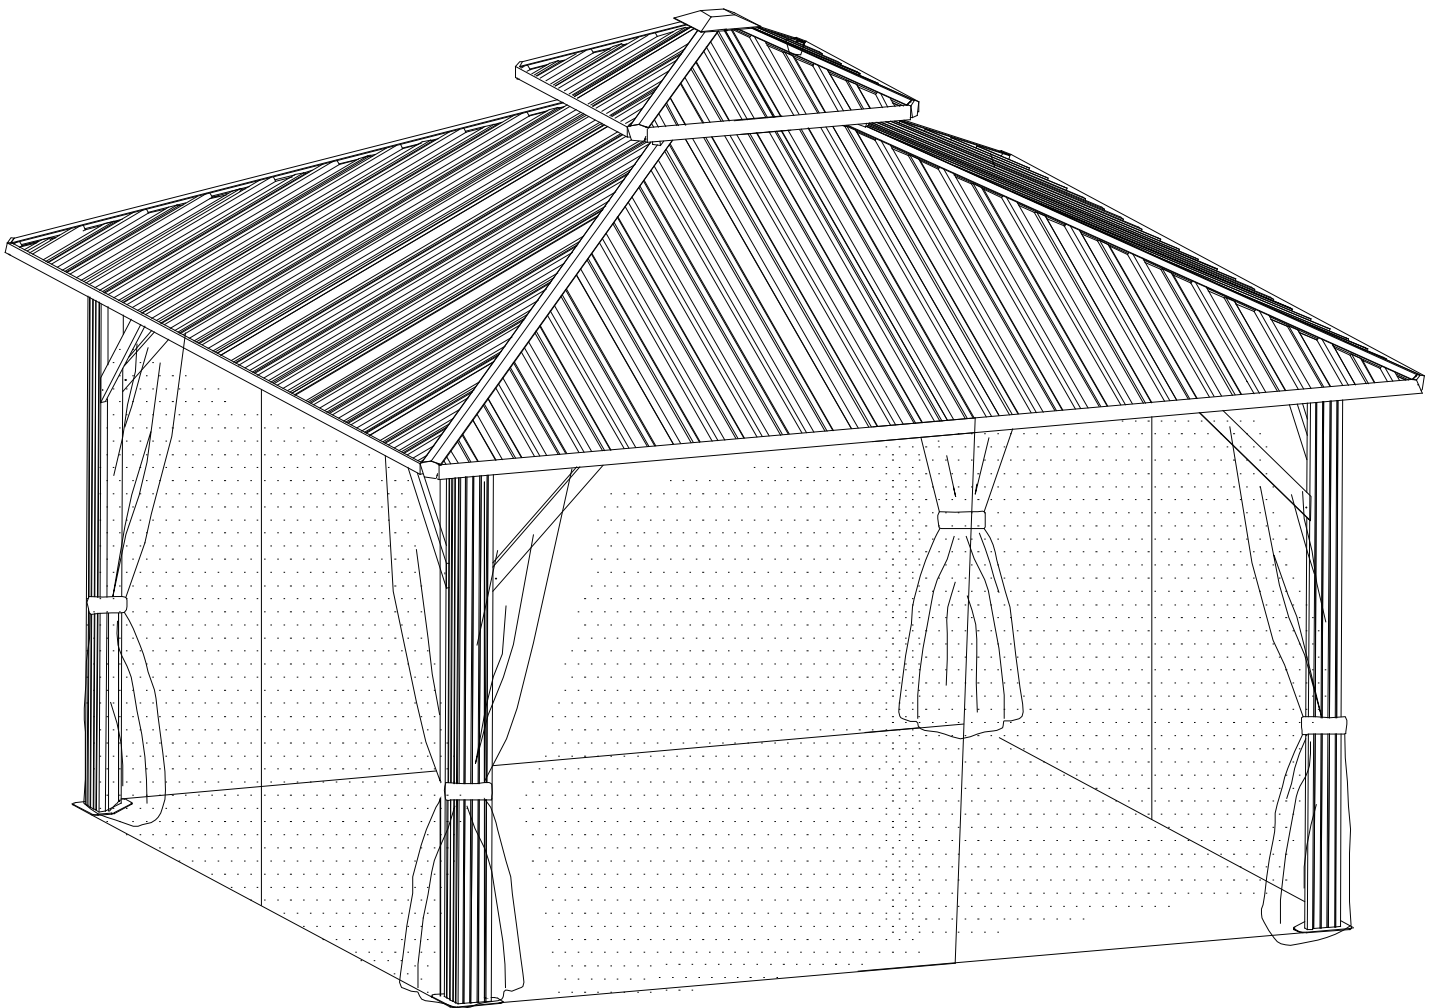

Installation Completed