



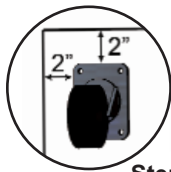


C74400 ASSEMBLY INSTRUCTIONS

Parts:

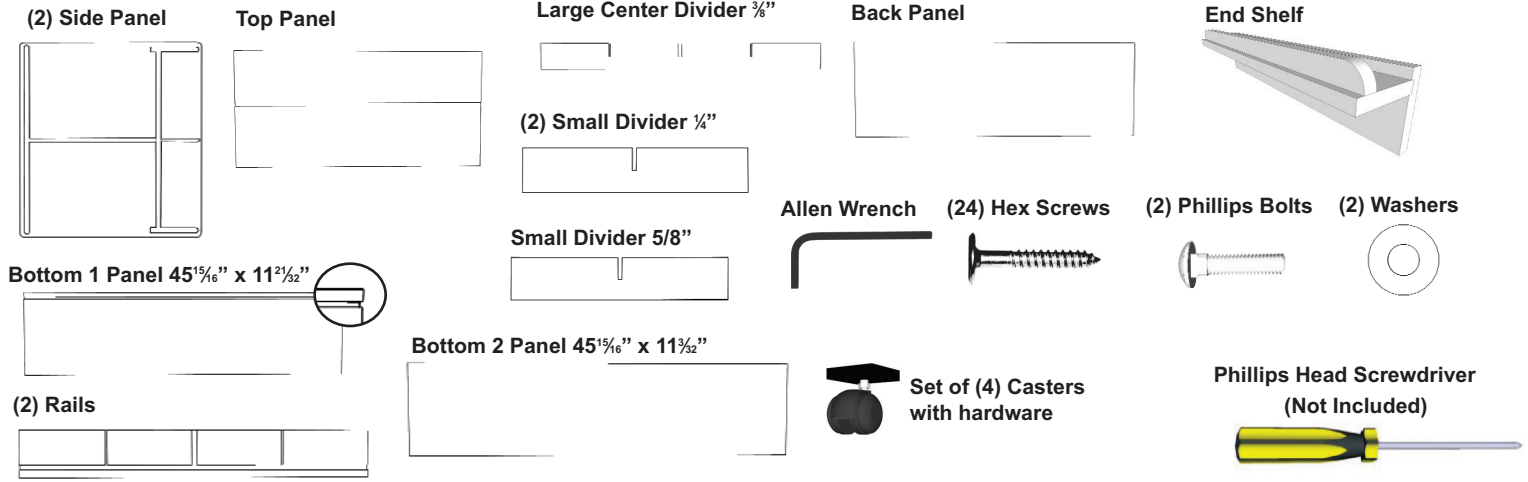


Step 1: Using phillips head screwdriver (not included) and hardware provided, attach casters to **bottom piece** as shown. See instructions included with caster set.

Step 2: Insert **Small Divider 3/8"** into mortises of **Rails**. Insert hex screws into pre-drilled holes in **Rails**. Tighten down halfway.

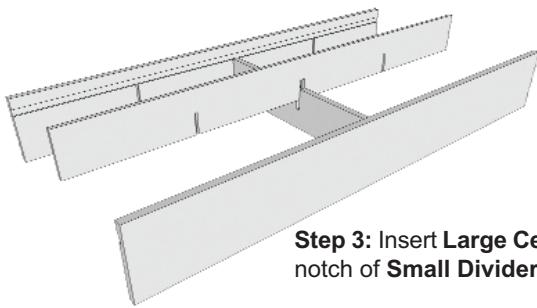


Step 3: Insert **Large Center Divider 3/8"** into notch of **Small Divider 5/8"**.

Step 4: Slide **Top Panel** into long groove of **Rails**. Insert hex screws into pre-drilled holes in **Rails**. Tighten down halfway.

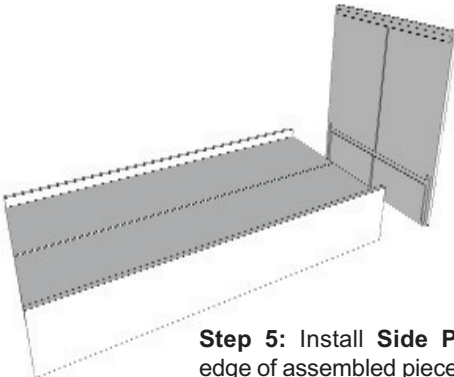

Step 5: Install **Side Panel** so that edge of assembled pieces fit firmly into mortises and back grooves. Insert hex screws into pre-drilled holes in **Side Panel**. Tighten down halfway.

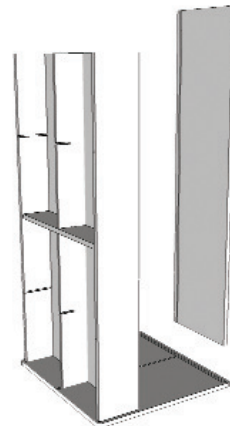


Step 6: Align back grooves in **Bottom 1 Panel** with the back grooves in **Side Panel**. Insert hex screws into pre-drilled holes in **Side Panel**. Tighten down halfway.


**For assistance, call: Customer Service
1-800-247-8465**




C74400 ASSEMBLY INSTRUCTIONS

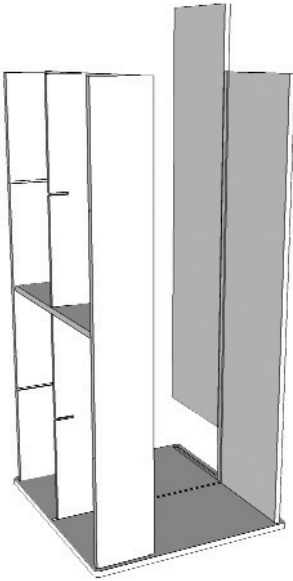


Step 7: Insert **Bottom 2 Panel** into mortises of **Side Panel**. Insert hex screws into pre-drilled holes in **Side Panel**. Tighten down halfway.

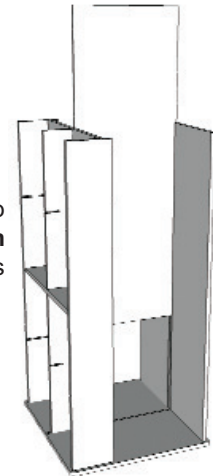


Step 8: Insert side of **Back Panel** into back grooves of **Top Panel** and **Bottom 1 Panel**. Slide down until edge rests firmly in back groove of **Side Panel**.

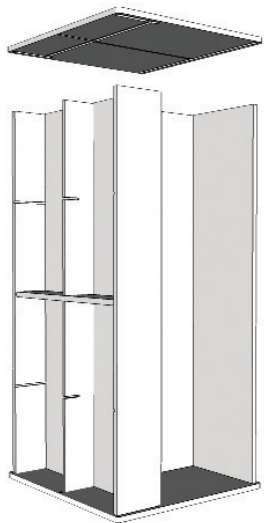


Step 9: Install remaining **Side Panel** so that edge of assembled pieces fit firmly into mortises and back grooves. Insert hex screws into pre-drilled holes in **Side Panel**. Tighten down halfway.

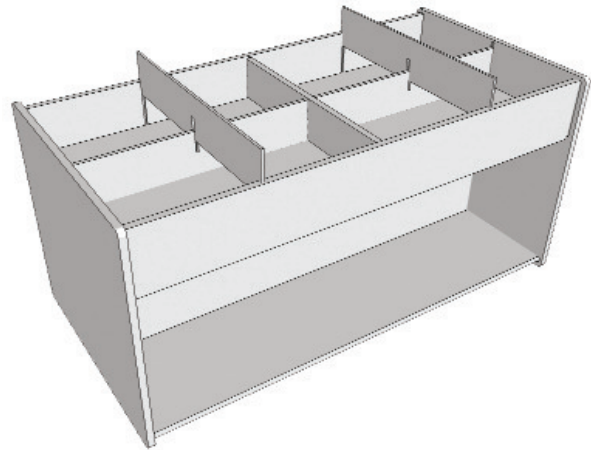

Step 10: Rotate unit so that it rests on **Bottom Panel** and edges of **Side Panels**. Insert **Small Divider 1/4"** into center mortise of the **Center Divider** and **Rails**. Make sure the notch of the **Small Divider 1/4"** intersects with notch of **Center Divider**. Repeat for remaining **Small Divider 1/4"**.

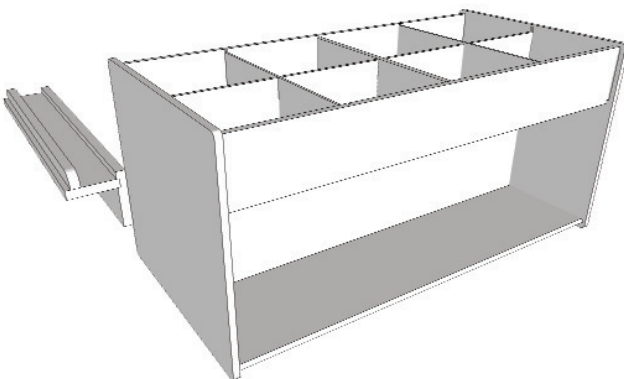

Step 11: Install **End Shelf** onto the **Side Panel**. Insert **Bolt** with **Washer** into each pre-drilled holes in **Side Panel**. Tighten down halfway.

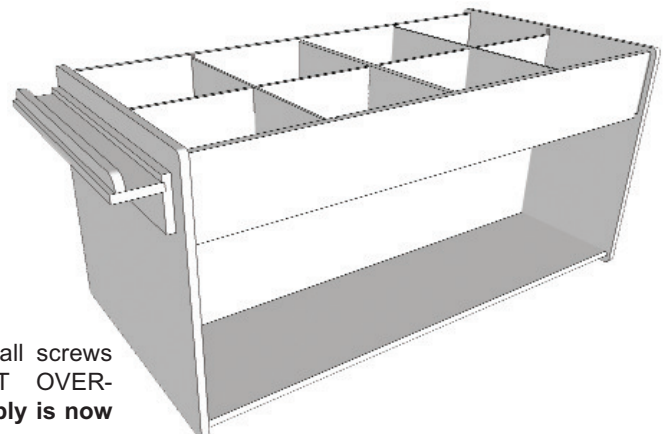

Step 12: Tighten all screws snugly. **DO NOT OVERTIGHTEN**. **Assembly is now complete.**