
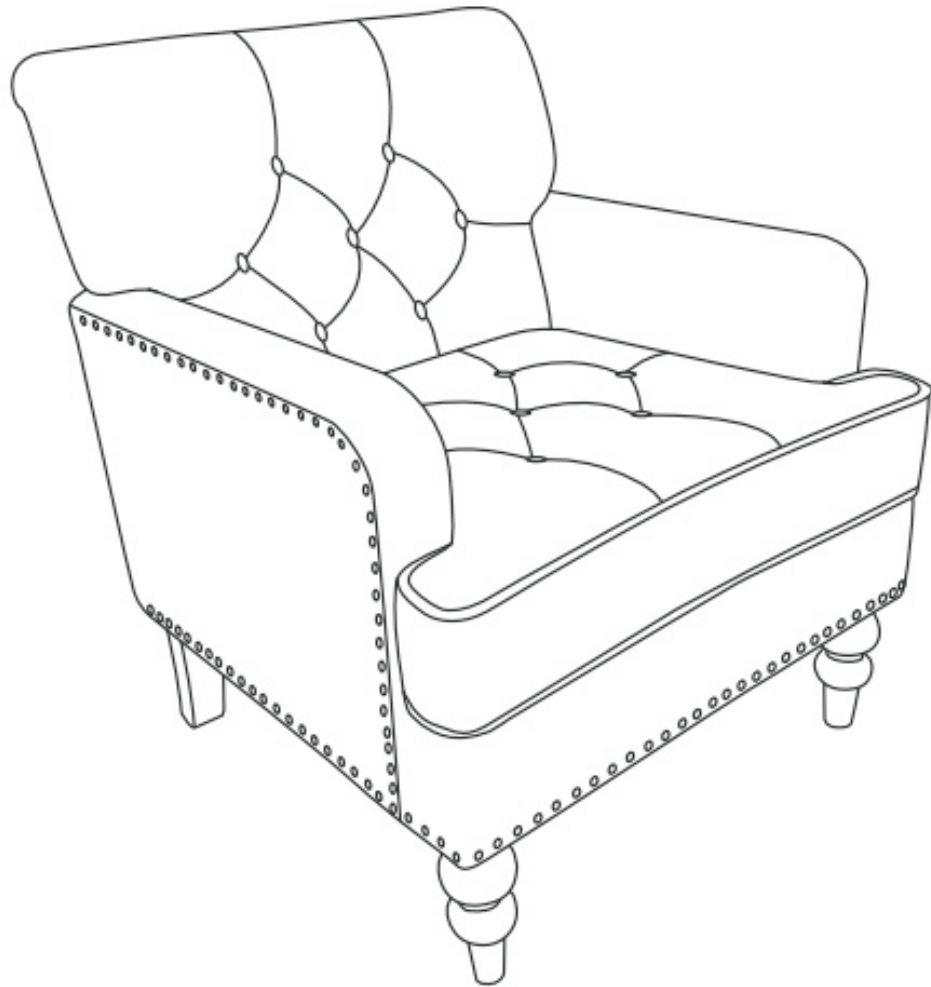
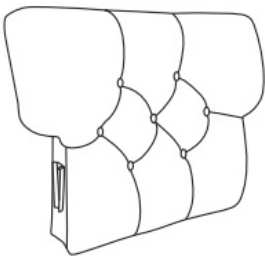
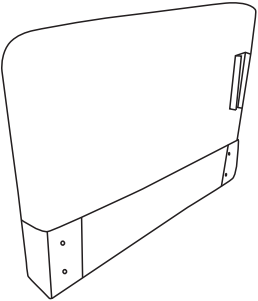
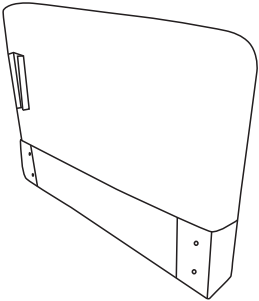
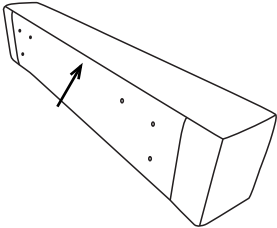

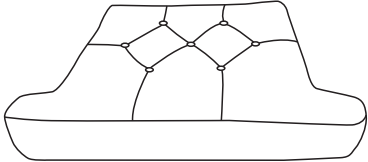
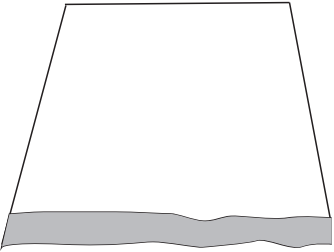
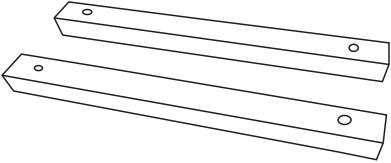


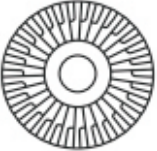






ACCENT CHAIR

SQ-22066

Parts List(Unit:pcs)


<p>A</p>  <p>1PC</p>	<p>B</p>  <p>1PC</p>	<p>C</p>  <p>1PC</p>
<p>D</p>  <p>1PC</p>	<p>E</p>  <p>1PC</p>	<p>F</p>  <p>1PC</p>
<p>G</p>  <p>1PC</p>	<p>H</p>  <p>2PCS</p>	<p>I</p>  <p>2PCS</p>
<p>J</p>  <p>2PCS</p>	<p>K</p>  <p>4PCS</p>	

Parts List(Unit:pcs)
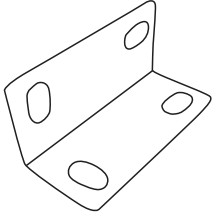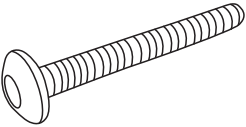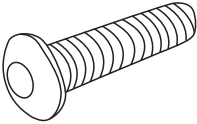
<div>L</div> <div></div> <div>4PCS</div>	<div>M</div> <div><div>M6x45mm</div></div> <div>5PCS</div>	<div>N</div> <div><div>M6x25mm</div></div> <div>14PCS</div>
<div>P</div> <div><div>M6x18mm</div></div> <div>5PCS</div>	<div>Q</div> <div></div> <div>5PCS</div>	<div>R</div> <div></div> <div>1PC</div>


Installation Steps

STEP 1

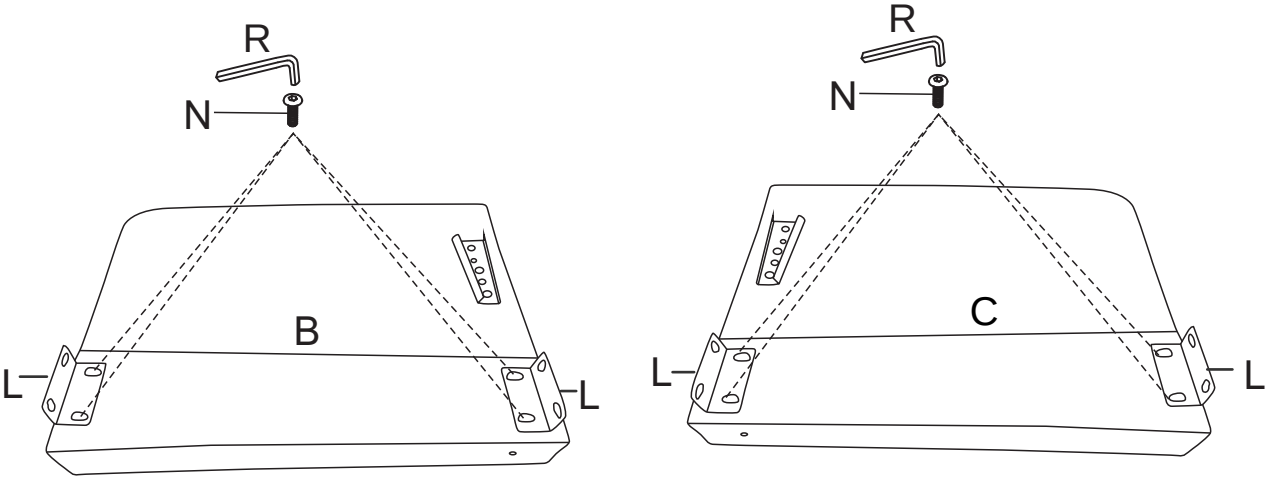

Notice: Tighten the screws to 80% is ok


STEP 2

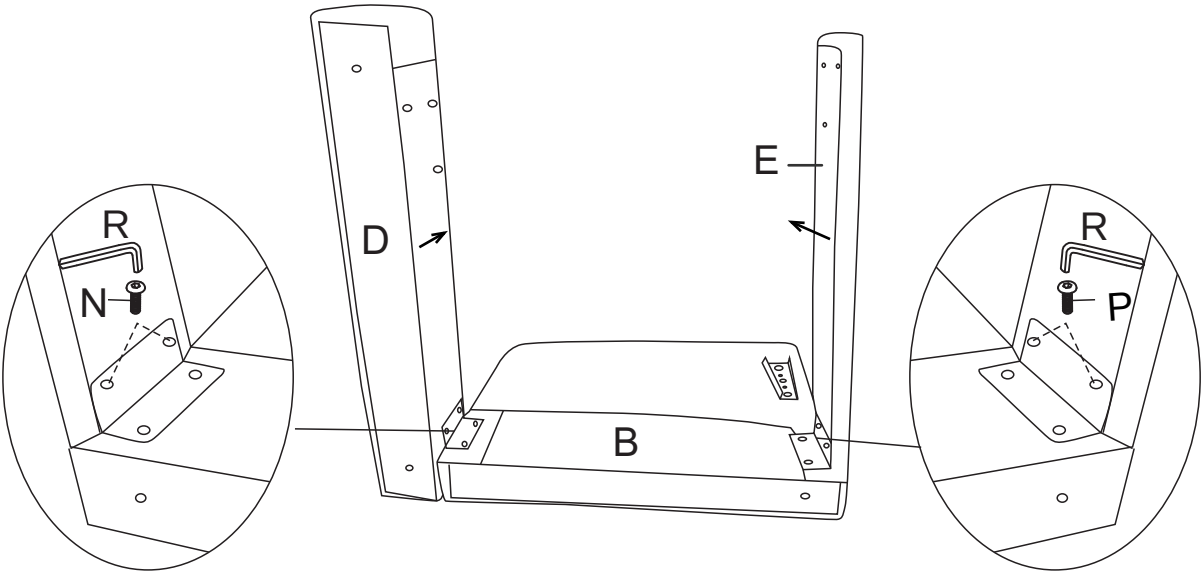

Notice: Tighten the screws to 80% is ok


Installation Steps

STEP 3

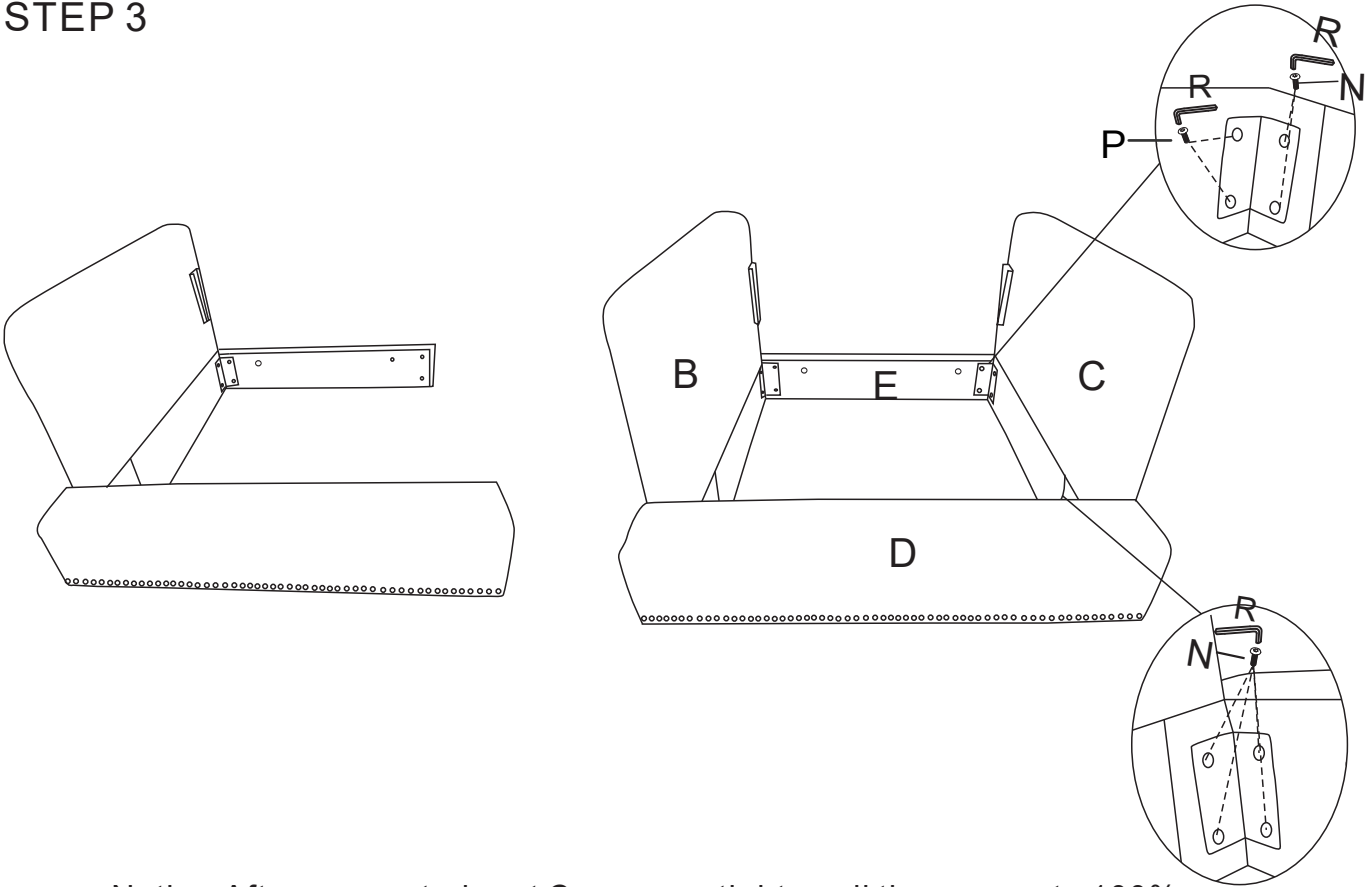


Notice: After connected part C, you can tighten all the screws to 100%

STEP 4

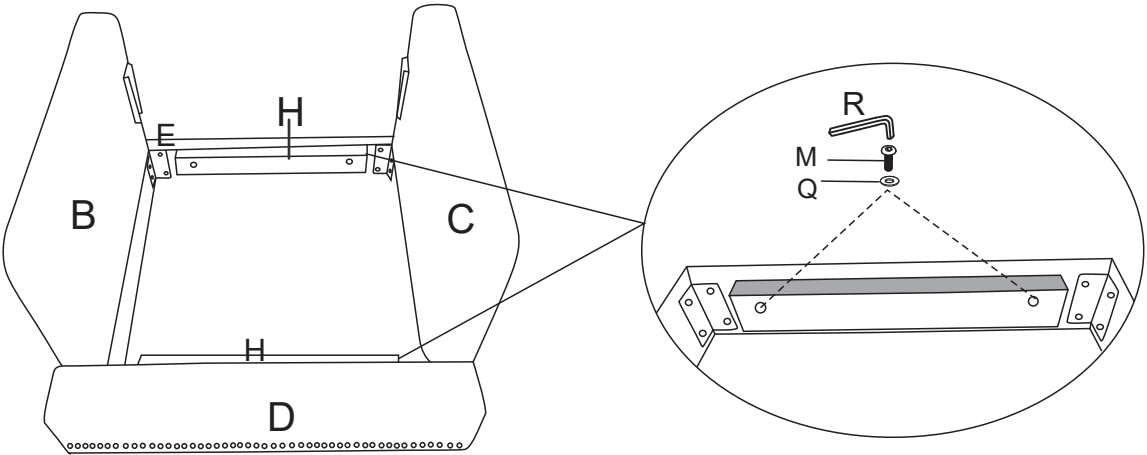


Installation Steps

STEP 5

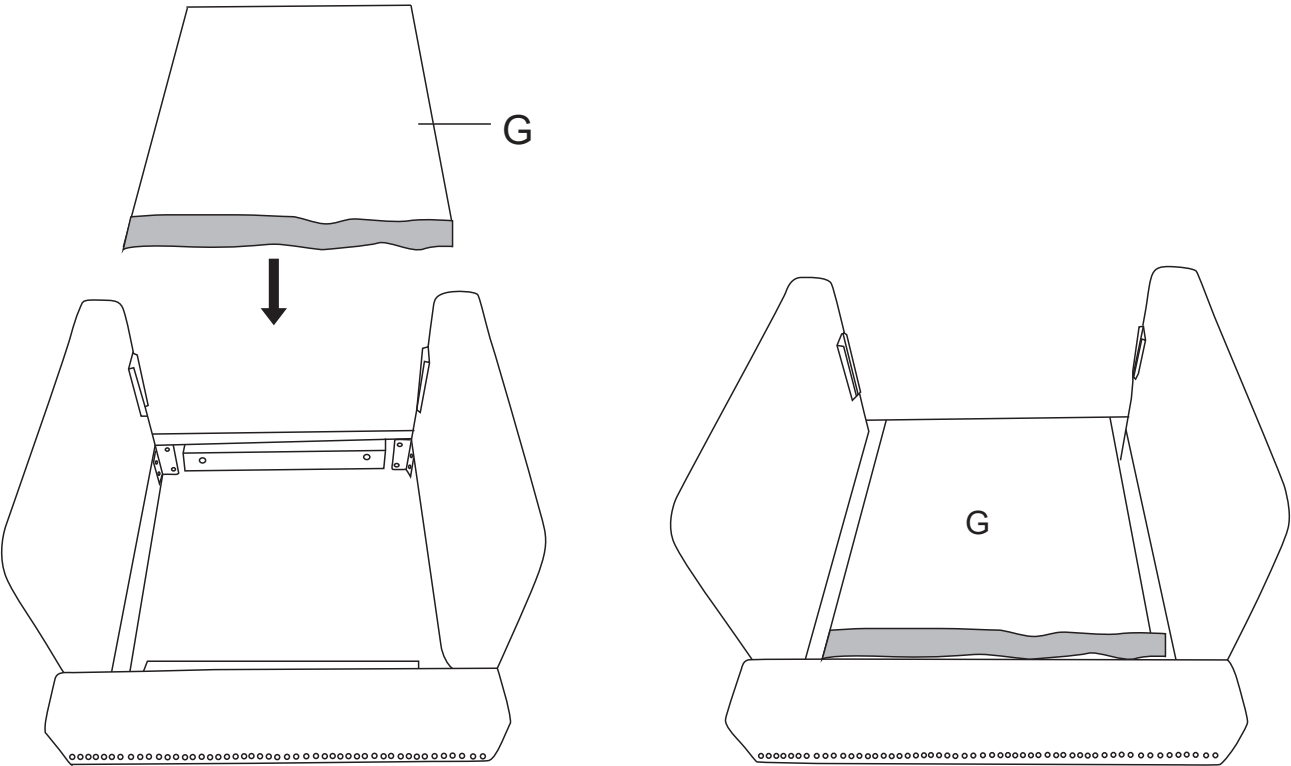


STEP 6

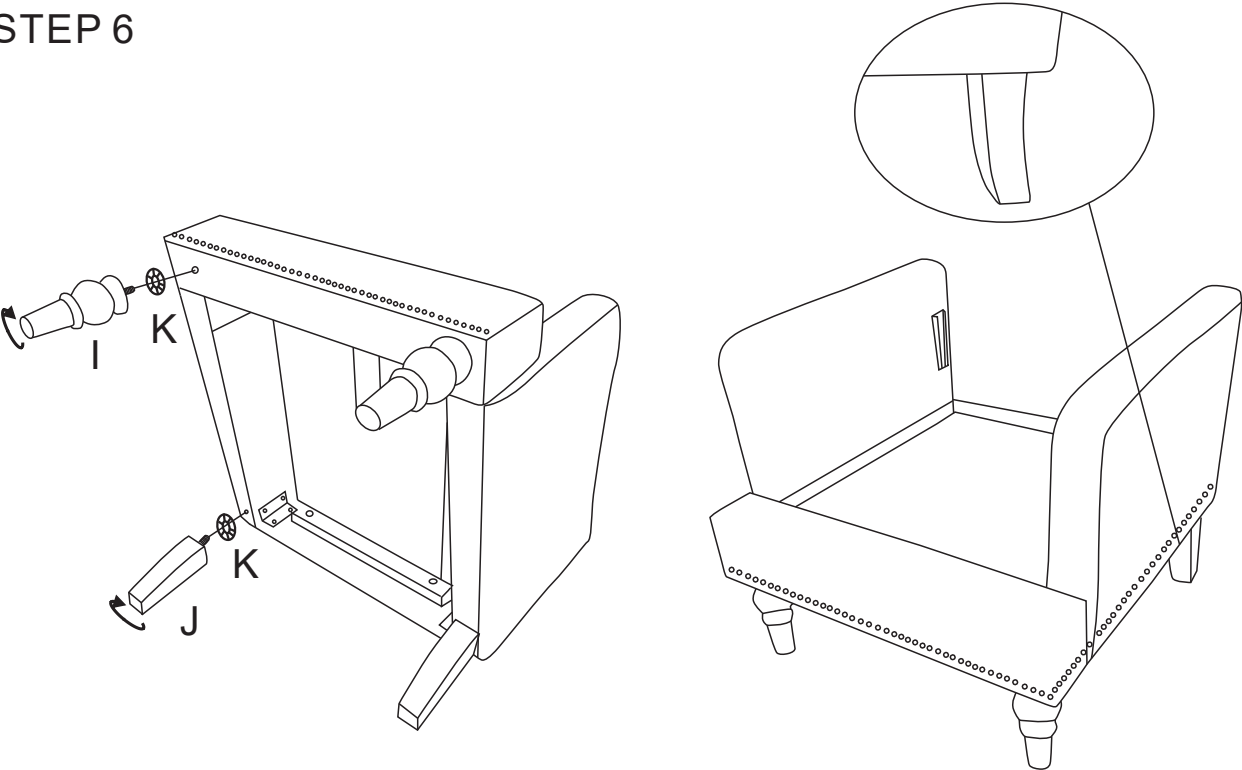

Installation Steps

STEP 7

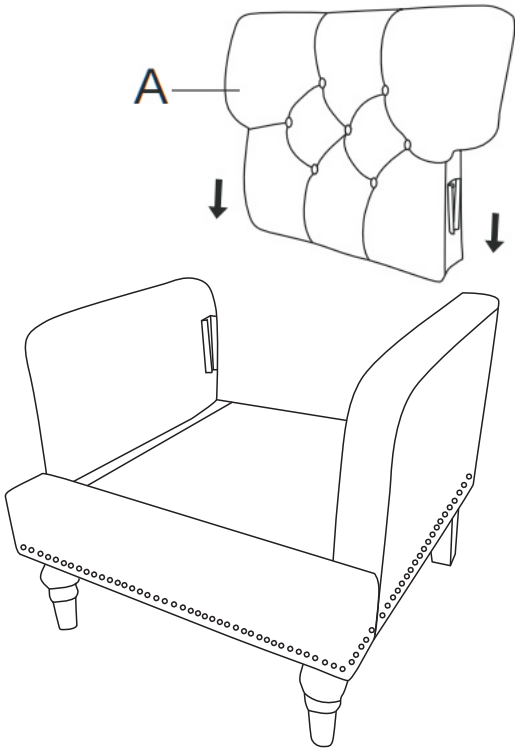

STEP 8

