



Installation & Assembly





Scheme 1

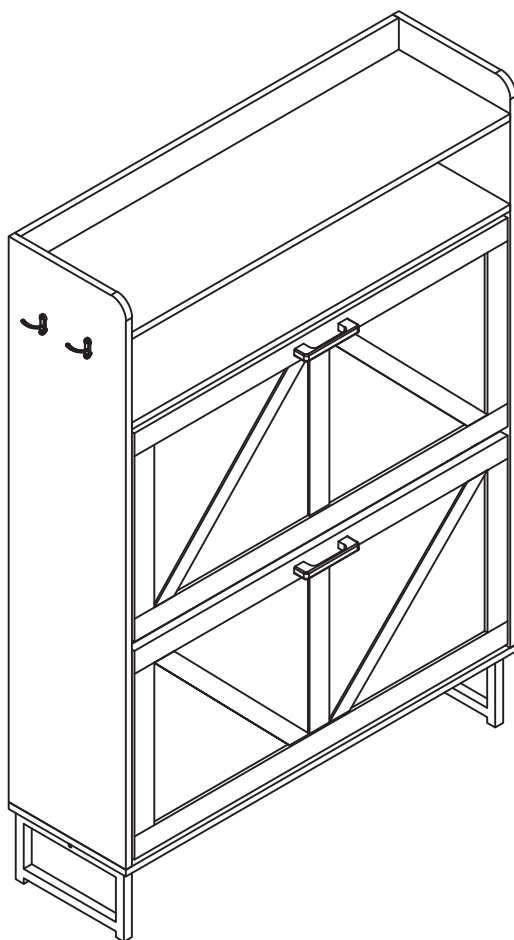

Scheme 2

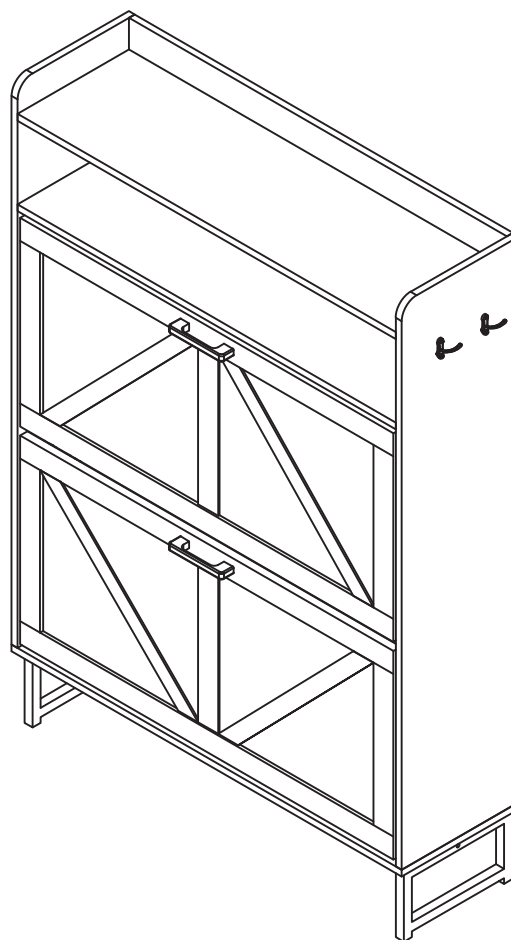

OR

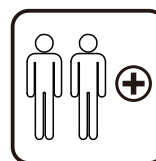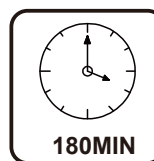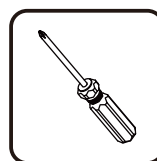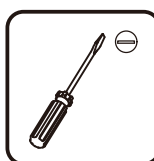

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!




---NEED HELP WITH YOUR FURNITURE?---

If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US?

- ▶ Log in to your account.
- ▶ Go to "Your Orders" and locate your furniture order.
- ▶ Click on "Get Help with Order" to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

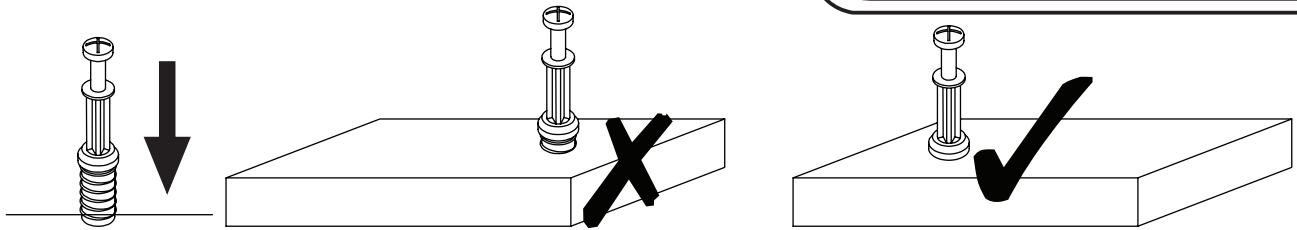


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

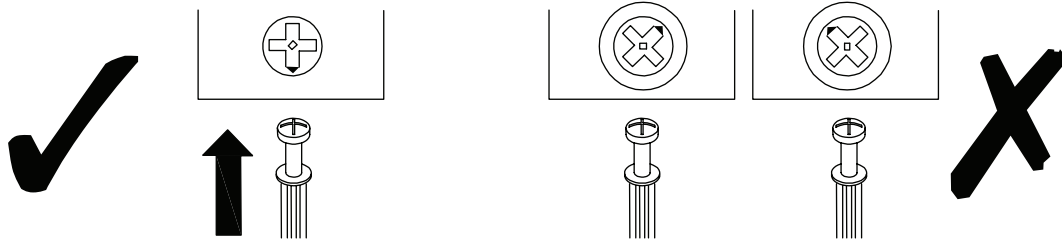





EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




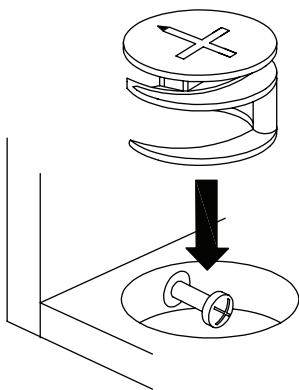



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

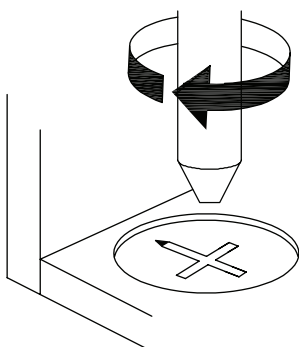



EN_Turn cam lock clockwise to tighten.

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x1	


NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x4	
⑭		x2	
⑮	 Hardware Kit	x1	

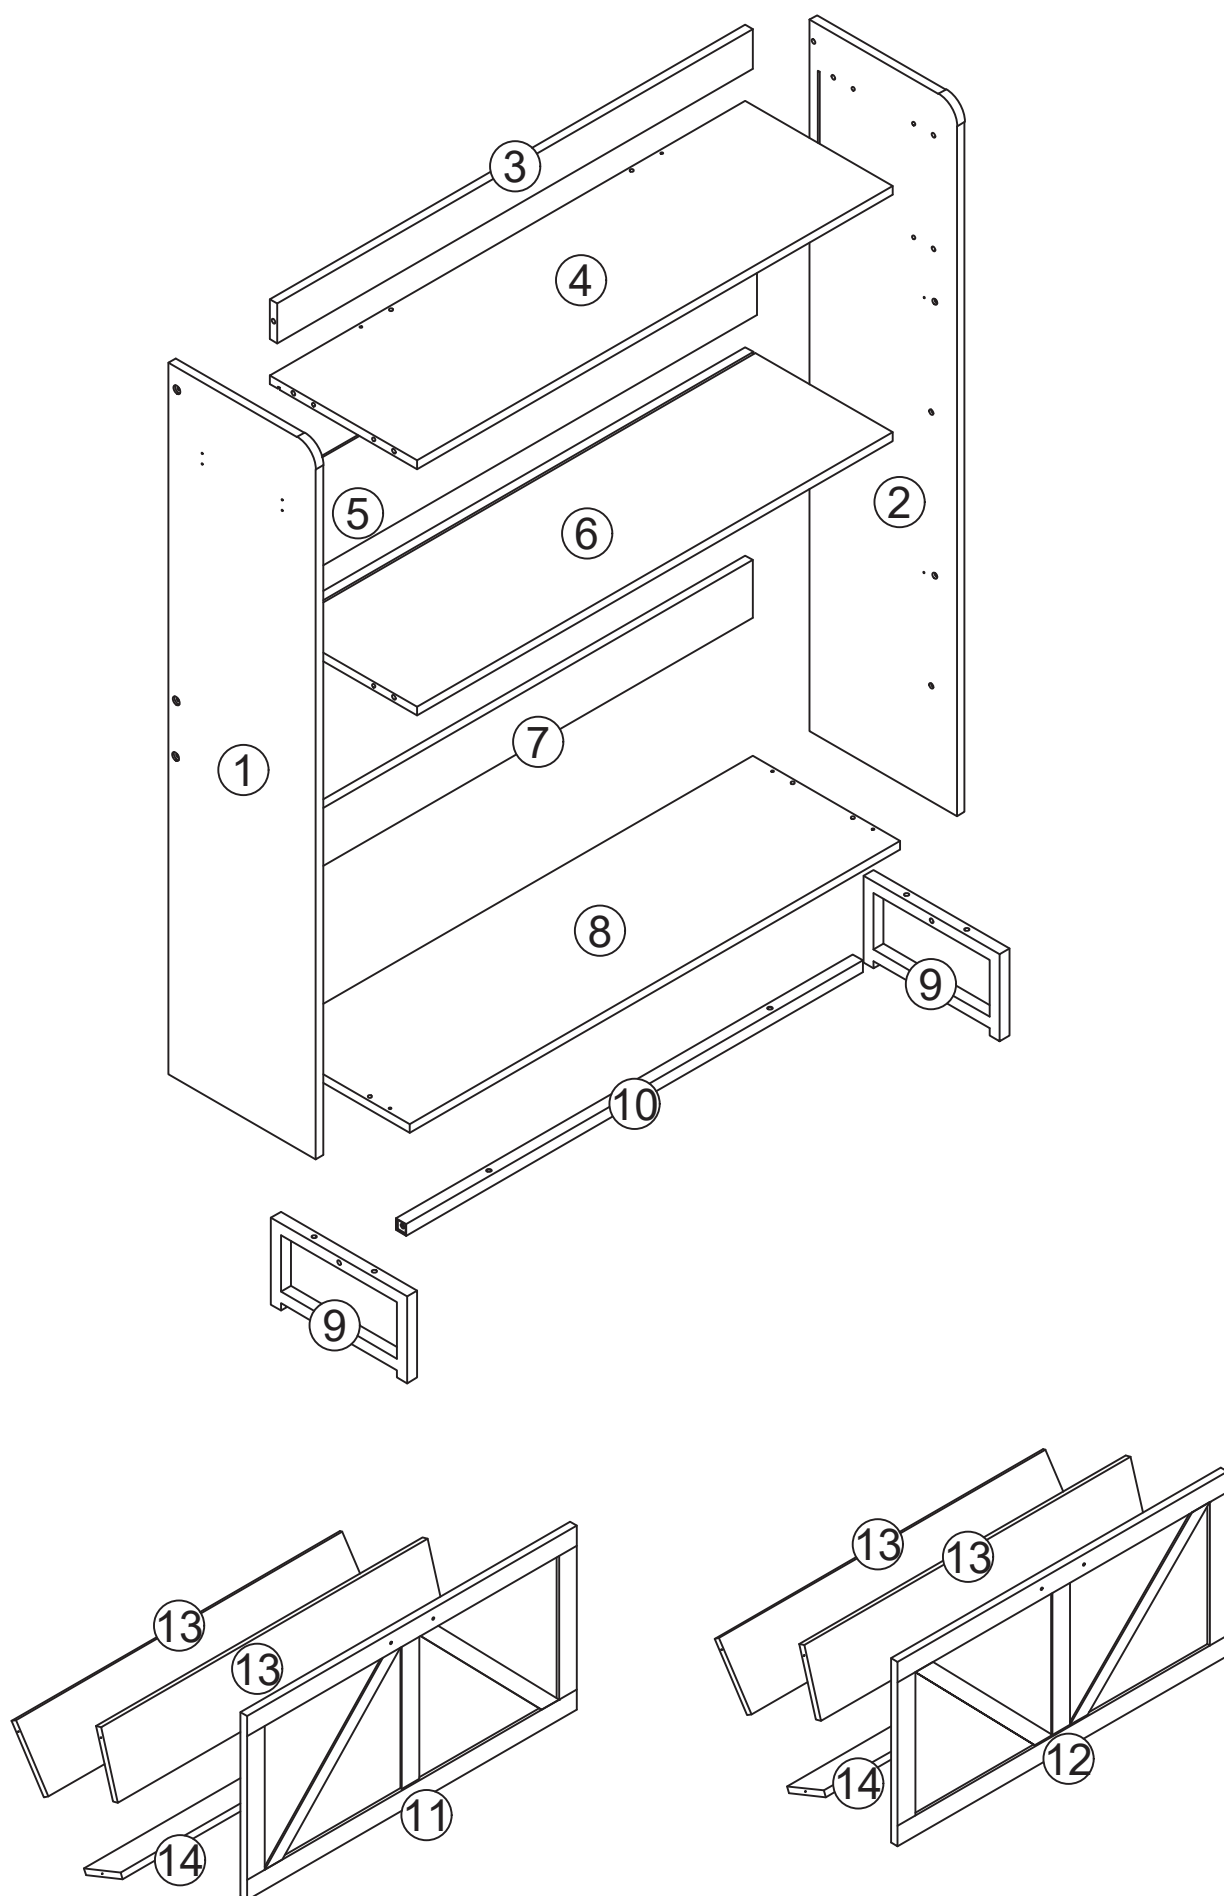

 A x8 Ø6x35mm +1(spare)	 B x8 Ø15x10mm +1(spare)	 C x14 Ø6x30mm +1(spare)	 D x14 Ø4x35mm +1(spare)	 E x24 Ø3.5x12mm +2(spare)	 F x2 Ø4x18mm
 G x4	 H x4	 I x4 Ø6x12mm	 J x2 Ø6x35mm	 K x6 Ø6x25mm	 L x2
 M x2 Ø6x30mm	 N x4 Ø4x12mm	 O x10 +2(spare)	 P x2	 Q x1 M4	 R x2
 S x4 Ø3x16mm	 T x1 M5	 U x4	 V x2	 W x4 Ø4x10mm	

 W x2 Ø4x10mm	 G x2	 ① x1
---	--	--

01

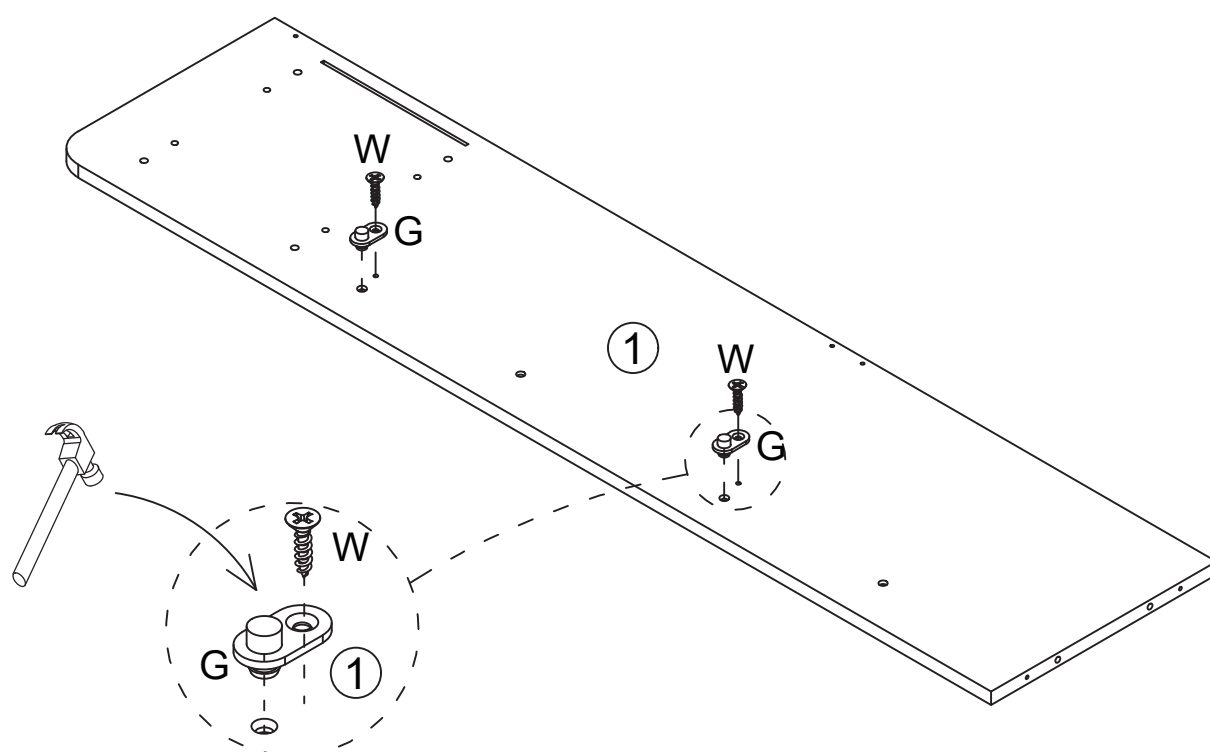


02



W x2
Ø4x10mm

G x2




② x1

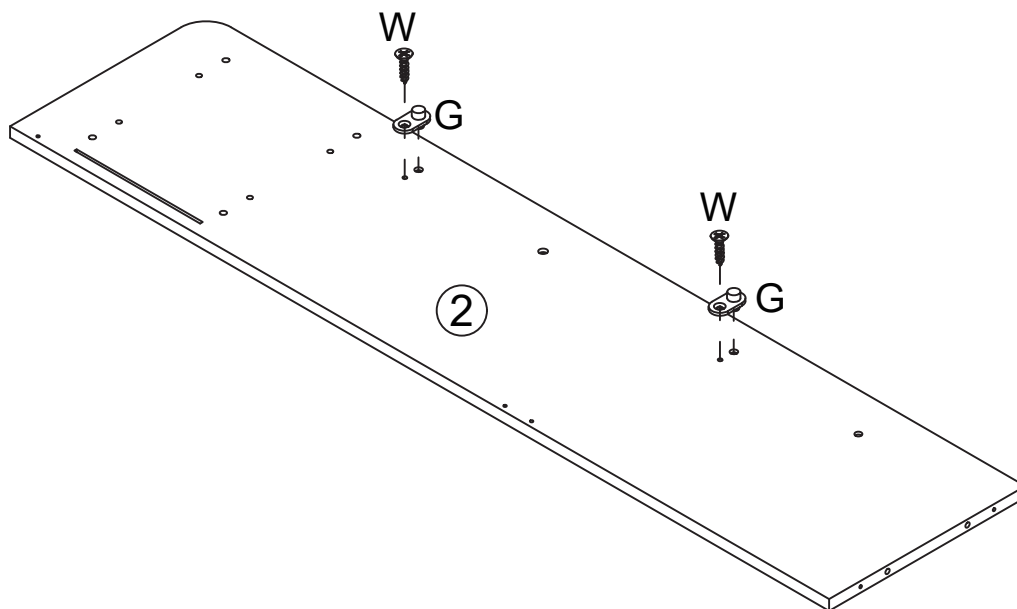

03

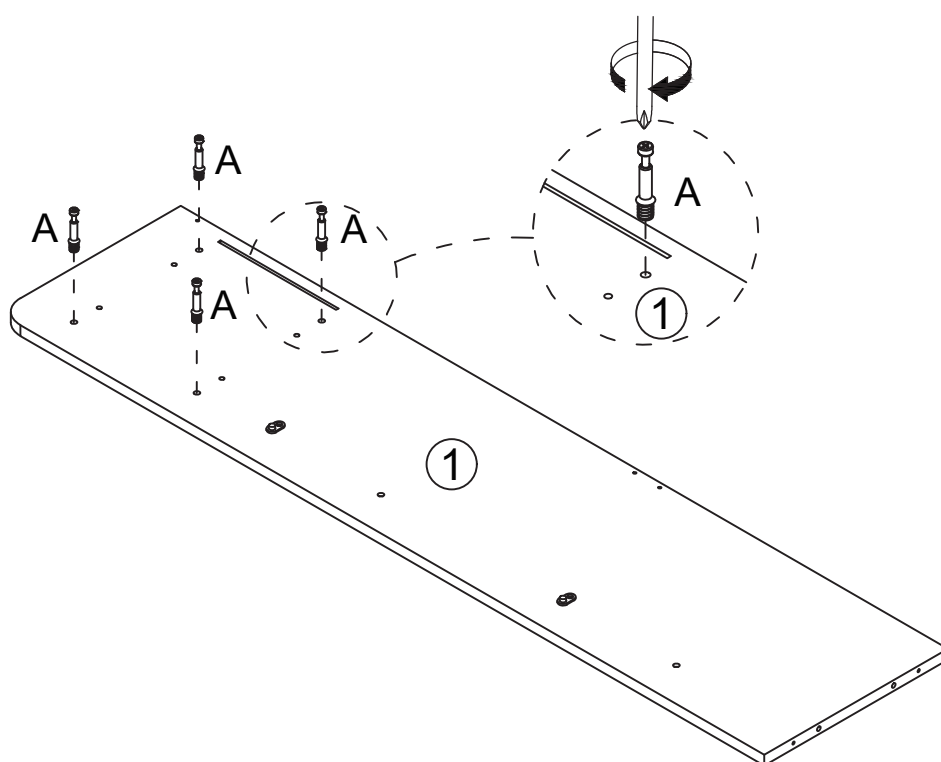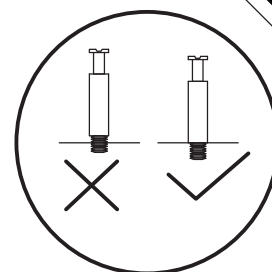A x4
Ø6x35mm

A x4
Ø6x35mm

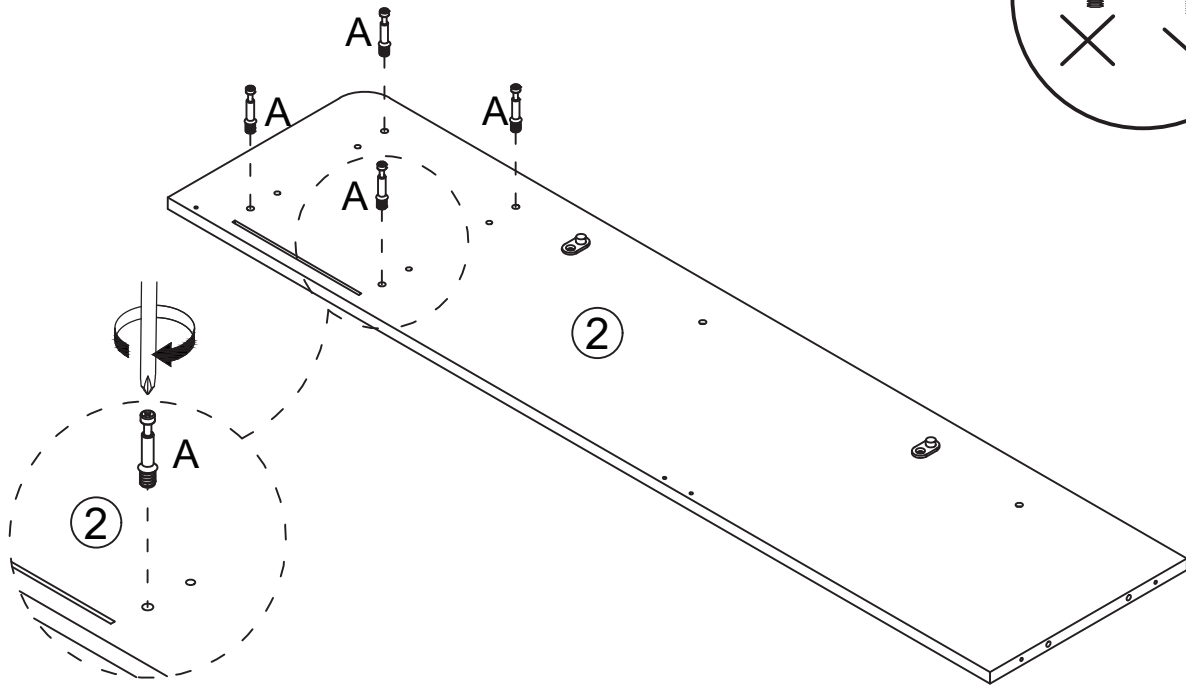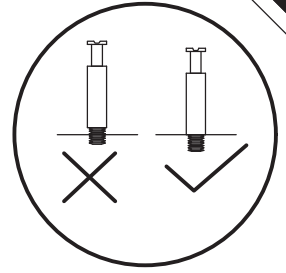


C x2
Ø6x30mm




D x2
Ø4x35mm



3 x1



4 x1

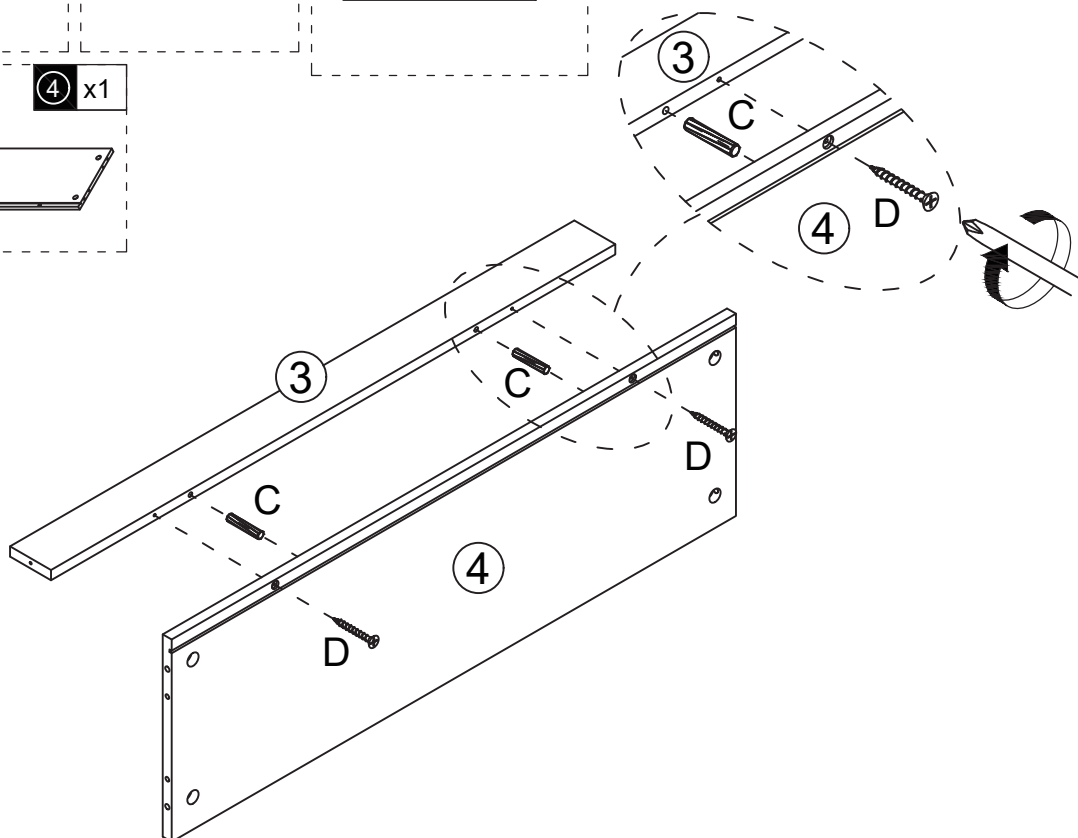

B x4
Ø15x10mmC x4
Ø6x30mmD x3
Ø4x35mmN x4
Ø4x12mm







V x2





⑥ x1





⑦ x1

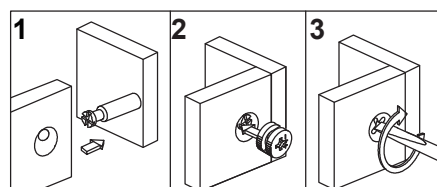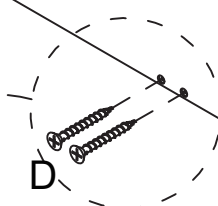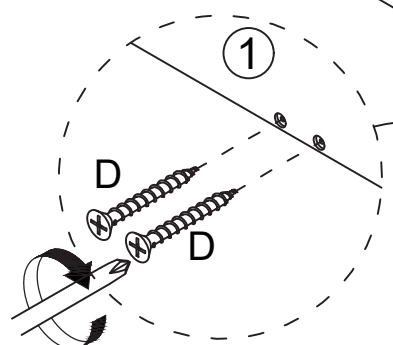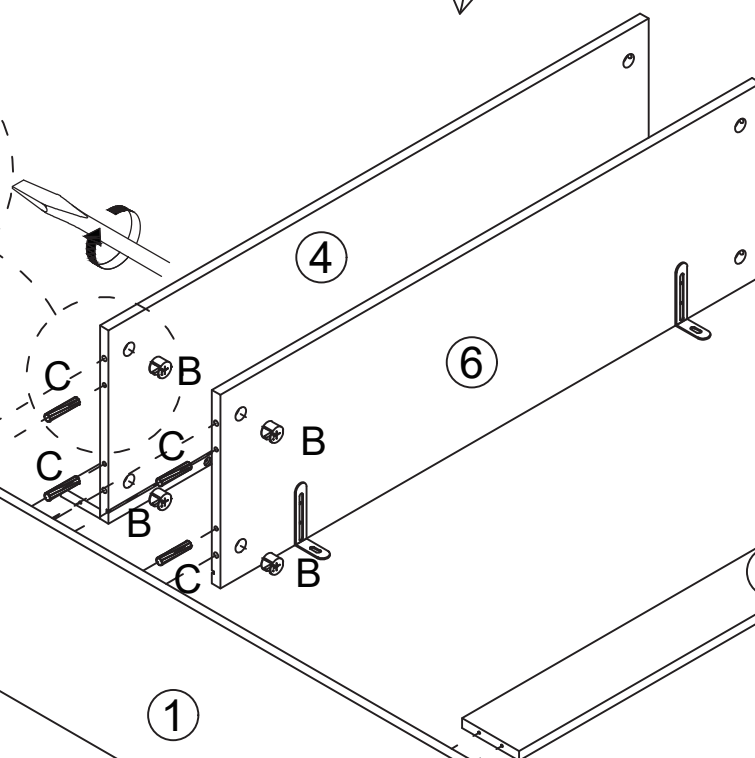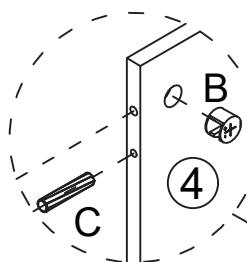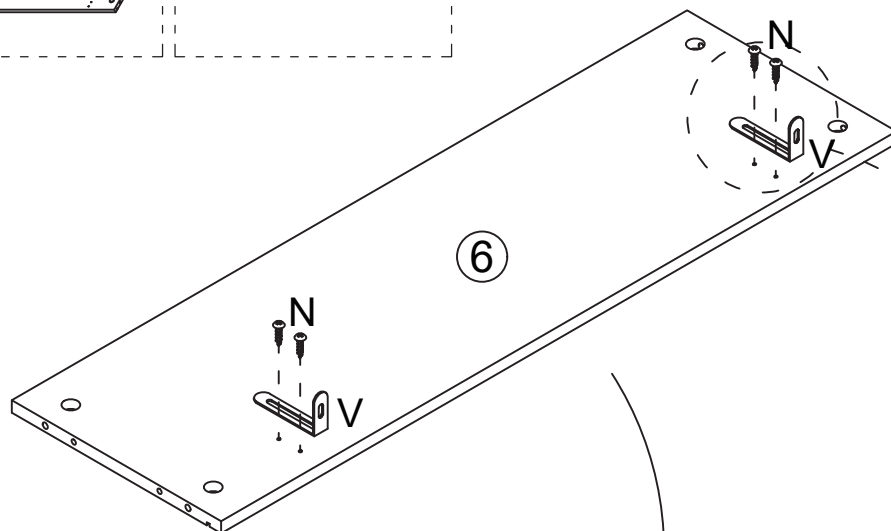


⑤ x1

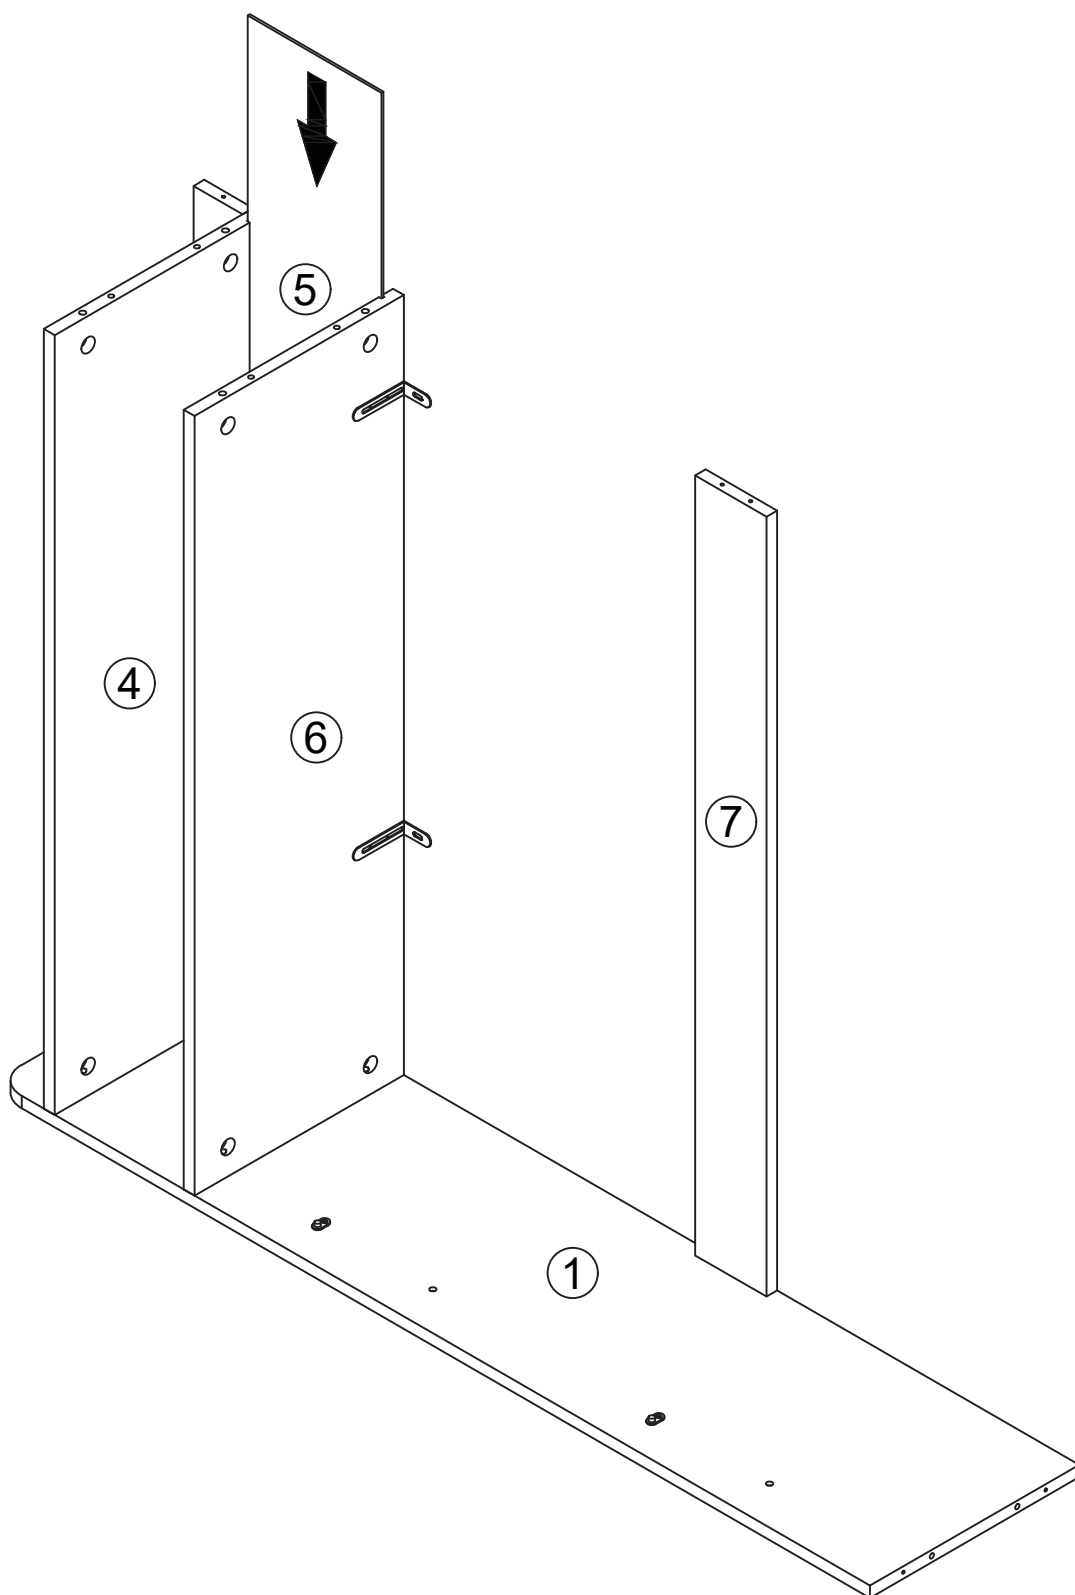

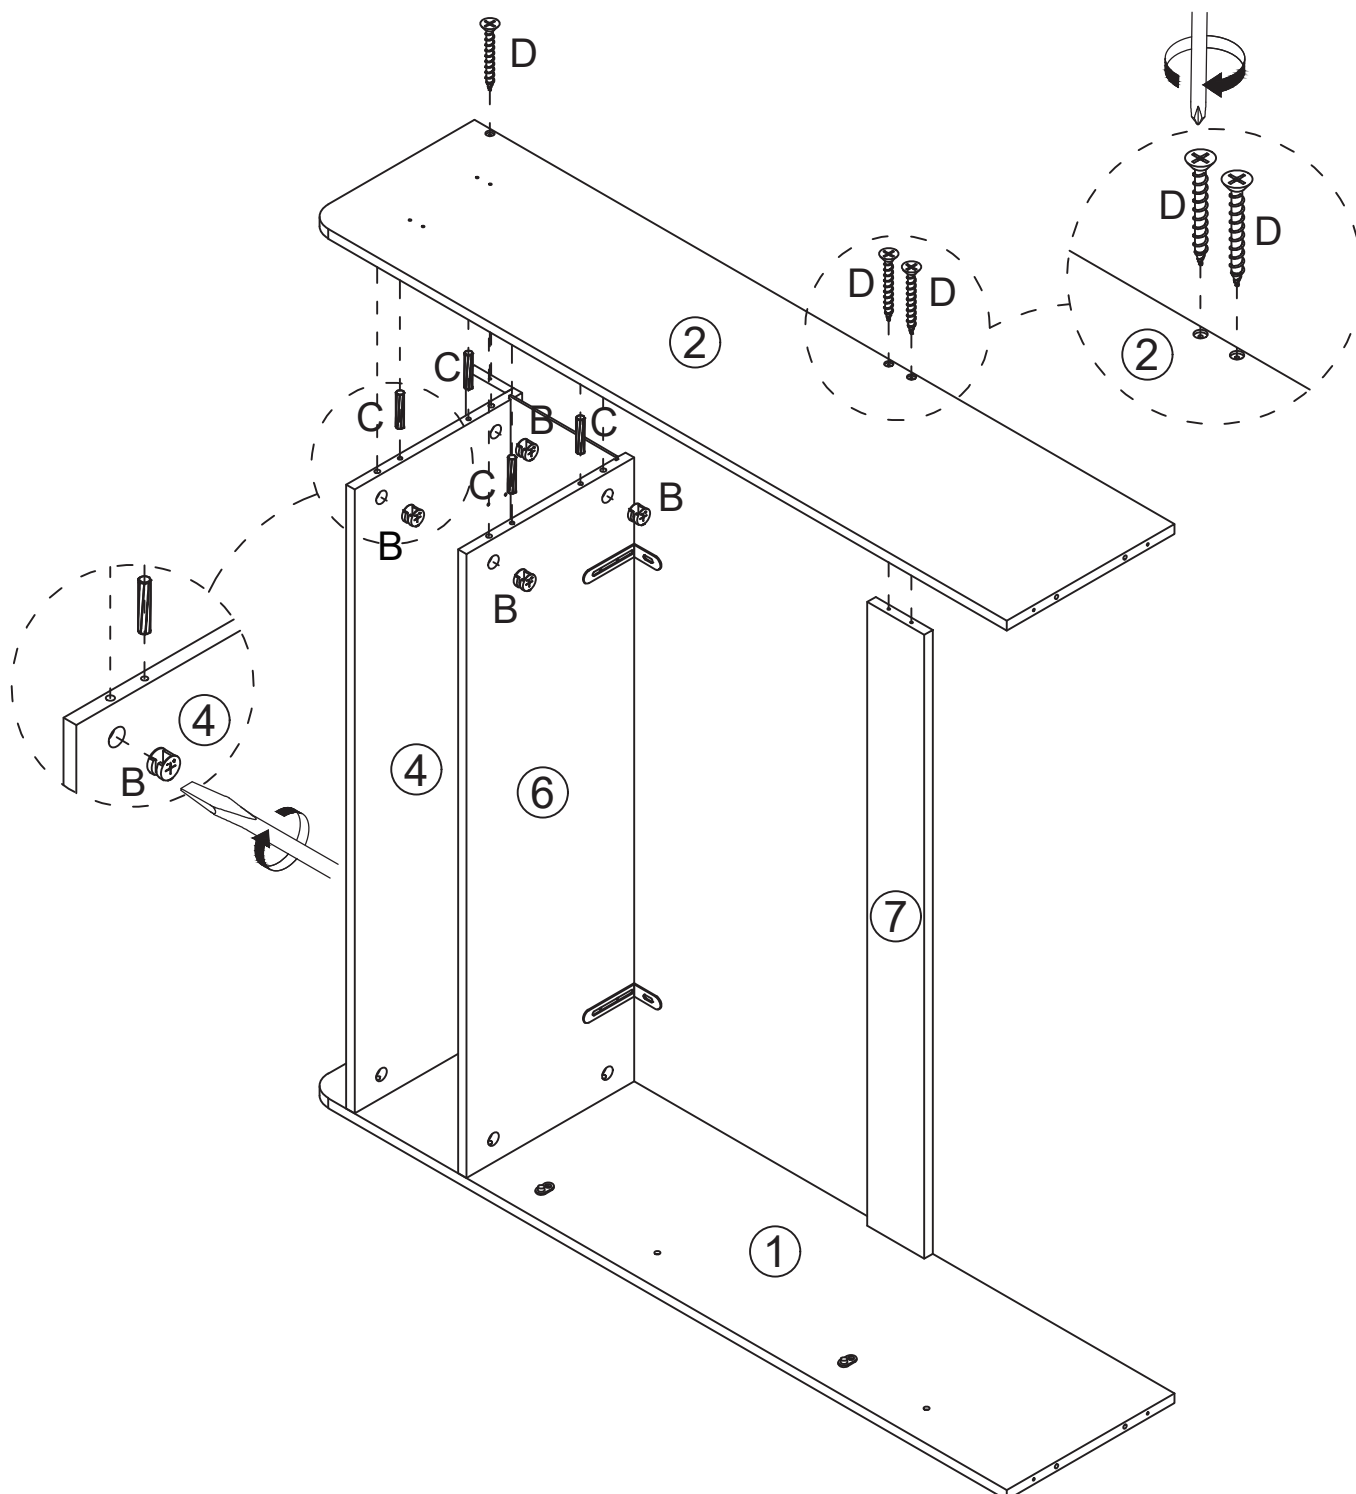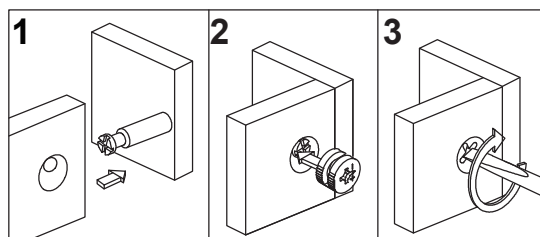B x4
Ø15x10mmC x4
Ø6x30mmD x3
Ø4x35mm


C x4
Ø6x30mmD x4
Ø4x35mm

8 x1

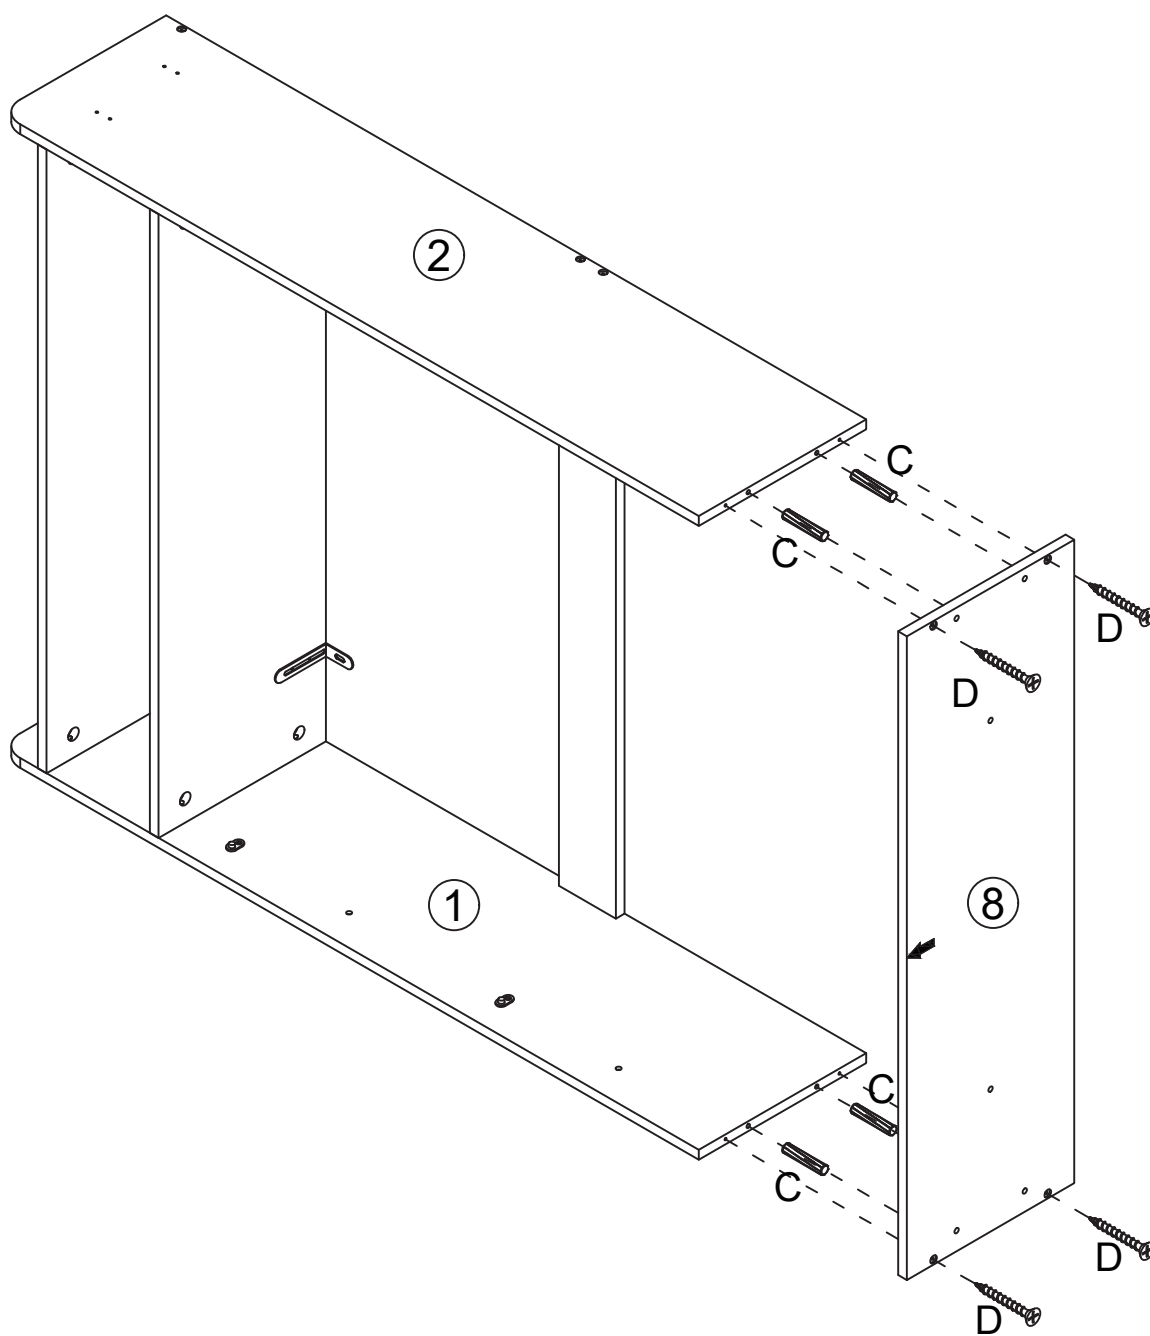


J x2
Ø6x35mmK x6
Ø6x25mmQ x1
M4

9 x2



10 x1

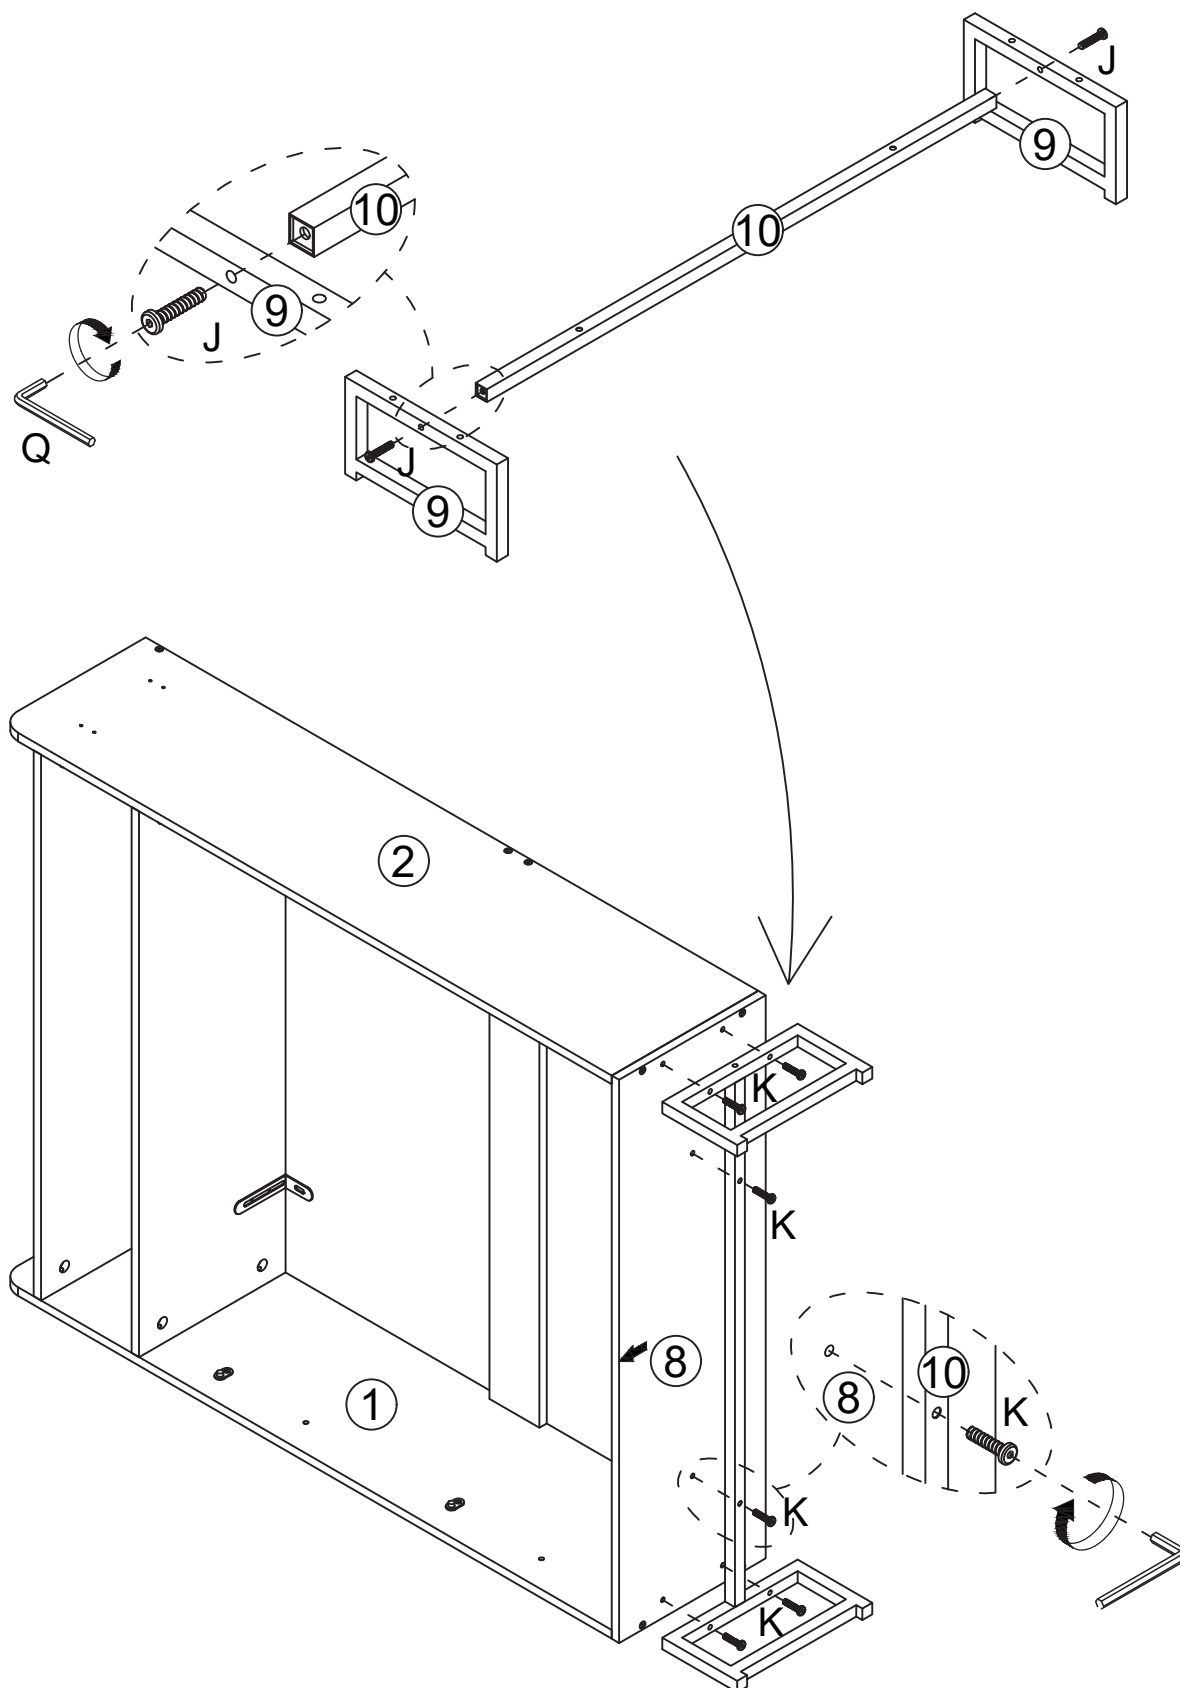

E x12
Ø3.5x12mm


L x2






R x2



11 x1






12 x1

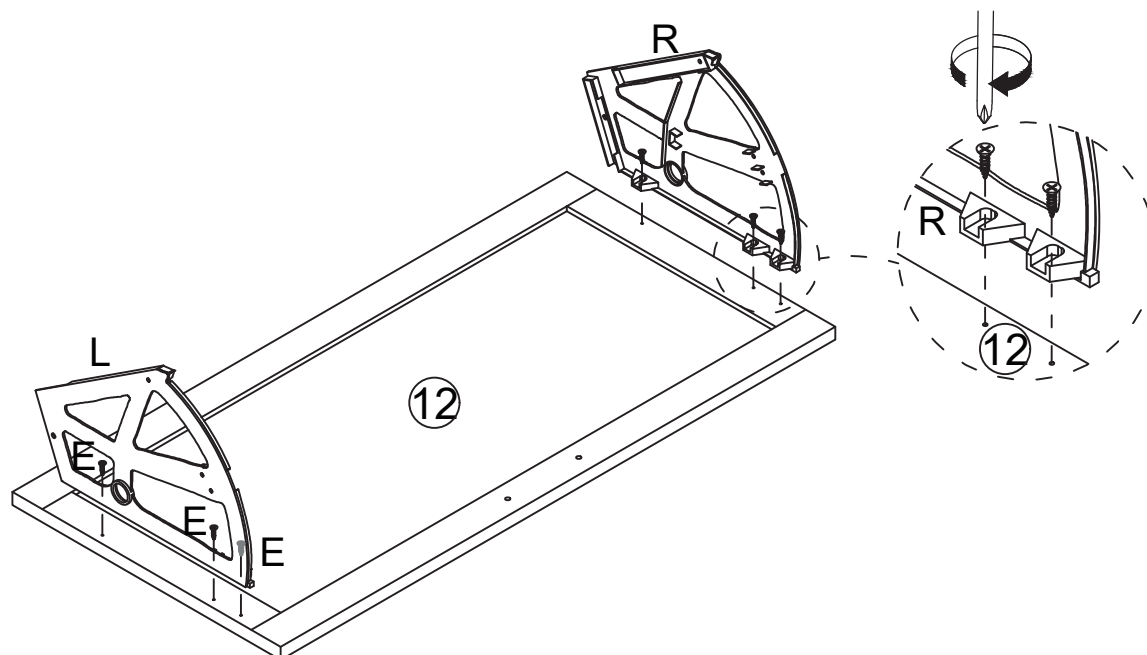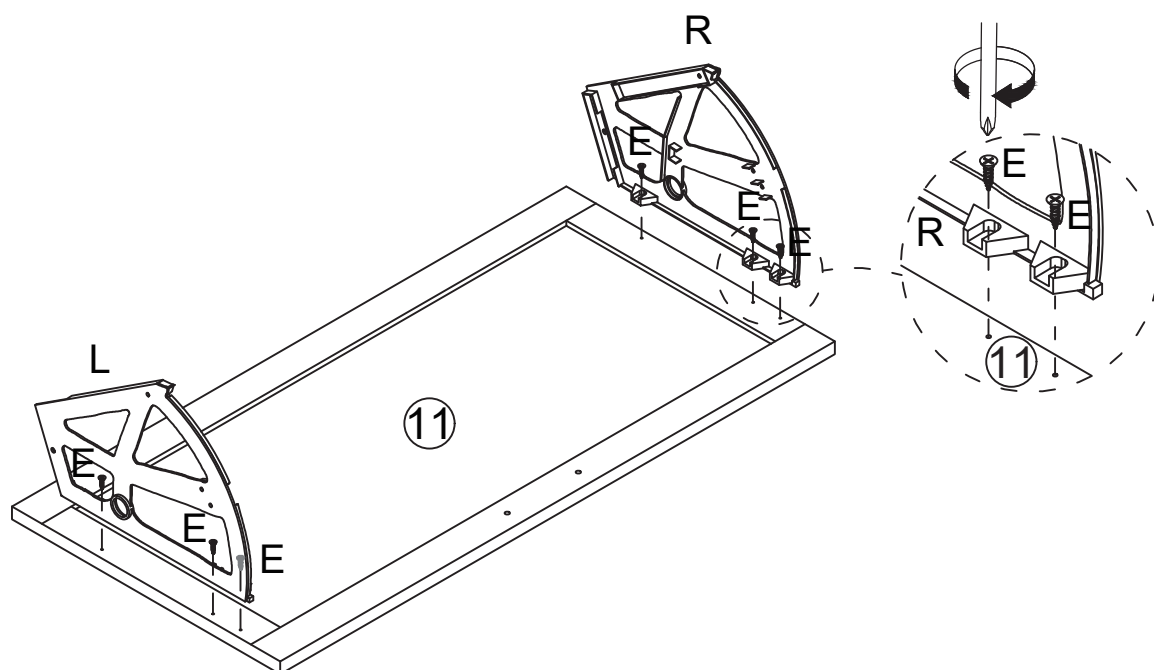




E x4
Ø3.5x12mm




14 x2

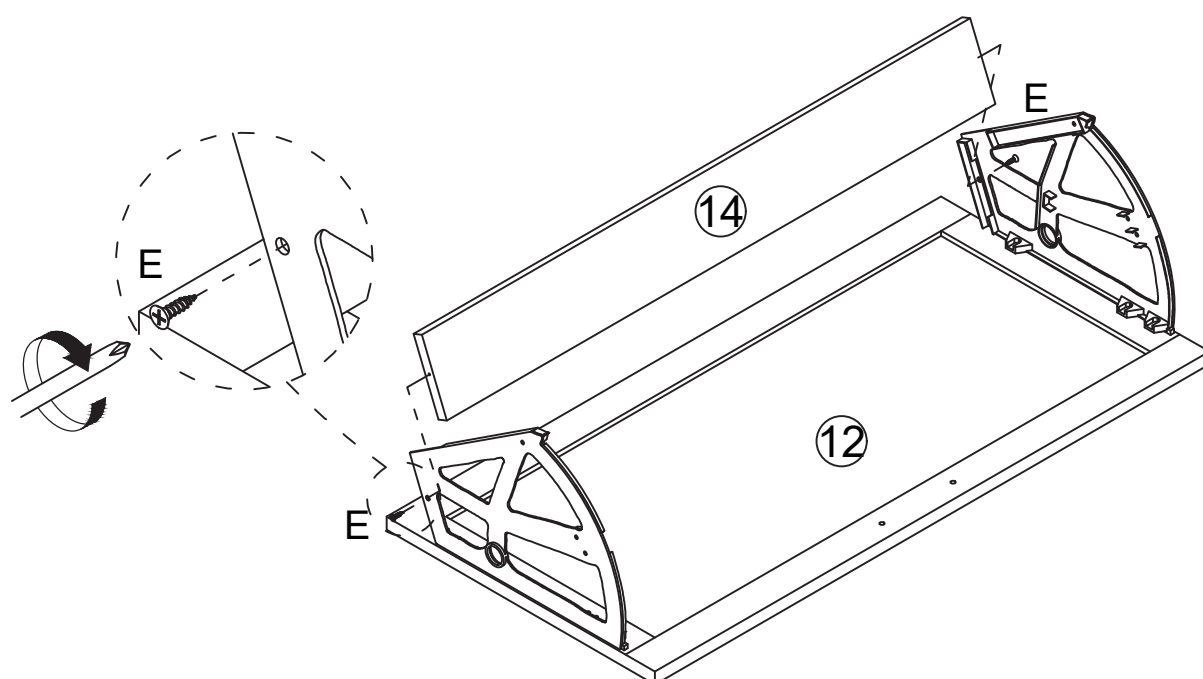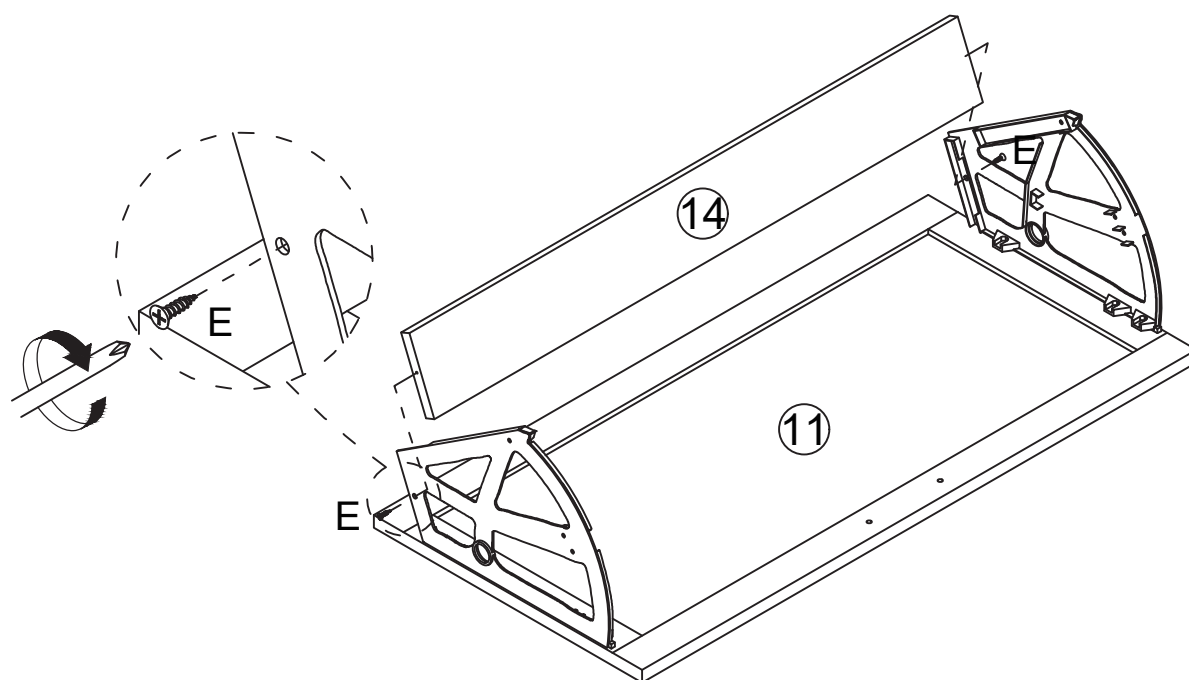

E x4
Ø3.5x12mm

13 x2

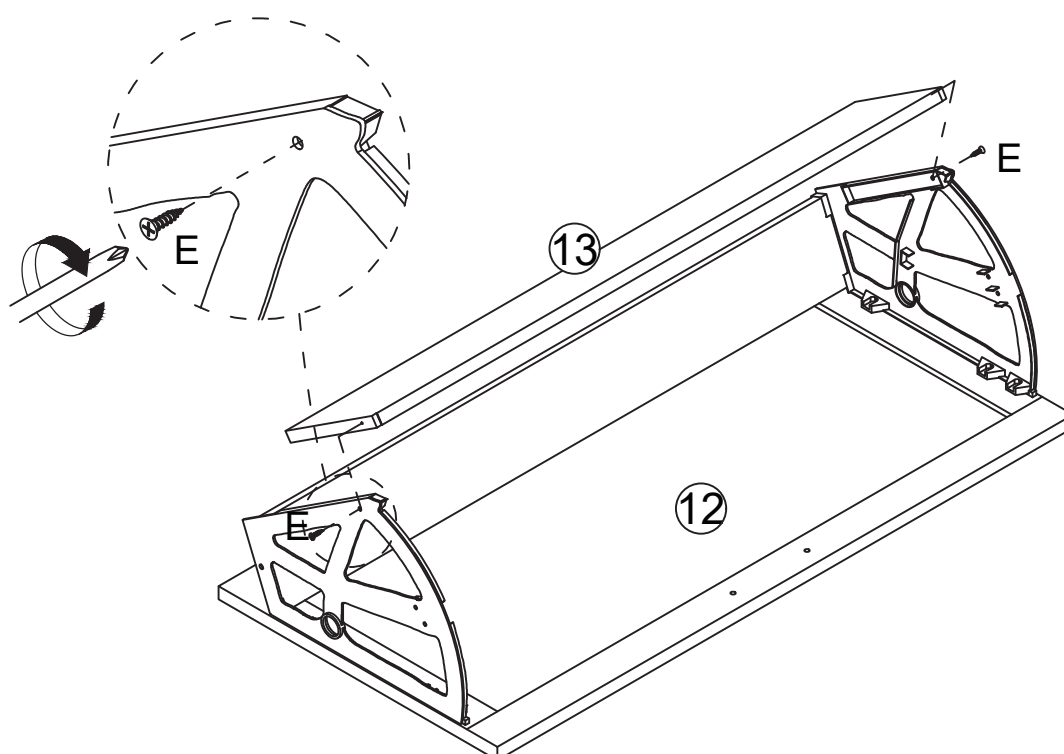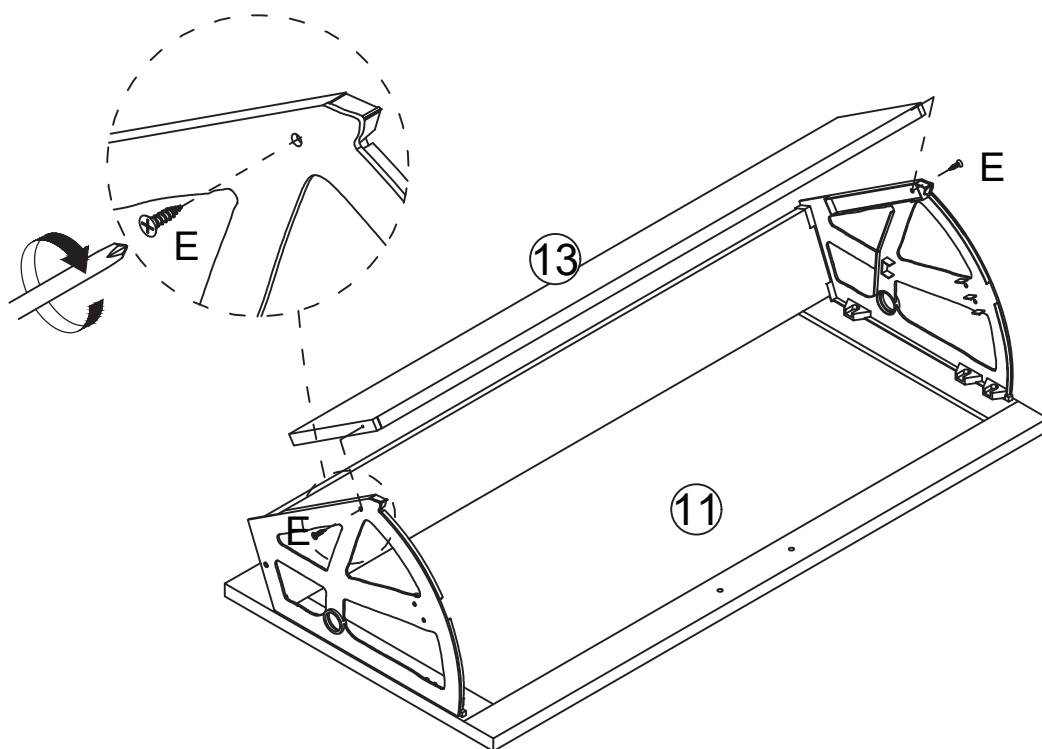

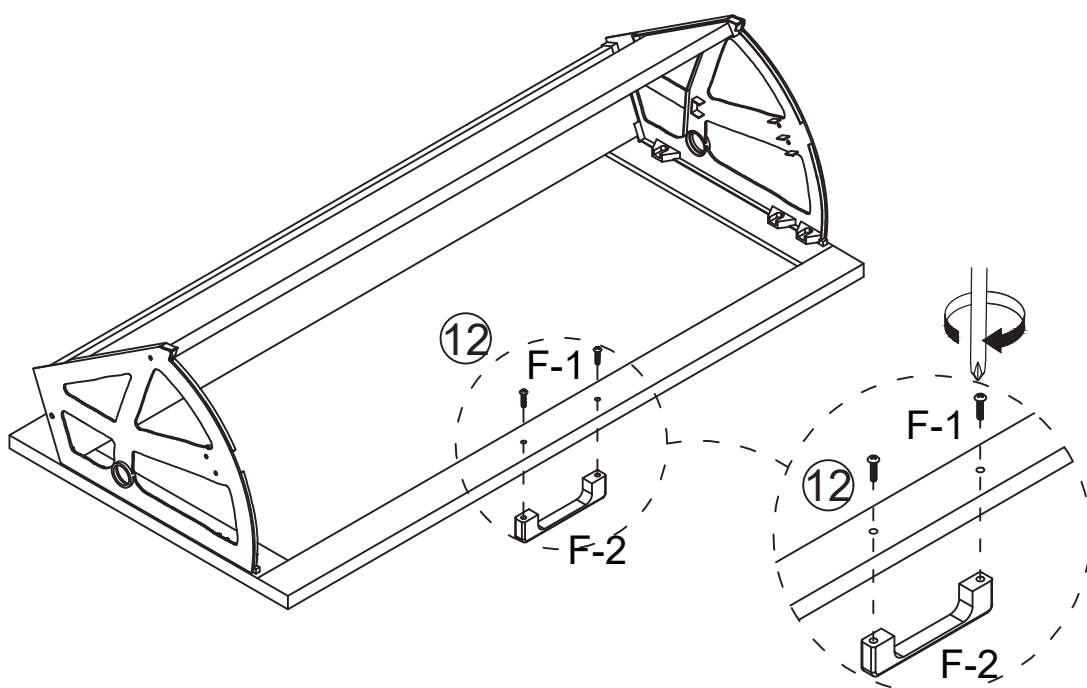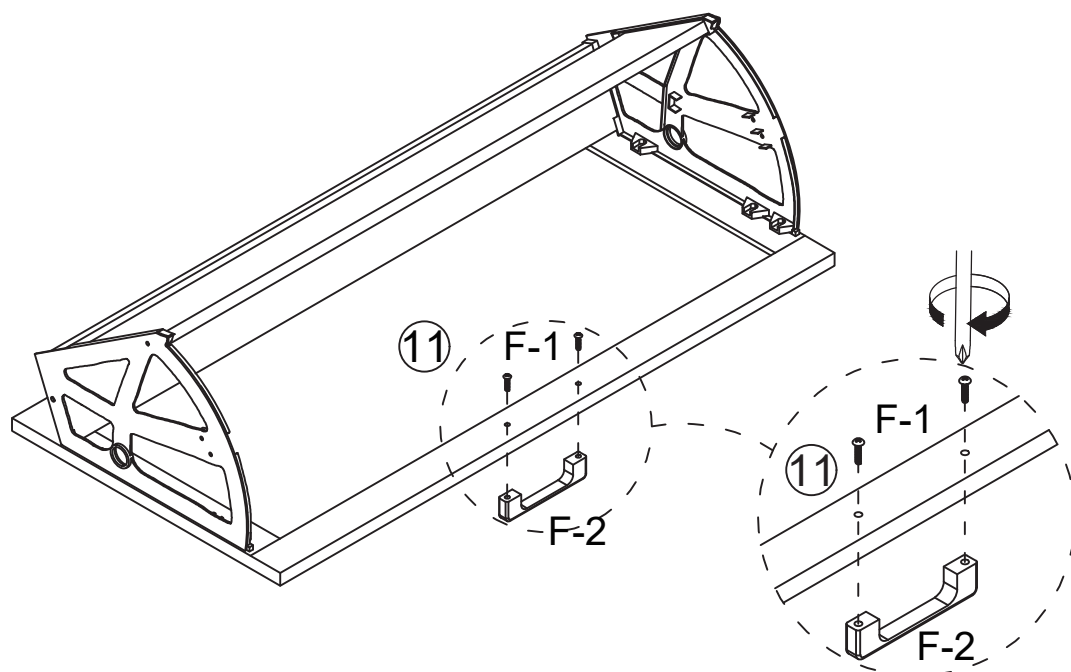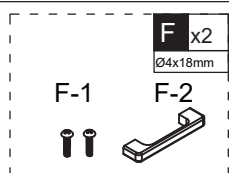

H x4




I x4

Ø6x12mm






T x1

M5


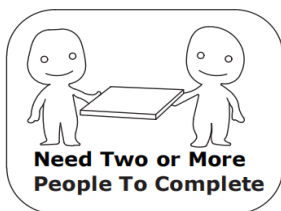


Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.

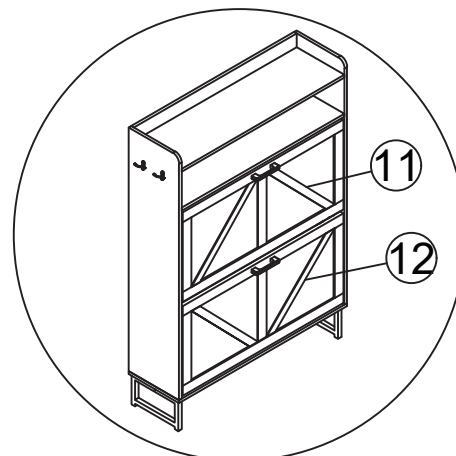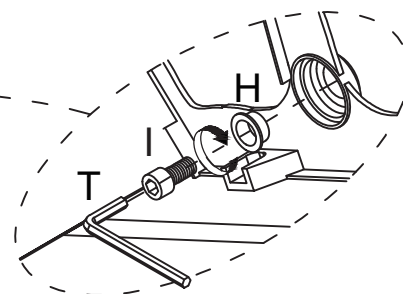
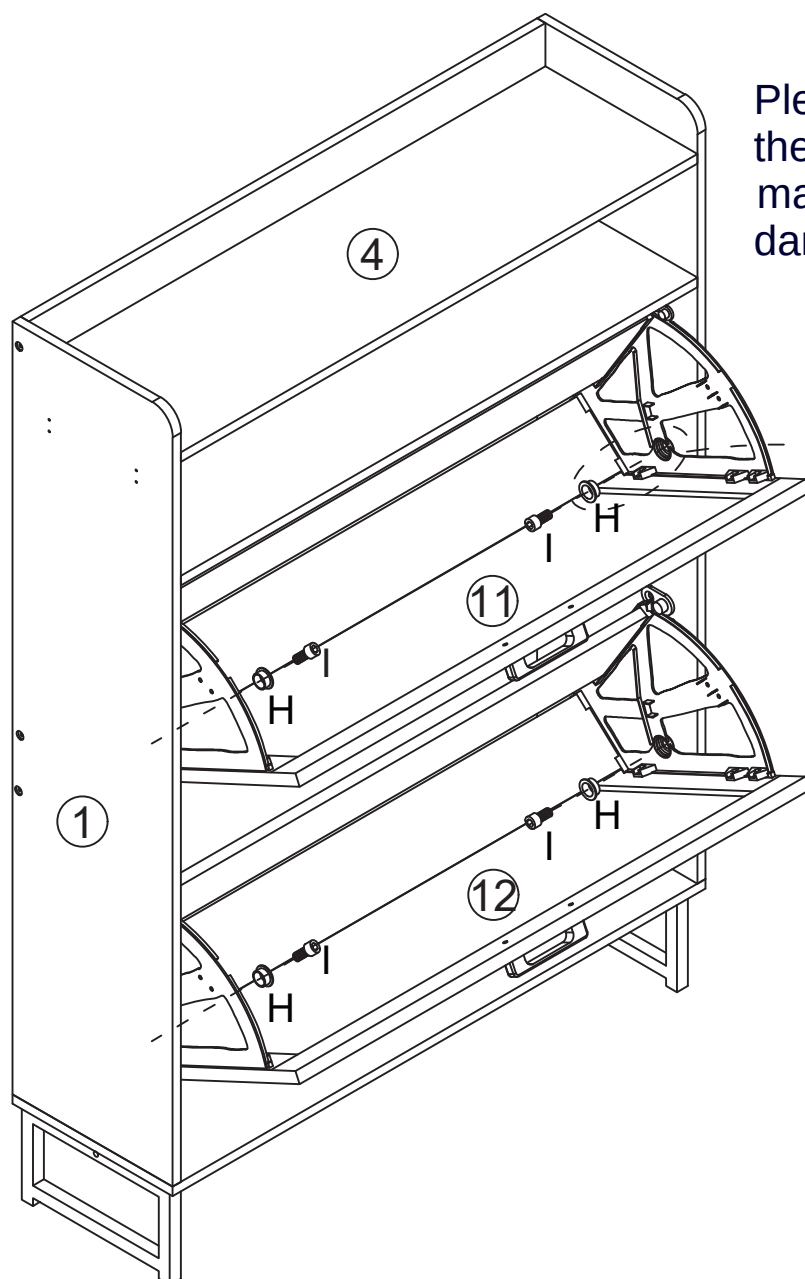


E x4
Ø3.5x12mm

13 x2

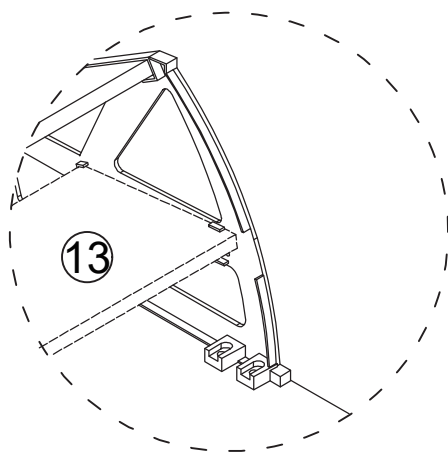

OR

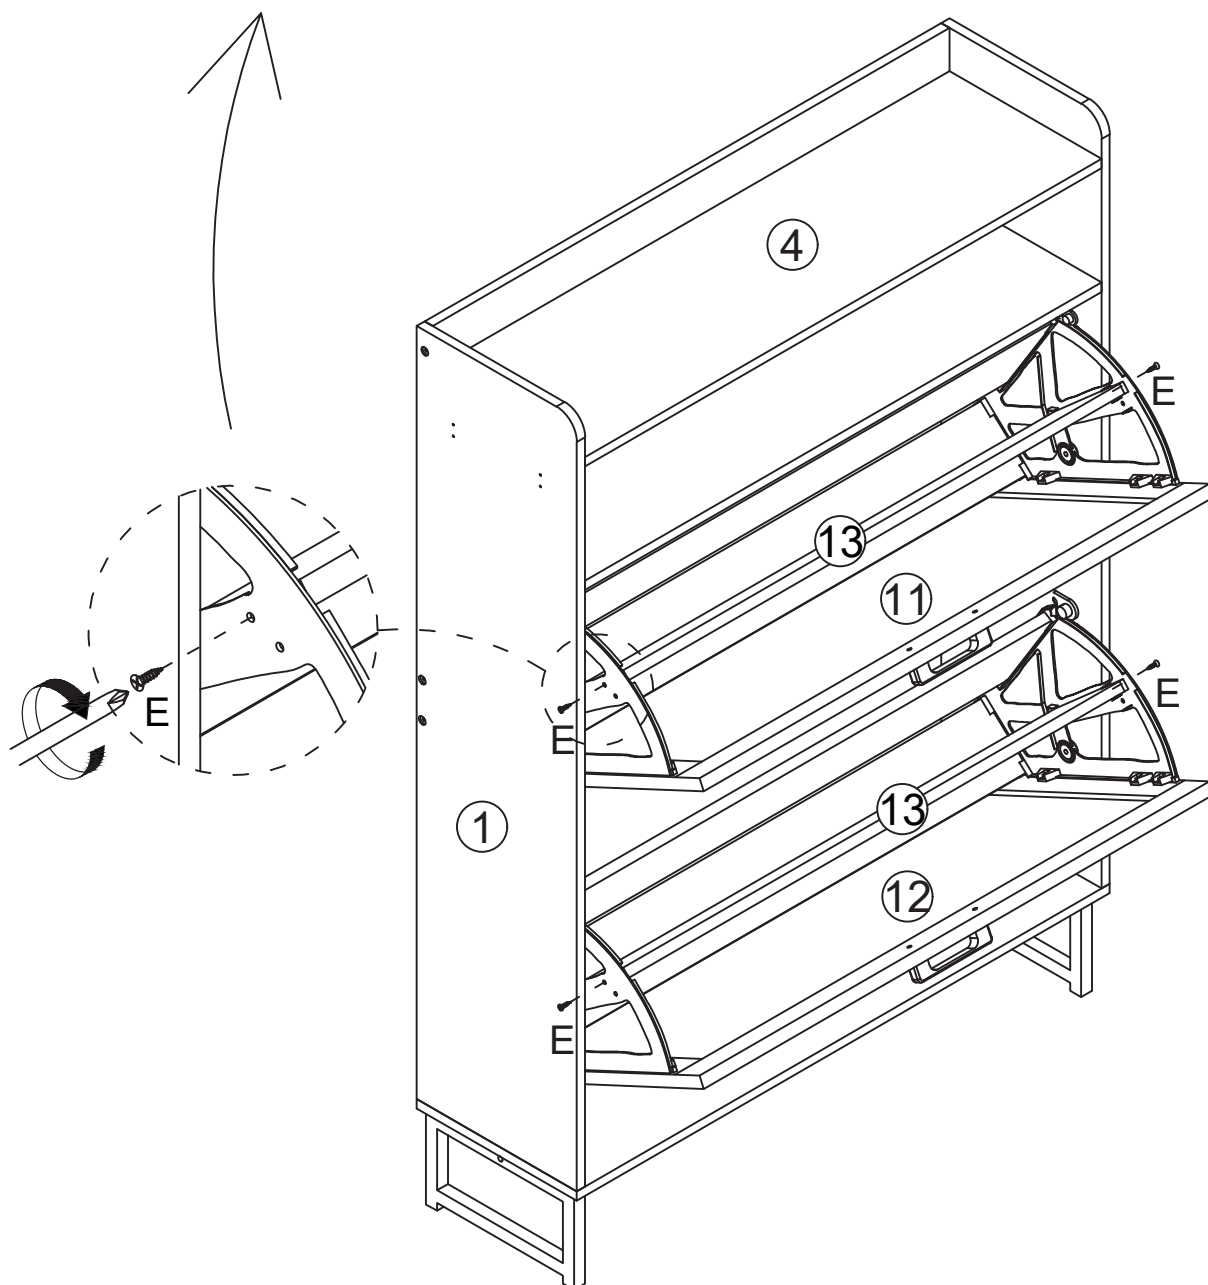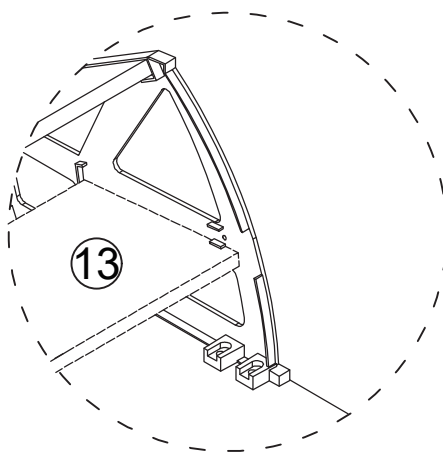

U x4



P x2




O x4




Please install the hook "P" according to your actual needs, either on the left Scheme 1 or on the right Scheme 2, and choose one of the options for installation, as shown .



Scheme 1

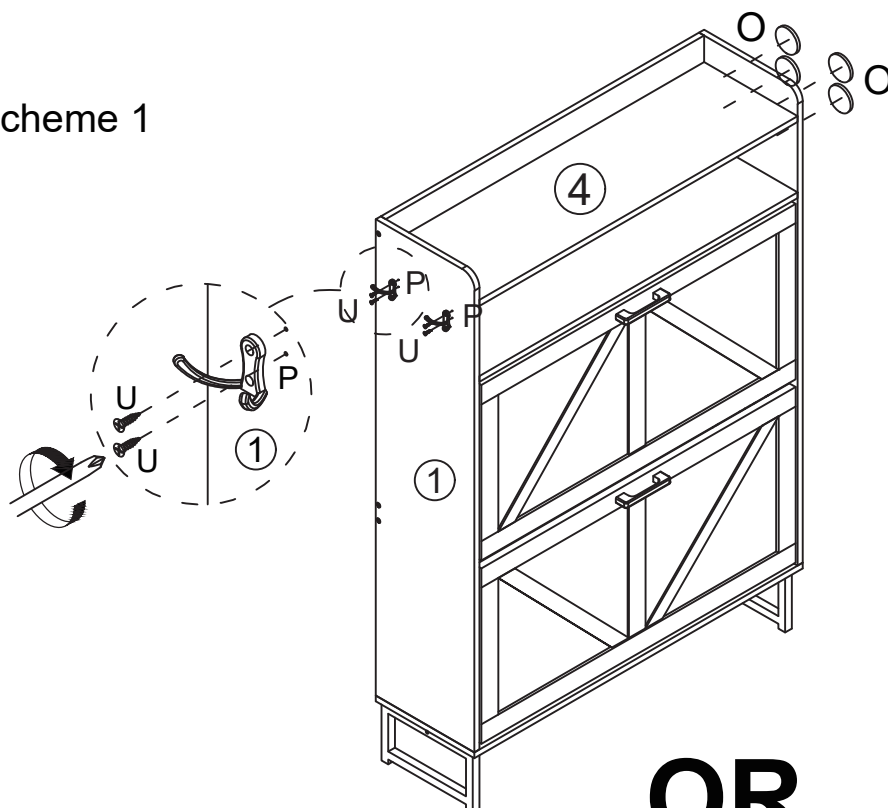

OR

Scheme 2

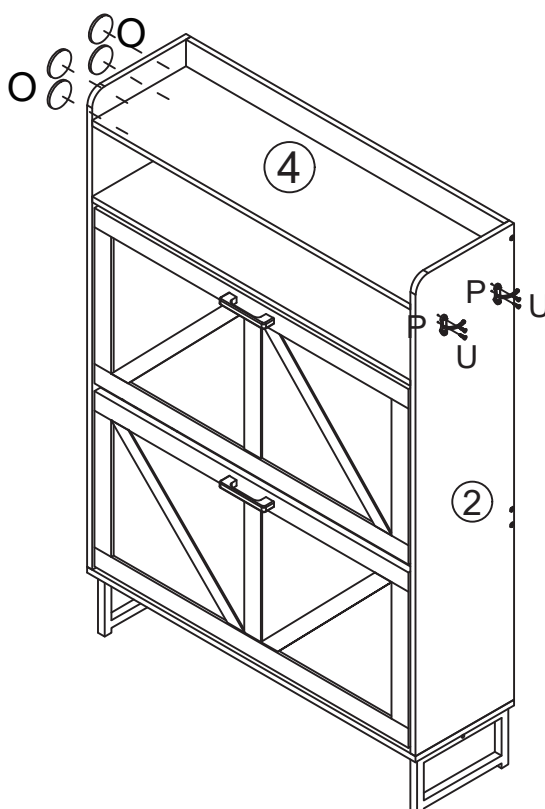

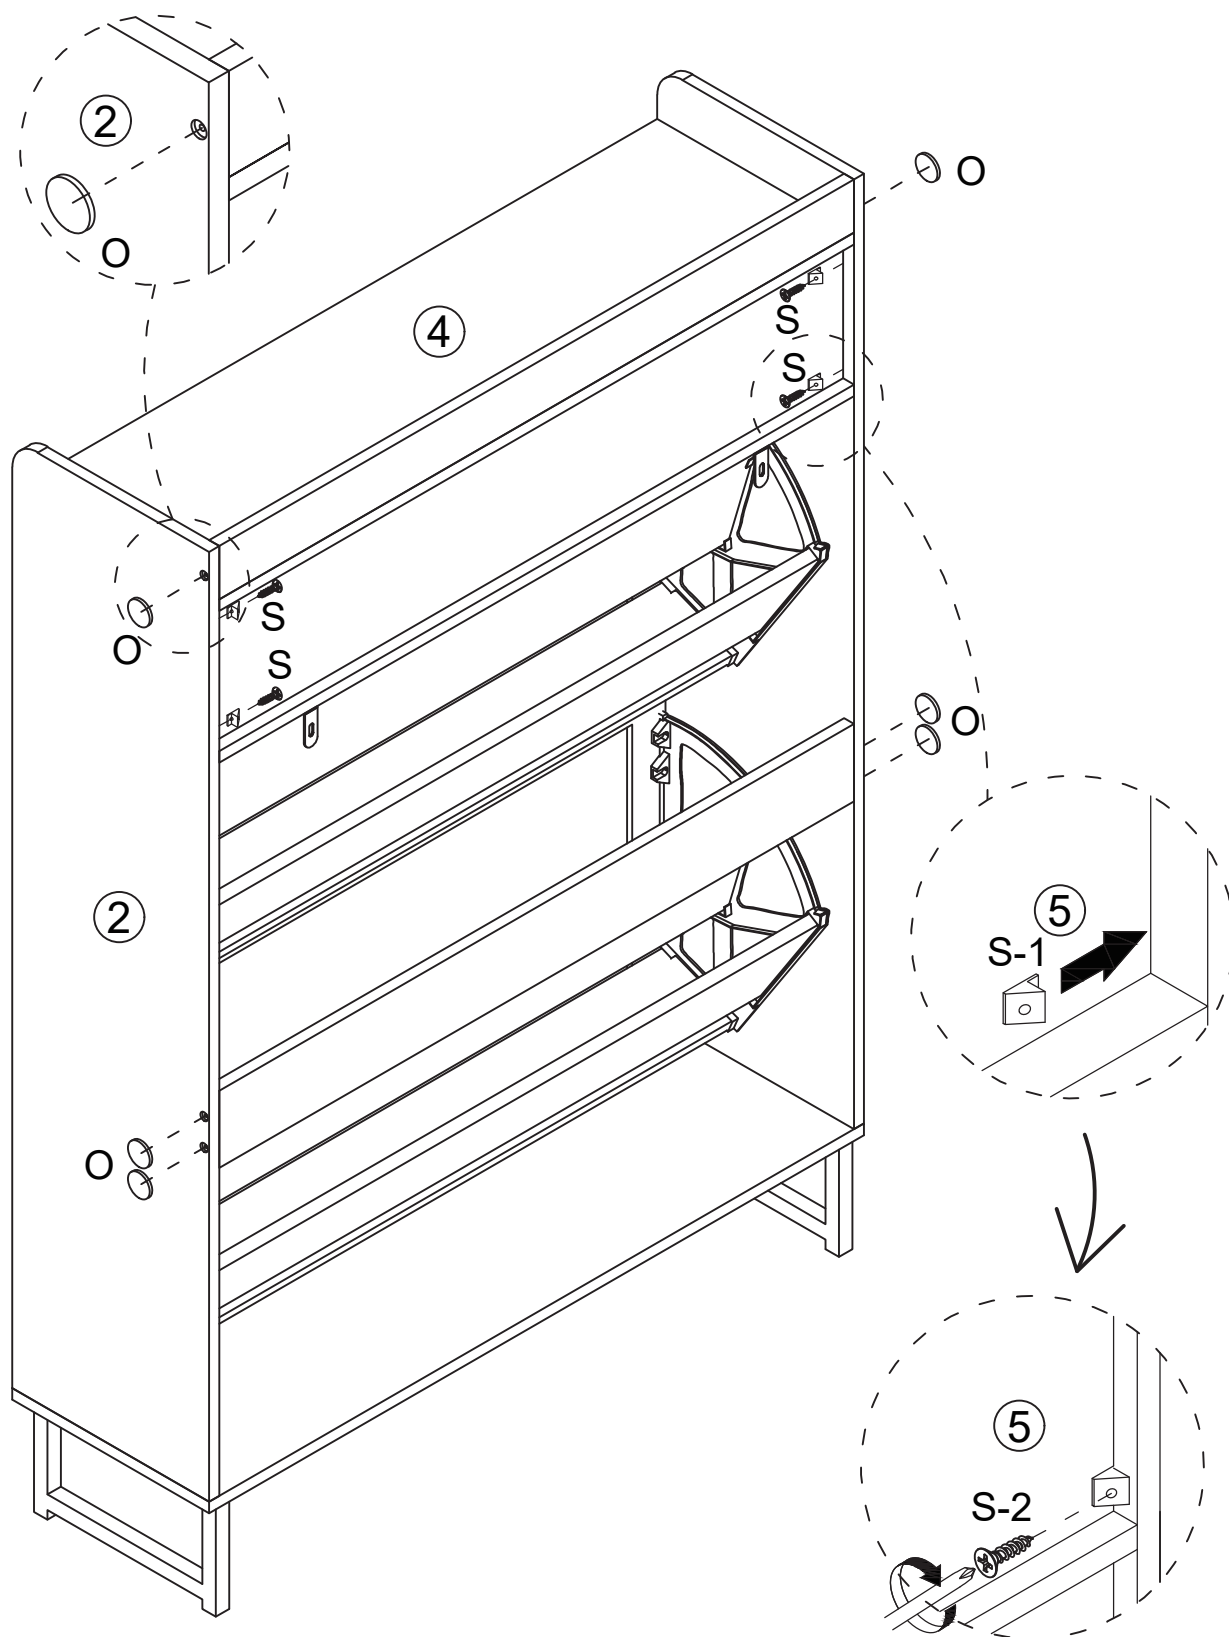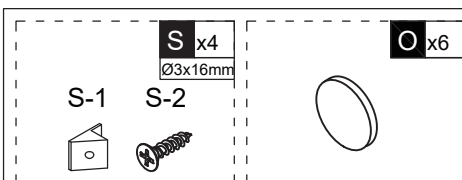

D x2
Ø4x35mm



M x2
Ø6x30mm




WALL



I x2


WALL +

drilling hole
Ø6x30mm

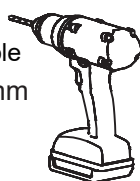

II x2

WALL

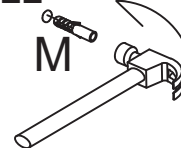

III x2

