
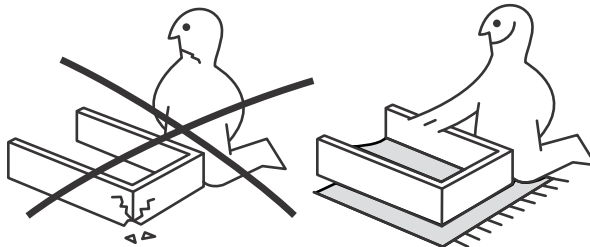
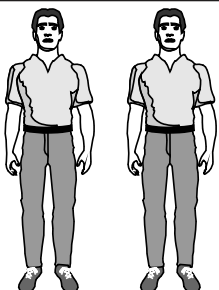
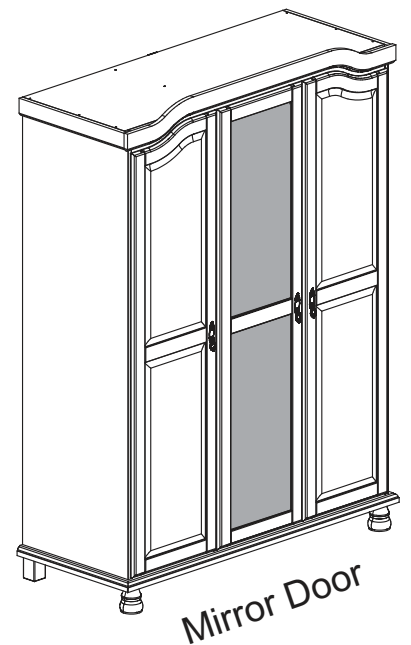


ASSEMBLY GUIDE


KYLE 3-DOOR WARDROBE

Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

SKU S-8101D - Raised Panel Doors / SKU S-8101M - Mirrored Doors - White
SKU S-8103D - Raised Panel Doors / SKU S-8103M - Mirrored Doors - Mocha
SKU S-8106D - Raised Panel Doors / SKU S-8106M - Mirrored Doors - Java

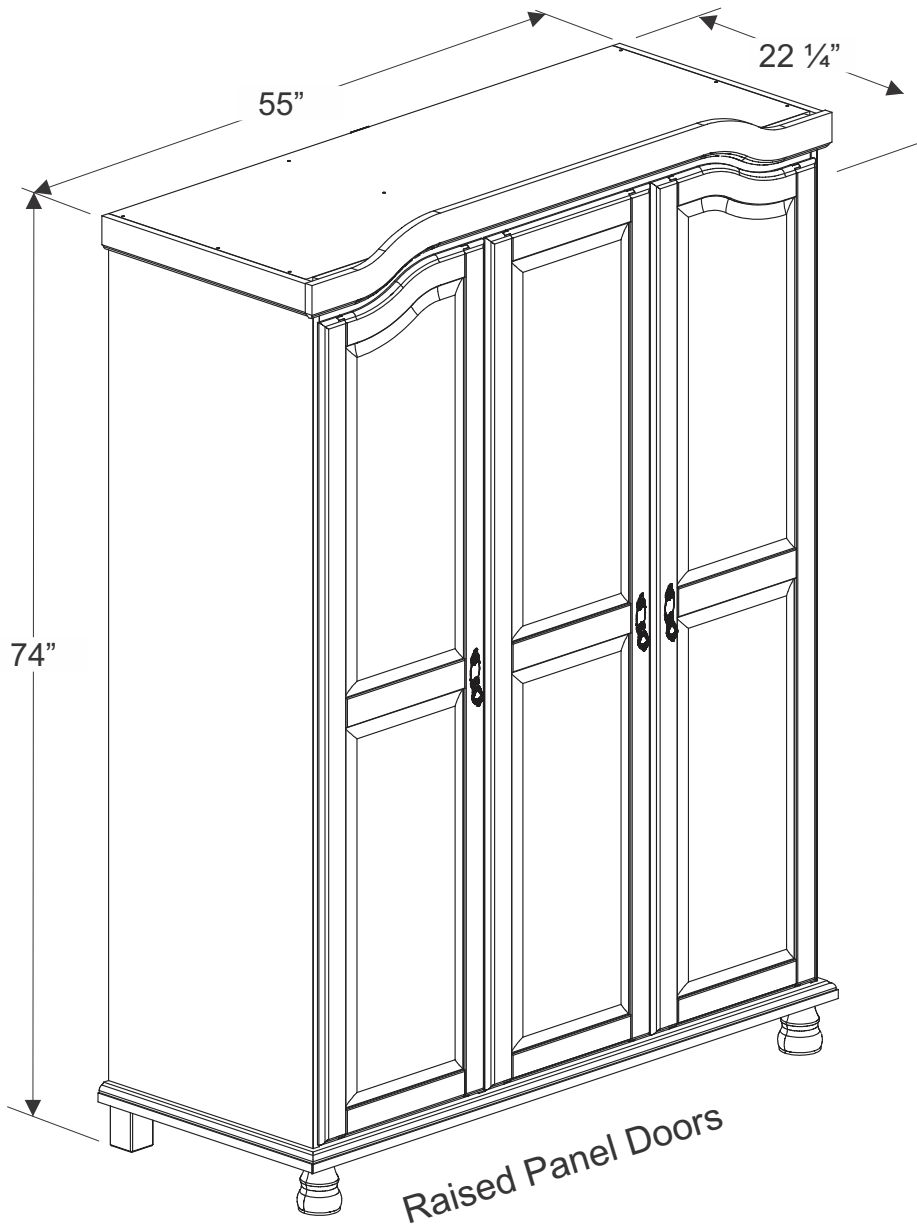

REV - 06/2025

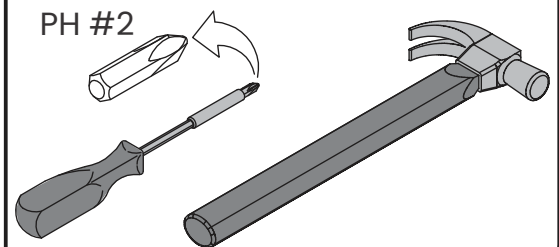

page 2/20



Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsinc.com for assistance.









Assembly Tips



- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

PARTS LAYOUT

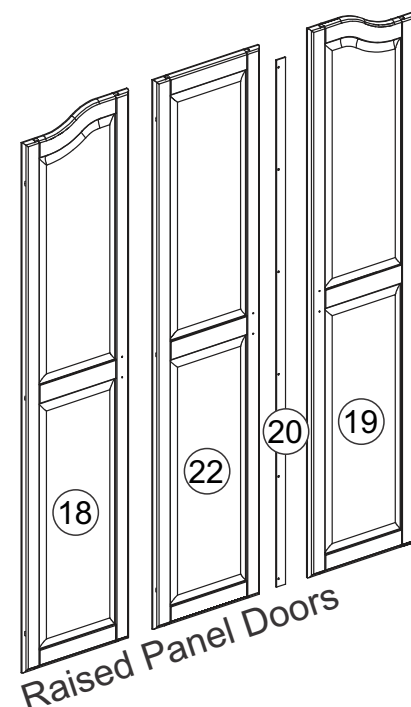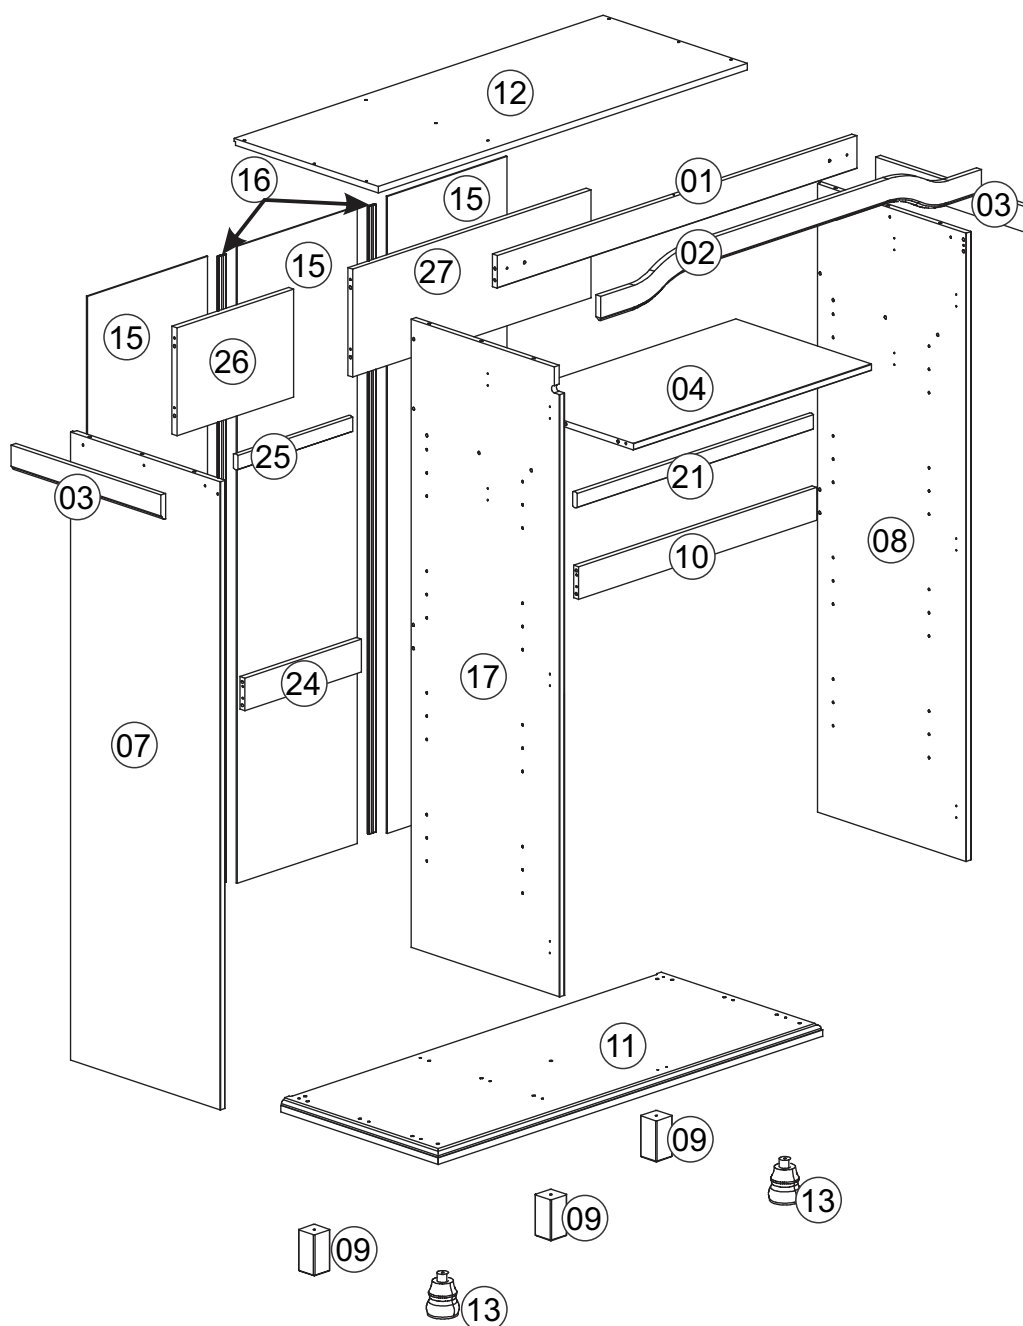

Screws Are Illustrated at Actual Size for Accurate Reference

A1	 4,0x30	30+2
A4	 3,5x14	08+1
A7	 3,0x16	06+1
A16	 4,0x40	20+1
A44	 3,5x14	57+2
B19	 7,0x70	05
C2	 8,0x25	46+3
D3	 45x27x12	01
D10		04
D16	 17,5x17,5x13	02
F10		09
G1	 10x10	54
G8		01
H18		03

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01



**WARNING:
CHOKING HAZARD**

Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.




WARNING:

Important Safety Notice:







This furniture includes tip-over prevention hardware, which **MUST** be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.

01)

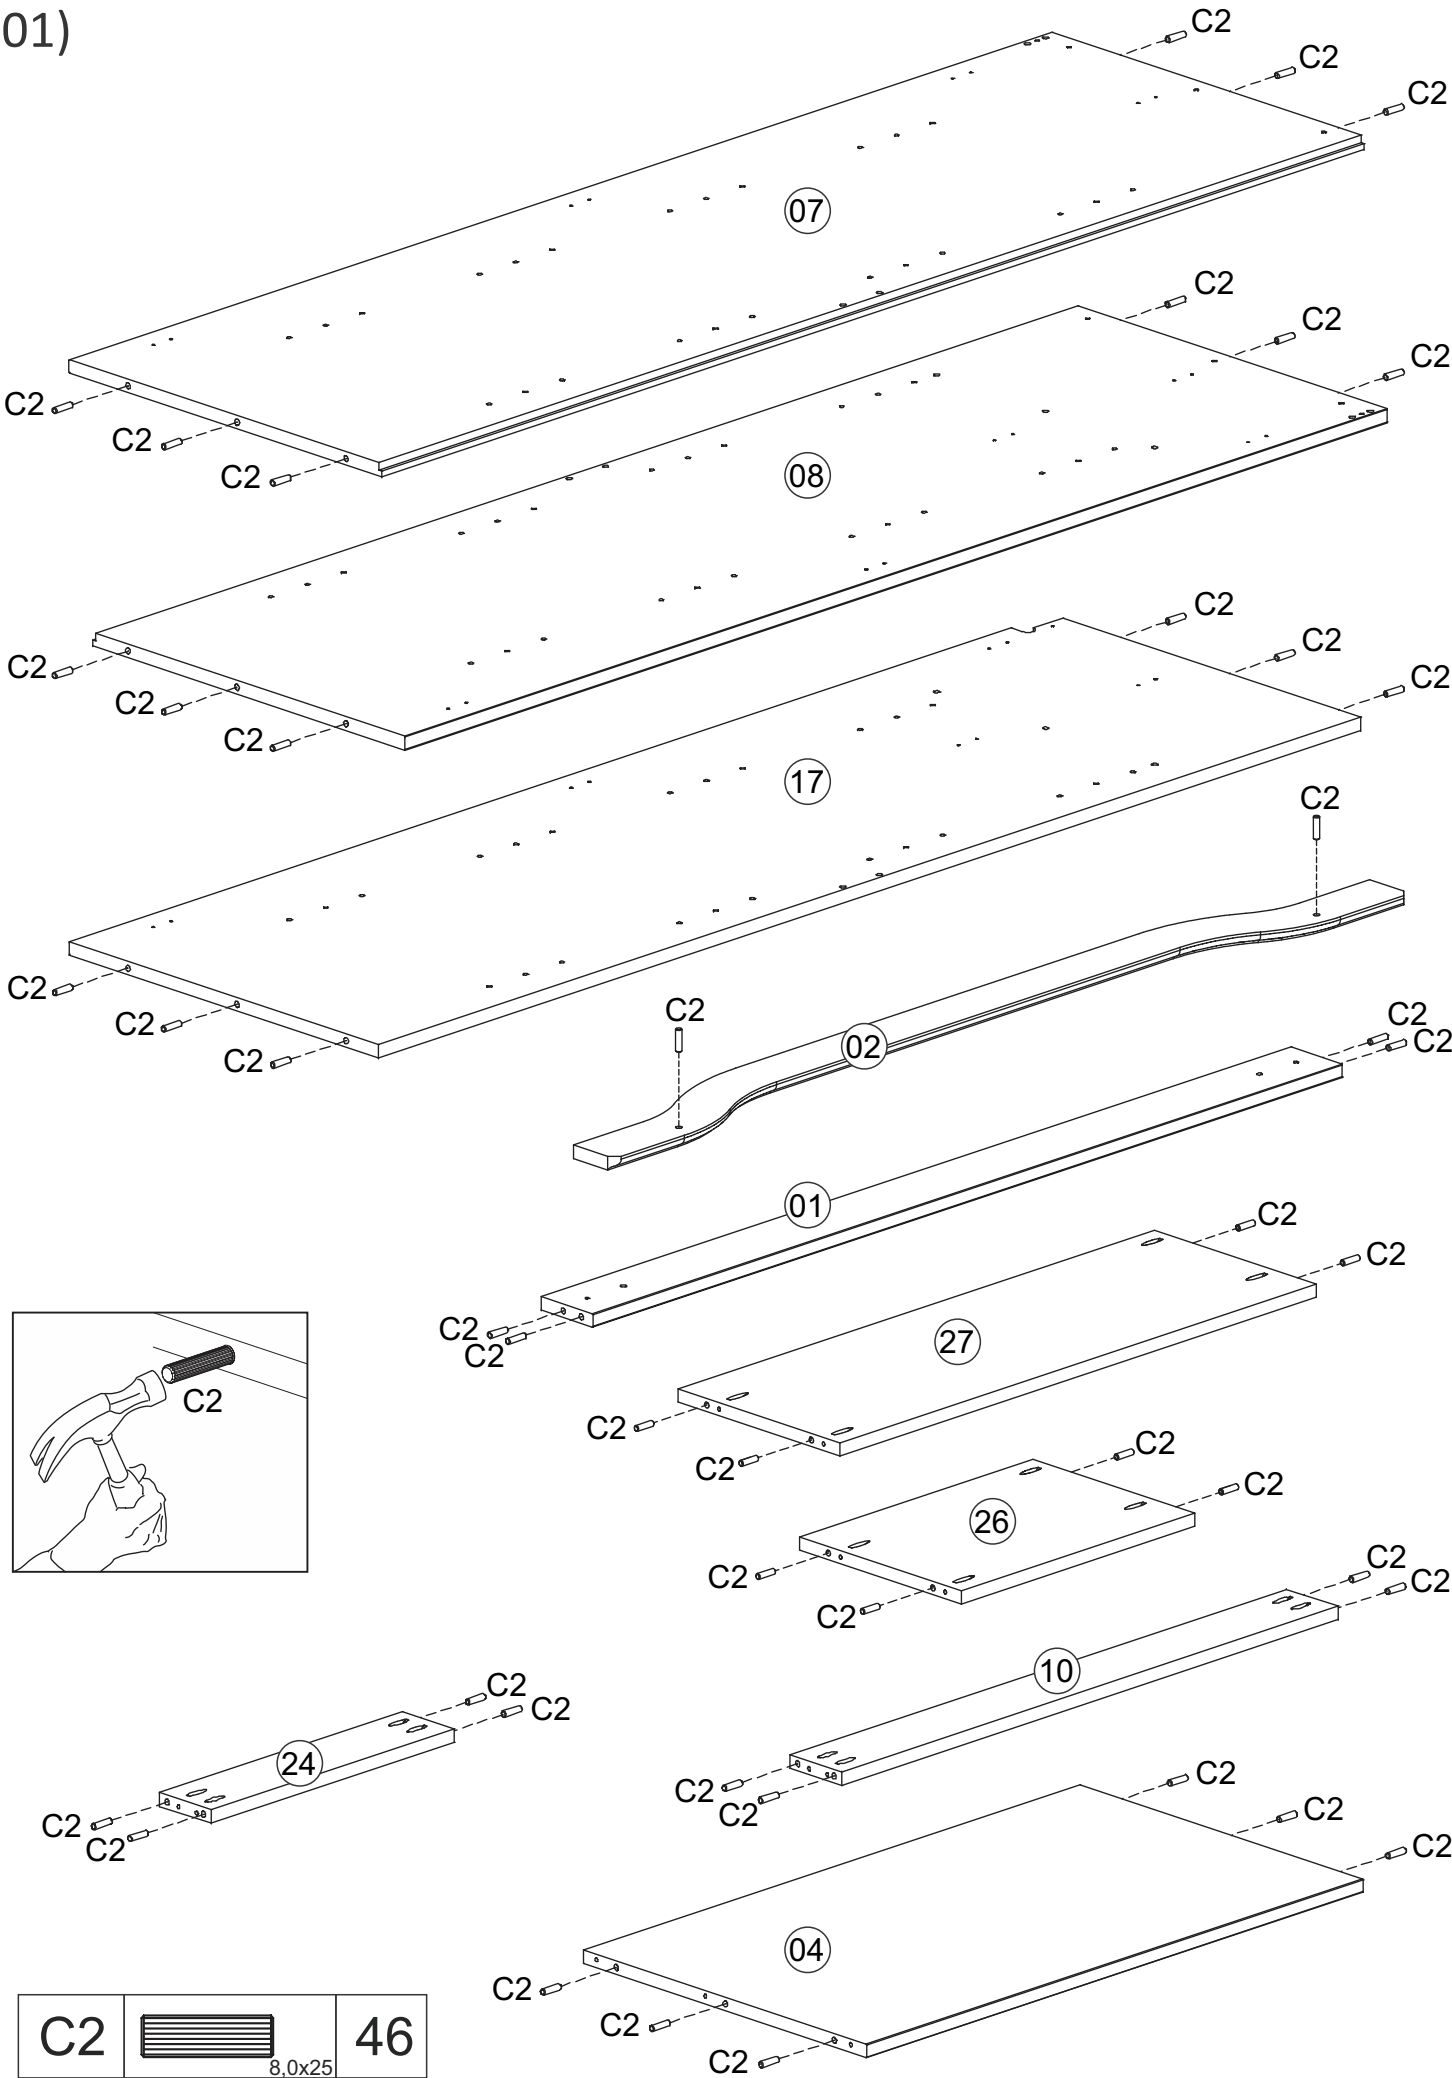



C2		46
8,0x25		

02)

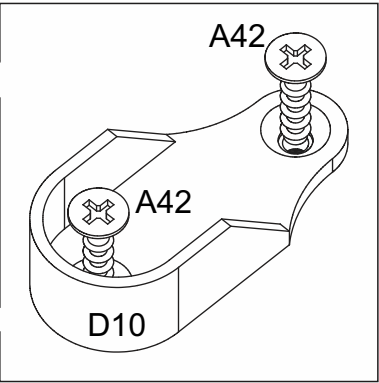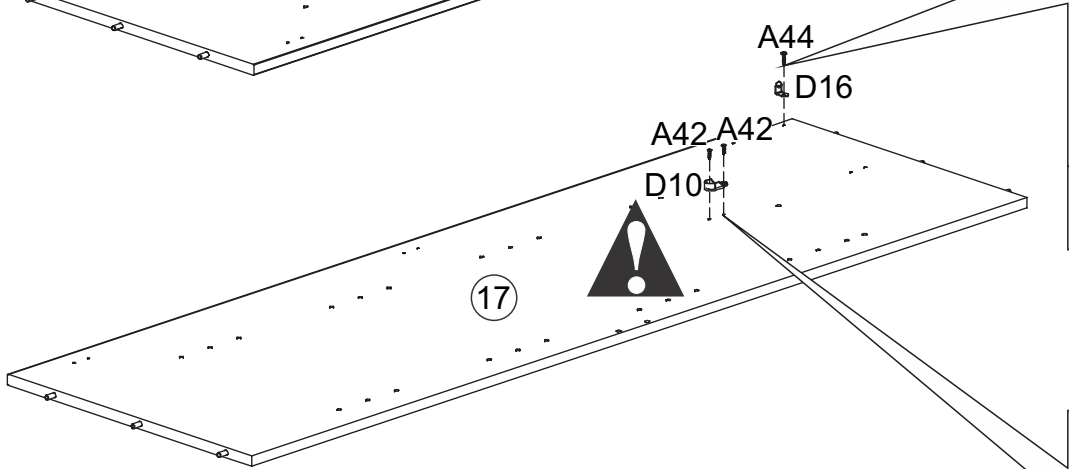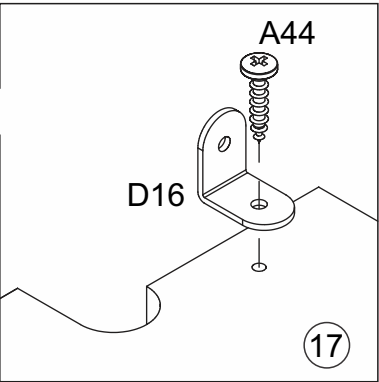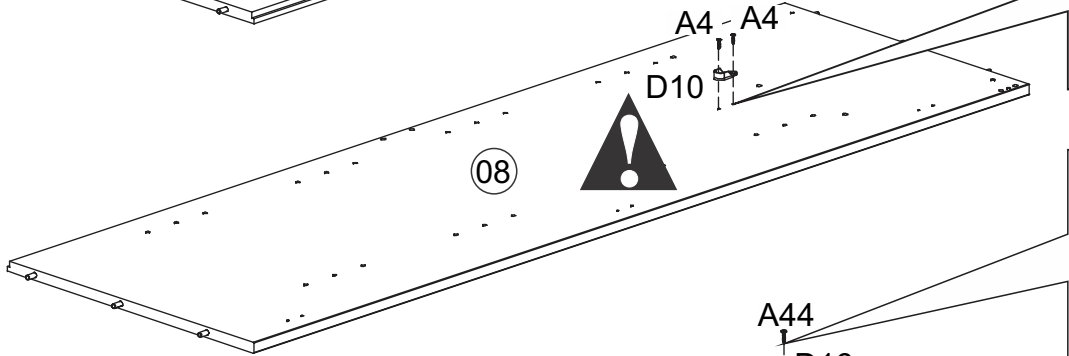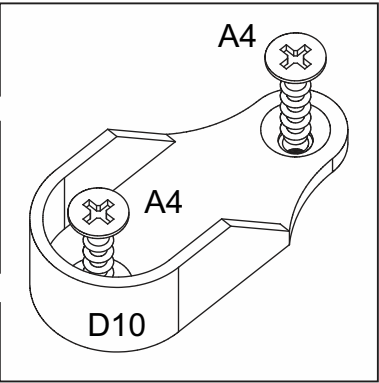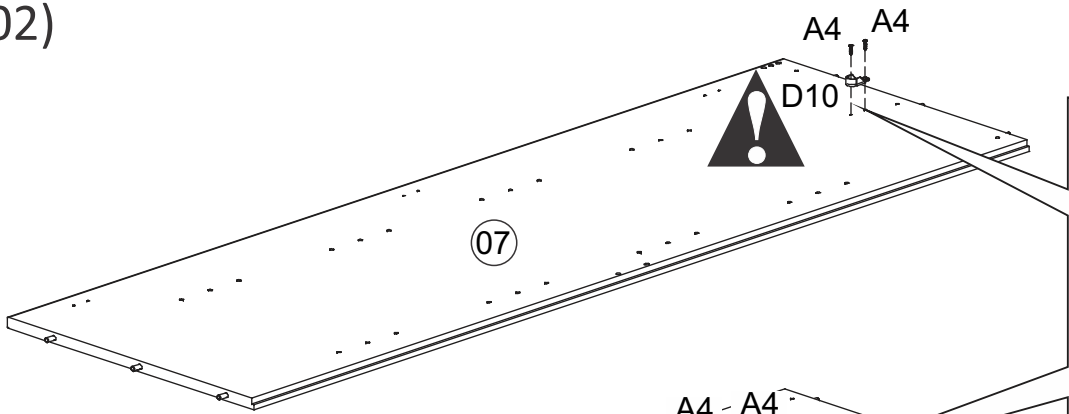



Flip the division 17
UPSIDE DOWN

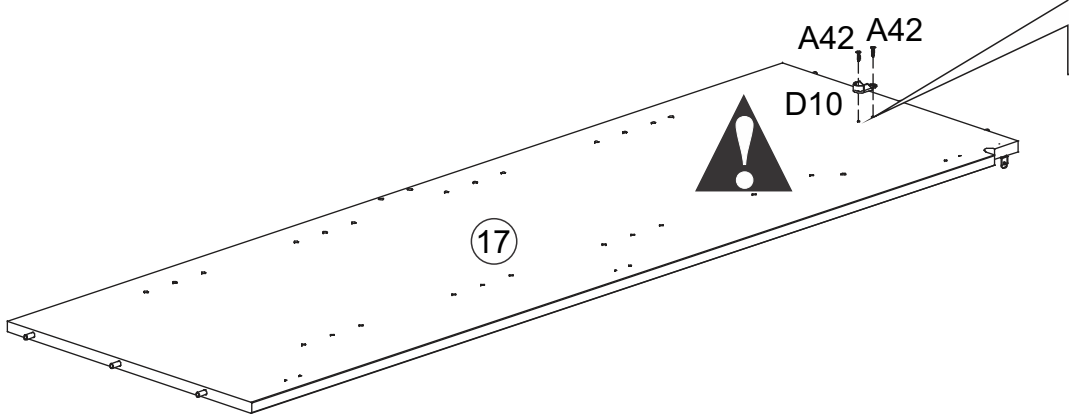



A4		08
3,5x14		
A44		01
3,5x14		

D10		04	D16		01
-----	---	----	-----	---	----



03)

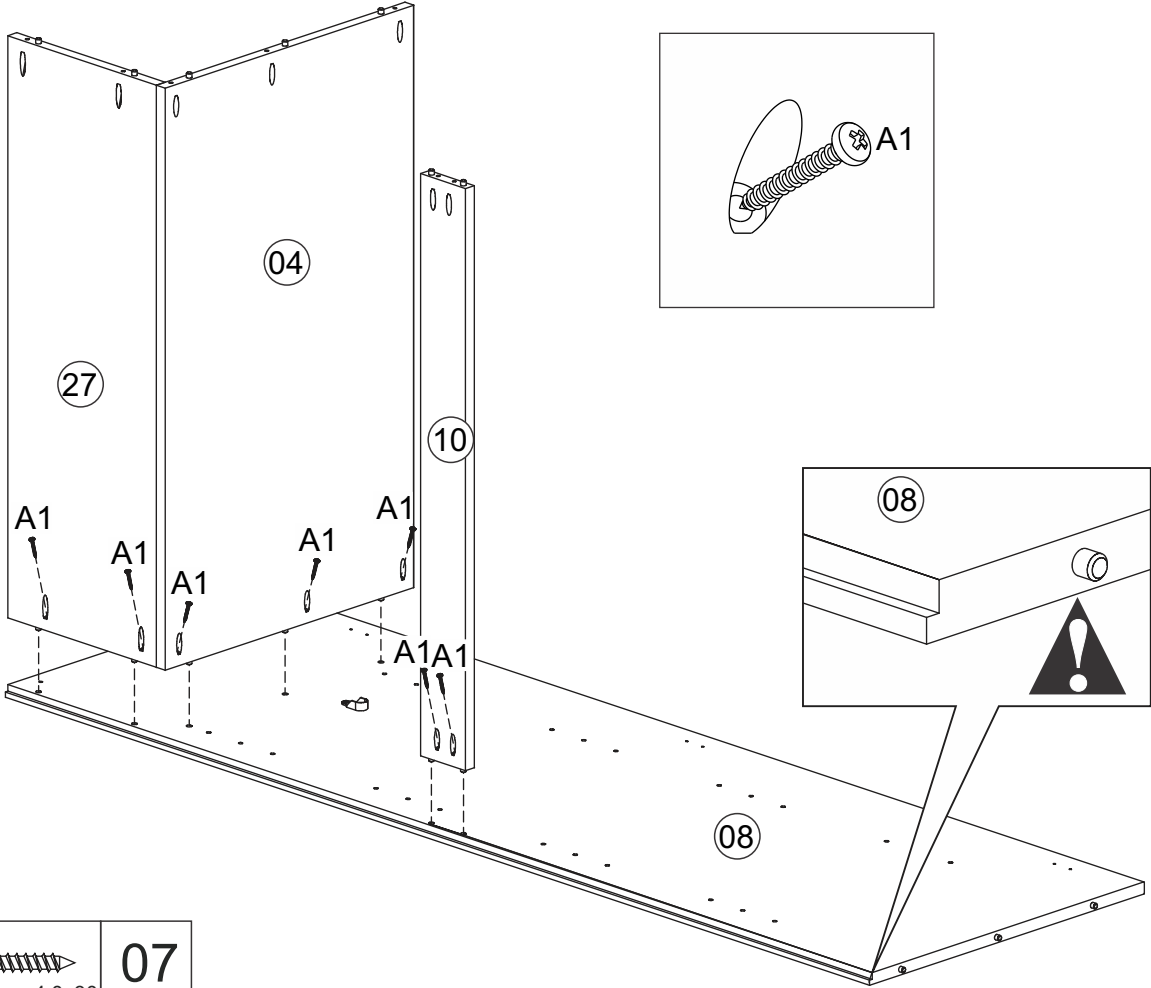



04)

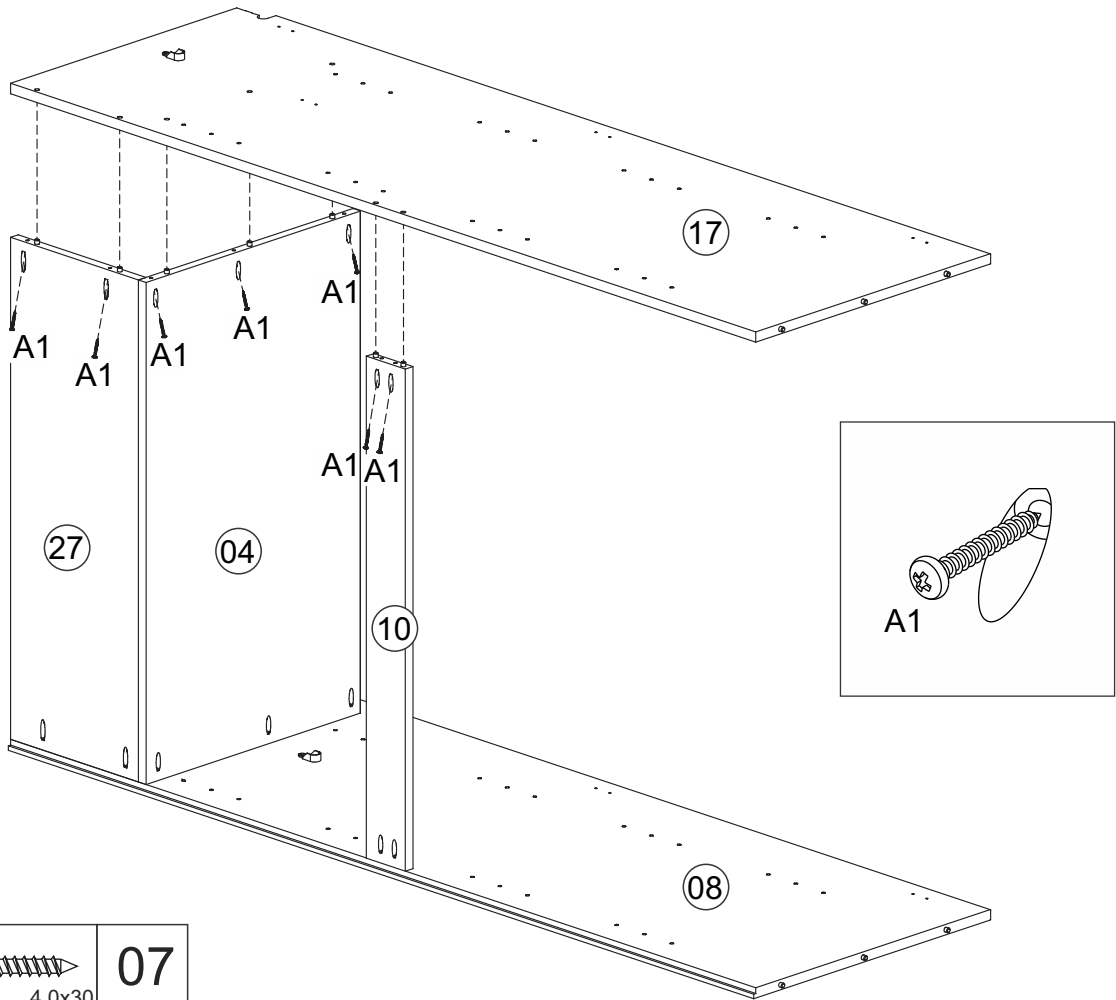


05)

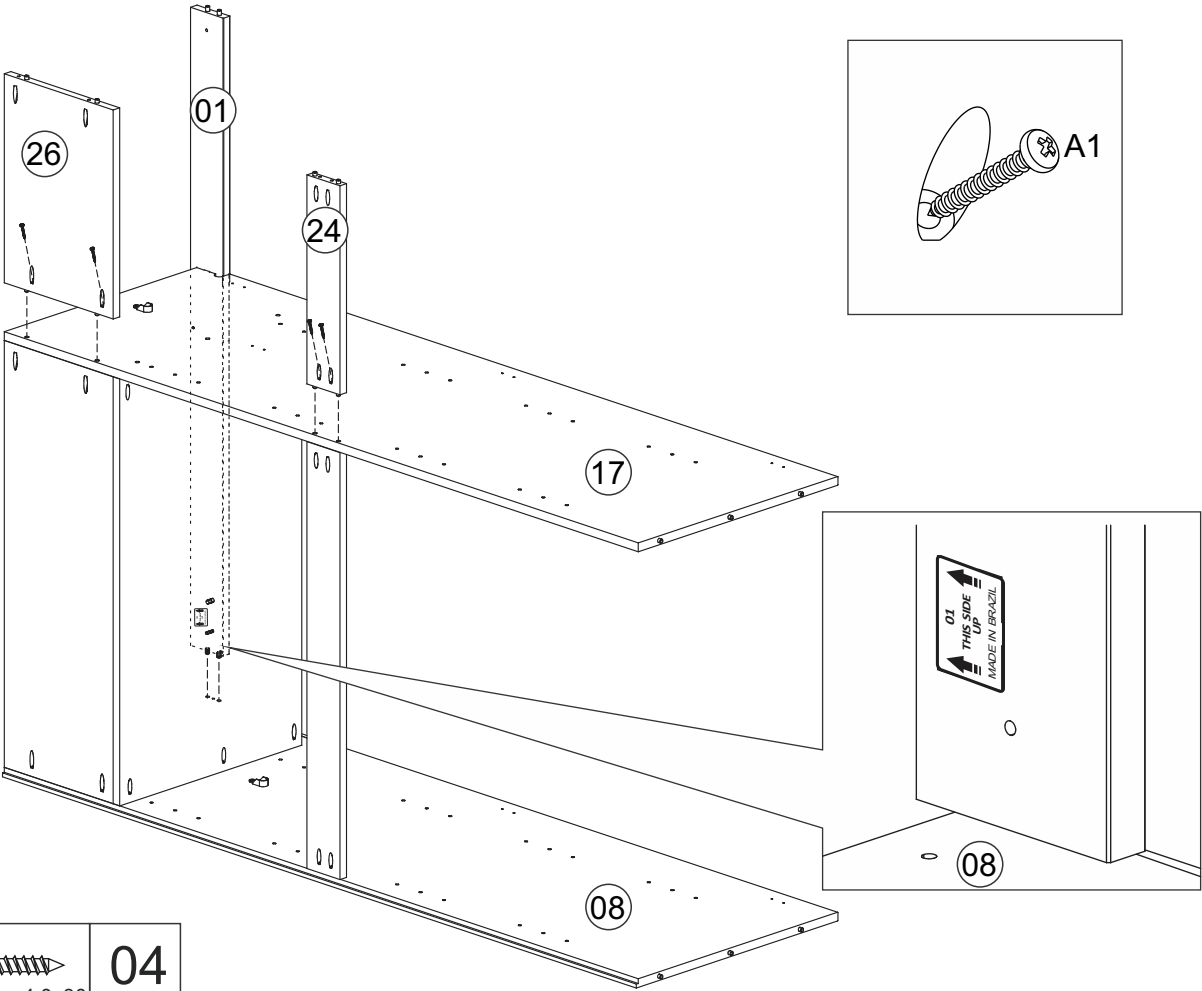


06)

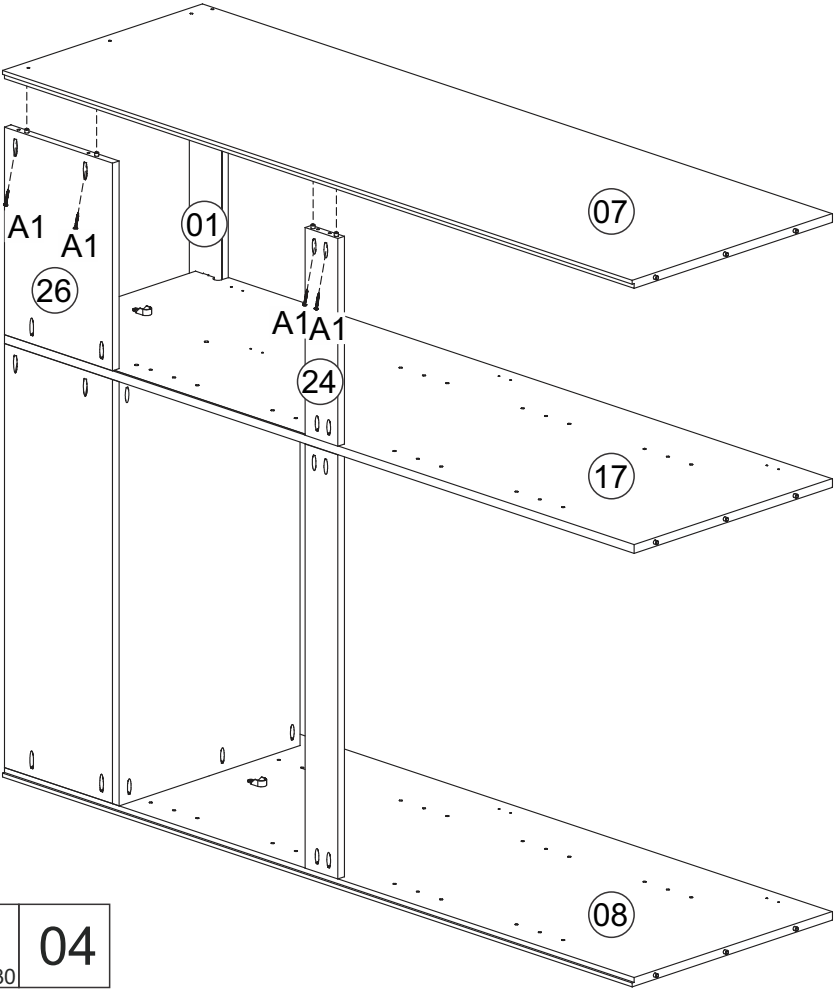


07)

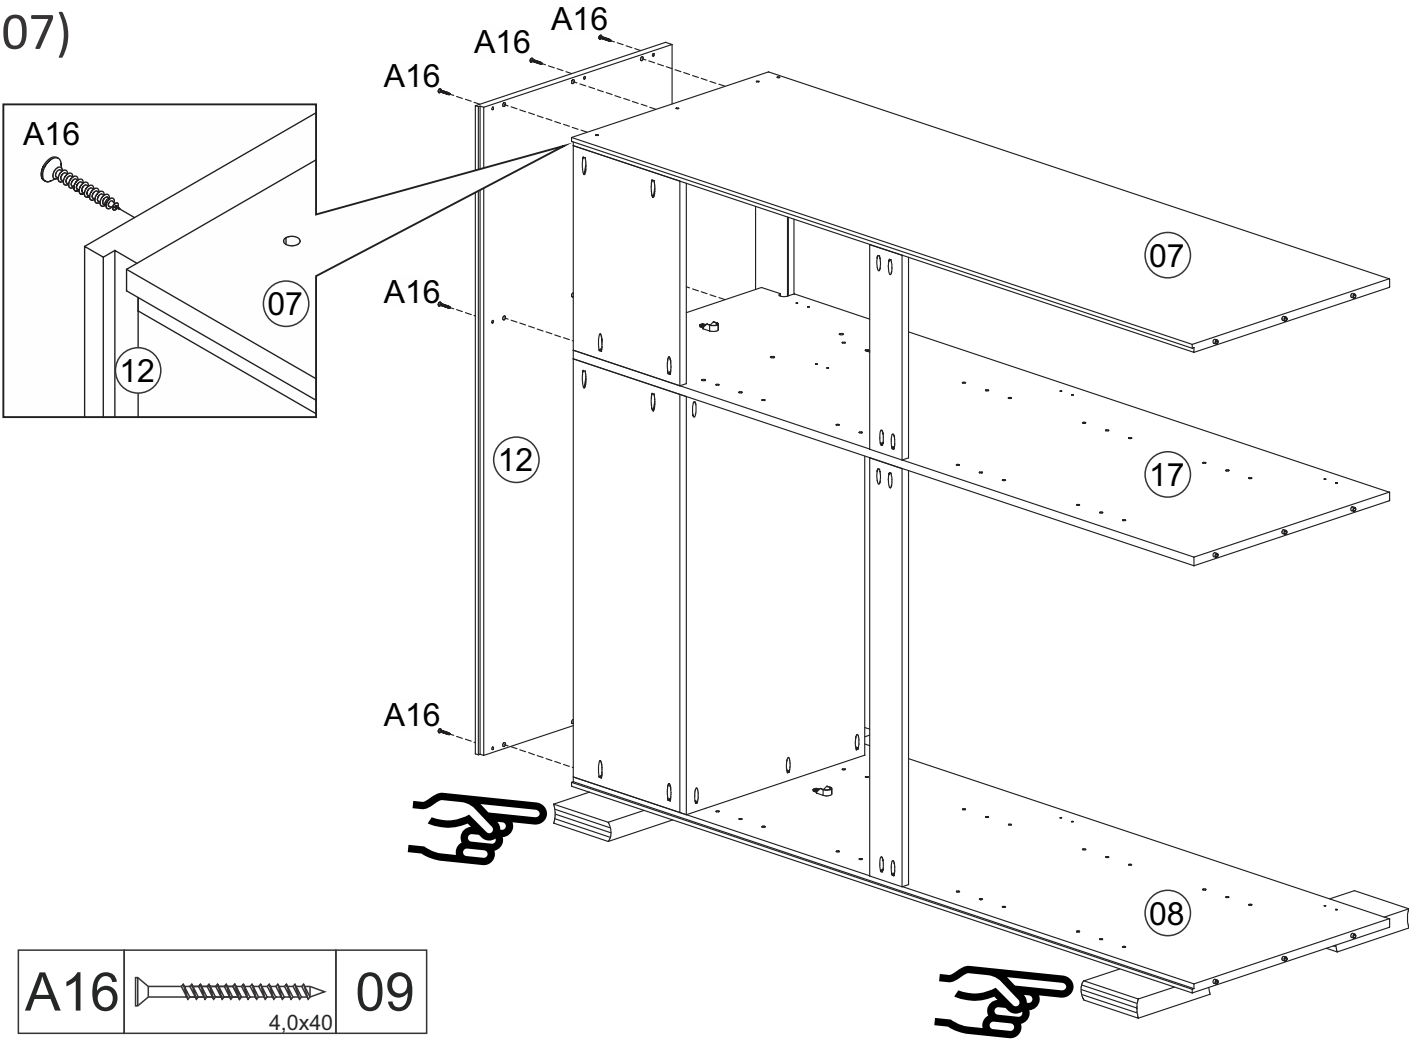


08)

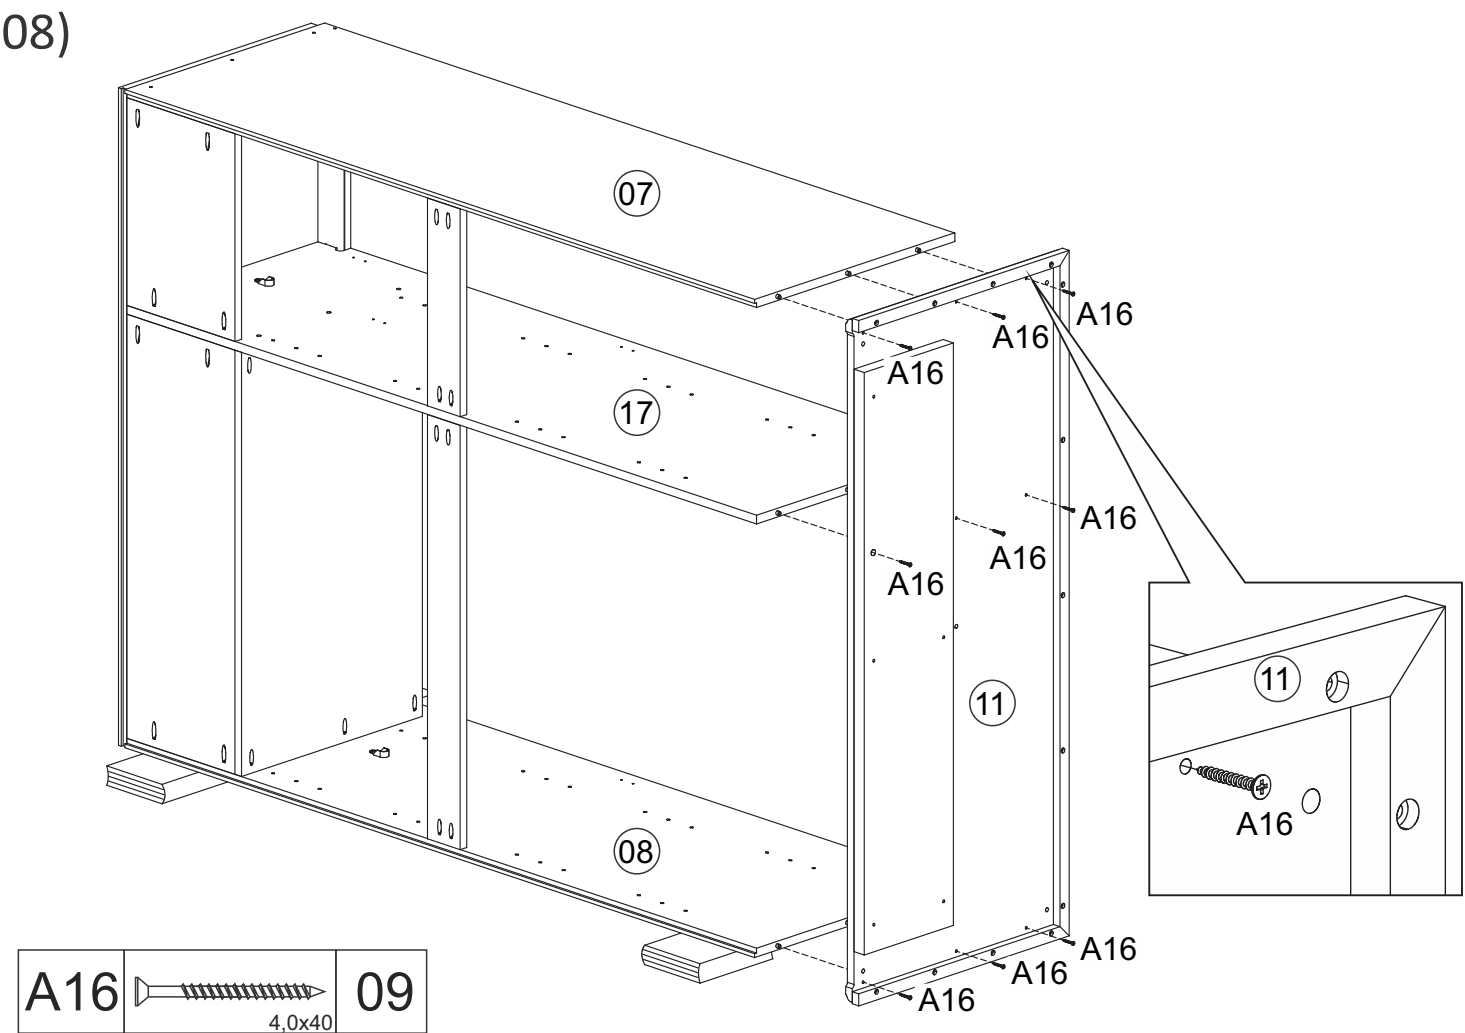





09)

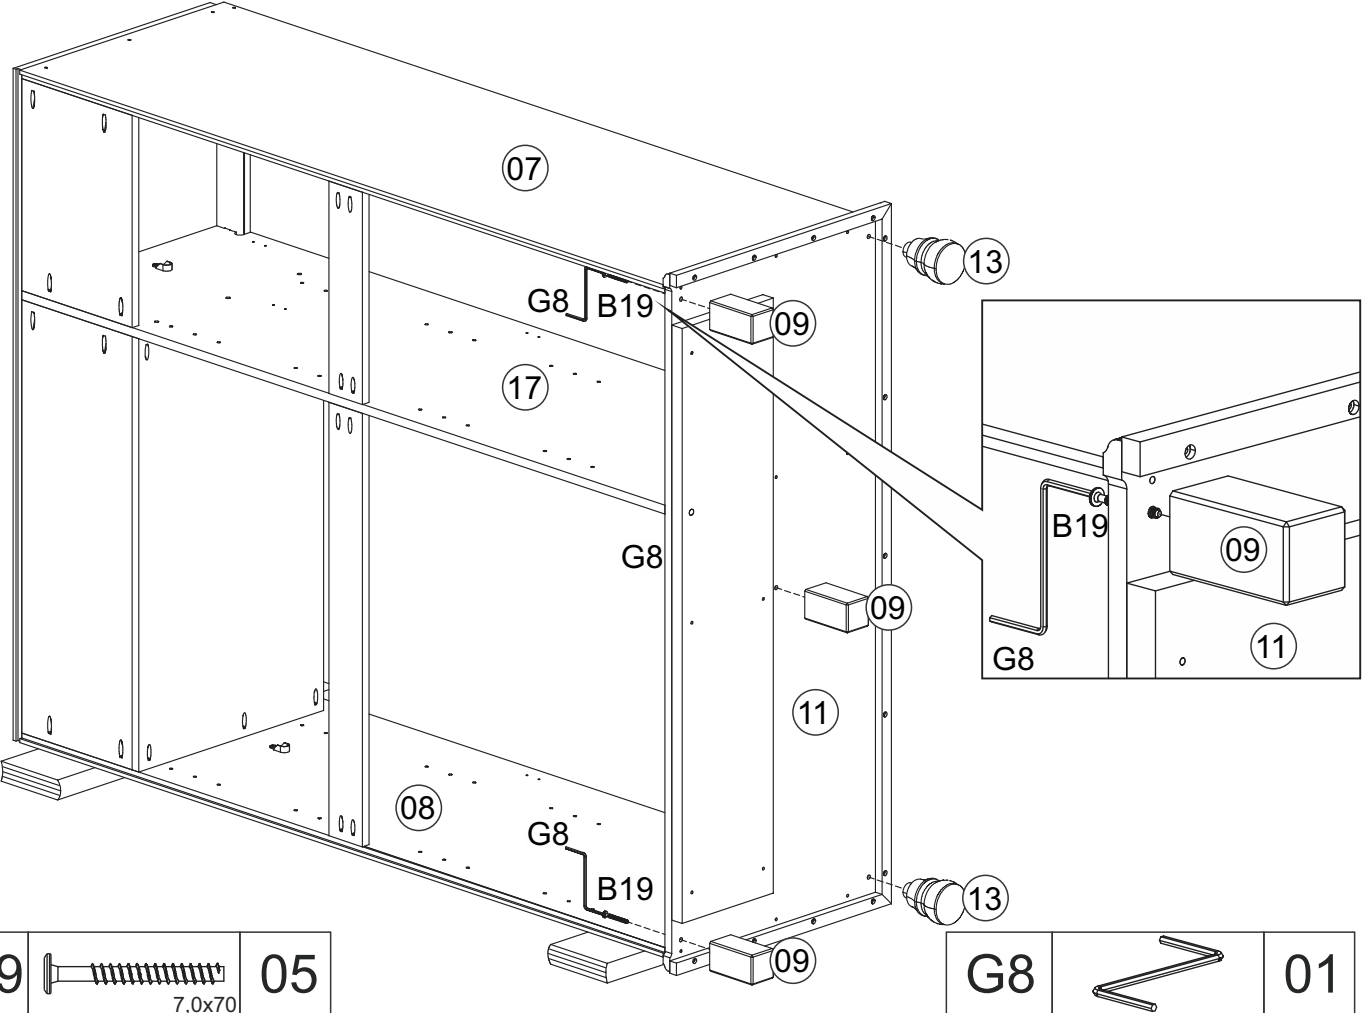

10)




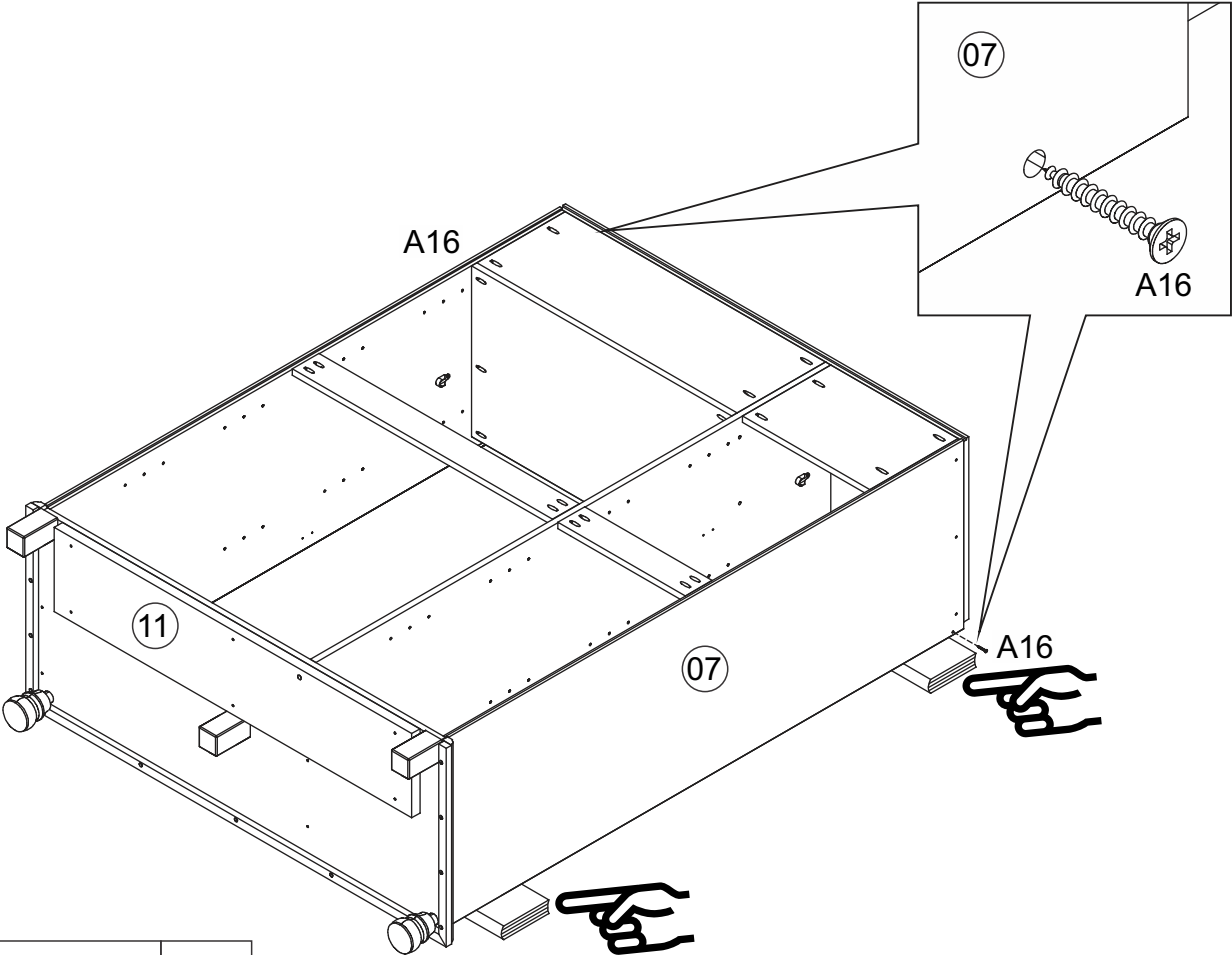


11)

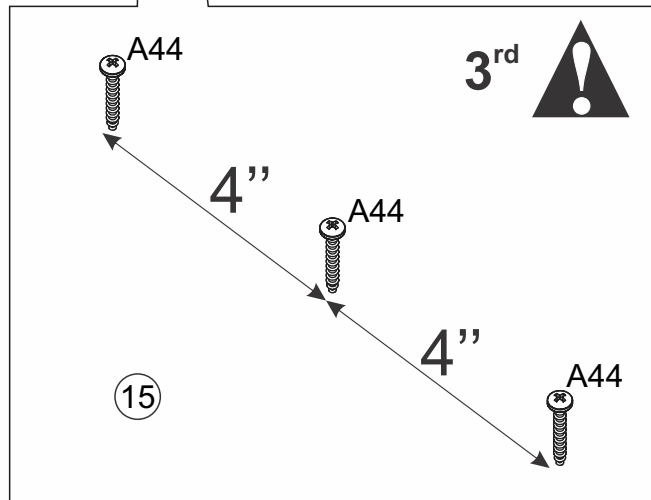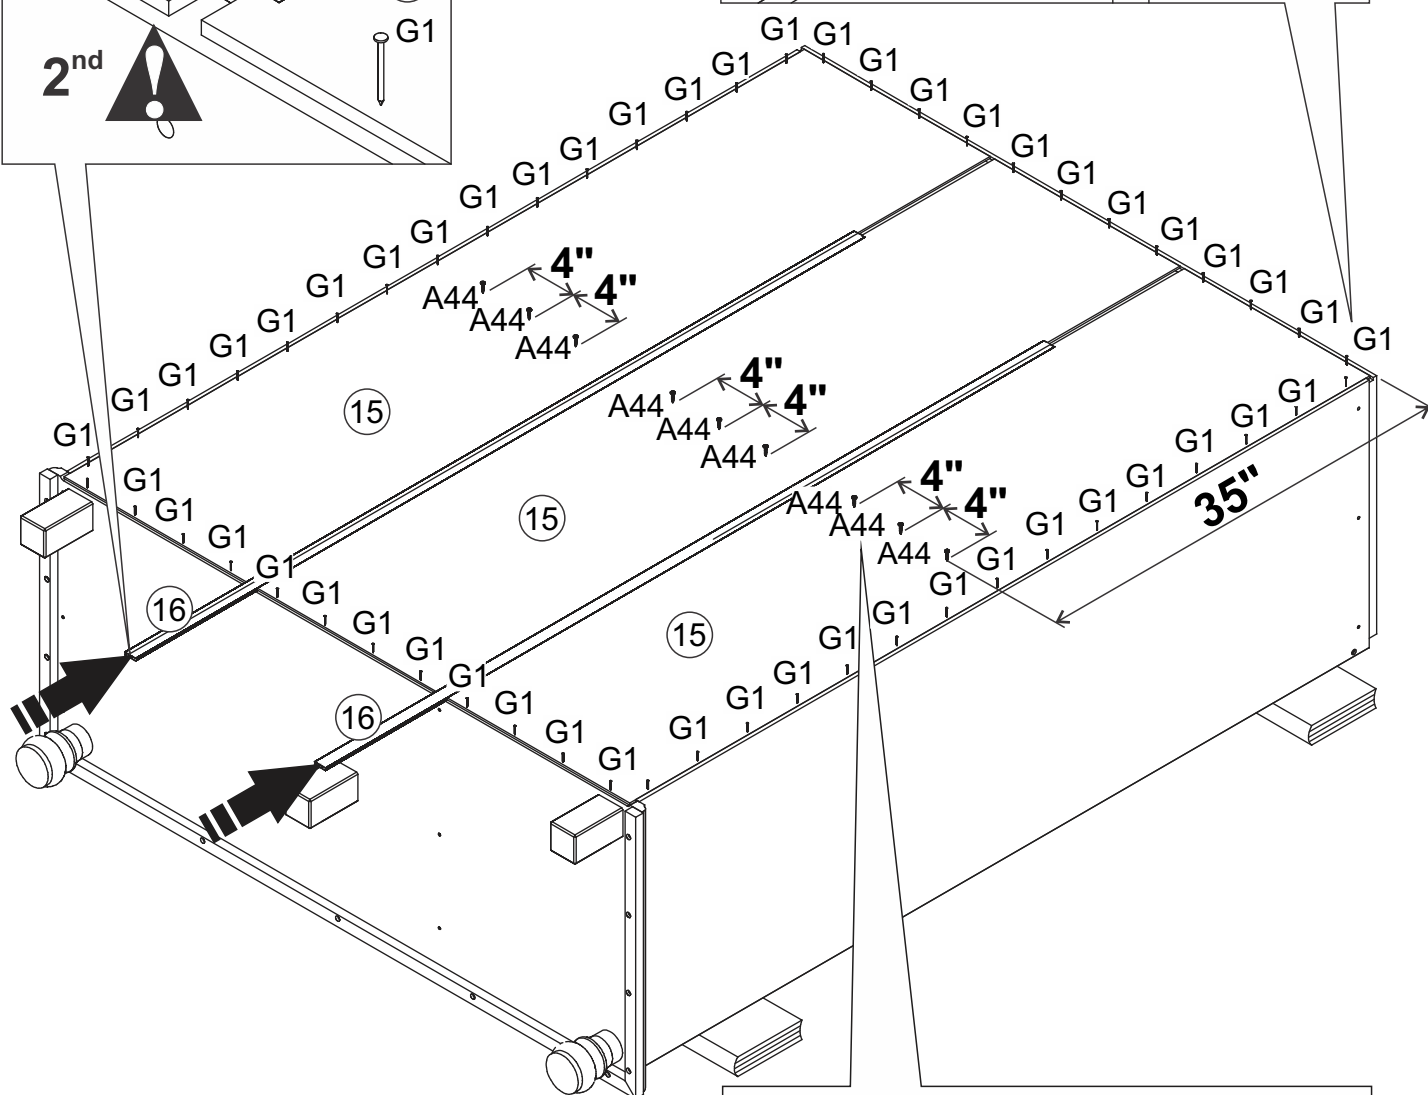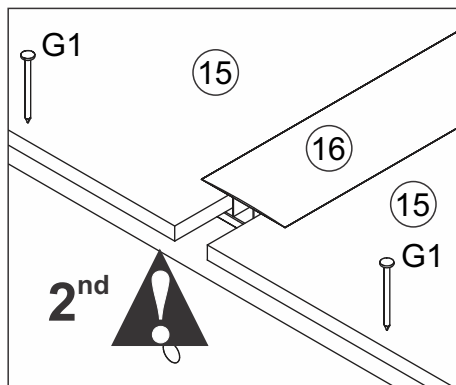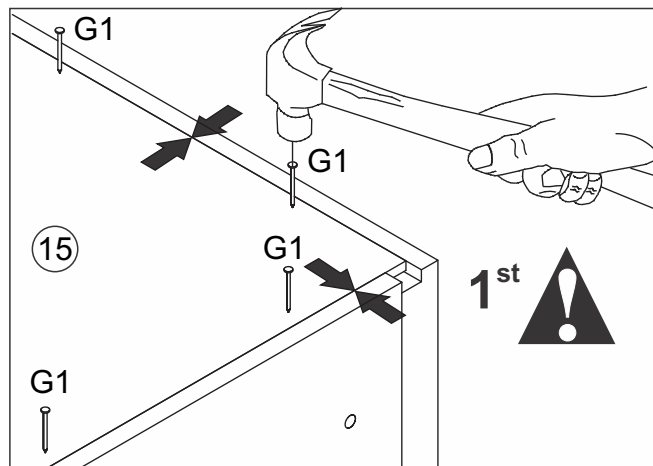





A44	 3,5x14	09
G1	 10x10	54

12)

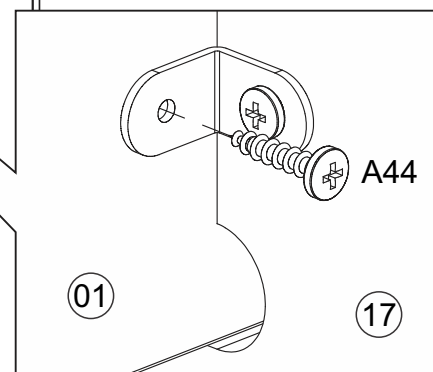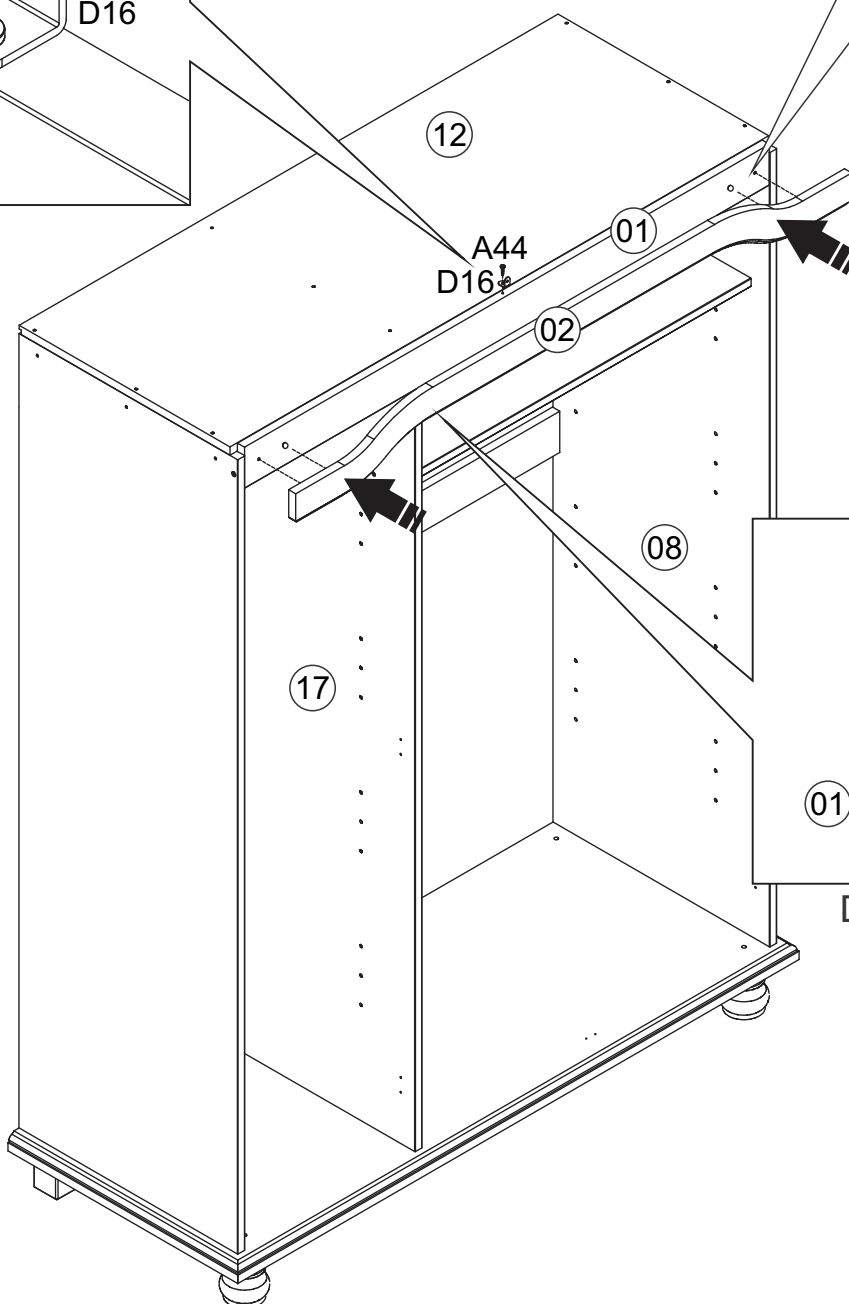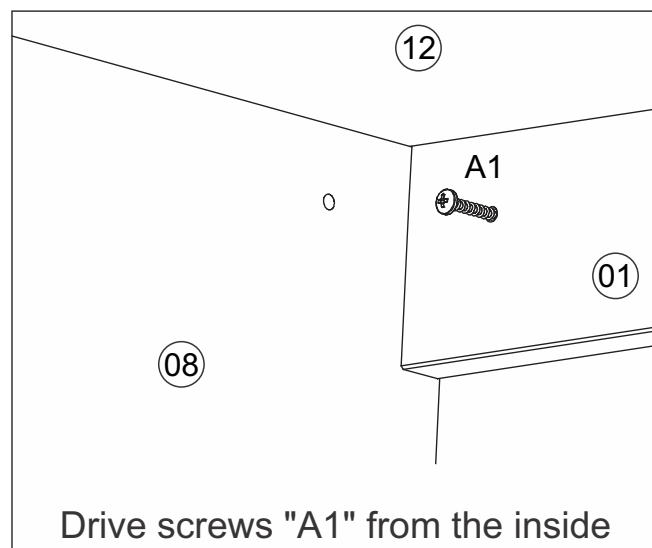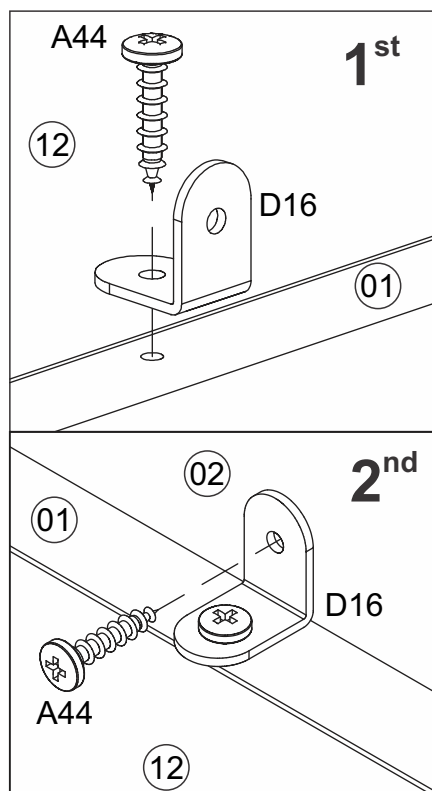


A1		02	A44		02	D16		01
	4,0x30			3,5x14				

13)

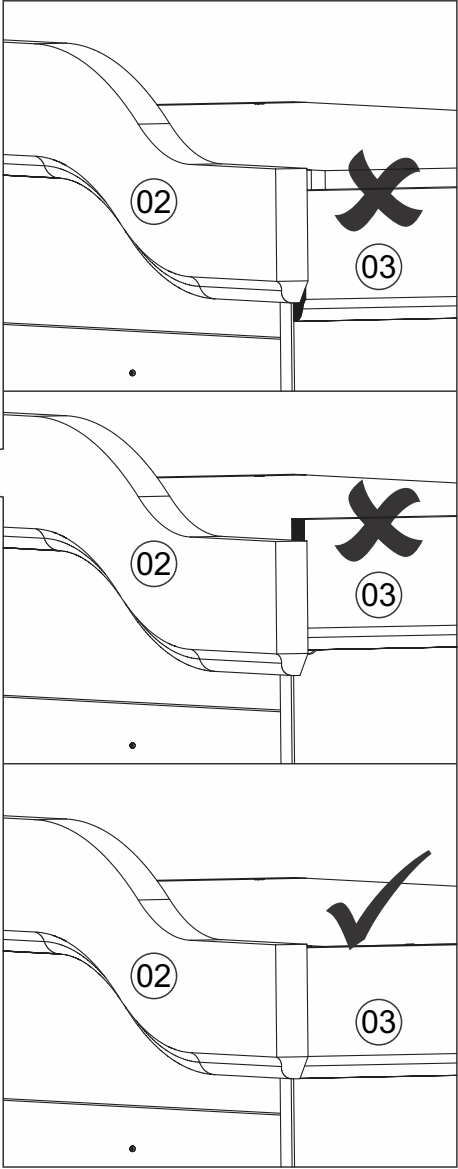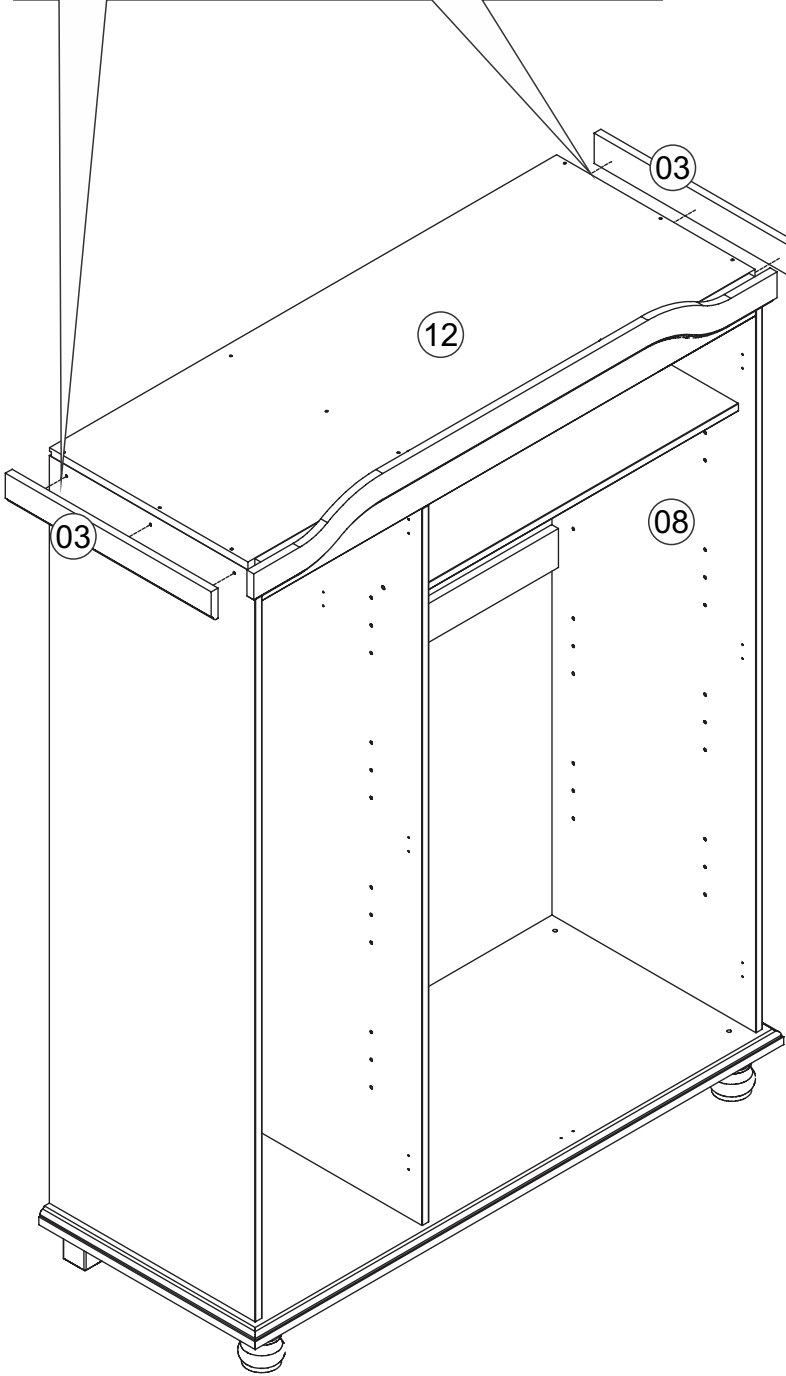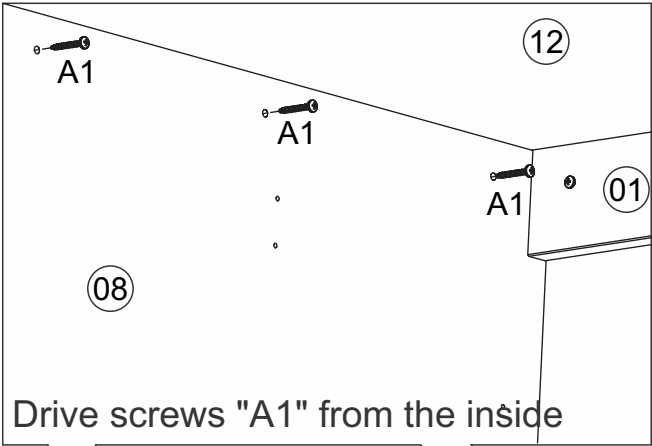


14)

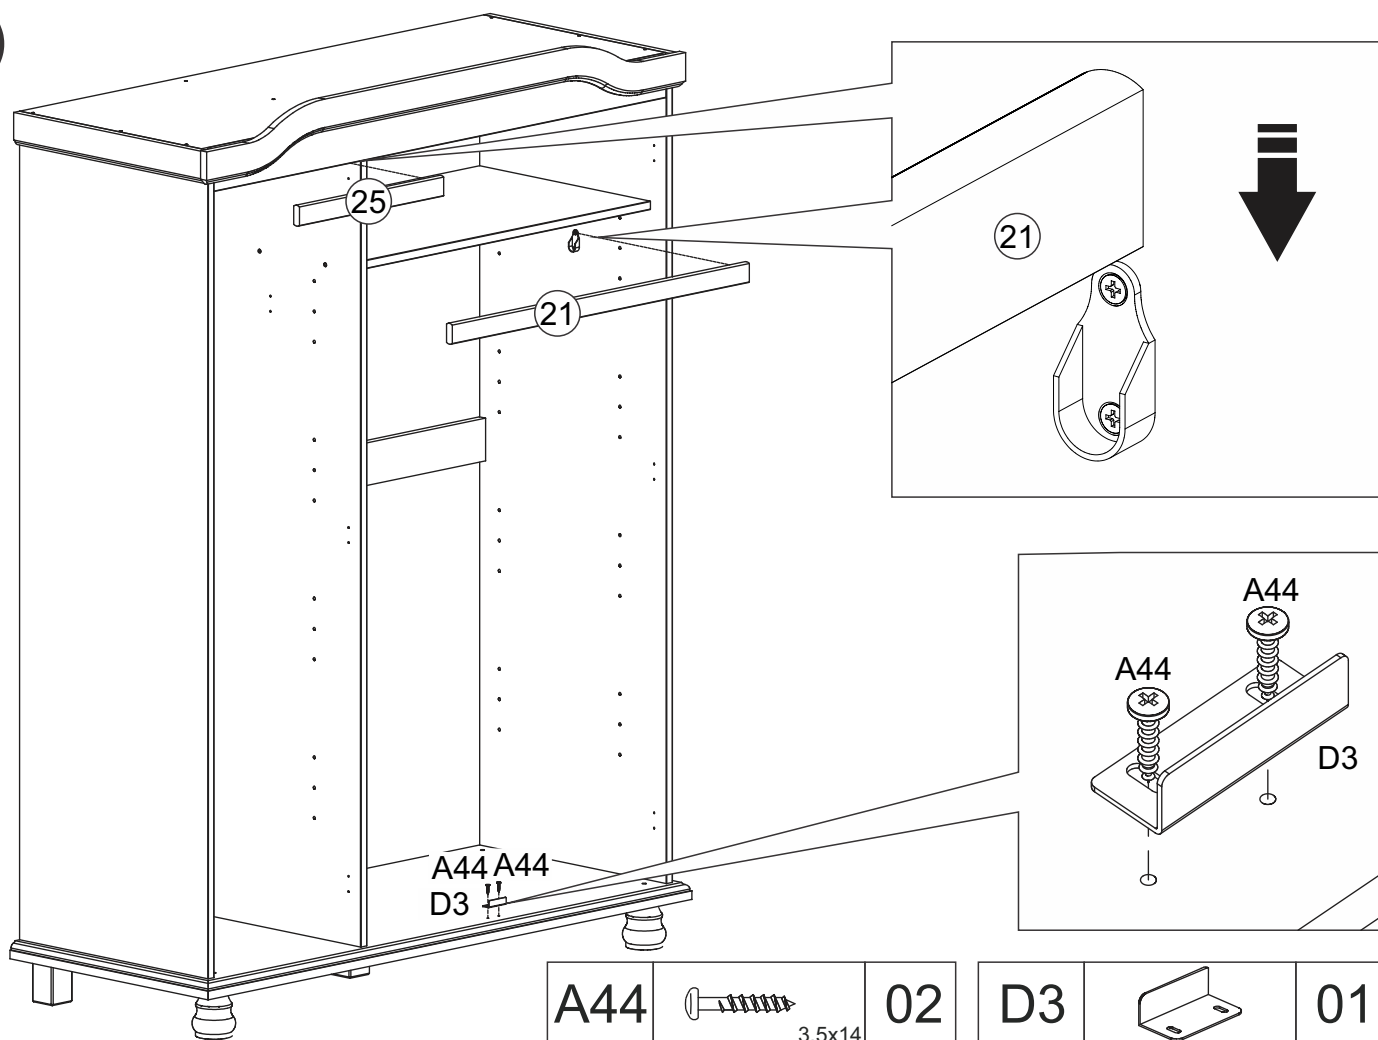


15)


If the hinge (F10) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.

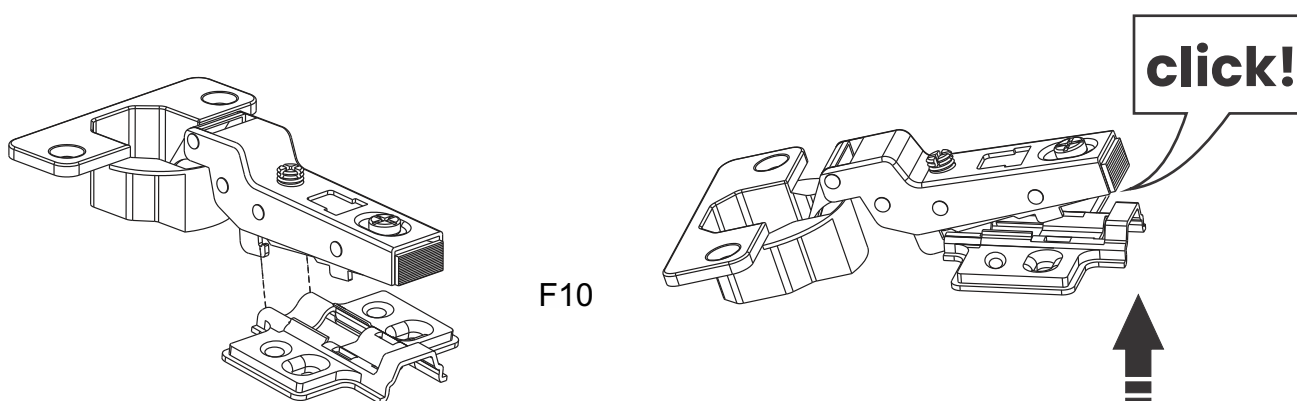


16)

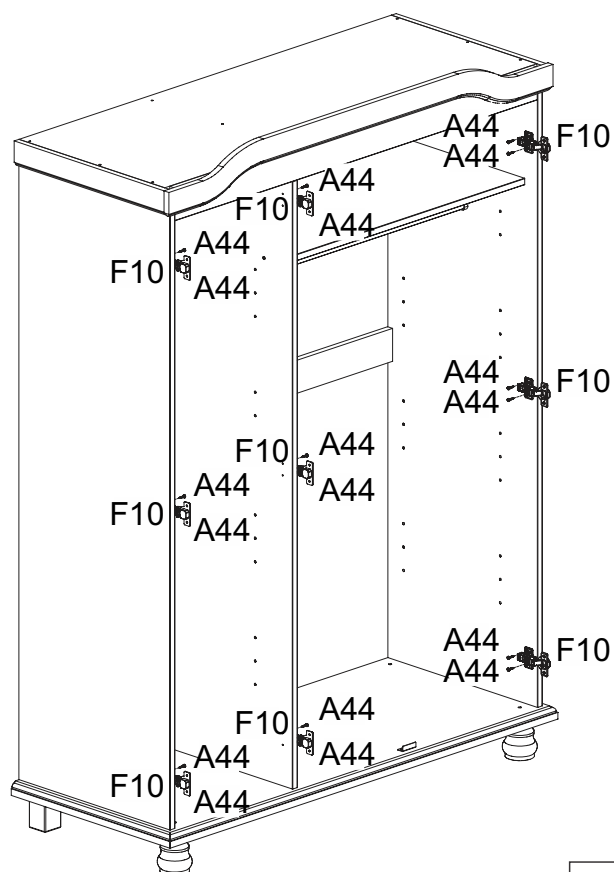

9x

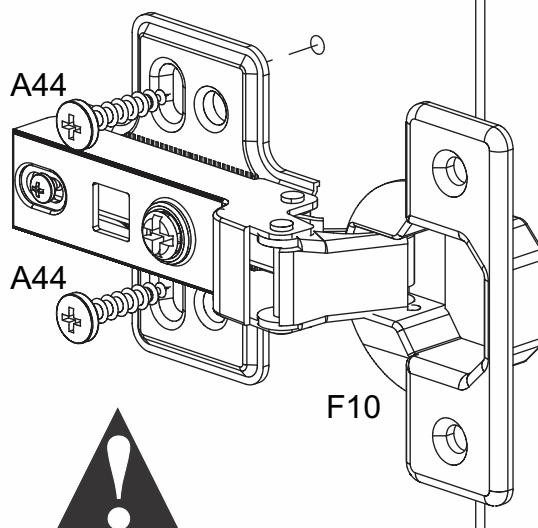

A44



3,5x14




18

F10




09

17)

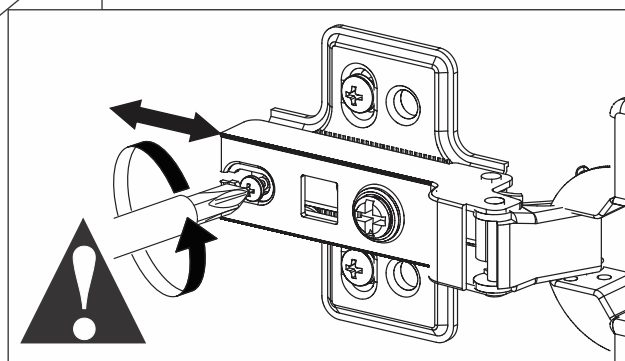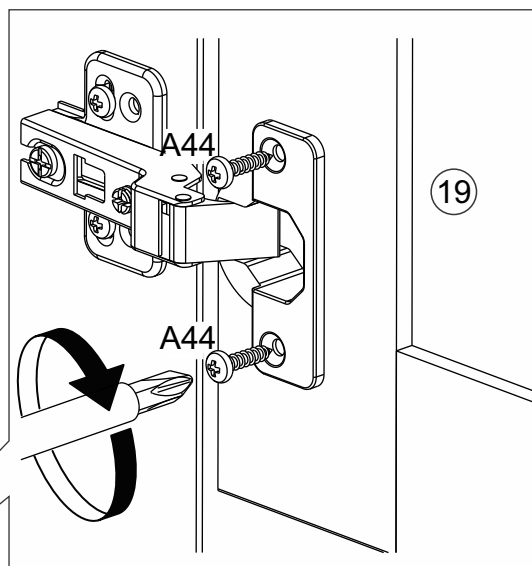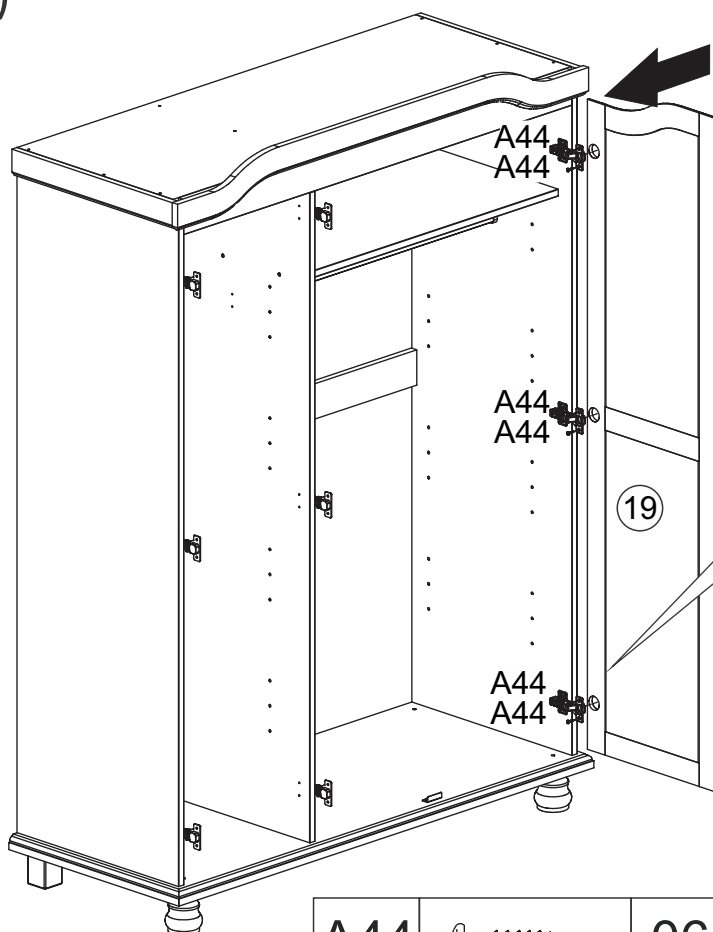

You may need to adjust the hinges (F10) before installing the door




A44




3,5x14




06


18

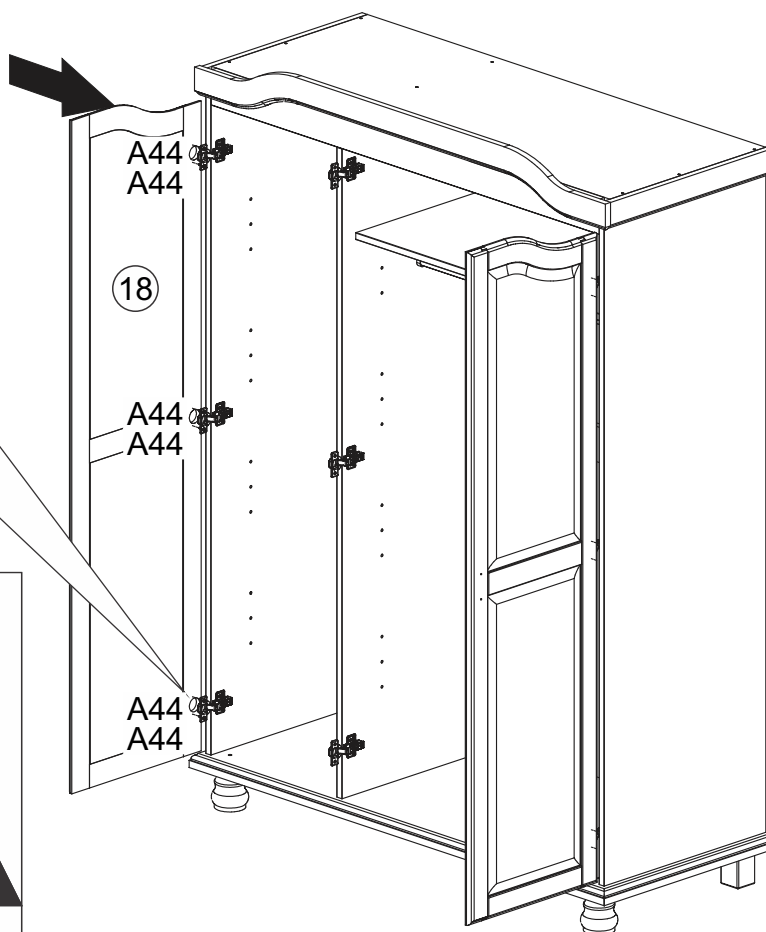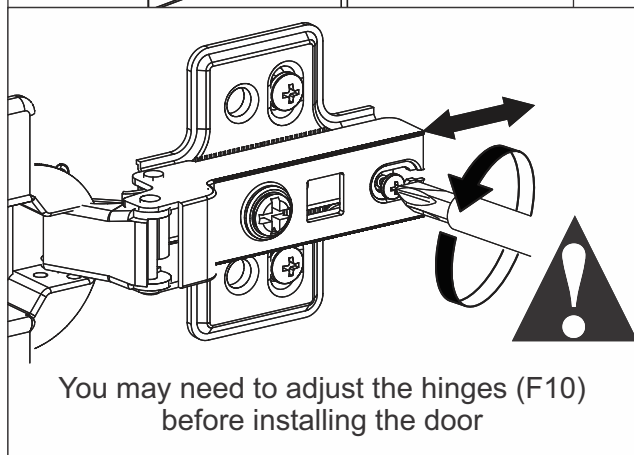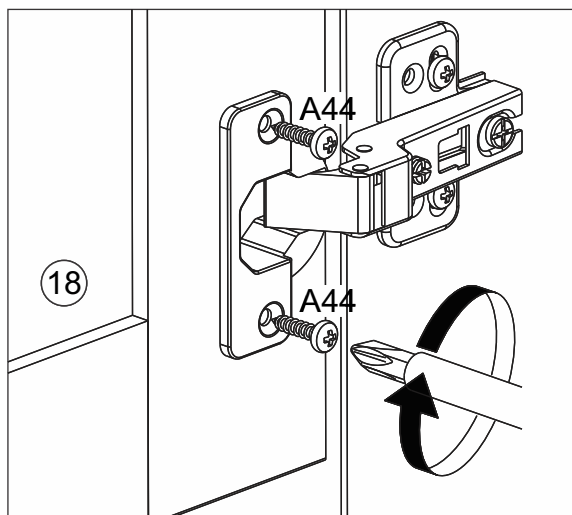



A44		06
3,5x14		

19)

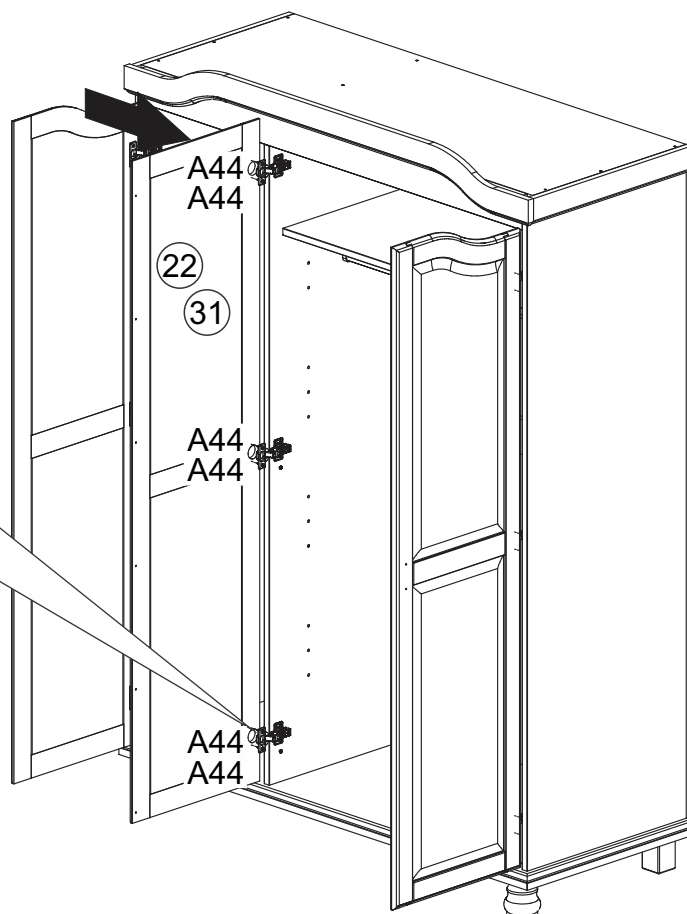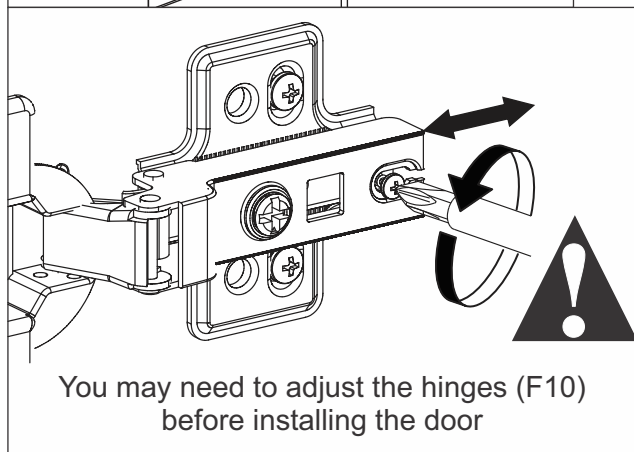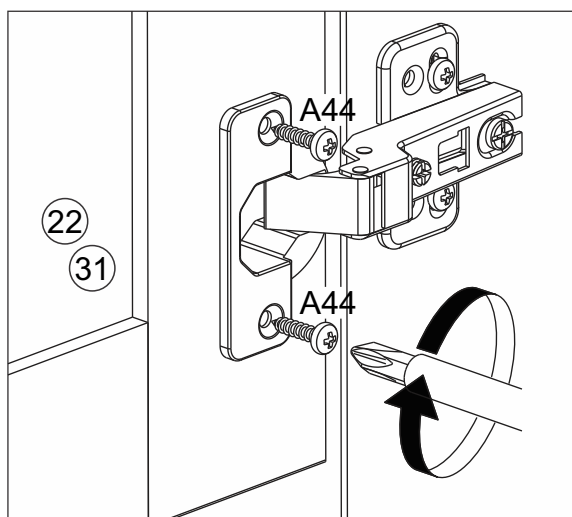



A44		06
3,5x14		

20)

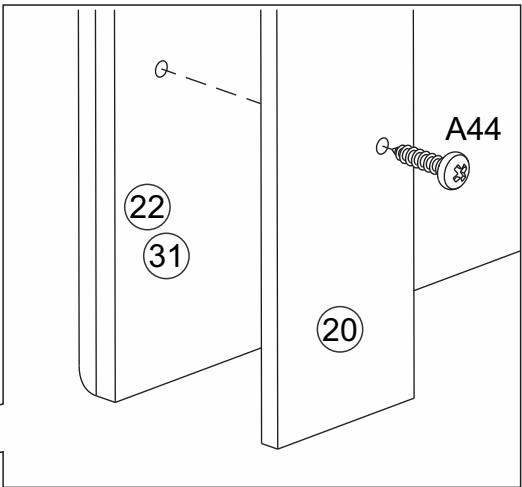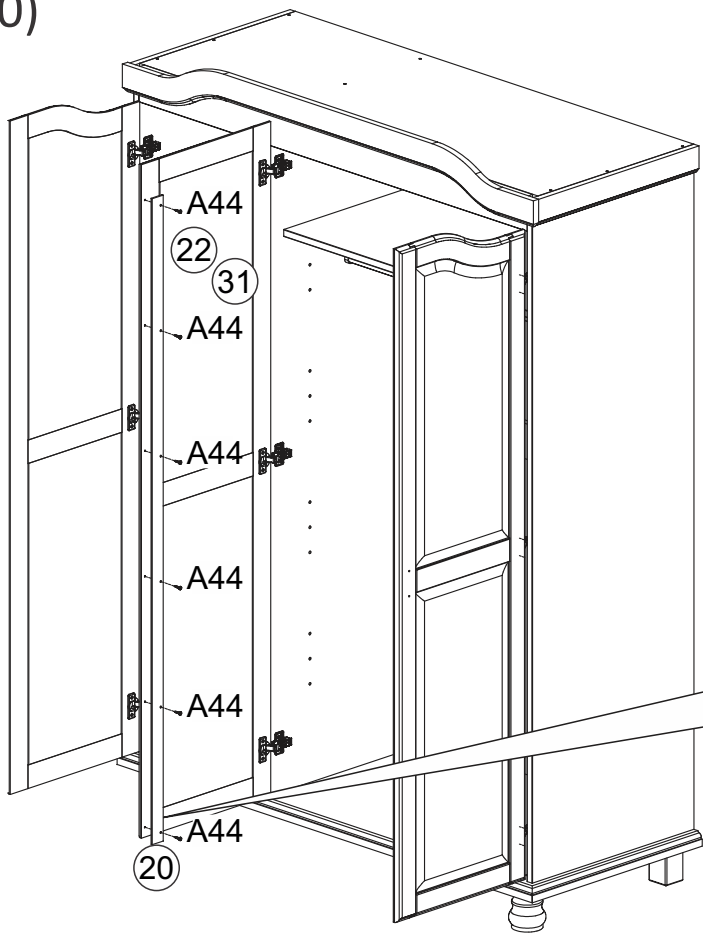













A44		06
3,5x14		

21)





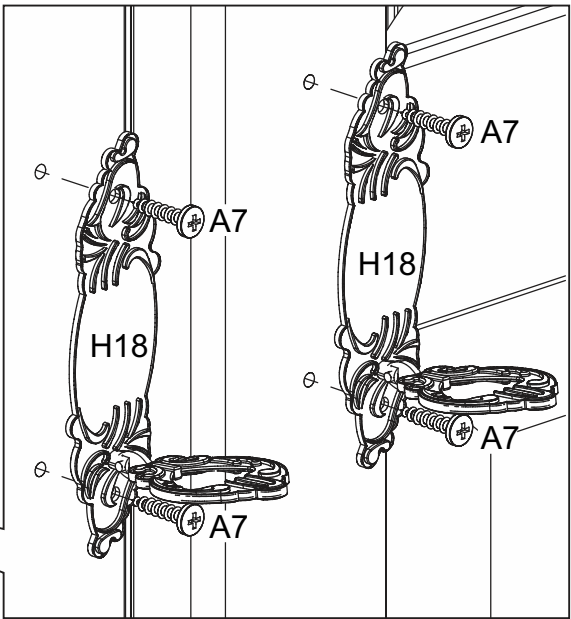
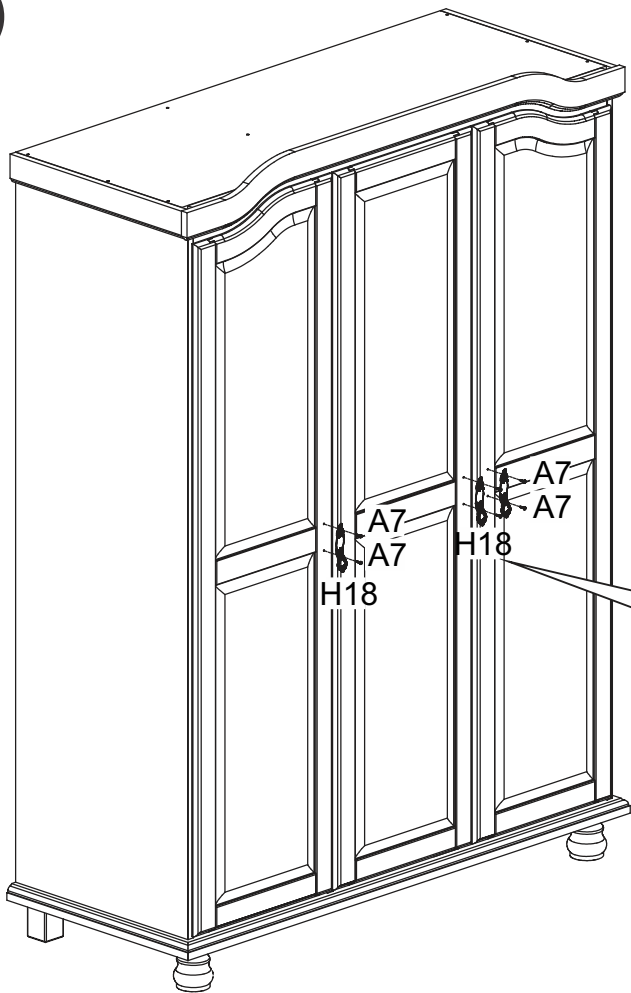


A7		06
3,0x16		
H18		03

22) HINGE ADJUSTMENT GUIDE.

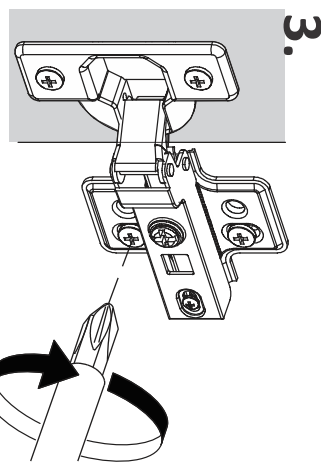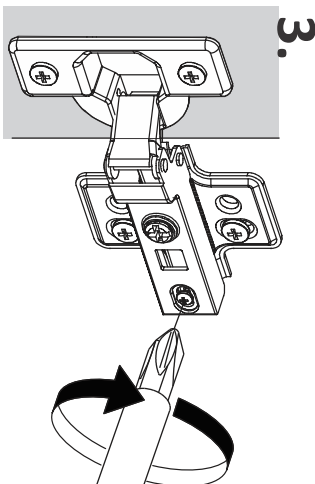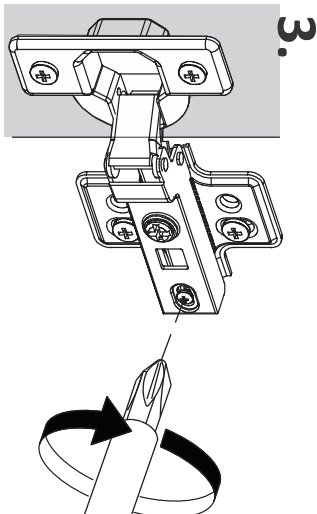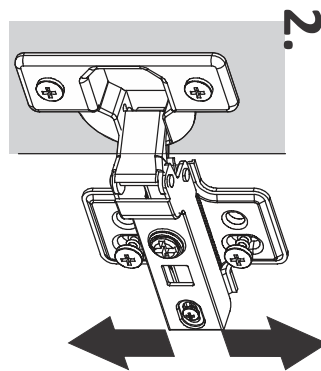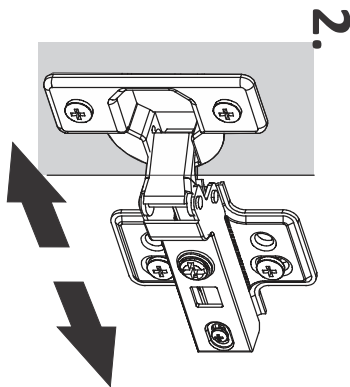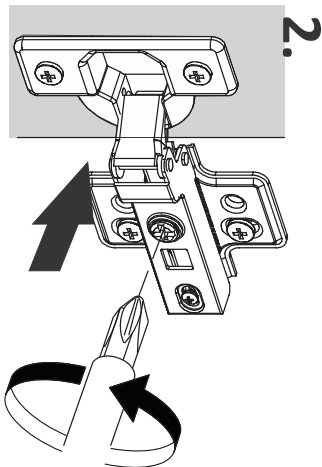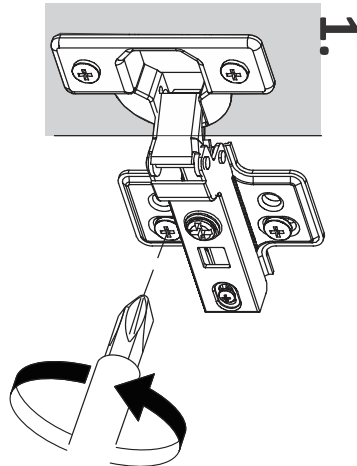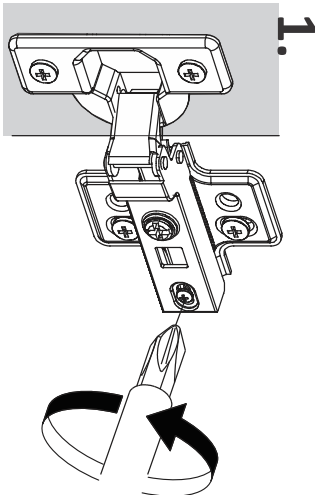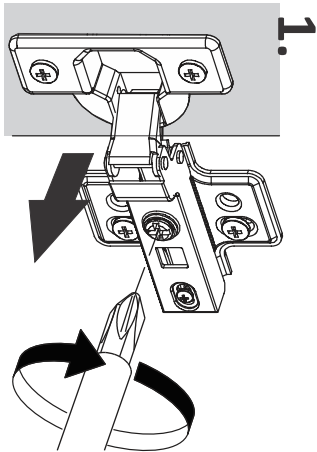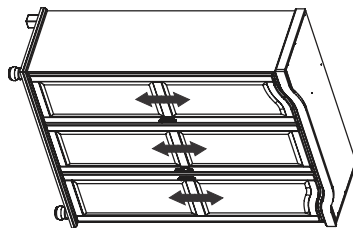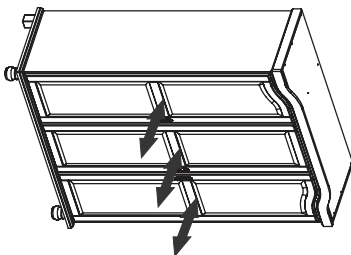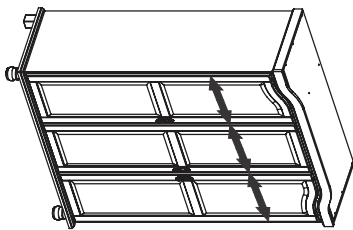

23) Tip-over Restraint Kit Installation

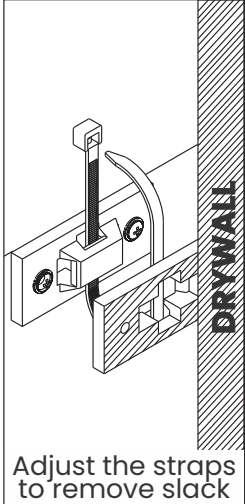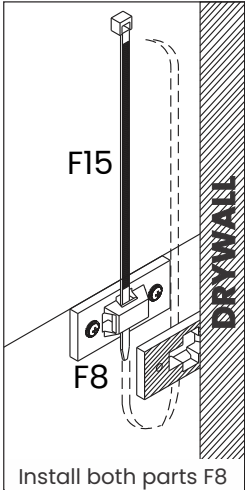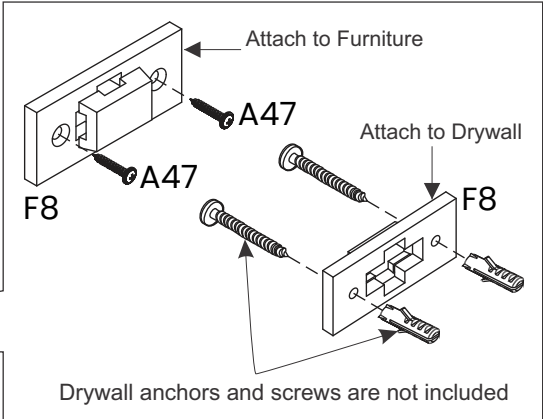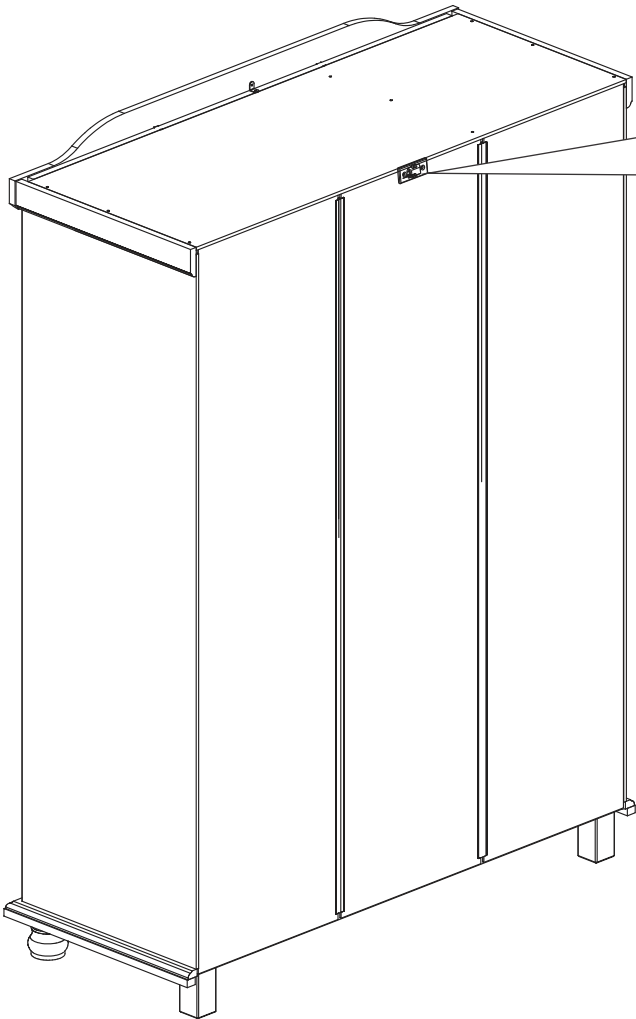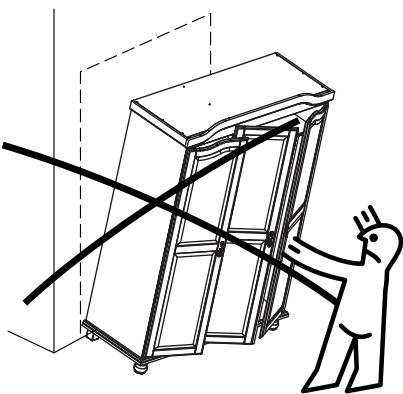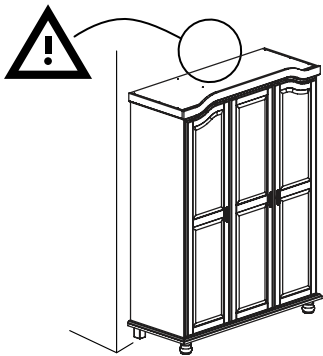

A47	 3,0x20	2
F8		2
F15		1