
INSTALLATION INSTRUCTIONS

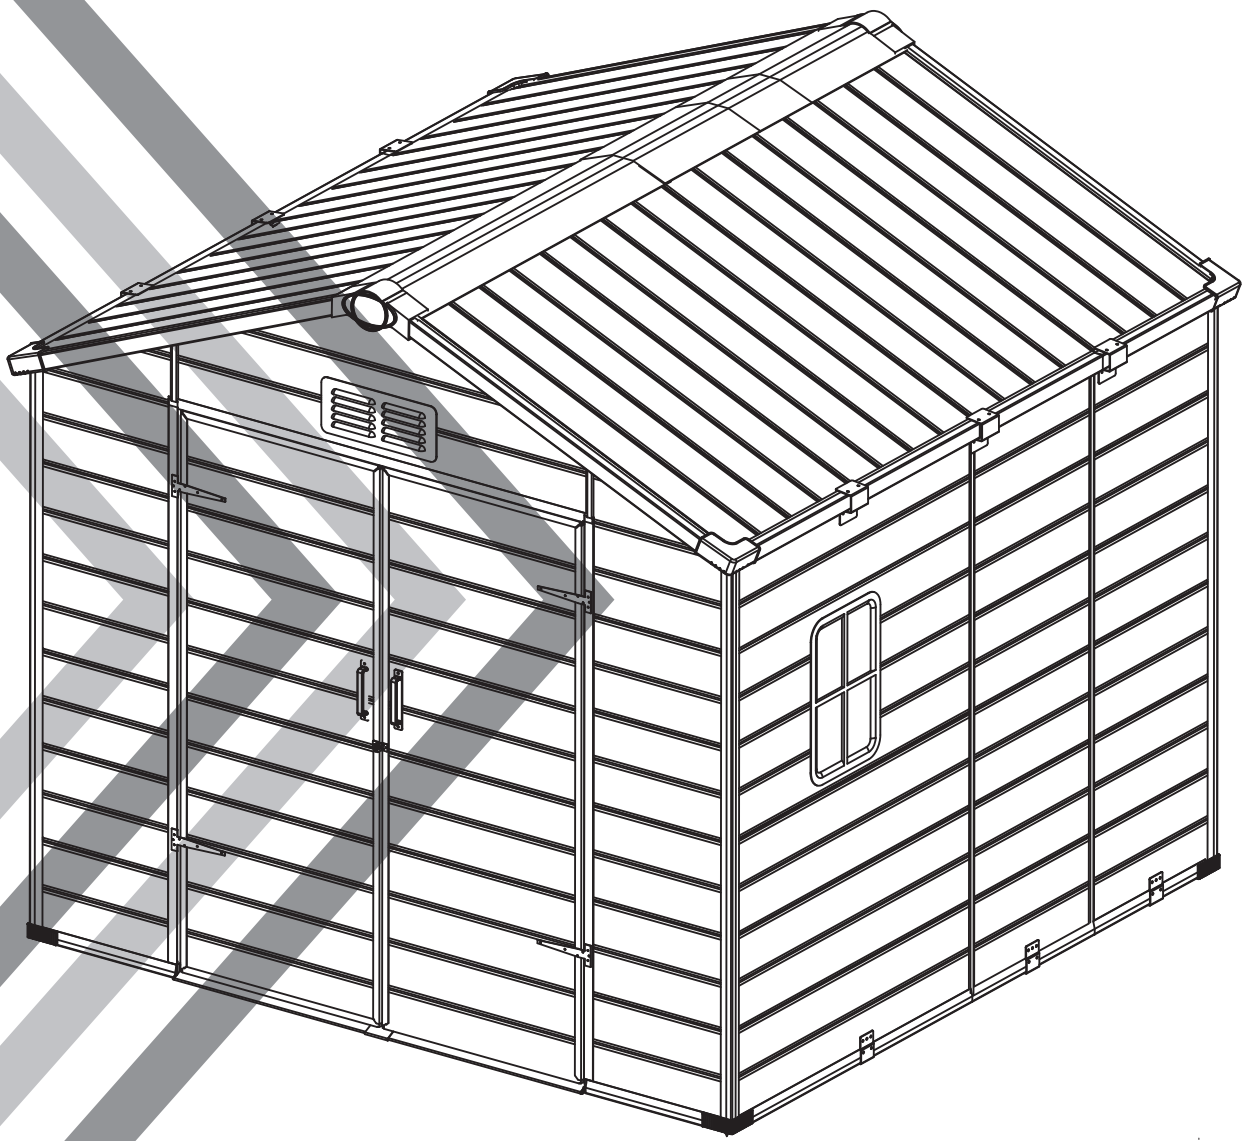

TOOL ROOM8x8

-INSTALLATION INSTRUCTIONS-

How to Use the Installation Manual

Read Thoroughly First

Before beginning assembly, carefully read all instructions and information in the manual. Verify that you have all the parts listed in the parts list.

Self-Drilling Required

Due to the ductility of the resin material, there are no pre-drilled holes on the panels. You will need to drill the holes yourself during assembly as per the instructions.

Understand the Diagrams

The manual includes diagrams and a parts list. Cross-reference the part numbers with the physical pieces to ensure all components are present.

Follow Step-by-Step

Do not skip ahead. Adhere strictly to the assembly instructions in the sequence provided to avoid errors.


Tools needed for installation


Scraper×1


Electric Drill×1


Ladder×1


Screw Driver×1

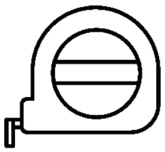
Tape Measure×1






















Small wrench×1


















Glove×1


Note:Due to the ductility of the resin,there are no pre-drilled holes on the panel,so please drill your own holes.





















Due to the large size of the product and for Safety,we recommend 2-4 people to work together on the installation,which is expected to be completed in 2-4 hours.


















Box A

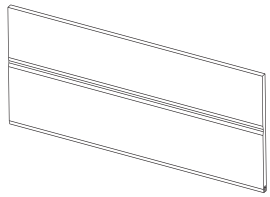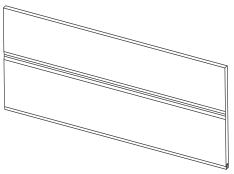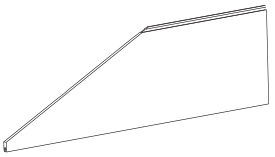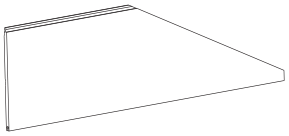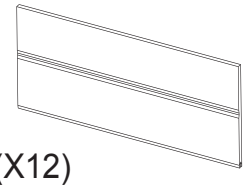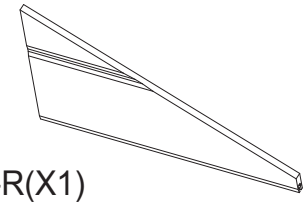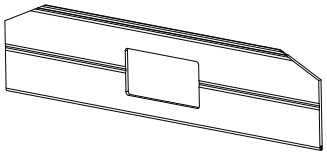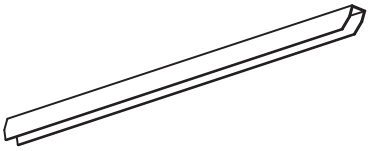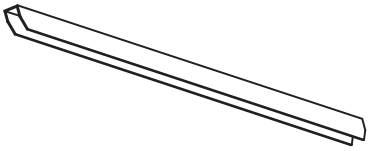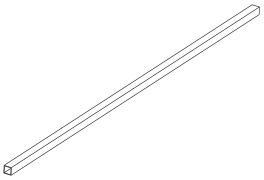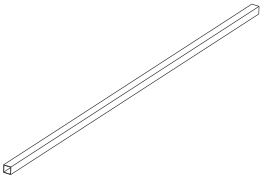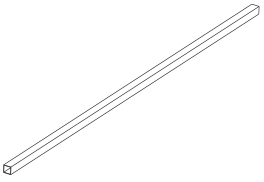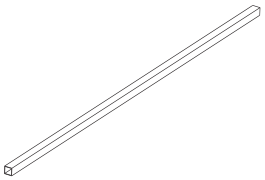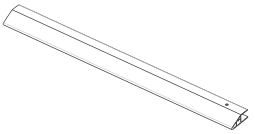
 E7(X12)	 E54(X12)	 E68-L(X1)
 E68-R(X1)	 E47(X12)	 E70-R(X1)
 E70-L(X1)	 E64-R(X1)	 E64-L(X1)
 E69(X1)	 H16-L(X1)	 H17(X4)
 F2(X2)	 F65(X1)	 F8(X1)
 F13(X4)	 J43(X8)	 J29(X3)
 J23(X2)	 J58(X2)	 F21(X1)

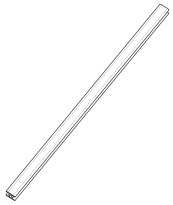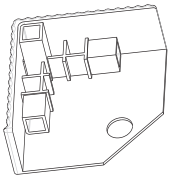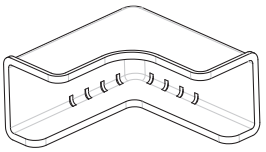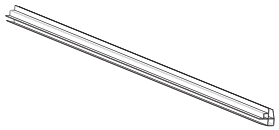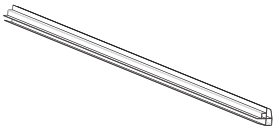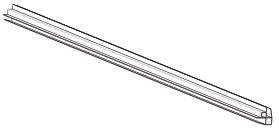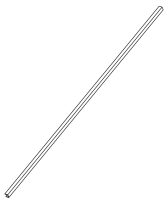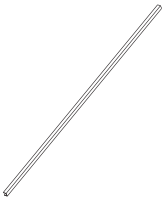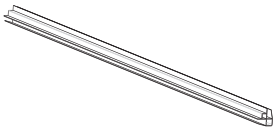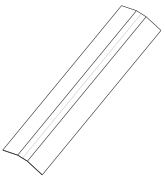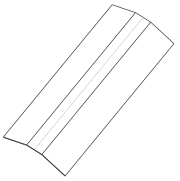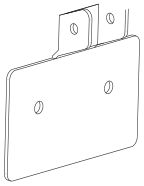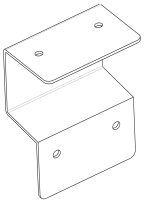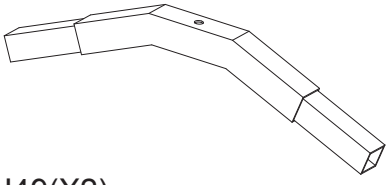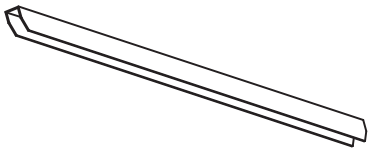 H6(X1)	 G1(X4)	 G9(X4)
 F28(X2)	 F27(X2)	 F33(X2)
 F71(X2)	 F70(X2)	 F26(X2)
 F47(X2)	 G10(X1)	 G12(X1)
 J3(X4)	 J4(X4)	 J49(X2)
 H16-R(X1)		







Box B

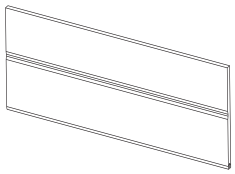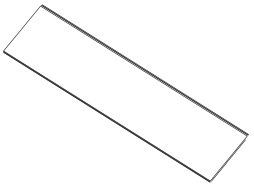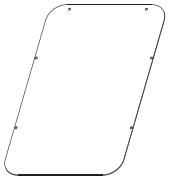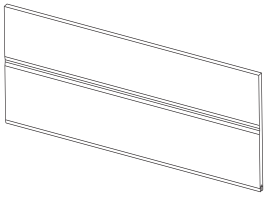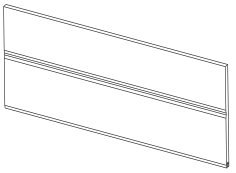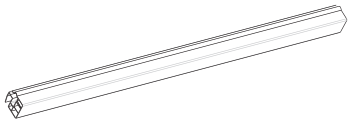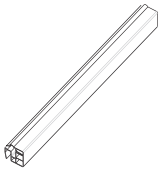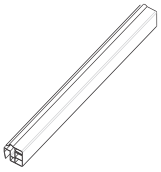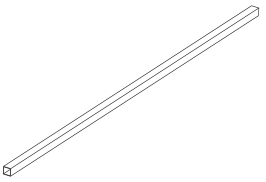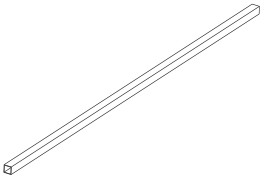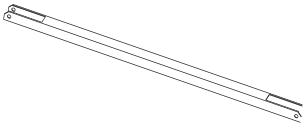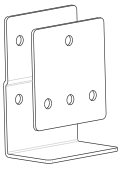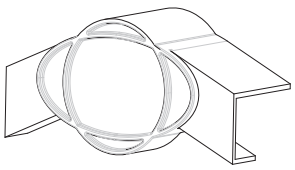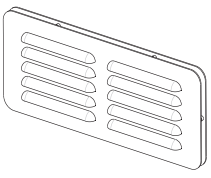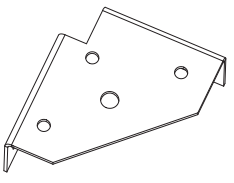 E59(X10)	 E58(X2)	 G18(X2)
 G5(X1)	 E13(X12)	 E3(X6)
 F44(X4)	 F43(X2)	 F12(X1)
 F39(X2)	 F11(X1)	 J37(X1)
 J46(X1)	 J48(X2)	 J47(X4)
 H15(X4)	 G21(X5)	 J6(X7)
 G8(X2)	 G3(X2)	 J2(X4)

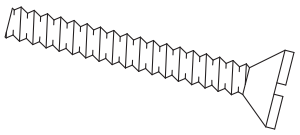
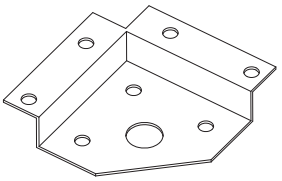
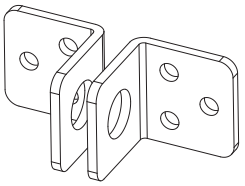
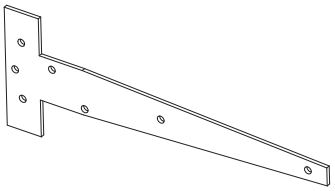


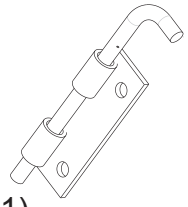
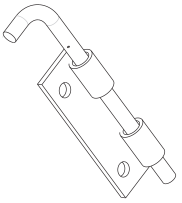
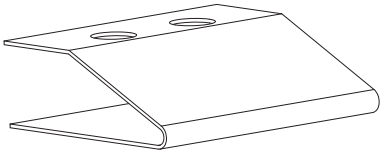


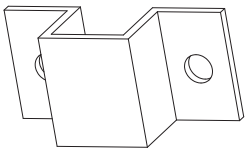
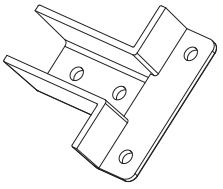
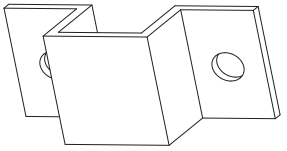
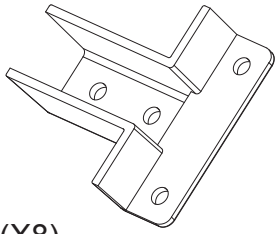


 J45(X2)	 J1(X4)	 J16(X2)
 J17(X4)	 J18(X2)	 J19(X17)
 J65(X22)	 J20(X253)	 J21(X126)
 J60(X16)	 J31(X1)	 J32(X1)
 J59(X1)	 D90(X4)	 D91(X4)
 G15(X6)	 G25(X4)	 G16(X11)
 G26(X8)	 G28(X6)	 G23(X2)




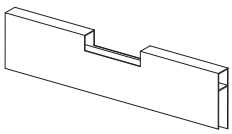
 J62(X1)		

Box C

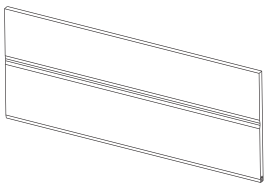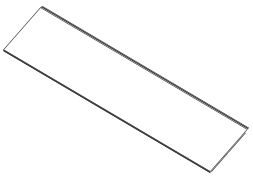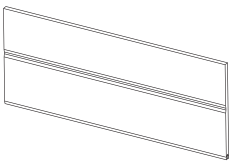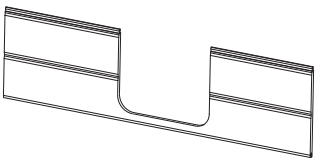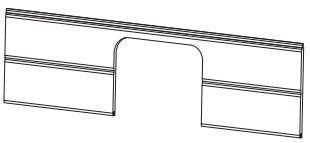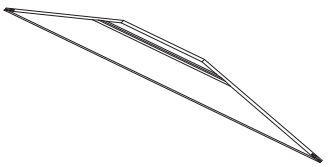
 E7-G(X10)	 E6(X2)	 E3(X4)
 E74(X1)	 E75(X1)	 E4(X1)


Box D (8X2)

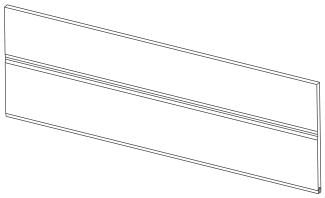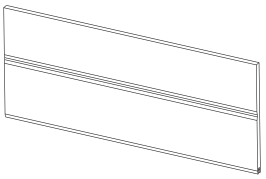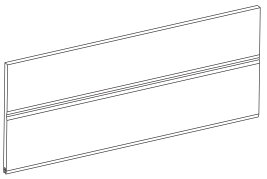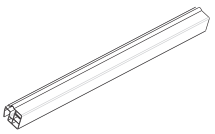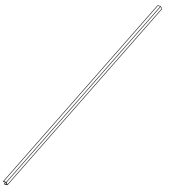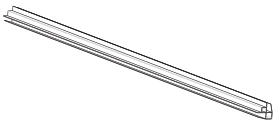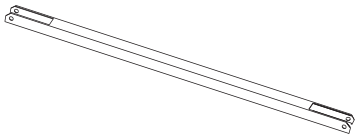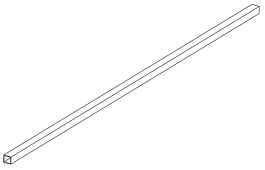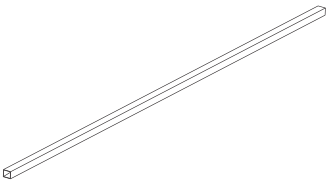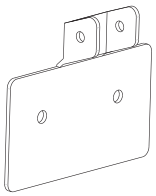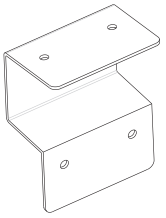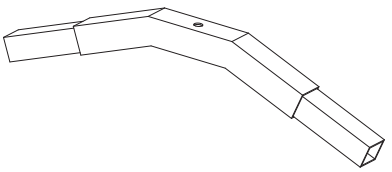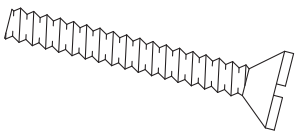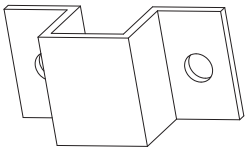 E13(X4)	 E7-G(X4)	 E54(X12)
 F2(X2)	 F40(X2)	 F70(X2)
 F31(X2)	 F10(X1)	 J47(X2)
 J48(X1)	 J58(X2)	 J61(X1)
 J3(X2)	 J4(X2)	 J49(X1)
 J45(X1)	 G15(X4)	 G23(X2)

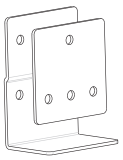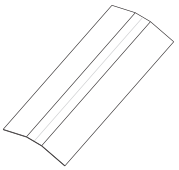
 J6(X2)	 J19(X9)	 J65(X8)
 J20(50)	 J21(X10)	 G12(X1)


1 E6(x1) E7-G(X7) Cork Hammer

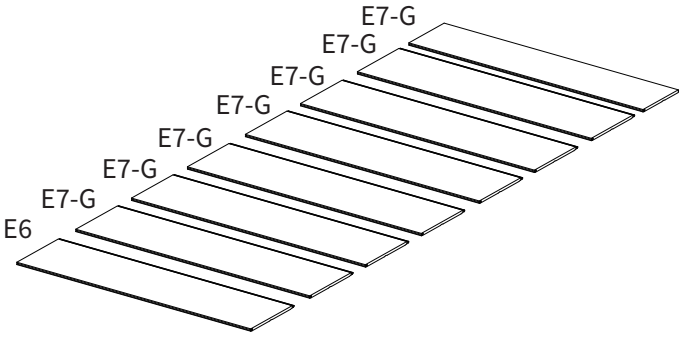

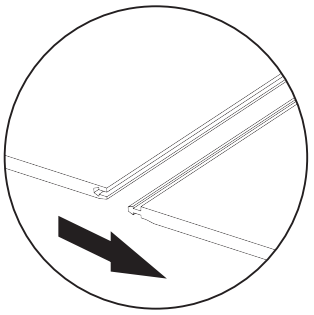



2 F12(X1) F10(X1) F11(X1) Cork Hammer

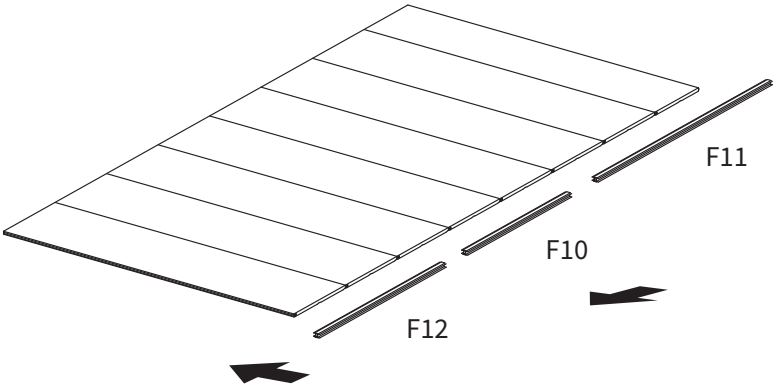

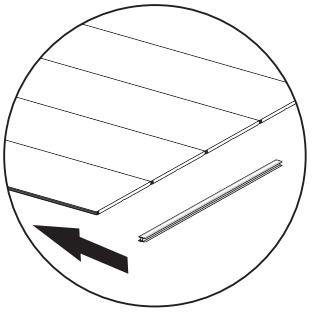



3 E6(x1) E7-G(X7) Cork Hammer

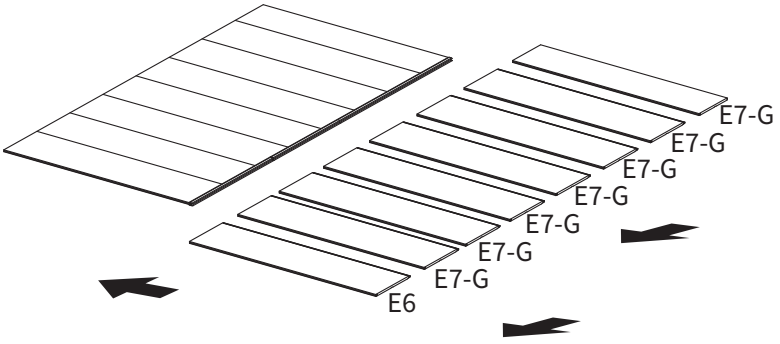

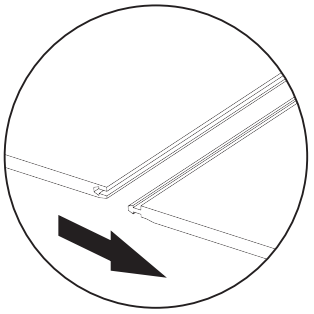


4 G1(X1) Cork Hammer

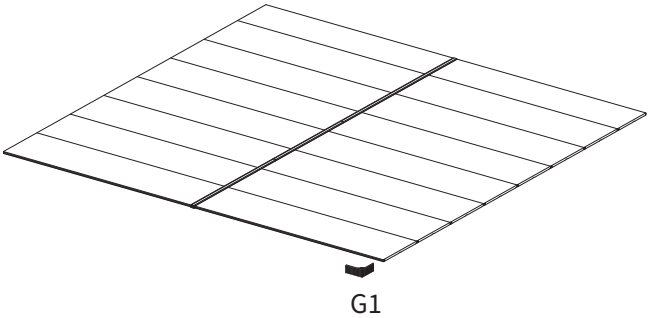


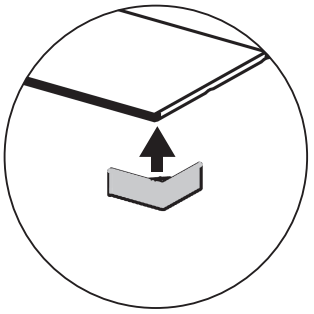


5 F26(X2) F21(X1) Cork Hammer

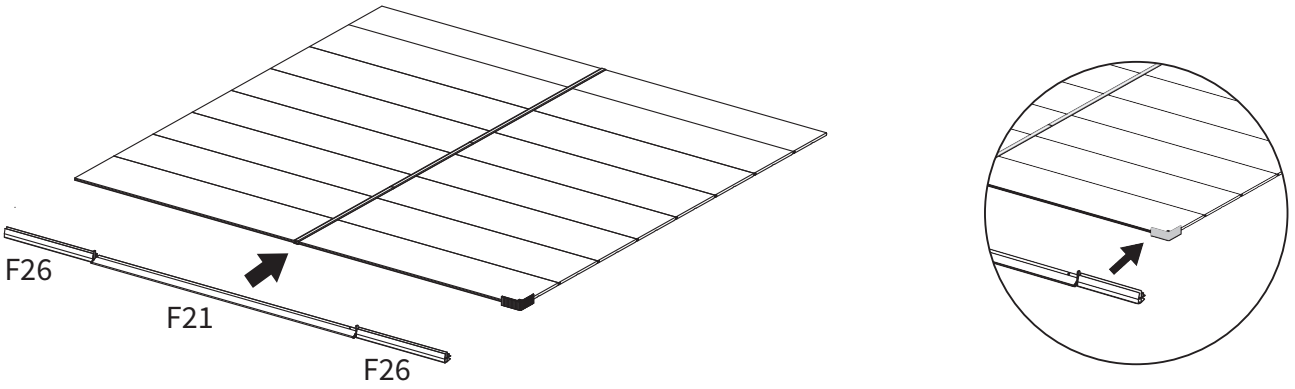


6 G1 (X1) Cork Hammer

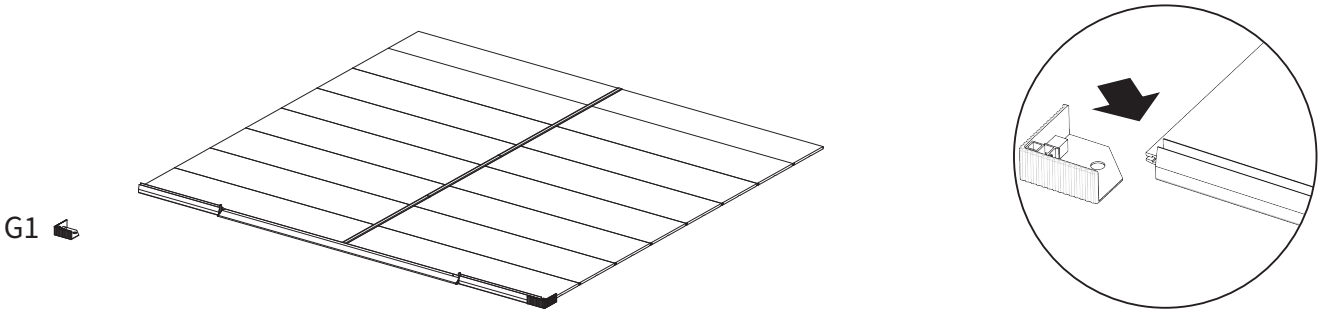


7 F28(X1) F27(X1) F31(X1) Cork Hammer

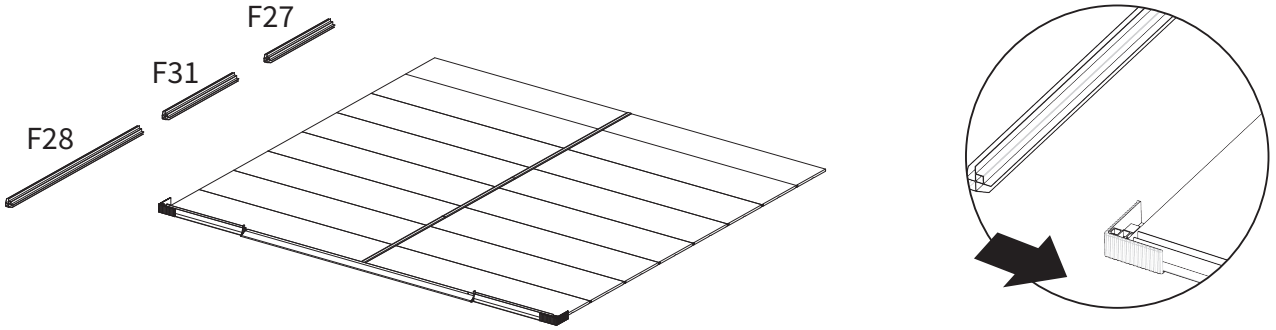


8 G1(X1) Cork Hammer

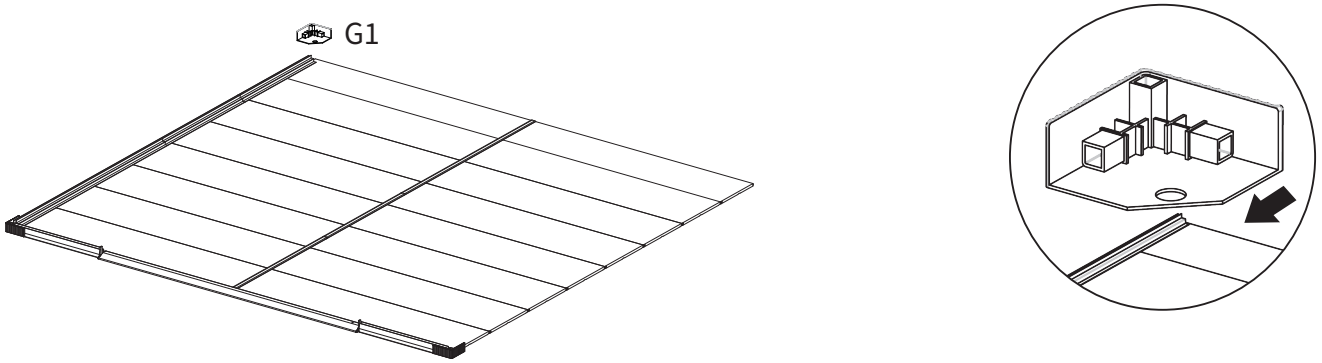


9 F33(X2) Cork Hammer

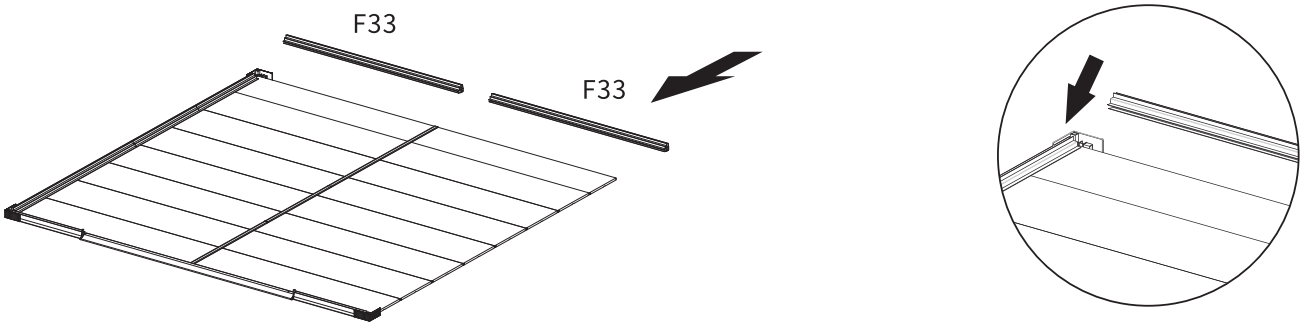


10 F28 (X1) F27 (X1) F31 (X1) Cork Hammer

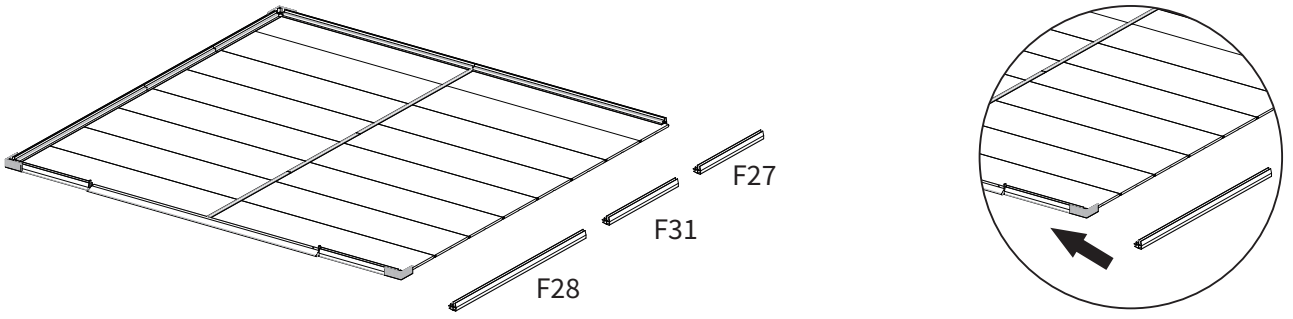

11 G1(X1) Cork Hammer

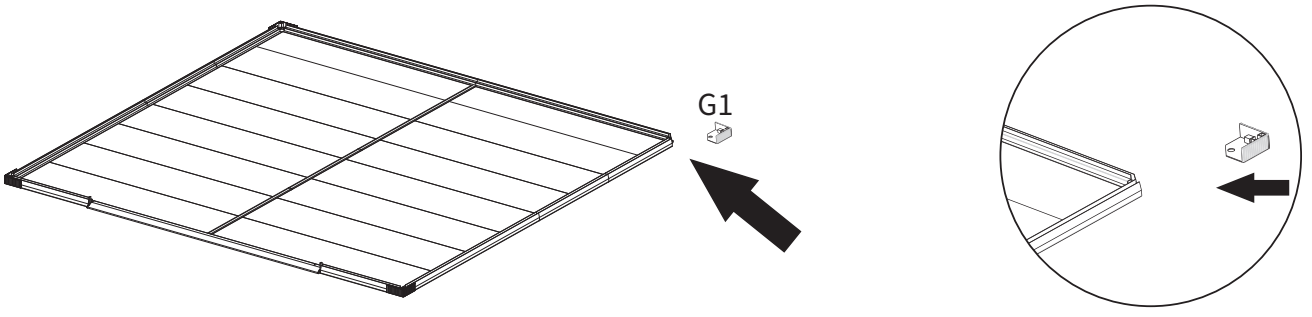


12 J20(X42) Cork Hammer Electric Drill

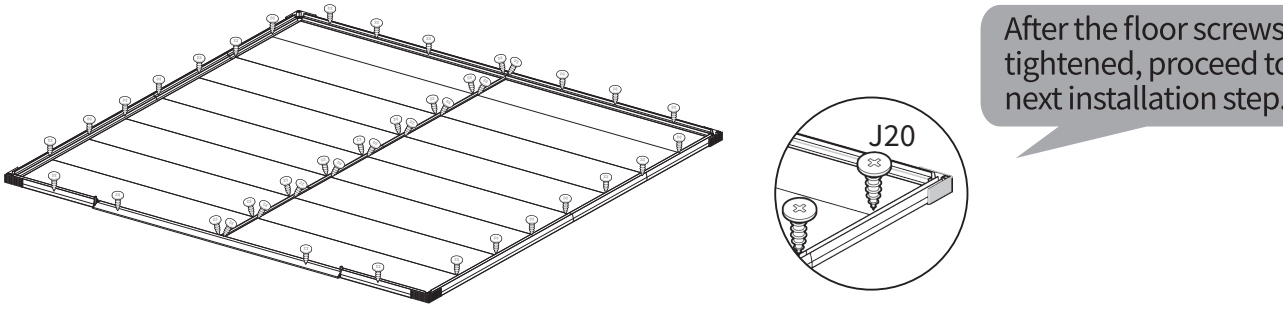


After the floor screws are tightened, proceed to the next installation step.


13 F13(X1) Cork Hammer

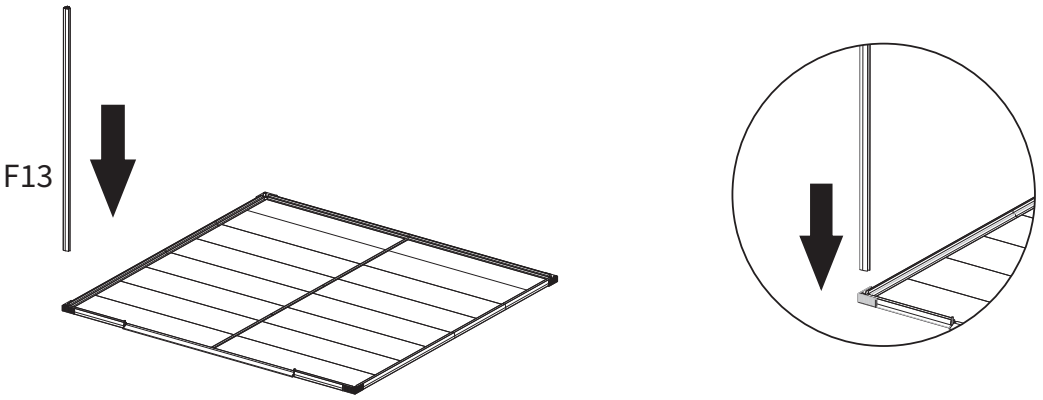


14 E3 (X3) Cork Hammer

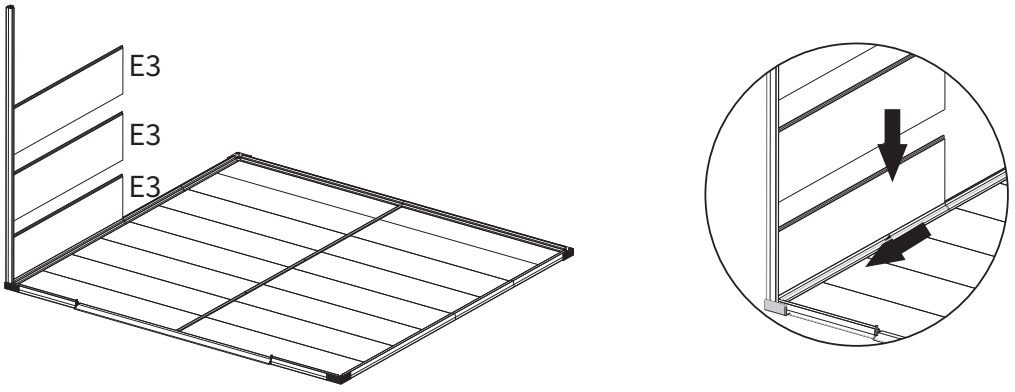


15 E47(X2) Cork Hammer

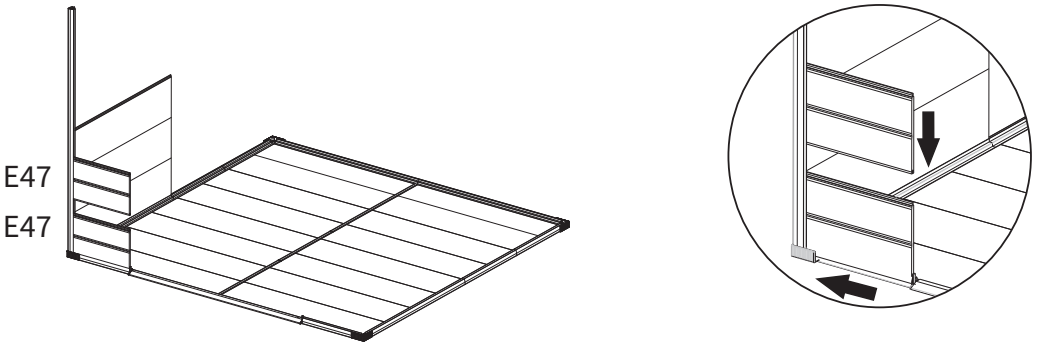

16 E3 (X3) Cork Hammer

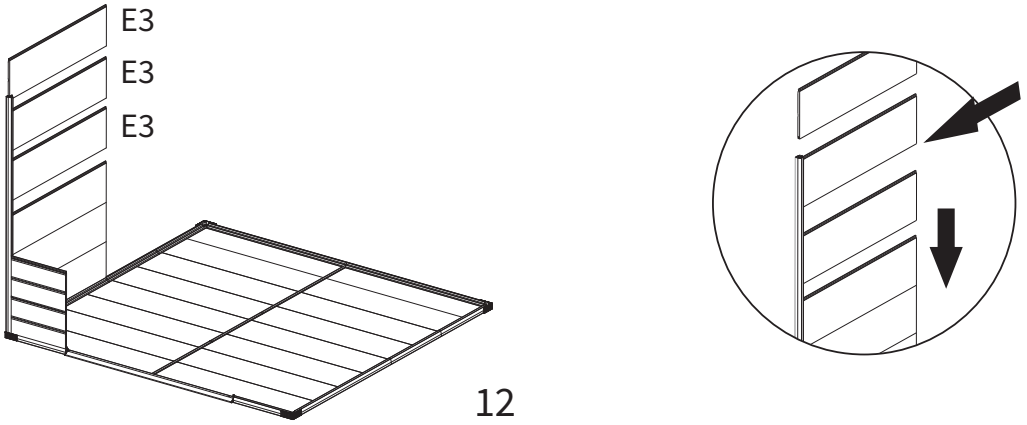



17 F2(X1) Cork Hammer

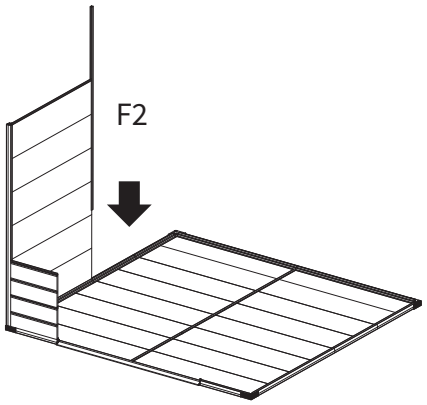





18 E54 (X6) Cork Hammer

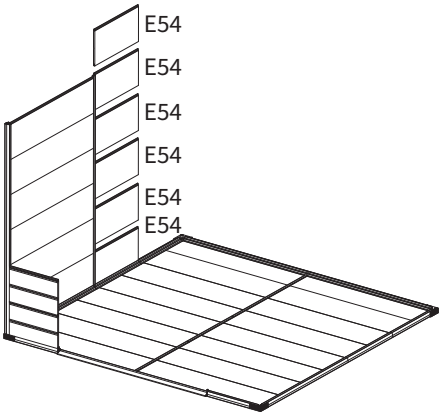

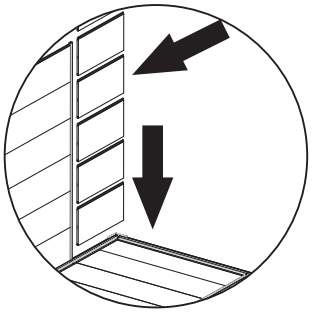



19 F2(X1) Cork Hammer

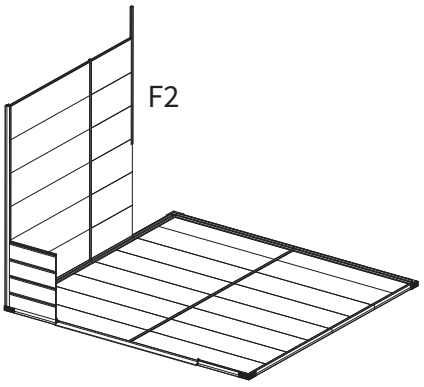

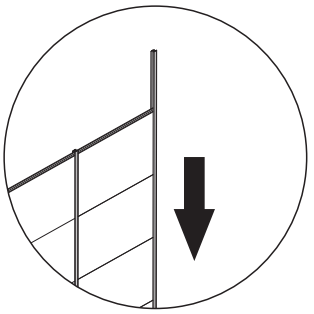



20 E54 (X6) Cork Hammer

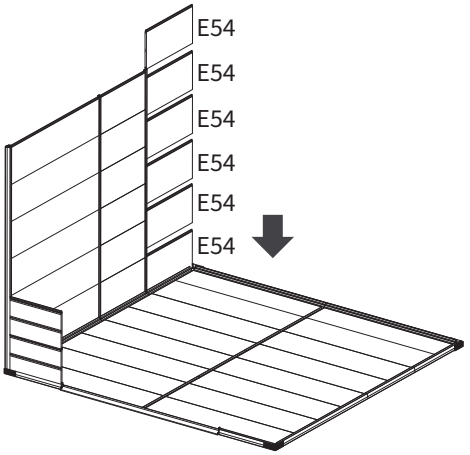

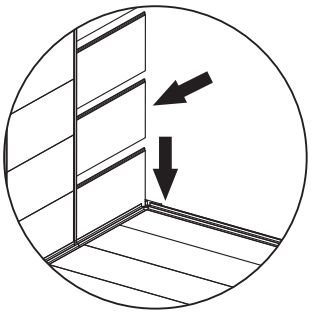



21 F13(X1) Cork Hammer

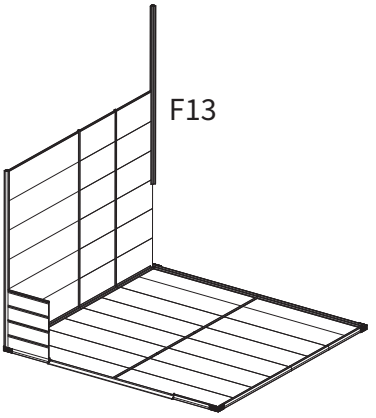

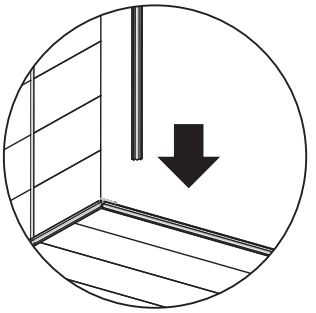



22 J20(X38) Cork Hammer Electric Drill

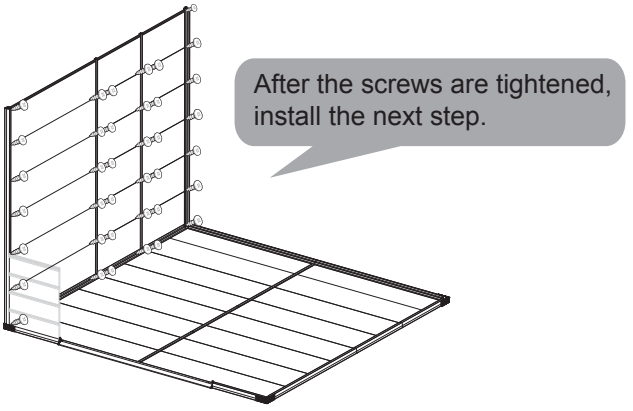

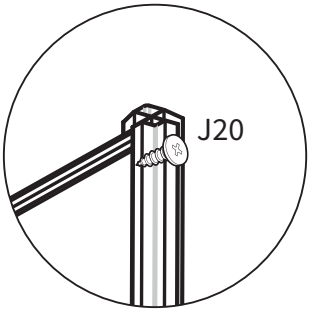



23 E7(X6) Cork Hammer

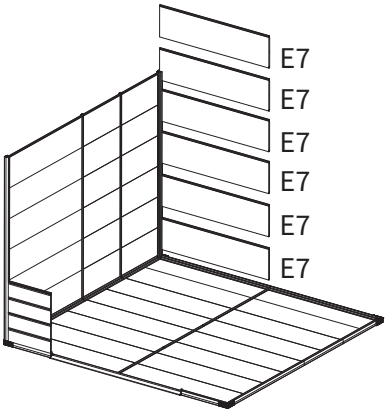

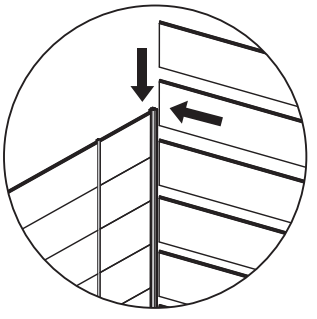


24 F65 (X1) Cork Hammer

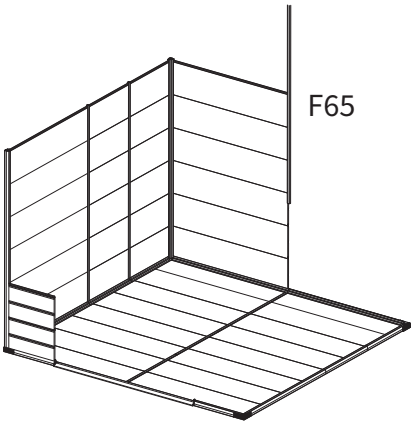


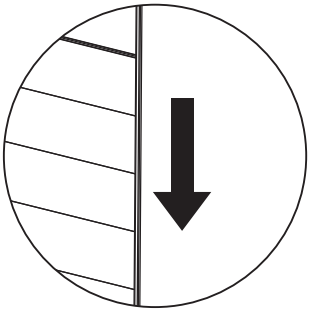


25 E7(X6) Cork Hammer

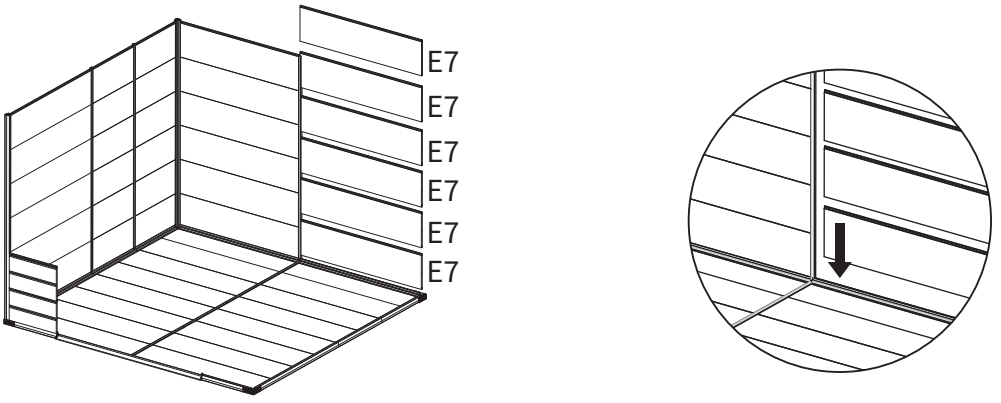


26 E68-L(X1) E70-L(X1) F8(X1) E68-R(X1) E70-R(X1) J20(X4) J62(X1) Cork Hammer Electric Drill

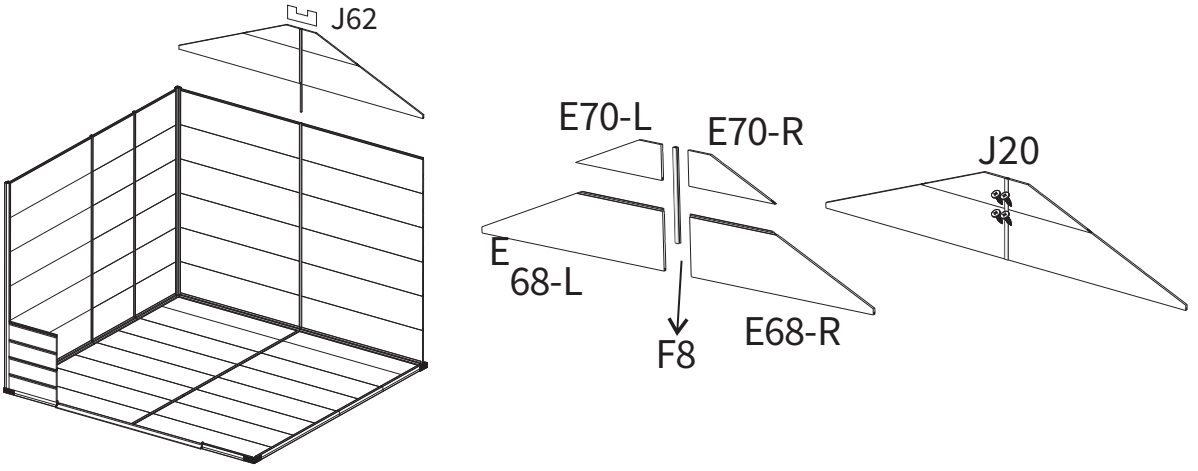


27 F13(X1) Cork Hammer

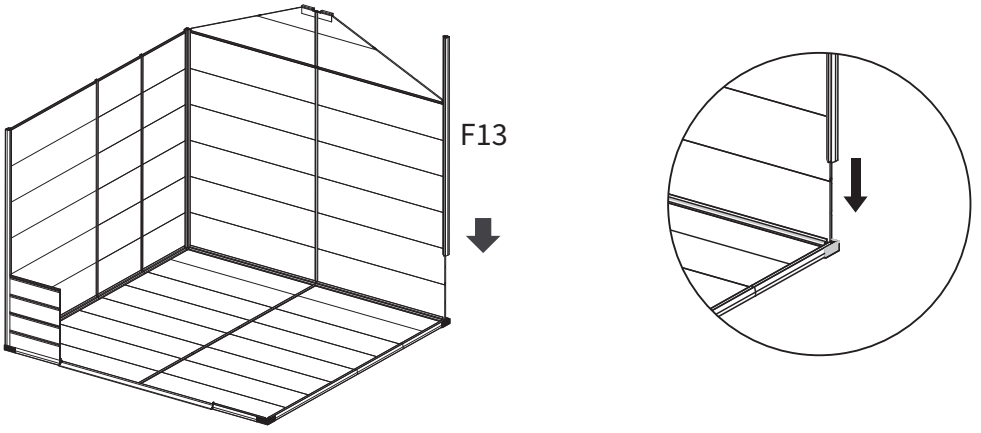



28 J20(X30) Cork Hammer Electric Drill

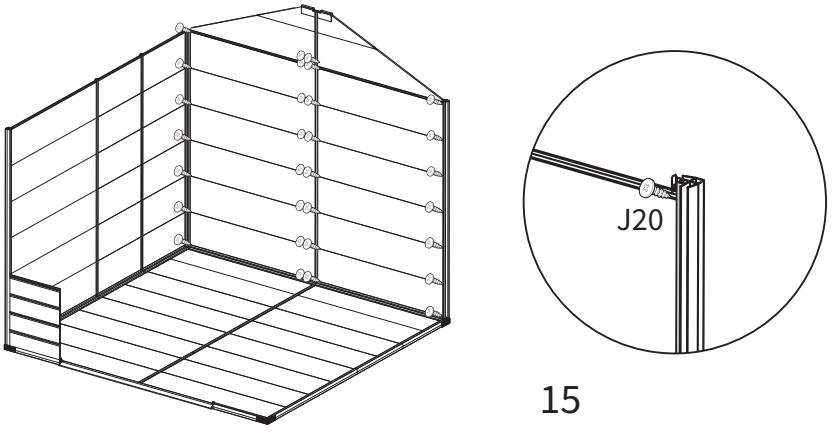


After the screws are tightened, install the next step.


29  E54(X6) Cork Hammer

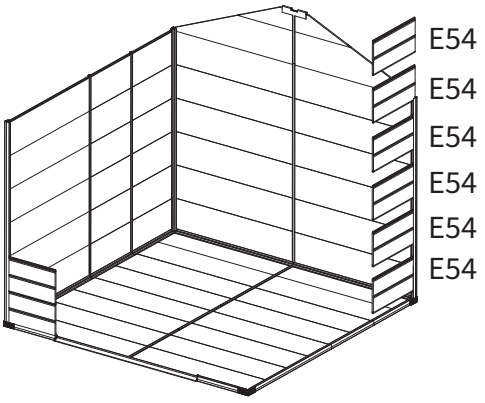


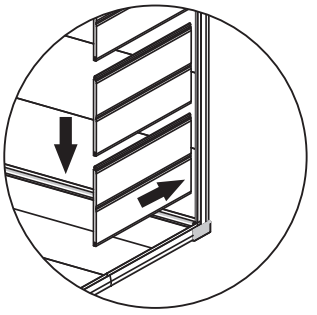



30  F2(X1) Cork Hammer

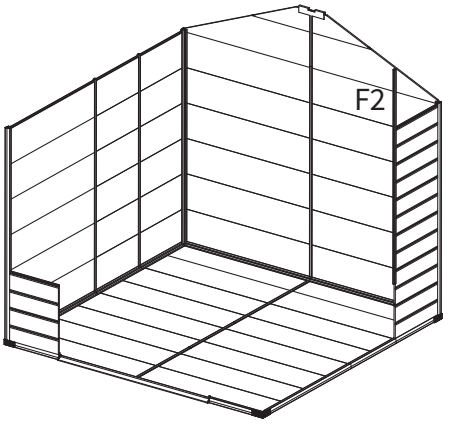

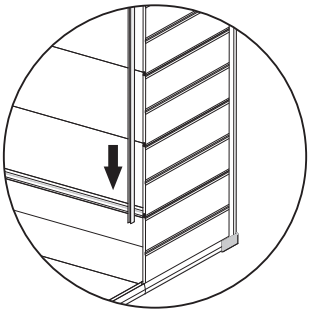



31  E54(X6) Cork Hammer

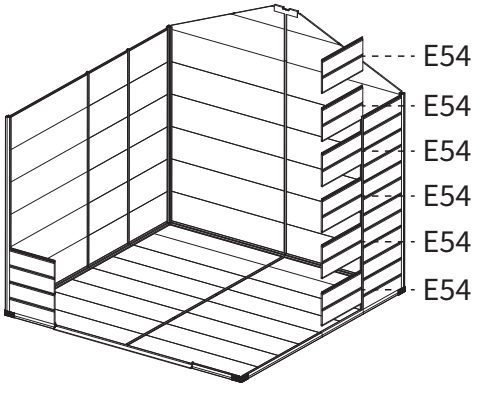

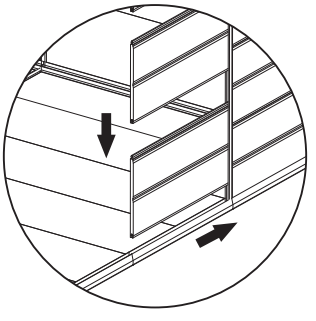


32  F2(X1) Cork Hammer

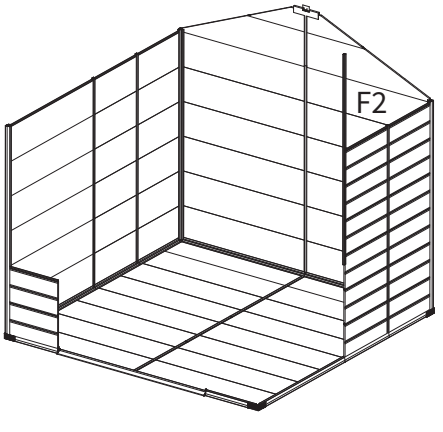


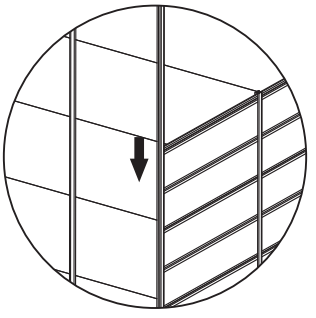


33 E3(X3) Cork Hammer

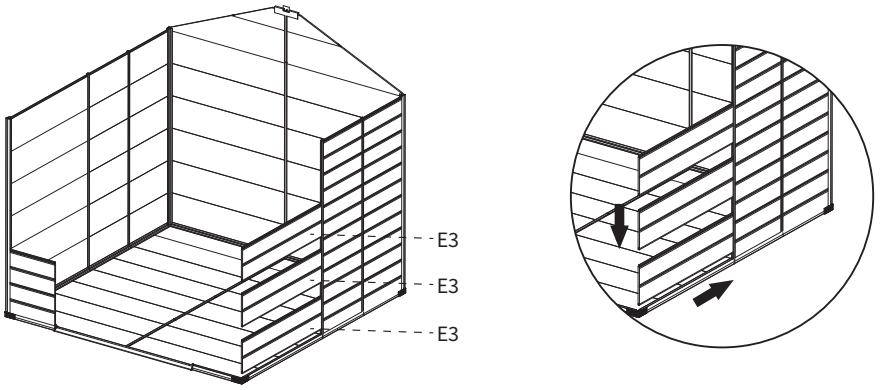


34 J20(X11) E74(X1) E75(X1) G18(X2) G5(X1) Cork Hammer Electric Drill

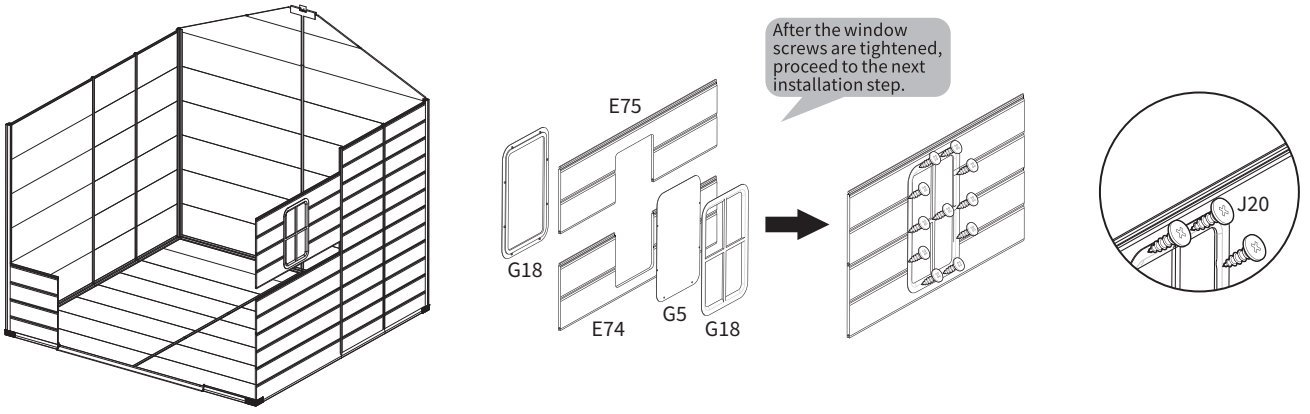


35 E3(X1) Cork Hammer

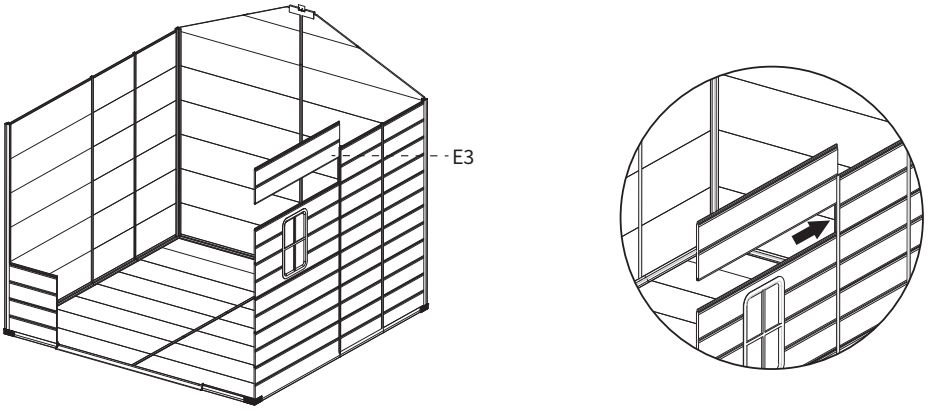


36 F13(X1) Cork Hammer J20(X38)

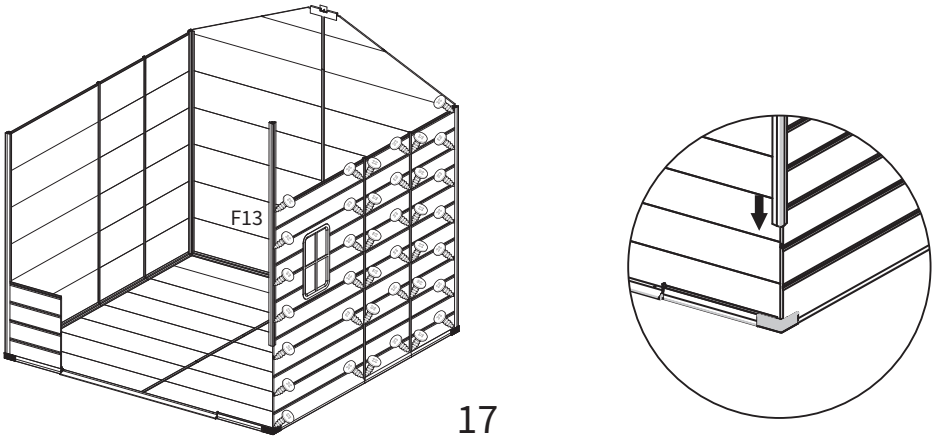



37 E47(X4) E64-L (X1) Cork Hammer

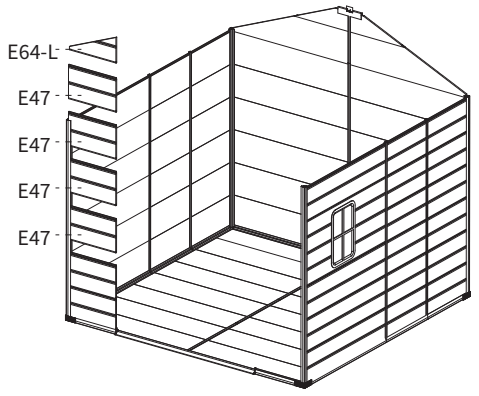

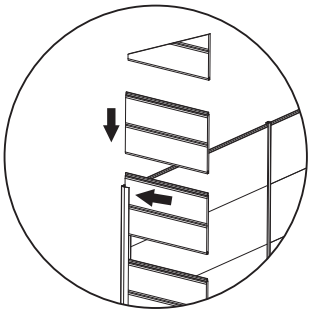


38 E47(X6) E64-R (X1) Cork Hammer

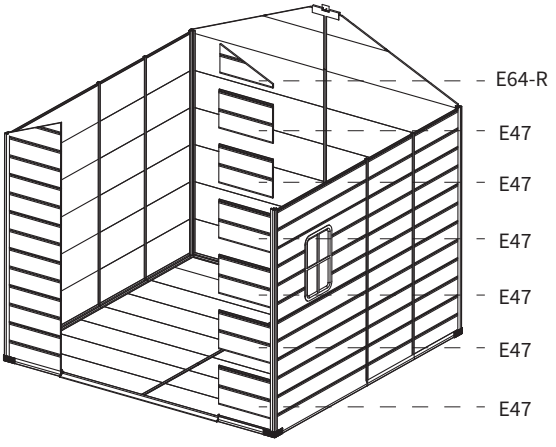

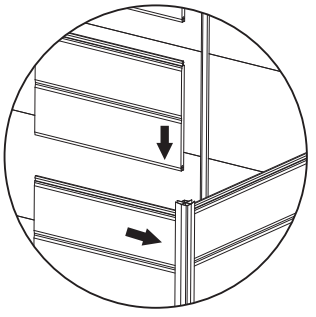



39 H16-L(X1) H16-R(X1) Cork Hammer

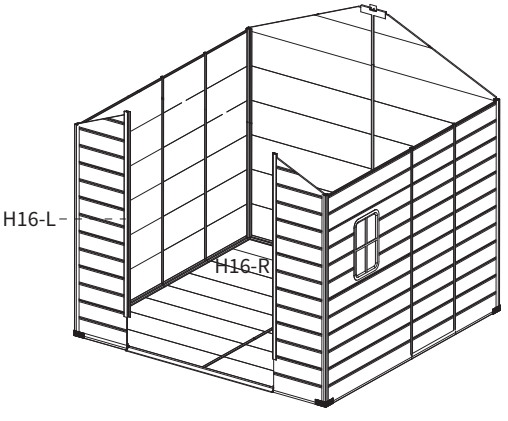




40 H6(X1) Cork Hammer

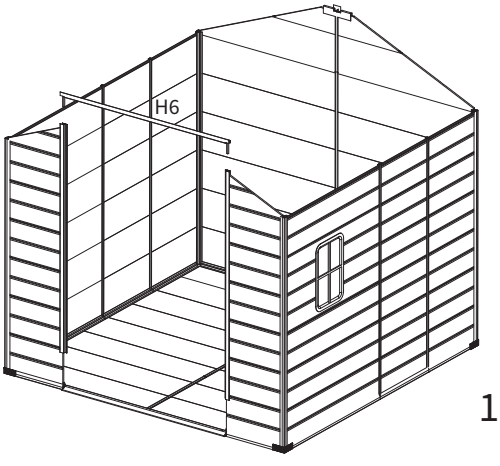


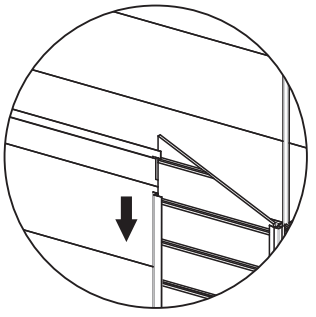


41 E69(X1) E4(X1) G3(X2) J20(X8) Cork Hammer

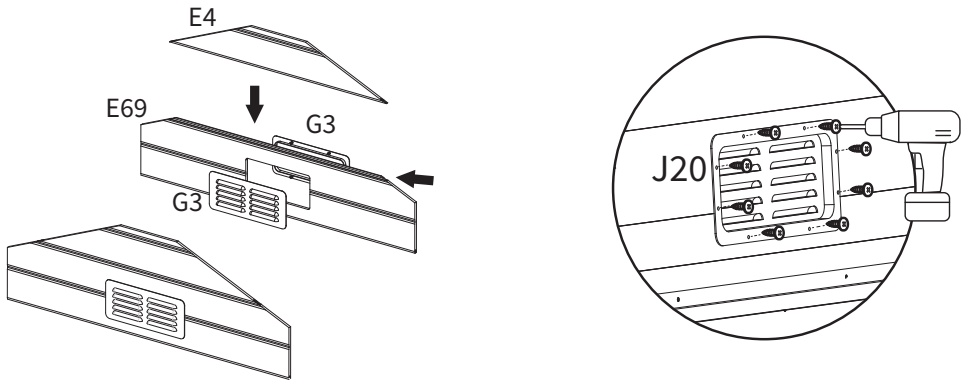

42 F47(X2) Cork Hammer

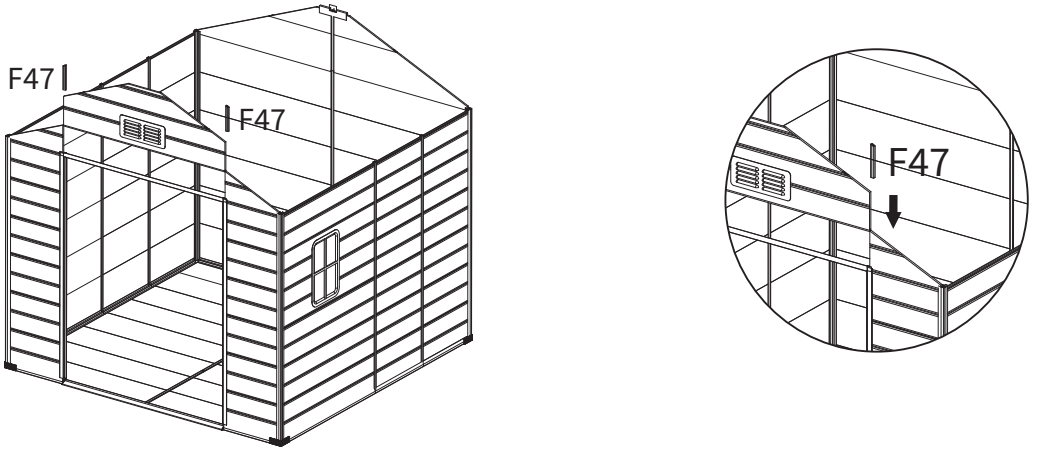


43 G21(X5) J20(X14) J21(X10) Cork Hammer Electric Drill

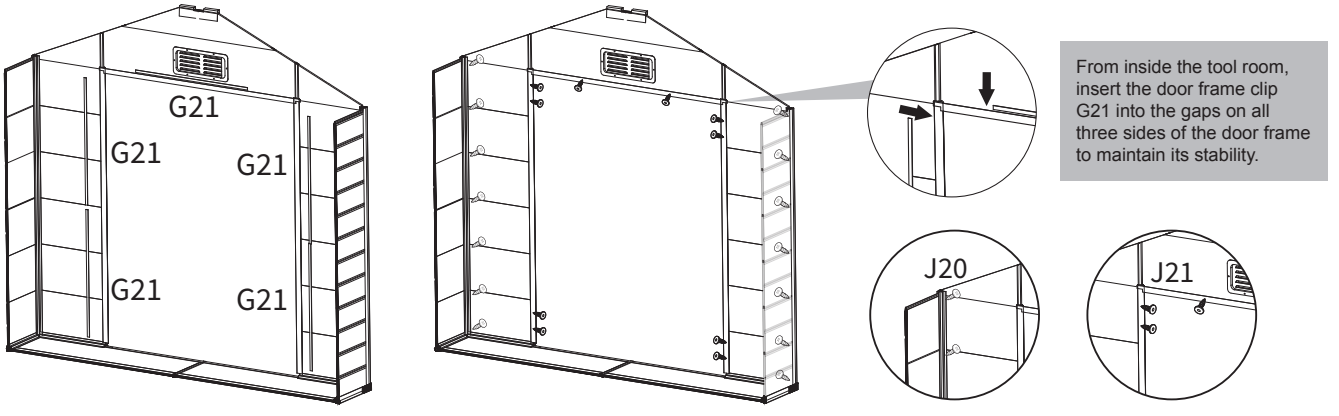



From inside the tool room, insert the door frame clip G21 into the gaps on all three sides of the door frame to maintain its stability.

44 F43(X2) F40(X2) F39(X2) J20(X14) Cork Hammer

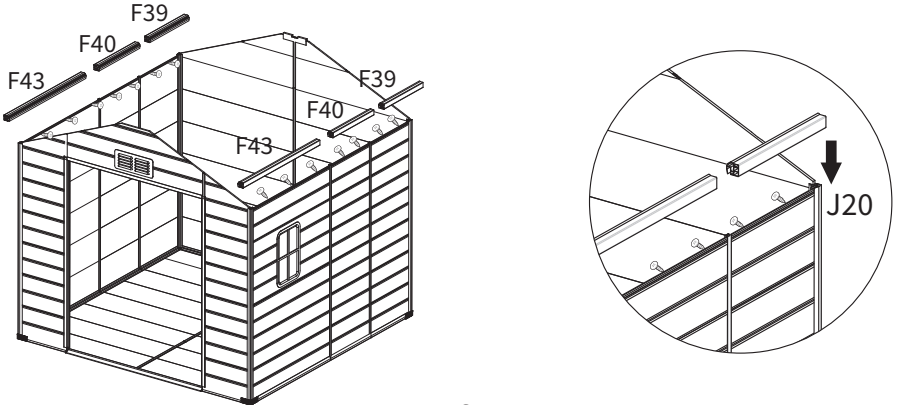


45 J3(X6) J4(X6) Cork Hammer Ladder

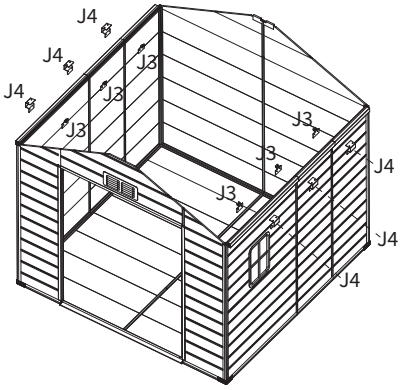


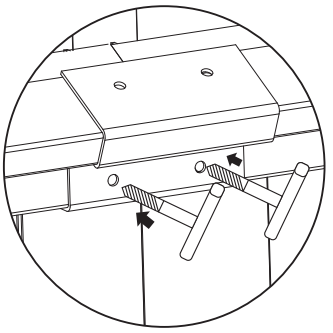


First, drill two holes on each side of the tool room, then install J3 and J4 .

46 J65(X12) Small Wrench Allen key Ladder

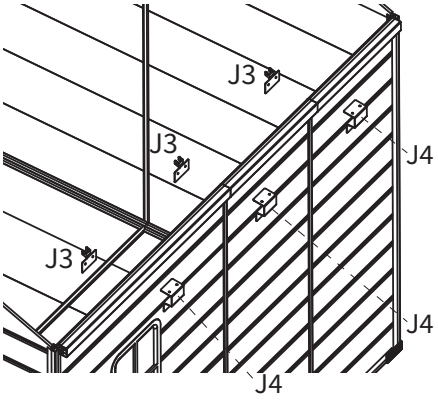


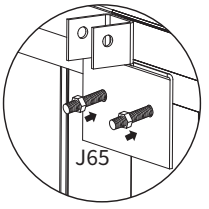

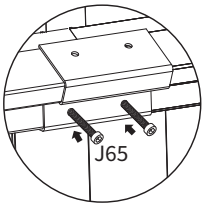


The screw passes through the holes of J3 and J4 and is locked with a nut.


47 J19(X18) J47(X6) J48(X3) J49(X3) Small Wrench Allen key Ladder

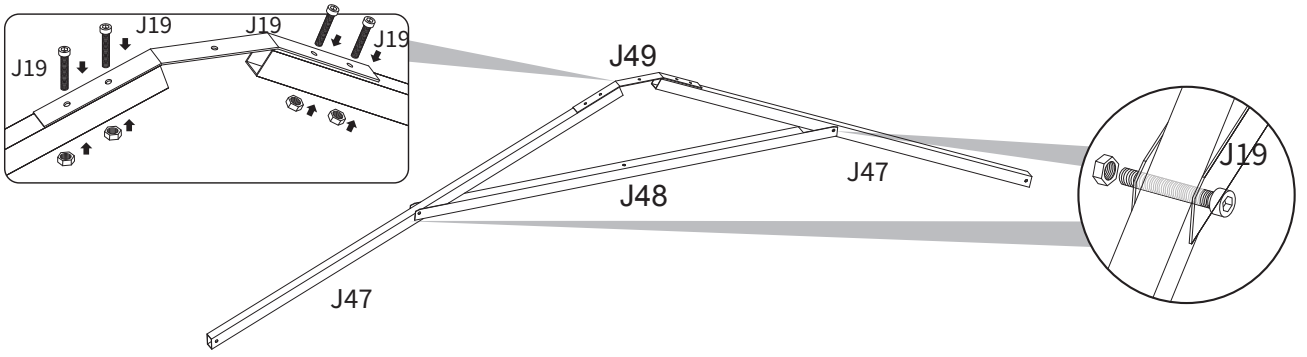


48 J19(X6) Small Wrench Allen key Ladder

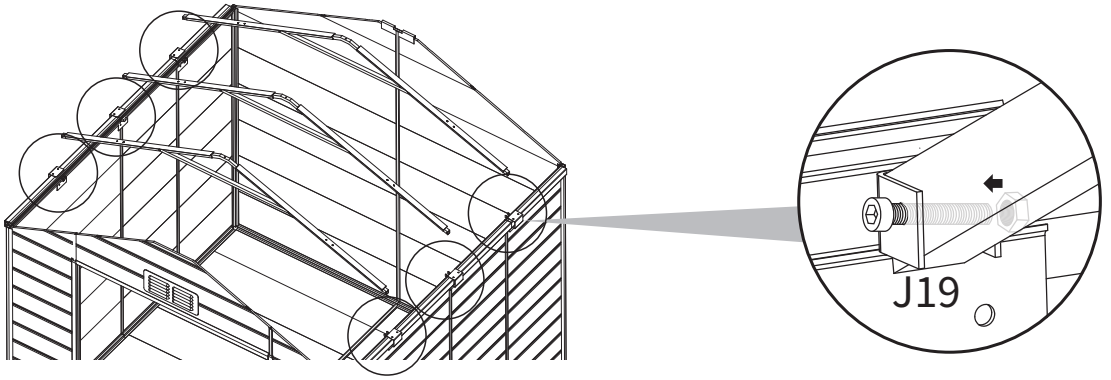



49 E13(X8) Cork Hammer Ladder Scraper

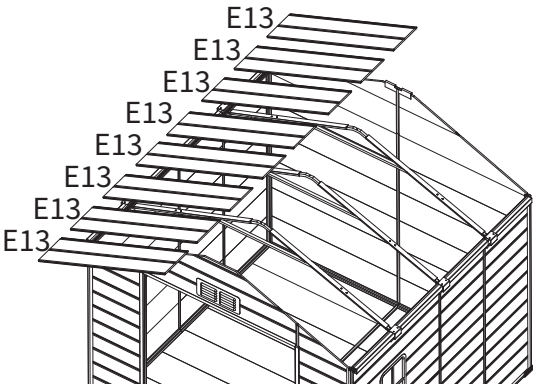

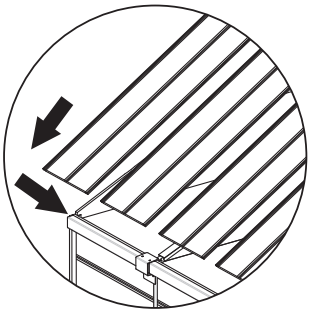



50 F71(X1) F70(X2) Cork Hammer Ladder

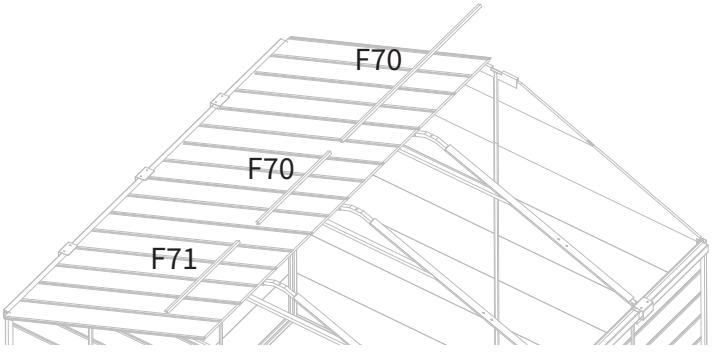

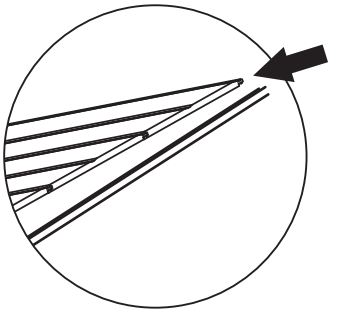



51 F44(X2) Cork Hammer Ladder

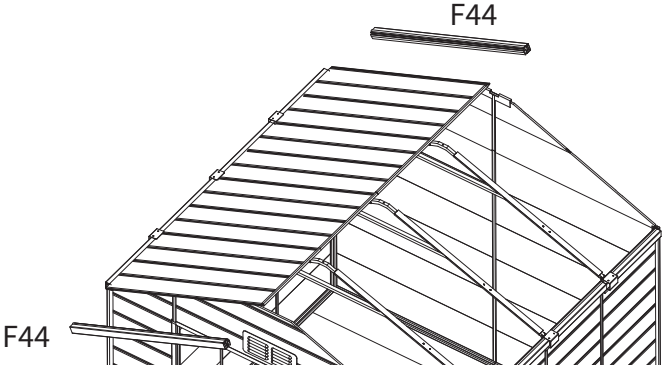

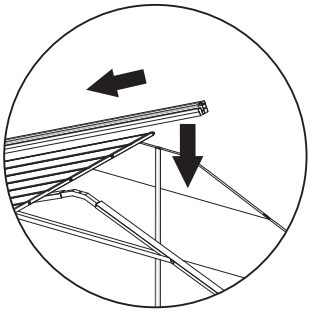


52 E13(X8) Cork Hammer Ladder Scraper

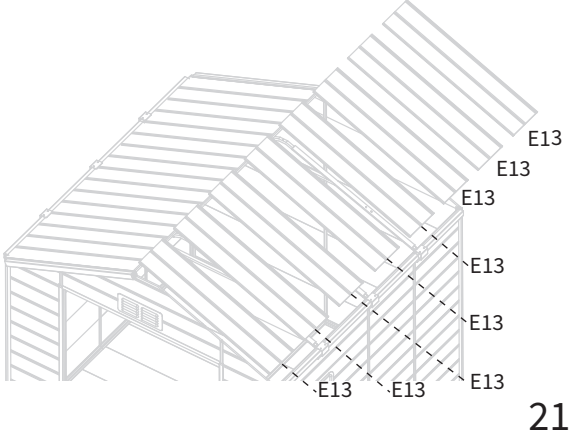


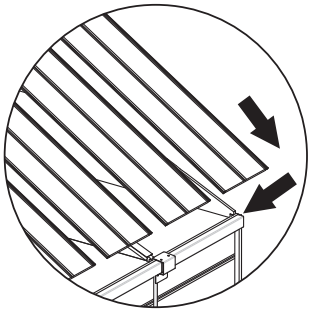

53 F71(X1) F70(X2)


Cork Hammer Ladder

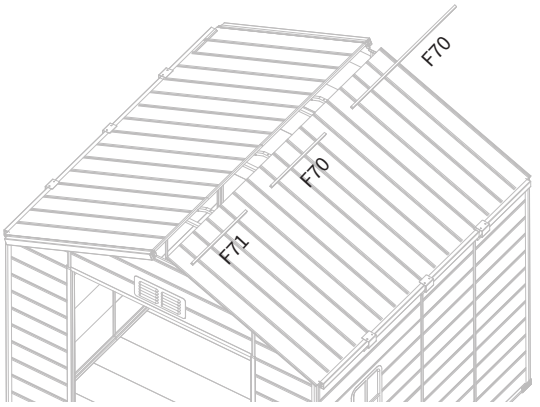


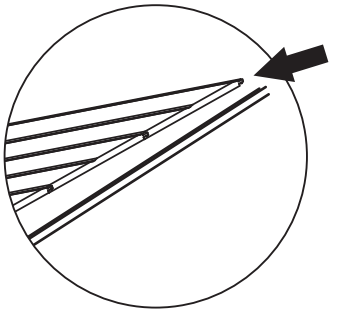

54 F44(X2)


Cork Hammer Ladder

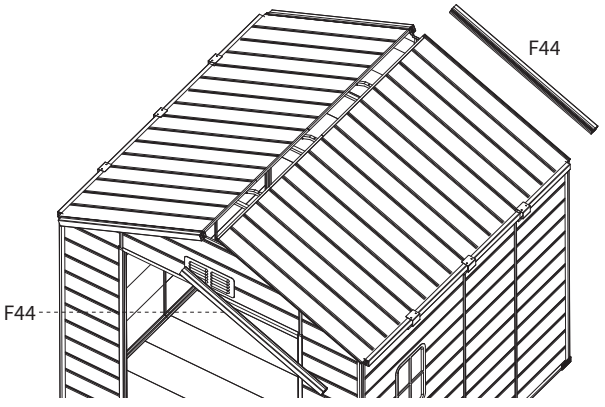


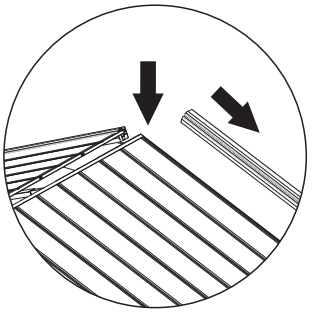

55 J37(X1) J46(X1) J61(X1) J19(X2)

Cork Hammer Small Wrench Allen key Ladder

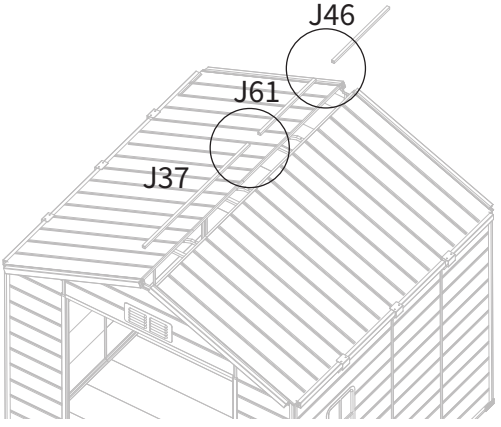


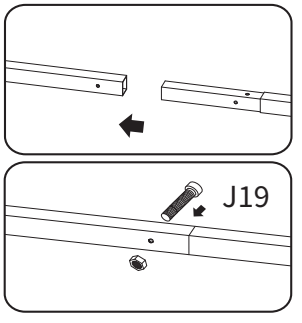


56 J45(X3)


Cork Hammer Ladder



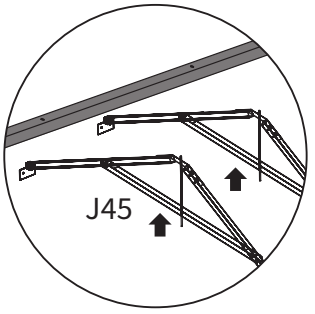



57 G10(X1) G12(X2) Cork Hammer Ladder

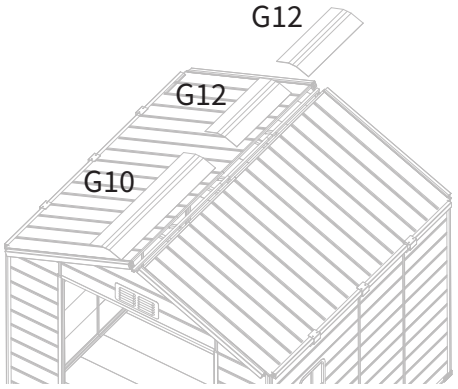

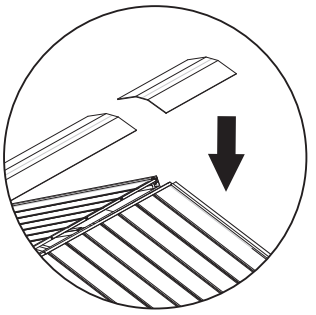


58 G8(X2) Ladder

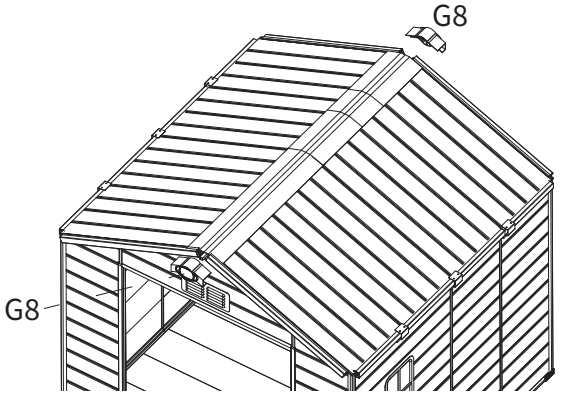


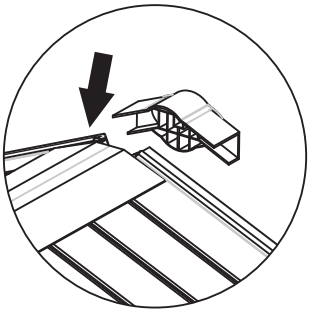


59 G9(X4) J20(X46) Cork Hammer Ladder

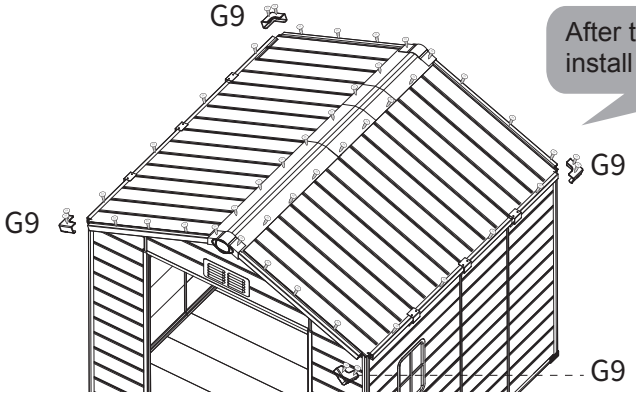



After the screws are tightened, install the next step.

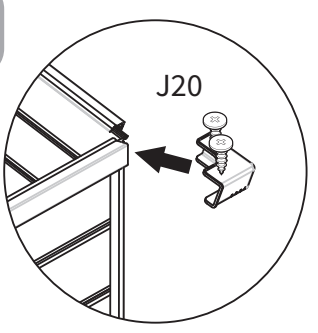


60 G16(X1) G26(X1) J43(X1) J21(X6) Electric Drill

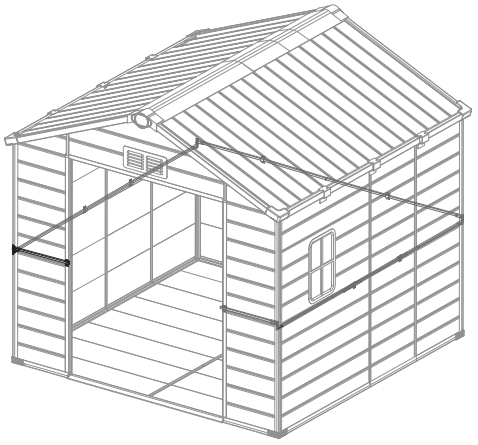


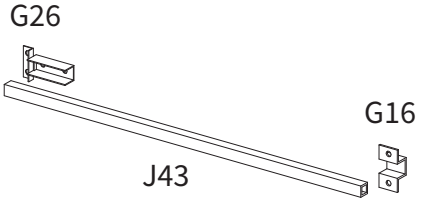

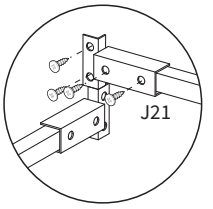


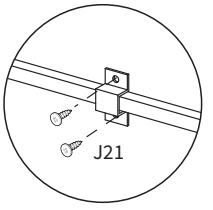


61 G15(X5) G25(X2) J23(X1) J58(X2) G23(X2) J20(X6) J21(X12) Electric Drill

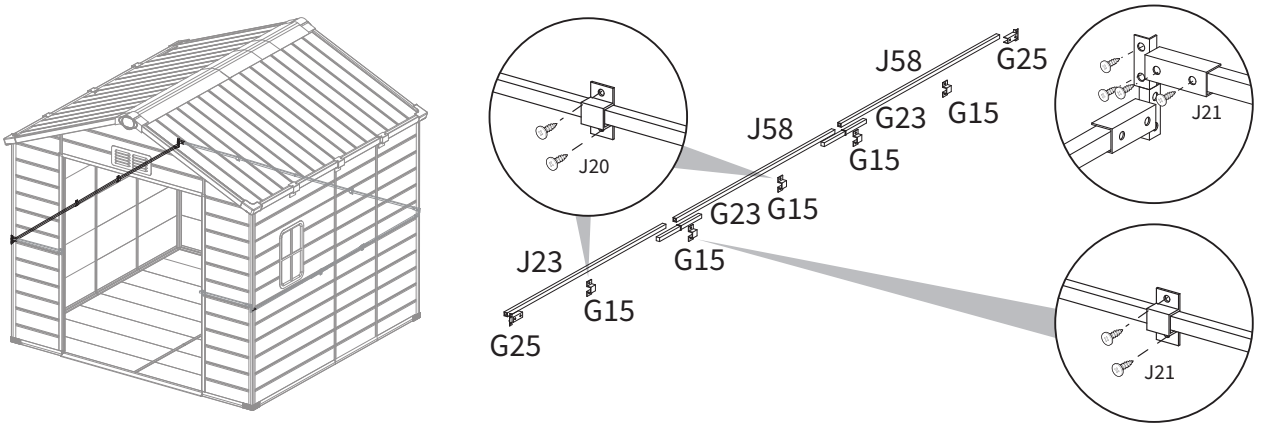


62 G16(X6) G26(X4) J43(X4) J29(X2) G28(X4) J20(X8) J21(X20) Electric Drill

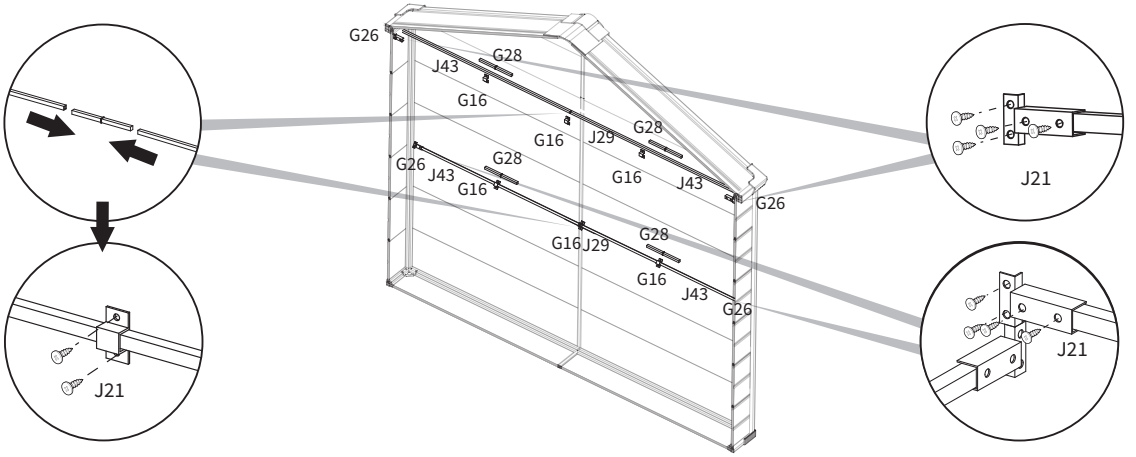


63 G15(X5) G25(X2) J23(X1) J58(X2) G23(X2) J20(X6) J21(X12) Electric Drill

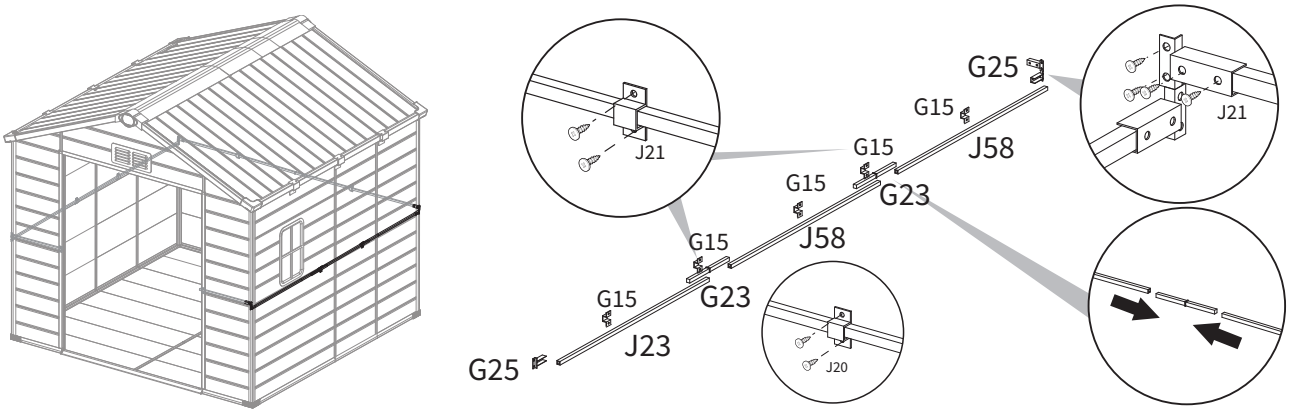


64 G16(X4) G26(X3) J43(X3) J21(X20) G28(X2) J29(X1) Electric Drill

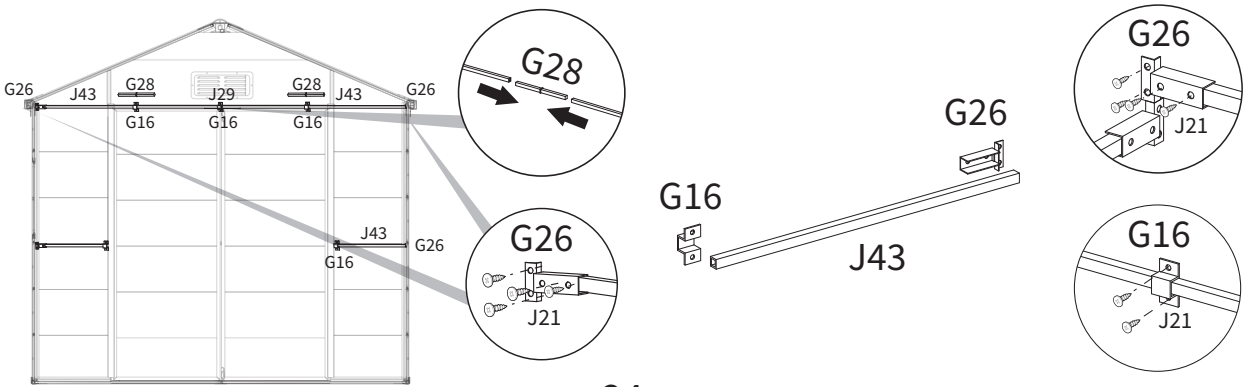


65 J2(X4) J21(X16) Electric Drill

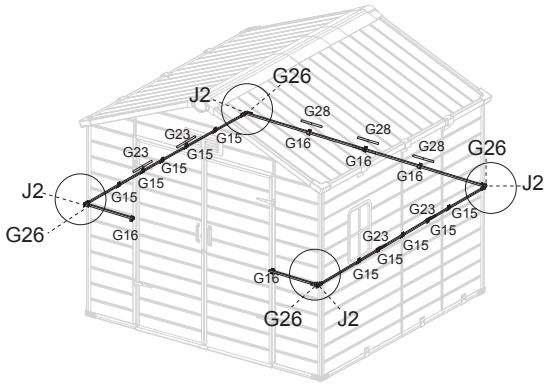


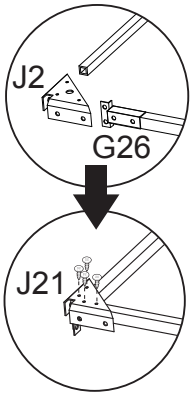


If you choose to install J2, remove a G26 at the corner, and then install the horizontal alignment screw.


66 •E58(×2) •E59(×10) •J60(×16) •H15(×4) •H17(×4) Cork Hammer Electric Drill

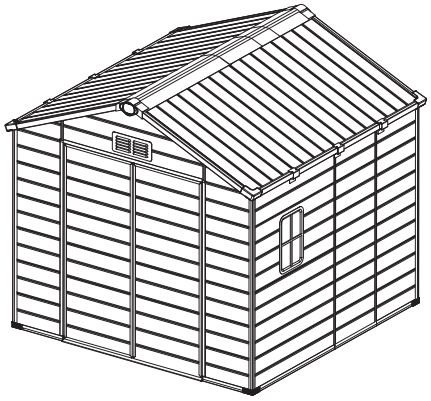

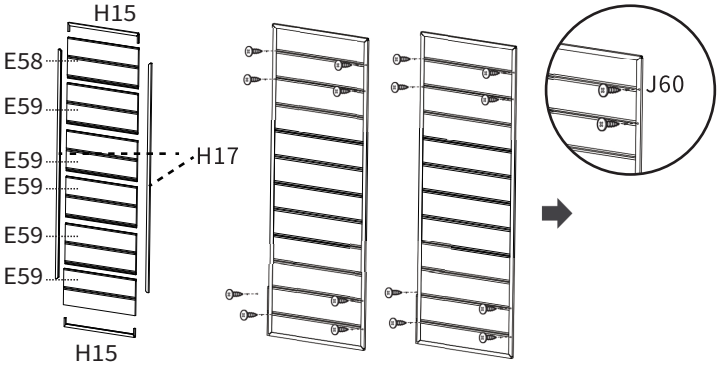



67 J17(X4) J21(X20) J20(X8) Electric Drill

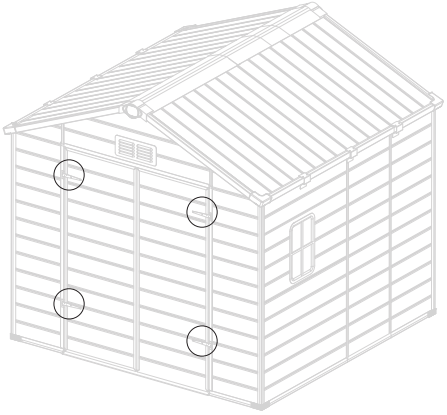

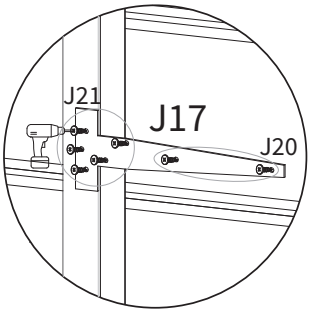



68 J16(X2) J21(X10) J18(X2) Electric Drill

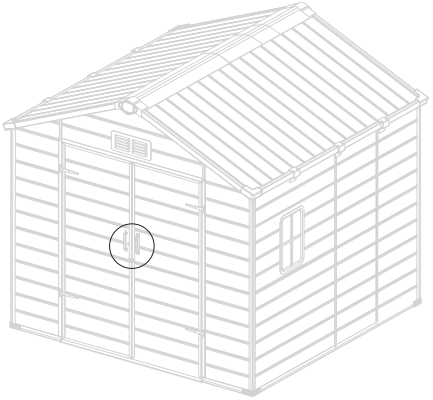


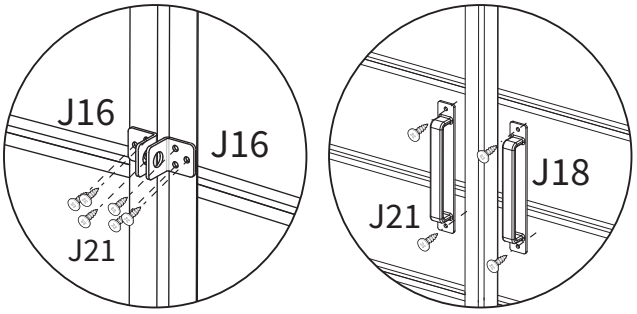


69 J31(X1) J32(X1) J59(X1) J21(X4) J20(X2) Electric Drill

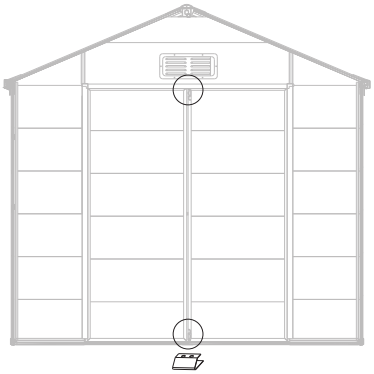


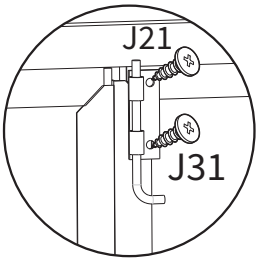


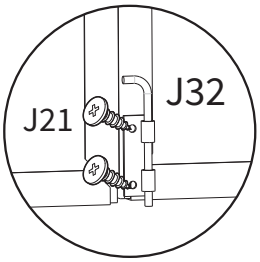


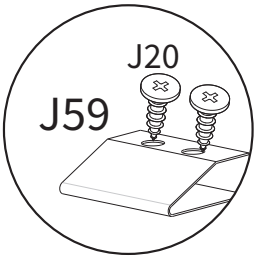


70 J1(X4) D90(X4) D91(X4) J20(X28) Electric Drill

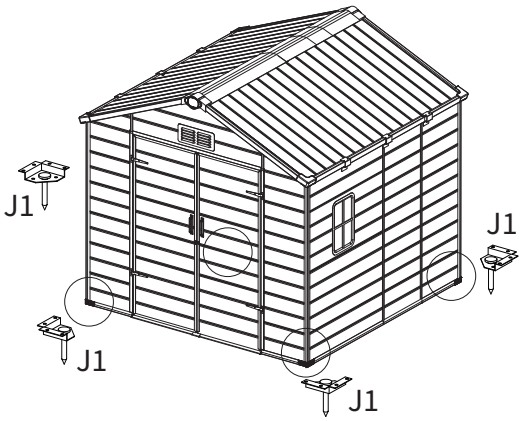

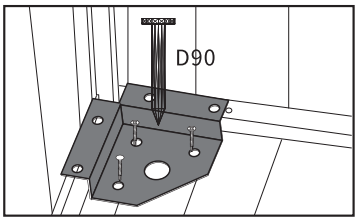


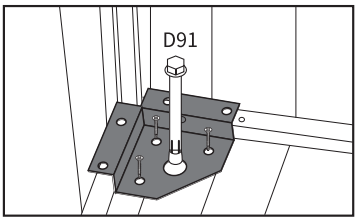


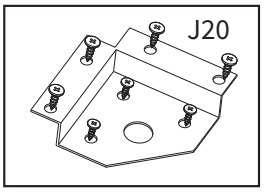



Install separately at the four corners inside the house

71 J6(X9) J65(X18) Small Wrench Allen key

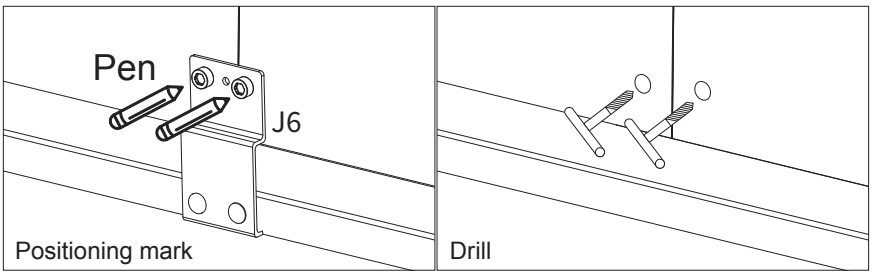


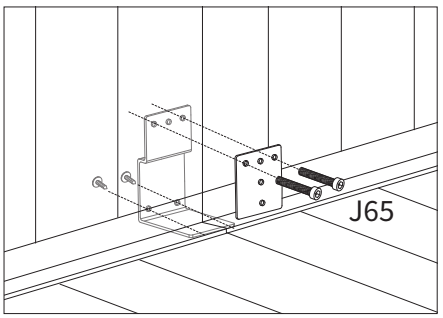

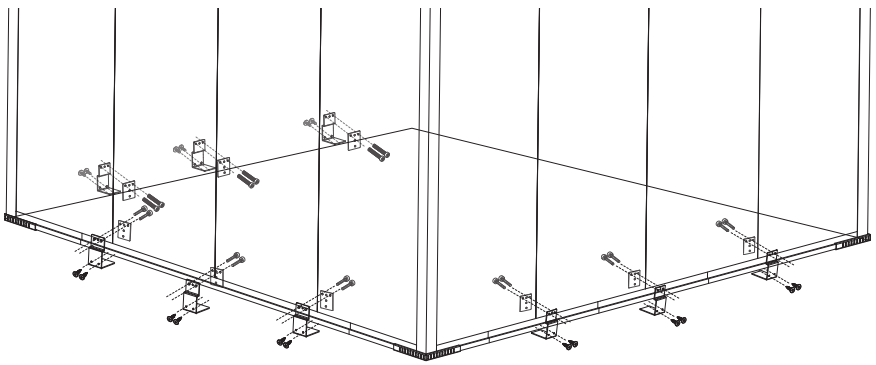

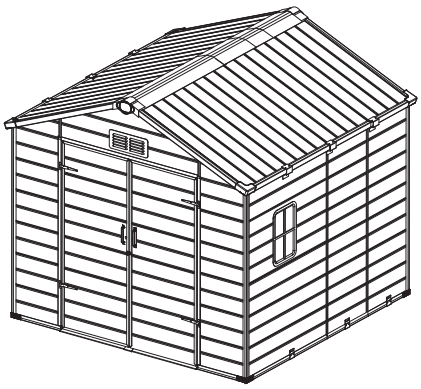

Bottom reinforcement, effective wind resistance

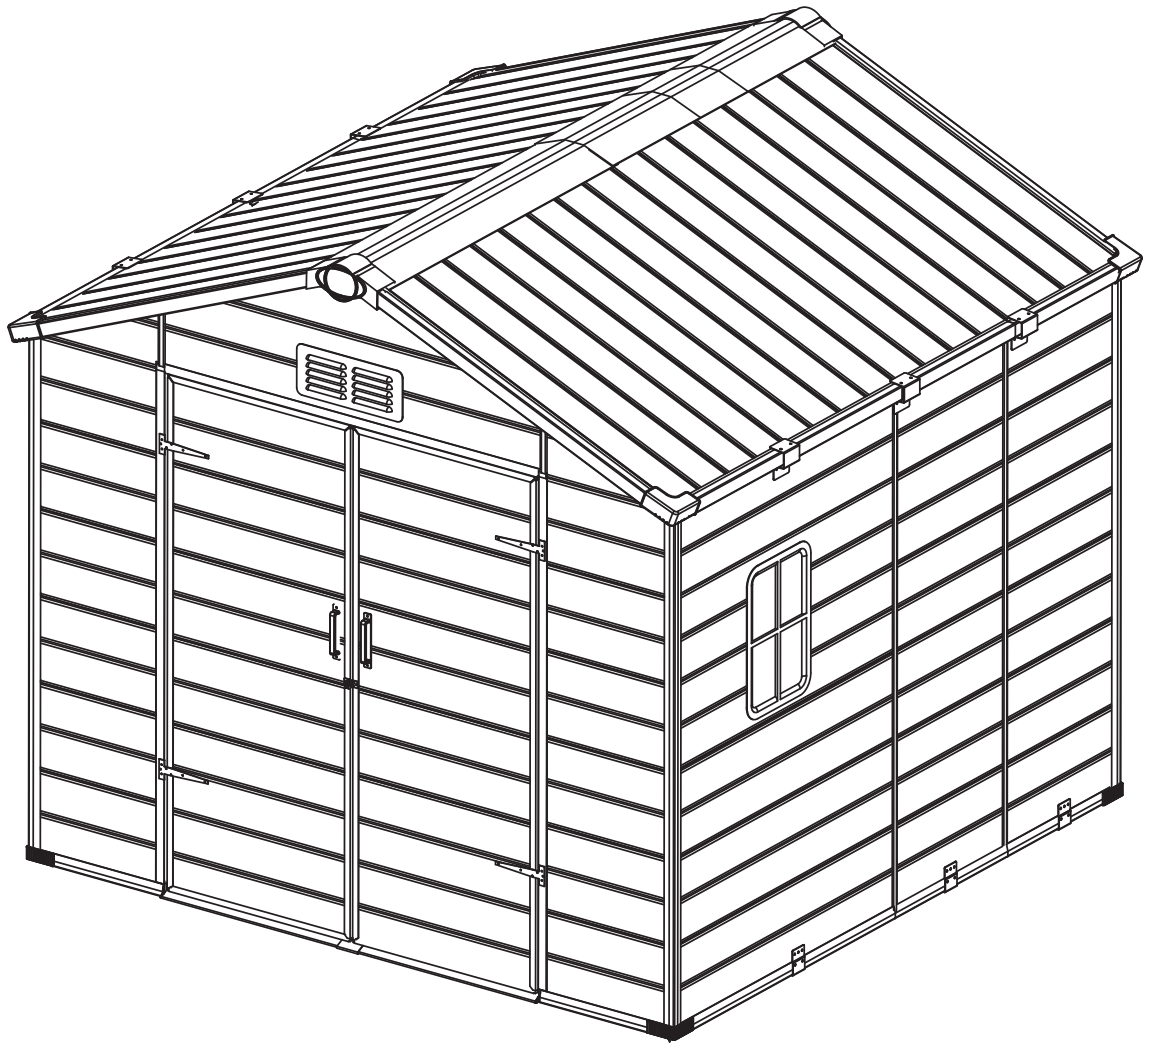

Key Installation Precautions
Adhering to safety and preparation steps is crucial for a successful installation.

Personal Safety
Wear protective gloves during assembly.
Personnel & Assistance
Assembly requires 2–3 people. Ensure the work area is clear of children and pets during the process.
Foundation & Securing
The plastic shed must be anchored to a stable base (not included) to prevent damage.
Product Limitations
This structure is designed for storage purposes only—not for habitation. Do not store hot items (e.g., recently used grills) or volatile chemicals inside.

Maintenance After Installation
Proper maintenance will extend the life of your plastic tool shed.
Cleaning
Clean the shed with a cloth and water.
Debris Removal
Remove leaves from the roof promptly to prevent staining. In snowy conditions, clear snow regularly to avoid structural damage from heavy load.
General Care
Keep the door closed and locked when not in use to prevent wind damage.