

Item # : LM055-529D

Assembly Instructions




If you have any questions, please follow these steps(“Find Your Orders” – “Problem with the Order” – “Contact Seller”) to contact our customer service. Thanks!


Revsied 04/03/2024

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

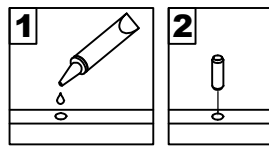


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

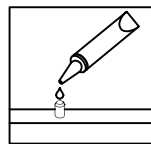


- VI. A Phillips head screwdriver is required for the assembly of this product .

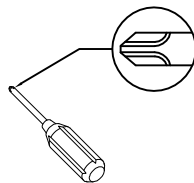


- VII. Power tools should not be used to assemble this product .

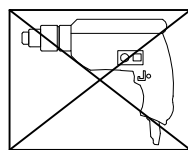


- VIII. Concealed hinges are three-way adjustable.

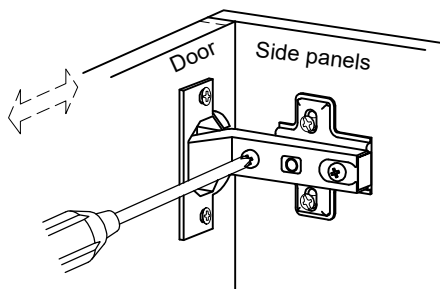

Horizontal
by screw adjustment

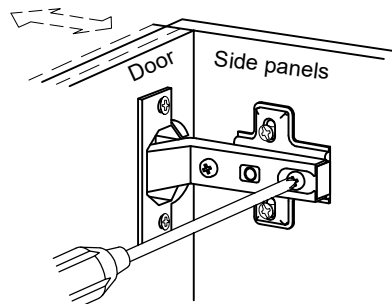


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

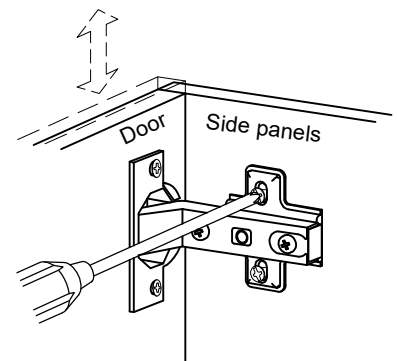


Vertical
Via slots in the mounting
plate or via cam adjustment



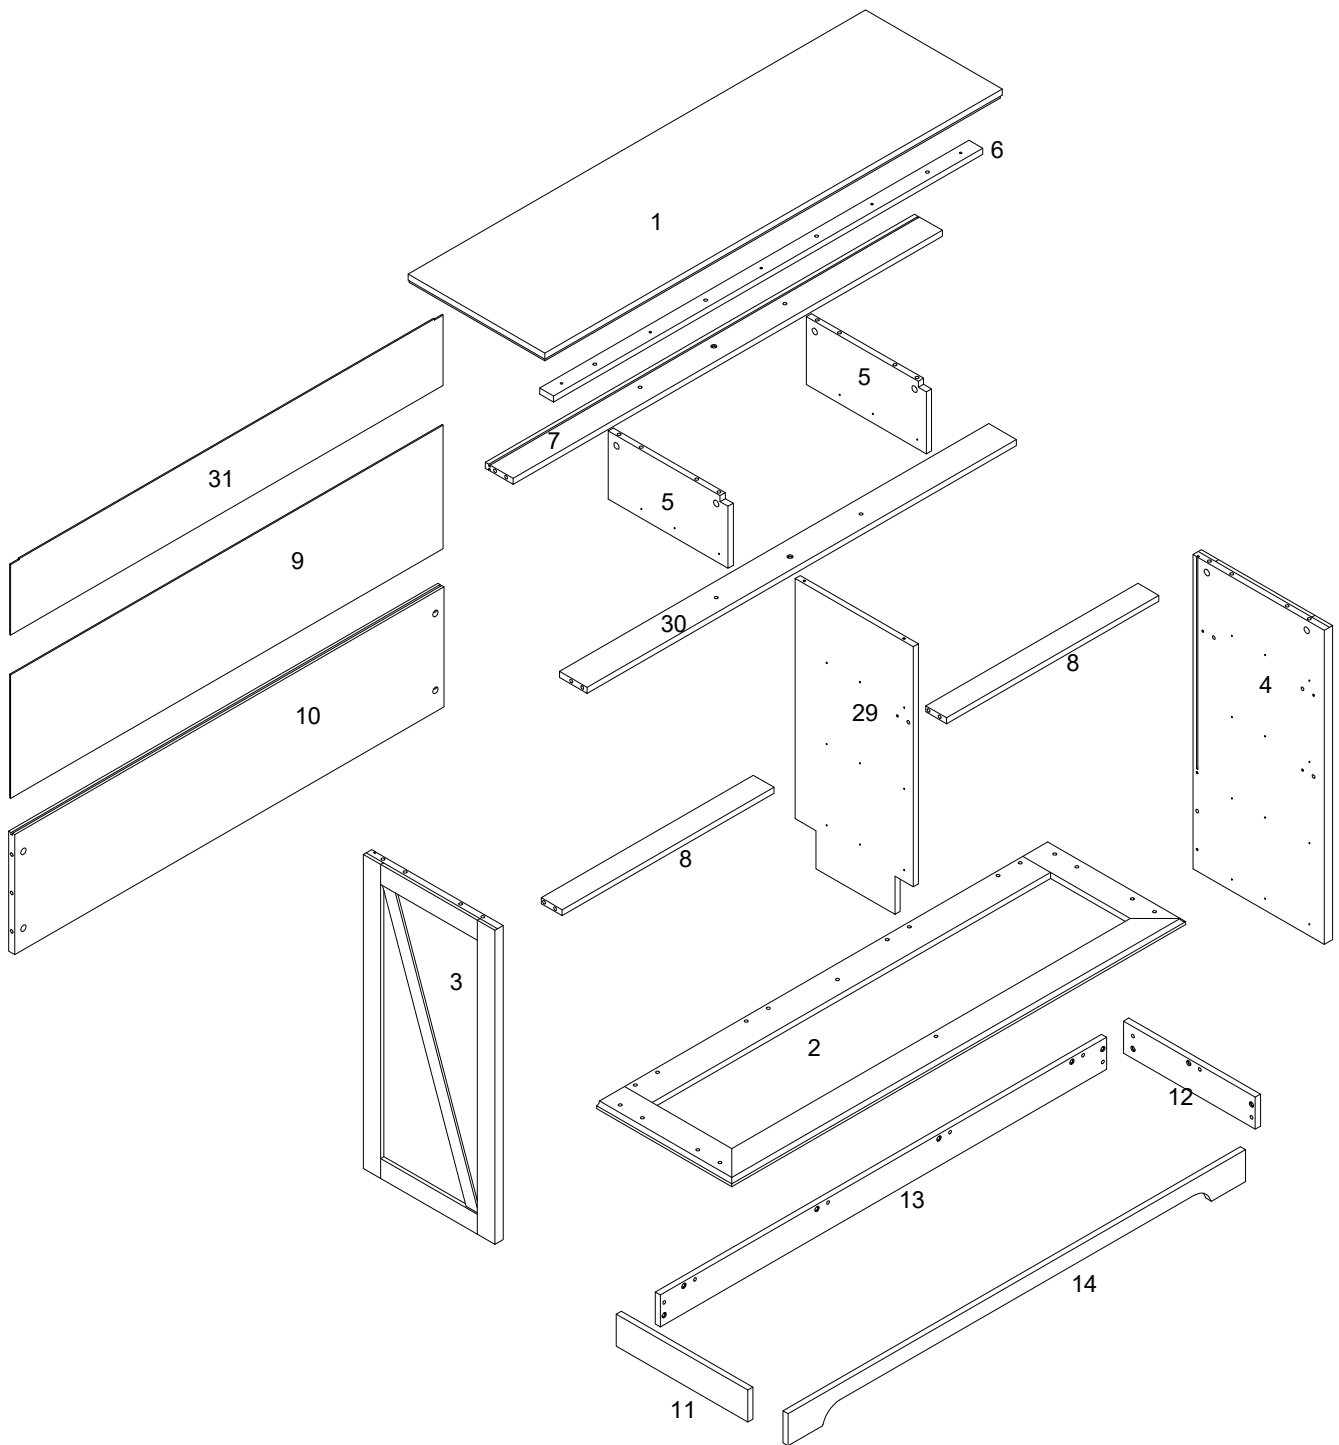


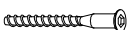


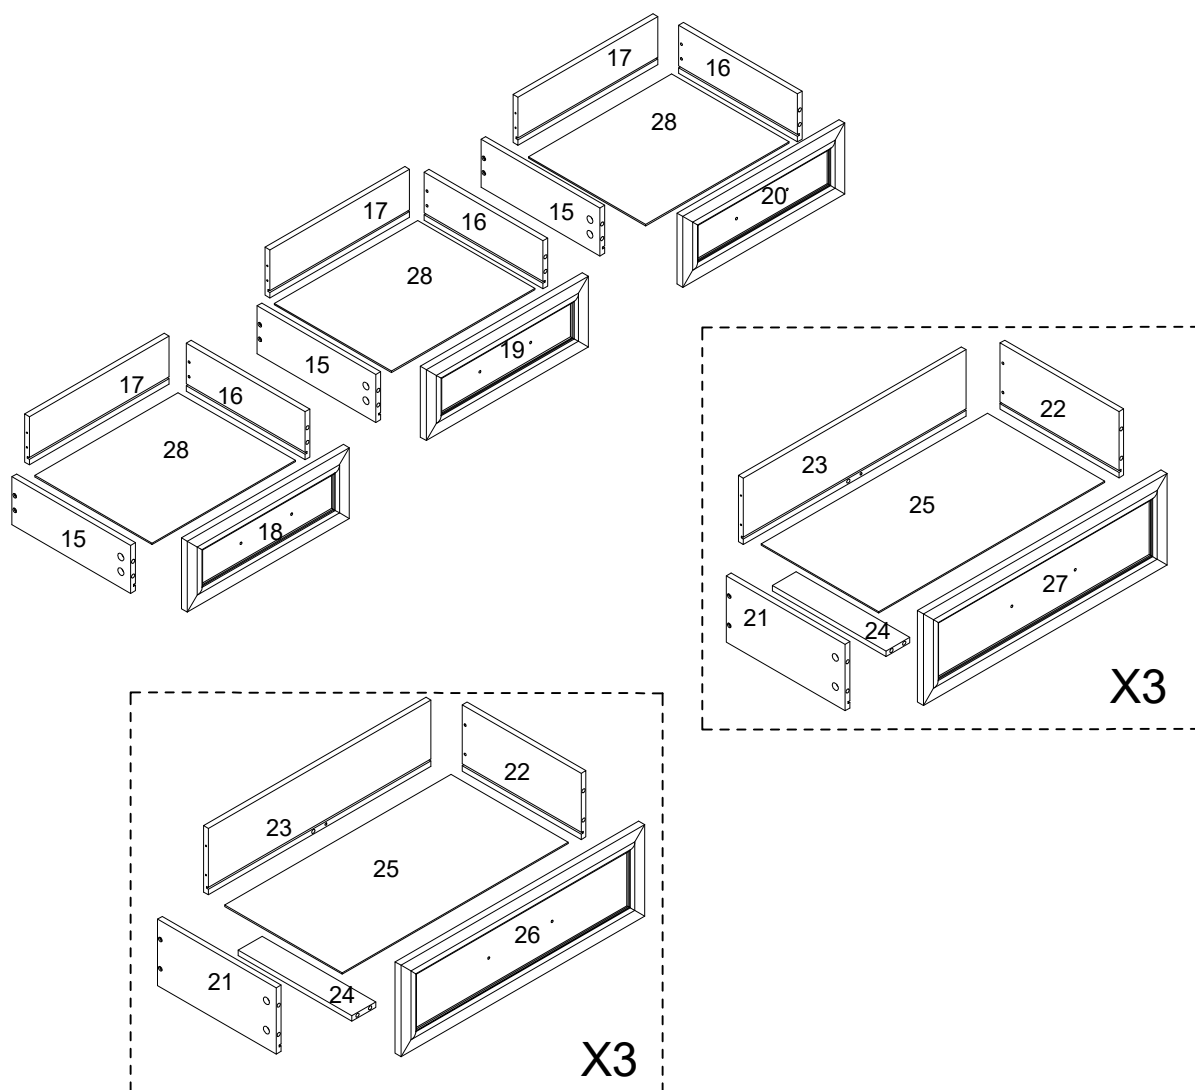







Parts List




Parts List

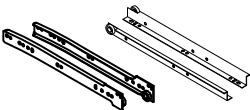

Hardware List

A		Ø8x30mm	Wooden dowel	38 pcs
B		Ø6x35mm	Cam lock	62 pcs
C		Ø15x11mm	Cam lock	20 pcs
D		Ø15x9mm	Cam lock	42 pcs
E		Ø30mm	Sticker	62 pcs
F		Ø6x50mm	Bolt	16 pcs
G		M 4	Hex Key	1 pc
H		M6*12mm	Screw	28 pcs
I			Angular Code	14 pcs
J		Ø4x32mm	Screw	42 pcs
K		Ø4x25mm	Screw	5 pcs
L		Ø8x20mm	Wooden dowel	4 pcs
M		Individually packed	Drawer slides	9 Set
N		Ø3x12mm	Screw	108 pcs
O			Plastic wedge	12 pcs
P		Ø3x17mm	Screw	12 pcs

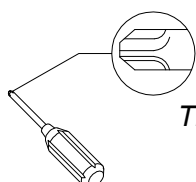


Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Hardware List


Q		128mm	Hold hands	3 pcs
R		160mm	Hold hands	6 pcs
S		Ø4x9mm	Screw	18 pcs
T			Anti-inversion hardware	4 pcs
U		Ø4*15mm	Screw	4 pcs
V			House lizard	4 pcs
W		Ø4x35mm	Screw	4 pcs
X			Strip	2 pcs
Y			Small White Glue	2 pcs

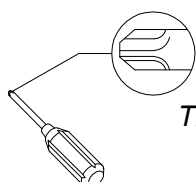



Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

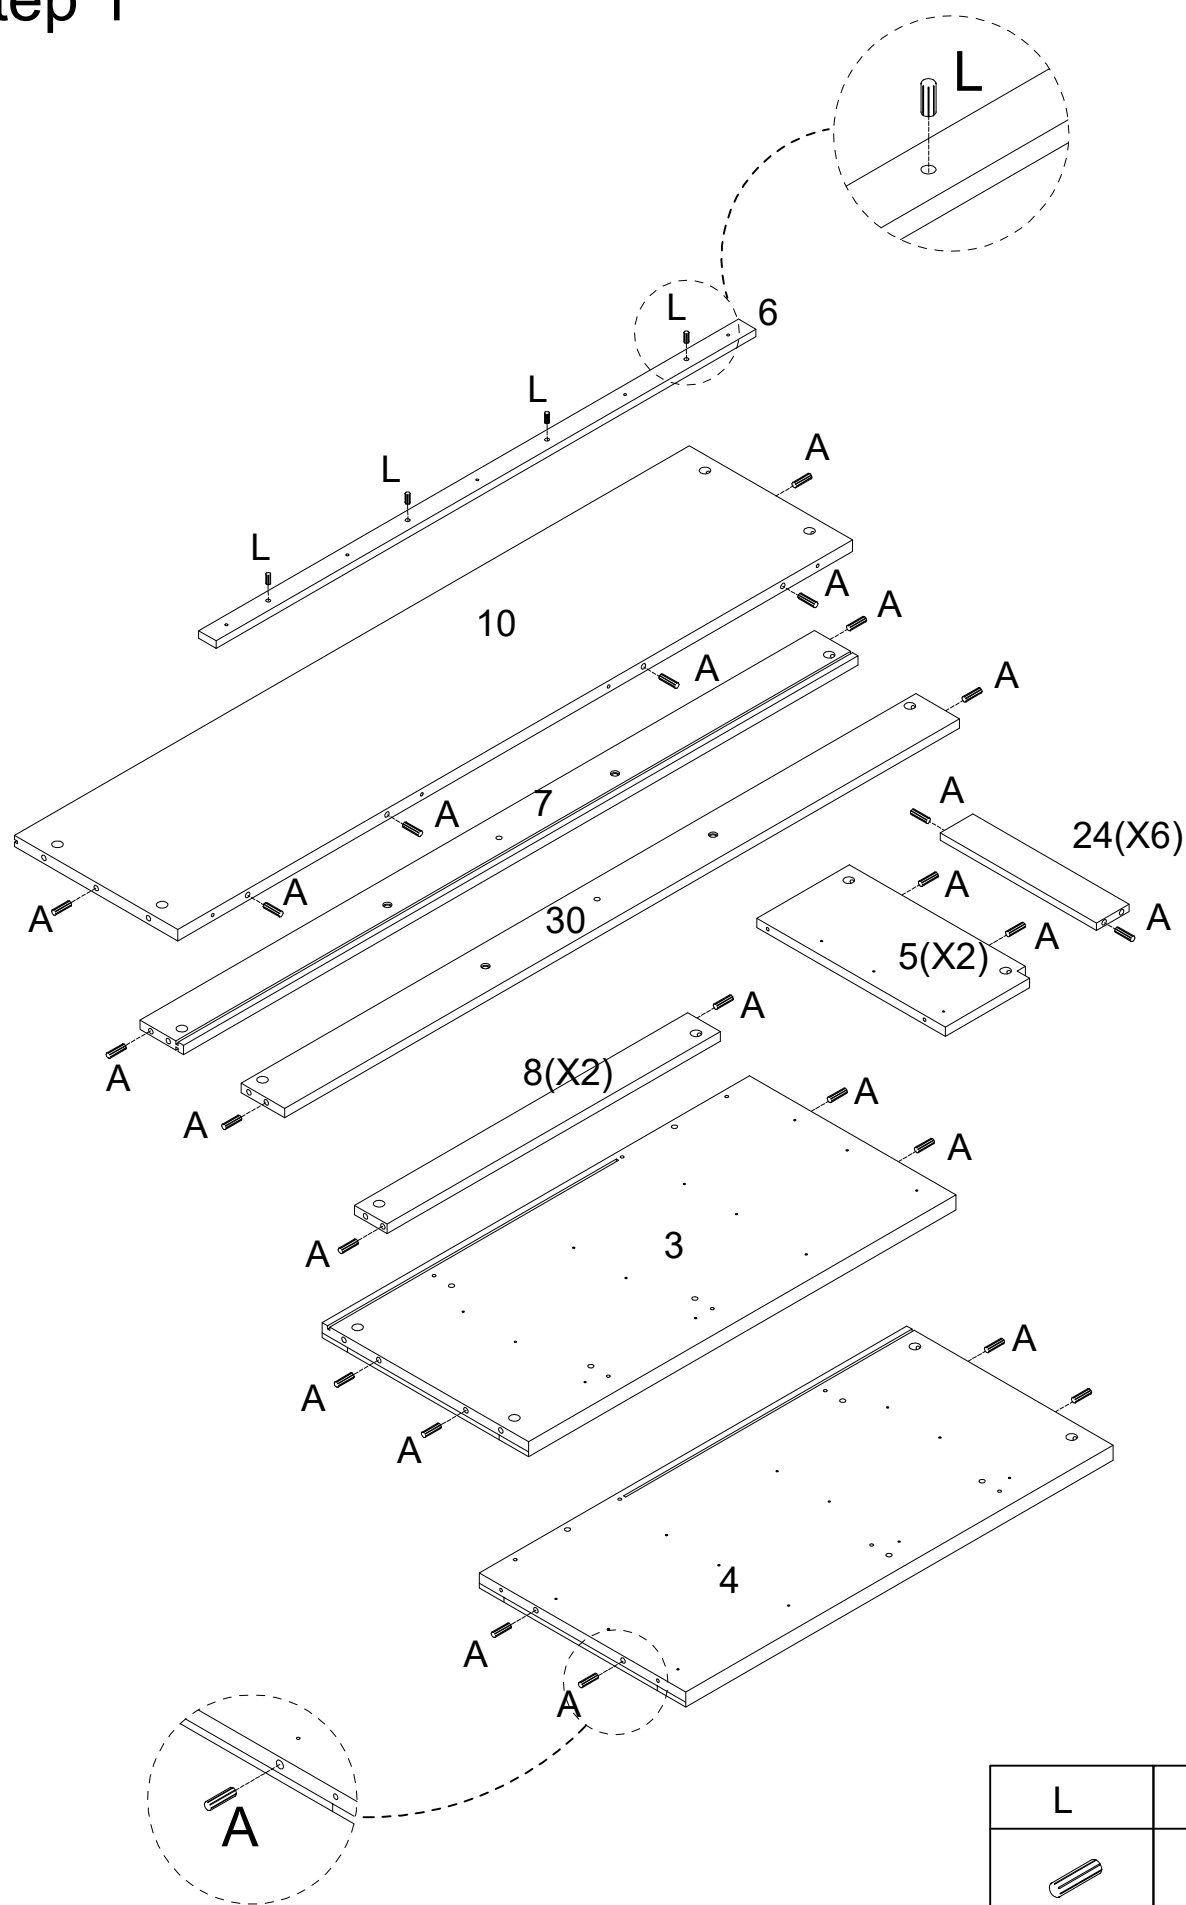
Step 1



L	A
	
X4	X38


Step 2

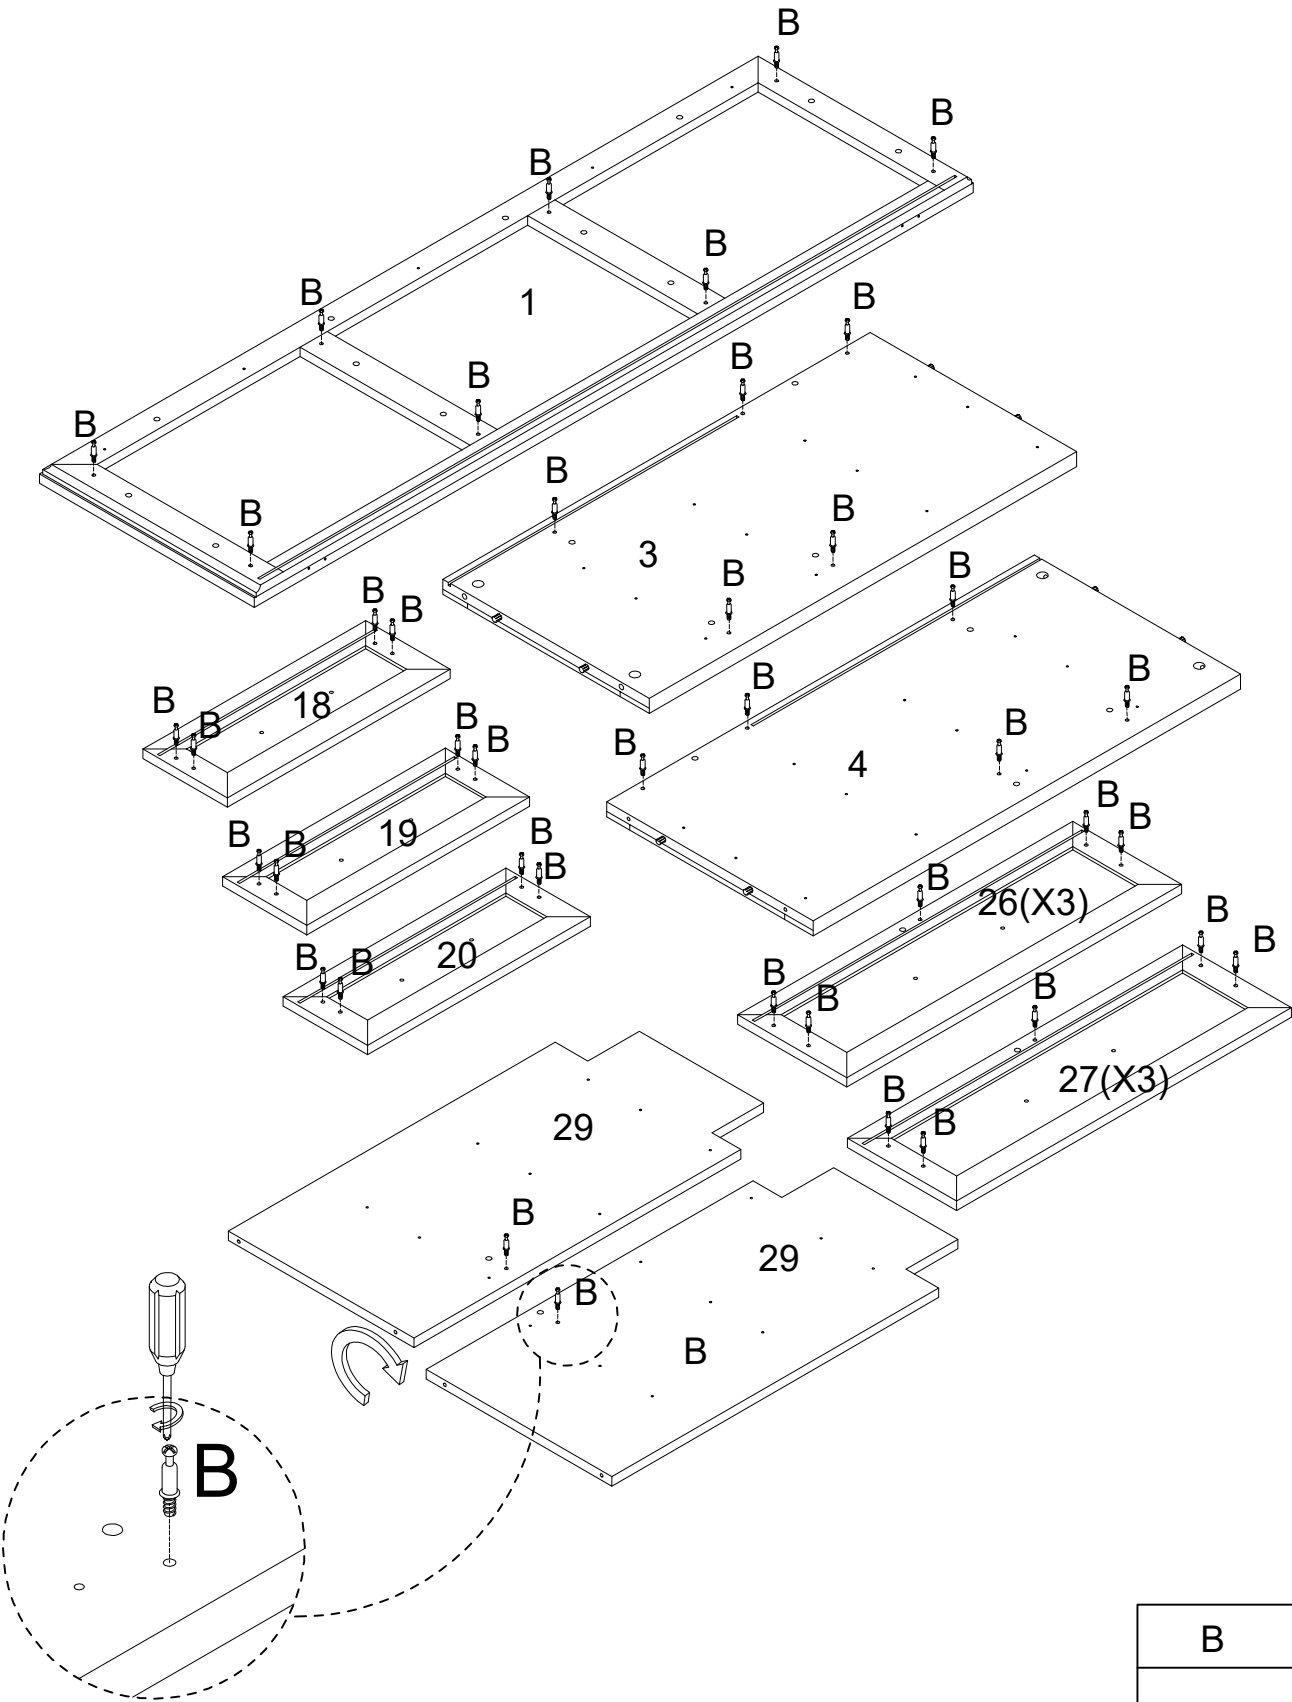


B

X62

Step 3


M-CL₈




M-CR₈



M-DL₈

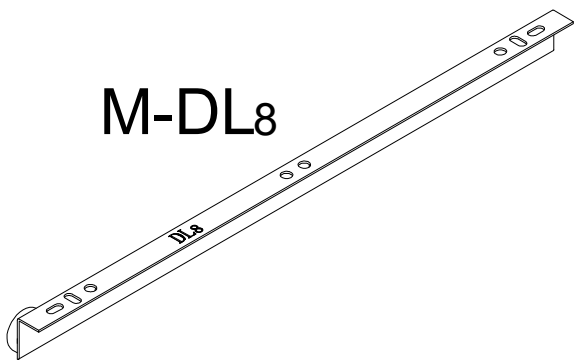

M-DR₈



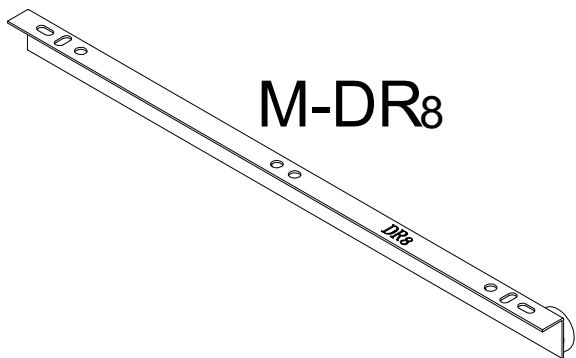


Step 4

NOTE:






Refer to the images to identify M-CL8 (left) and M-CR8 (right). Attach M-CL8 to #3 panel and M-CR8 to #4 panel. [R] screws must go in the exact spots shown.

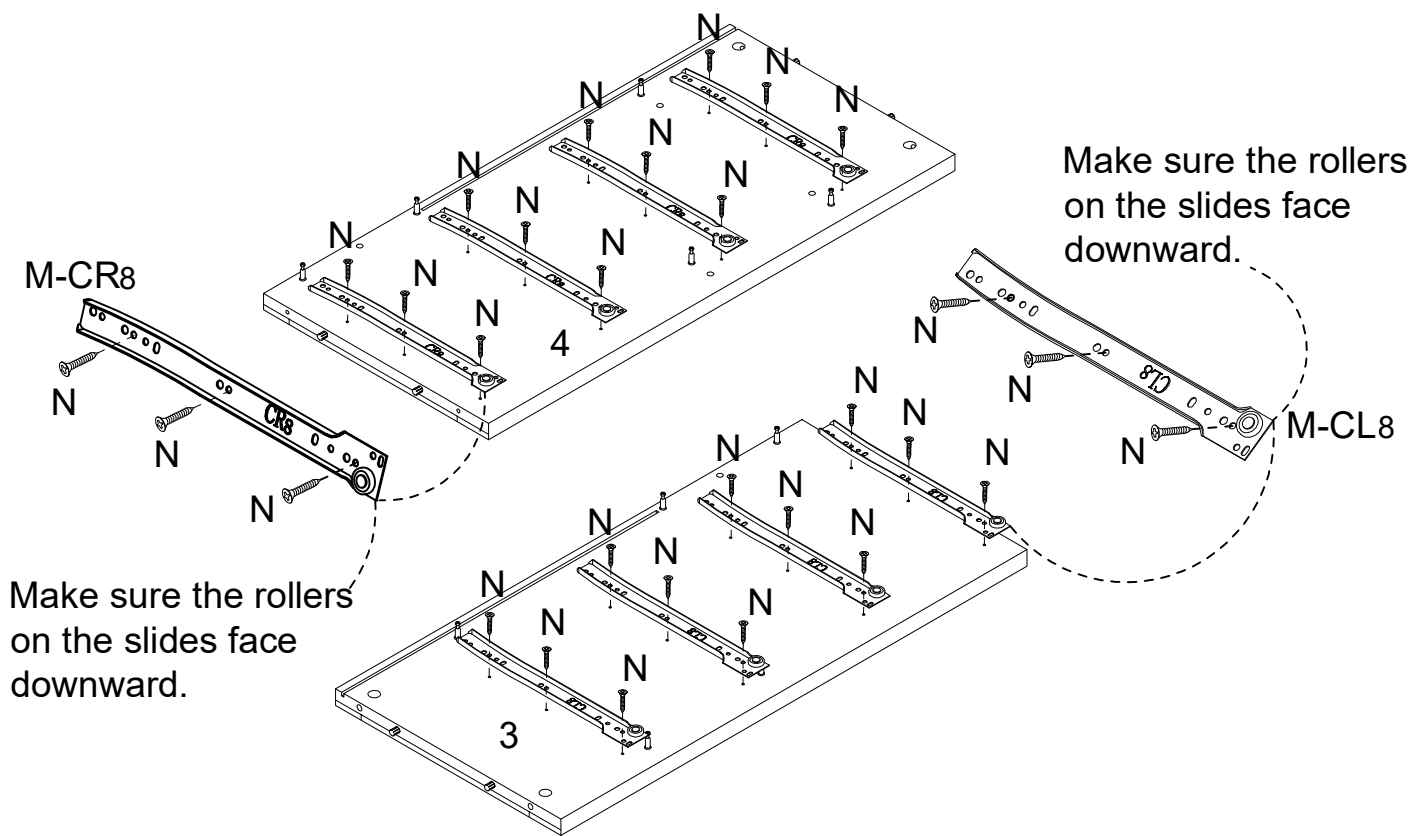


N	M
X24	X4

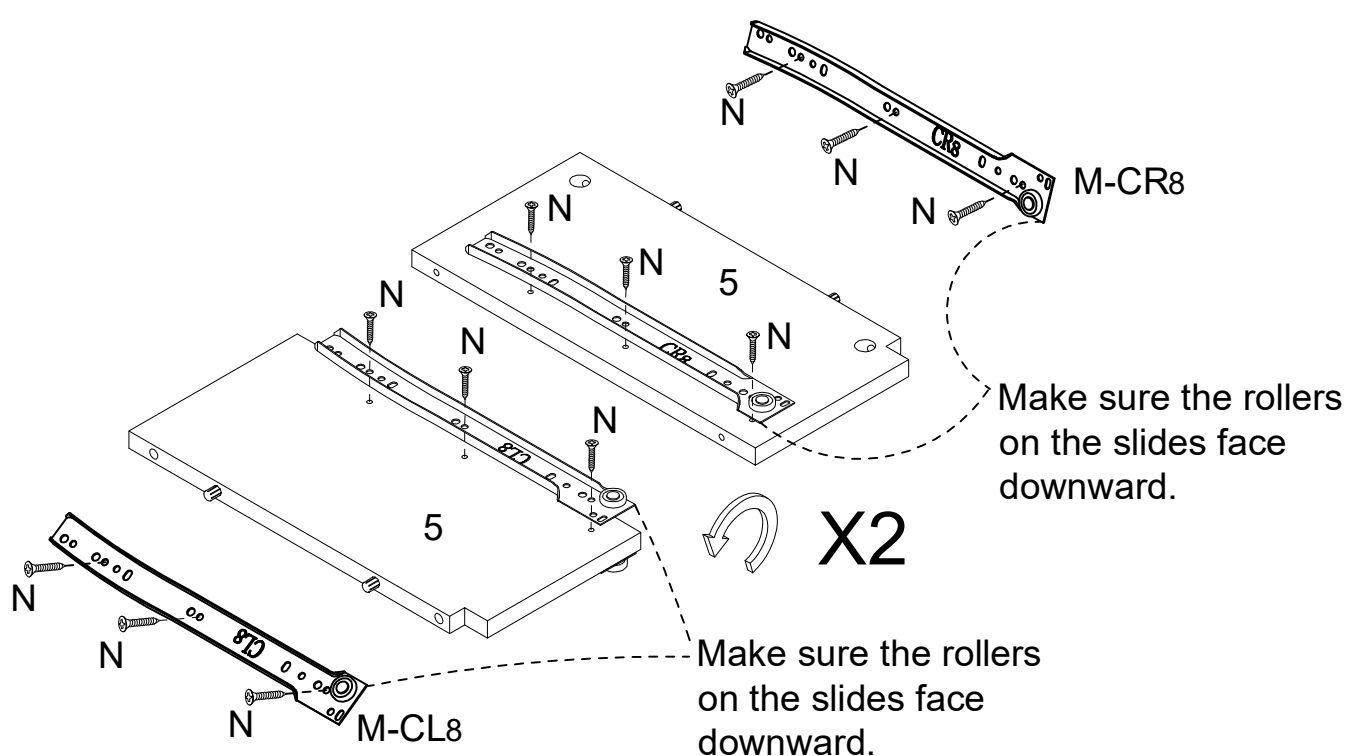

Step 5

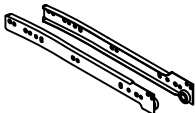


N	M
	
X12	X2

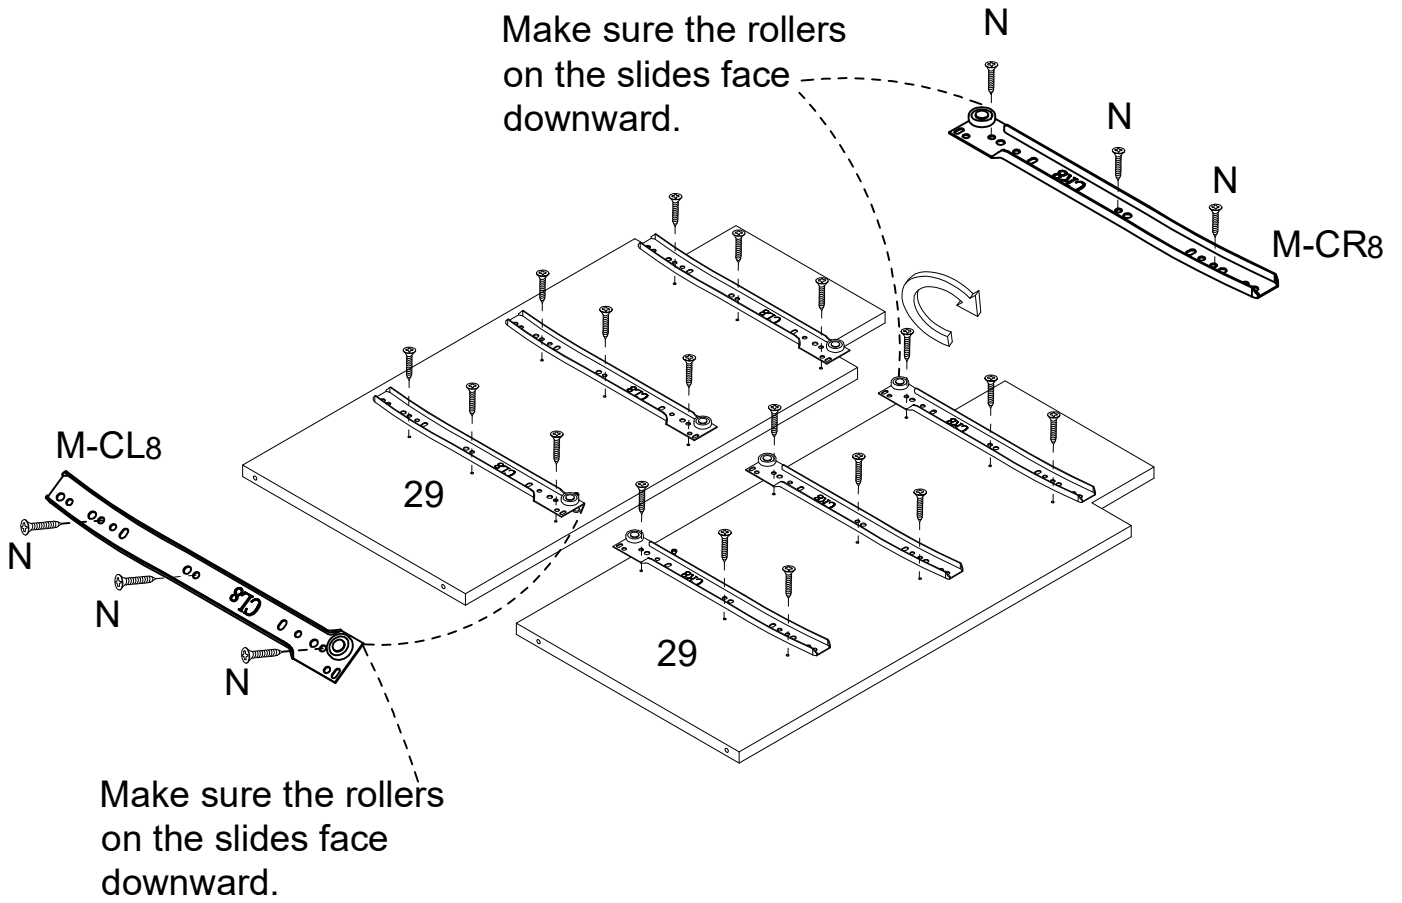
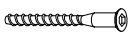
Step 6




N	M
	
X18	X3


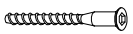
Step 7

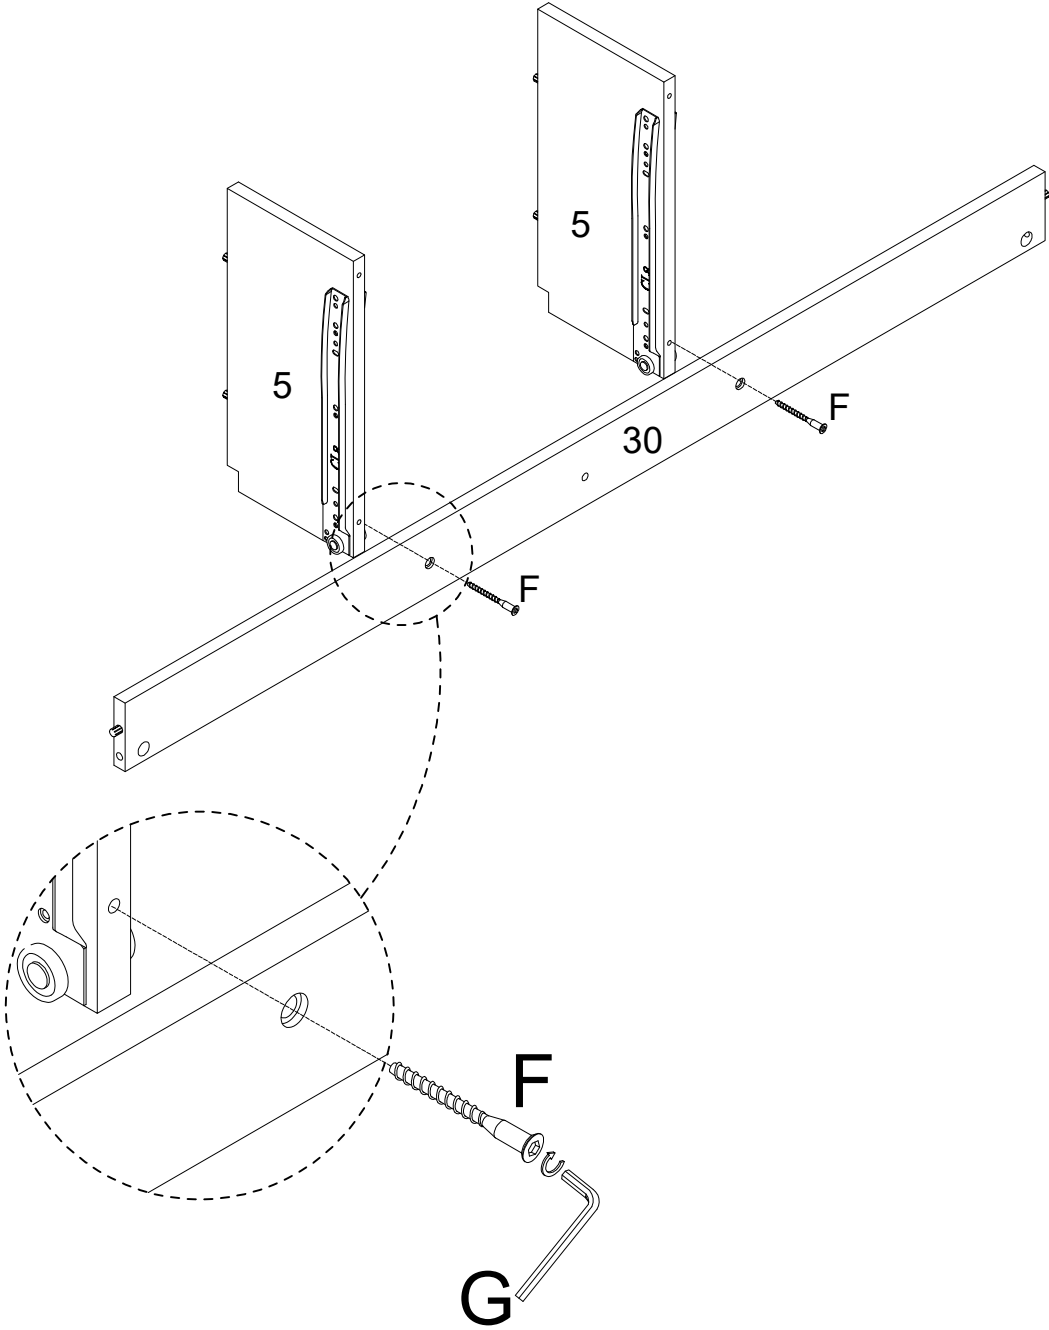



G	F
	
X1	X2


Step 8

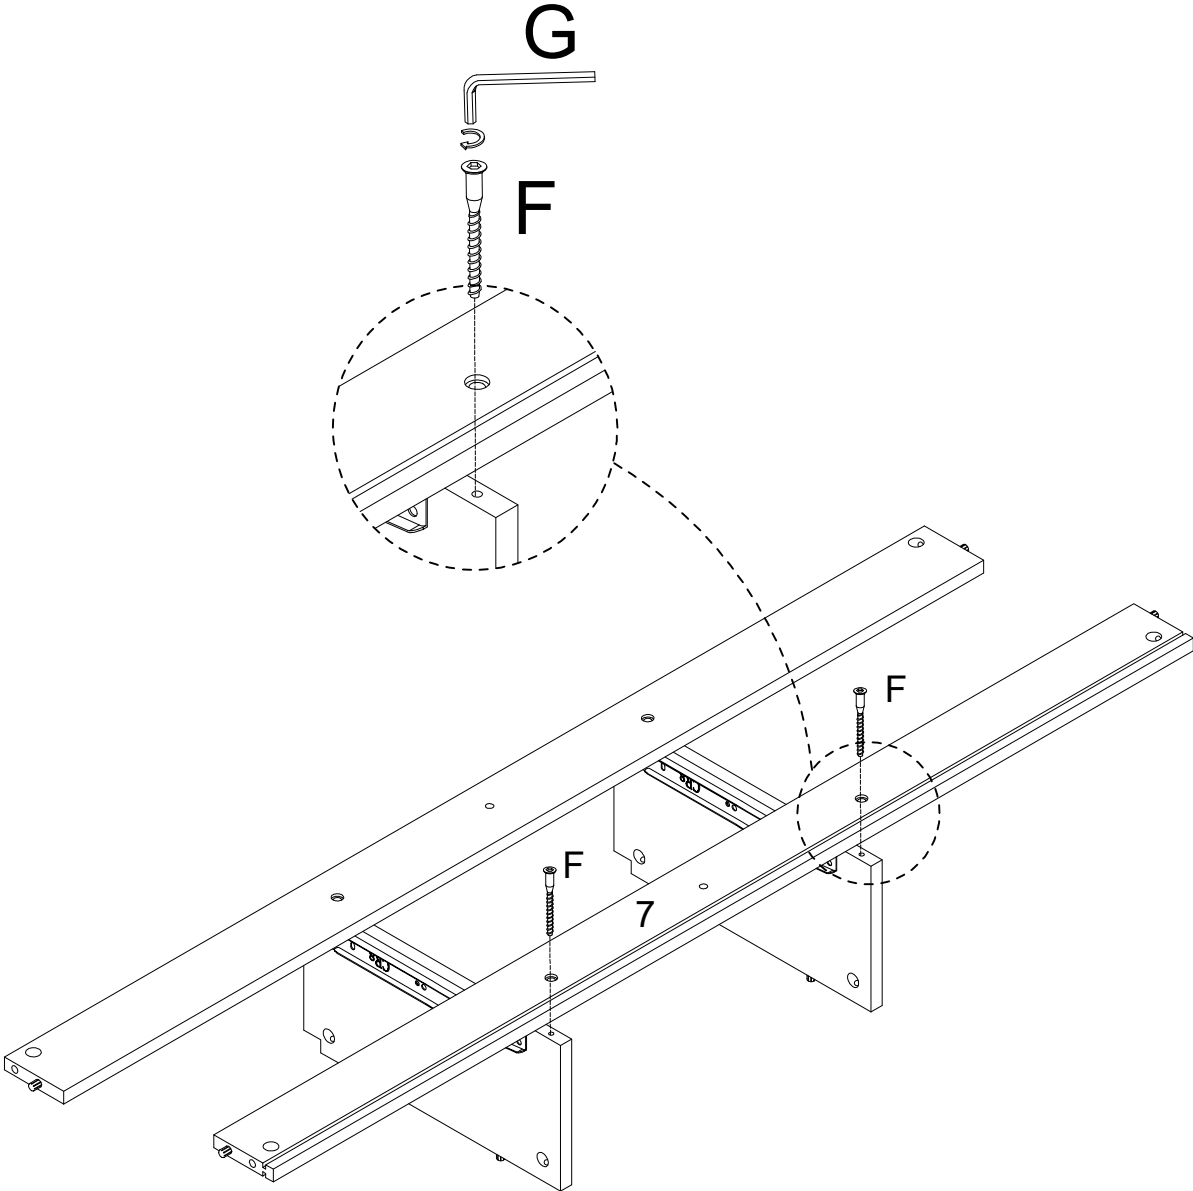



G	F
	
X1	X2


Step 9

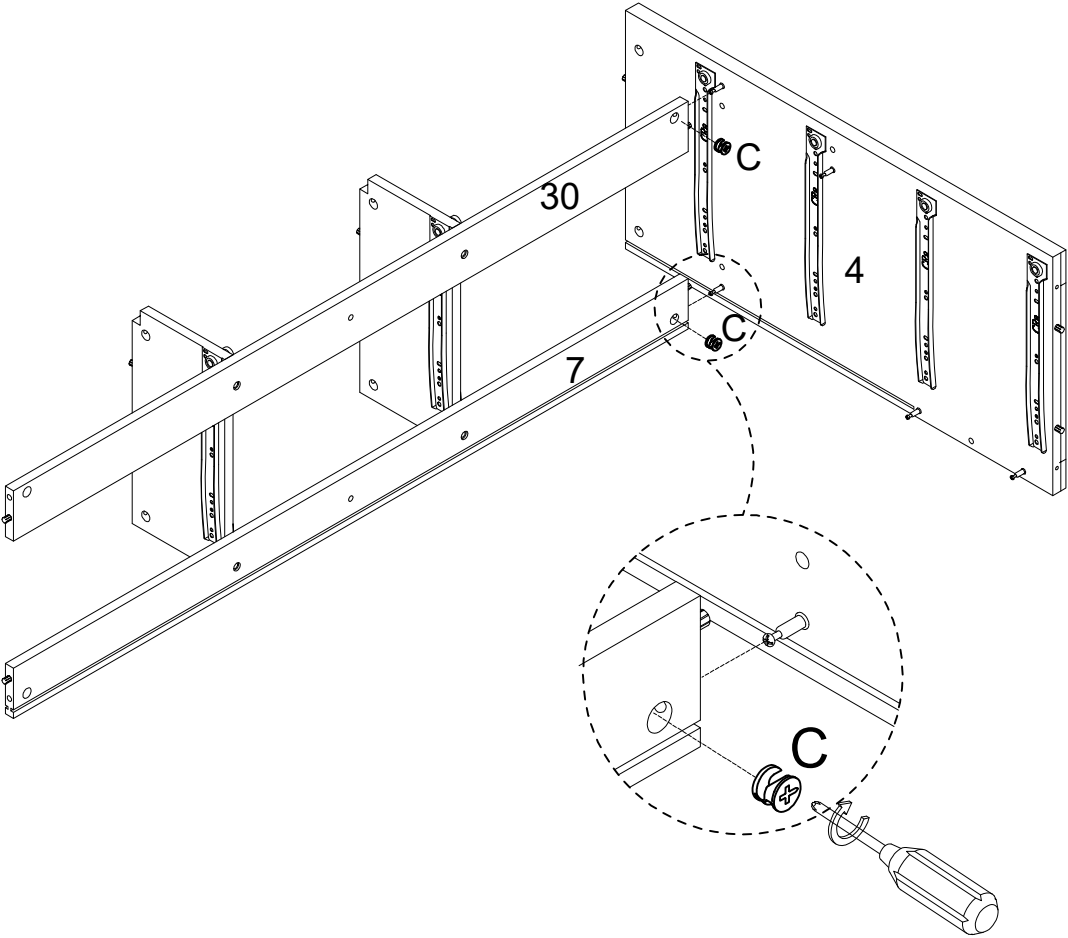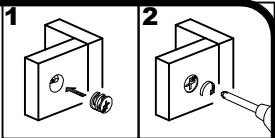



C

X2

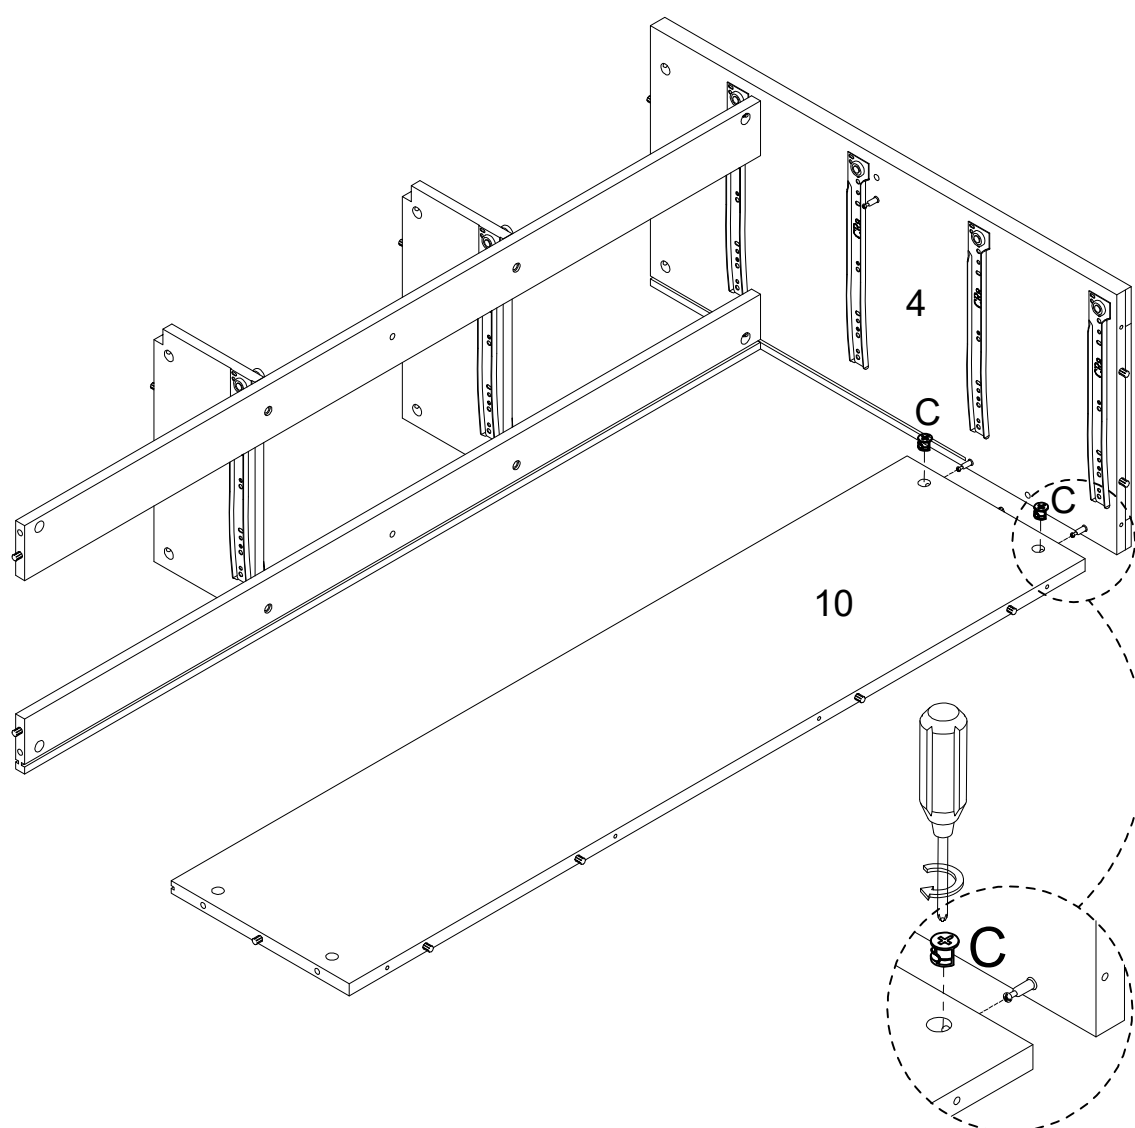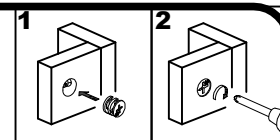
Step 10





C

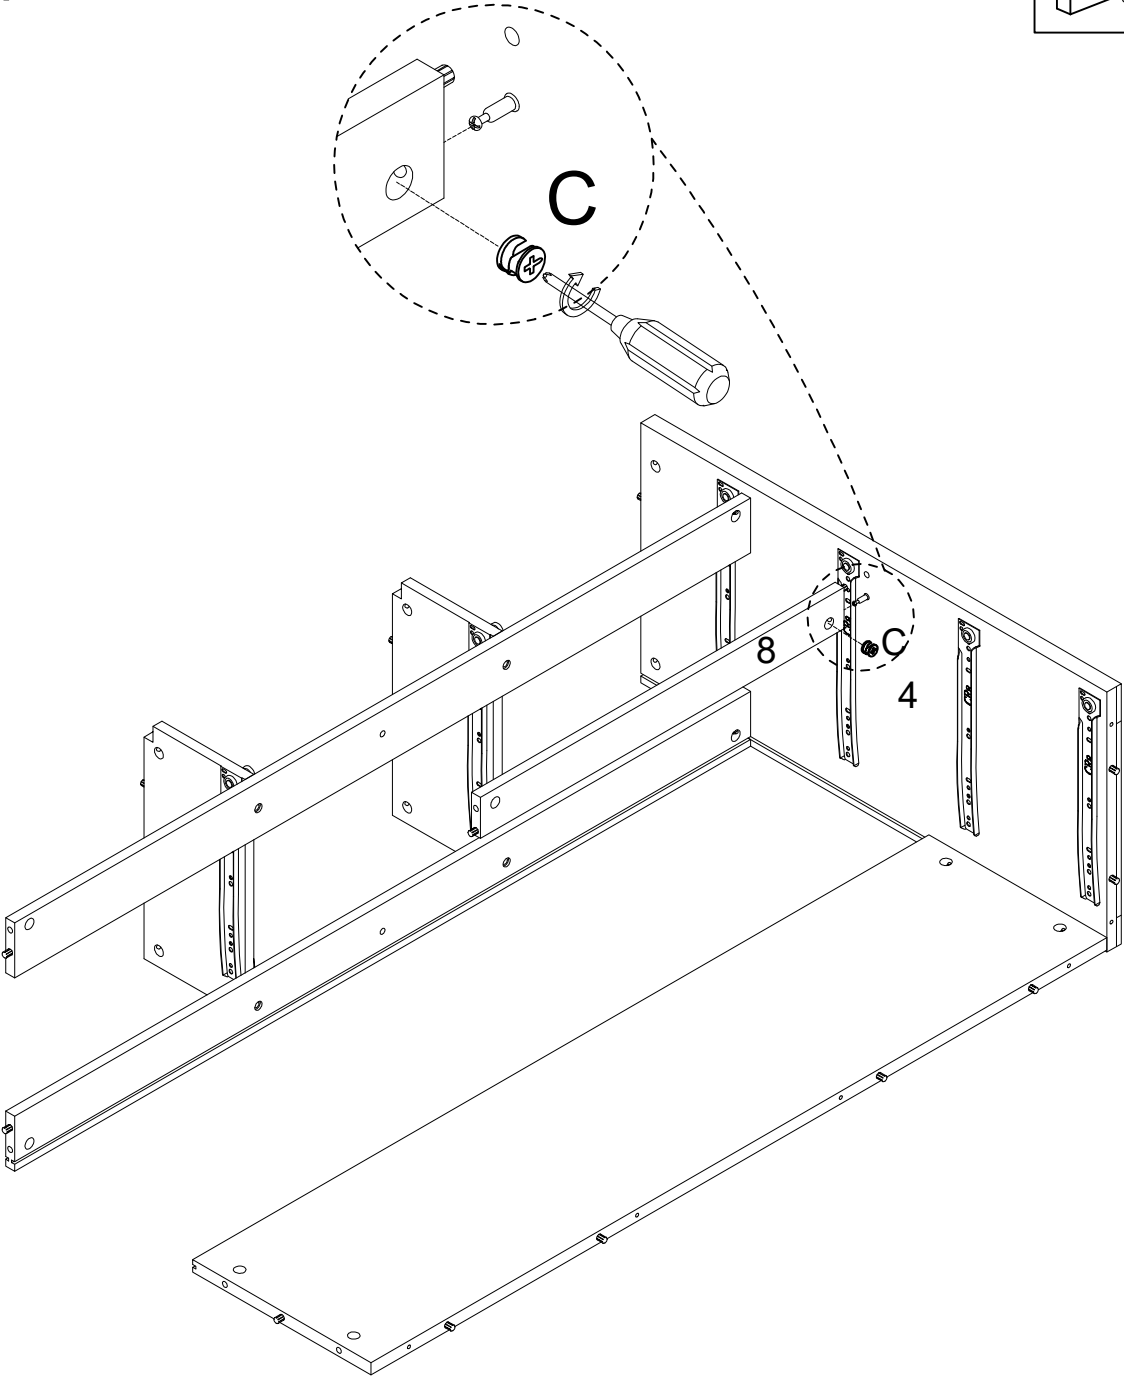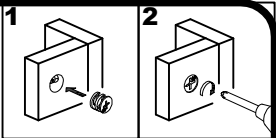X2


Step 11




C

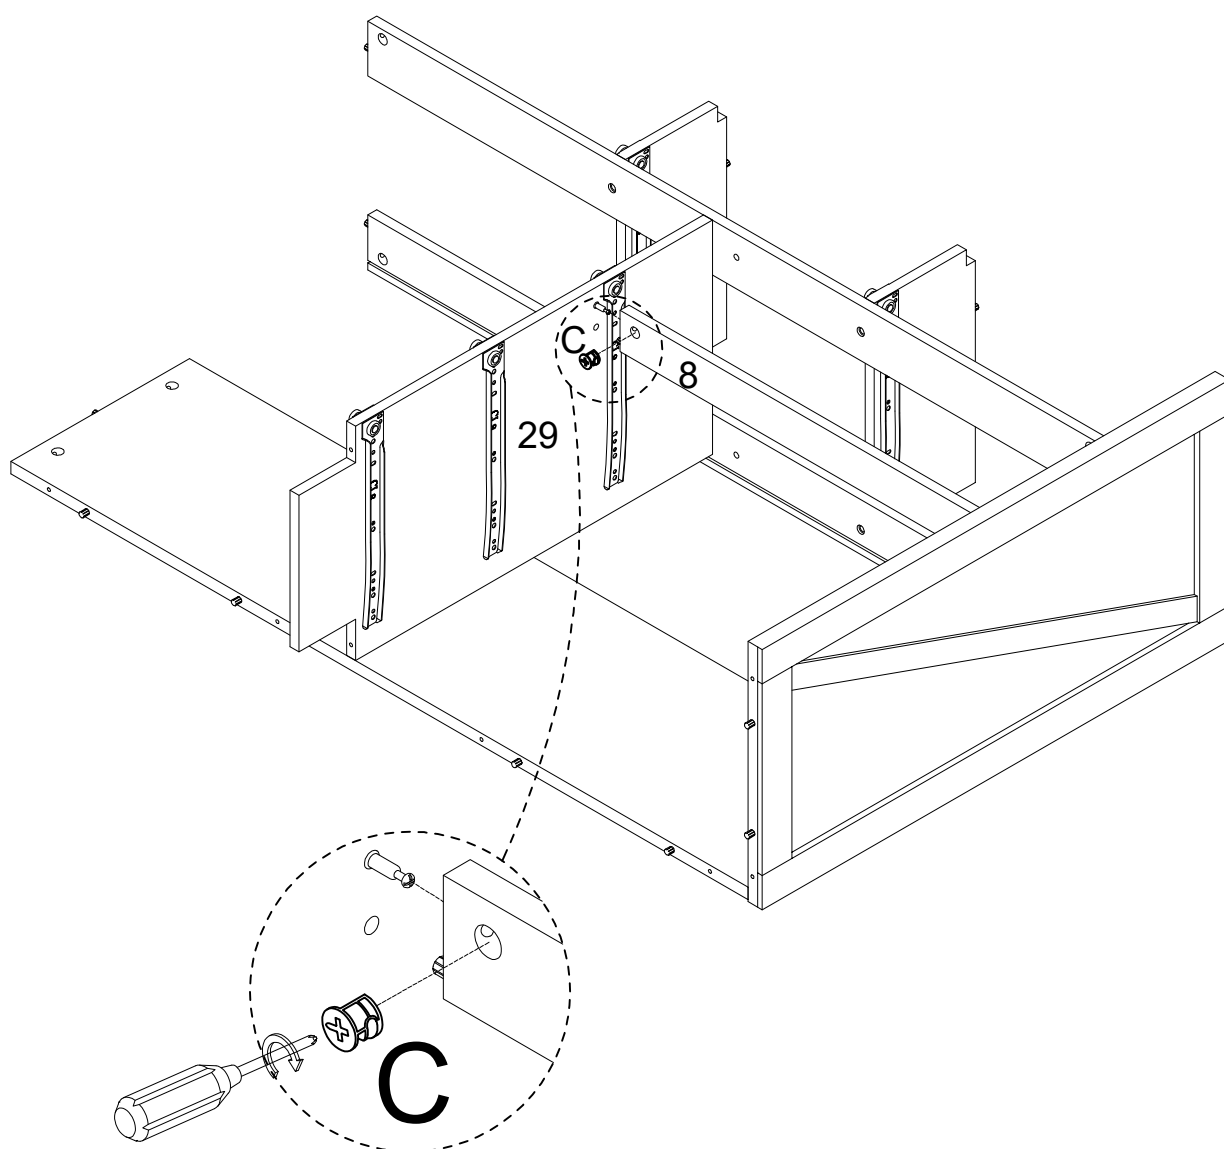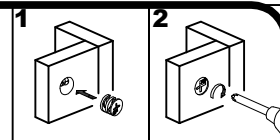X1


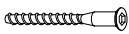
Step 12




C

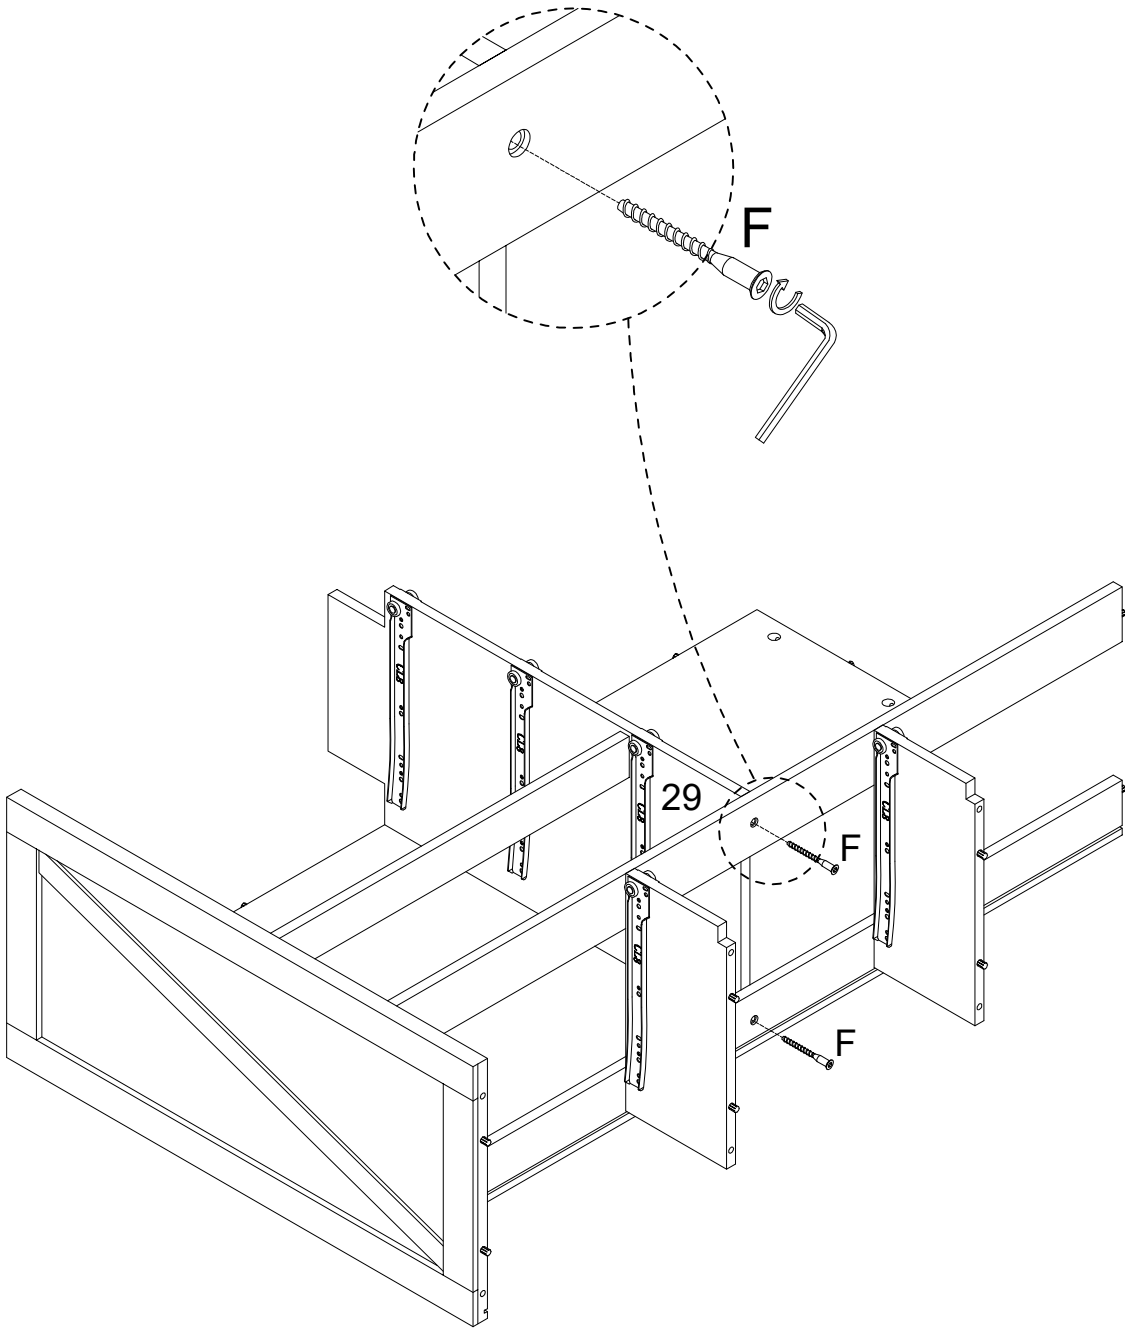X1

Step 13






G	F
	
X1	X2

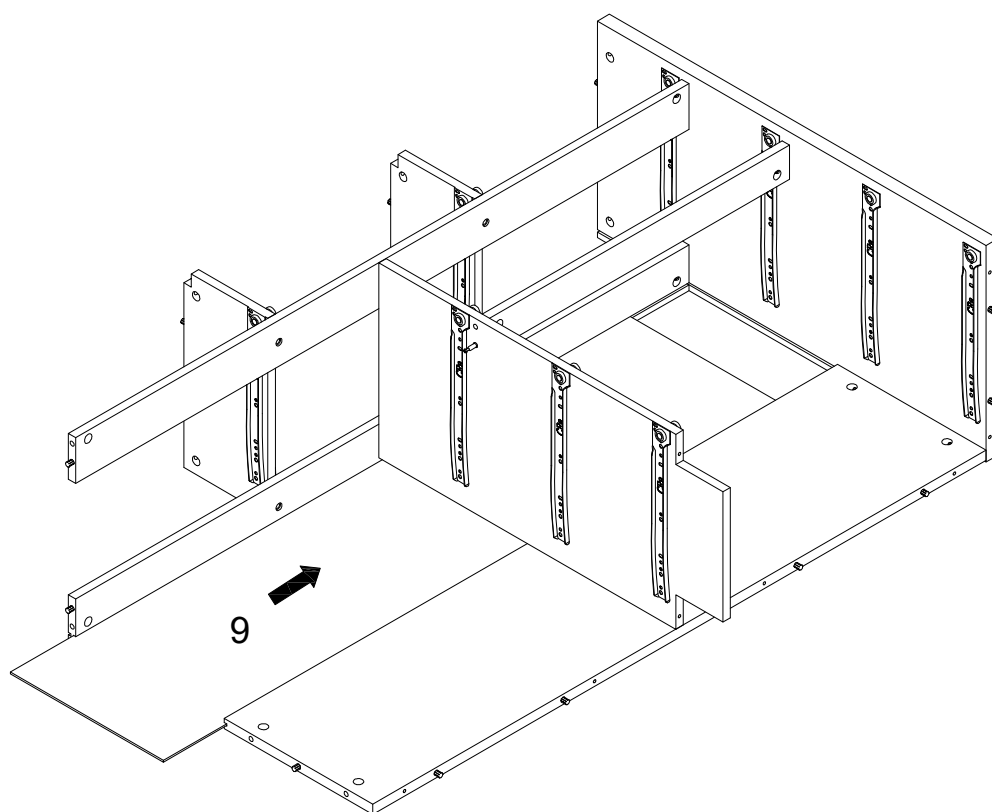Step 14






Step 15

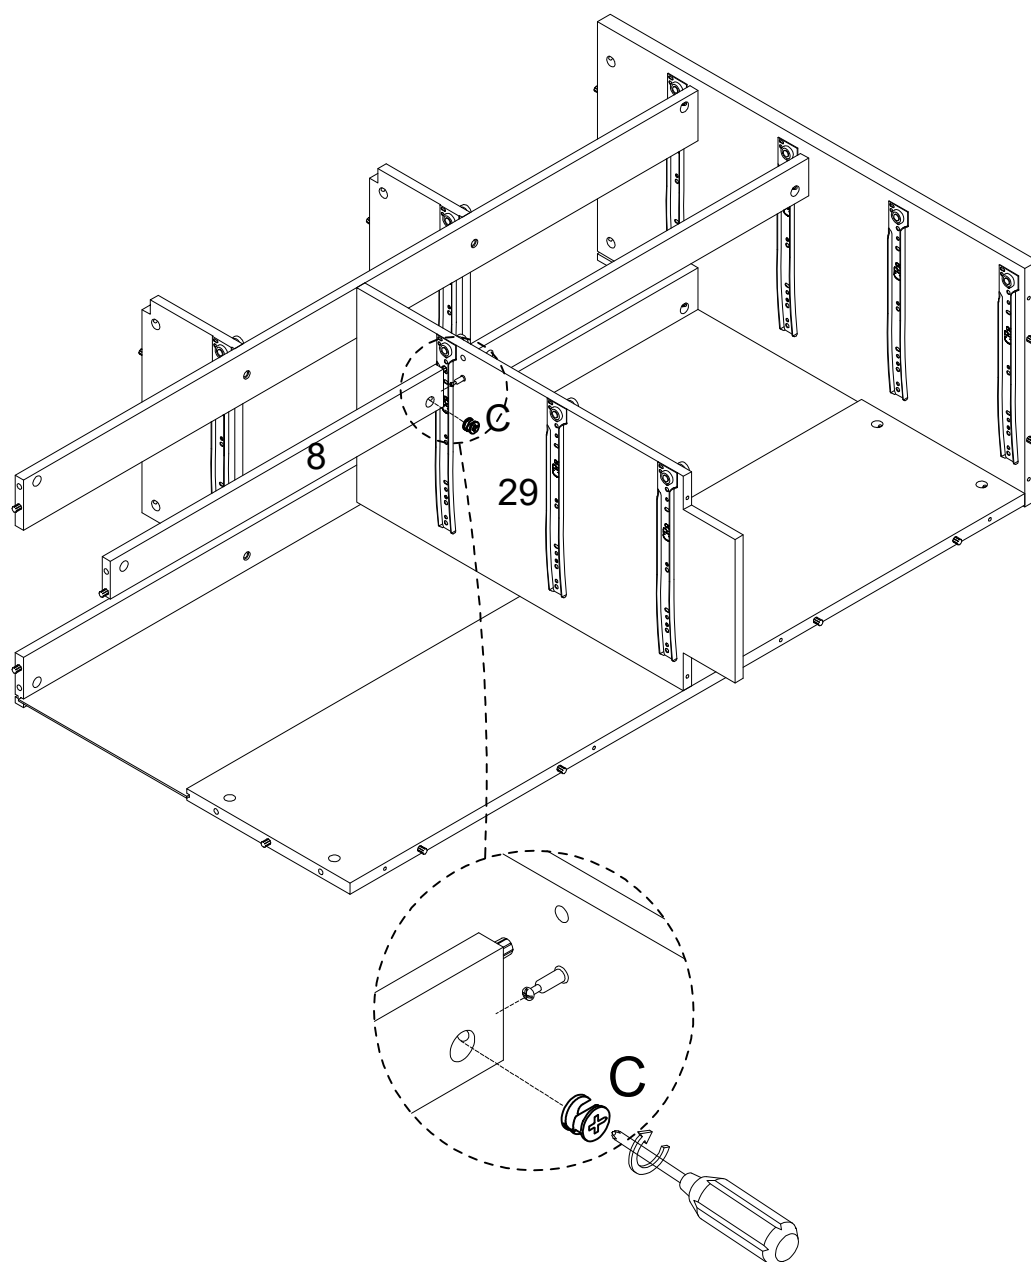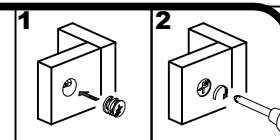


C

X1

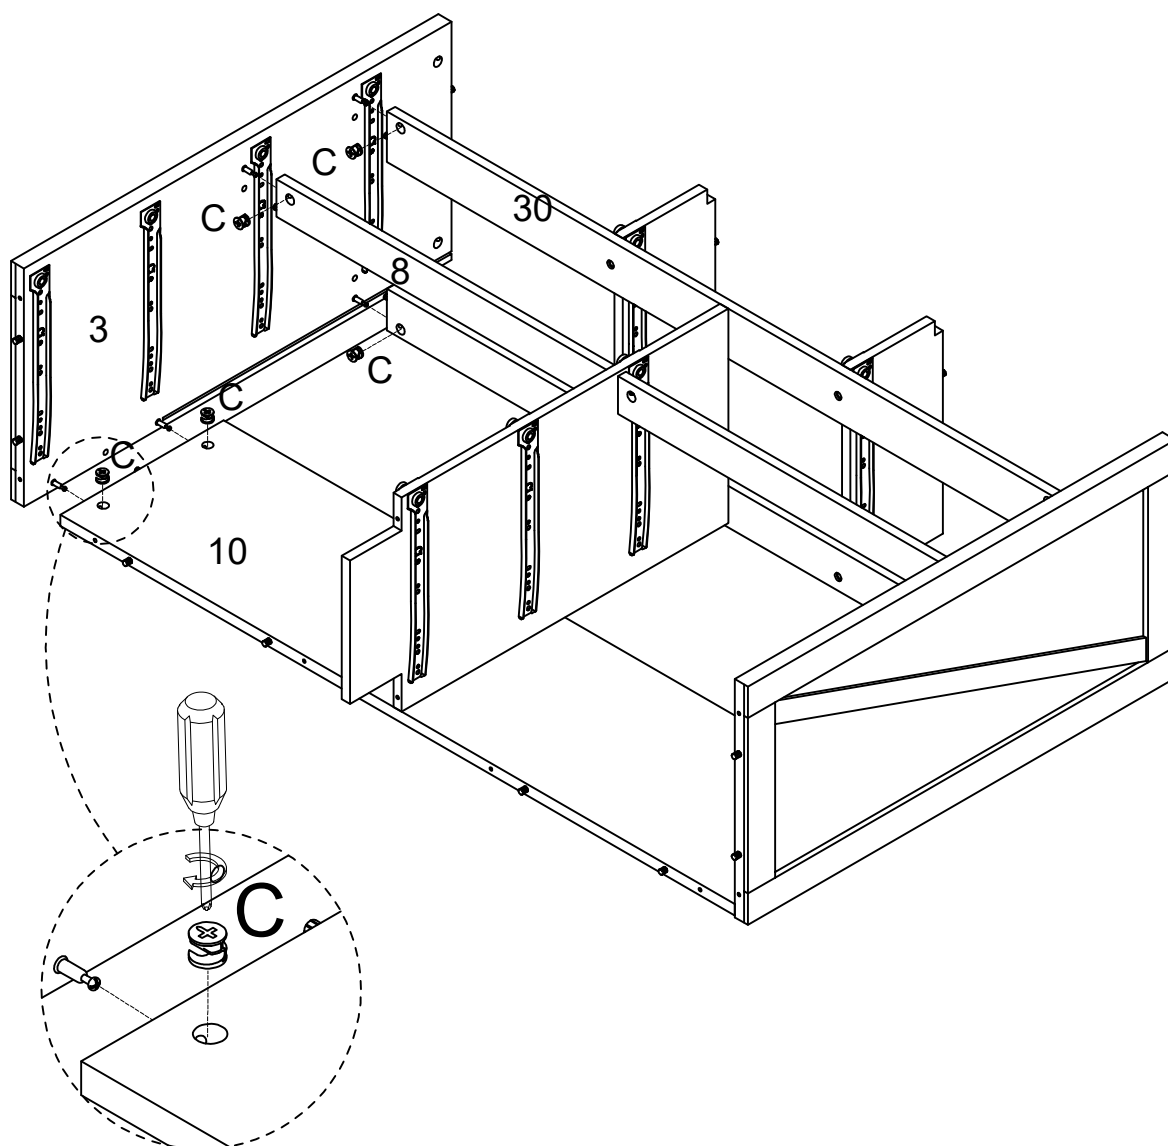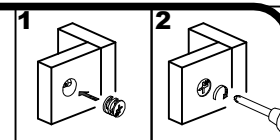
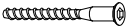
Step 16




C

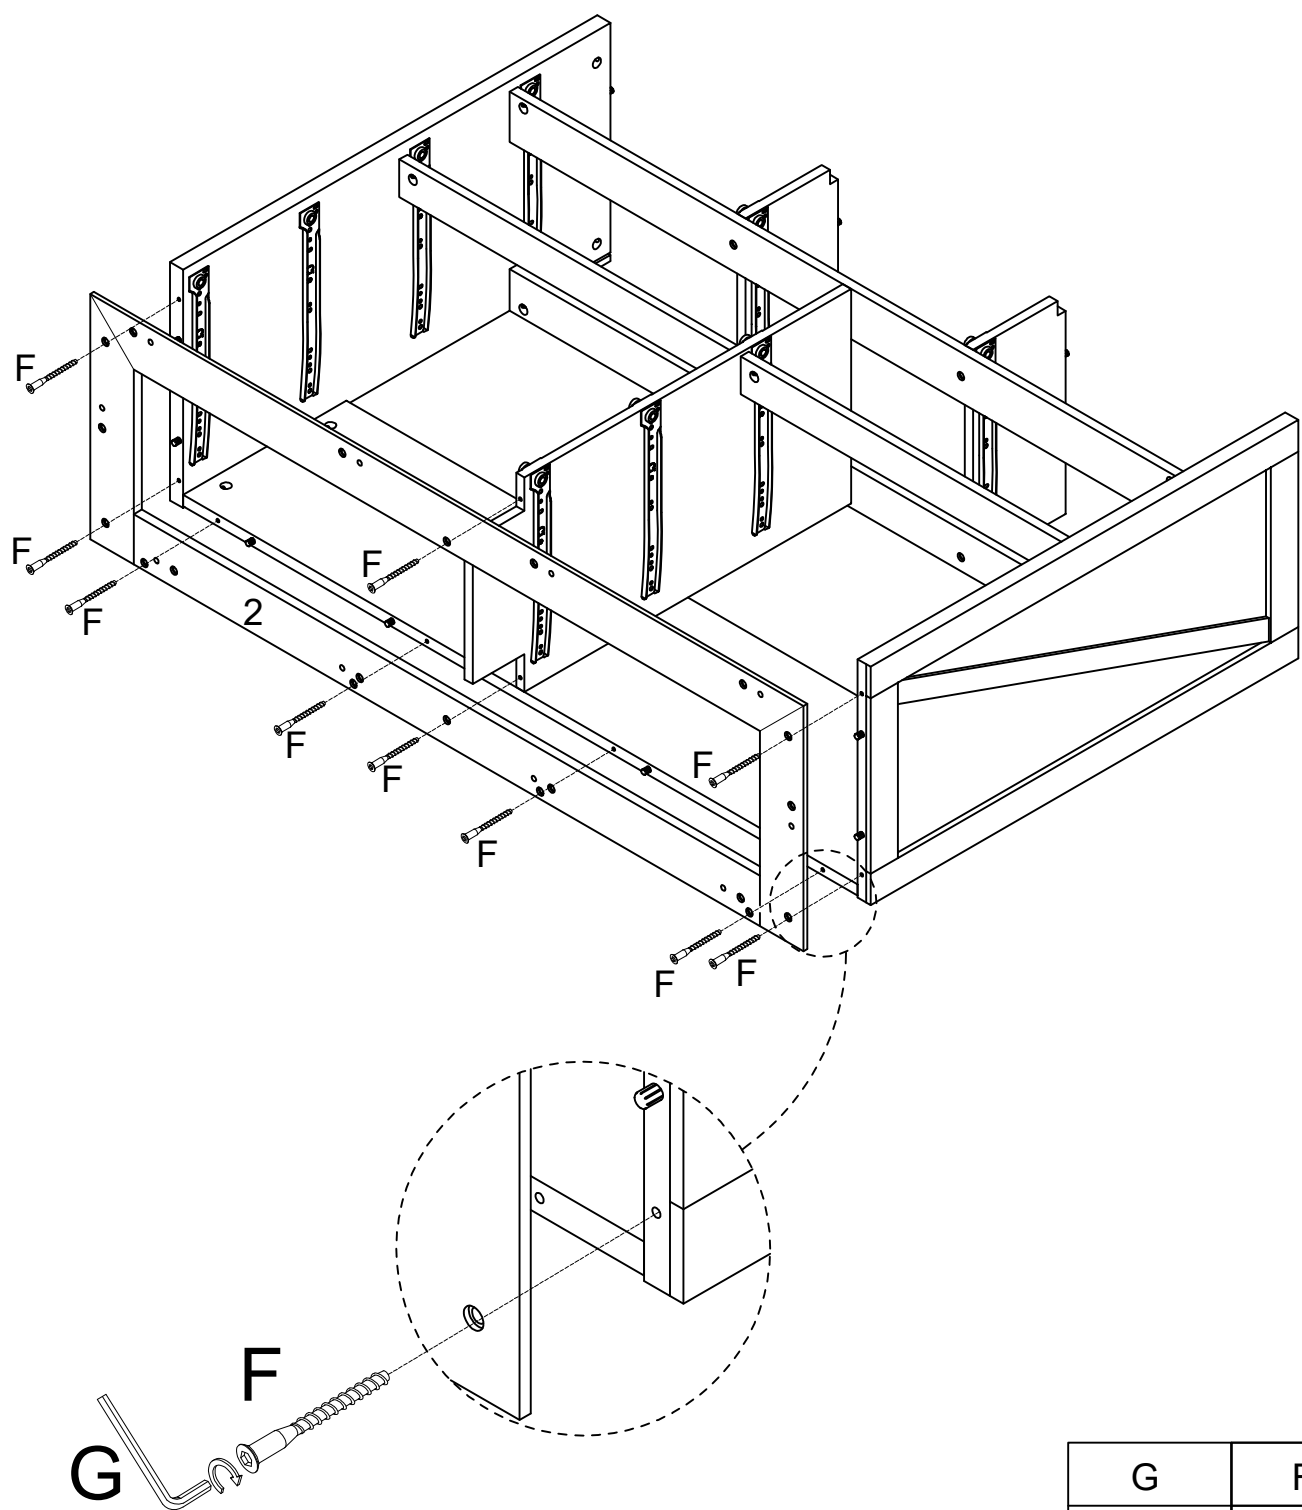X5




Step 17

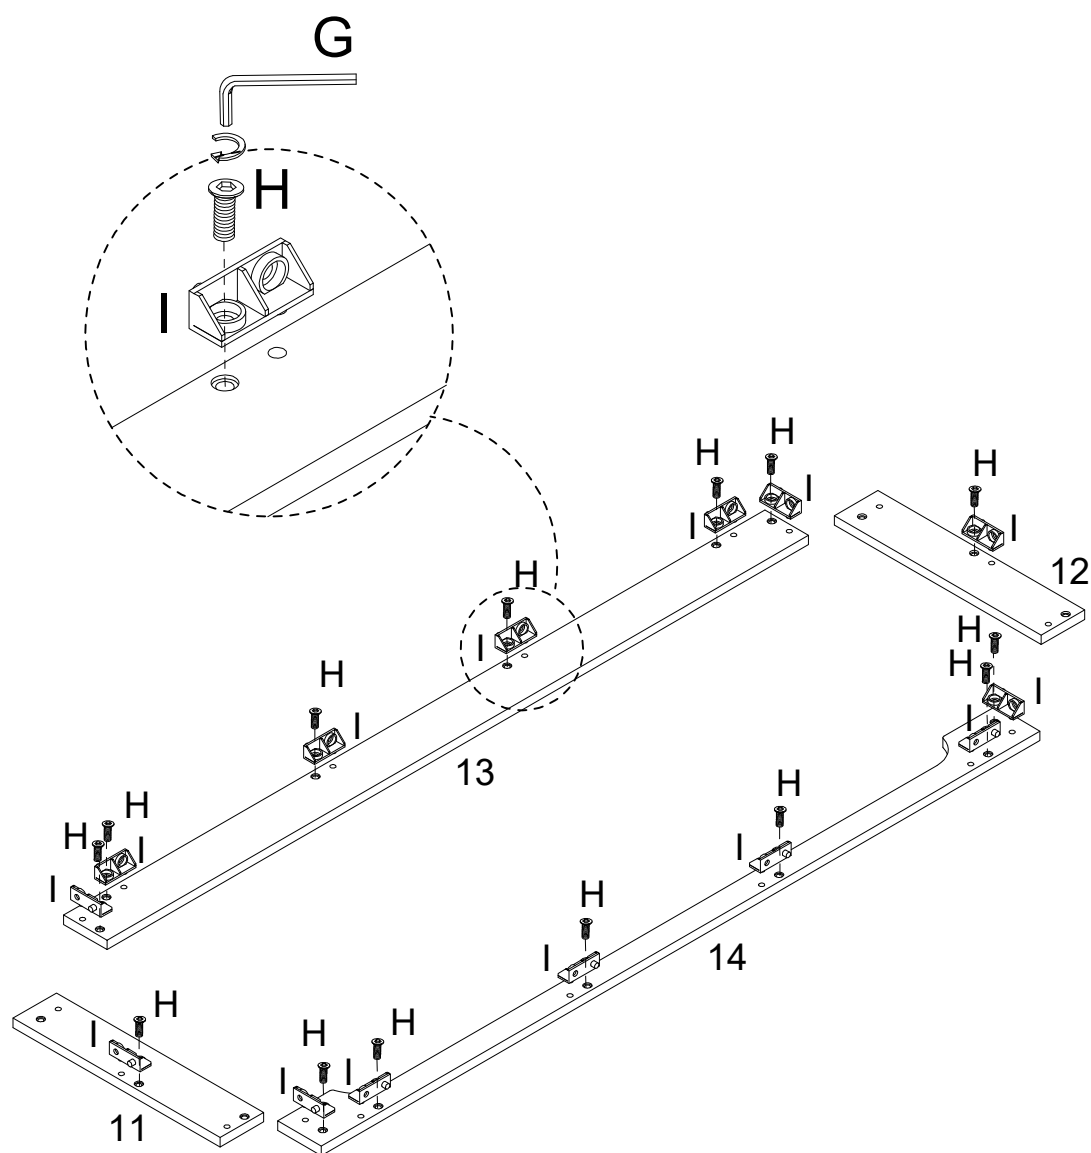


G	F
	
X1	X10



Step 18




G	I	H
		
X1	X14	X14

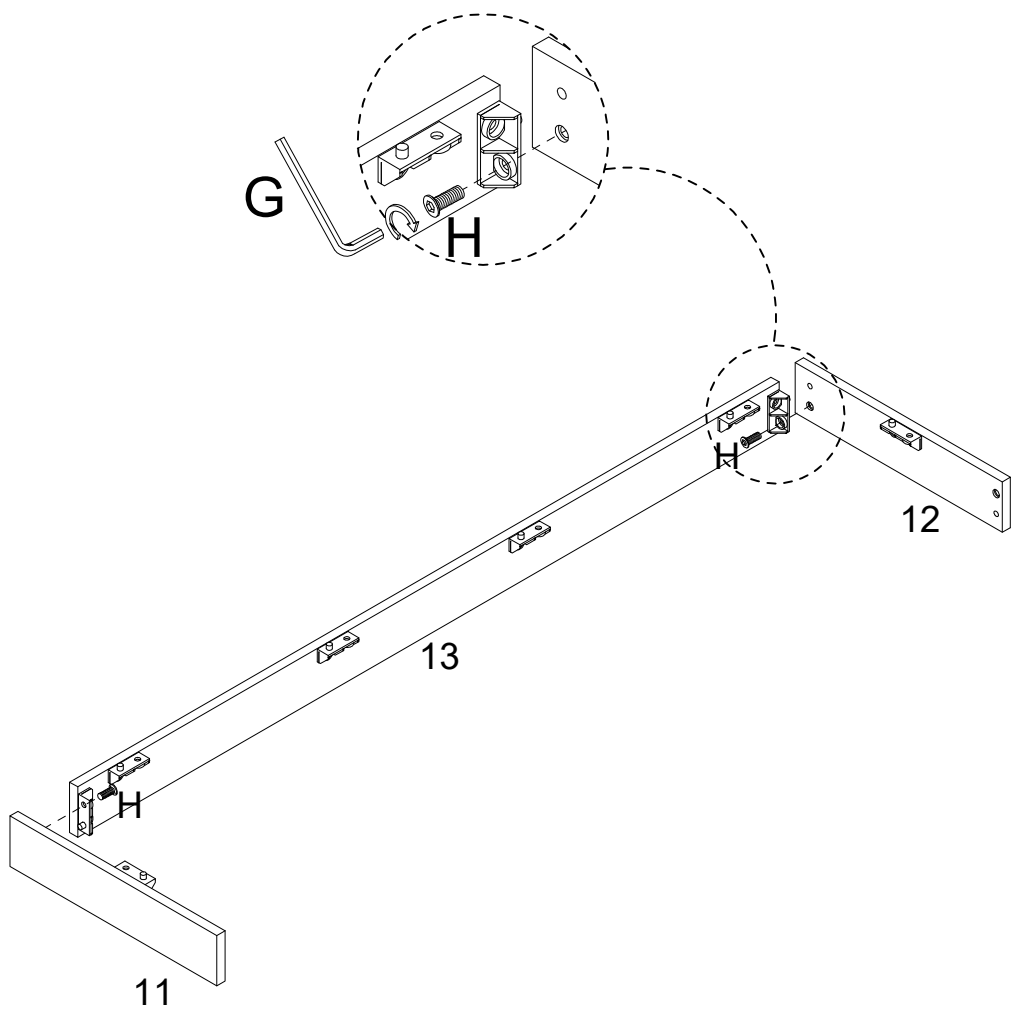

Step 19




G	H
	
X1	X2

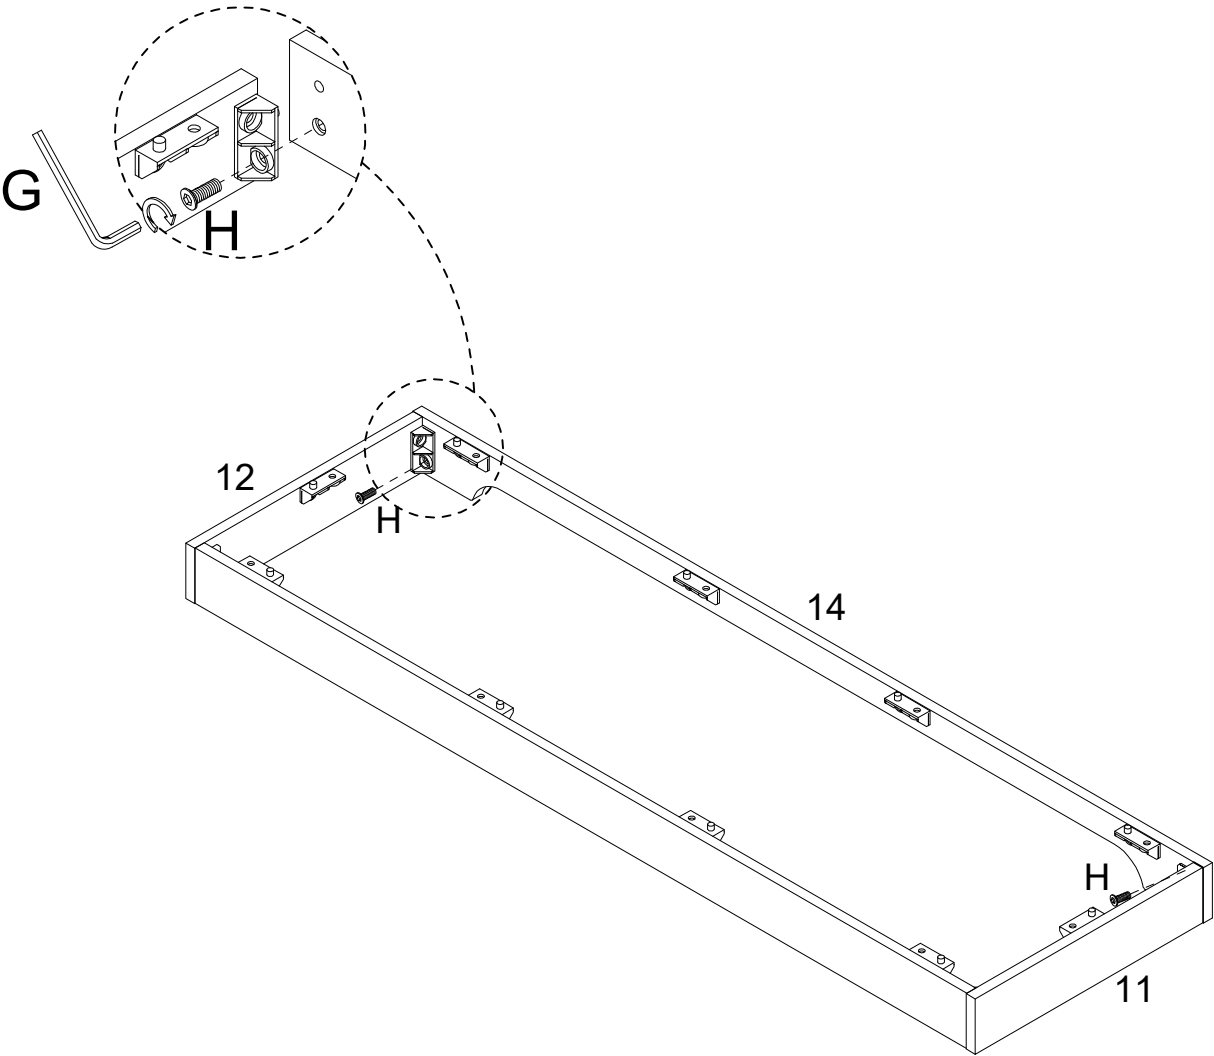

Step 20




G	H
	
X1	X2

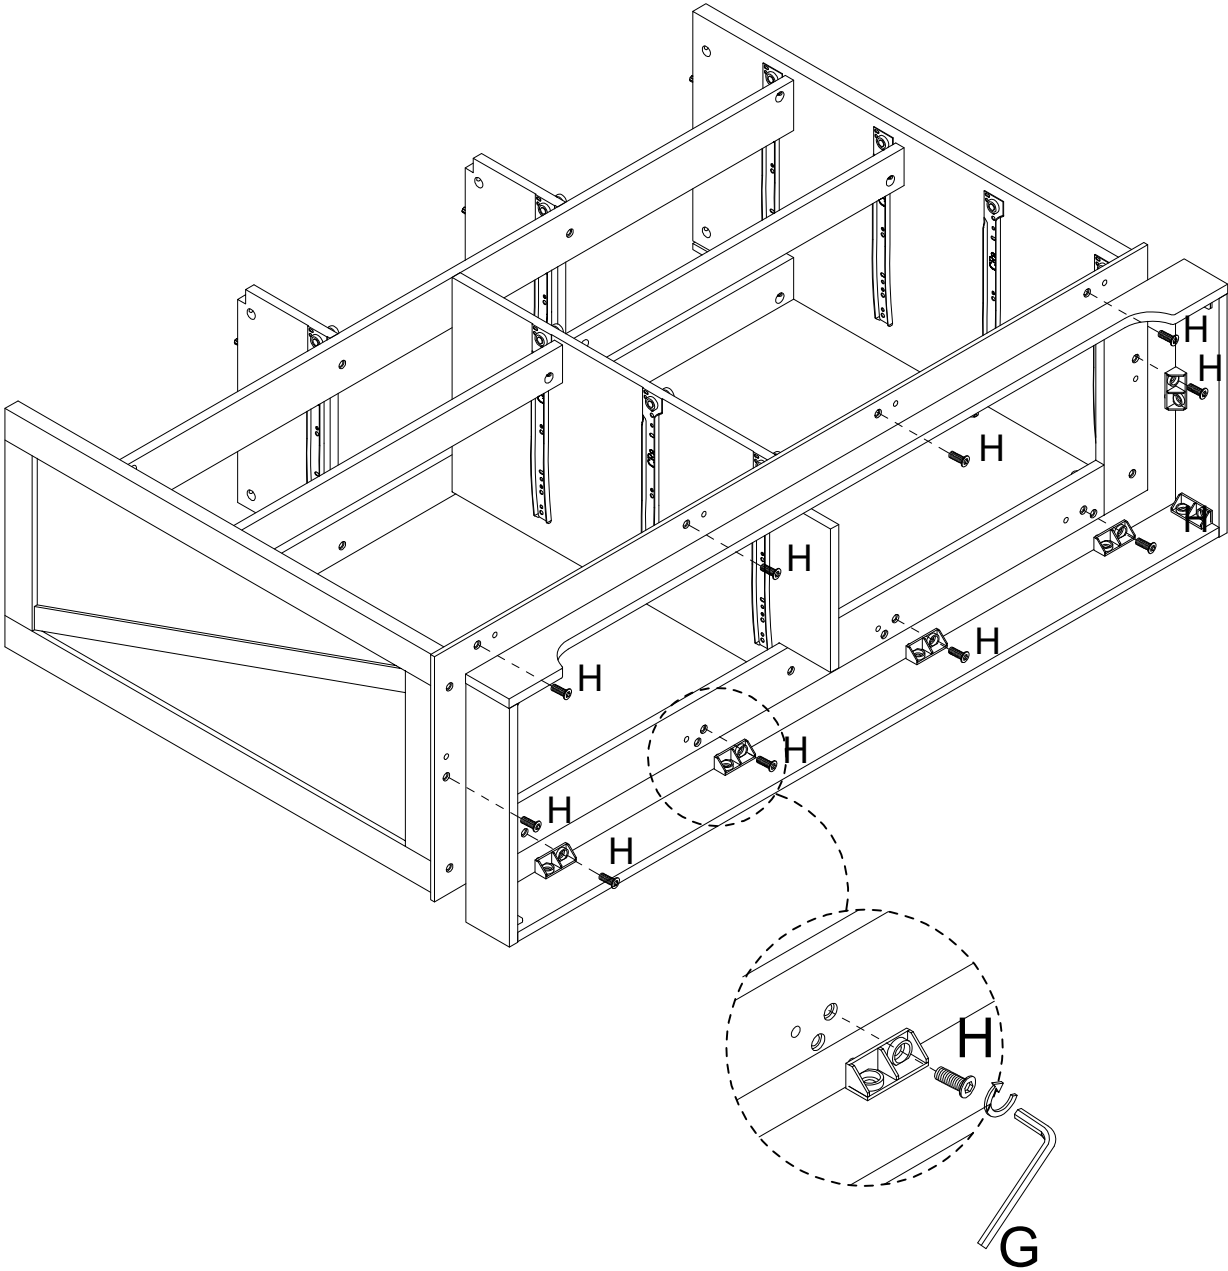Step 21





G	H
	
X1	X10

Step 22


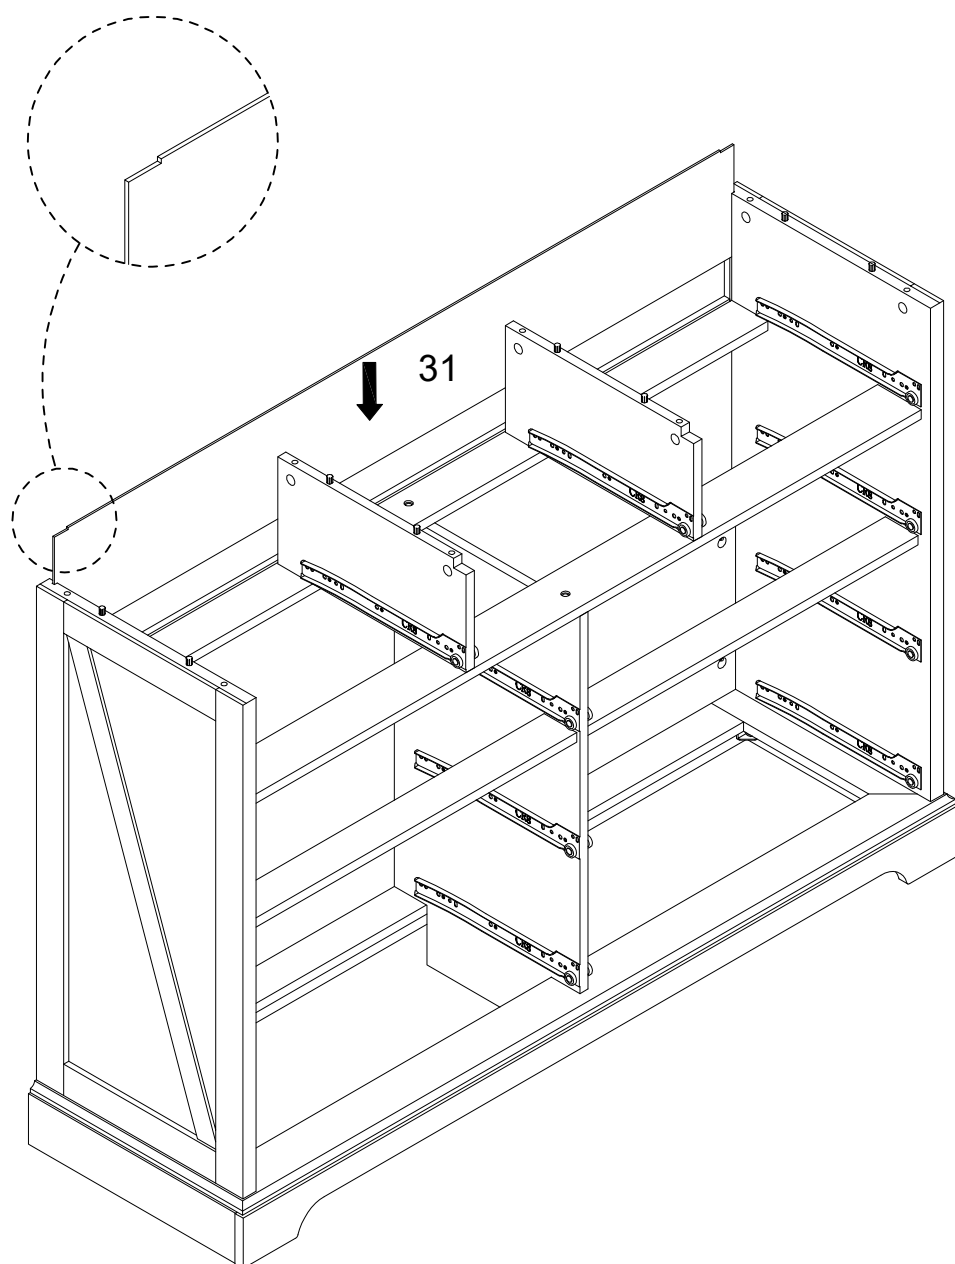



Step 23

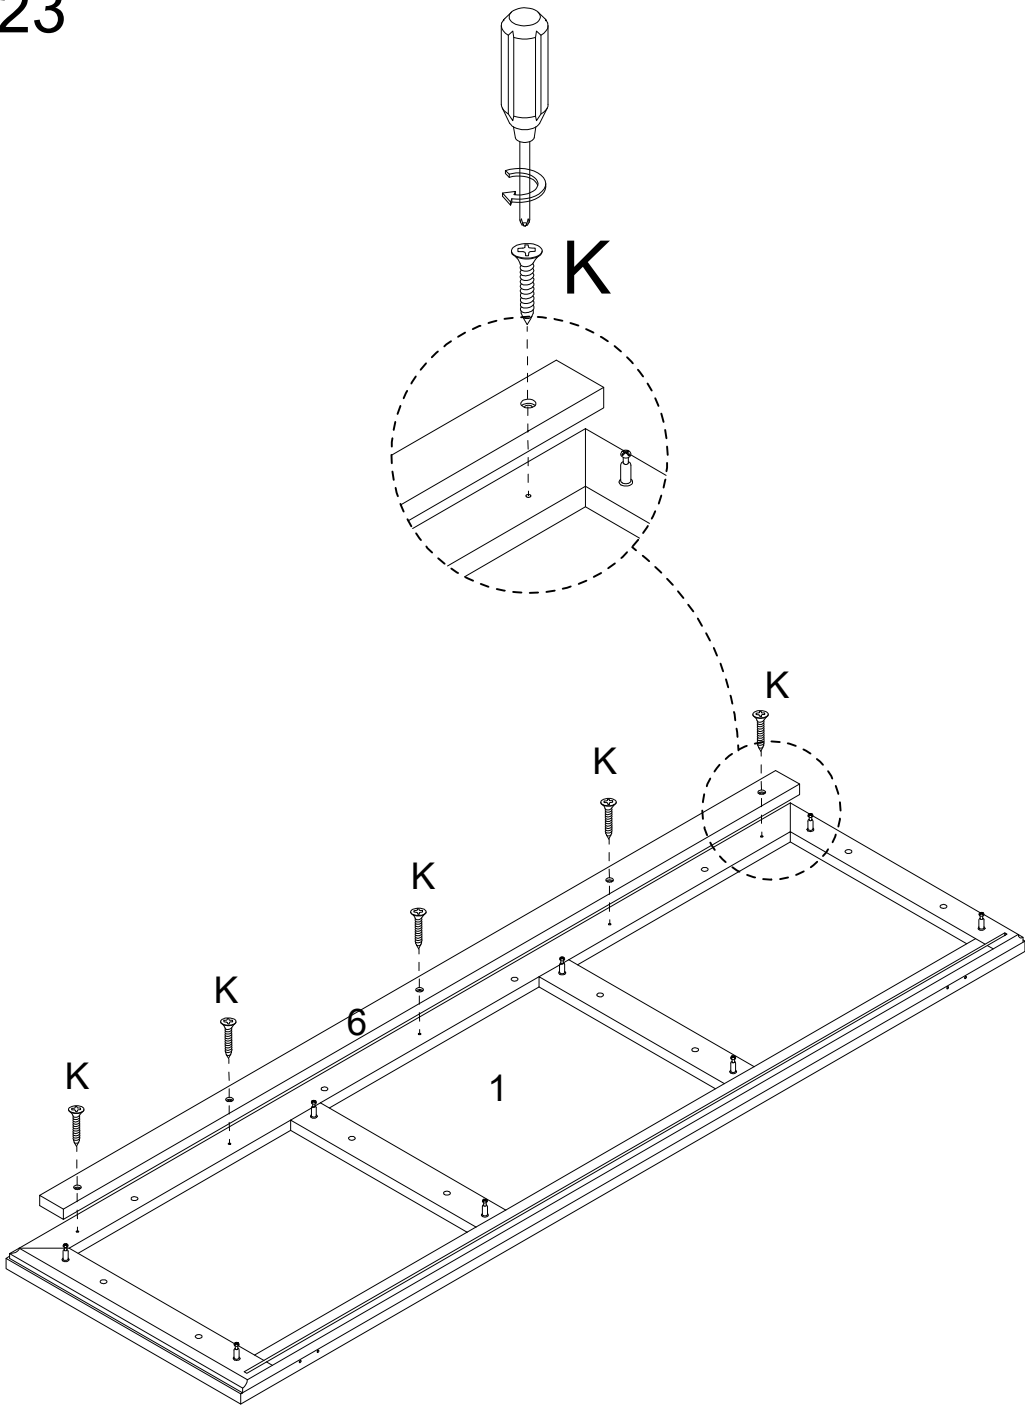


K

X5

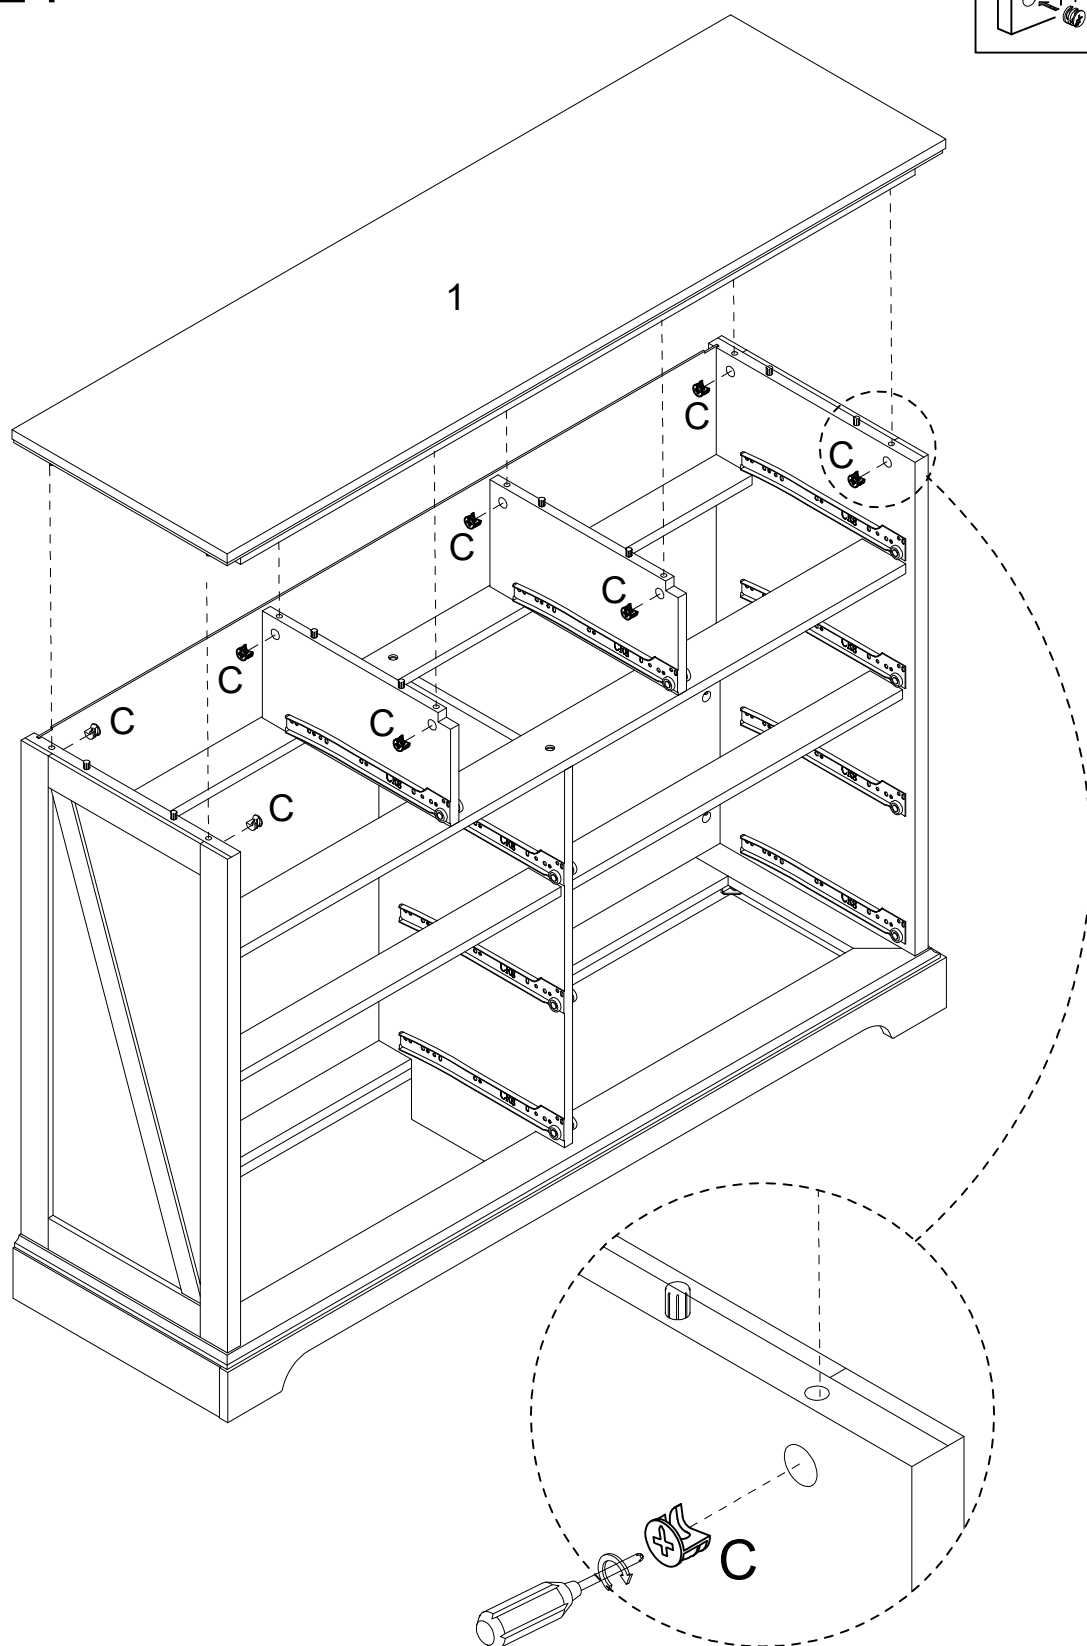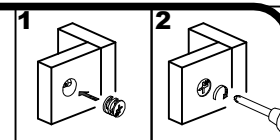
Step 24




C

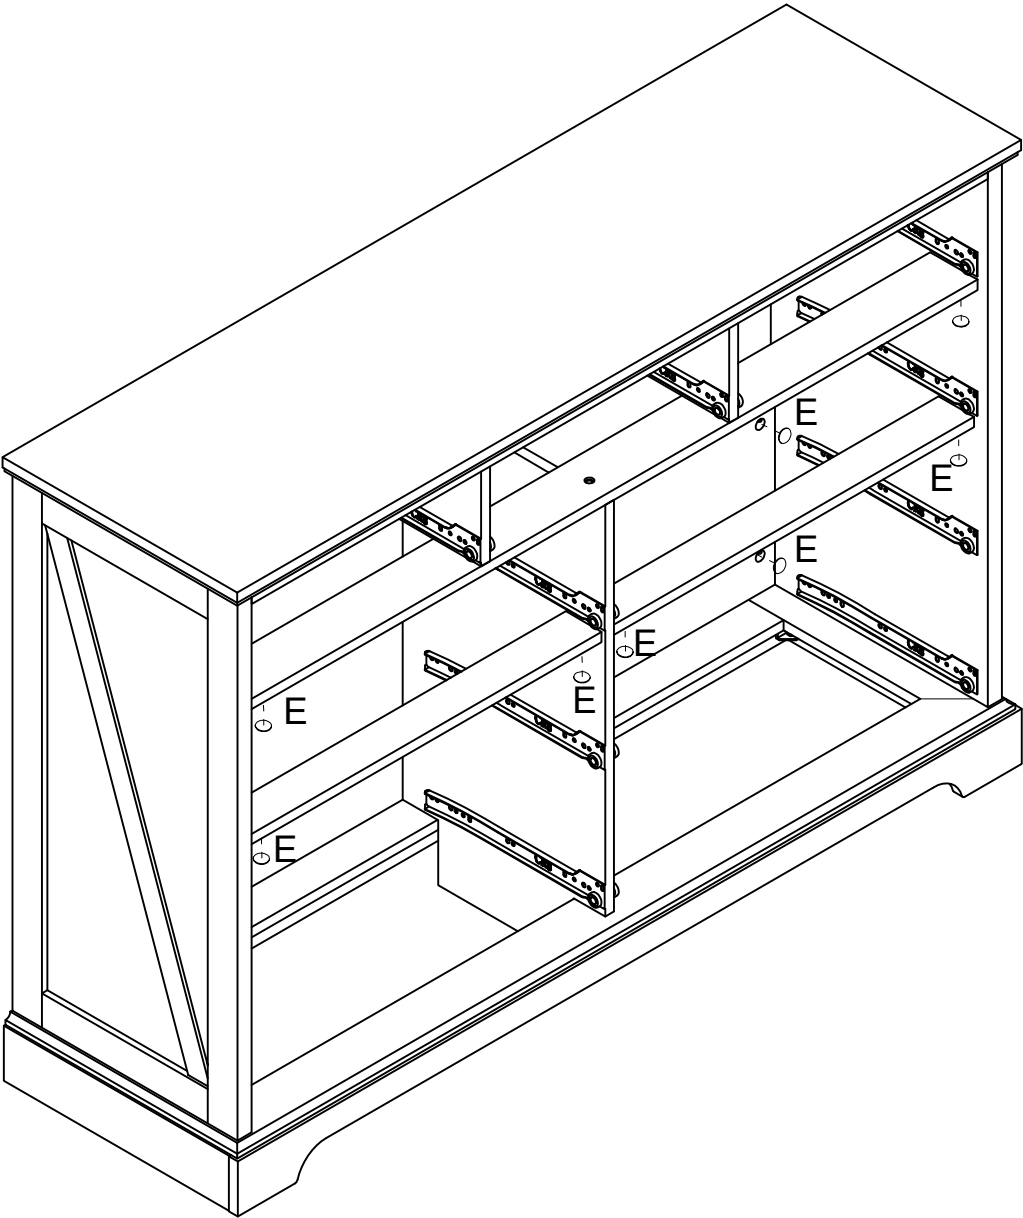X8


Step 25




E

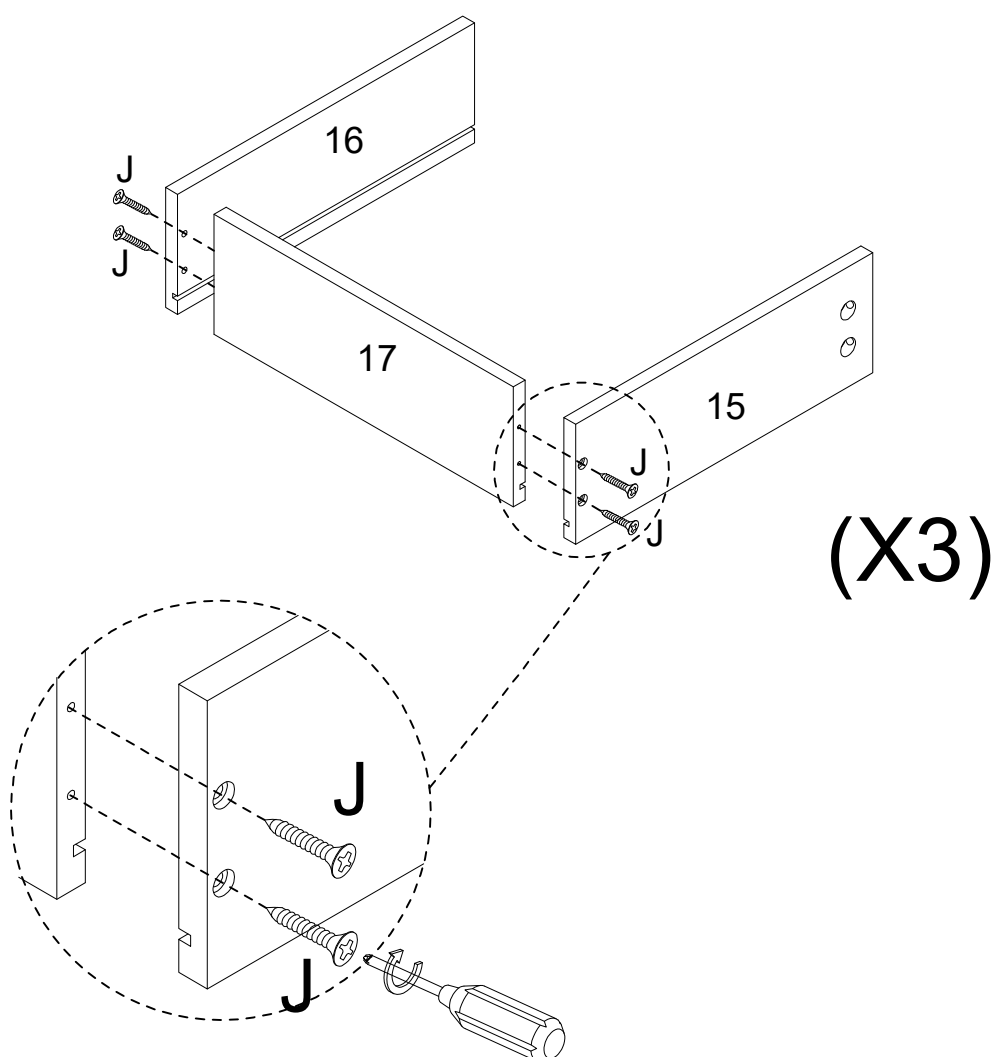X20

Step 26





J

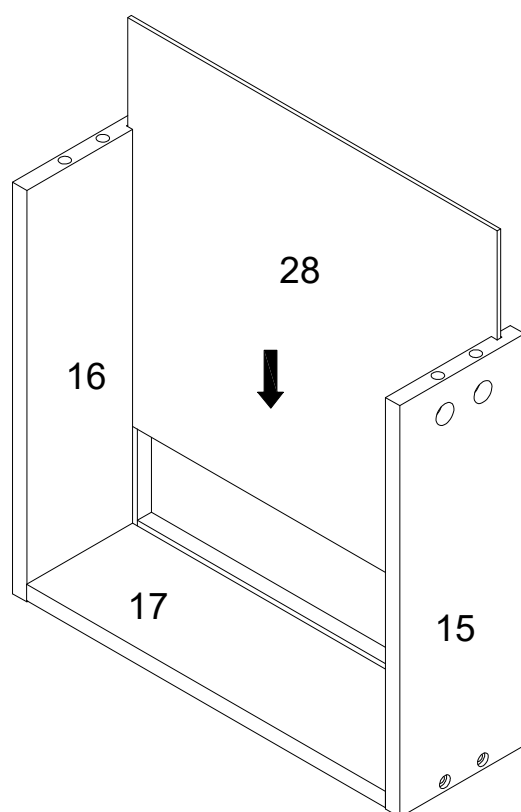X12


Step 27



(X3)

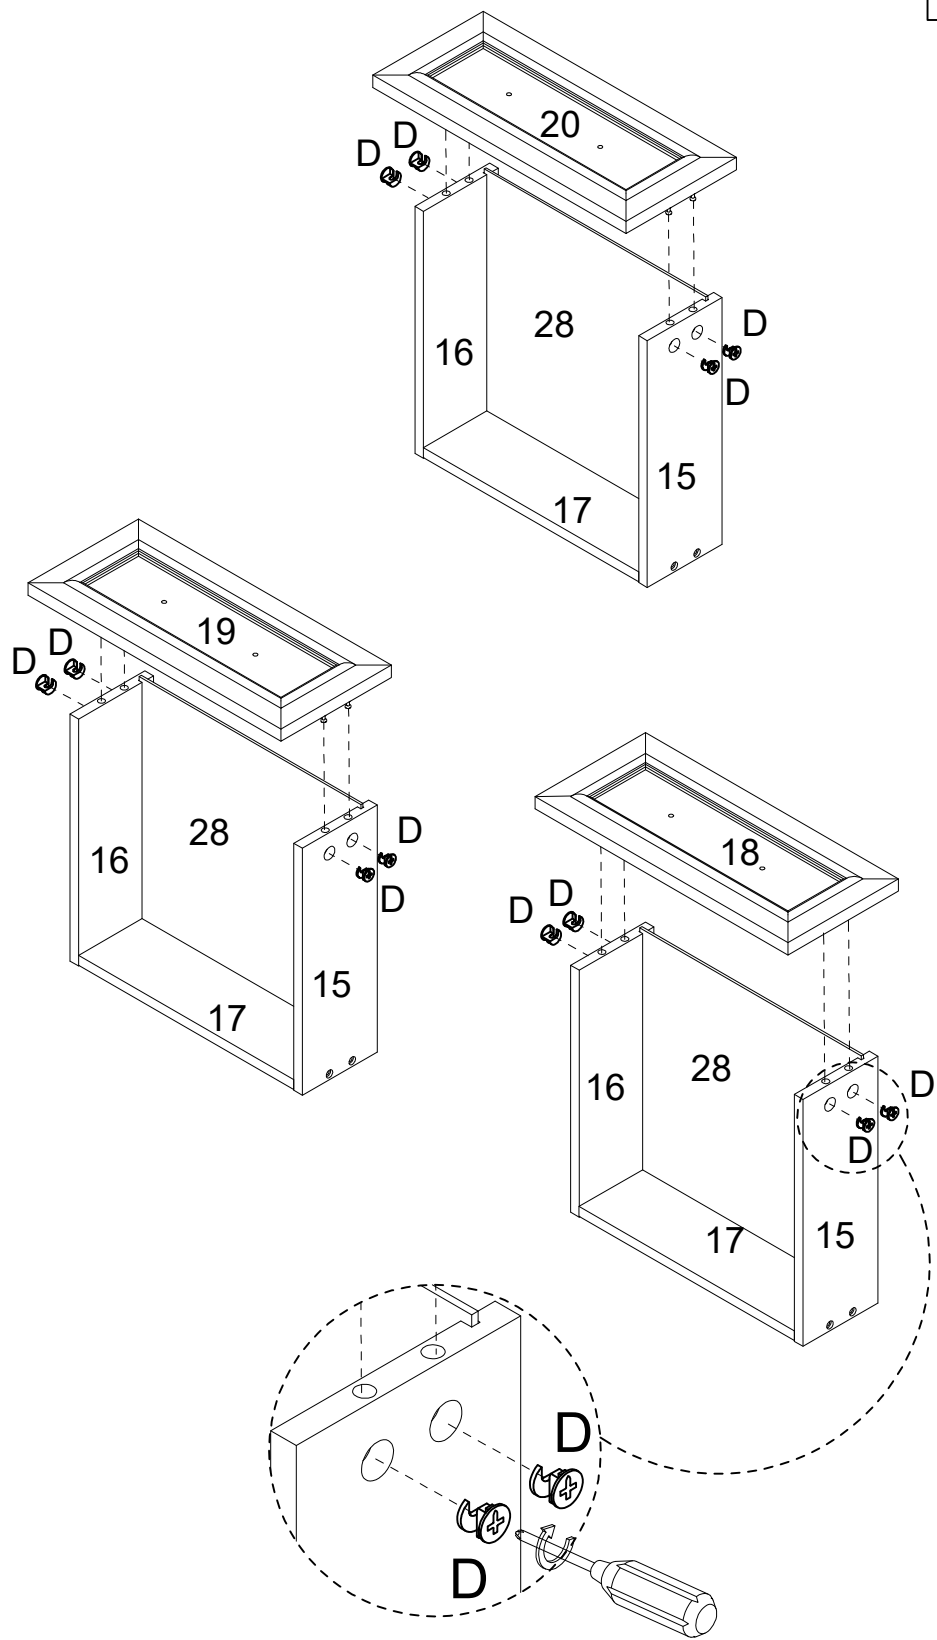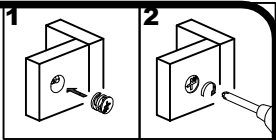Step 28




D

X12

Step 29




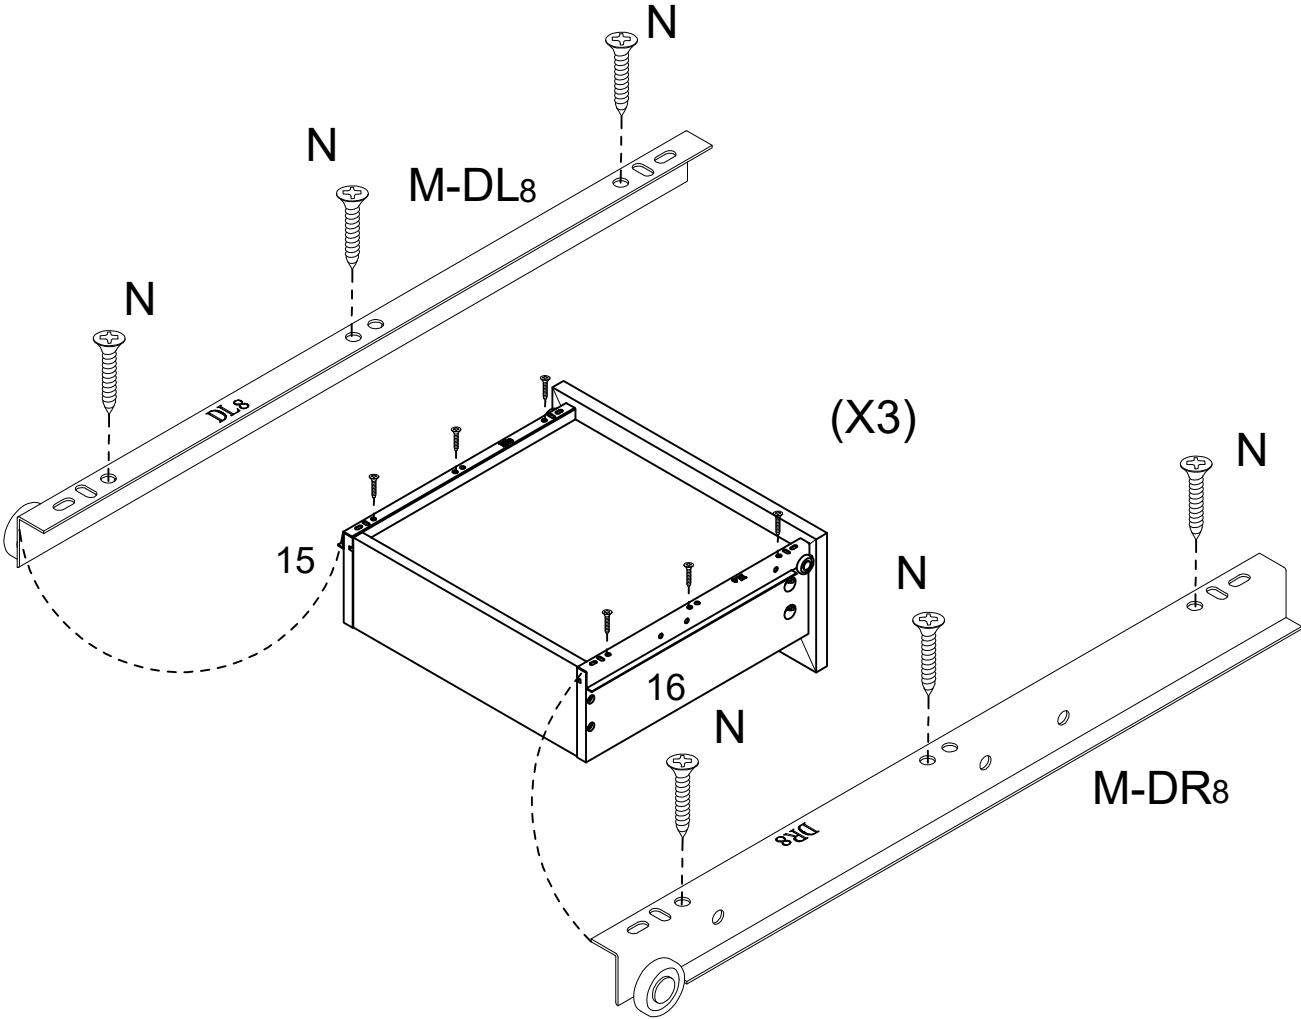

NOTE:
Refer to the images to identify M-DL8 (left) and M-DR8 (right).
Attach M-DL8 to #15 panel and M-DR8 to #16 panel. [R] screws must go in the exact spots shown.




N	M
X18	X3

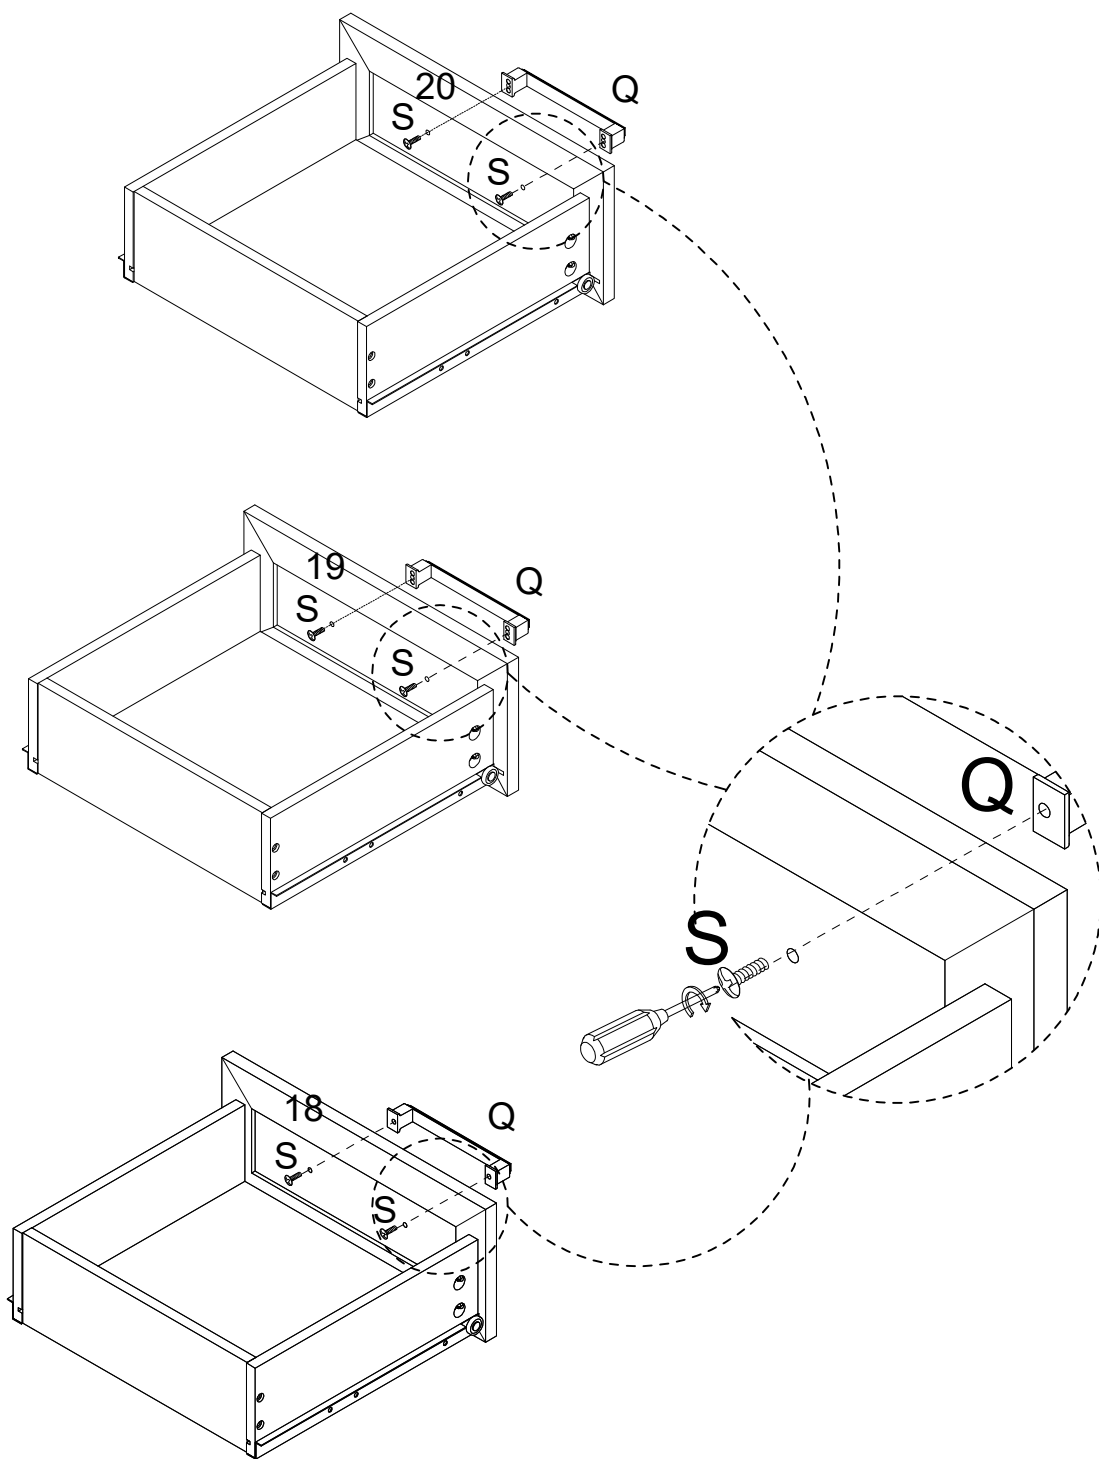
Step 30




S	Q
	
X6	X3

Step 31


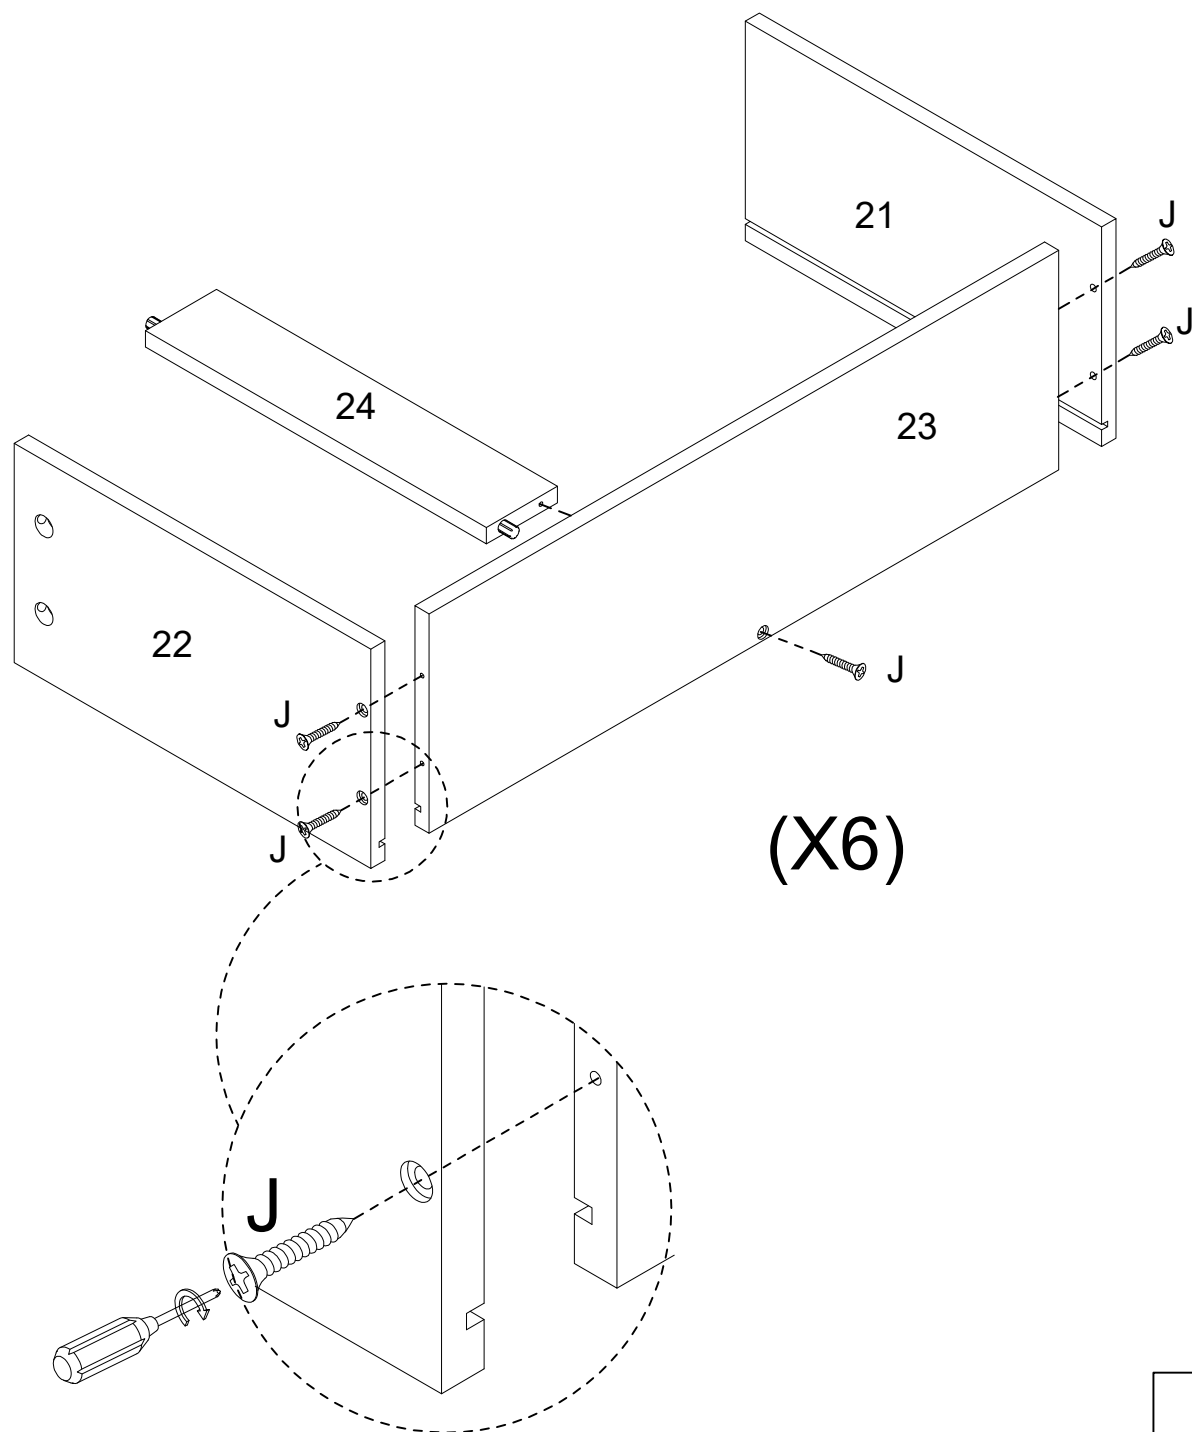


J

X30

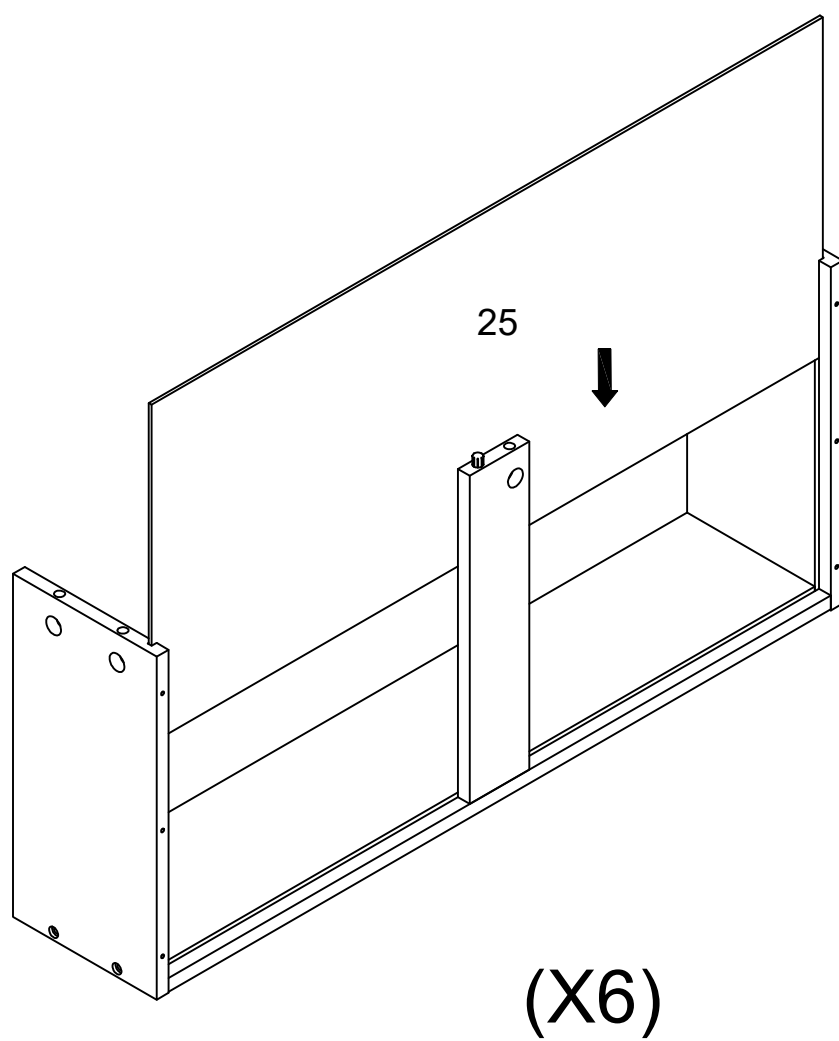
Step 32

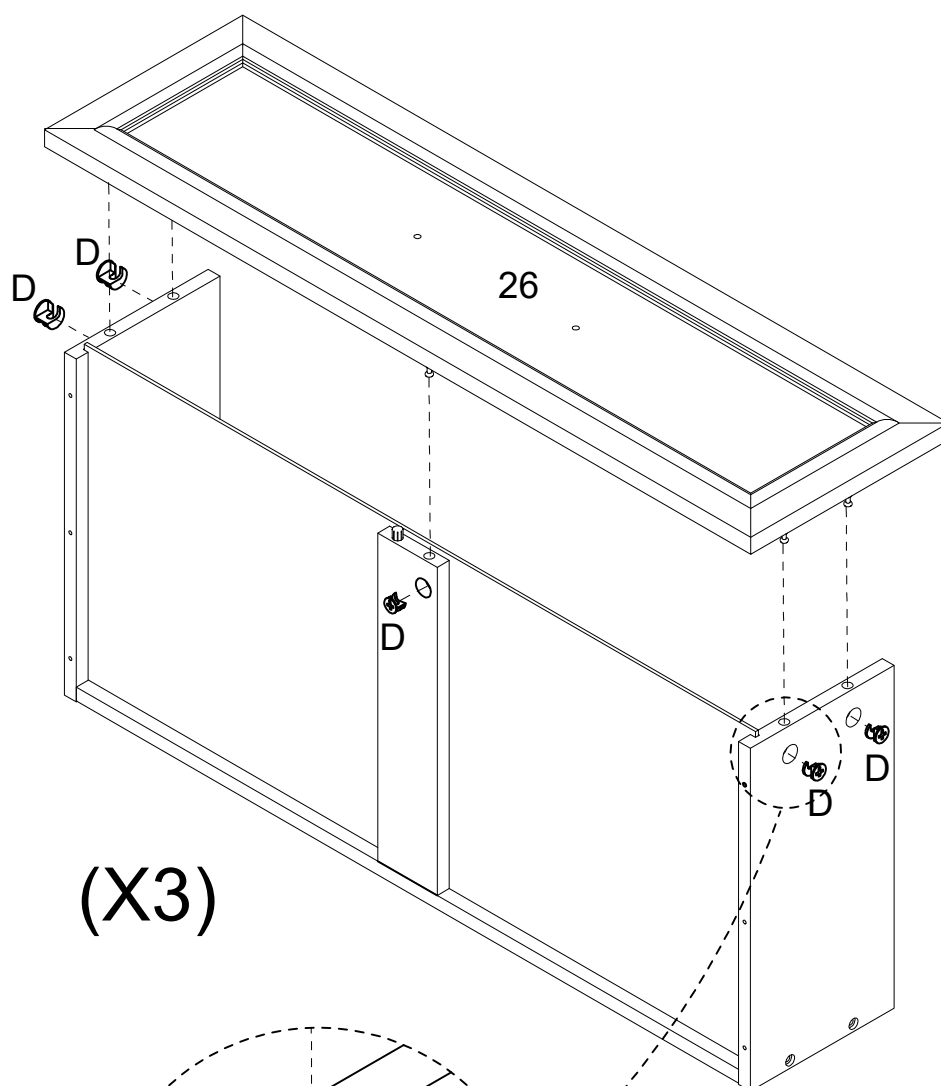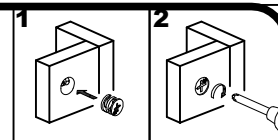


Step 33





(X3)

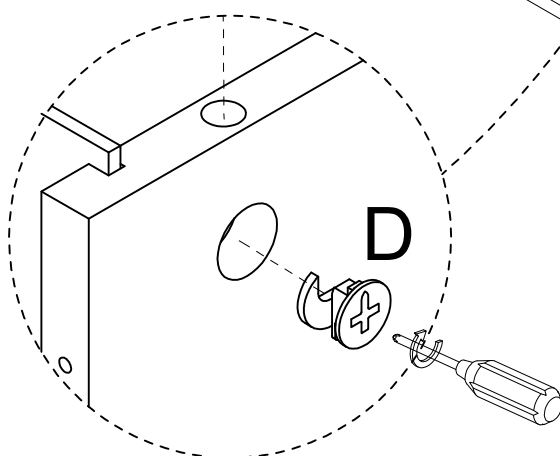



D

X15

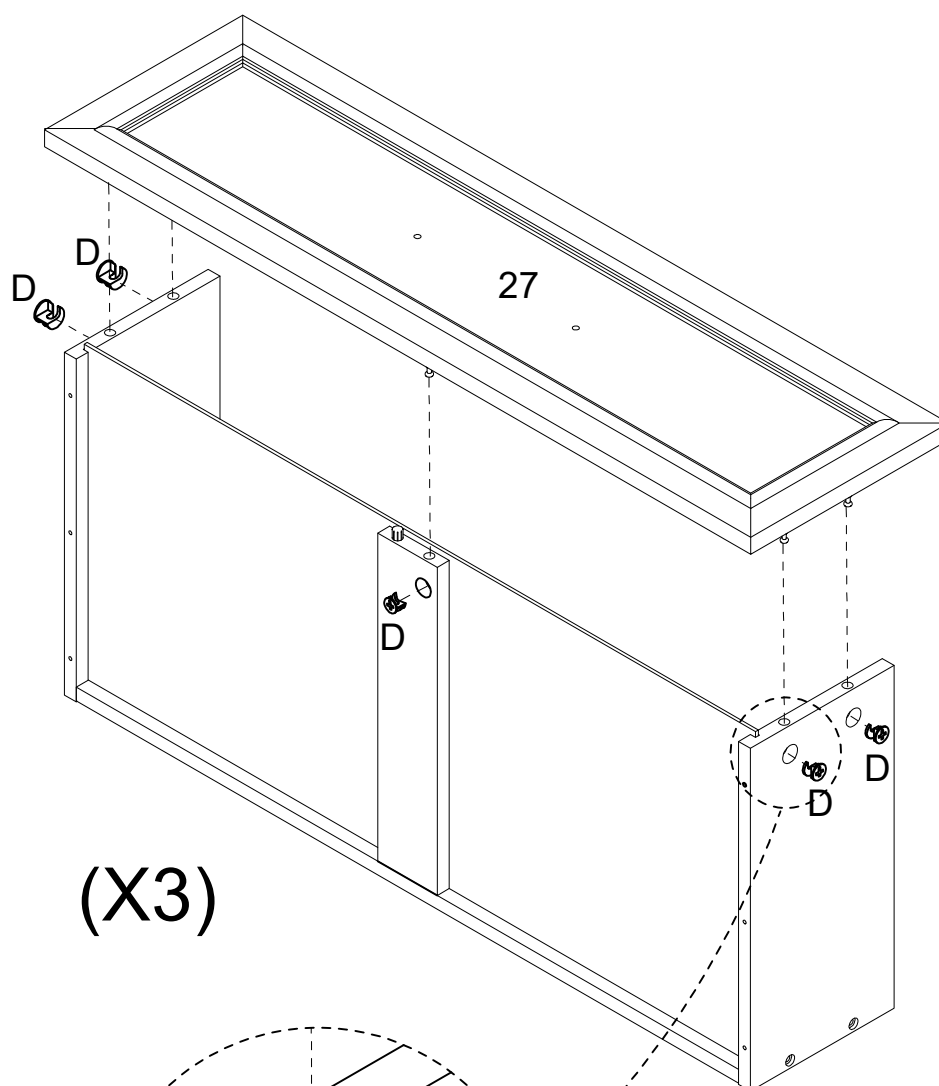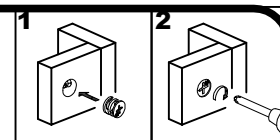Step 34

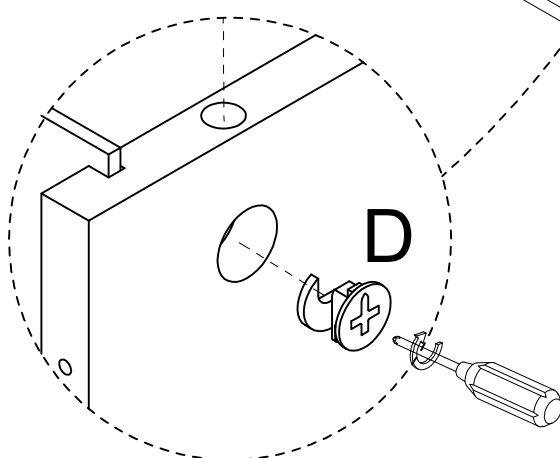

(X3)




D

X15



Step 35




NOTE:

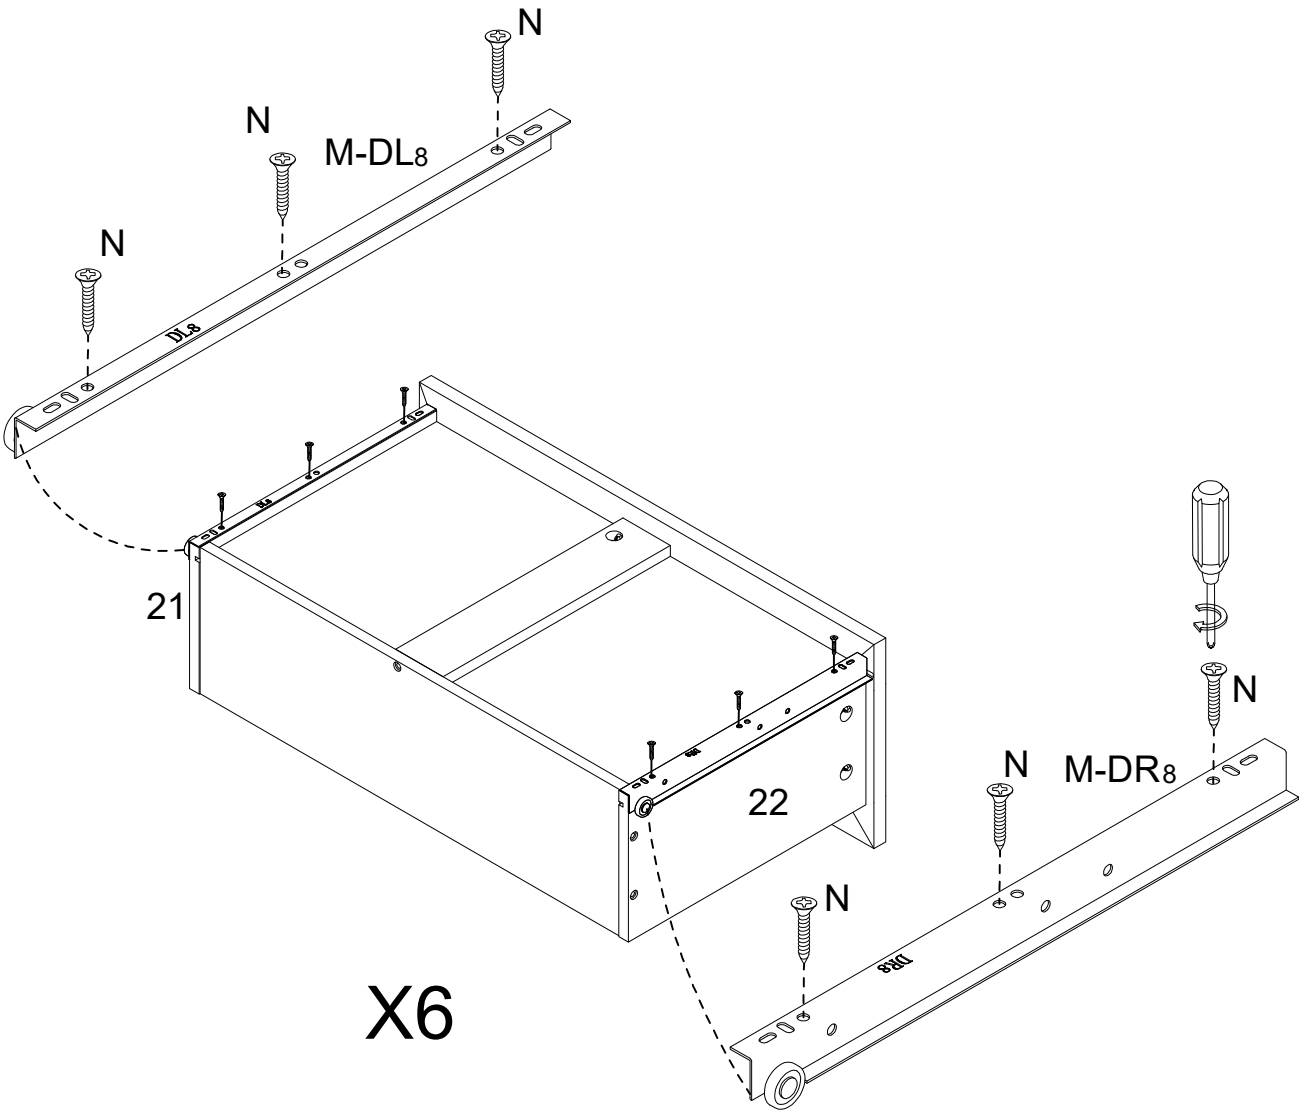

Refer to the images to identify M-DL8 (left) and M-DR8 (right). Attach M-DL8 to #21 panel and M-DR8 to #22 panel. [R] screws must go in the exact spots shown.

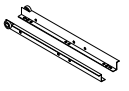


N	M
	
X36	X6

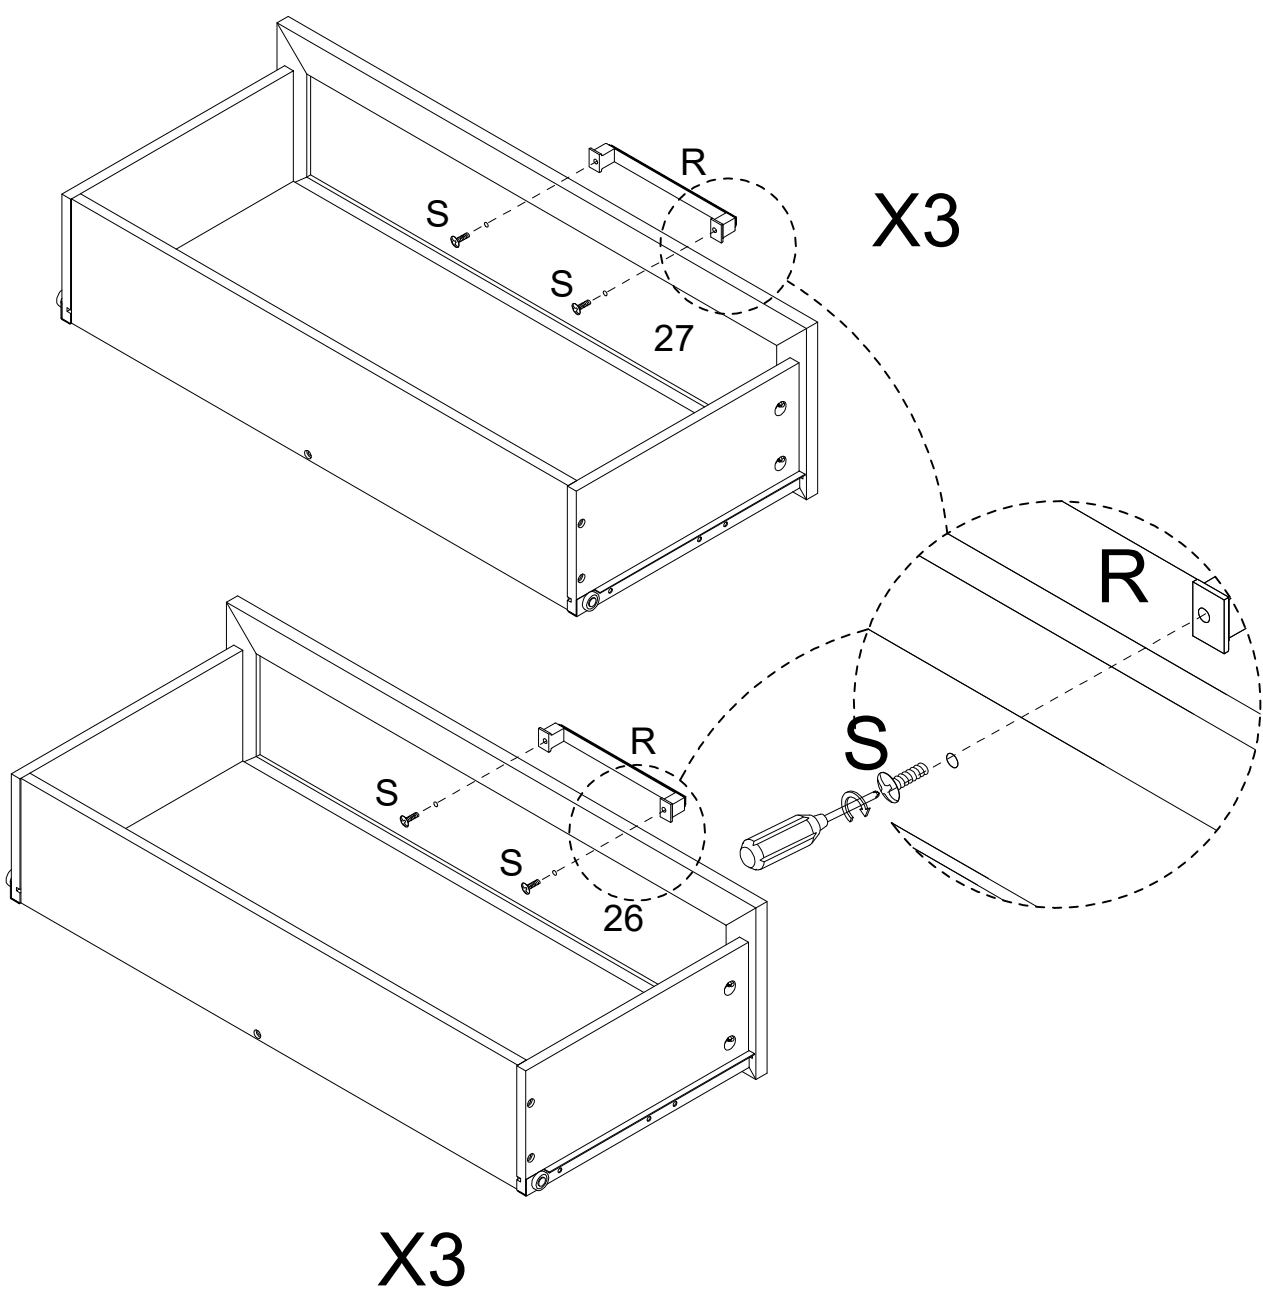
Step 36




S	R
	
X12	X6

Step 37

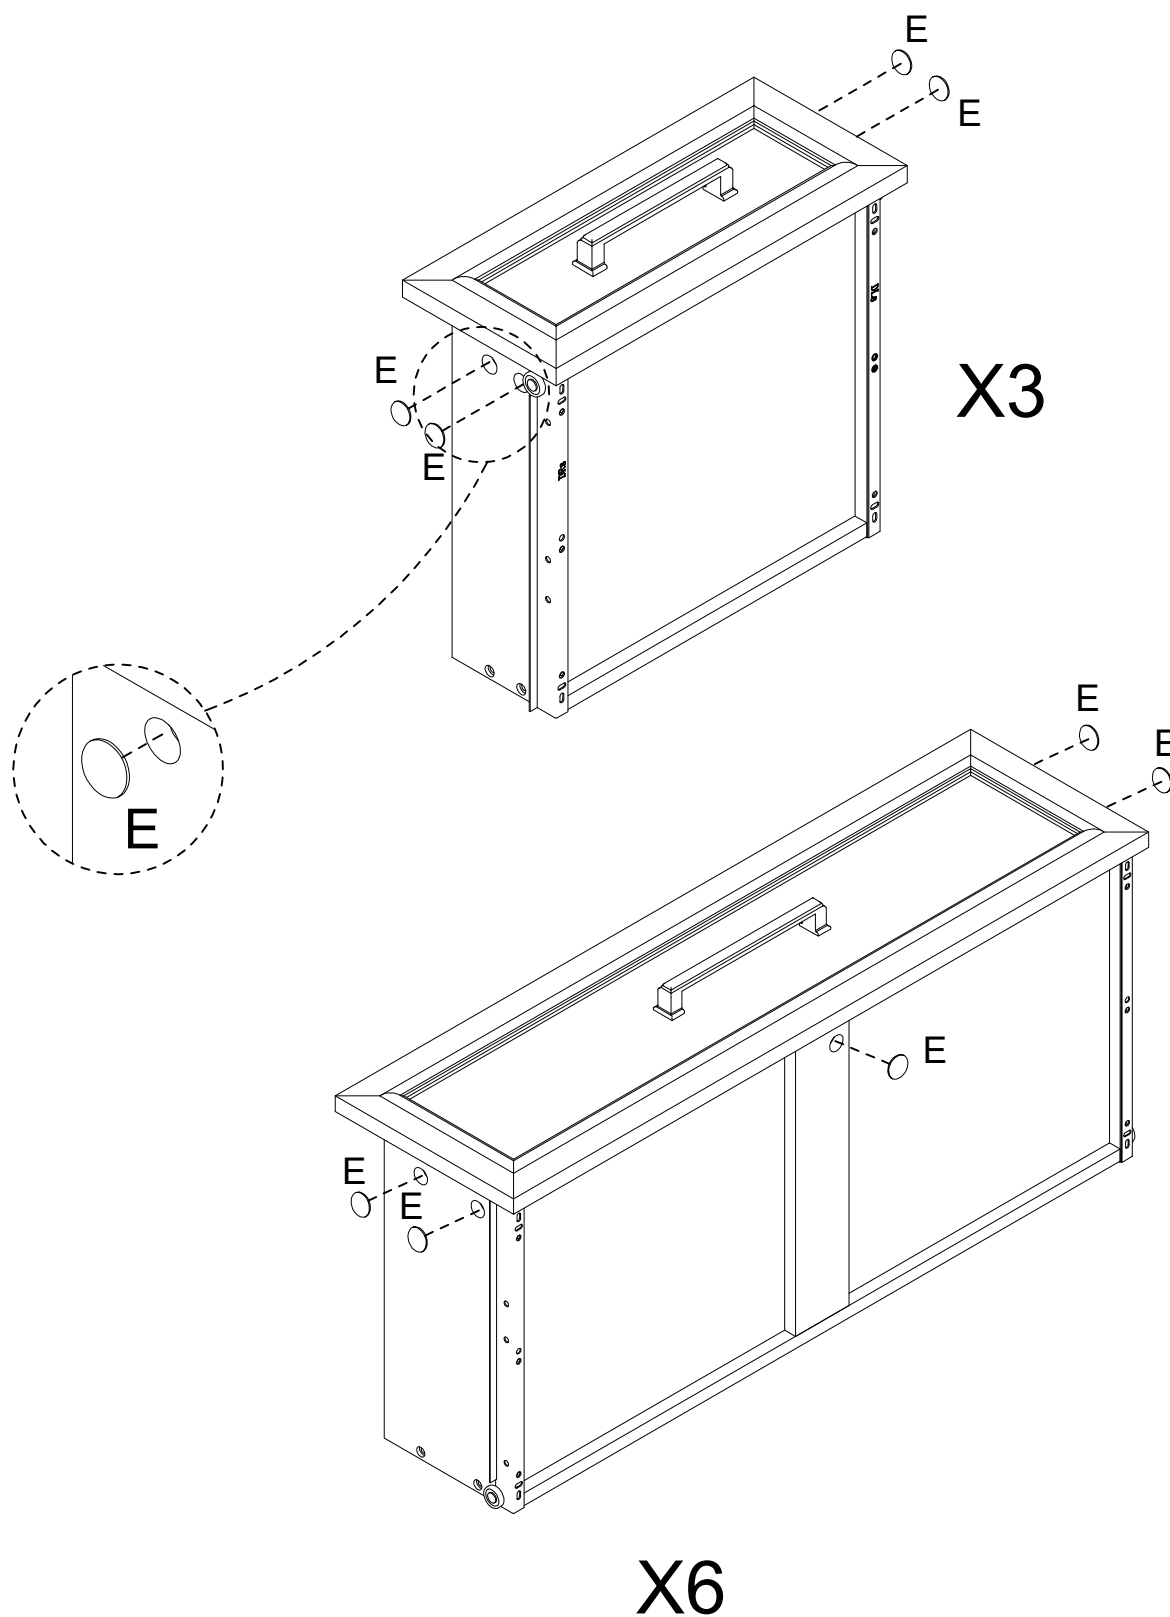




E

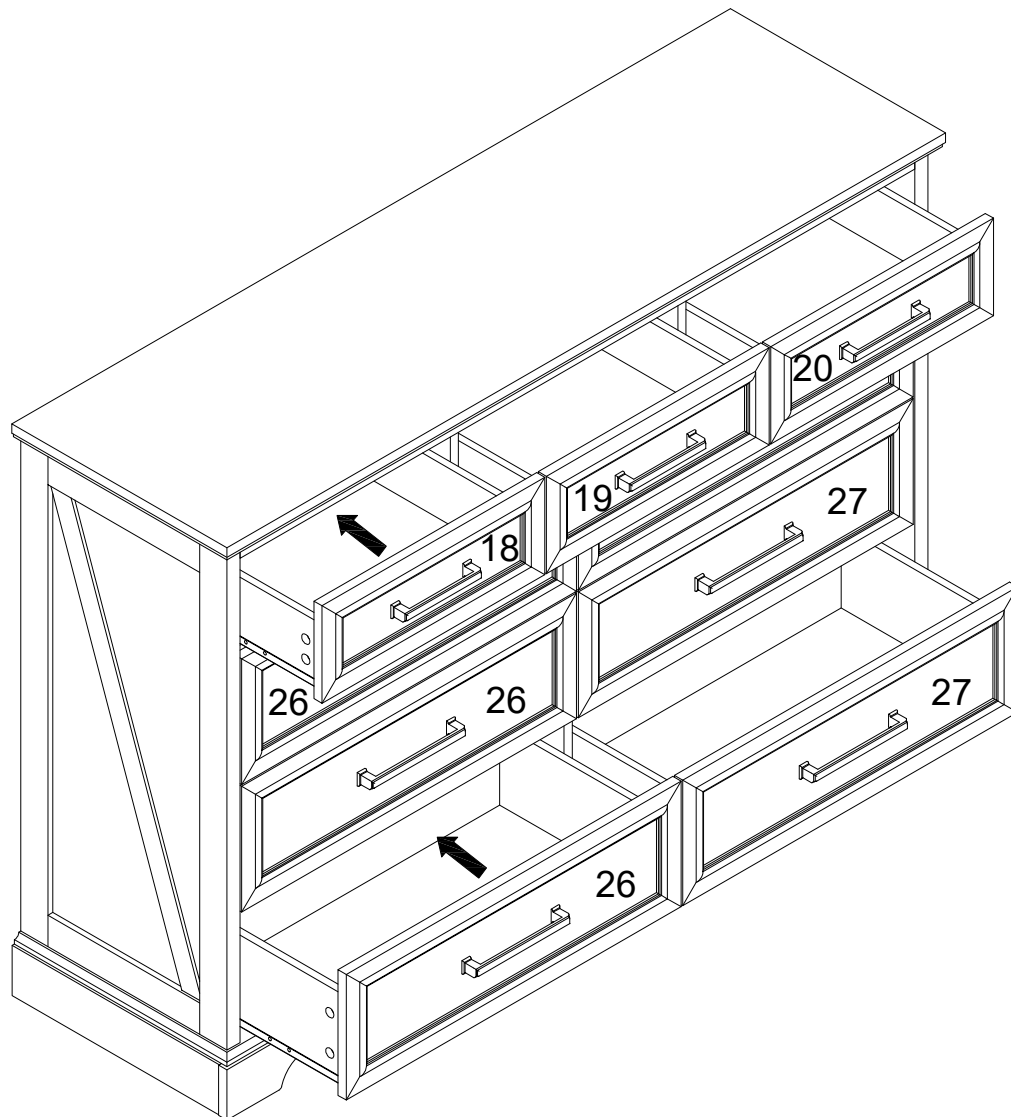X42

Step 38

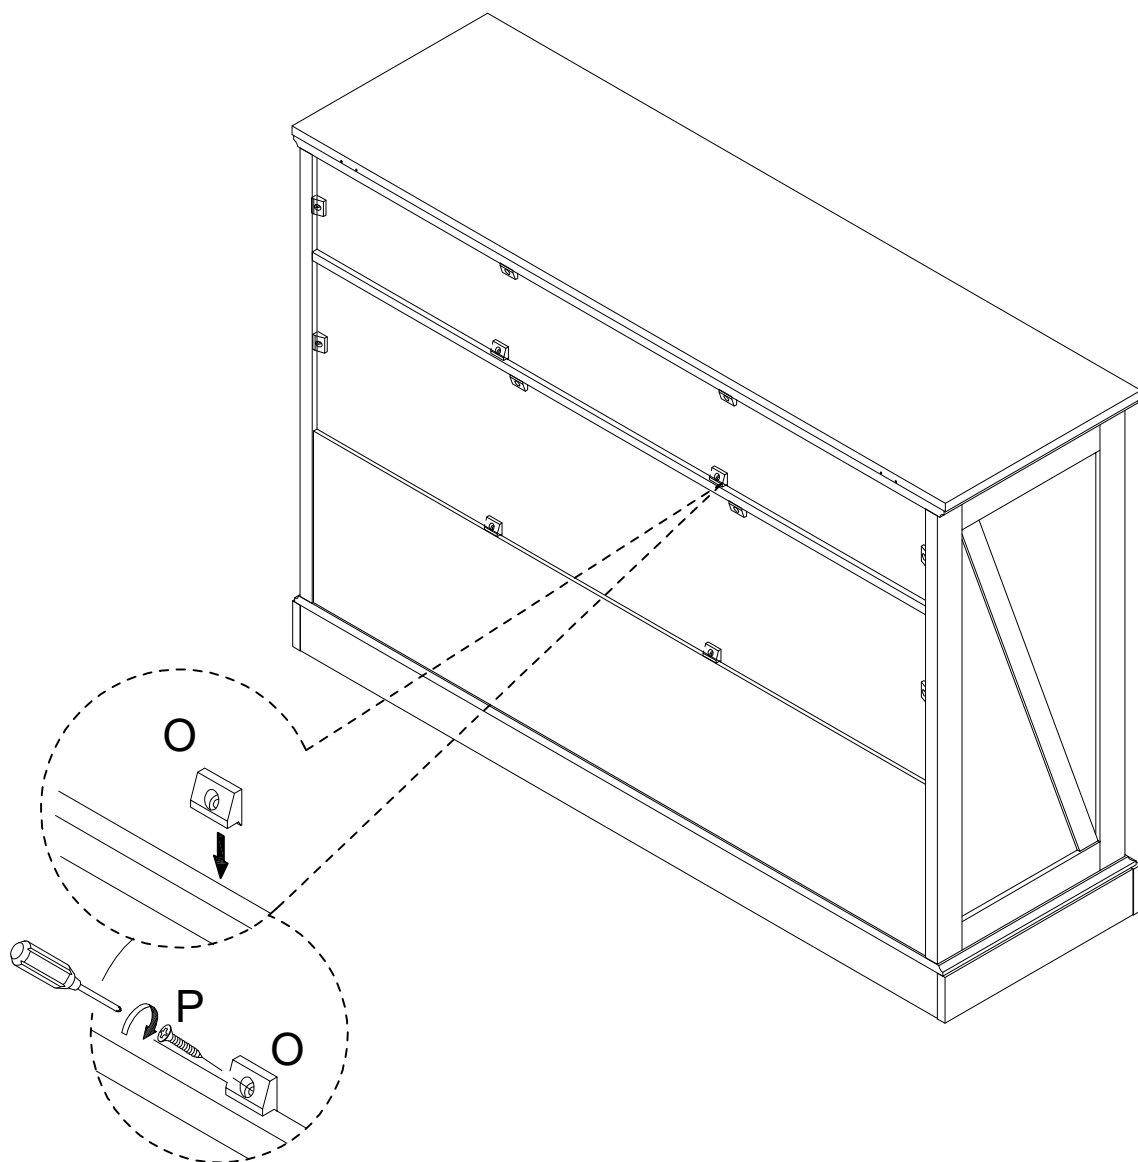




Step 39



O	P
	
X12	X12


Step 40

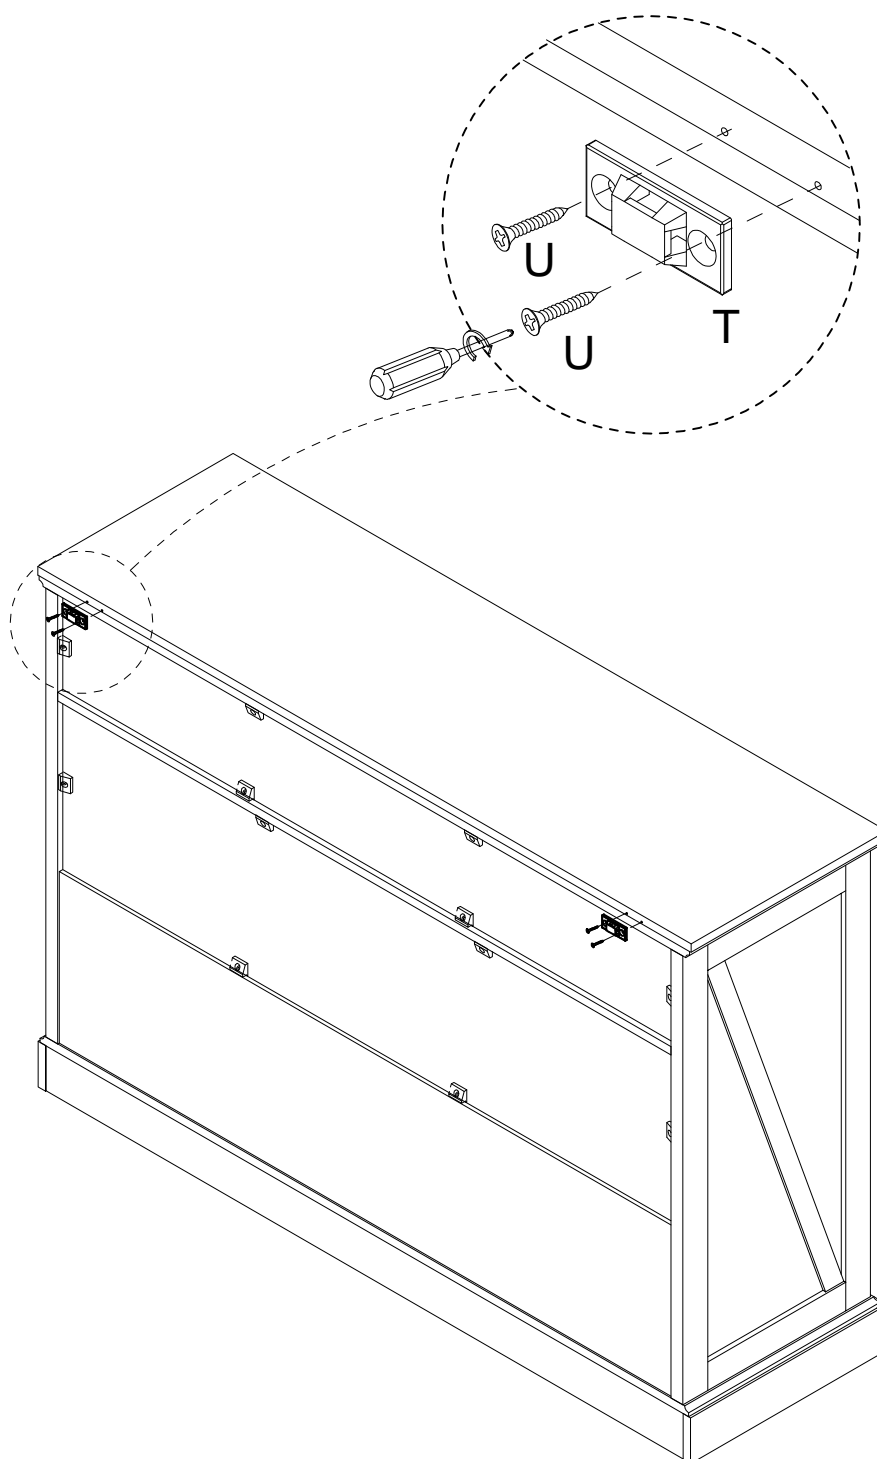

T	U
	
X2	X4


Step 41


Make Four holes 45MM deep

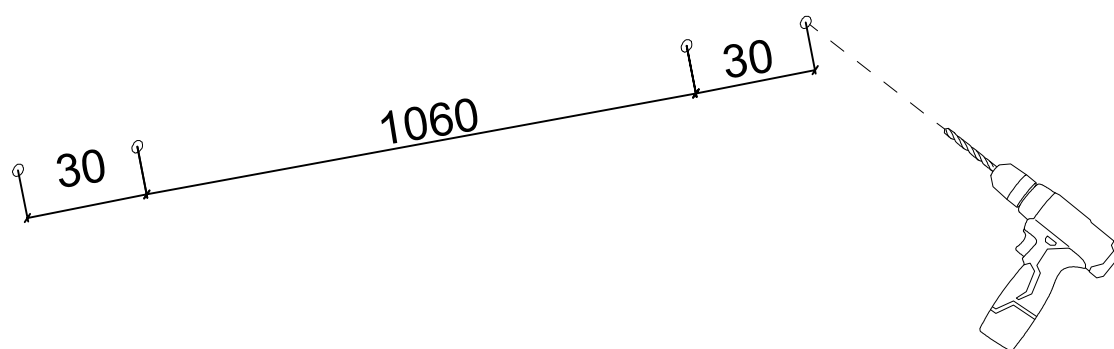


Wall

Step 42


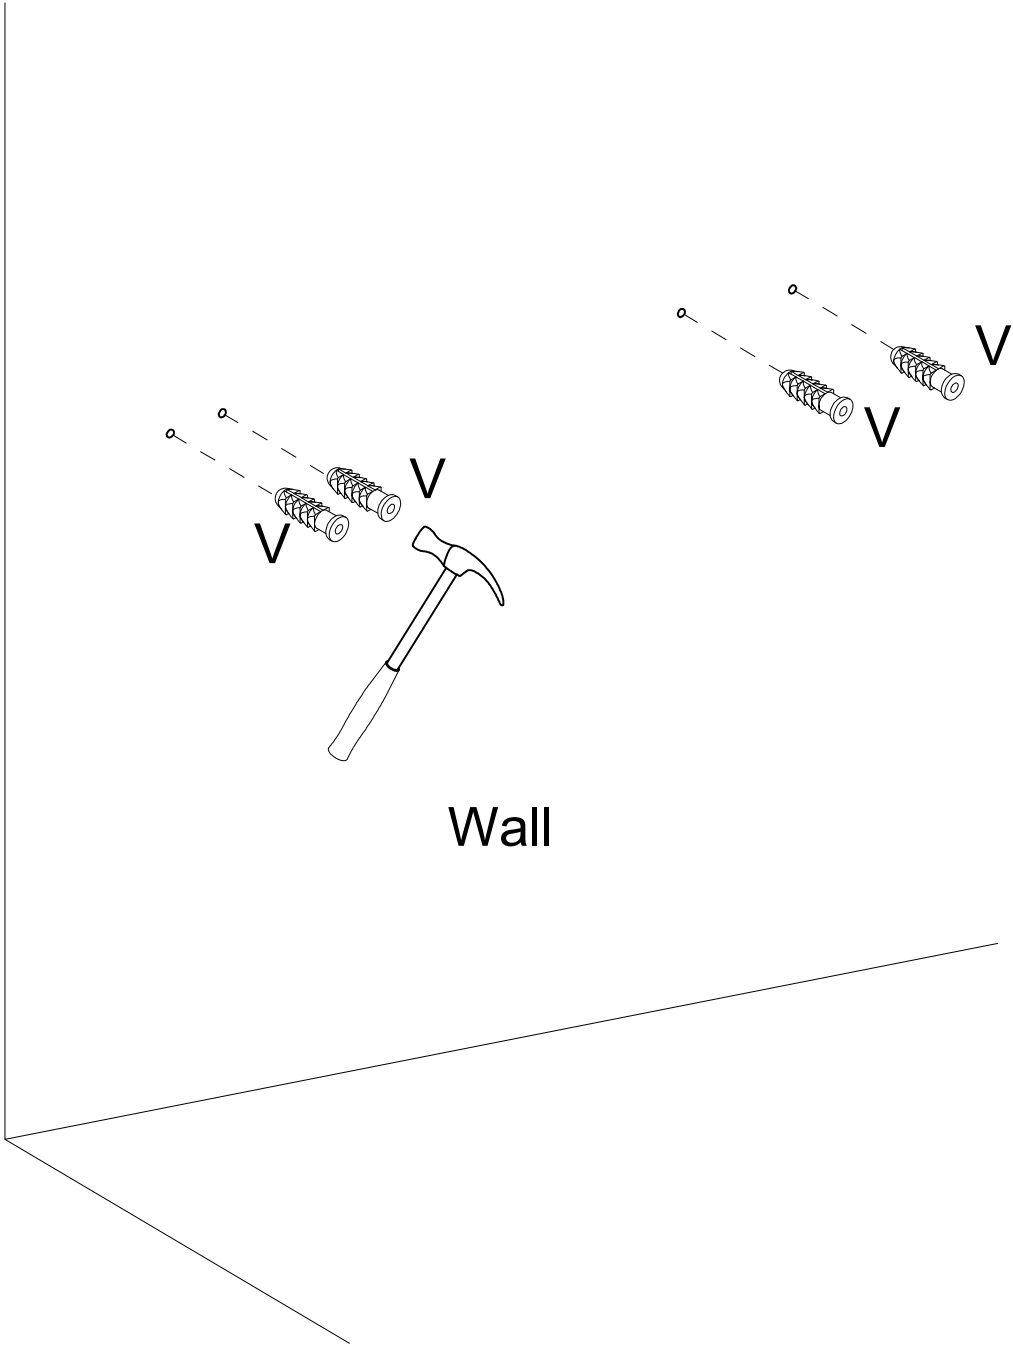


V

X4

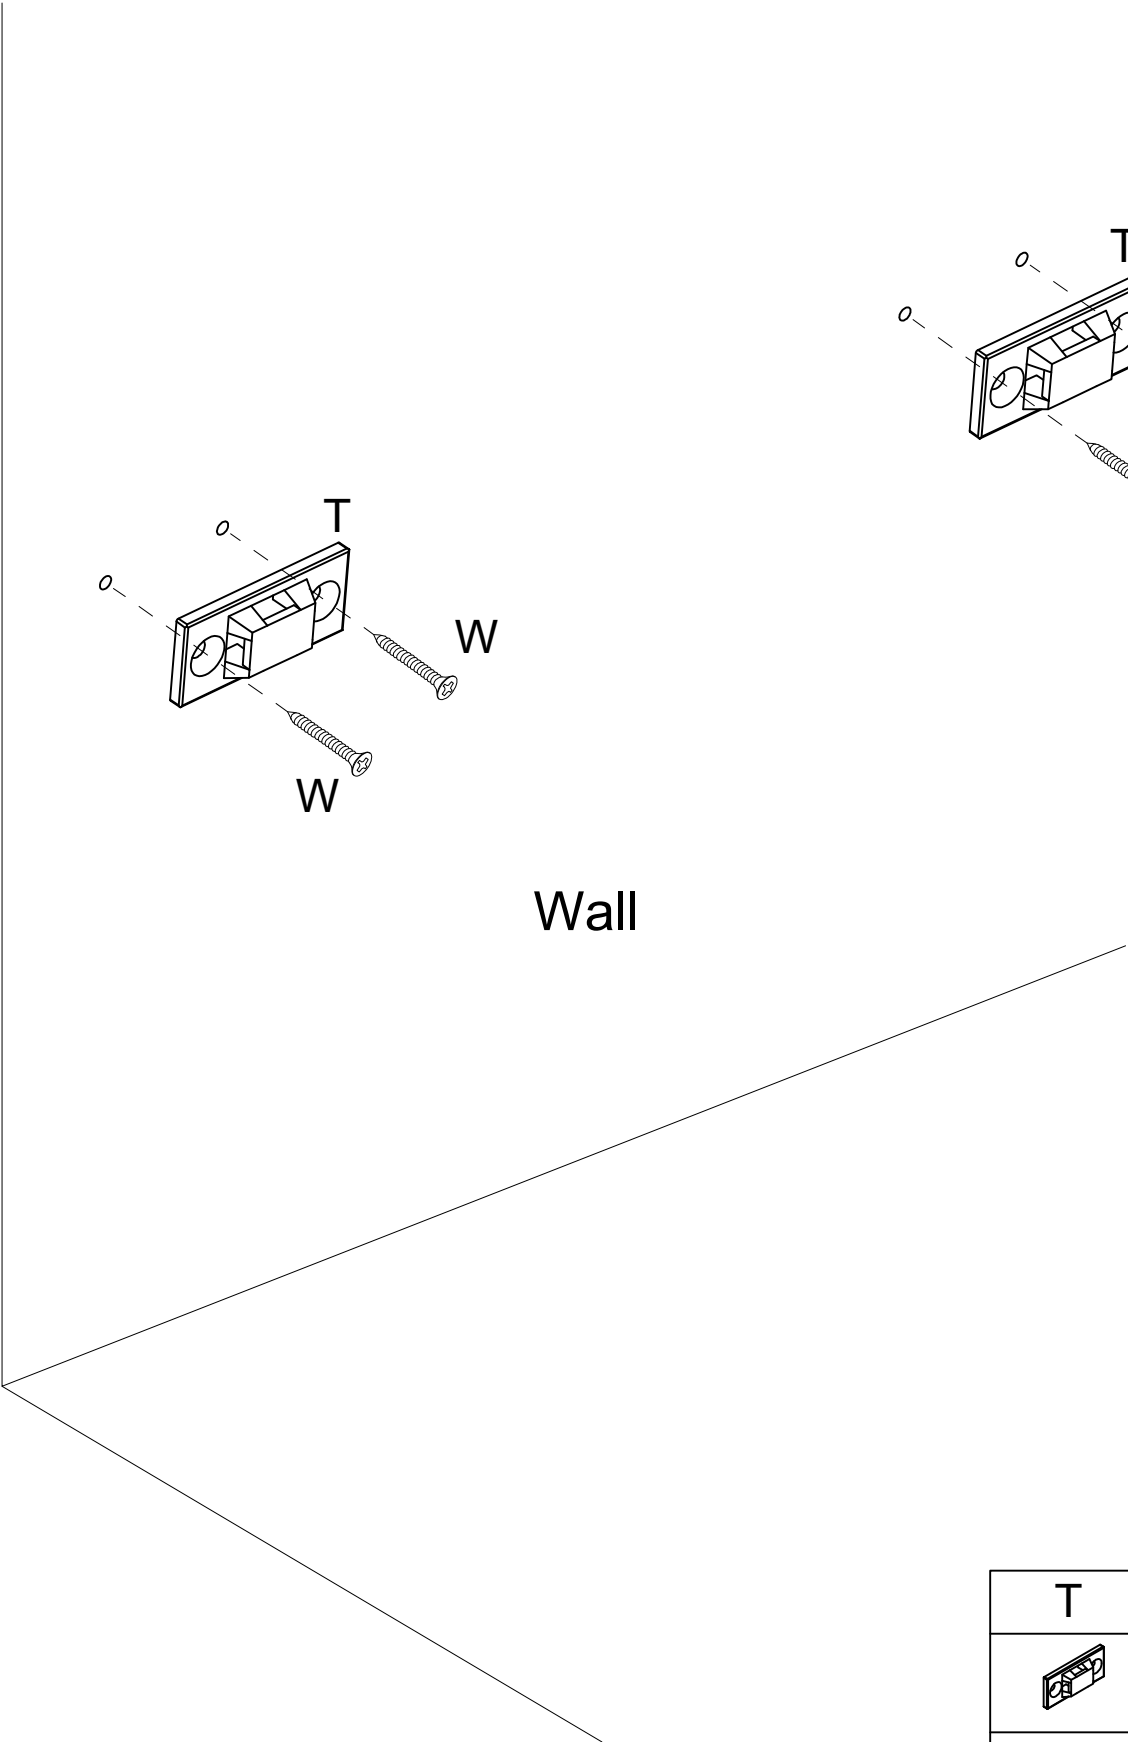
Step 43



Wall

T	W
	
X2	X4

Step 44

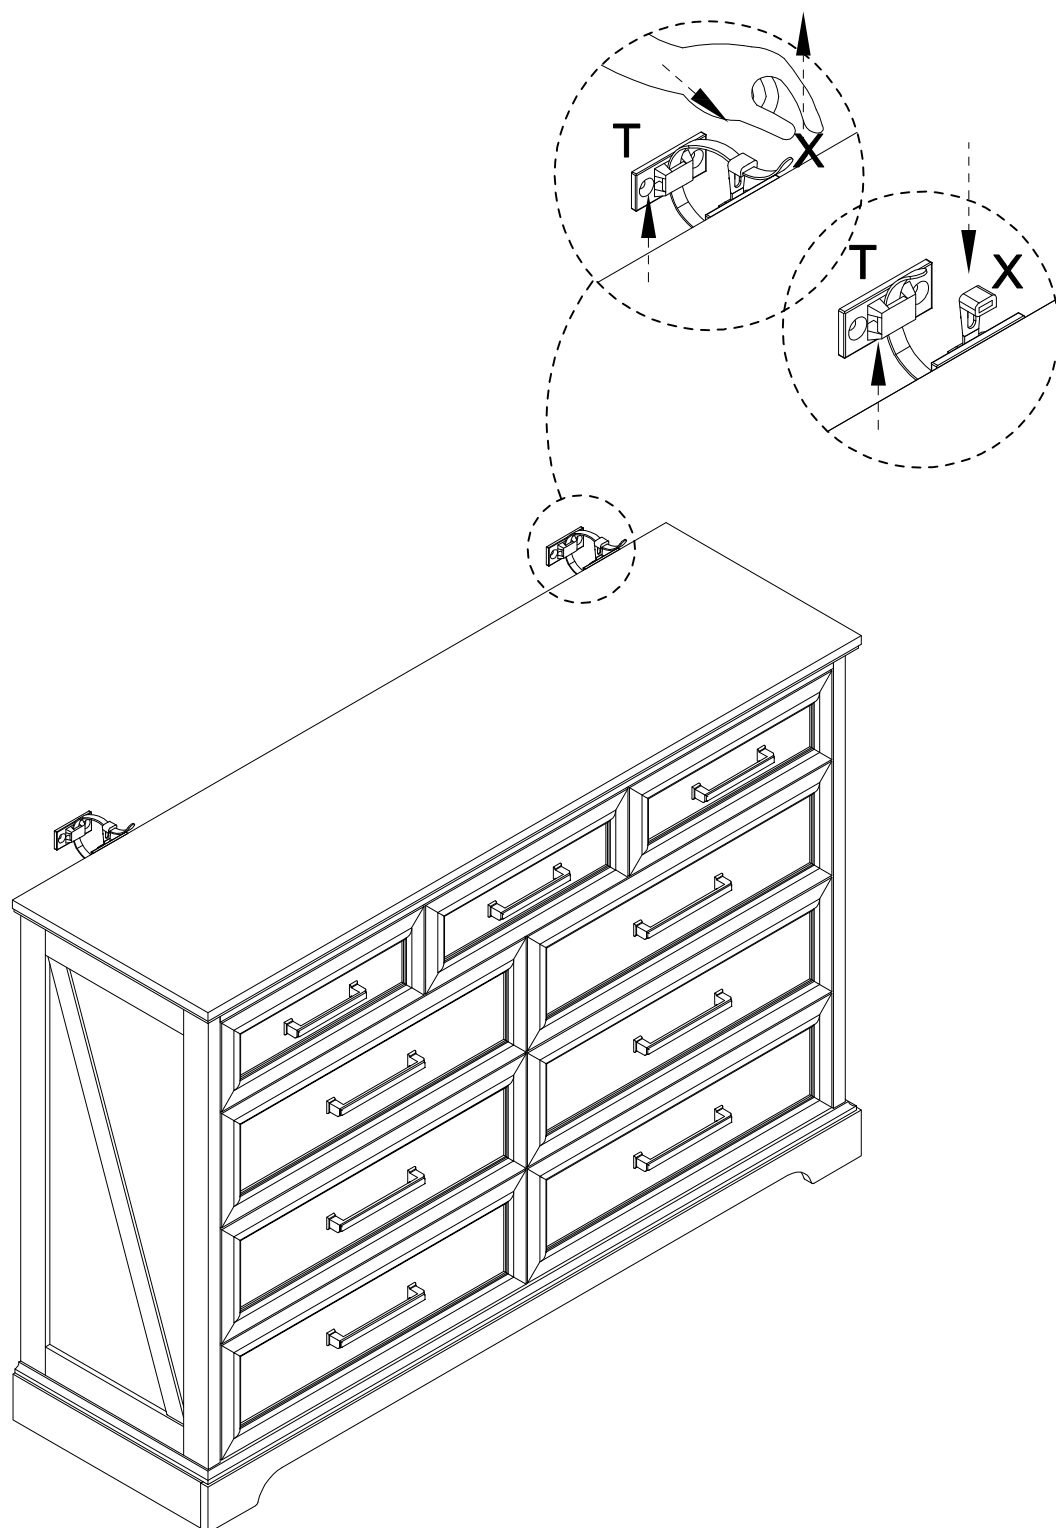

X



X2

Step 45

