



Violent installation is prohibited

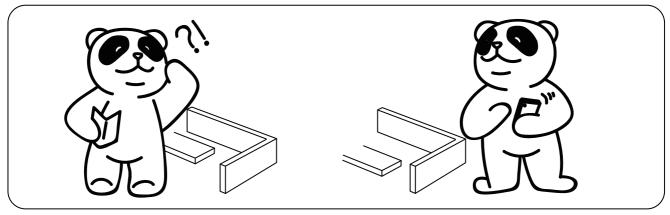


Please call if you need help

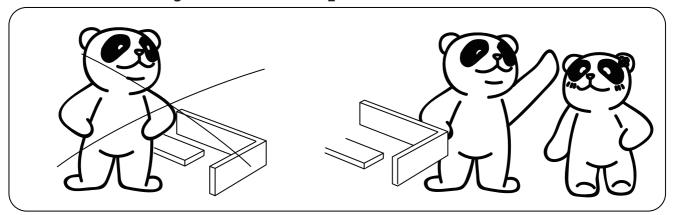


Multi-person cooperation is recommended


Assembly Instruction

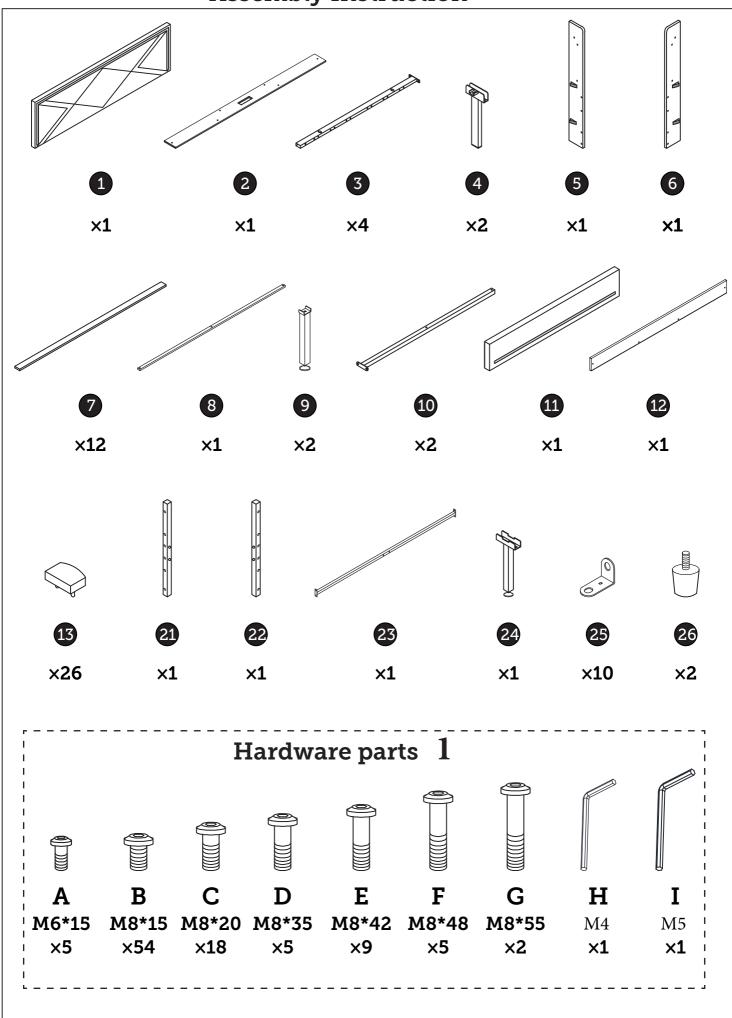

Assembly Instruction

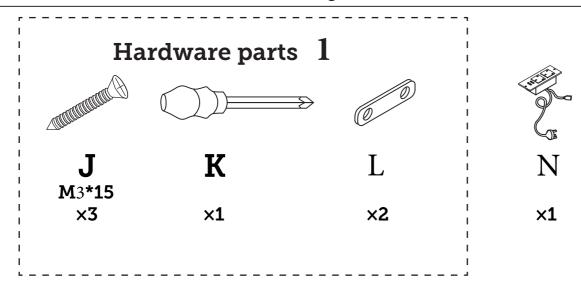



LED light strip electronic accessories list

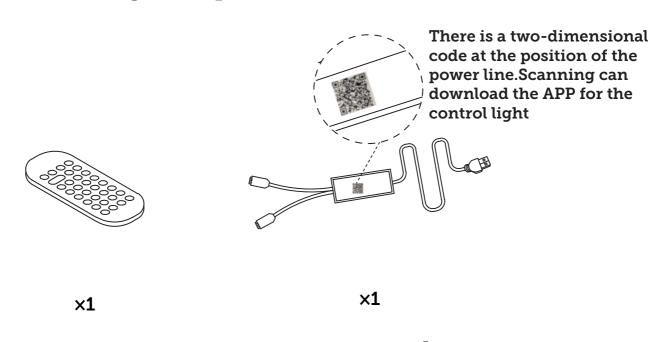

Remote control


power cord

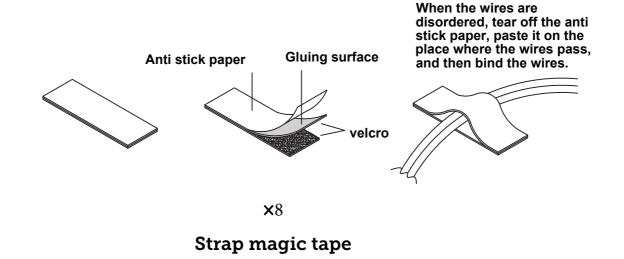

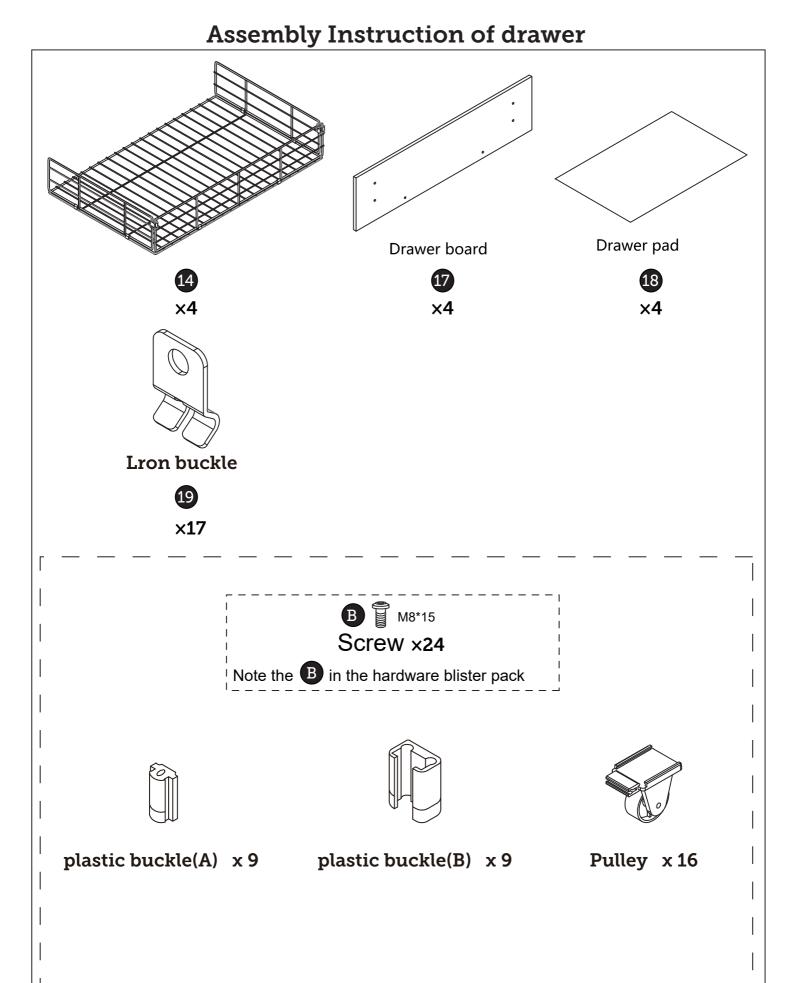

Note:


- 1. Should be assembled on flat ground to keep balance.
- 2. Before completing the installation, do not tighten the screws.

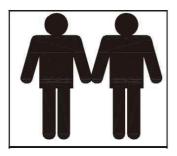


It needs at least two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

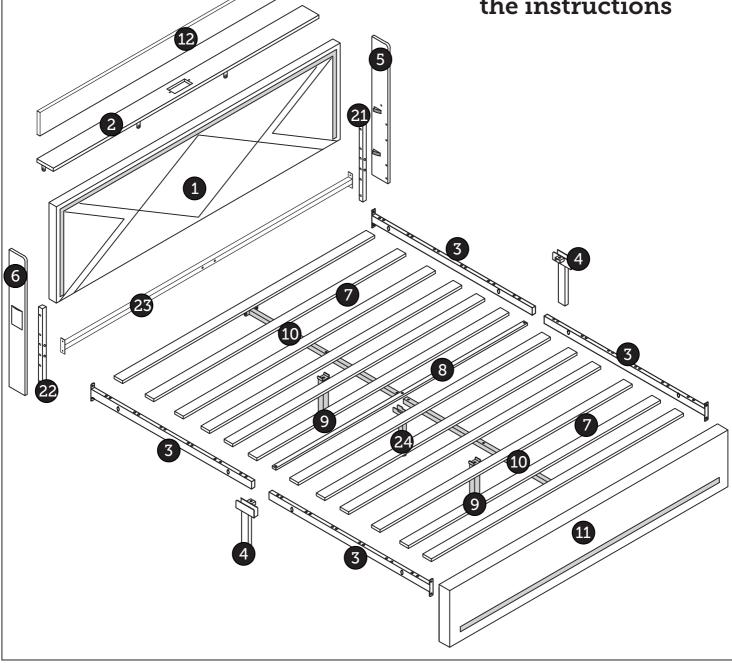

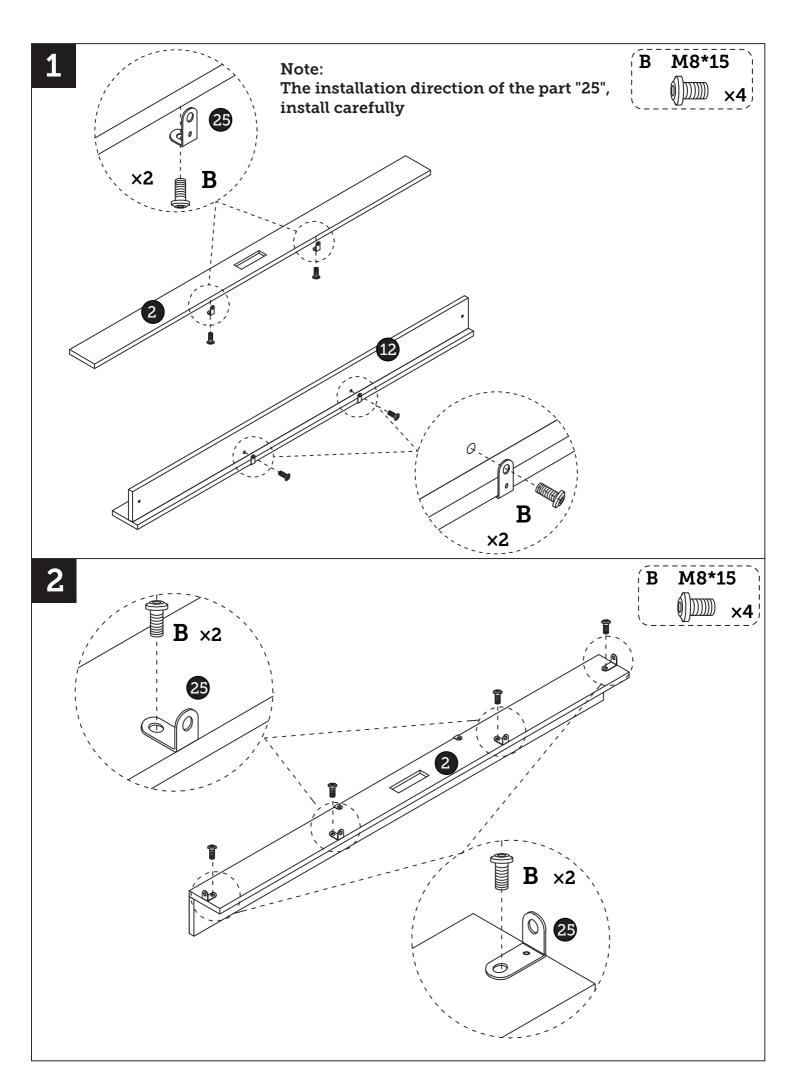




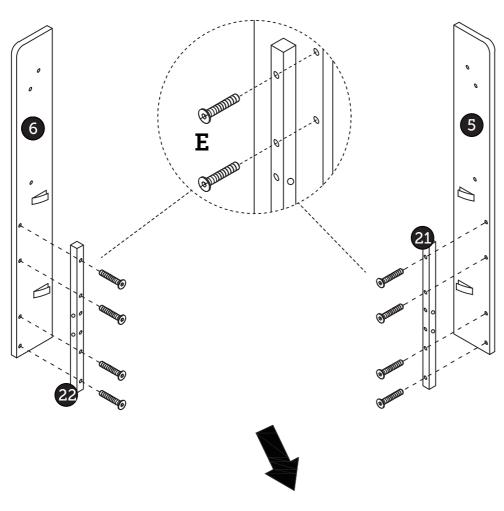


6

É M8*42 **8×**




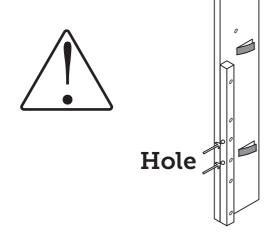


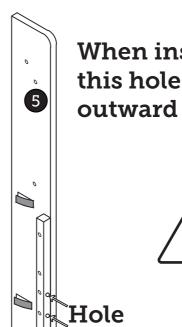



When installing, this hole faces




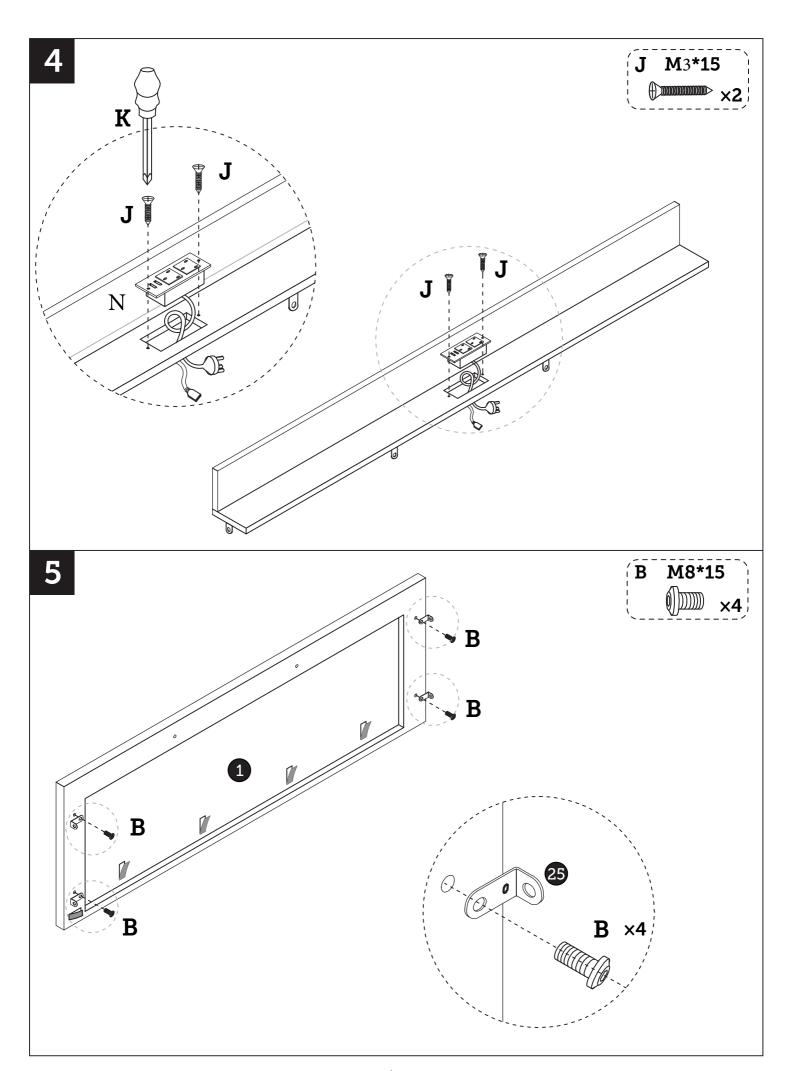


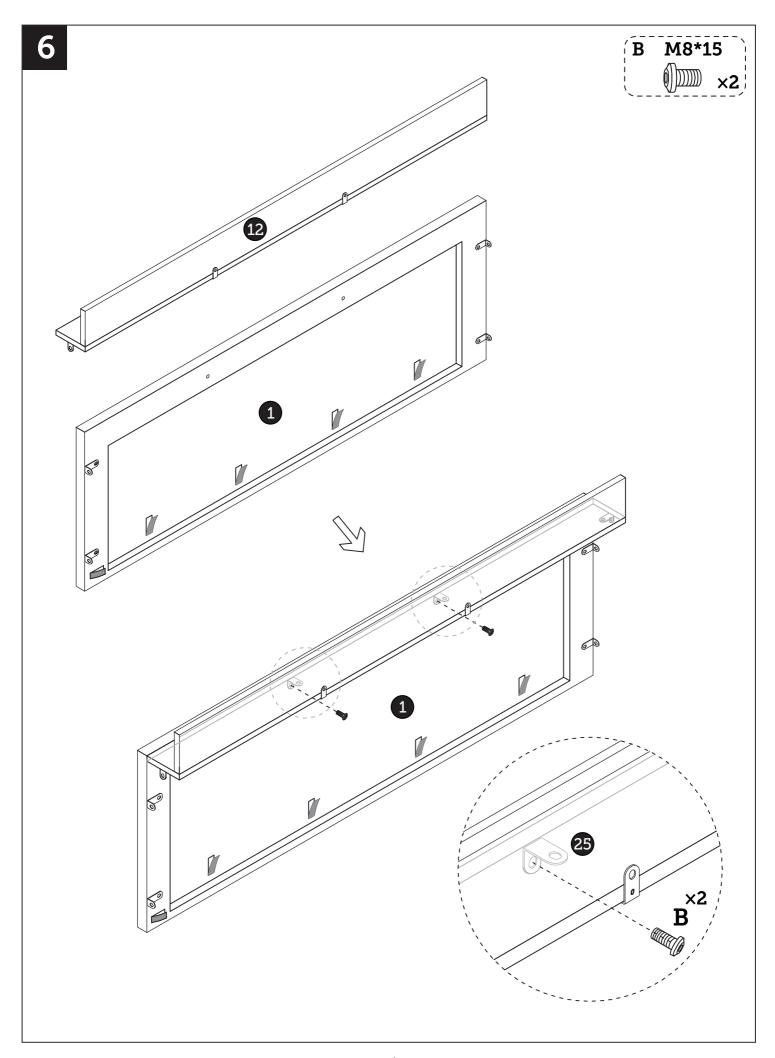


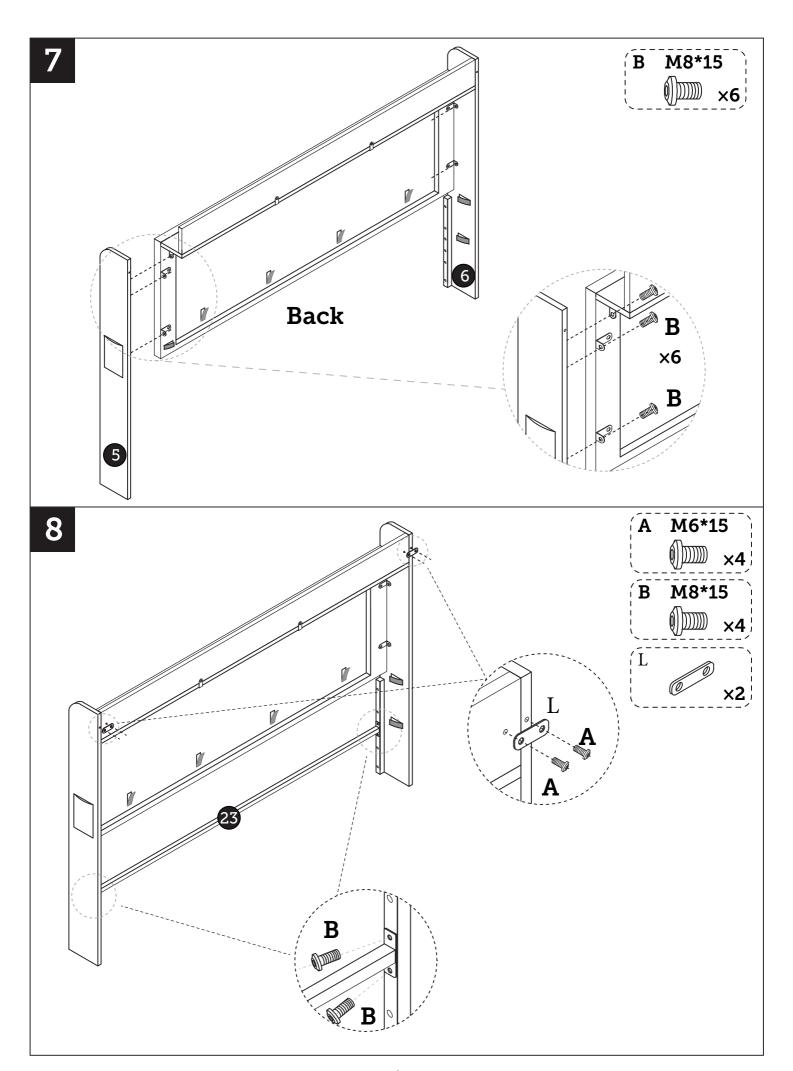


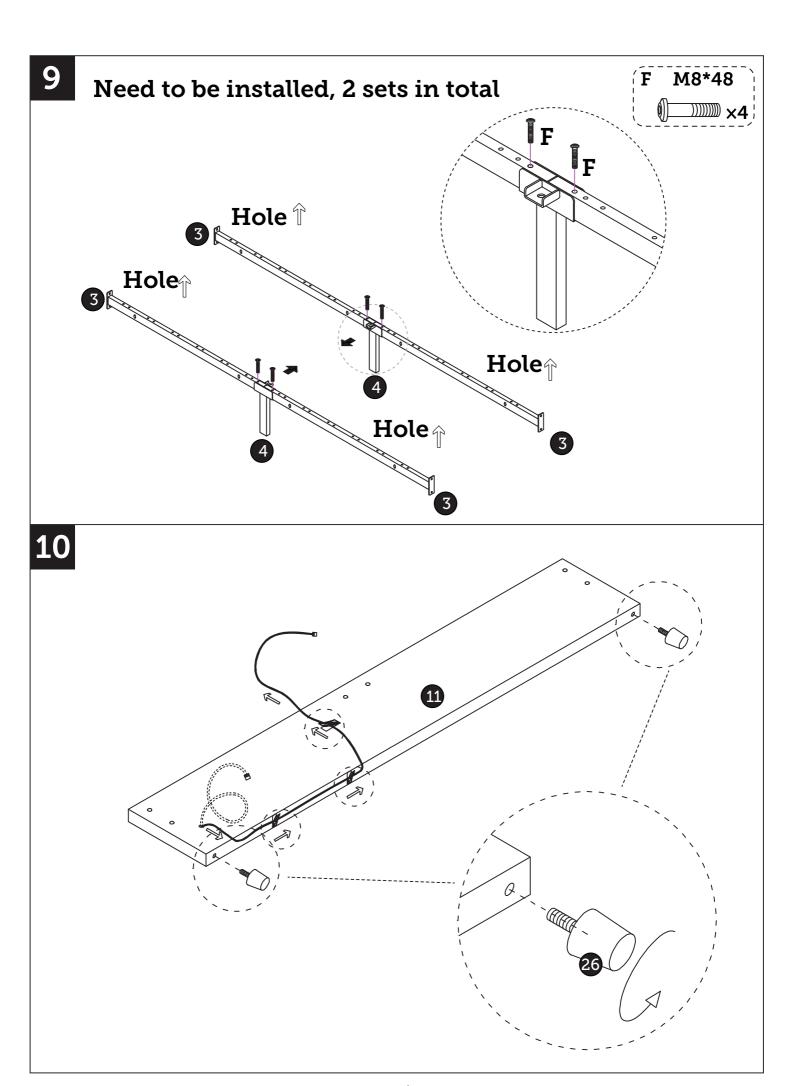

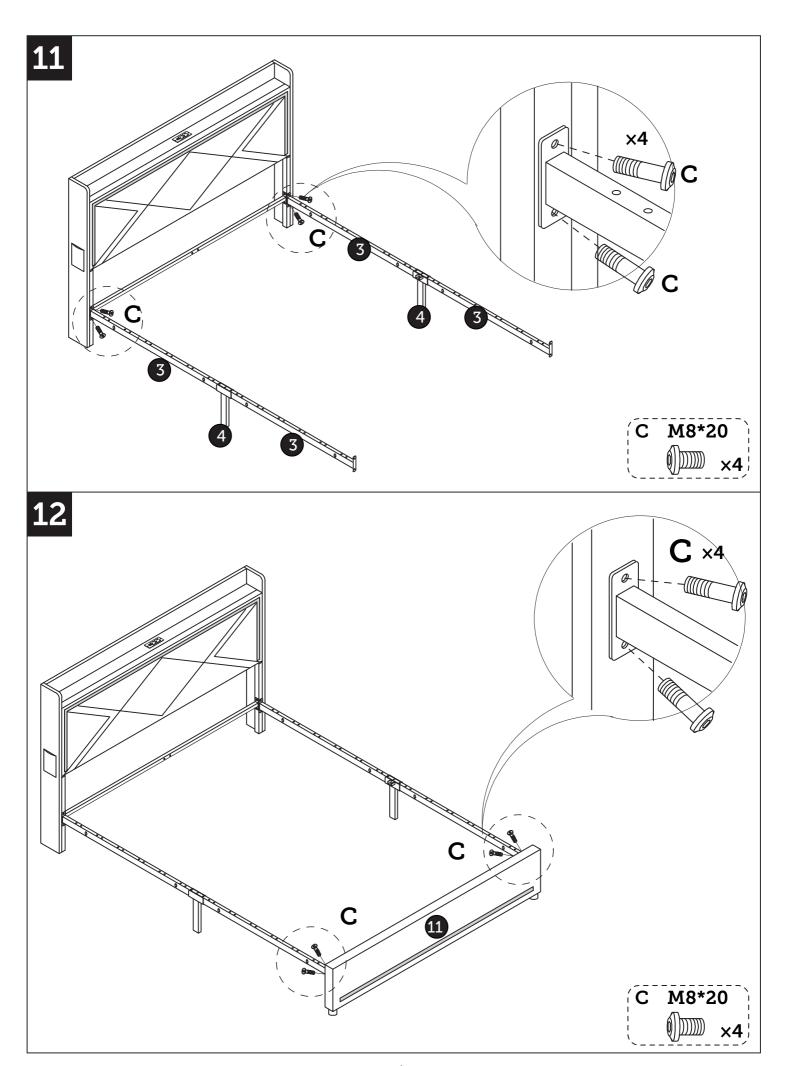

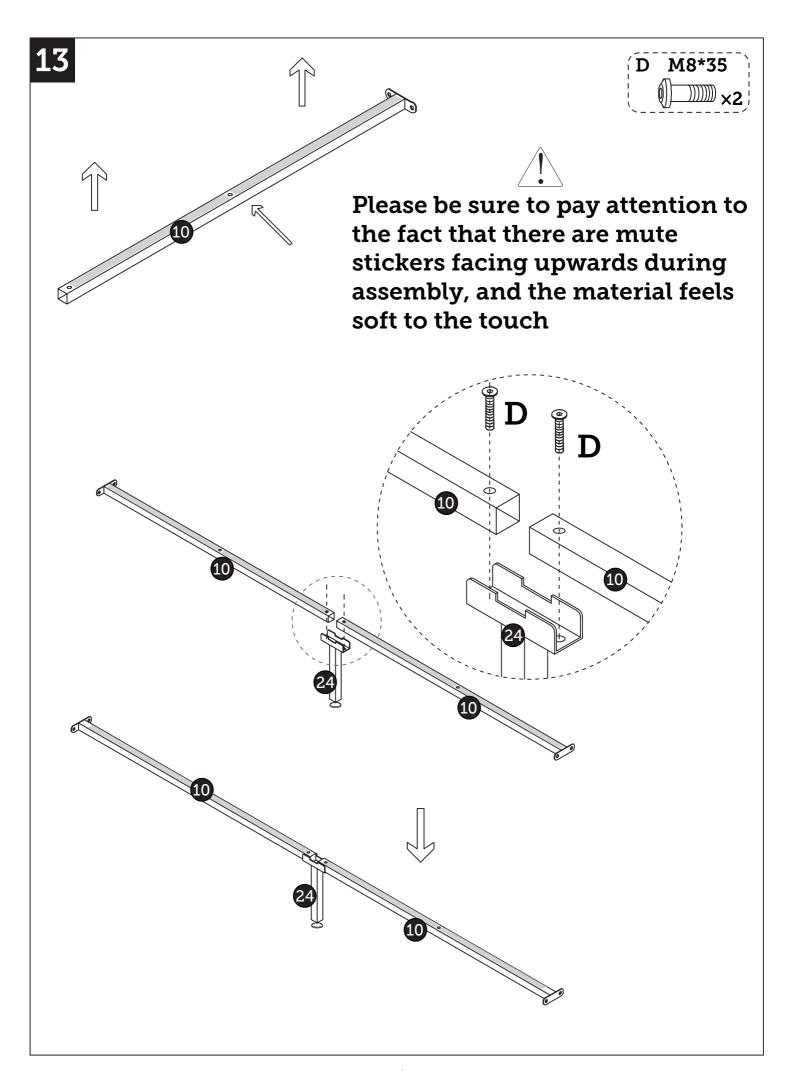


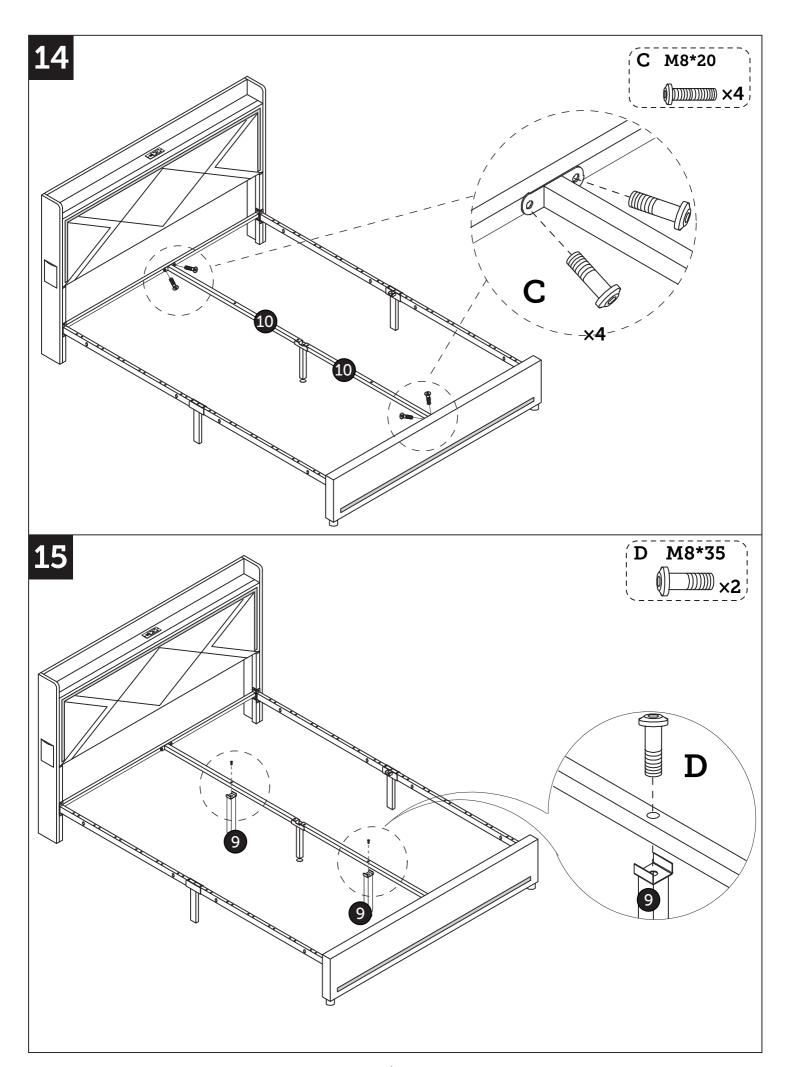

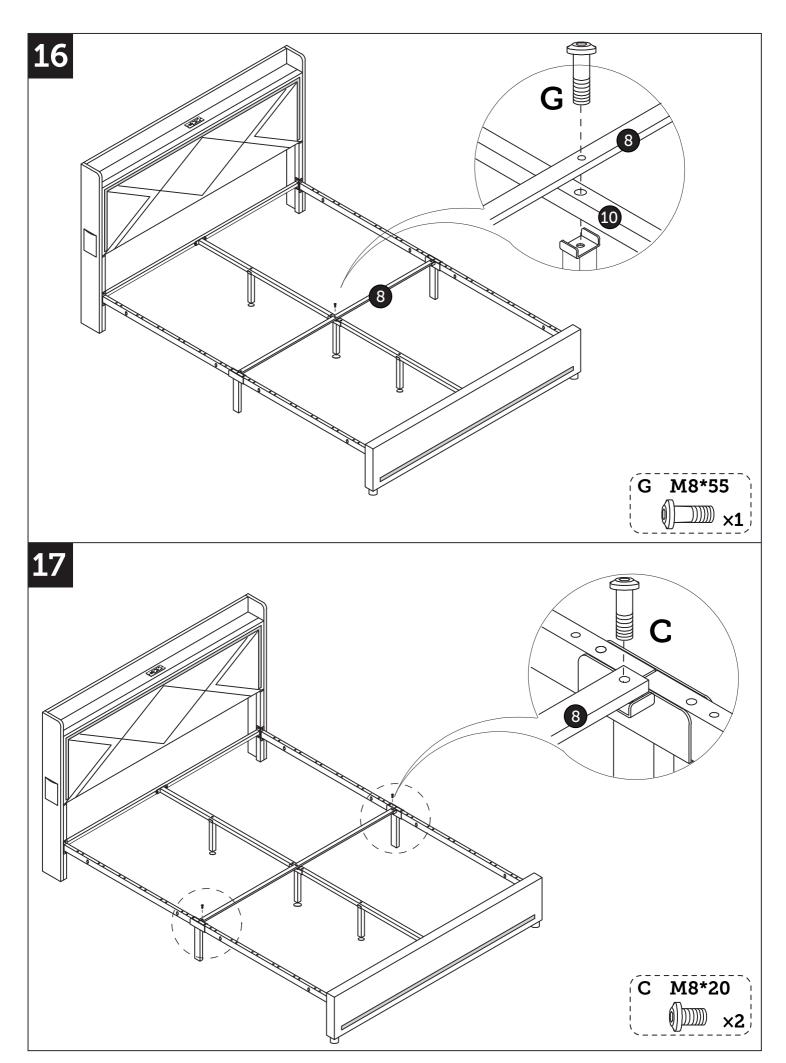


meters long


There is a USB female port on the socket. Please plug the USB plug with power cord into this USB female port

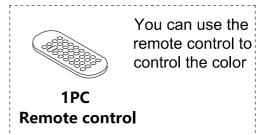


The plug of the USB socket must be connected to the power supply before it can be used !!!

After connecting all the lines, sort them out and clip them into the harness Magic Band

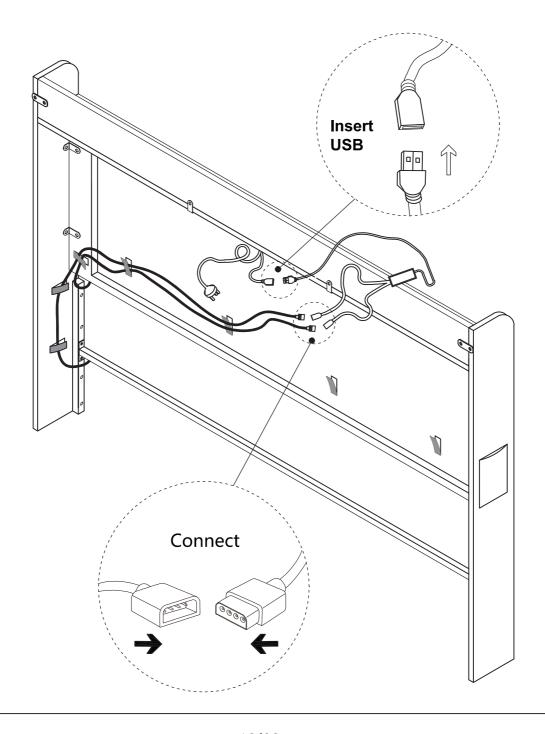

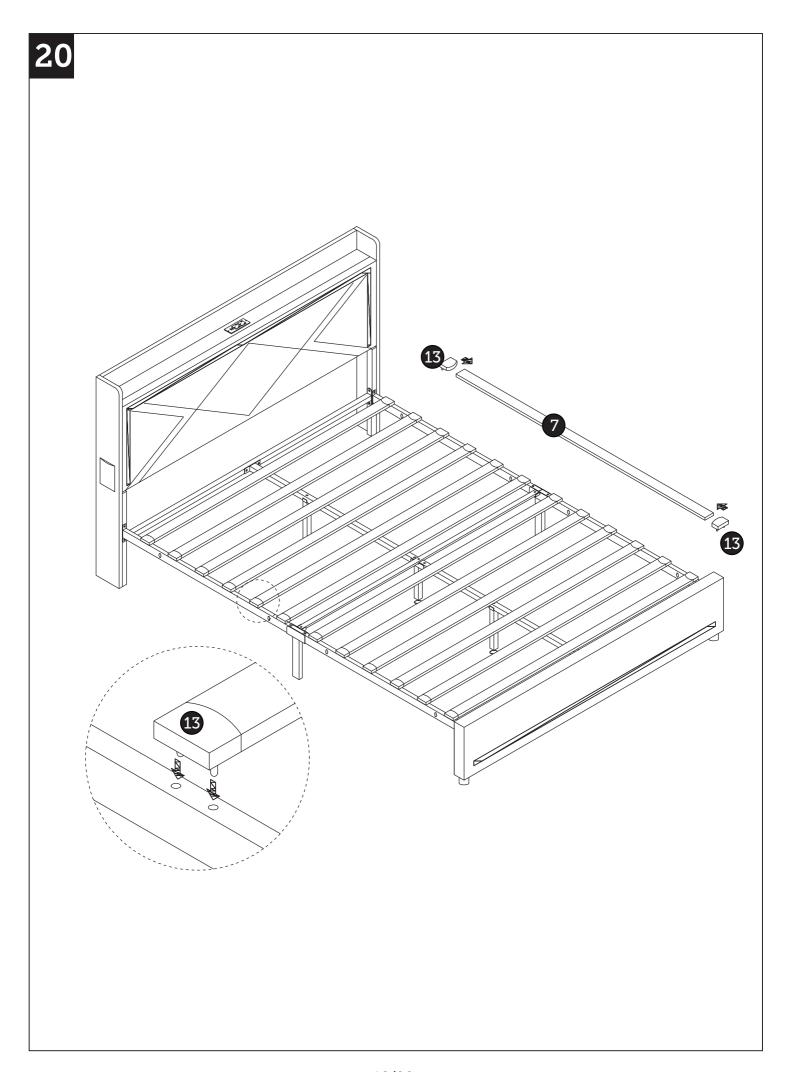


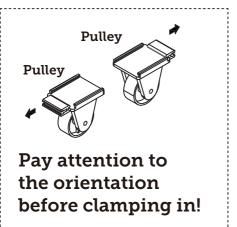



Please note that this drawer base (14) has front and back sides! please see the instructions clearly before assembling!!!

As shown in the figure Clip the pulley into position first

Then push the pulley to the side At the same time, clamp the iron wire at the edge.lt takes a little strength

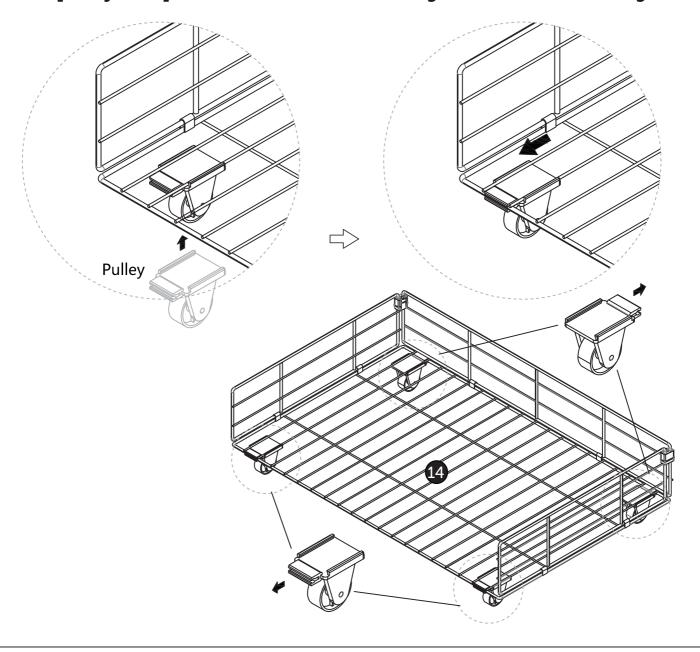

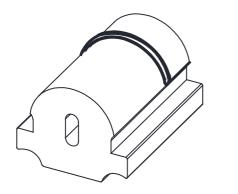


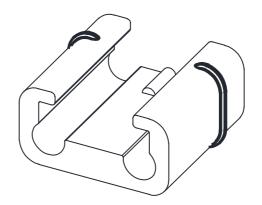

plastic buckle(A)

plastic buckle(B)


Note that when you do this correctly, the darker colored lines on A and B should be facing the same direction

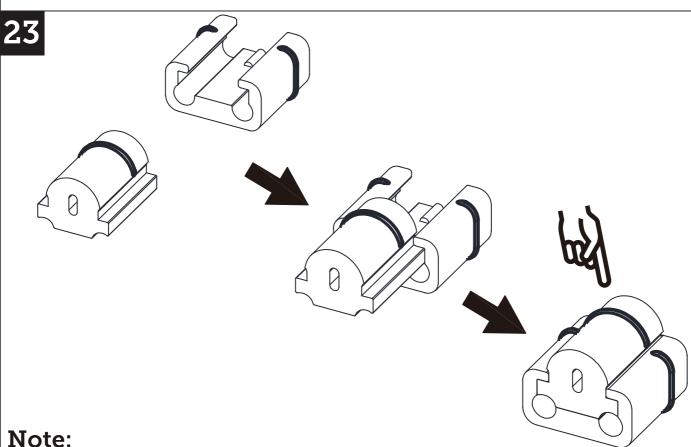


Note:


This step is just to let you know how to put A and B together You may need this in the next steps on



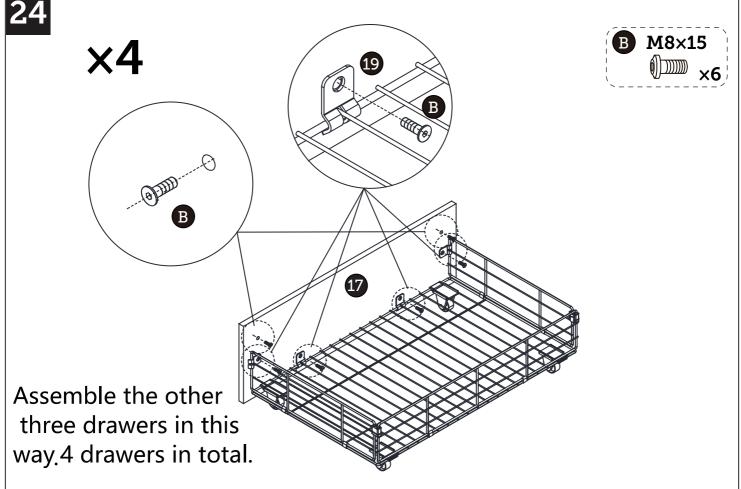

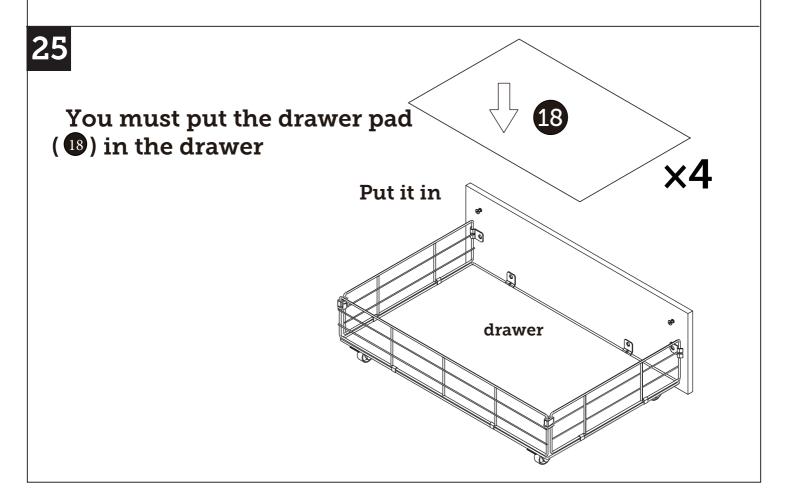

1. This screw must be turned out slightly, leaving a distance of 2-3 mm

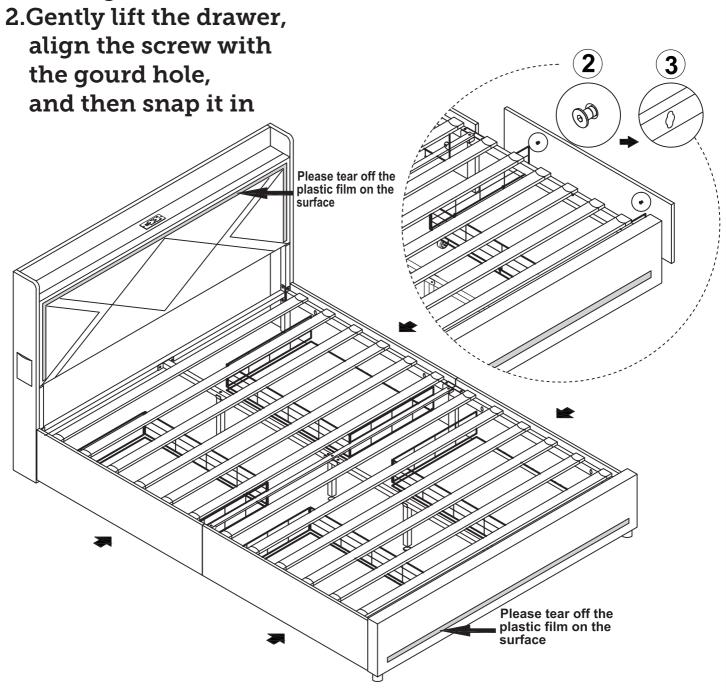

When pulling out the drawer, Lift the drawer gently, Align the screw with the gourd hole, and then pull it out