

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:













- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

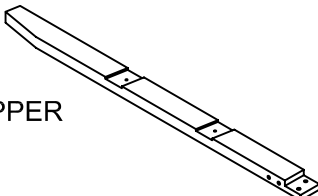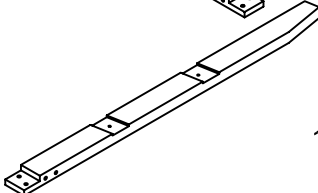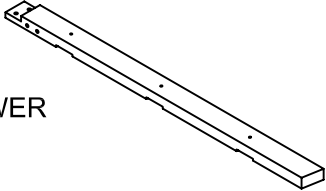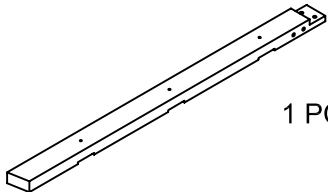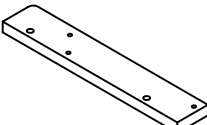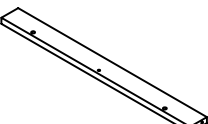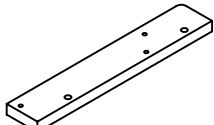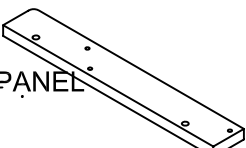(A) RIGHT LEG-UPPER  1 PC	(G) UPPER RIGHT SIDE PANEL  1 PC
(B) LEFT LEG-UPPER  1 PC	(H) MID-UPPER LEFT SIDE PANEL  1 PC
(C) RIGHT LEG-LOWER  1 PC	(I) MID-UPPER RIGHT SIDE PANEL  1 PC
(D) LEFT LEG-LOWER  1 PC	(J) MID LEFT SIDE PANEL  1 PC
(E) BACK BAFFLE  5 PCS	(K) MID RIGHT SIDE PANEL  1 PC
(F) UPPER LEFT SIDE PANEL  1 PC	(L) MID-LOWER LEFT SIDE PANEL  1 PC

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:








- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

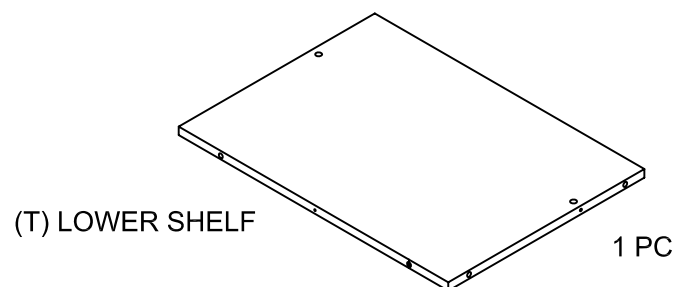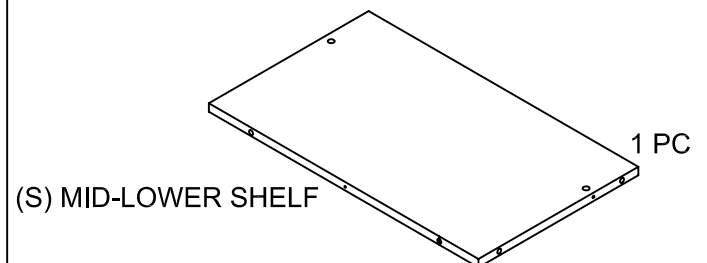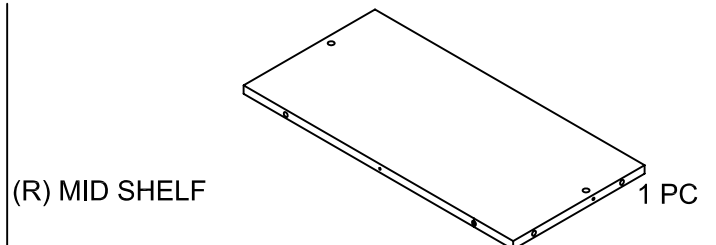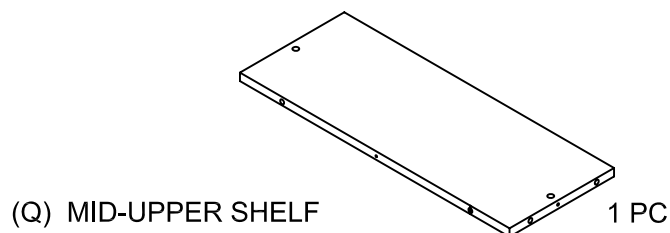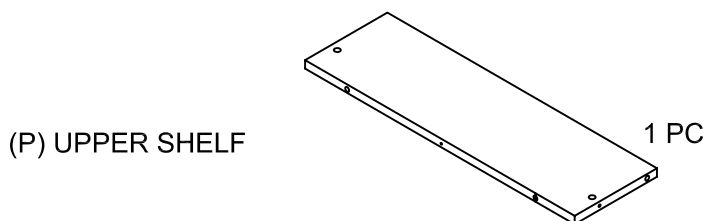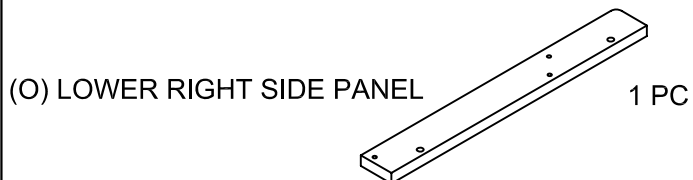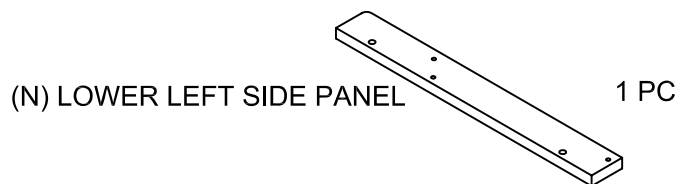


ASSEMBLY INSTRUCTION

Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q' TY
1	SELF-TAPPING SCREW $\varnothing 4 \times 35 \text{mm}$		15pcs
2	CHAMFER SELF-TAPPING SCREW $\varnothing 4.2 \times 65 \text{mm}$		10pcs
3	SMALL FLAT SCREW $\varnothing 6 \times 12 \text{mm}$		8pcs
4	LARGE FLAT SCREW $\varnothing 6 \times 20 \text{mm}$		4pcs
5	CAP SCREW $M6 \times 11 \text{mm}$		4pcs
6	CONNECTION PLATE $170 \times 24 \times 3 \text{mm}$		2pcs
7	WOODEN DOWEL $\varnothing 8 \times 25 \text{mm}$		28pcs
8	LARGE STICKER $\varnothing 18 \text{mm}$		8pcs
9	SMALL STICKER $\varnothing 13 \text{mm}$		30pcs
10	SELF-TAPPING SCREW $\varnothing 4 \times 30 \text{mm}$		10pcs
11	THE RESTRAINT STRAP $197 \times 5 \times 1 \text{mm}$		1pc
12	BRACKET $12 \times 12 \times 1 \text{mm}$		2pcs
13	SMALL SCREW $\varnothing 4 \times 25 \text{mm}$		1pc
14	WALL SCREW $\varnothing 5 \times 40 \text{mm}$		1pc
15	PLASTIC ANCHOR $\varnothing 8 \times 40 \text{mm}$		1pc
16	GLUE		1pc


ASSEMBLY INSTRUCTION

- ① Drop glue (10) on 7 and insert into hole of P, Q.
- ② Align E with holes on P, Q and attach together.
1 through E to P and screw down;
1 through E to Q and screw down.

STEP1

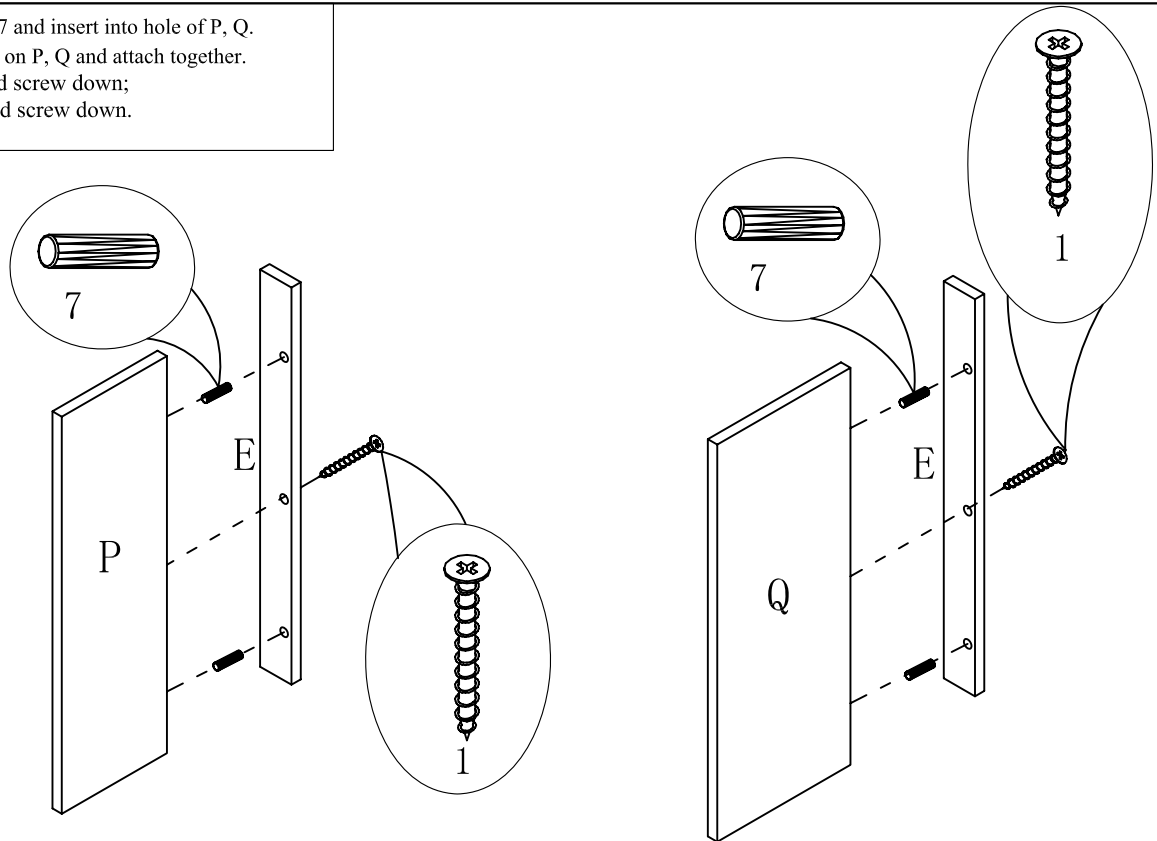


STEP2

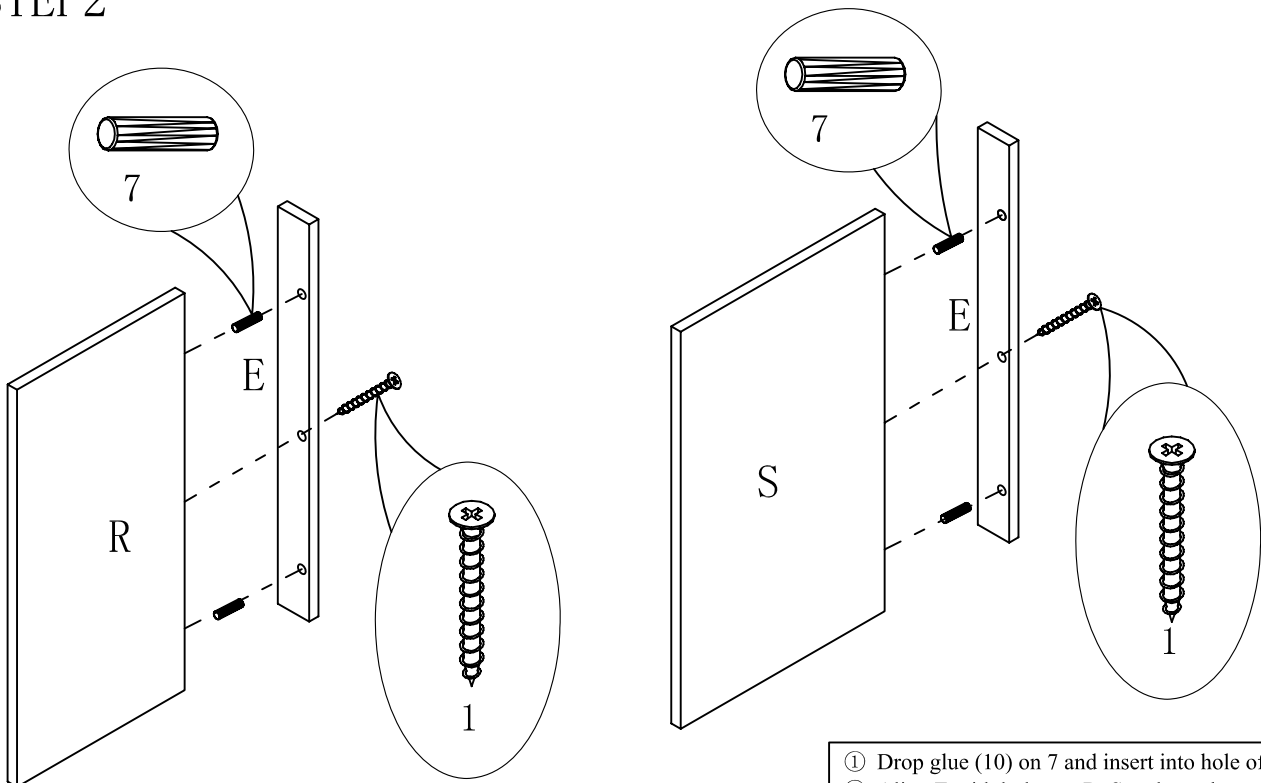


- ① Drop glue (10) on 7 and insert into hole of R, S.
- ② Align E with holes on R, S and attach together.
1 through E to R and screw down;
1 through E to S and screw down

- ① Drop glue (10) on 7 and insert into hole of T.
- ② Align E with T hole position and put them together; 1 through E to T and screw down.

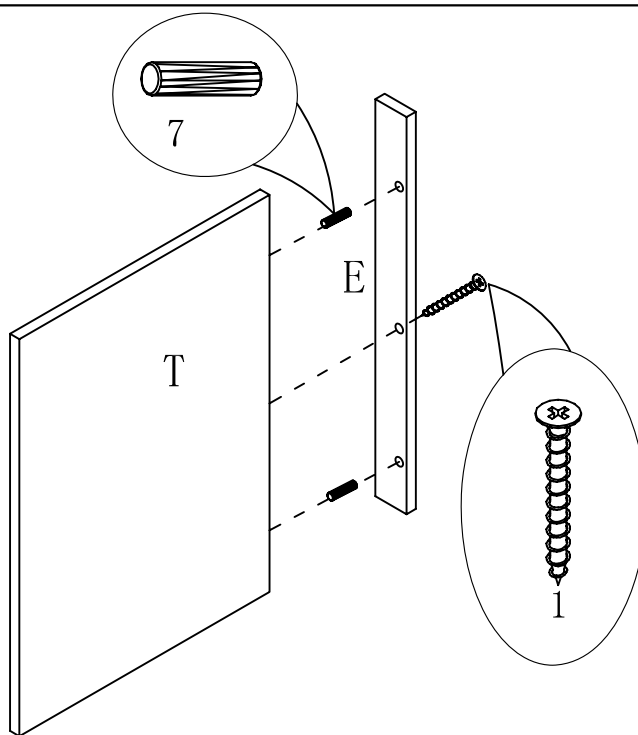

STEP3


STEP4

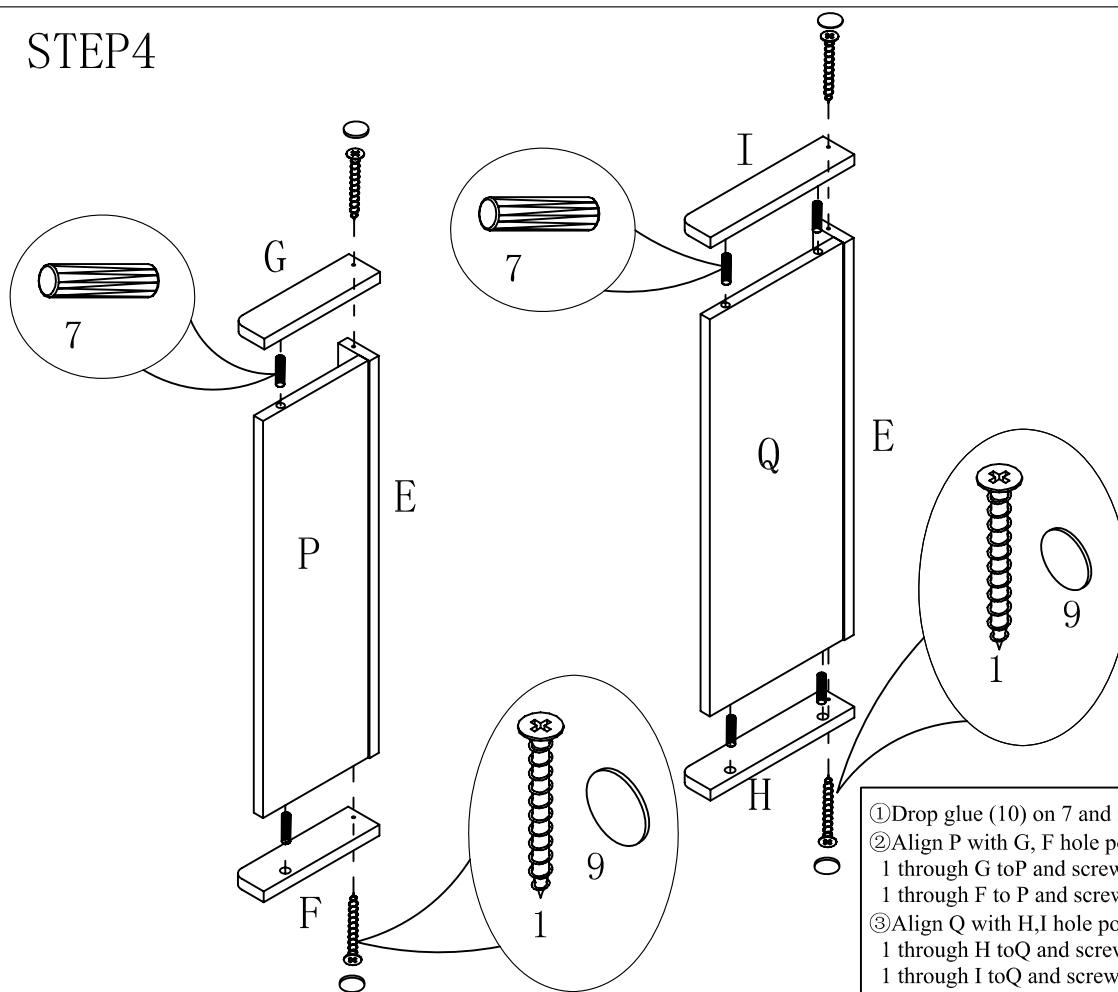

- ① Drop glue (10) on 7 and insert into hole of P,Q.
- ② Align P with G, F hole position and put them together; 1 through G to P and screw down; 1 through F to P and screw down
- ③ Align Q with H,I hole position and put them together; 1 through H to Q and screw down; 1 through I to Q and screw down.
- ④ Cover 1 with 9.


ASSEMBLY INSTRUCTION

- ① Drop glue (10) on 7 and insert into hole of R.
- ② Align R with J,K hole position and put them together;
1 through J to R and screw down;
1 through K to R and screw down.
- ③ Cover 1 with 9

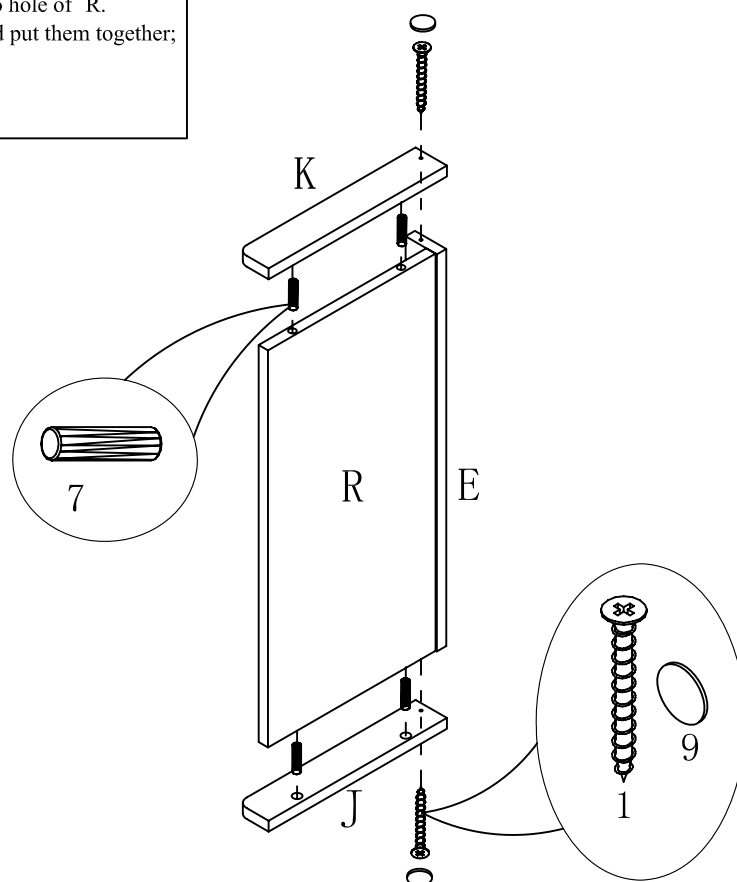

STEP5


STEP6

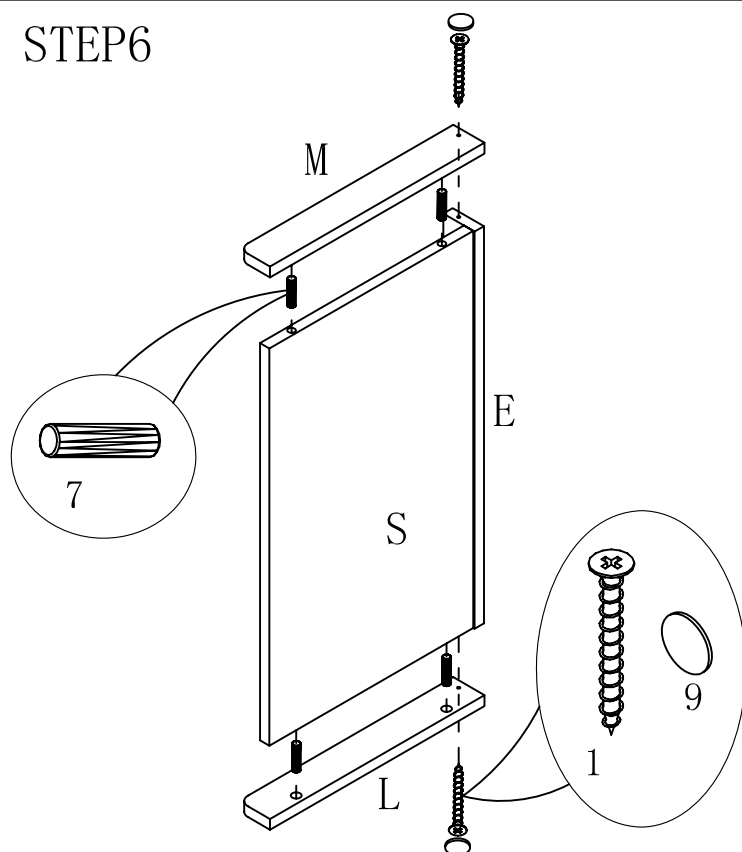

- ① Drop glue (10) on 7 and insert into hole of S.
- ② Align S with M,L hole position and put them together;
1 through L to S and screw down;
1 through M to S and screw down
- ③ Cover 1 with 9


ASSEMBLY INSTRUCTION

- ① Drop glue (10) on 7 and insert into hole of T.
- ② Align T with O,N hole position and put them together;
1 through N to T and screw down;
1 through O to T and screw down.
- ③ Cover 1 with 9.

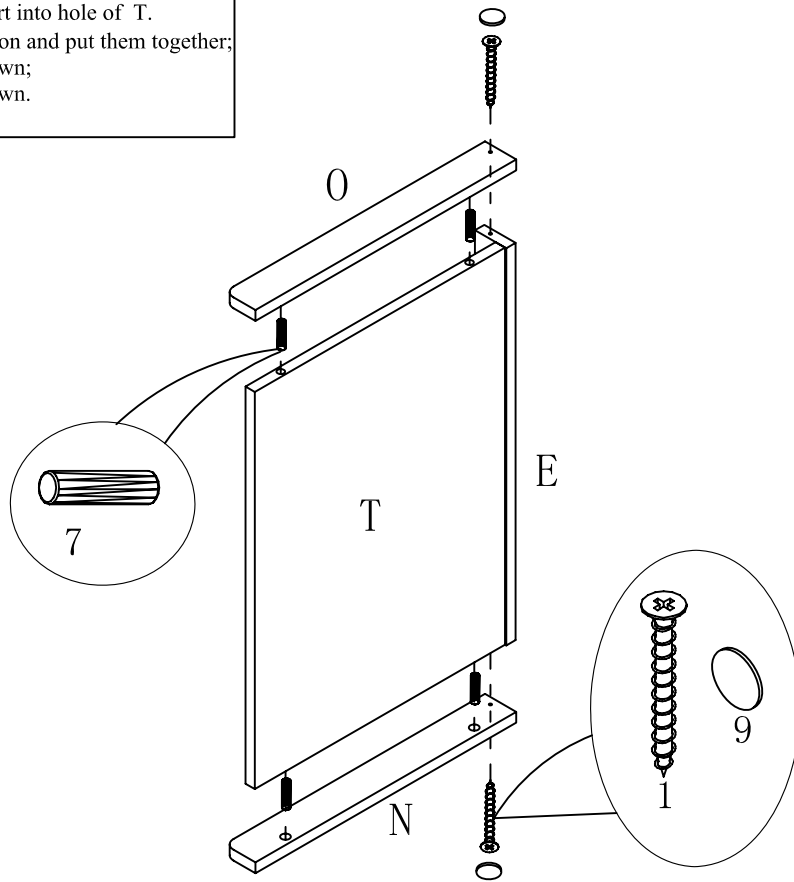

STEP7


STEP8

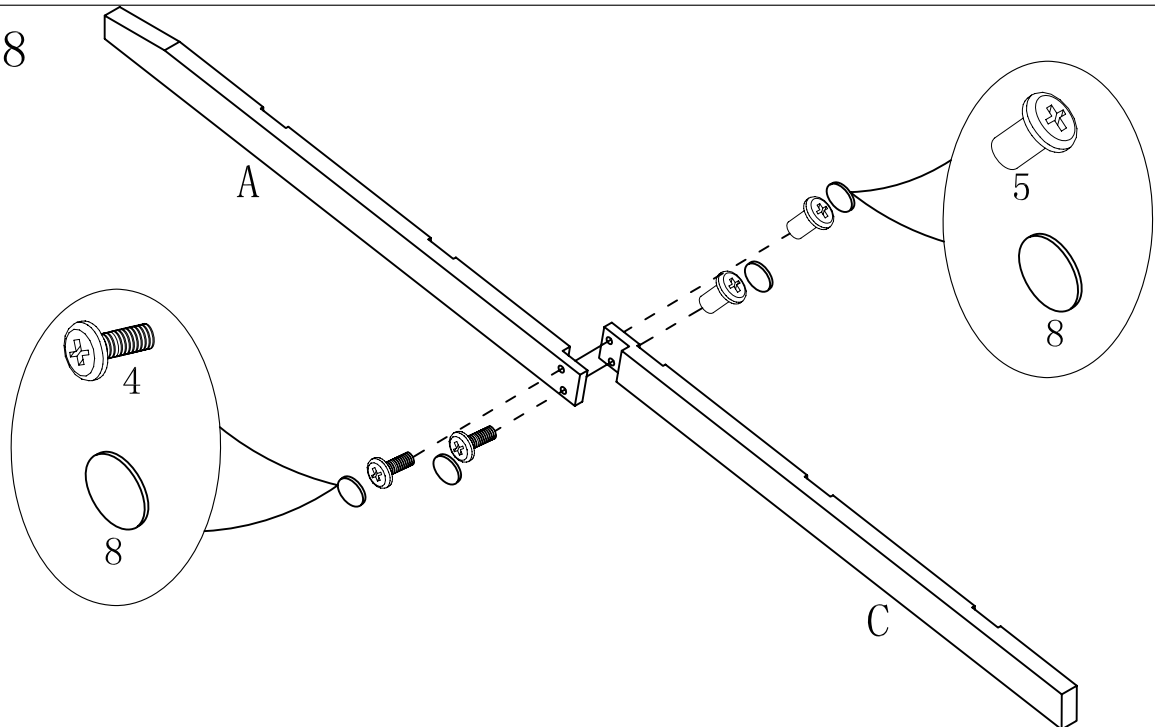

- ① Align A with C hole position;
put 5 into C hole position;
4 through A to 5 and screw down.
- ② Cover 4 with 8; cover 5 with 8


ASSEMBLY INSTRUCTION

- ①Align B with D hole position;
put 5 into D hole position;
4 through B to 5 and screw down.
- ②Cover 4 with 8; cover 5 with 8

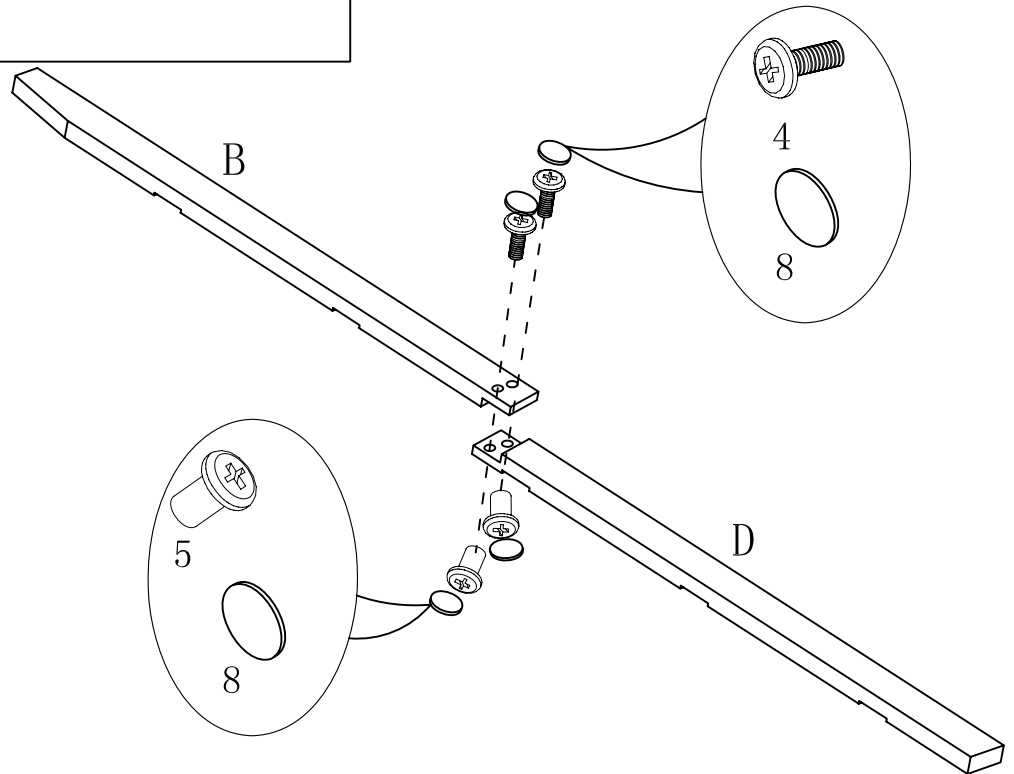


STEP 9

STEP 10

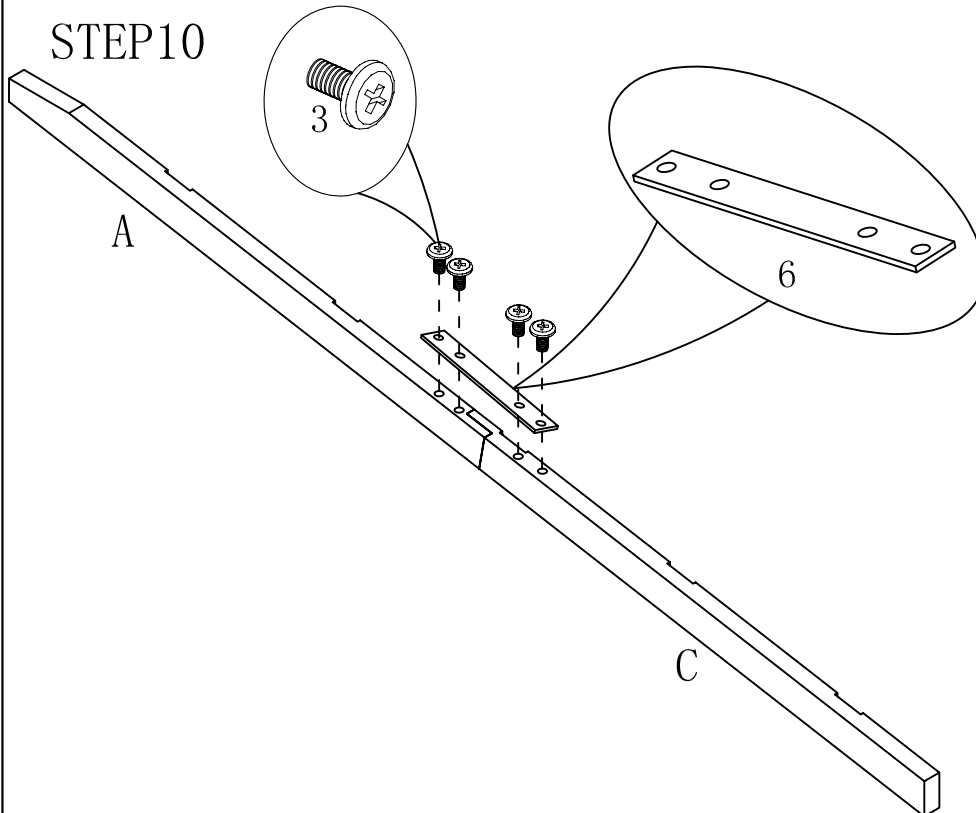


- ①Align 6 with A,C hole position;
3 through 6 to A and screw down;
3 through 6 to C and screw down

- ①Align 6 with B,D hole position;
3 through 6 to B and screw down;
3 through 6 to D and screw down

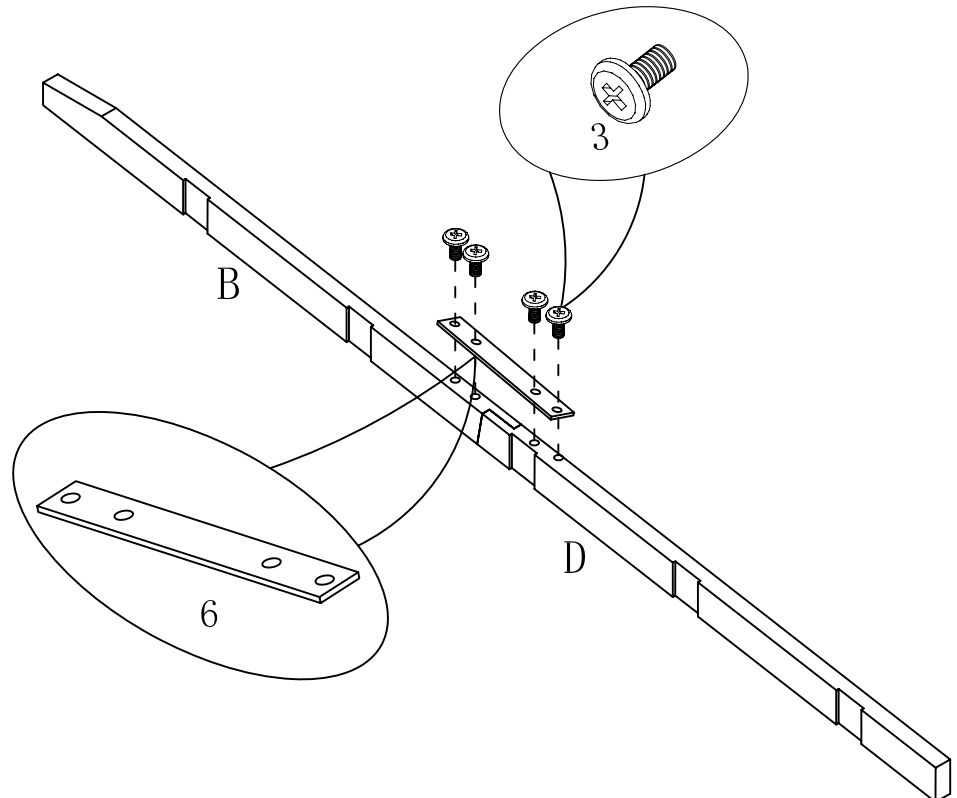

STEP11

STEP12

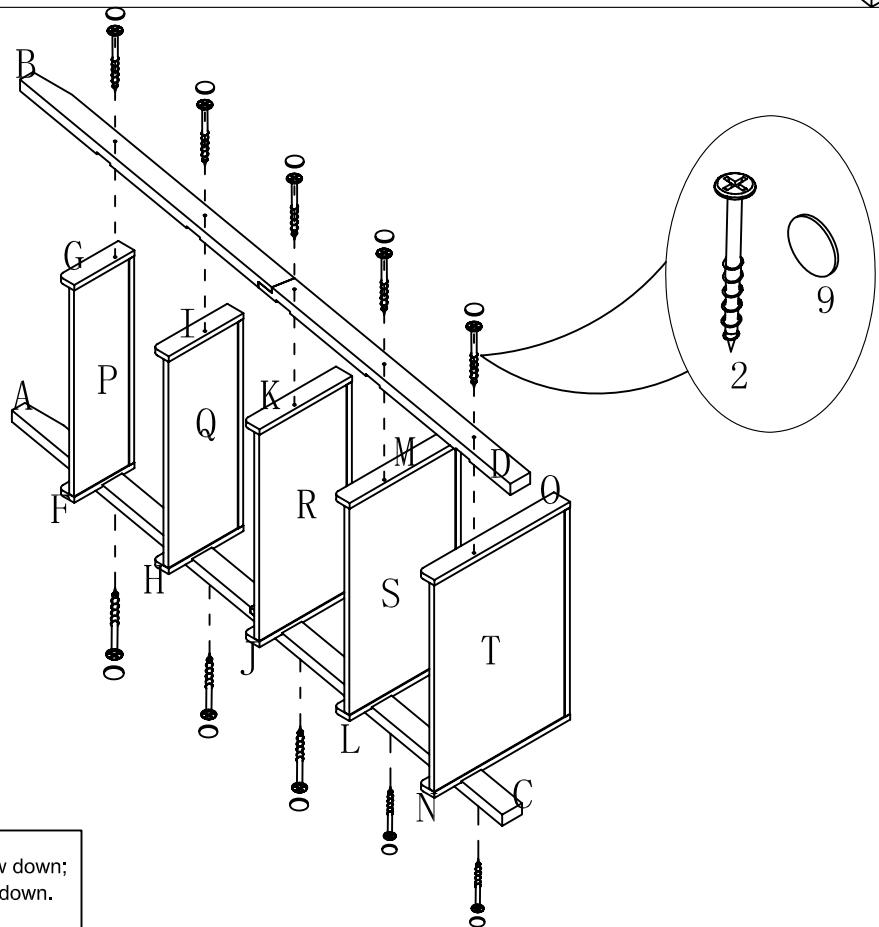

- ①2 through A,C to G,I,K,M,O separately and screw down;
2 through B,D to F,H,J,L,N separately and screw down.
②Cover 2 with 9.

- ① 1 through G,I,K,M,O to A,C separately and screw down;
1through F,H,J,L,N to B,D separately and screw down.
② Cover 1 with 9.

STEP13

