


ASSEMBLY INSTRUCTIONS

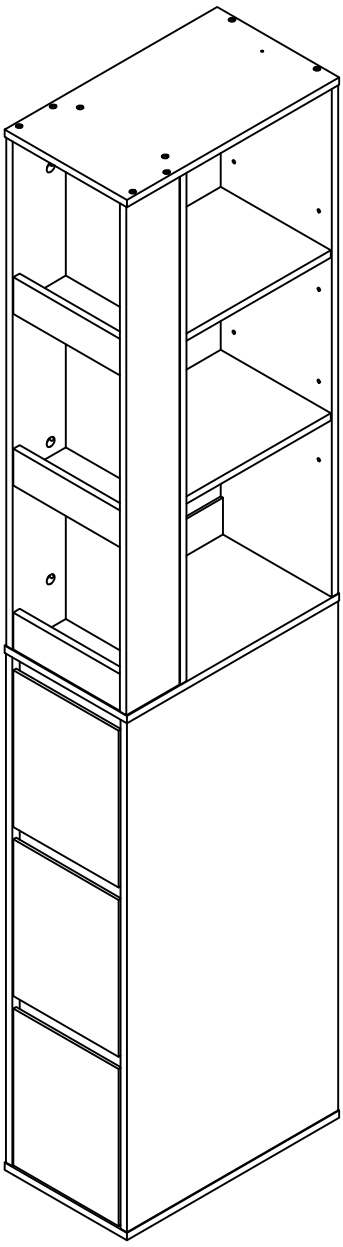


OR

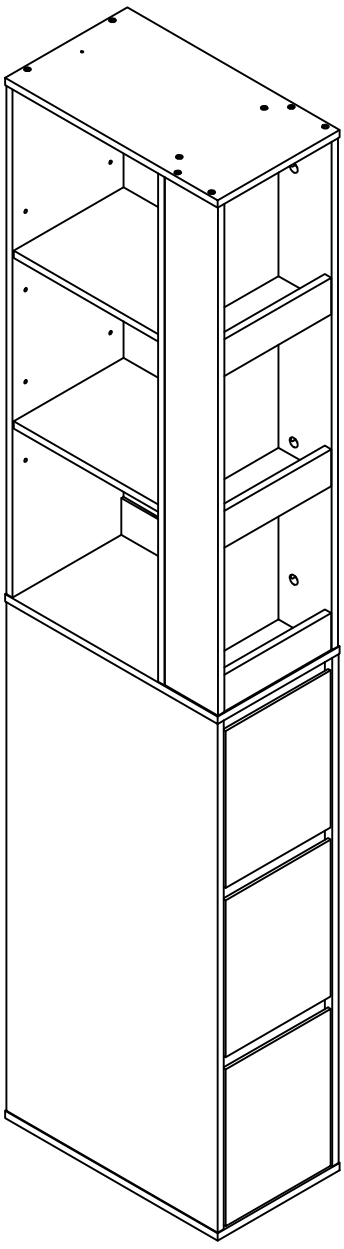


WARNING !

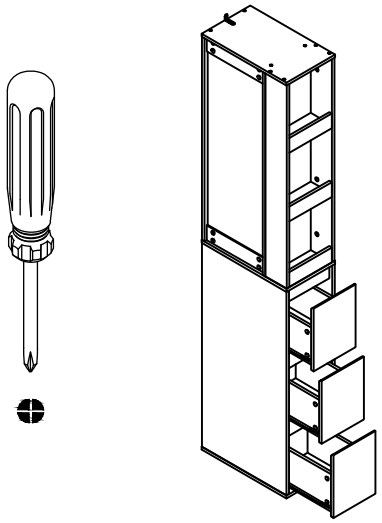

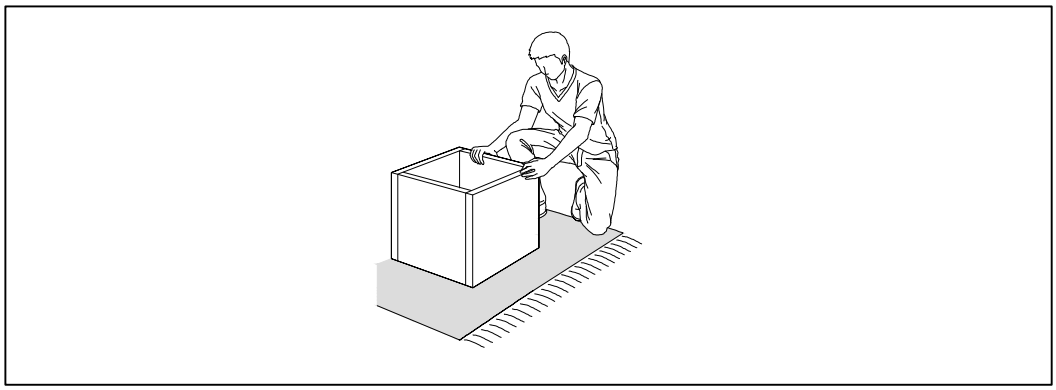

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

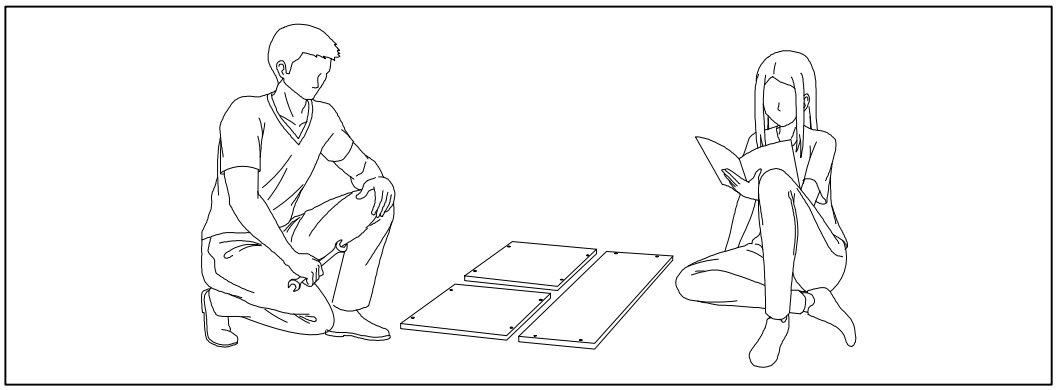


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

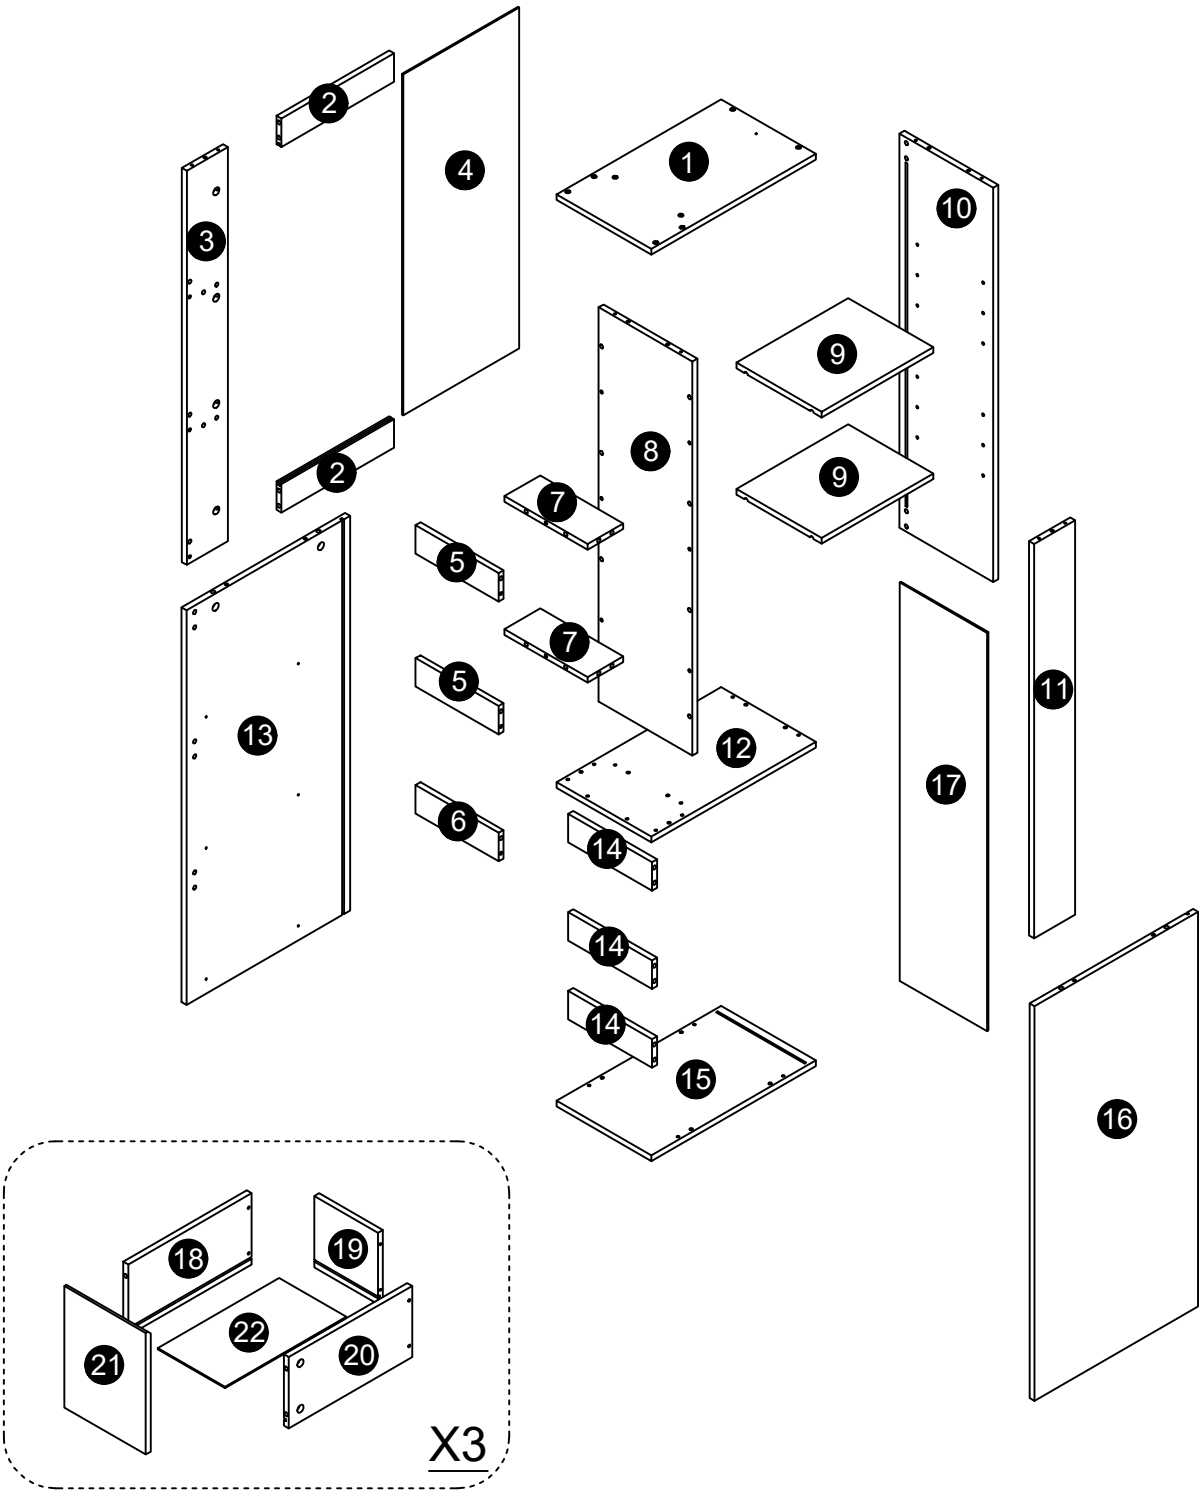


BOARD IDENTIFICATION


Not actual size

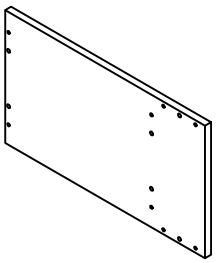


① x1

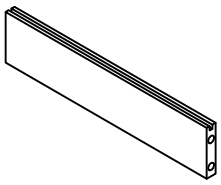


② x2

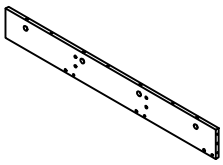


③ x1

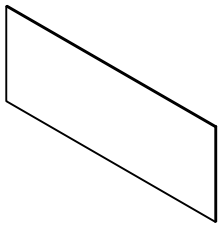


④ x1

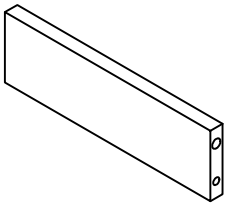


⑤ x2

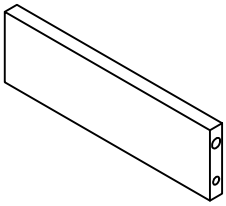


⑥ x1

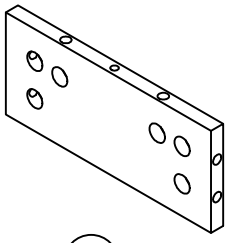


⑦ x2

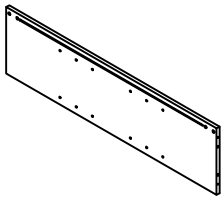


⑧ x1

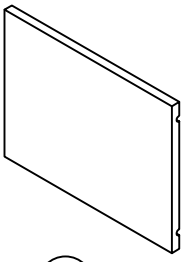


⑨ x2

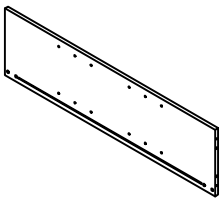


⑩ x1

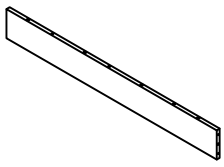


⑪ x1

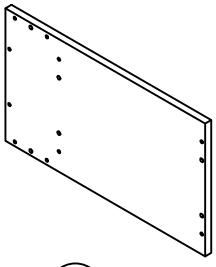


⑫ x1

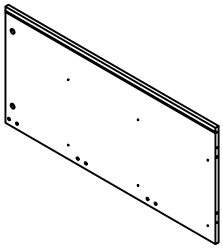


⑬ x1

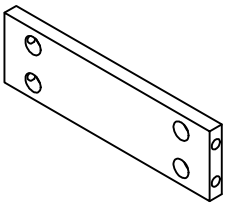

⑭ x3

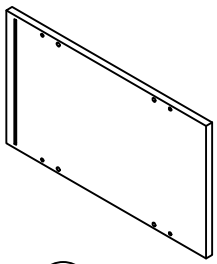


⑮ x1

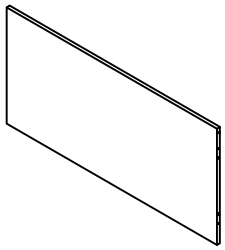


⑯ x1

BOARD IDENTIFICATION


Not actual size

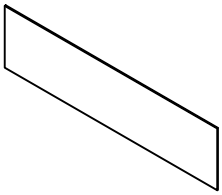


⑰ x1

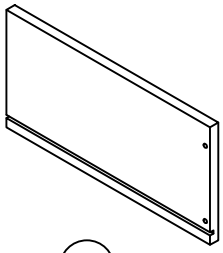


⑱ x3

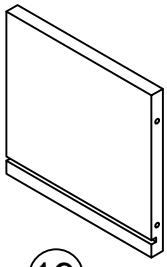


⑲ x3

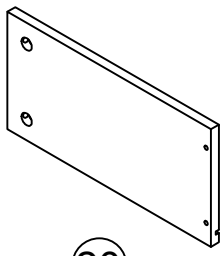

⑳ x3










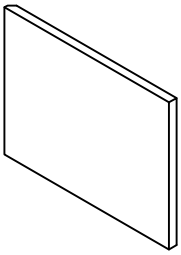


㉑ x3

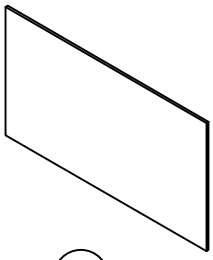


㉒ x3

HARDWARE LIST

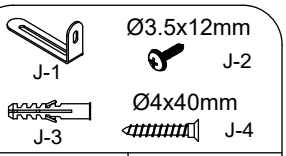
 A x62+2	 Ø15x9.5 B x62+2	 Ø6x30 C x34+2	 Ø5x40 D x34+2
 Ø3.5x12 E x24+2	 Ø5x16 F x8+1	 Ø20 G x62+2	 H-1 H-2 Ø3x14mm H x16+2
 I x4+2	 J-1 Ø3.5x12mm J-2 J-3 Ø4x40mm J-4 J x1	 K x1	 CL x3
 CR x3	 DL x3	 DR x3	


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

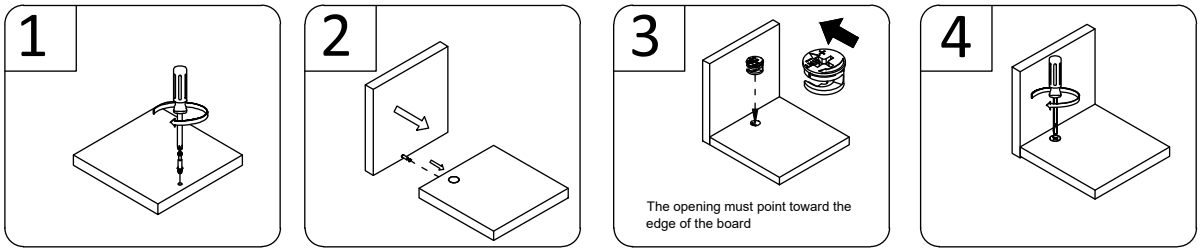



STEP 1

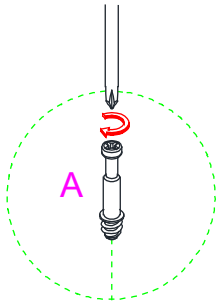

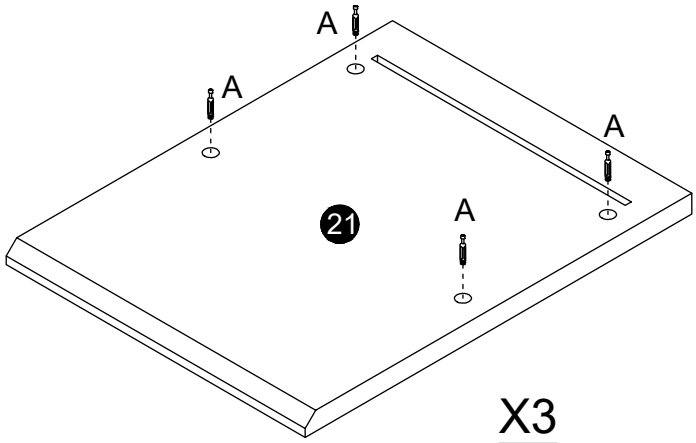


X3

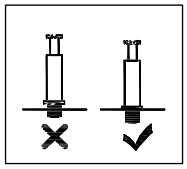


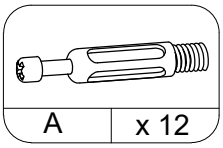


STEP 2

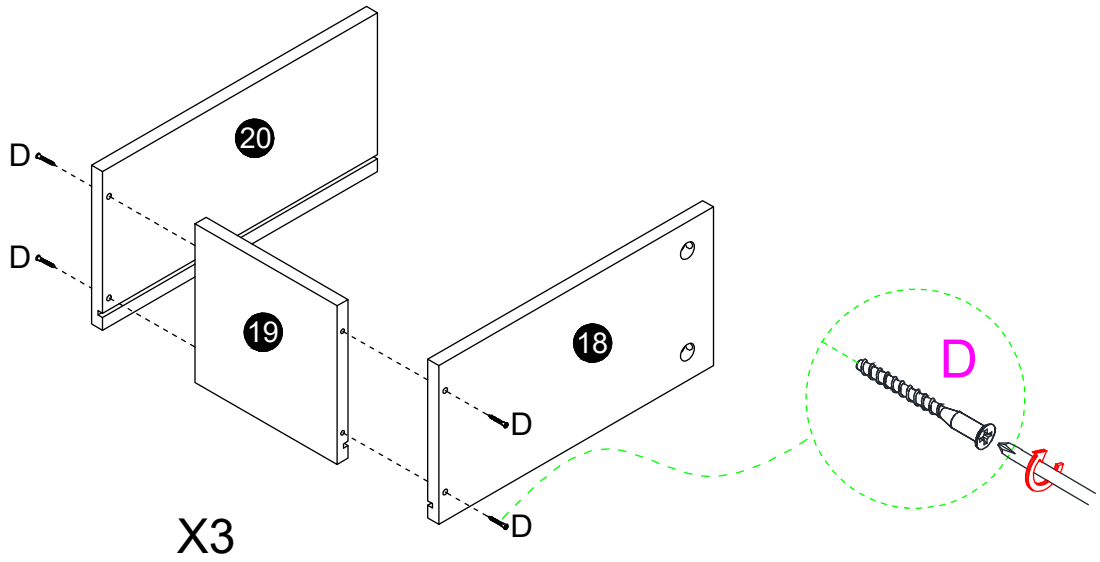

X3

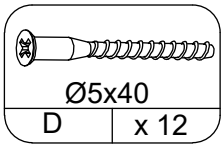


STEP 3

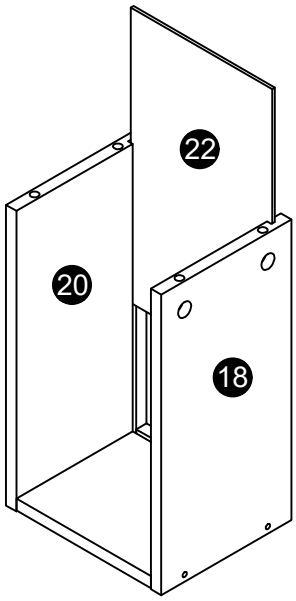



X3

STEP 4

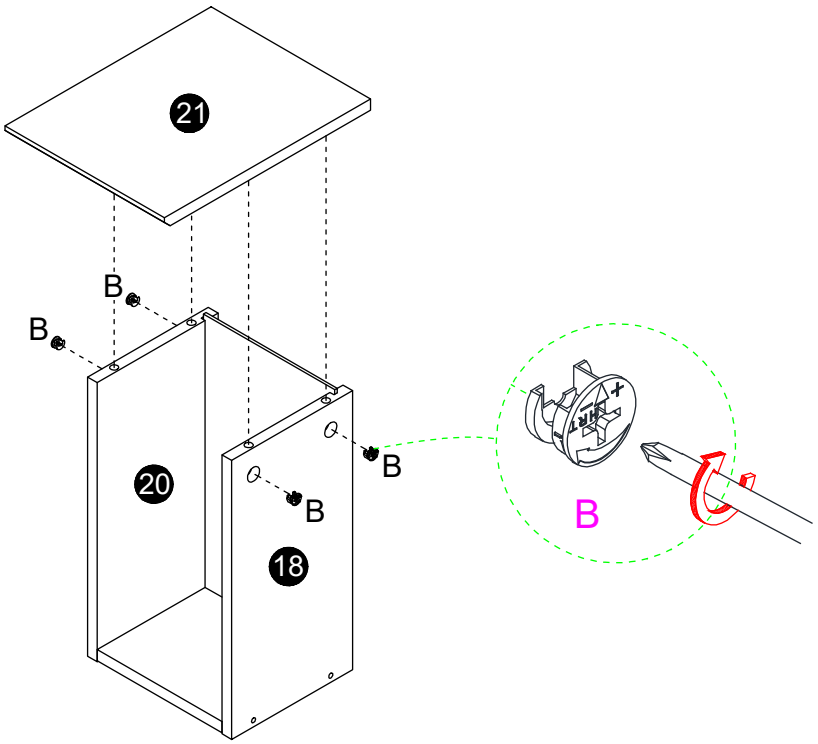


X3

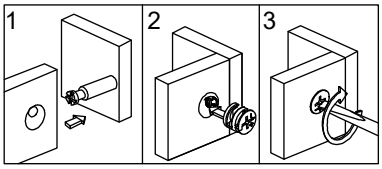

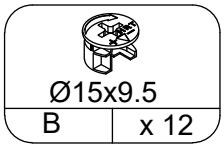

STEP 5

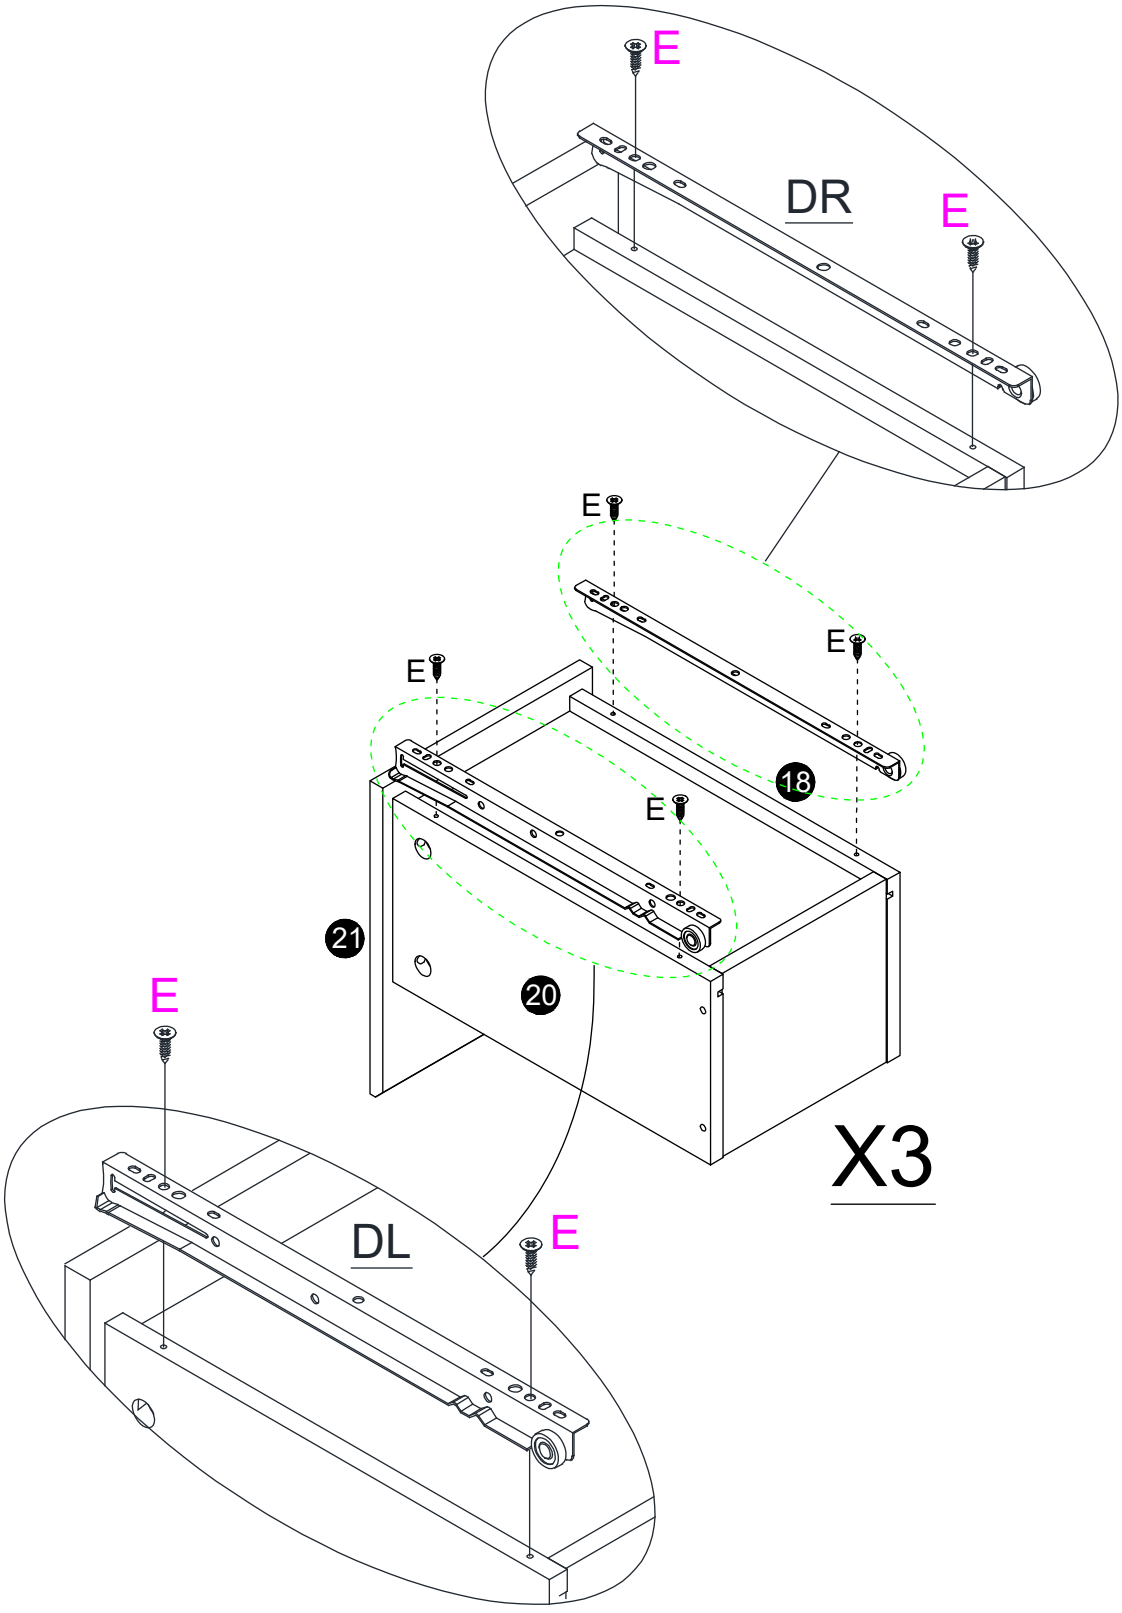



Ø3.5x12	
E	x 12


DR	x 3


DL	x 3

STEP 6



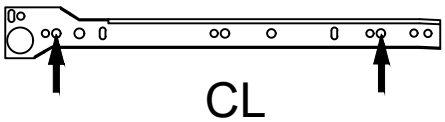

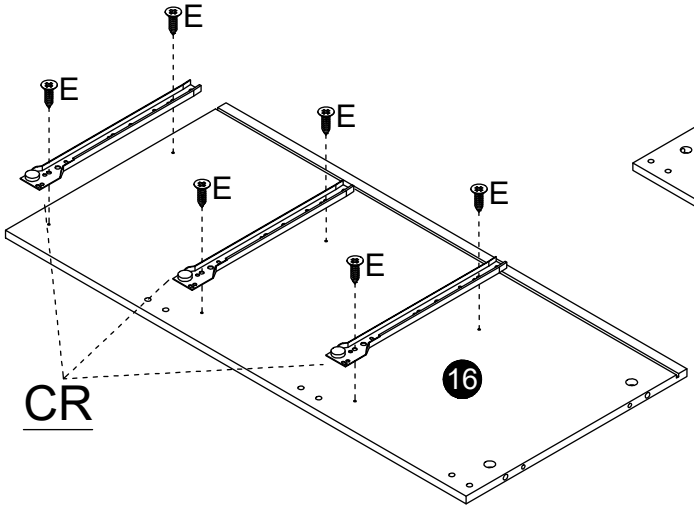

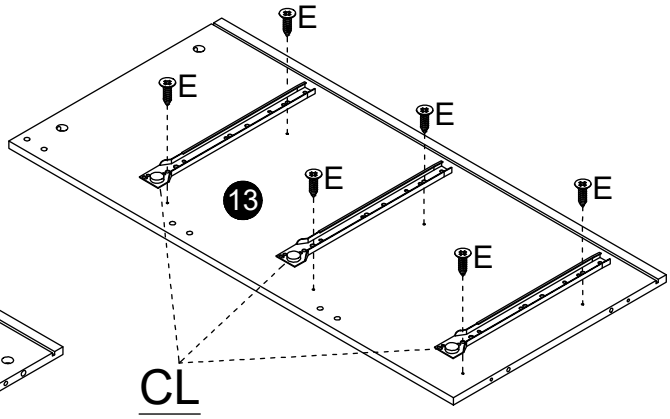



Ø3.5x12	
E	x 12


CL	
CL	x 3


CR	
CR	x 3

STEP 7

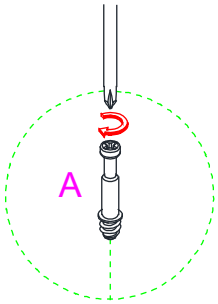

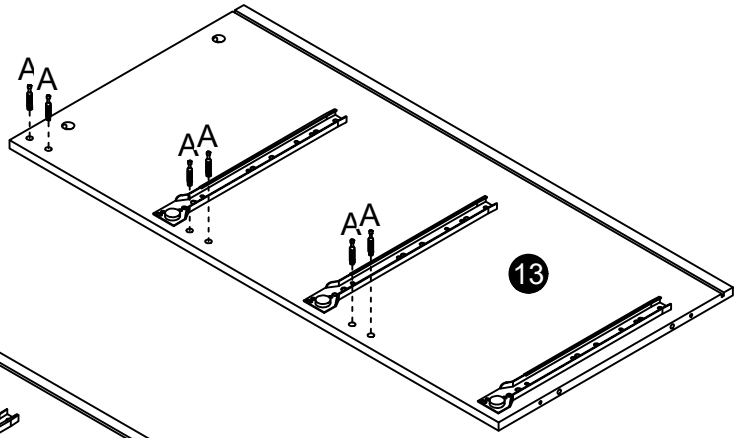


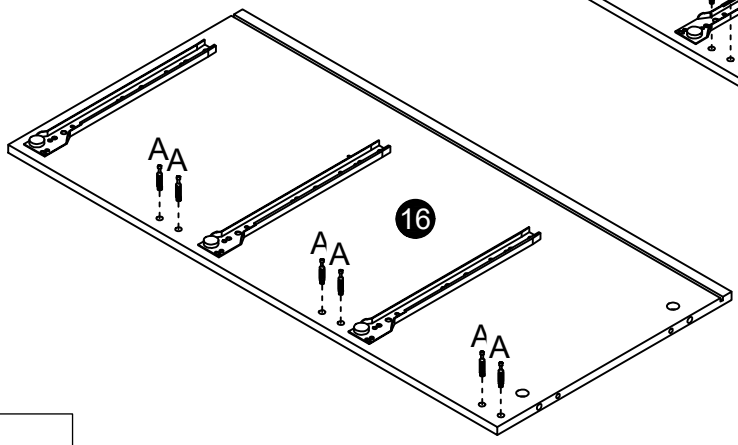


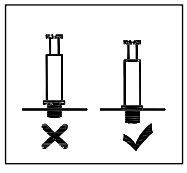


A	x 12


STEP 8

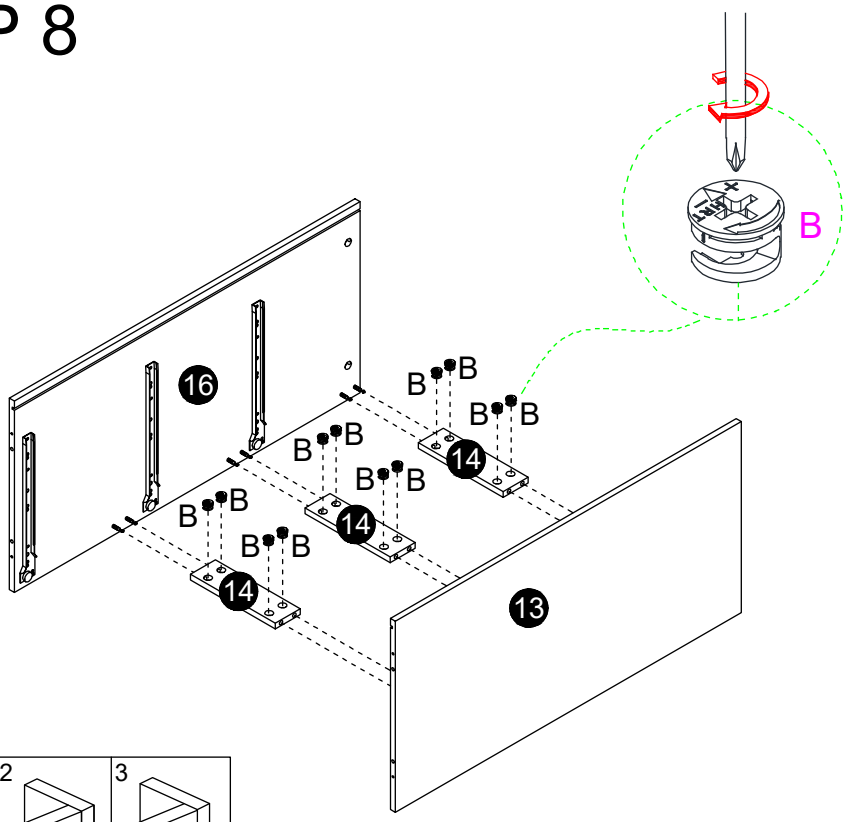
B
16
B B
B B
B B
B B
B B
B B
14
14
14
13

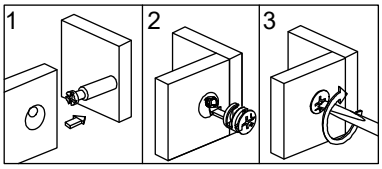

1
2
3

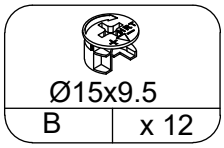
Ø15x9.5
B
x 12

STEP 9

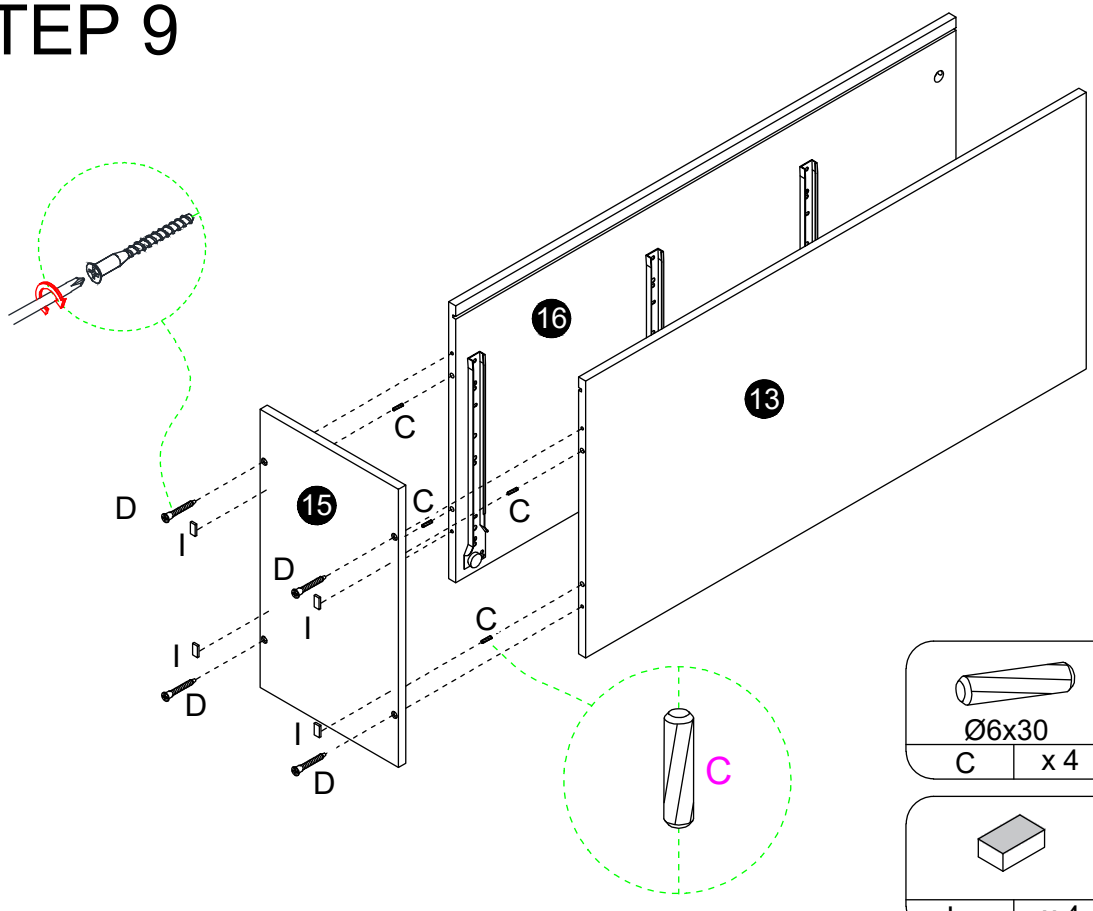

16
13
C
C
C
C
15
D
I
D
I
I
D
I
D
C

Ø6x30
C
x 4

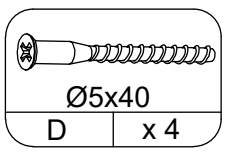

Ø5x40
D
x 4

I
x 4


STEP 10

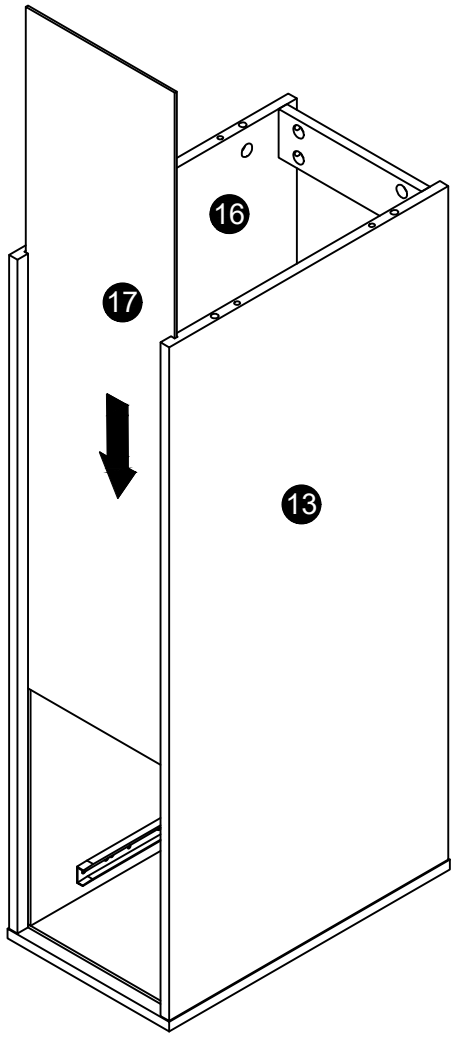


STEP 11

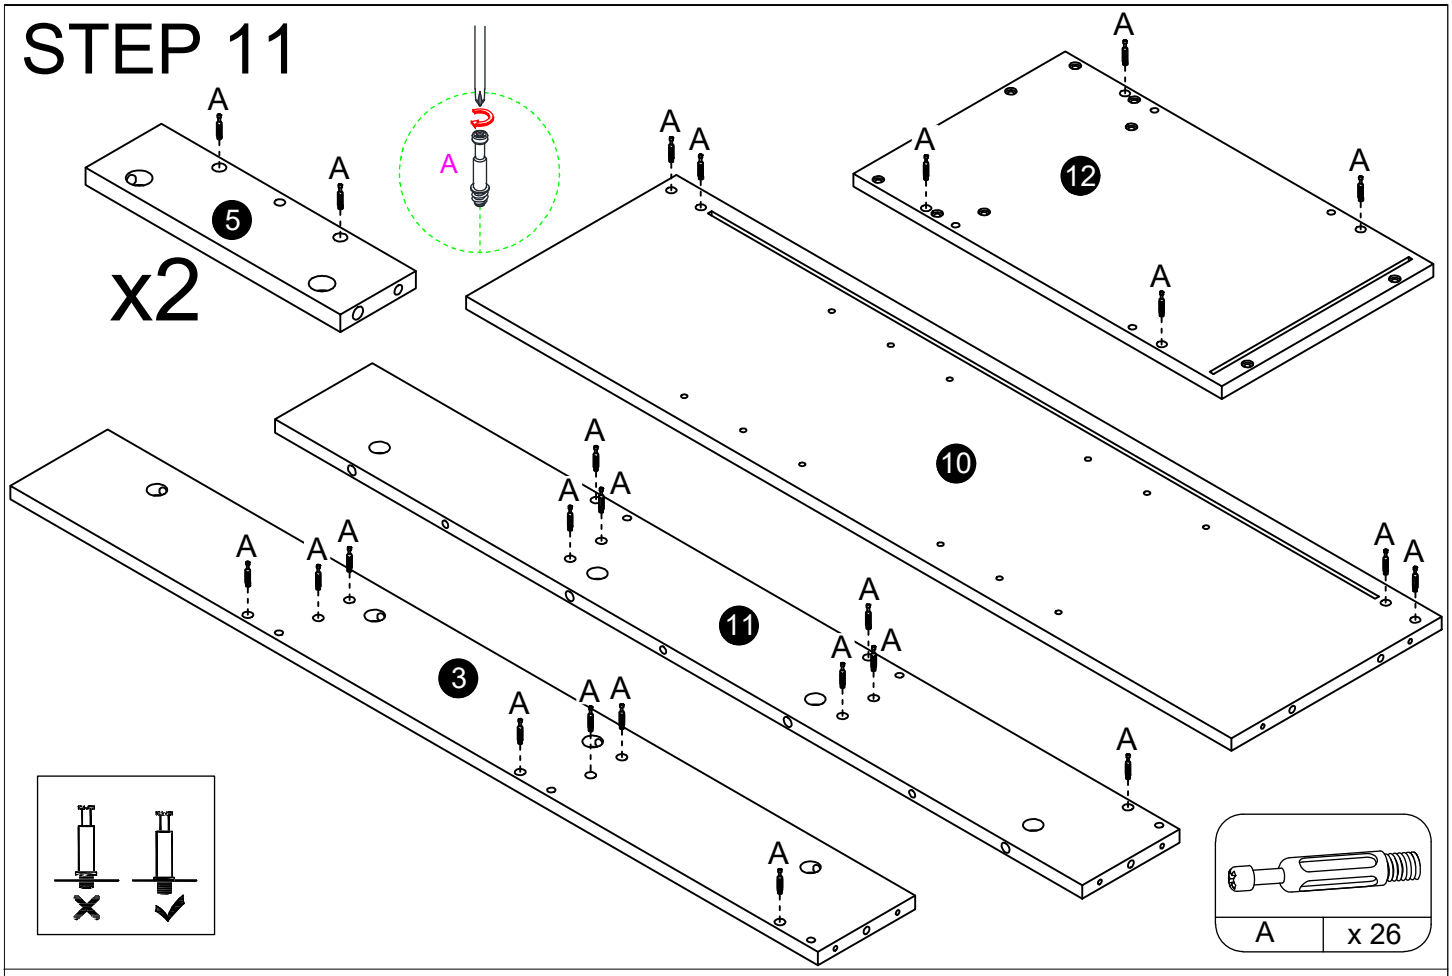



STEP 12

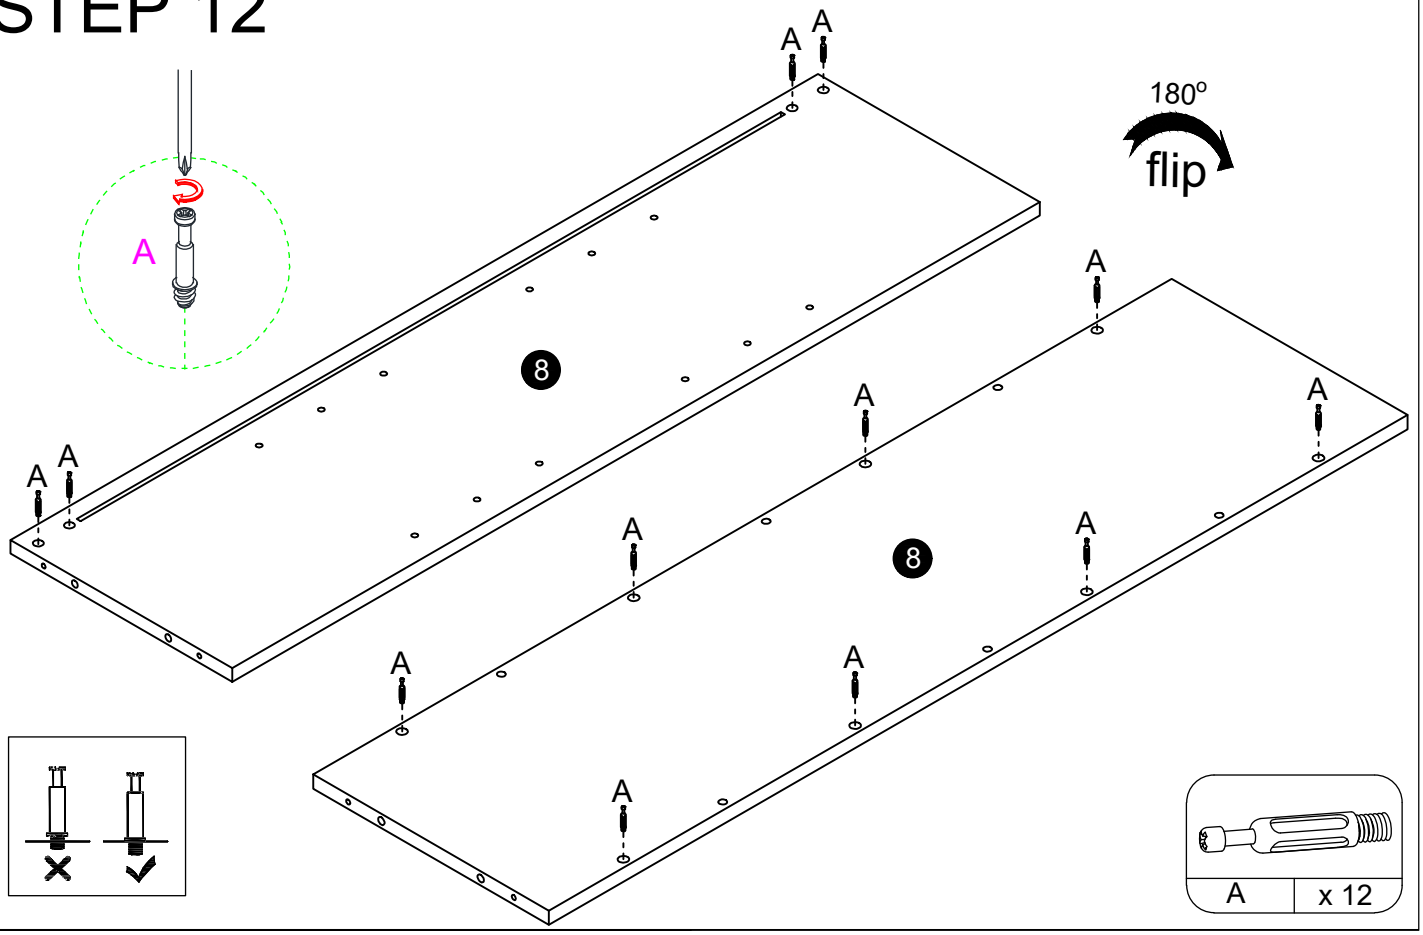


STEP 13

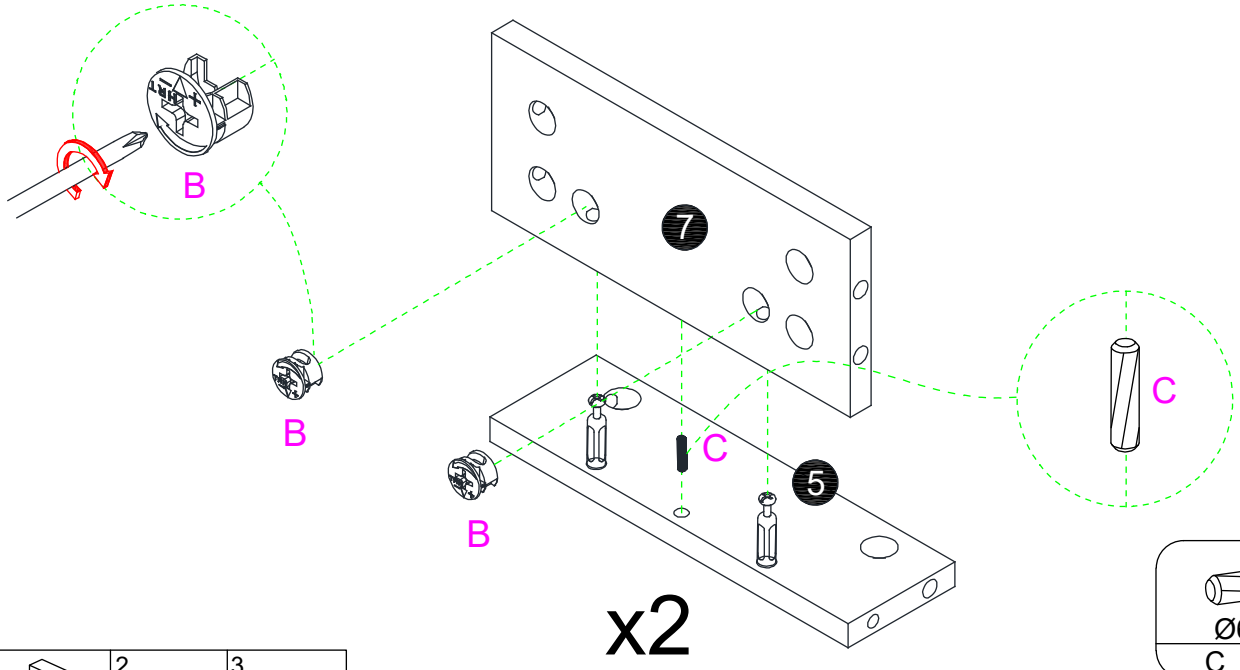


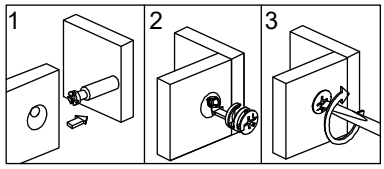


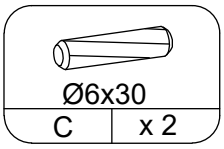


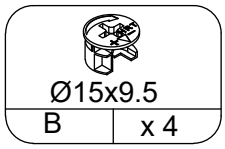



STEP 14

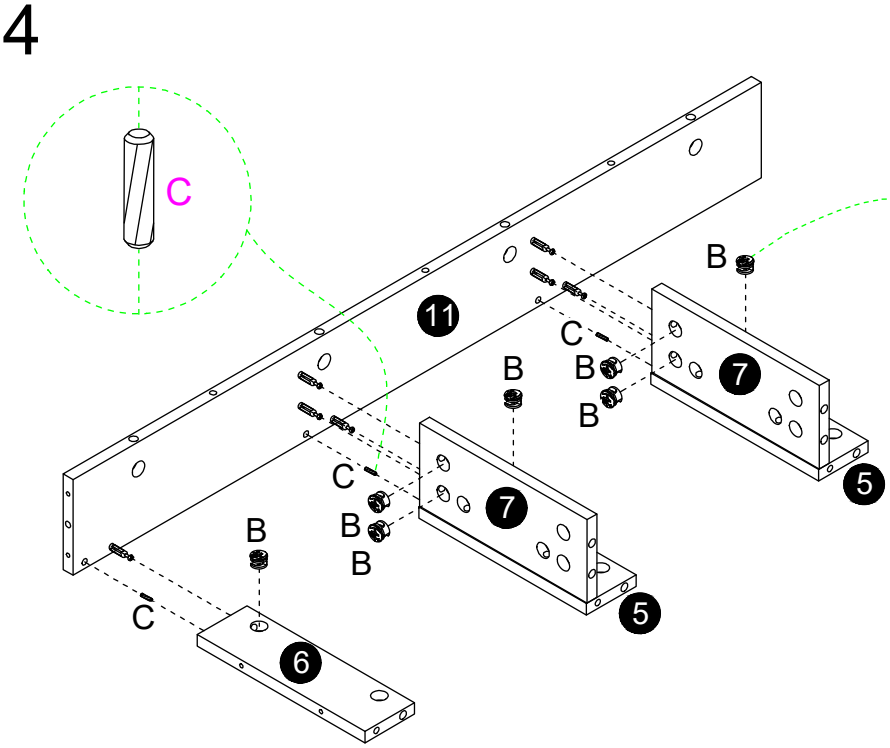

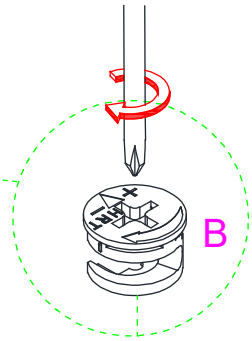


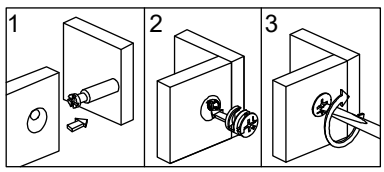


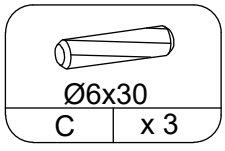


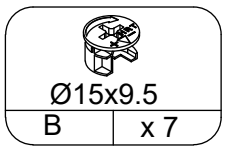



STEP 15

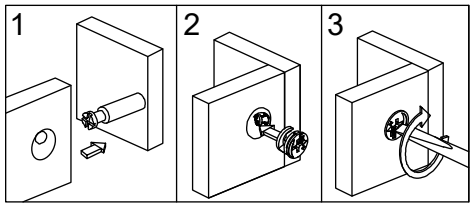


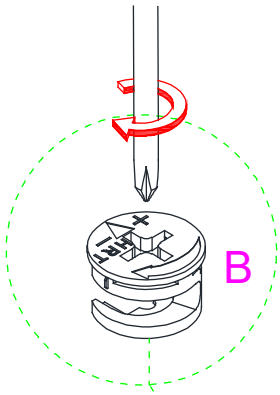


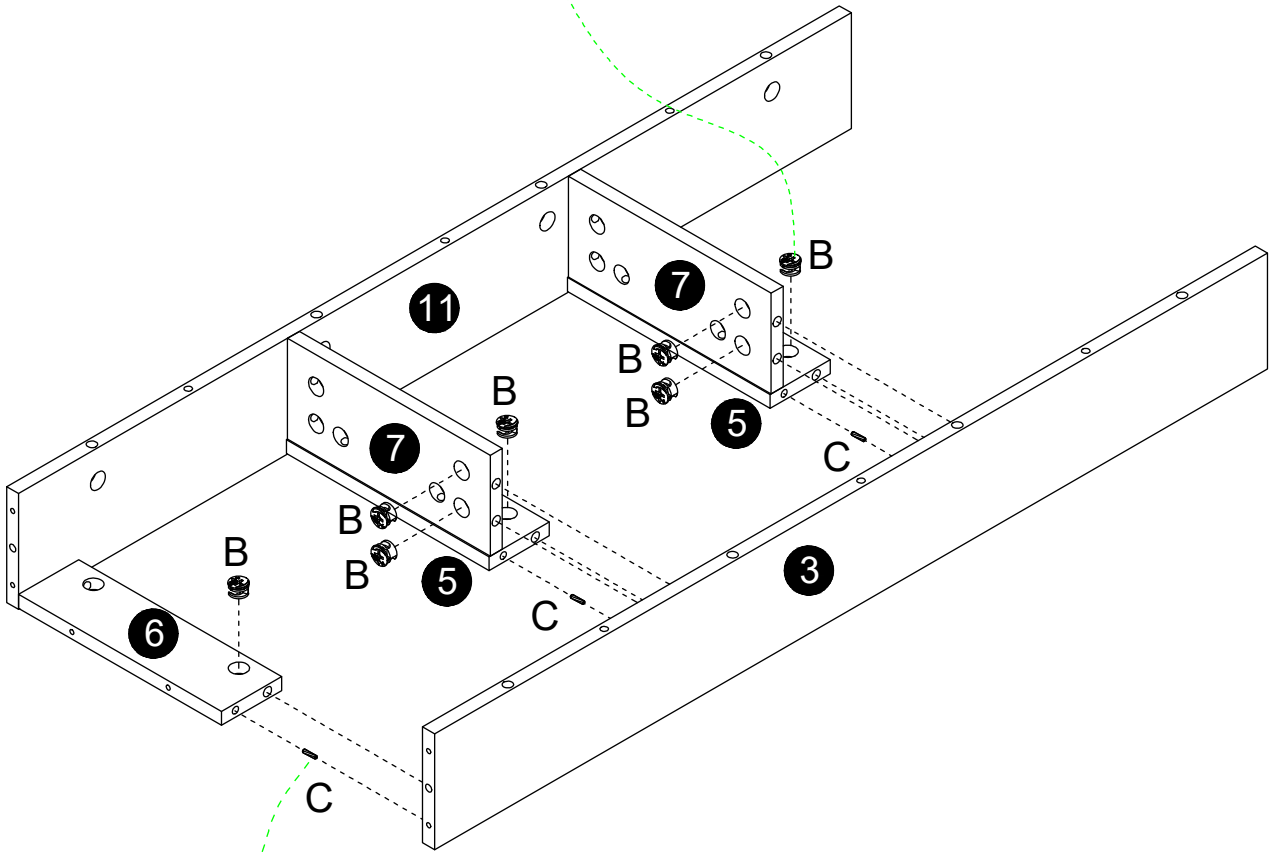

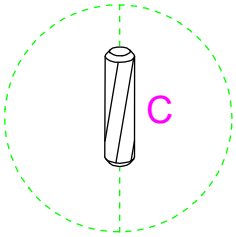

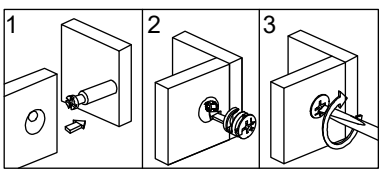


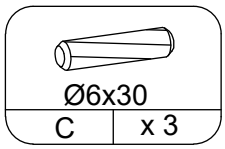

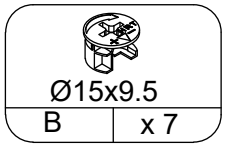


STEP 16

A

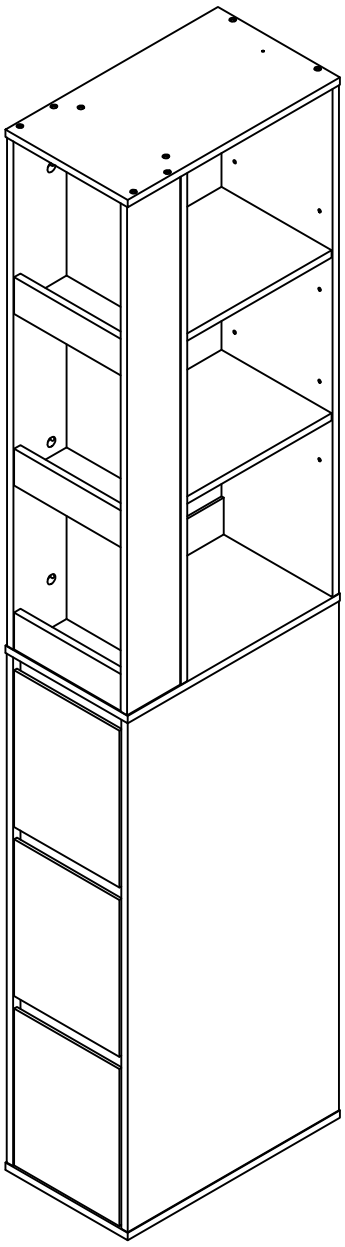

OR

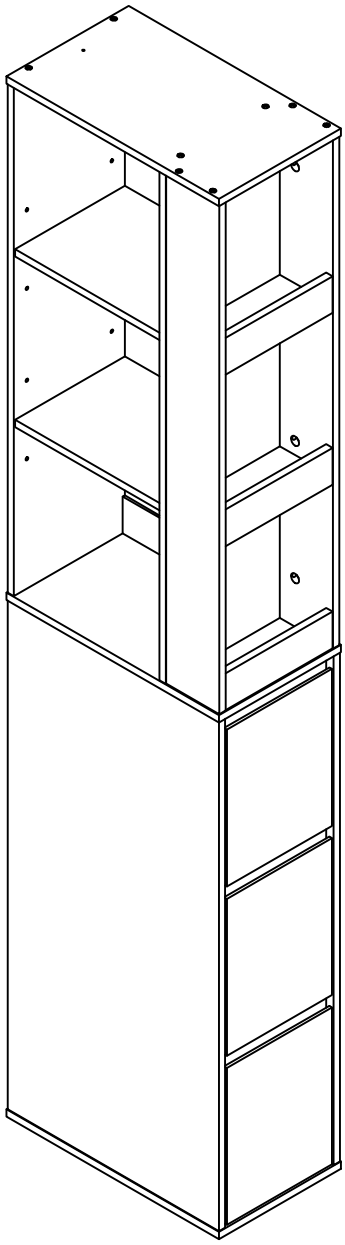



B


If you choose Model A, please carefully follow steps 17 to 29 when installing the upper section.


If you choose Model B, please carefully follow steps 31to 43 when installing the upper section.


STEP 17

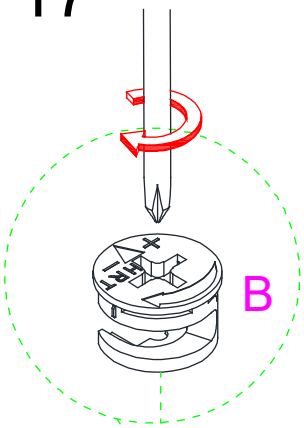

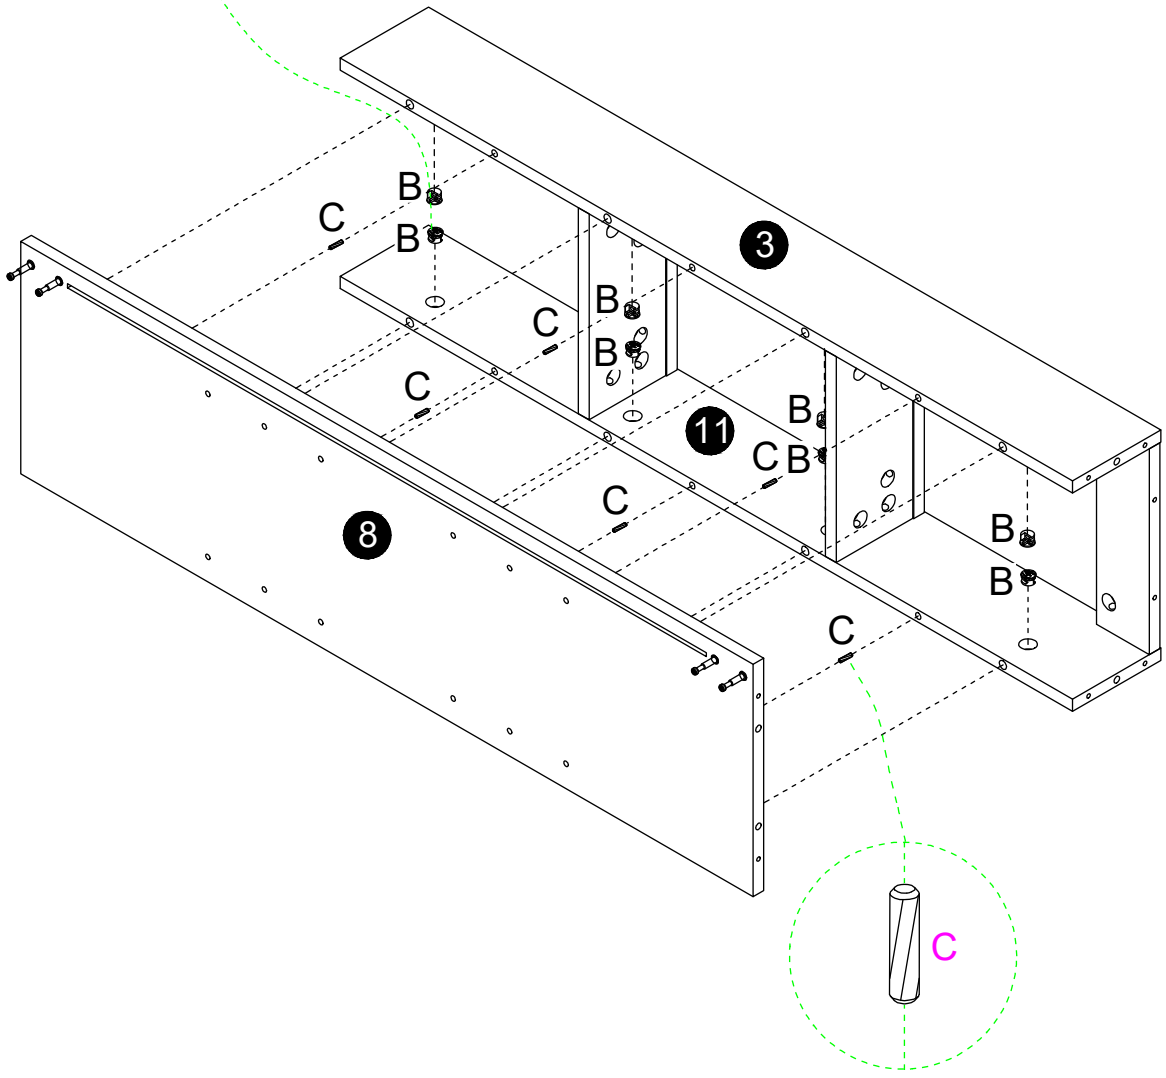


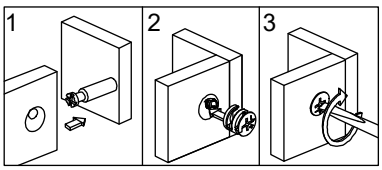

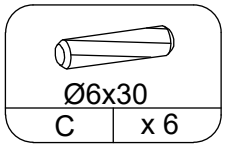


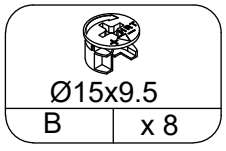


STEP 18

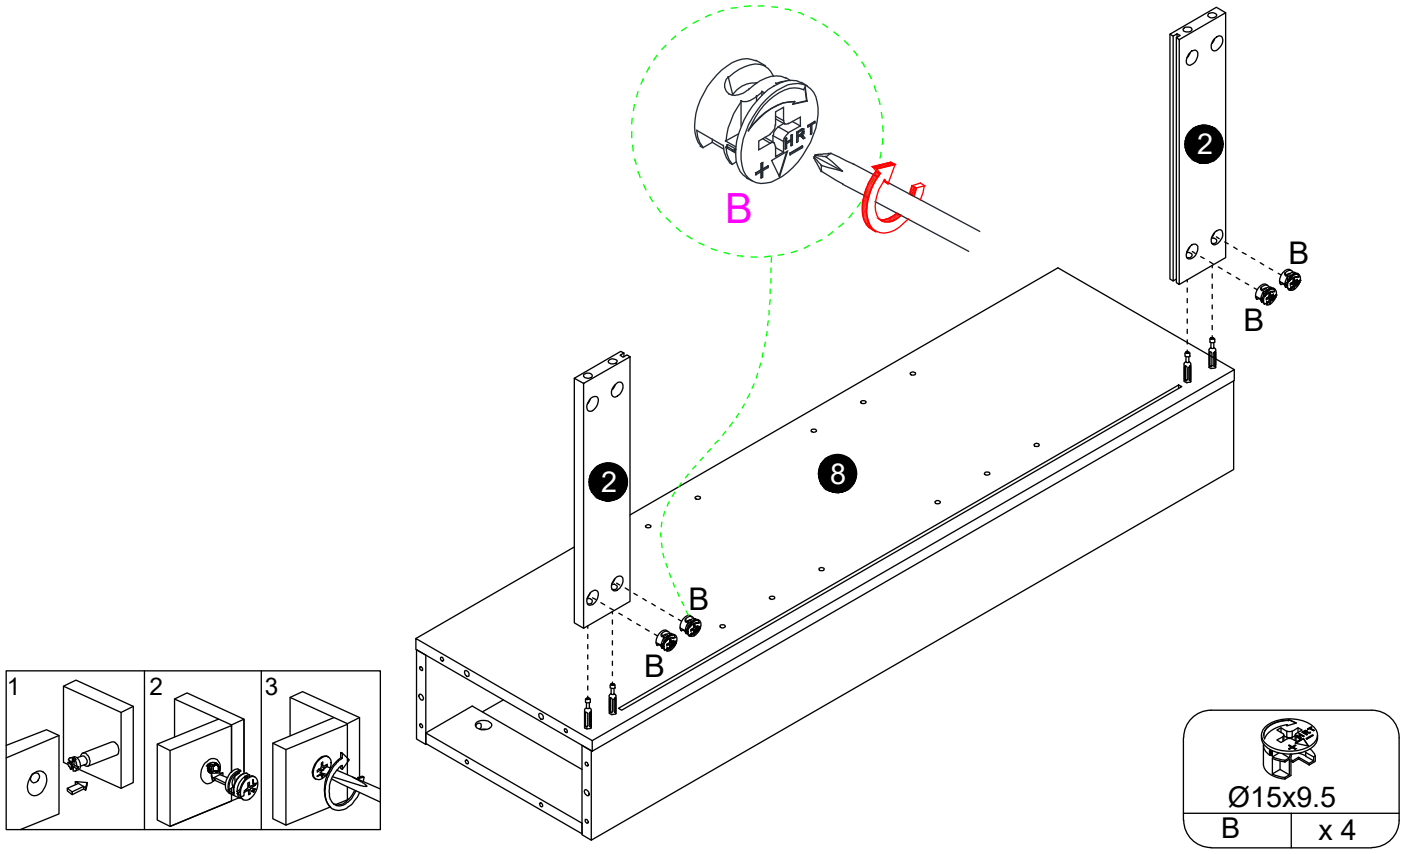



STEP 19

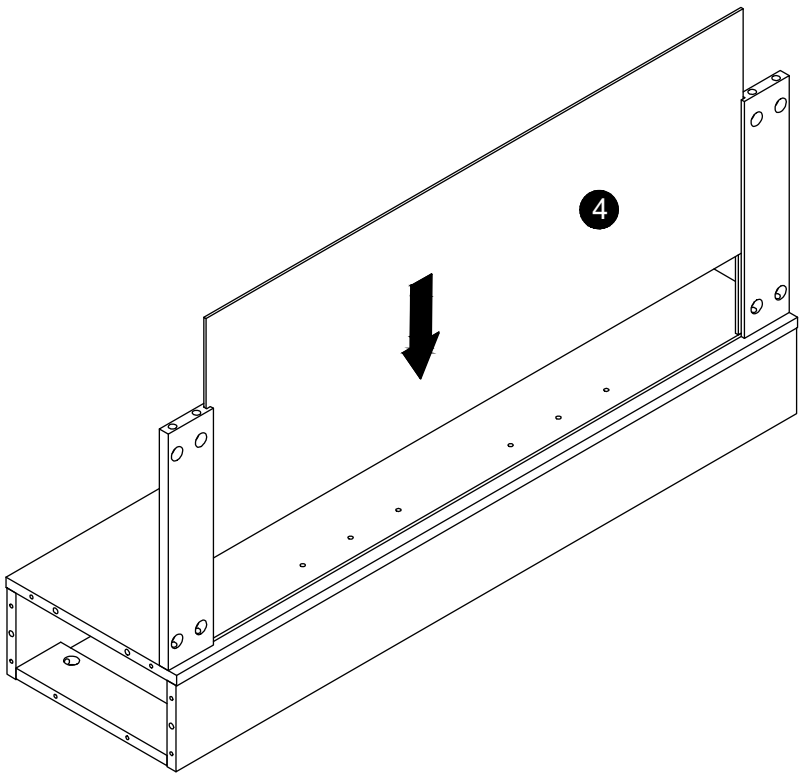


STEP 20

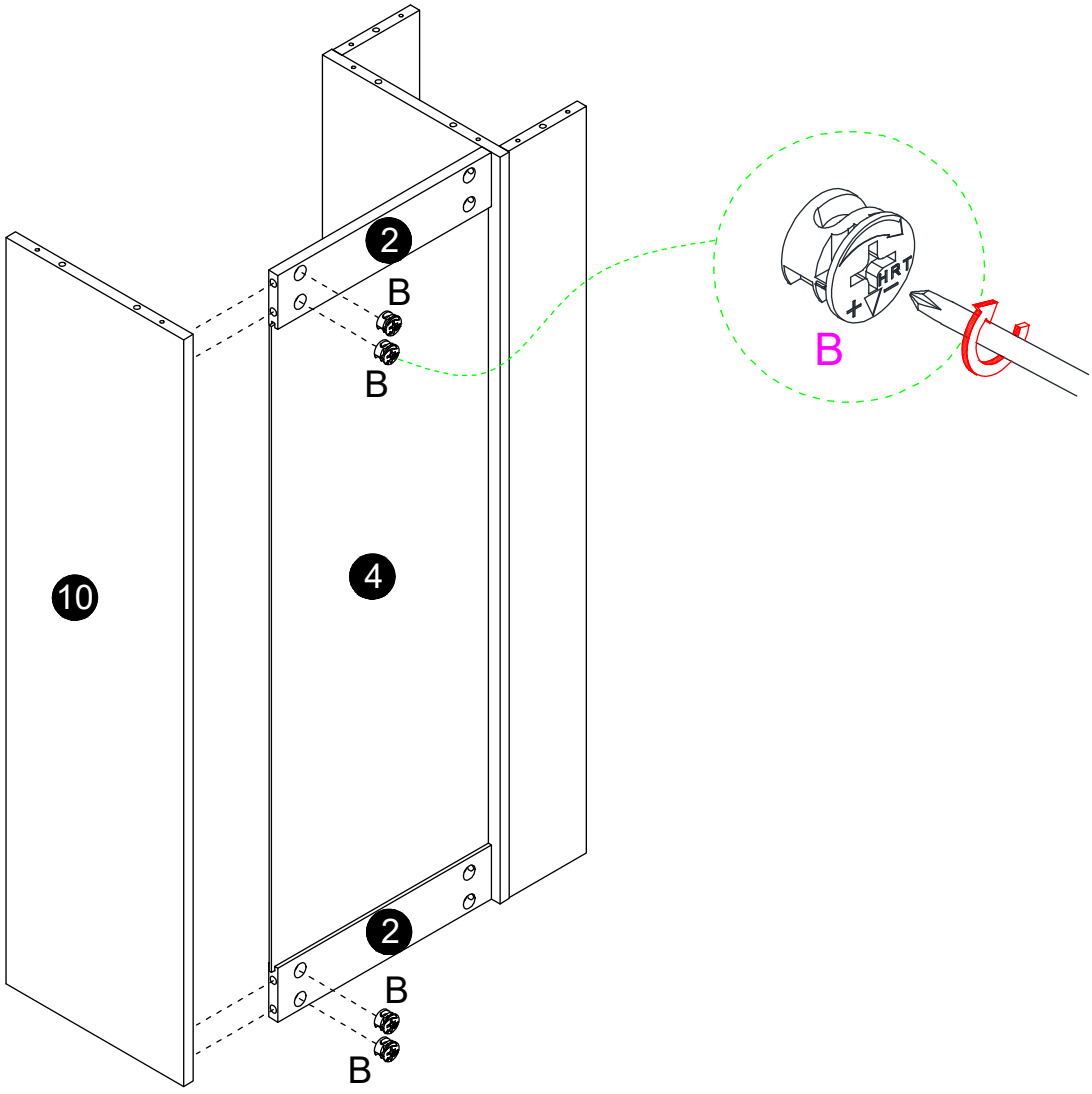

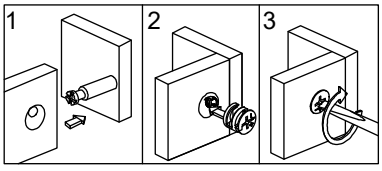

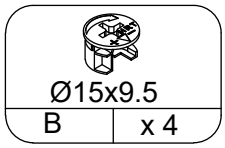


STEP 21

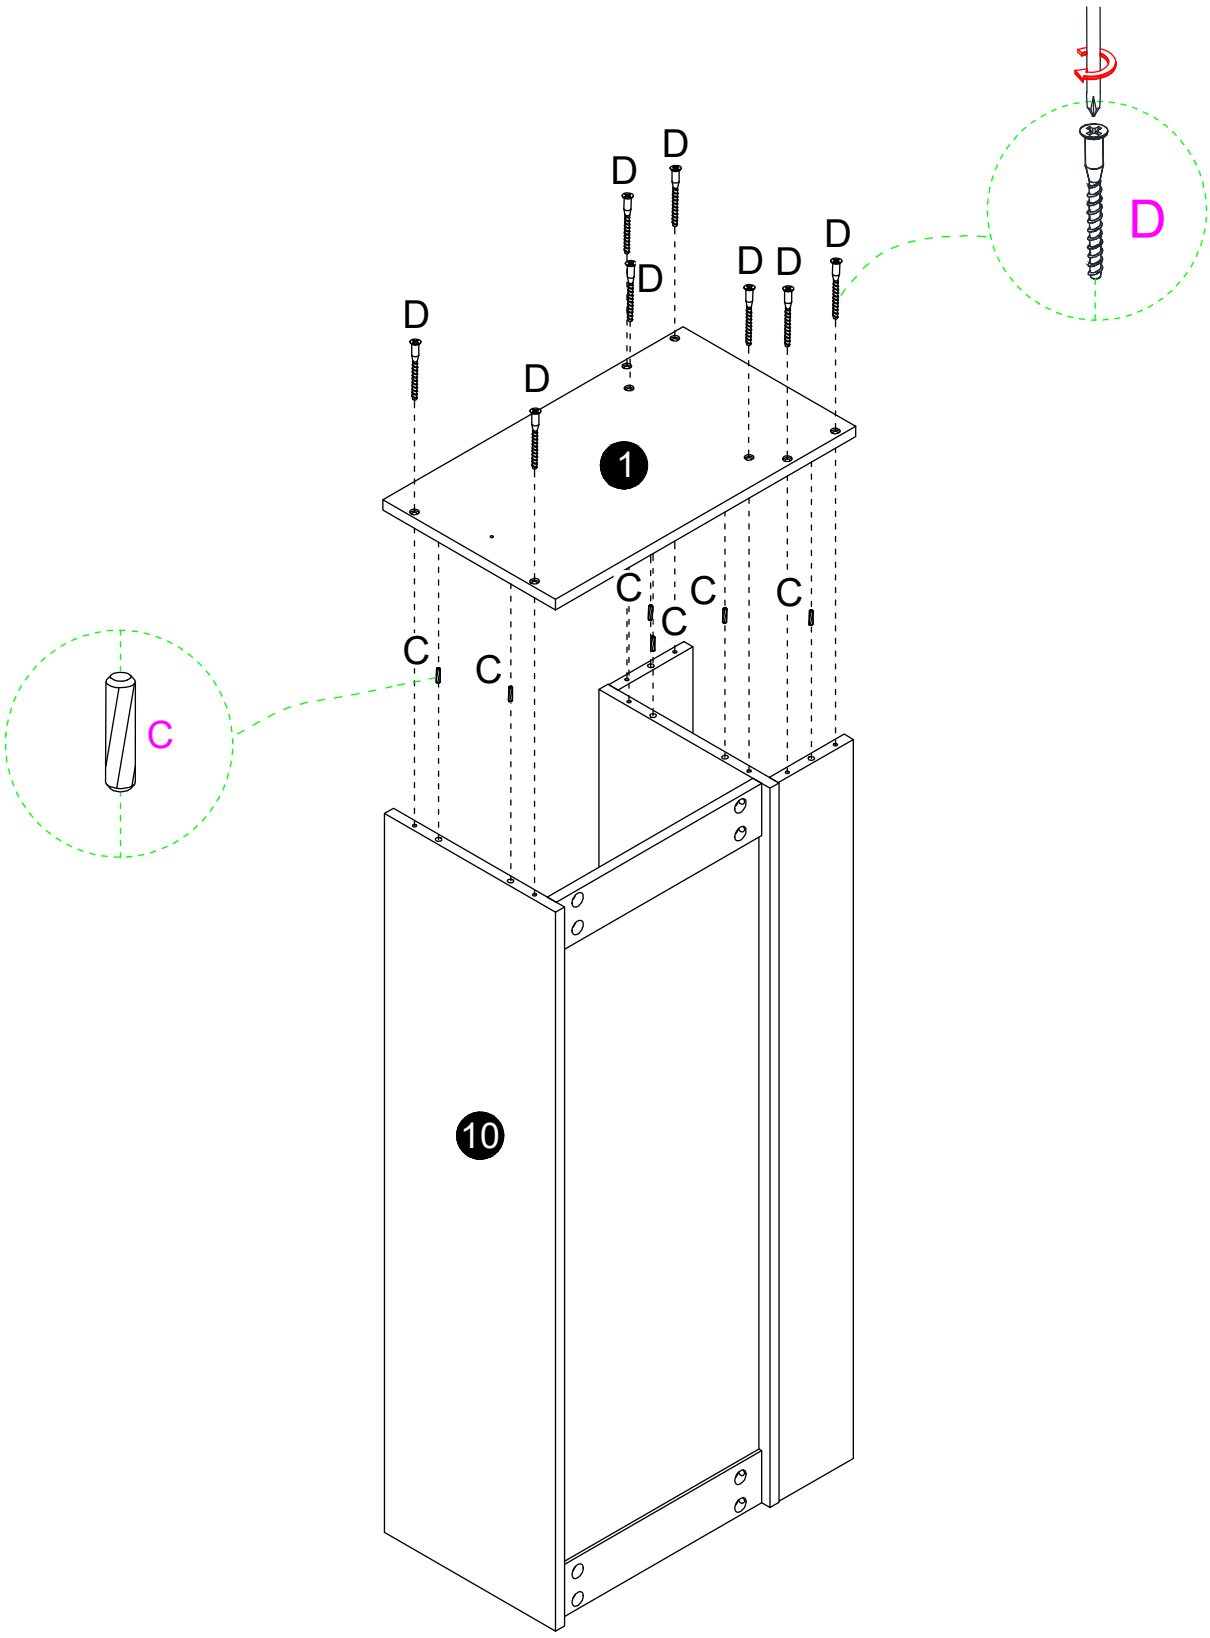


Ø6x30	
C	x6


Ø5x40	
D	x 8

STEP 22

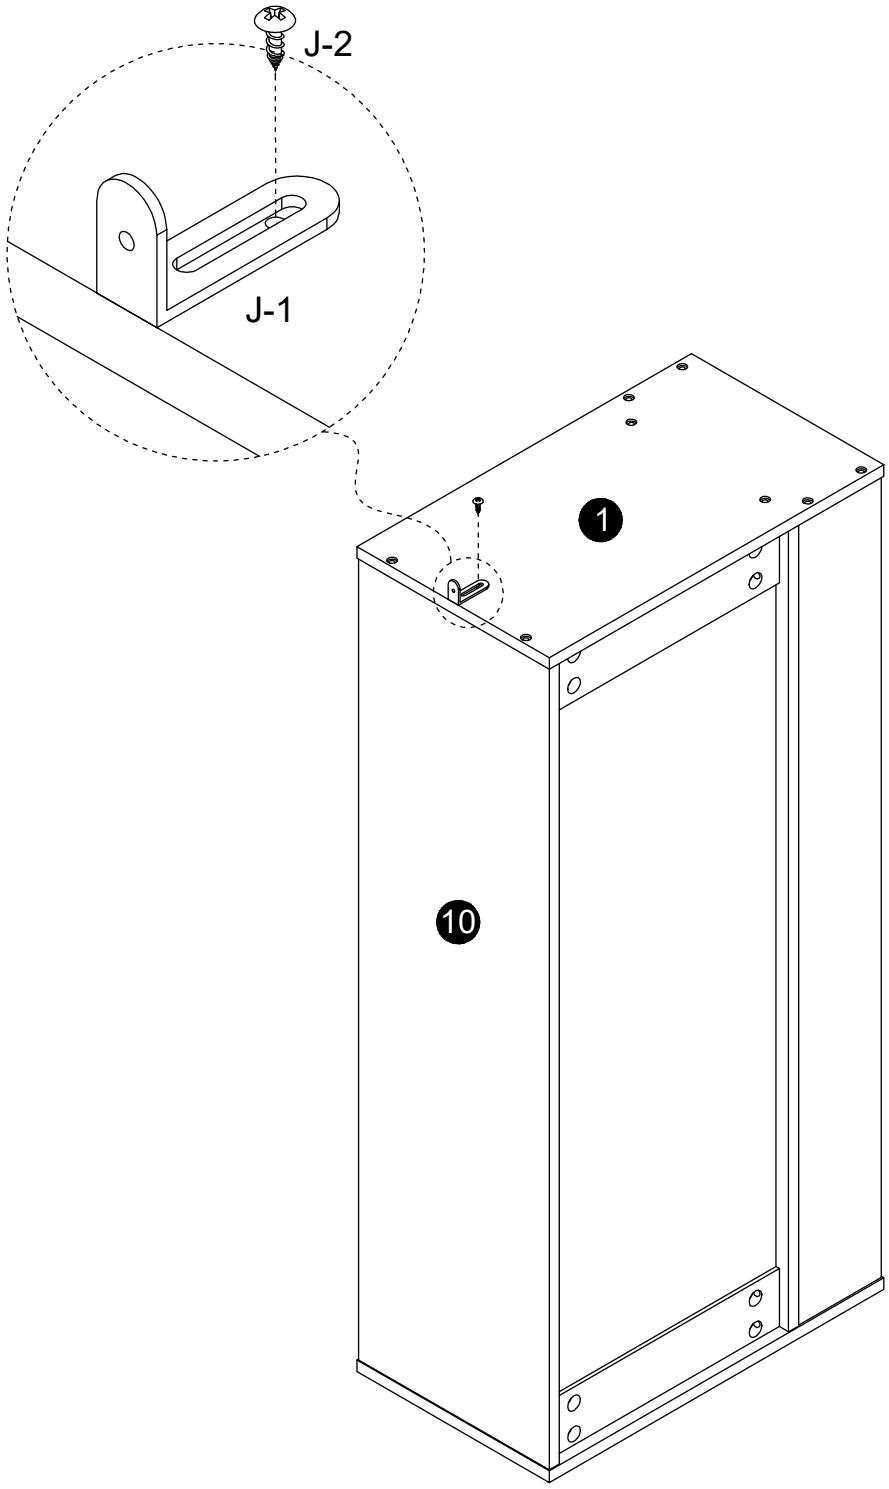

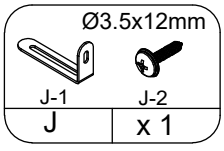


STEP 23

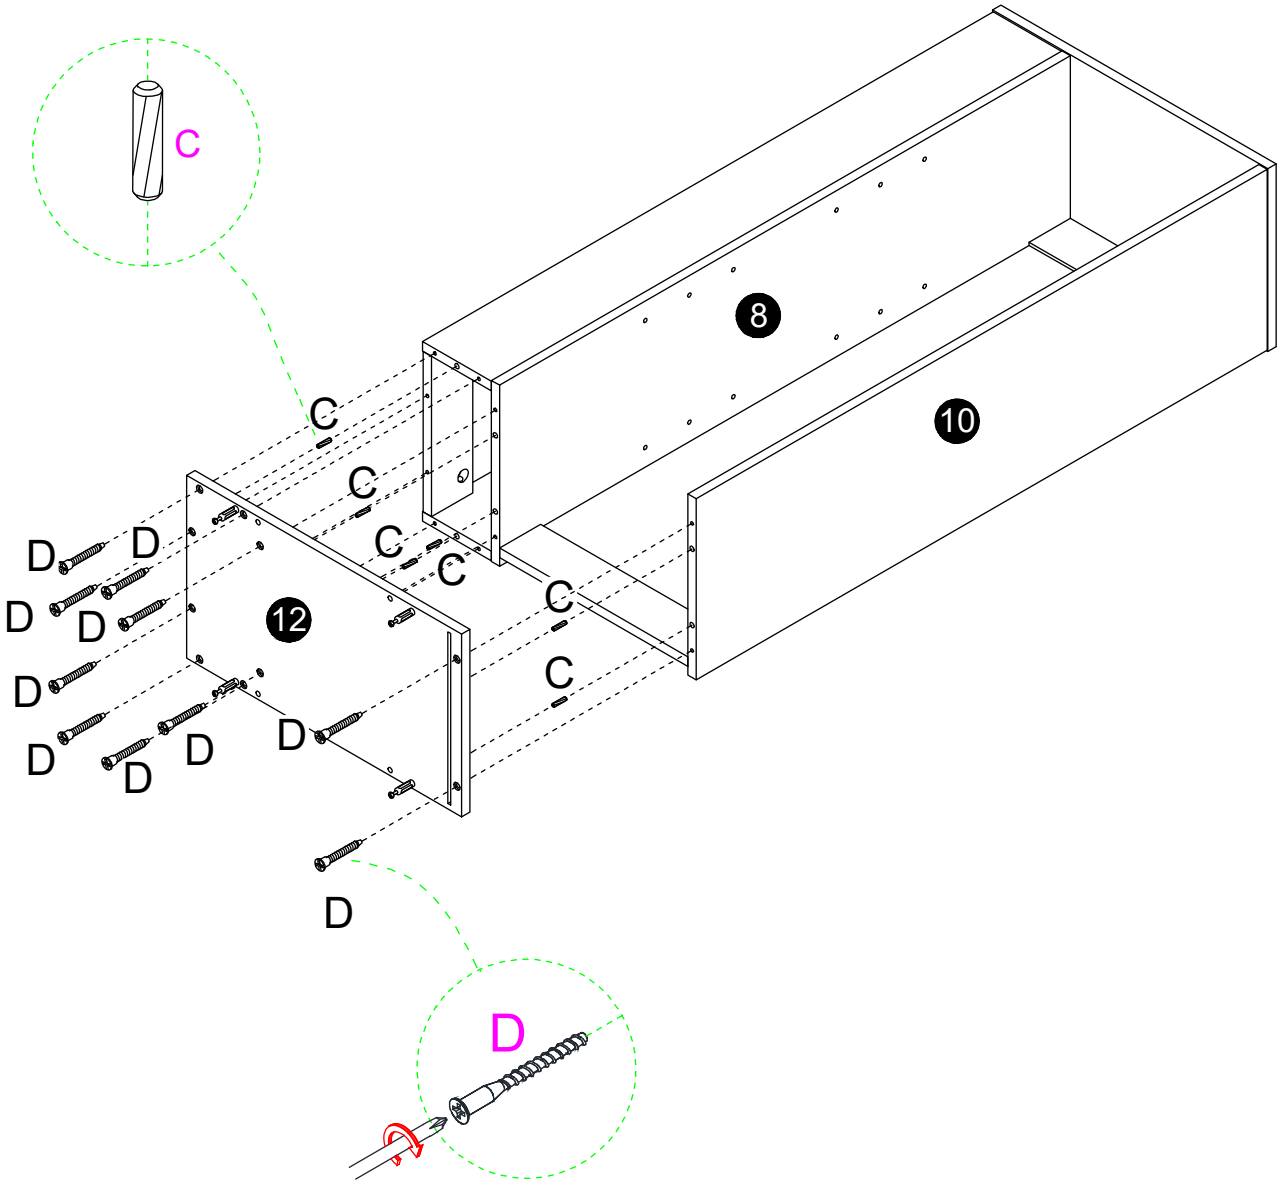


Ø6x30	
C	x6


Ø5x40	
D	x 10

STEP 24

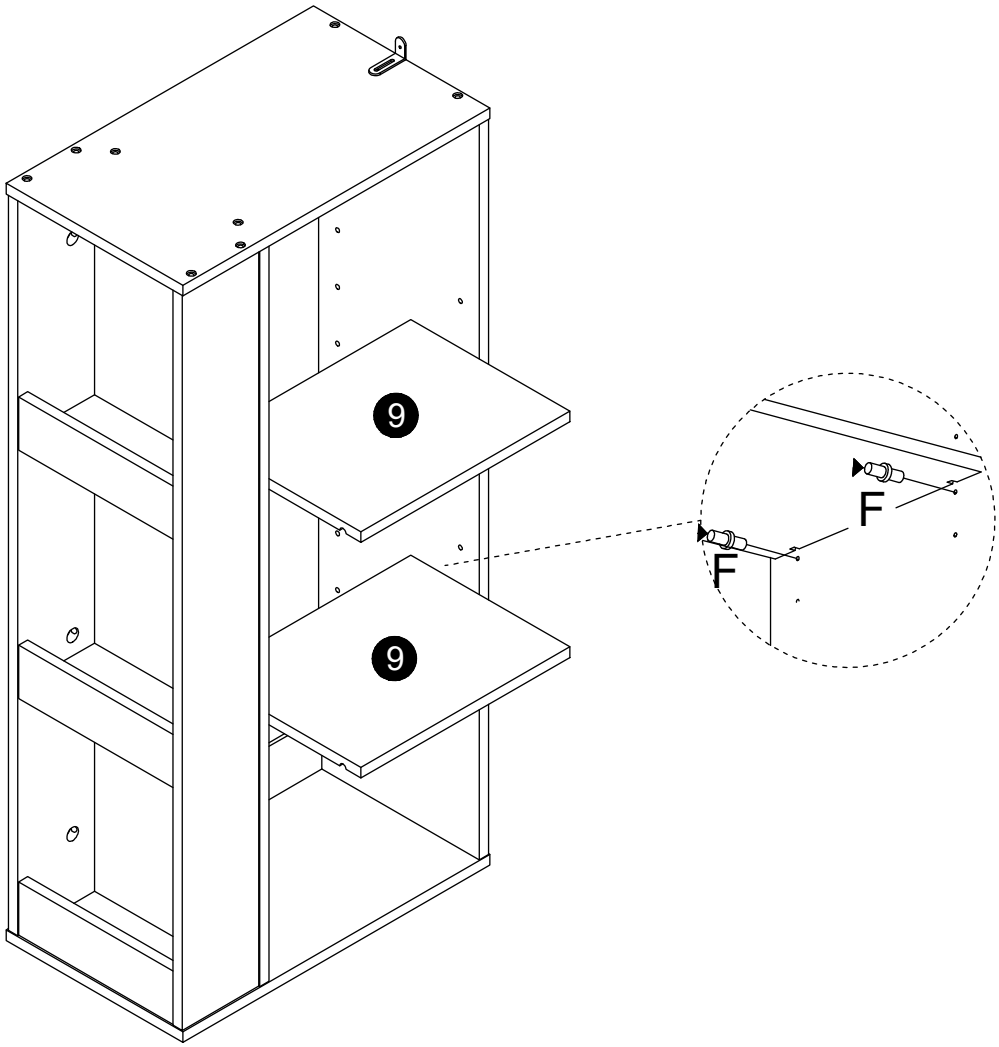

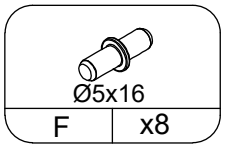

STEP 25

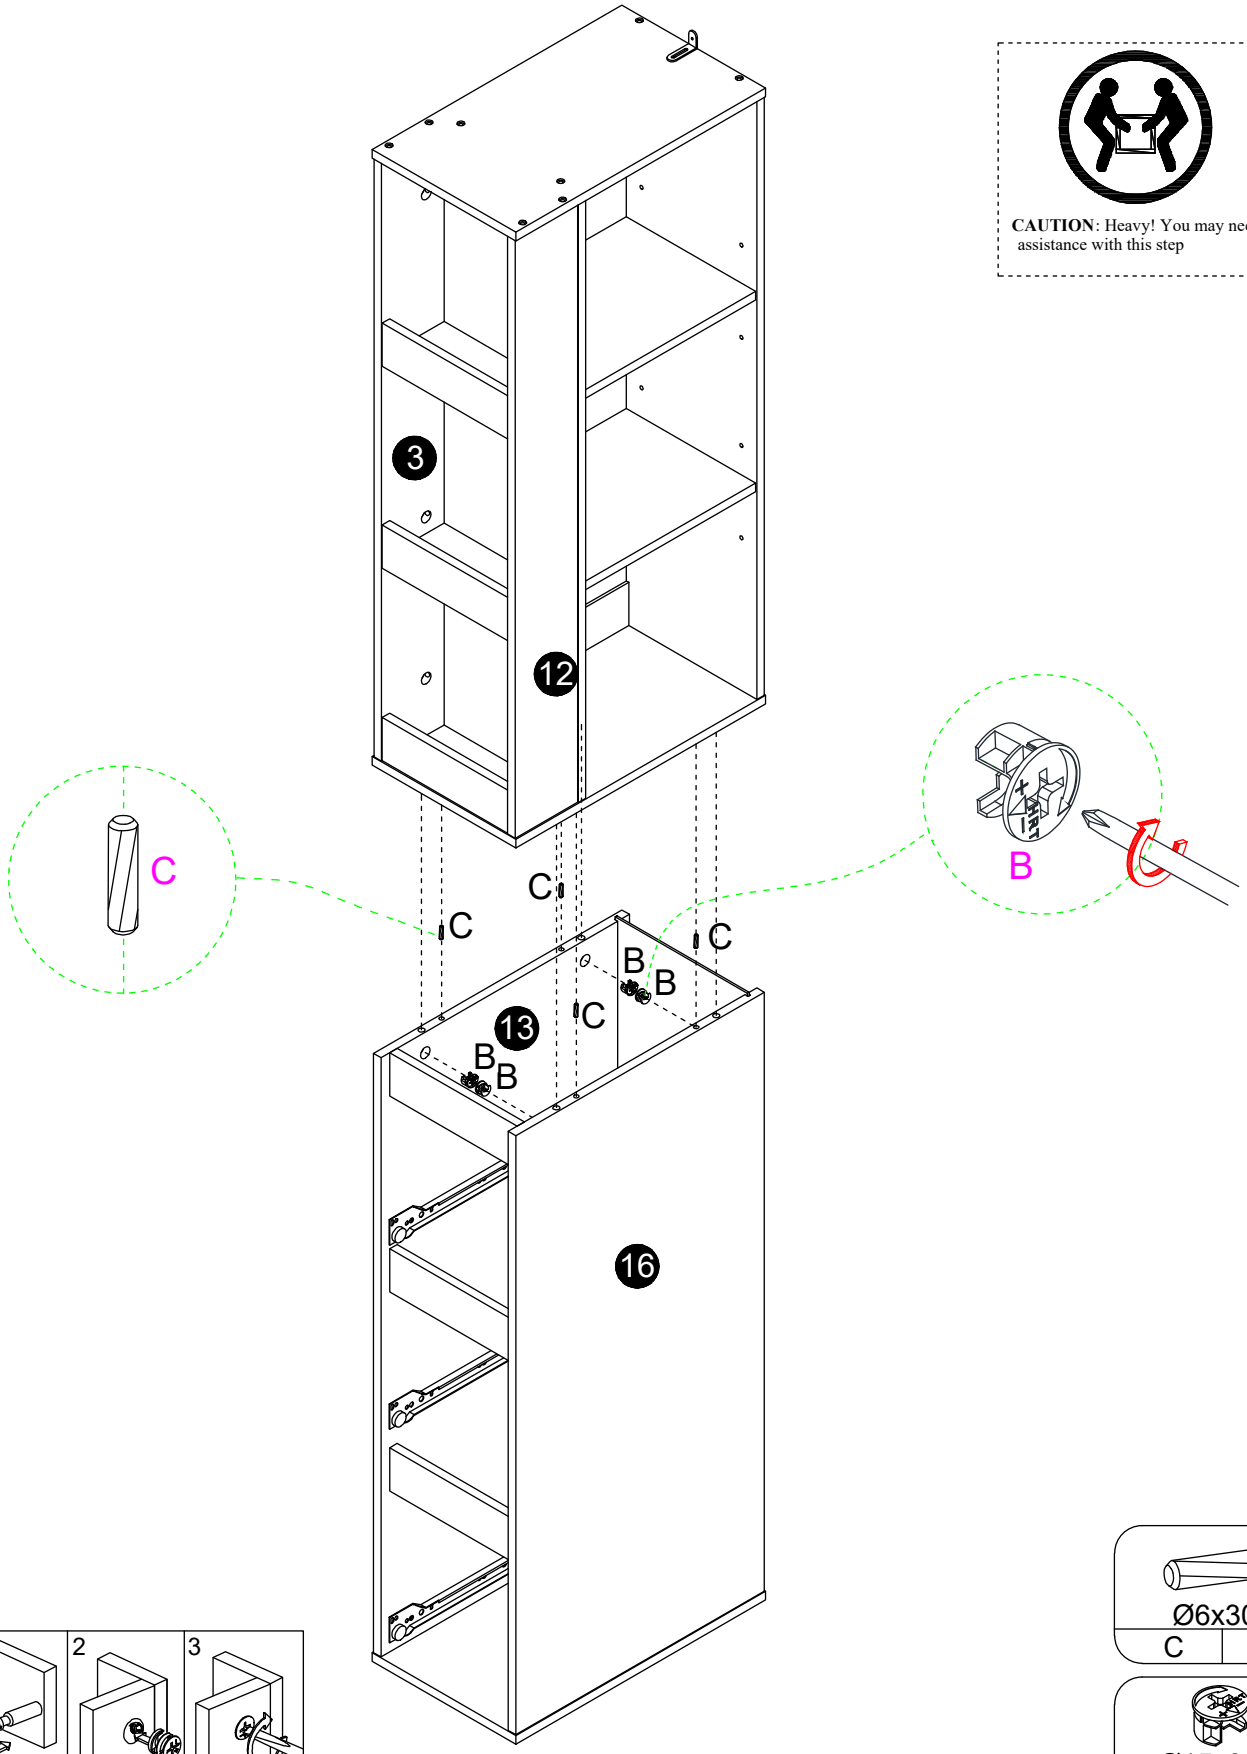


CAUTION: Heavy! You may need assistance with this step

Ø6x30	
C	x 4


Ø15x9.5	
B	x 4


STEP 26

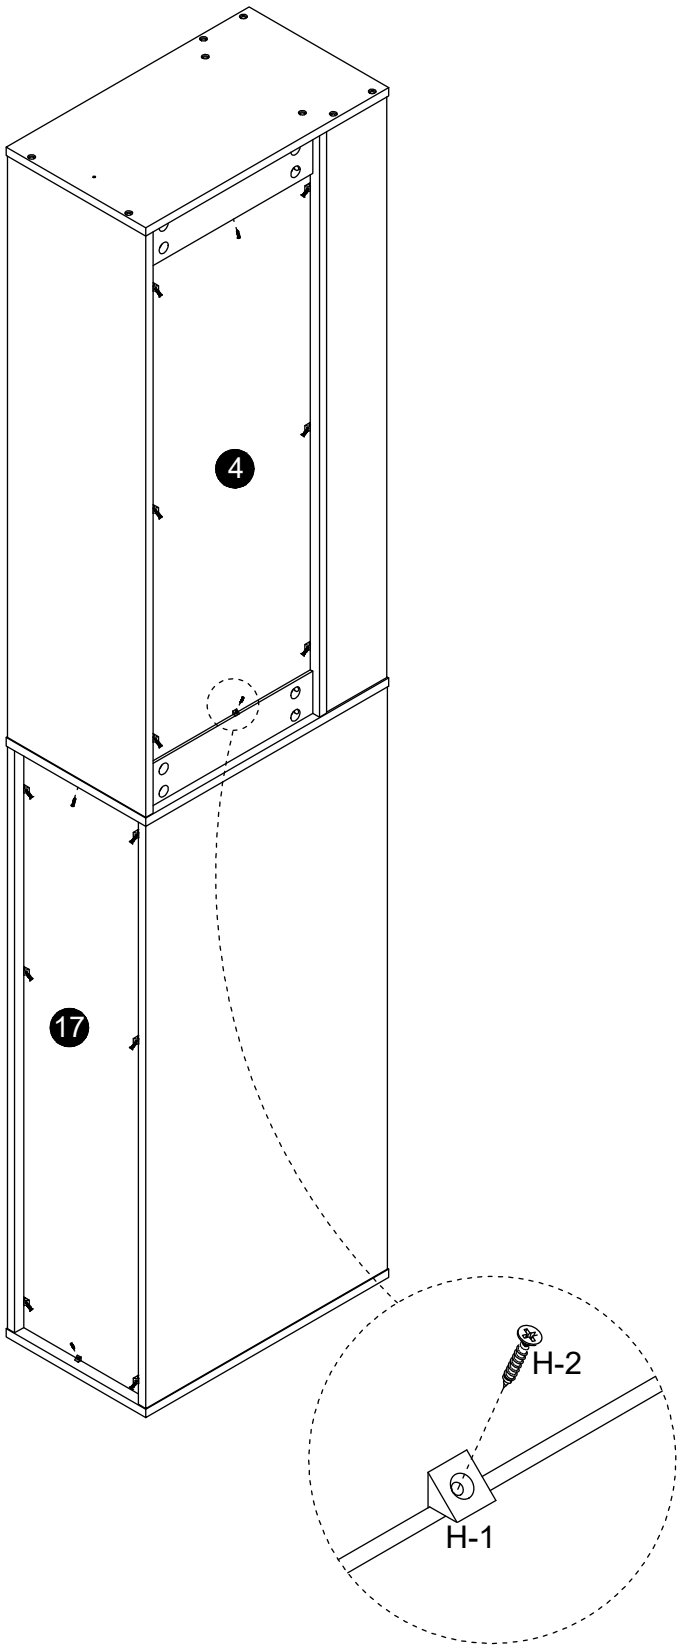

H-1	H-2
H	x 16


STEP 27

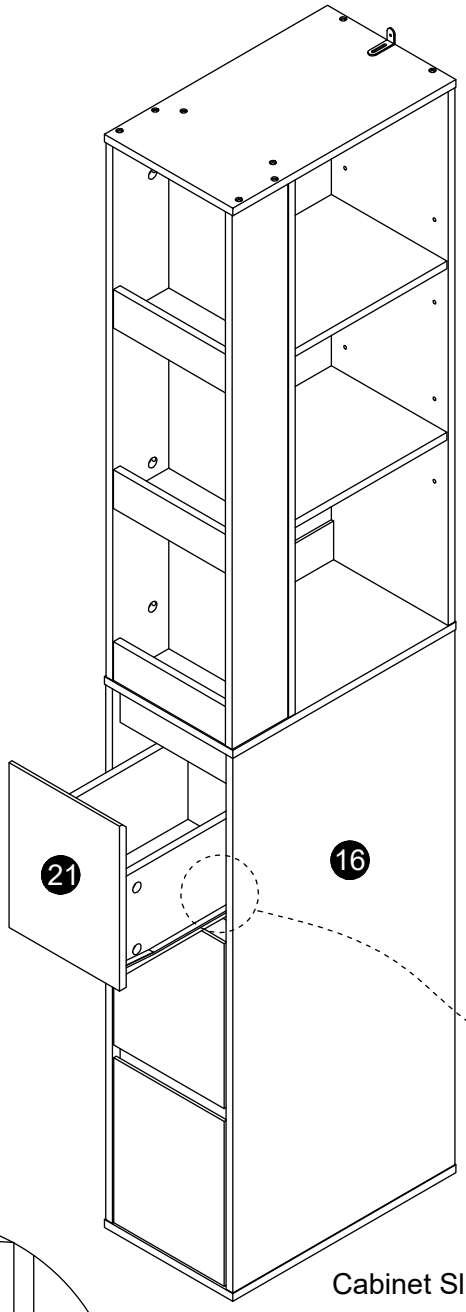


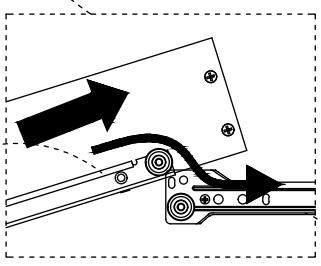


Cabinet Slide arms


Drawer Slide brackets

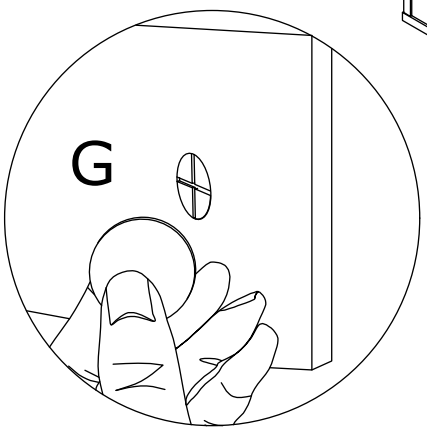

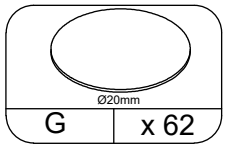



STEP 28

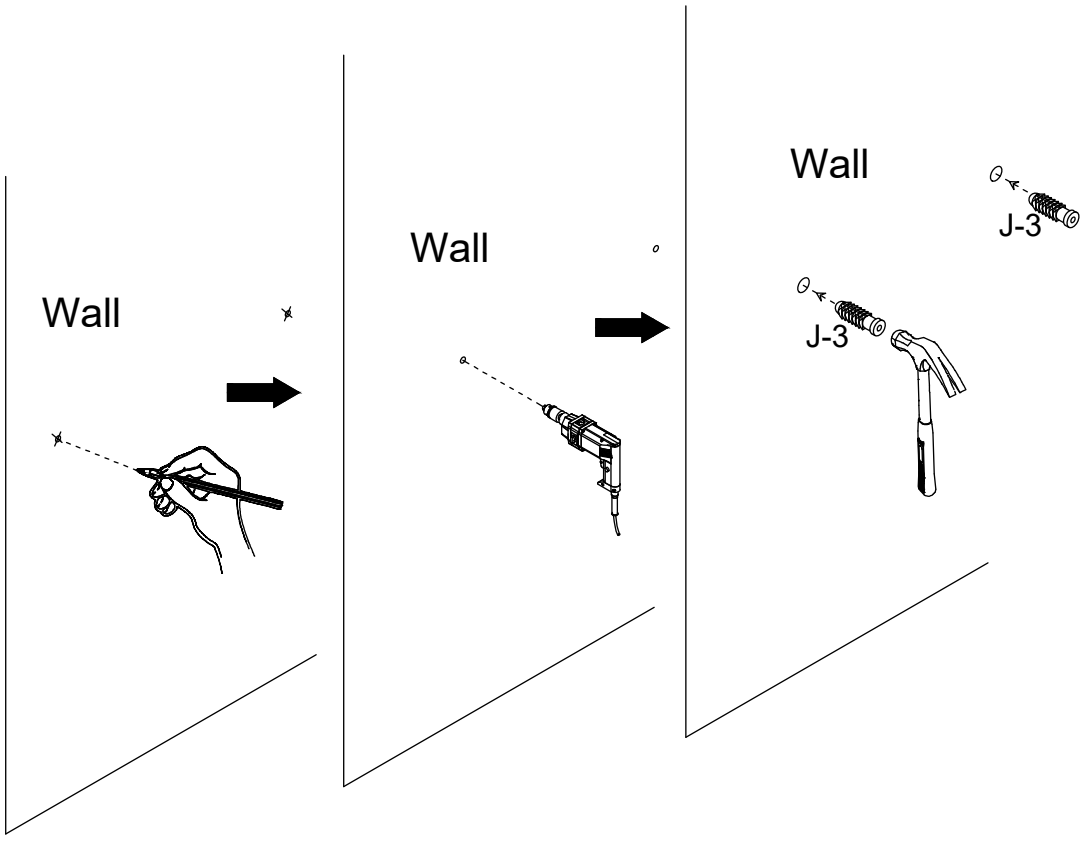

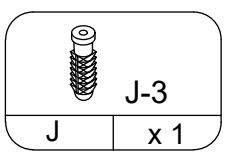


STEP 29

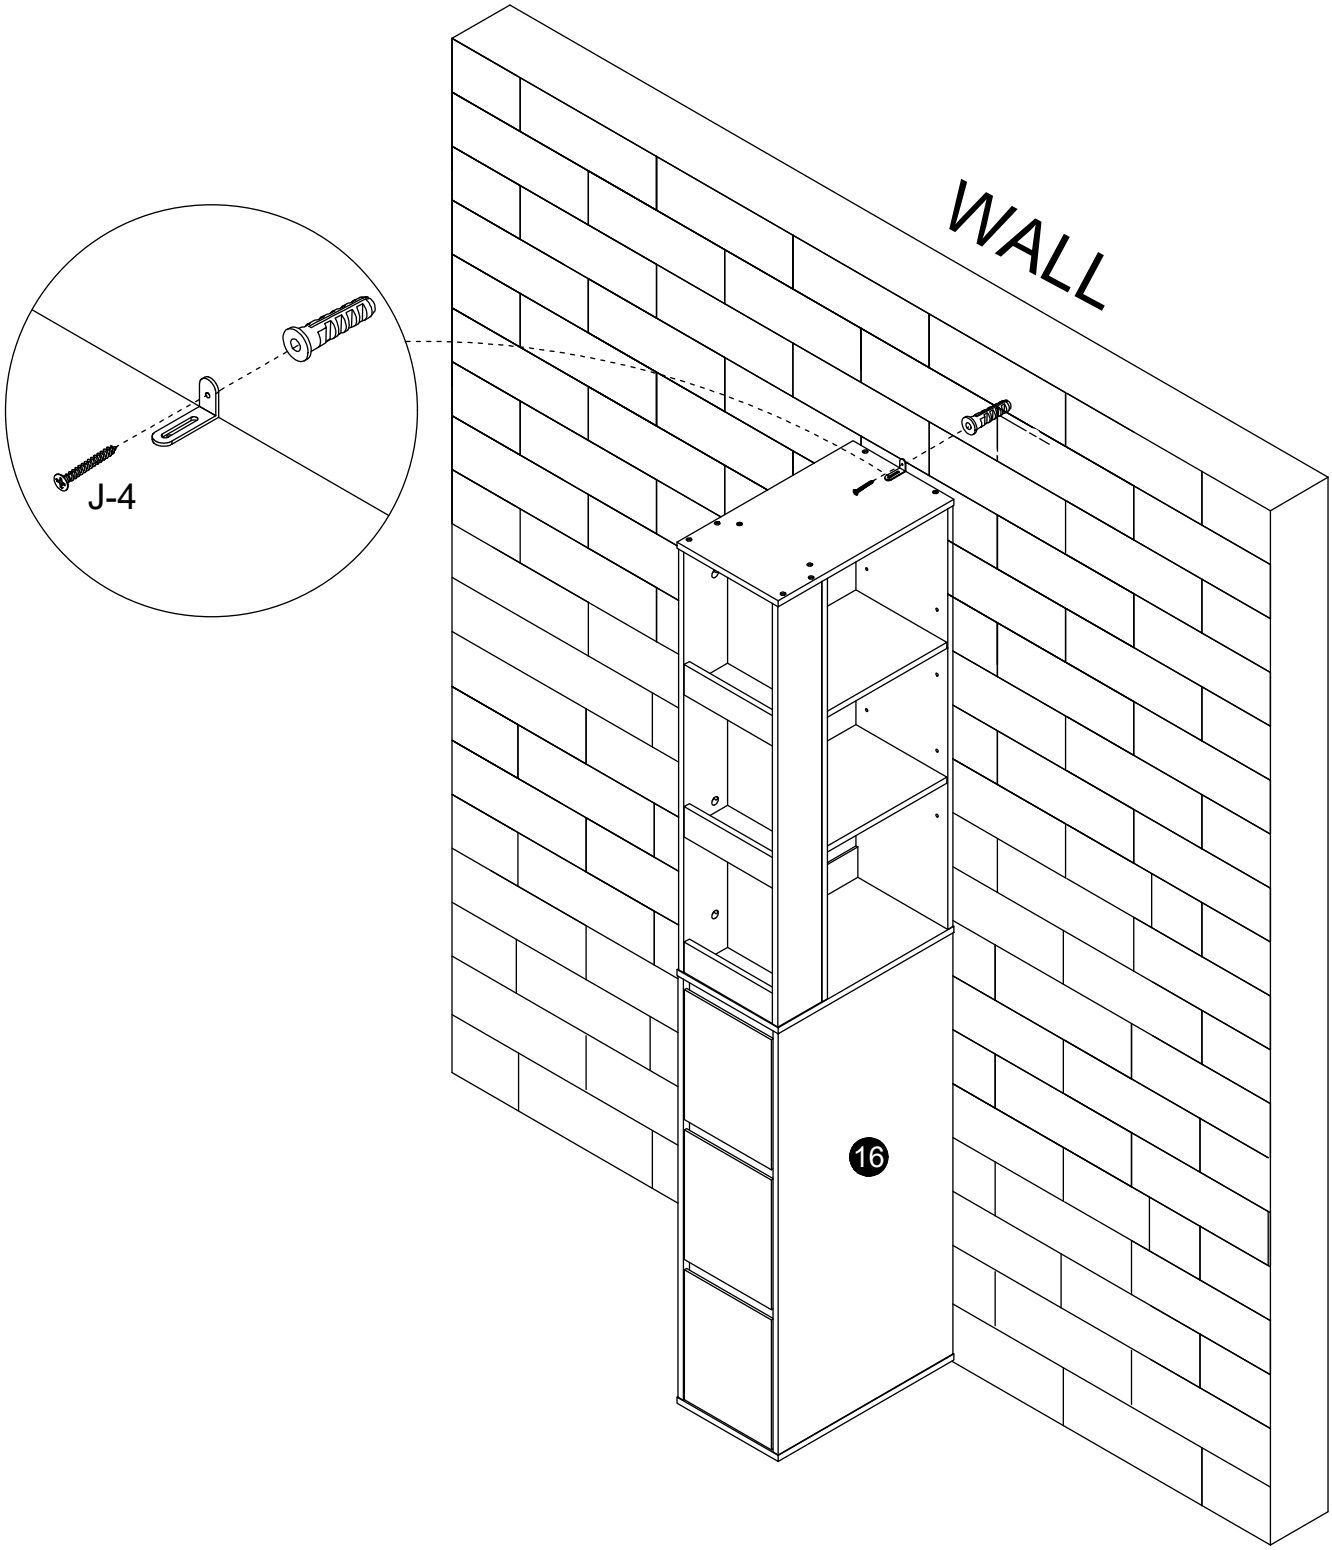

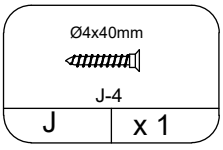


STEP 30

A

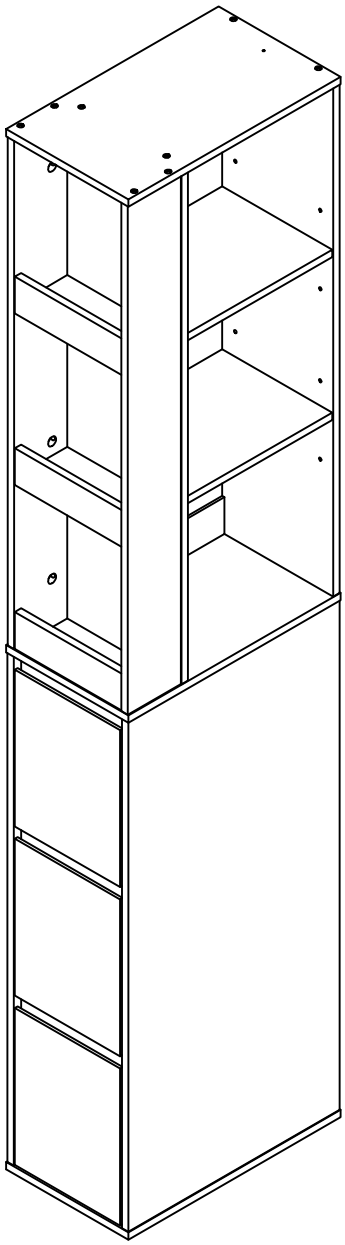

OR

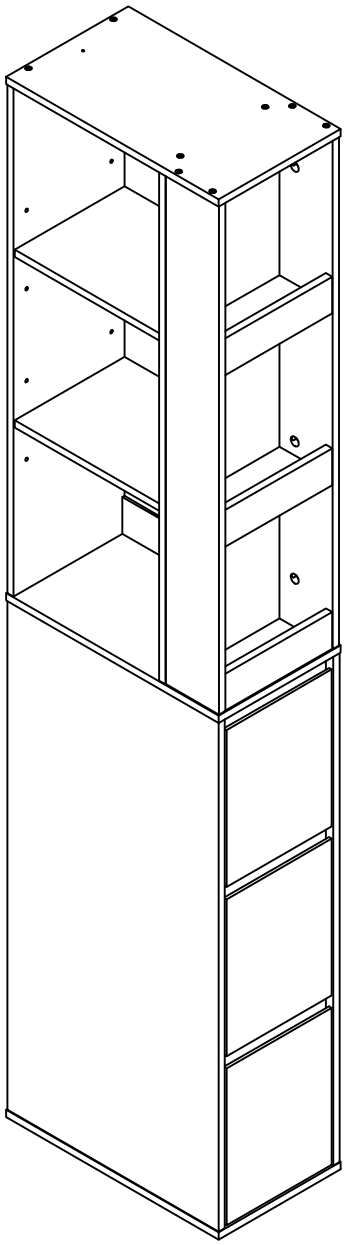



B


If you choose Model A, please carefully follow steps 17 to 29 when installing the upper section.

If you choose Model B, please carefully follow steps 31to 43 when installing the upper section.

STEP 31

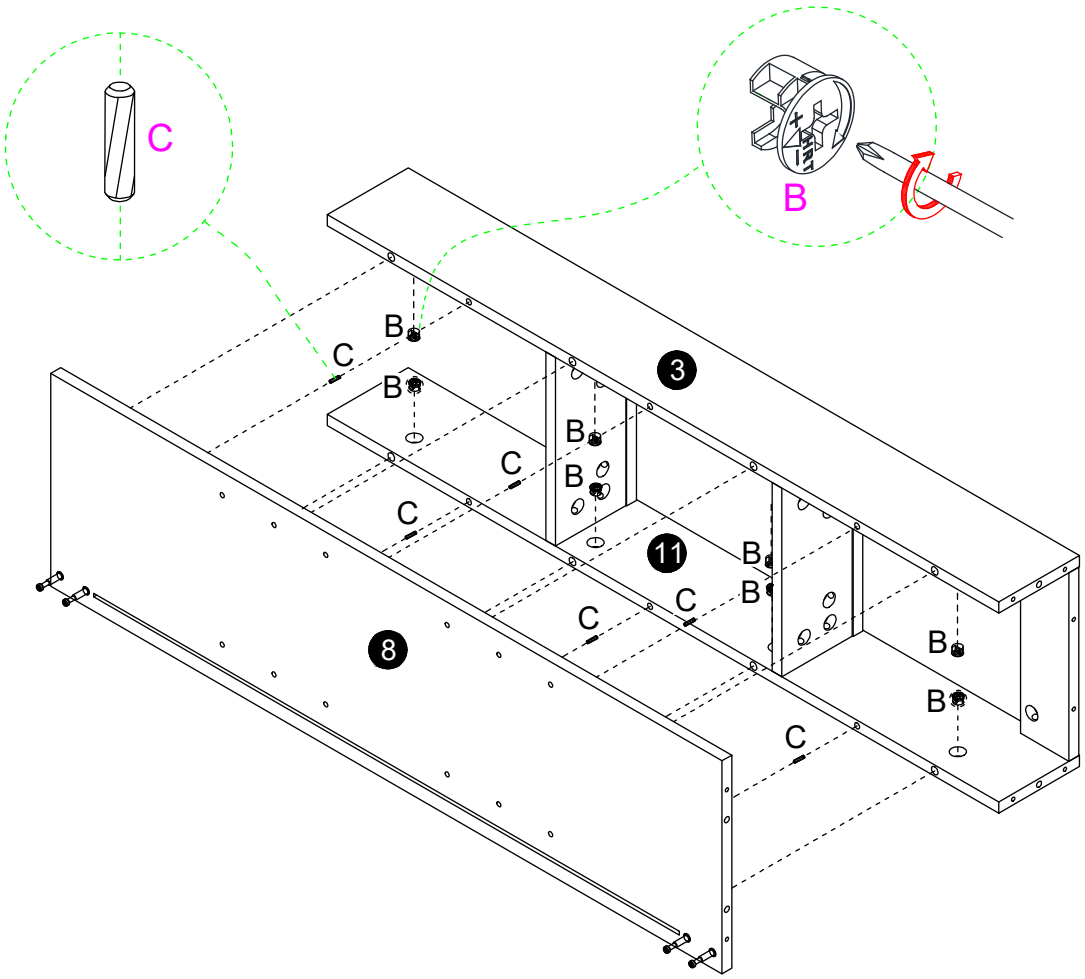


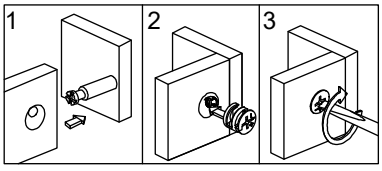








STEP 32

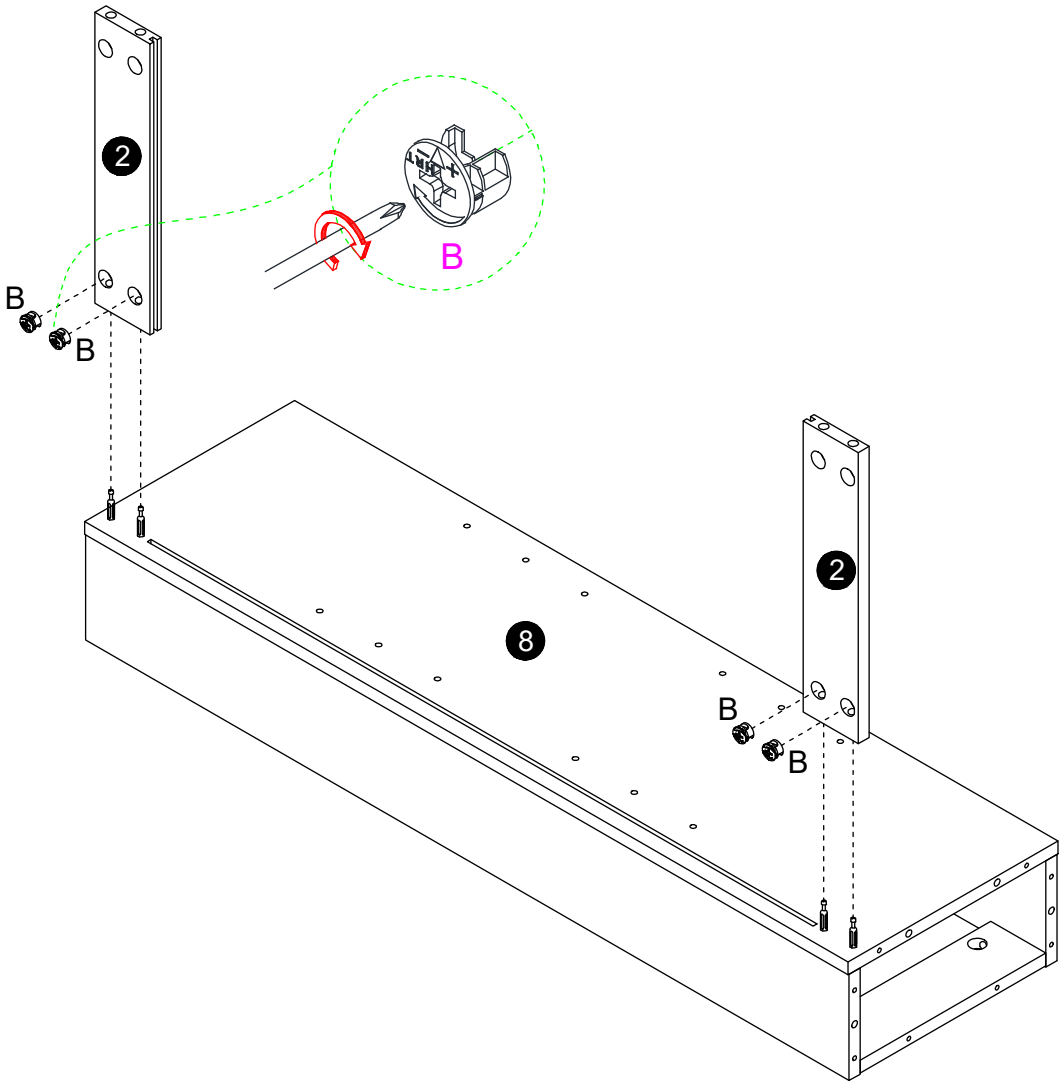

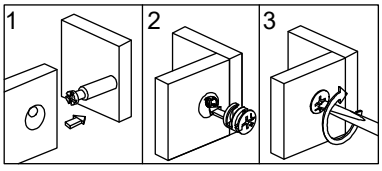


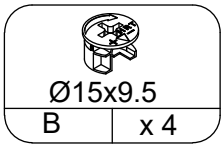



STEP 33

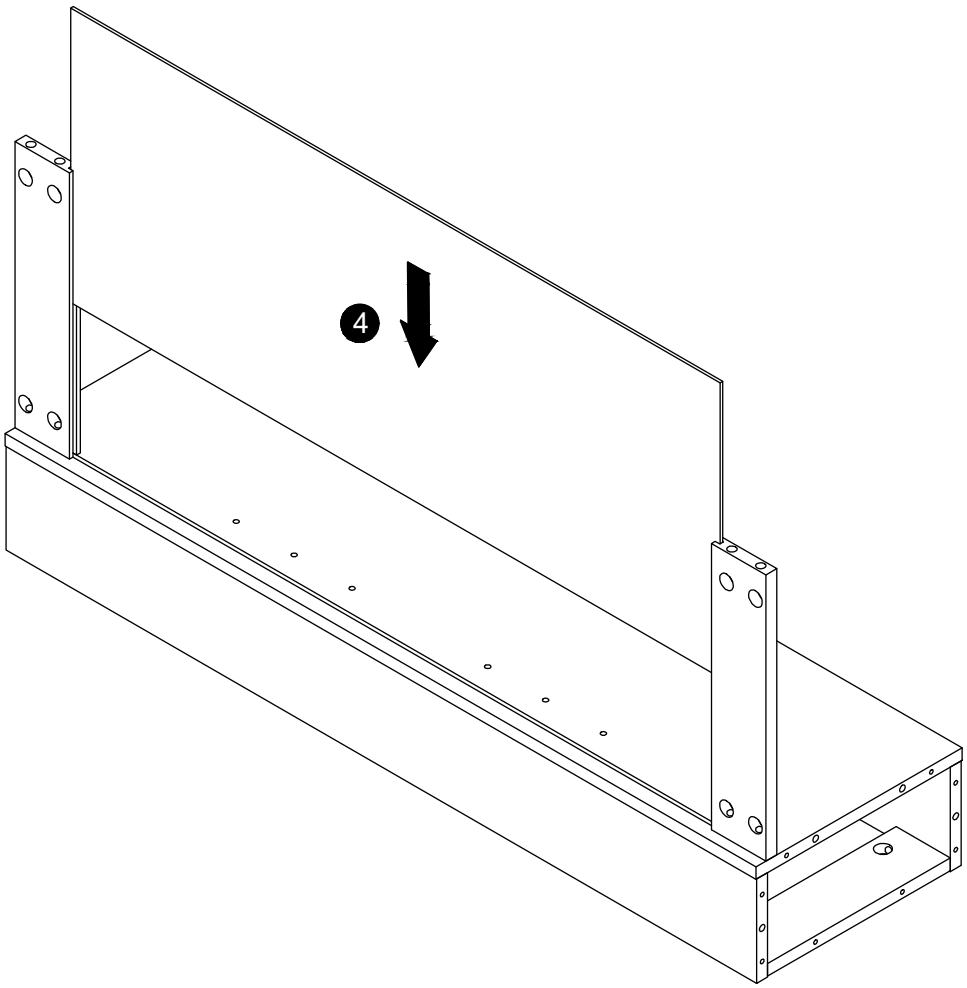


STEP 34

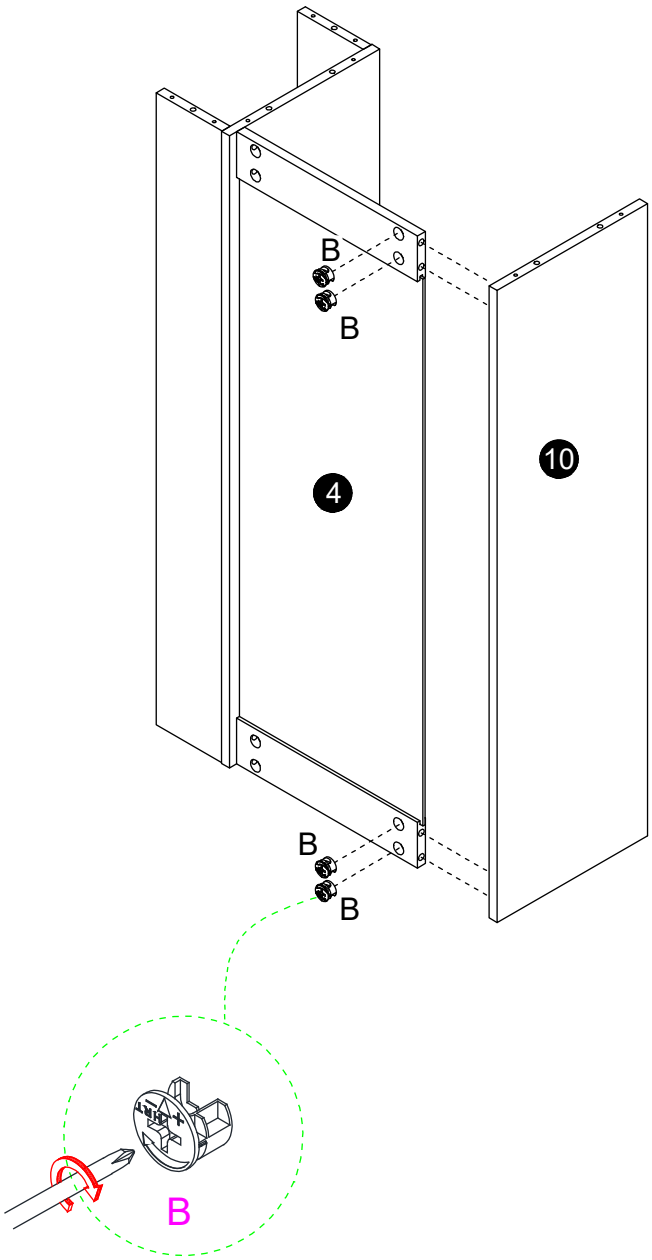

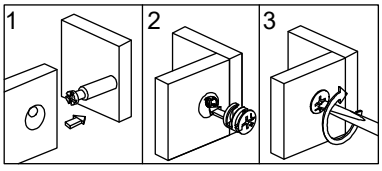

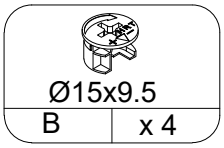


STEP 35

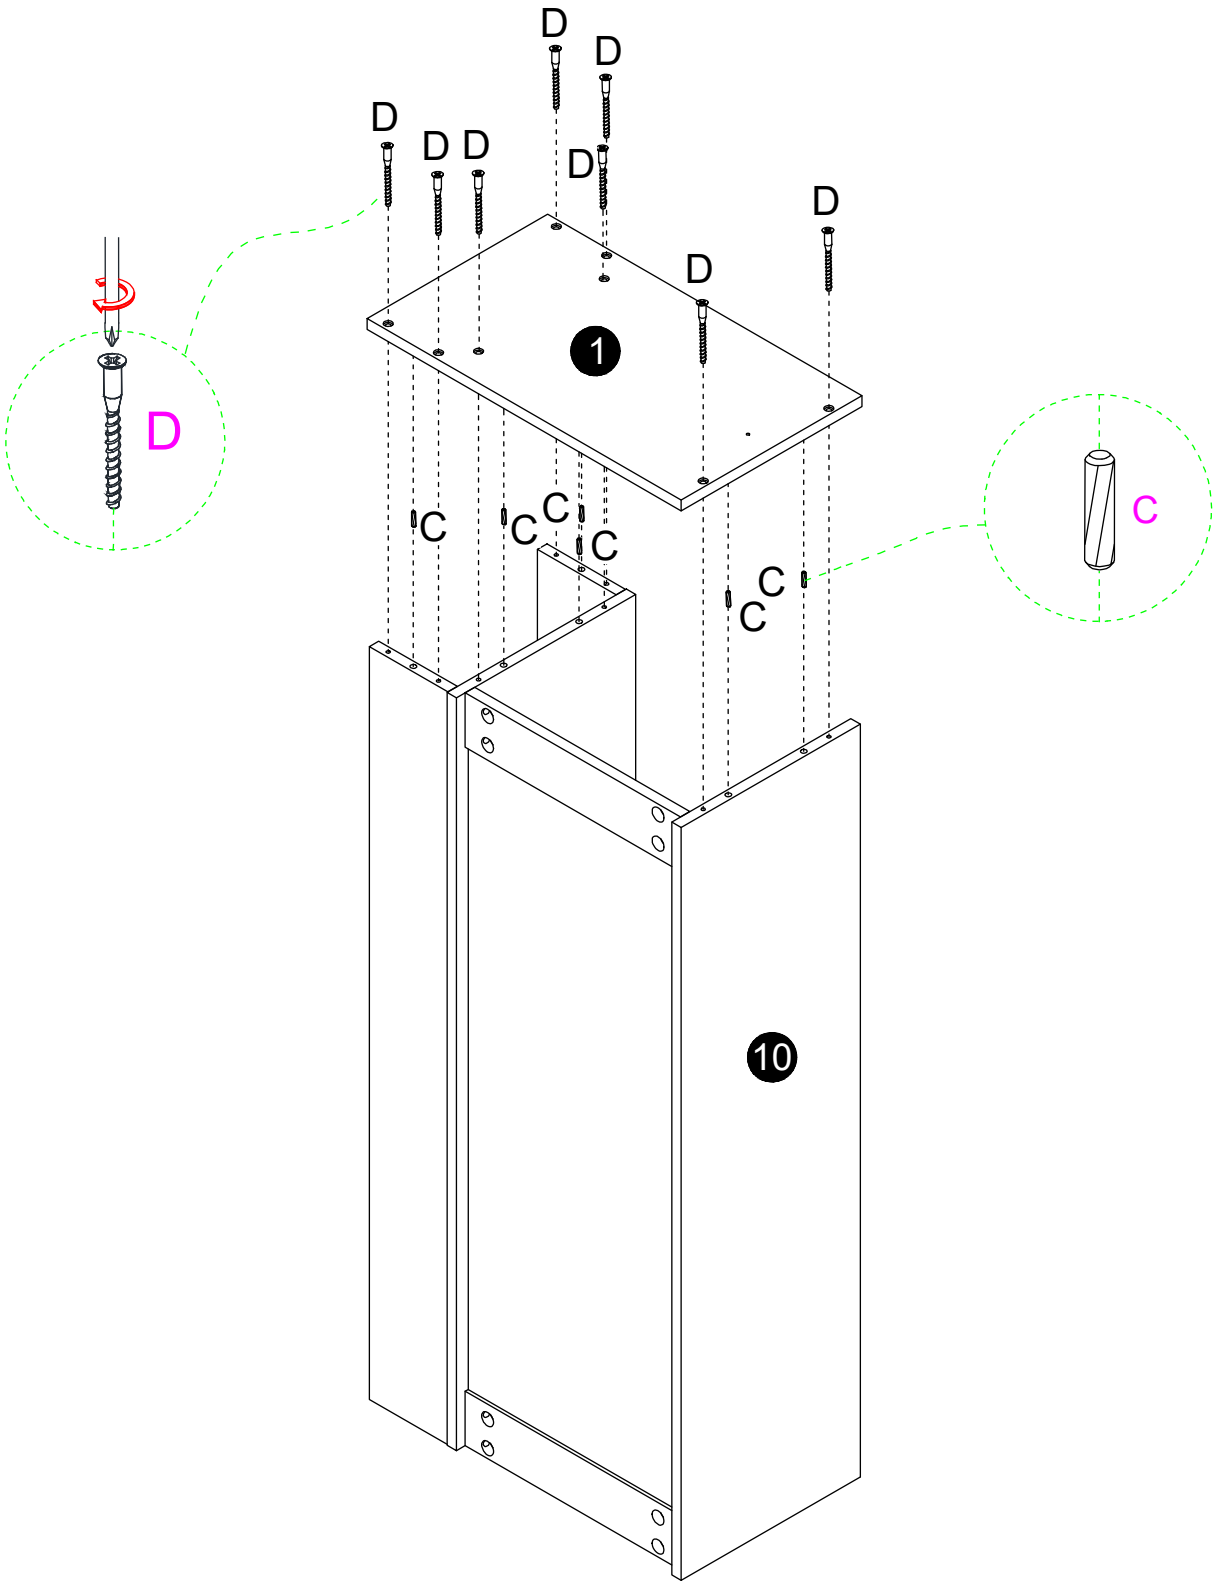


Ø6x30	
C	x6


Ø5x40	
D	x 8

STEP 36

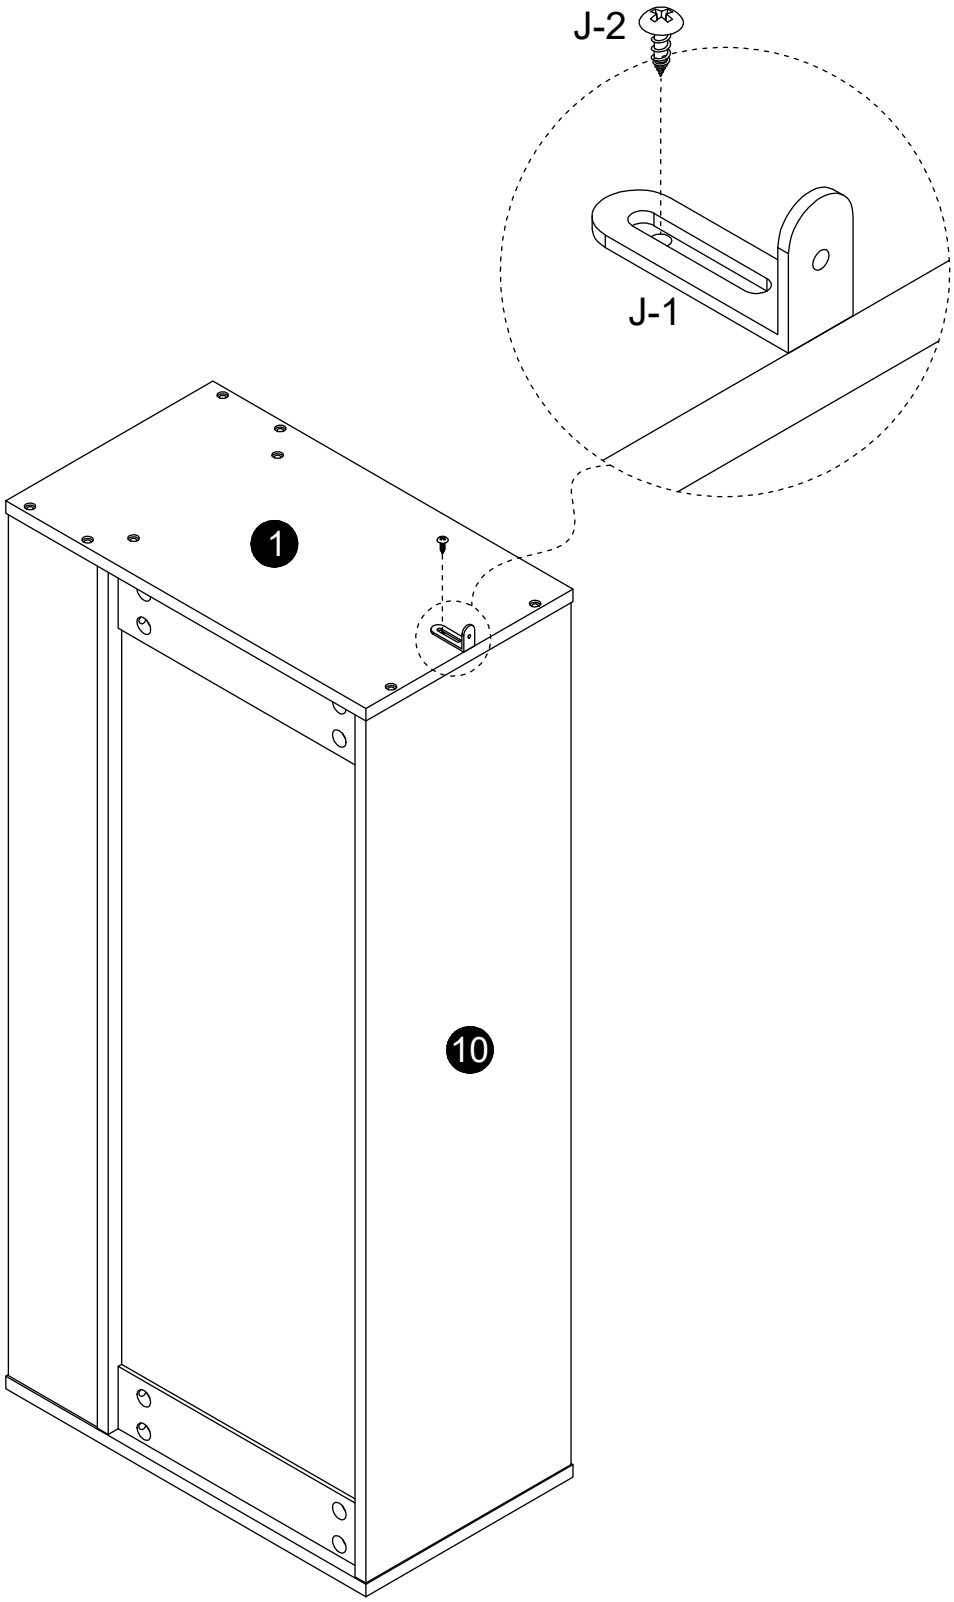

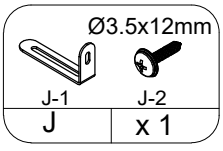


STEP 37

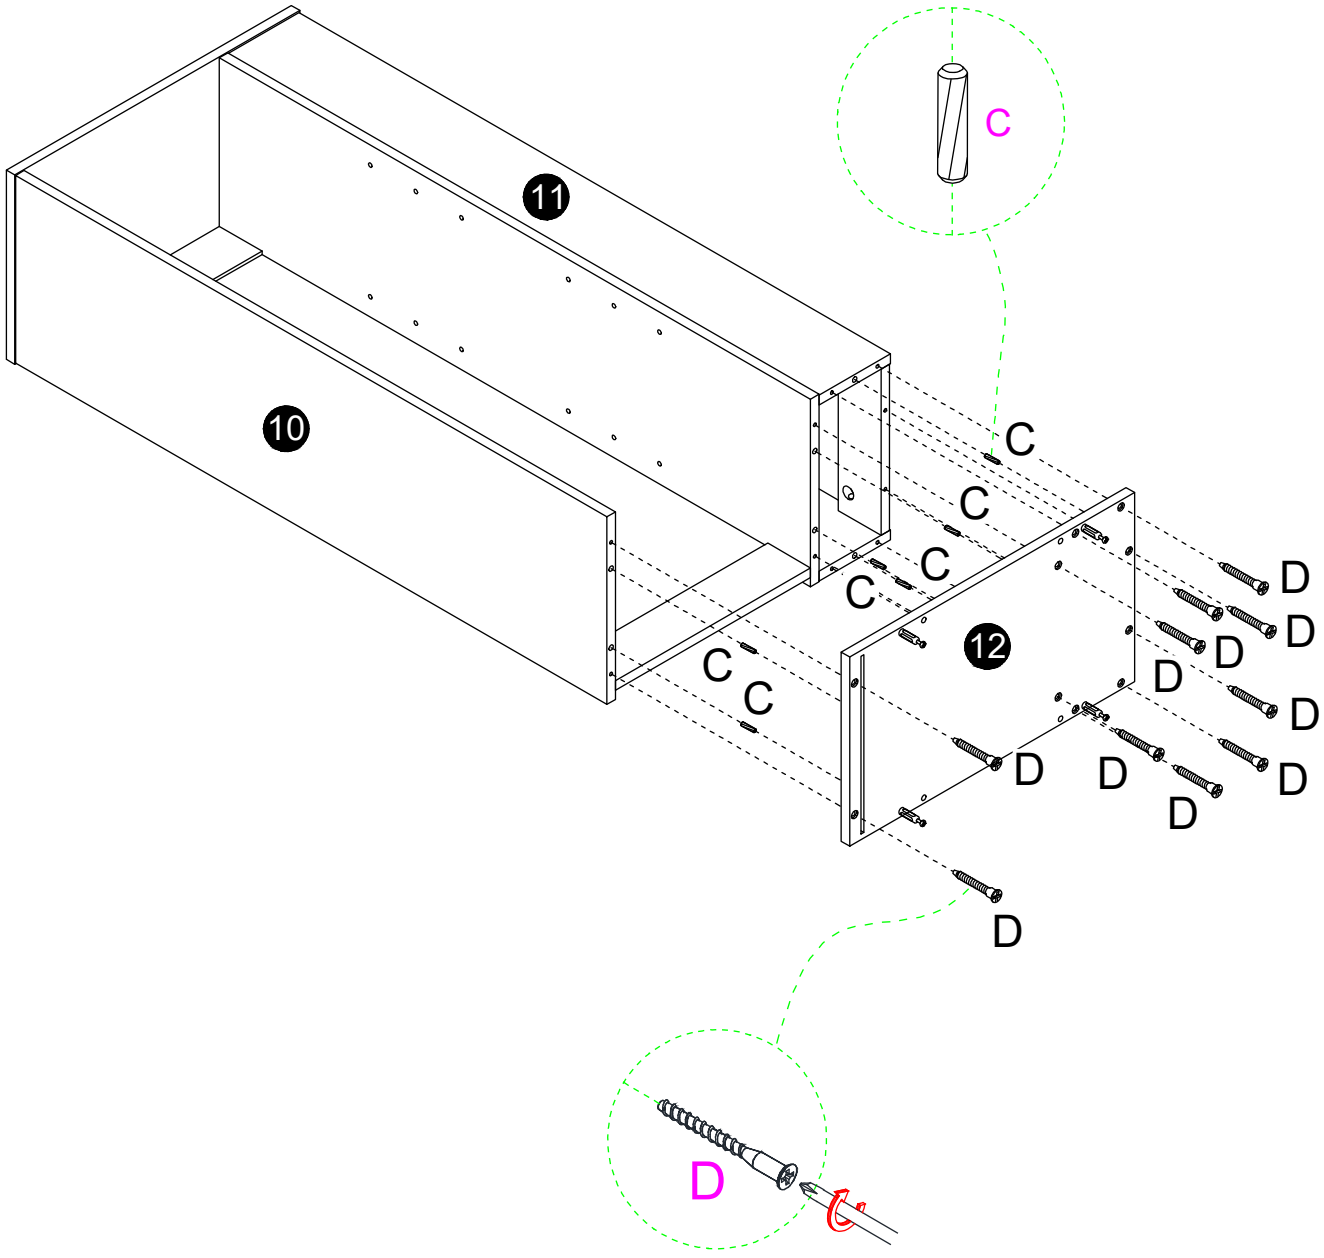


Ø6x30	
C	x6


Ø5x40	
D	x 10

STEP 38

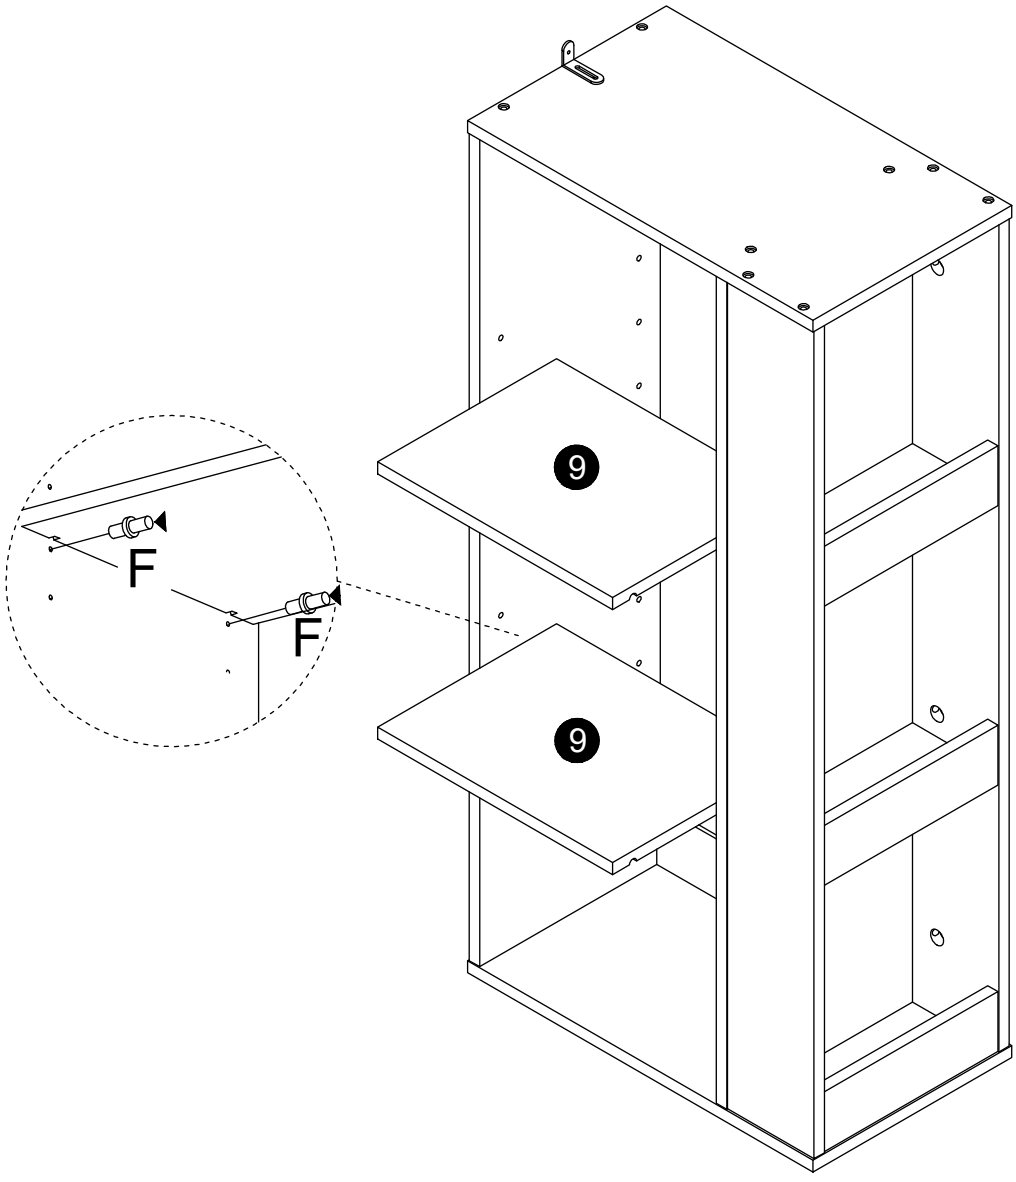


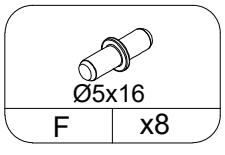

STEP 39

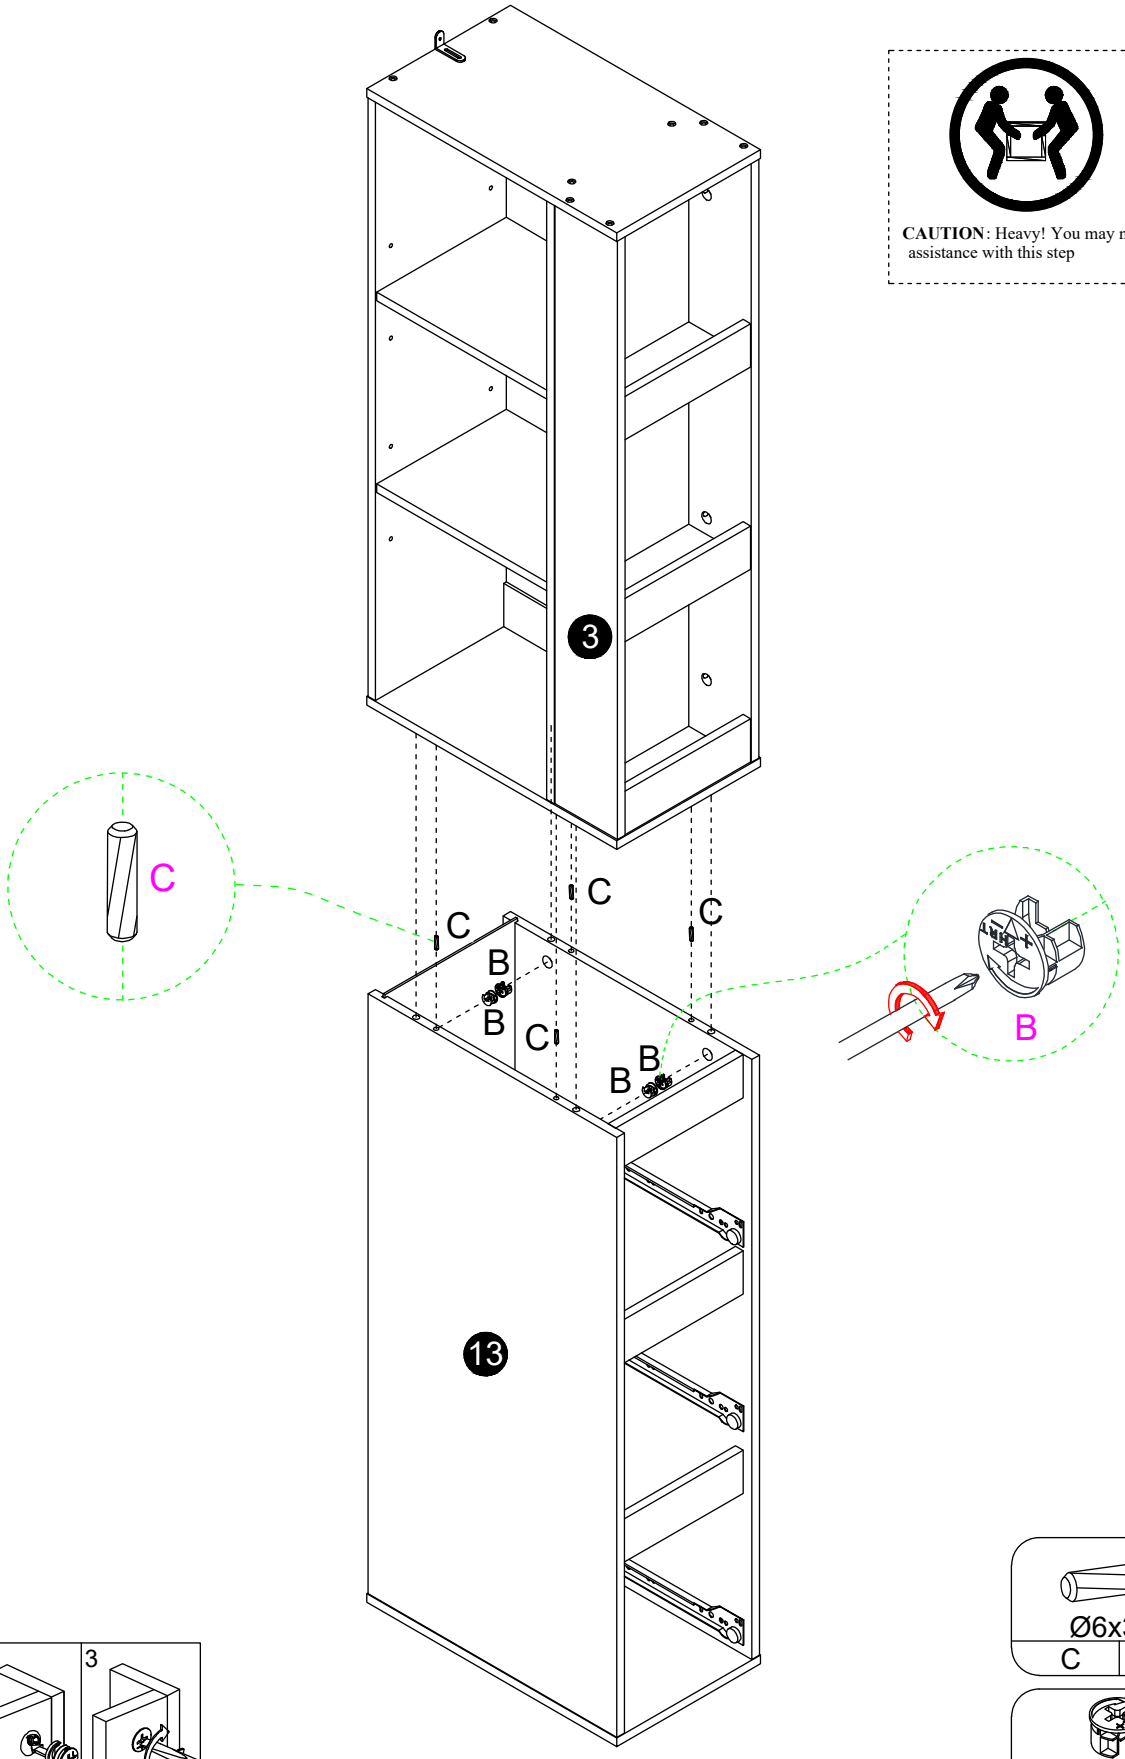


CAUTION: Heavy! You may need assistance with this step

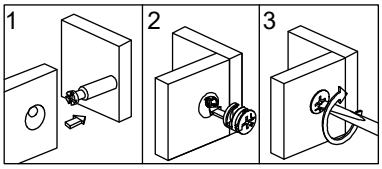

Ø6x30	
C	x 4


Ø15x9.5	
B	x 4


STEP 40

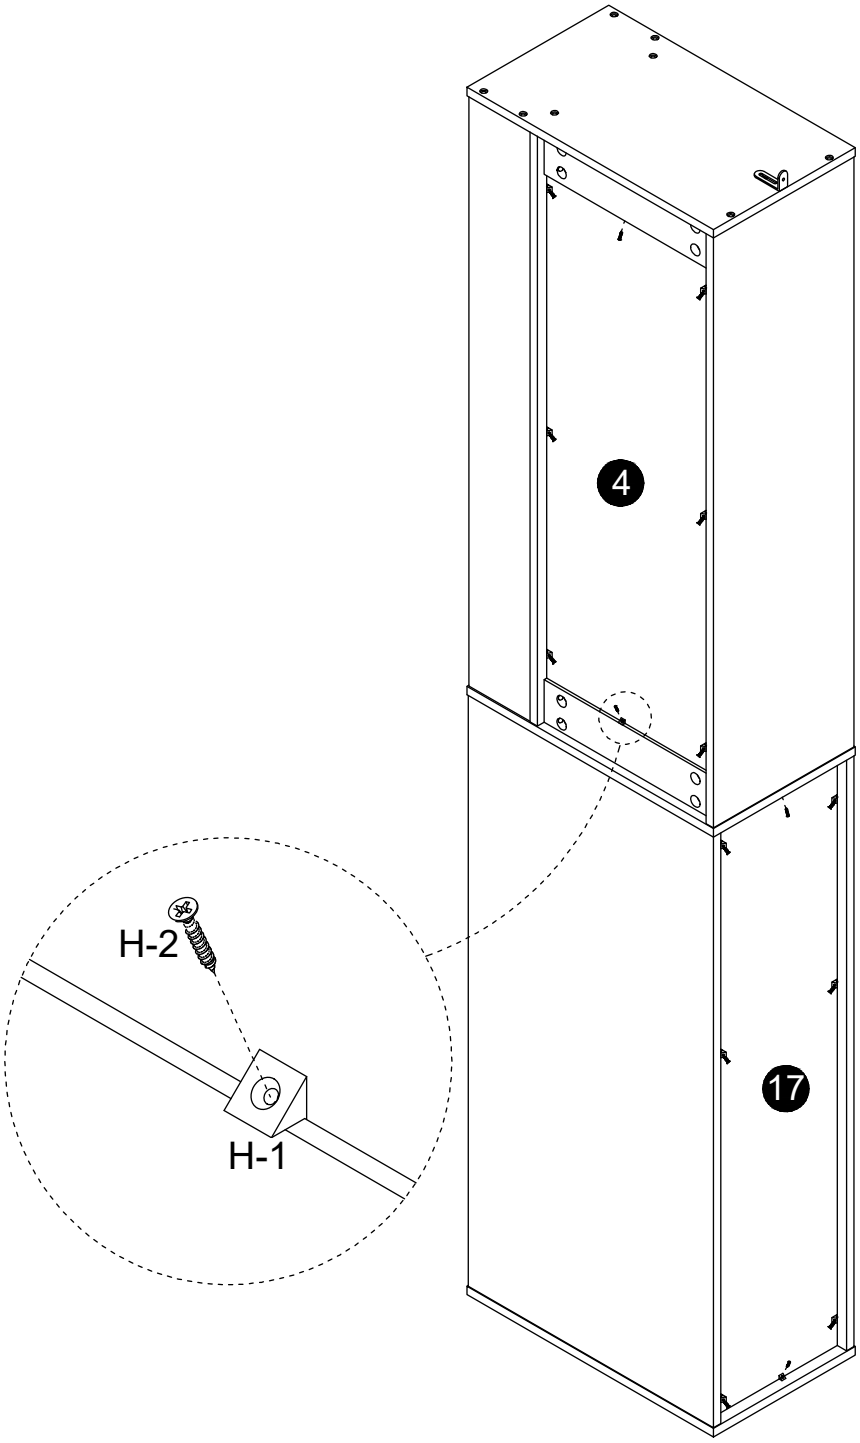


H-1	H-2
H	x 16


STEP 41

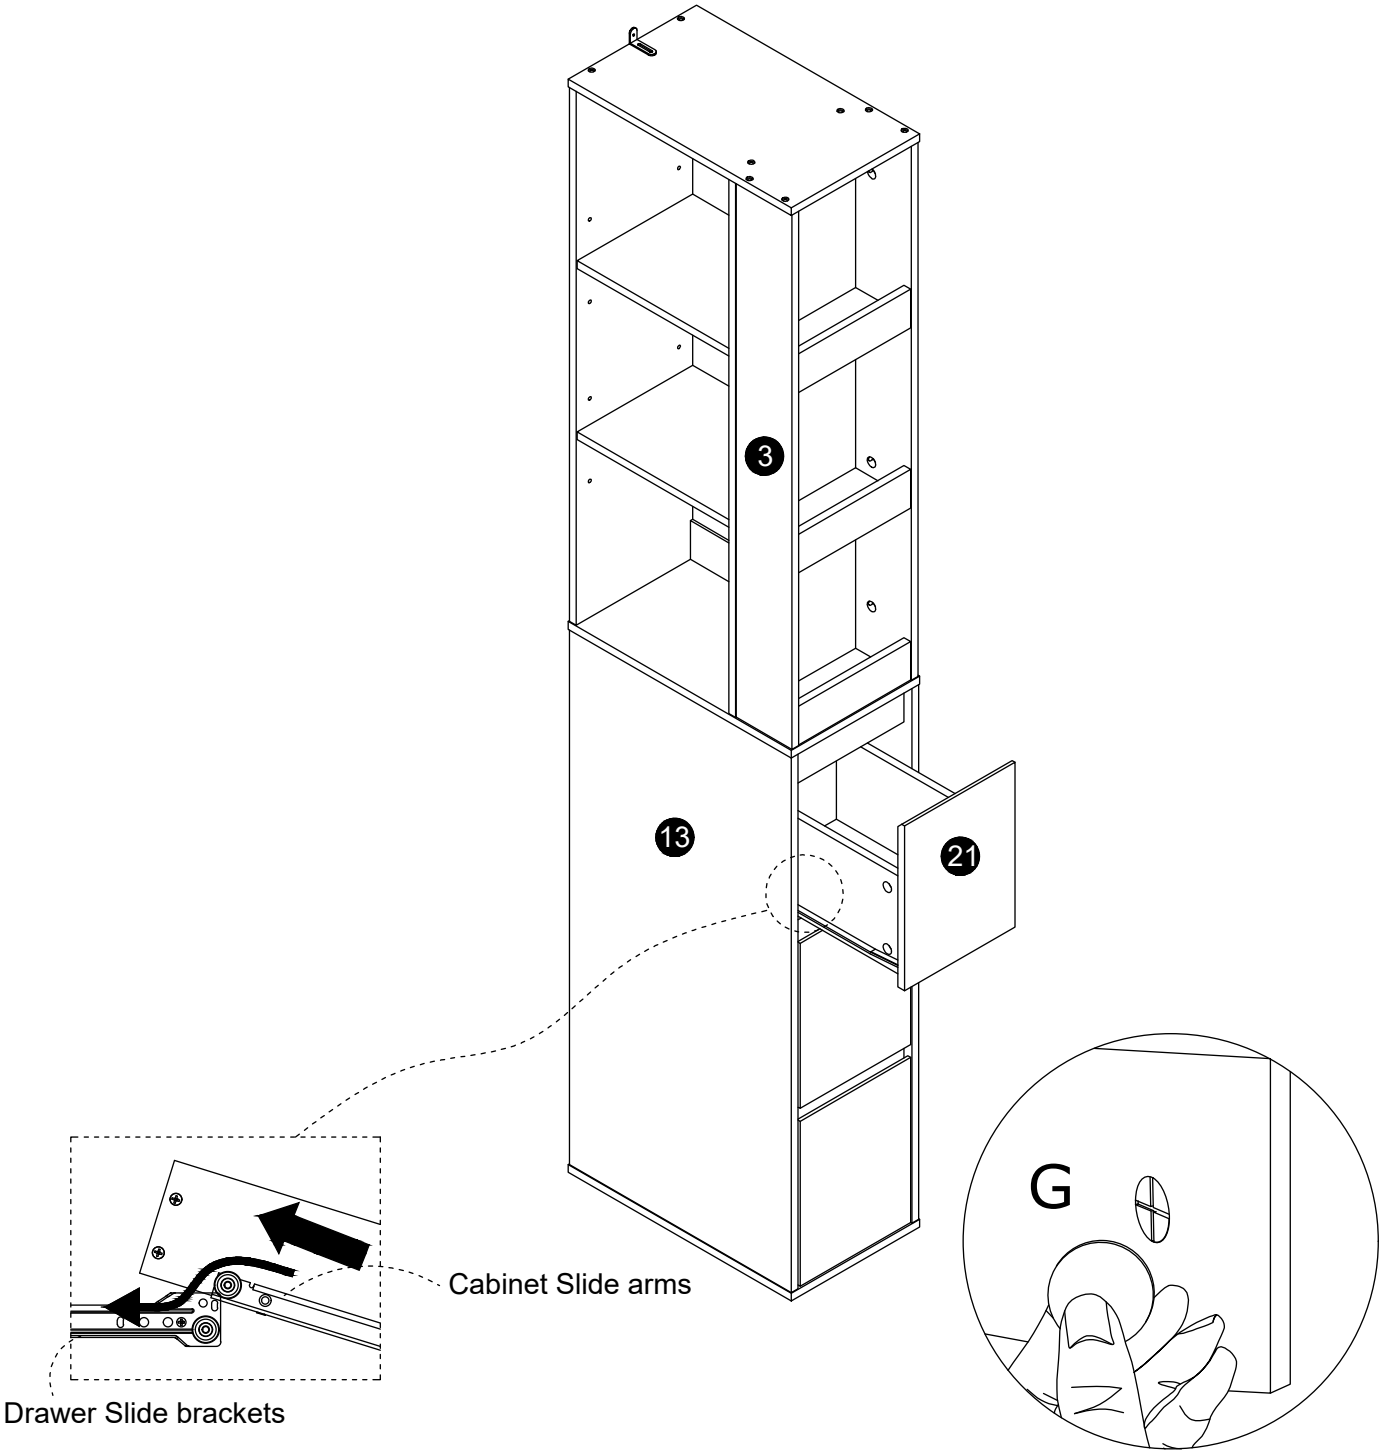
3
13
21
G
Cabinet Slide arms
Drawer Slide brackets

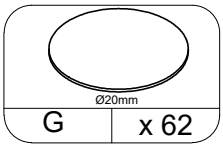

Ø20mm
G
x 62

STEP 42

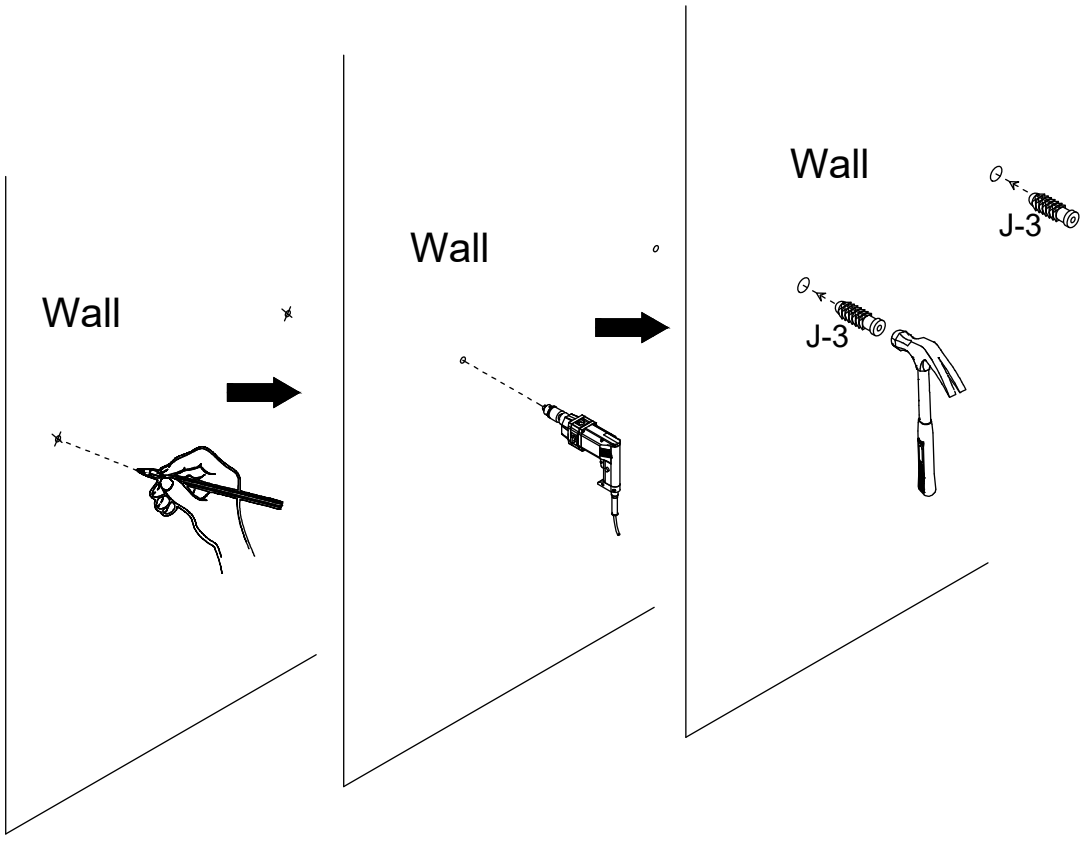

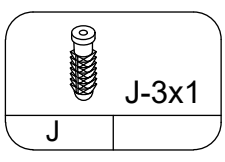

STEP 43

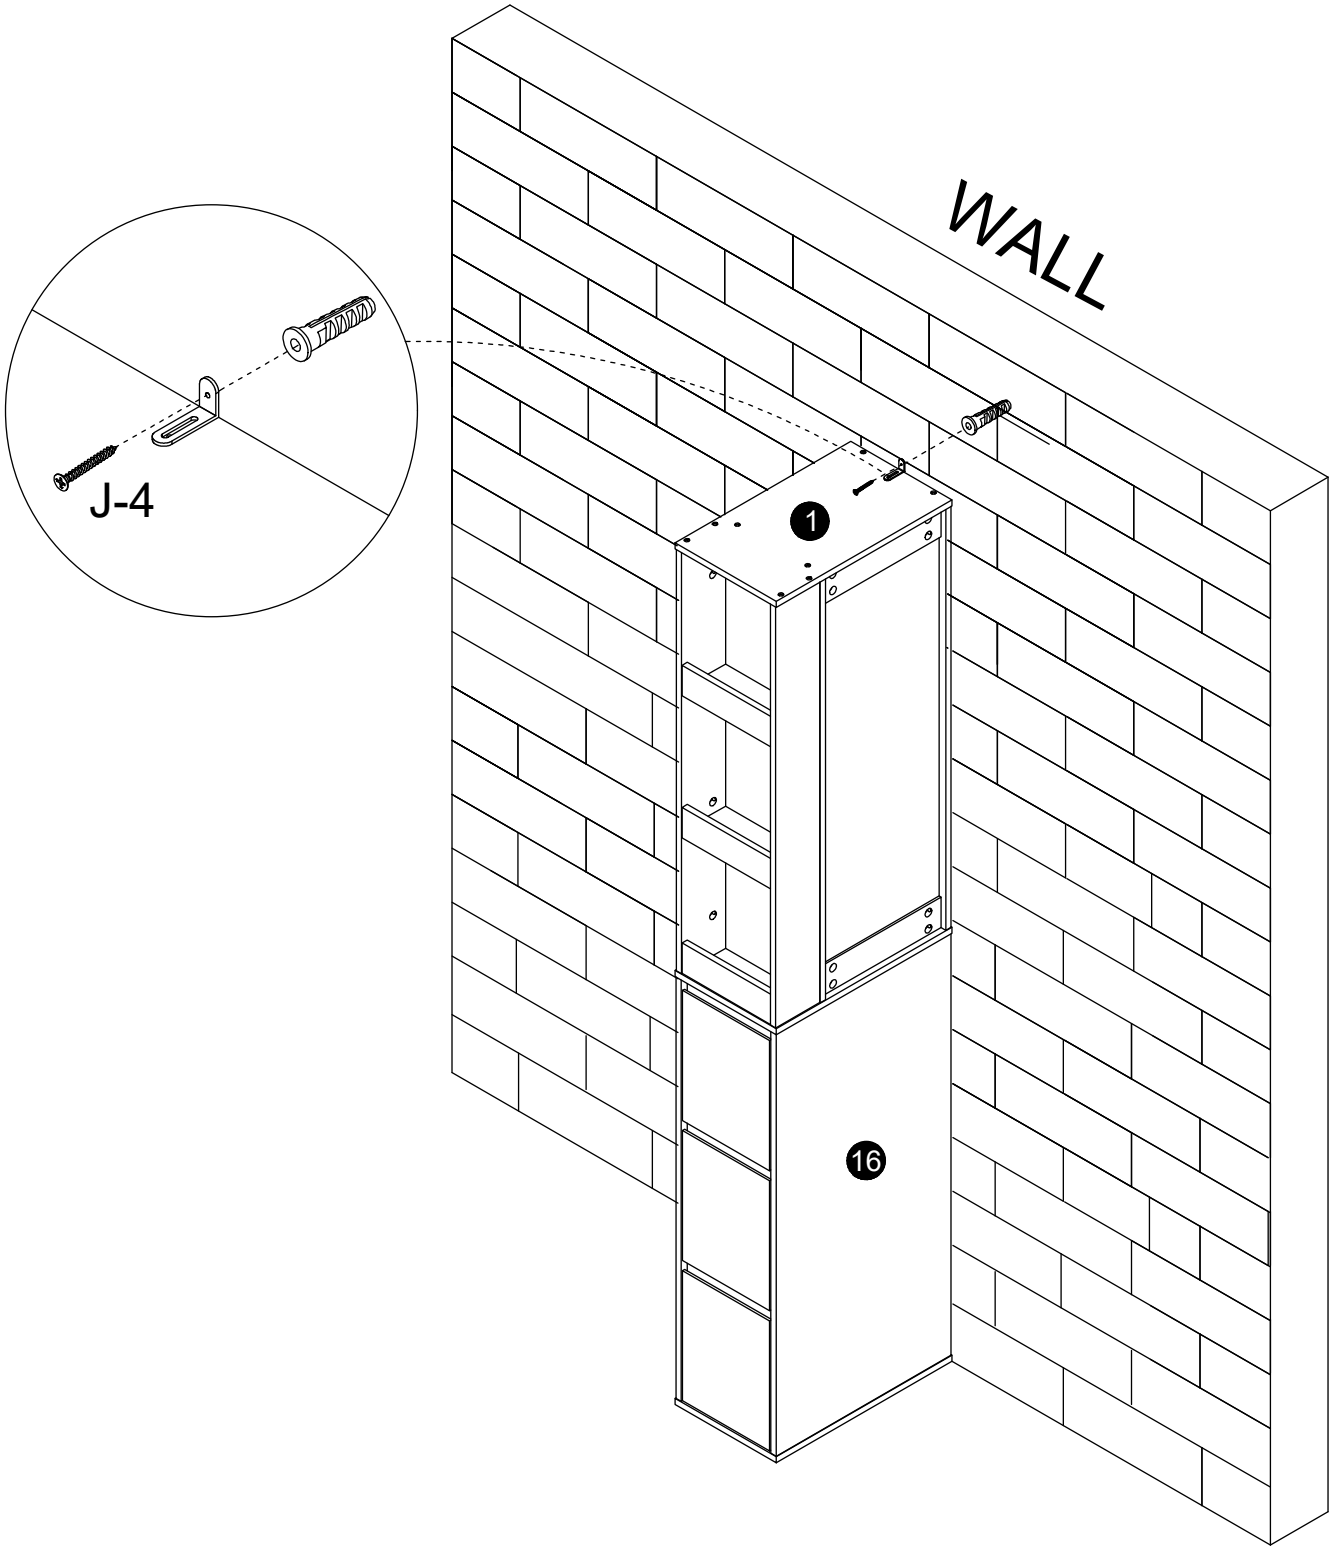

Ø4x40mm

J-4

J	x 1

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
• Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning