


STORAGE CABINET

User Manual

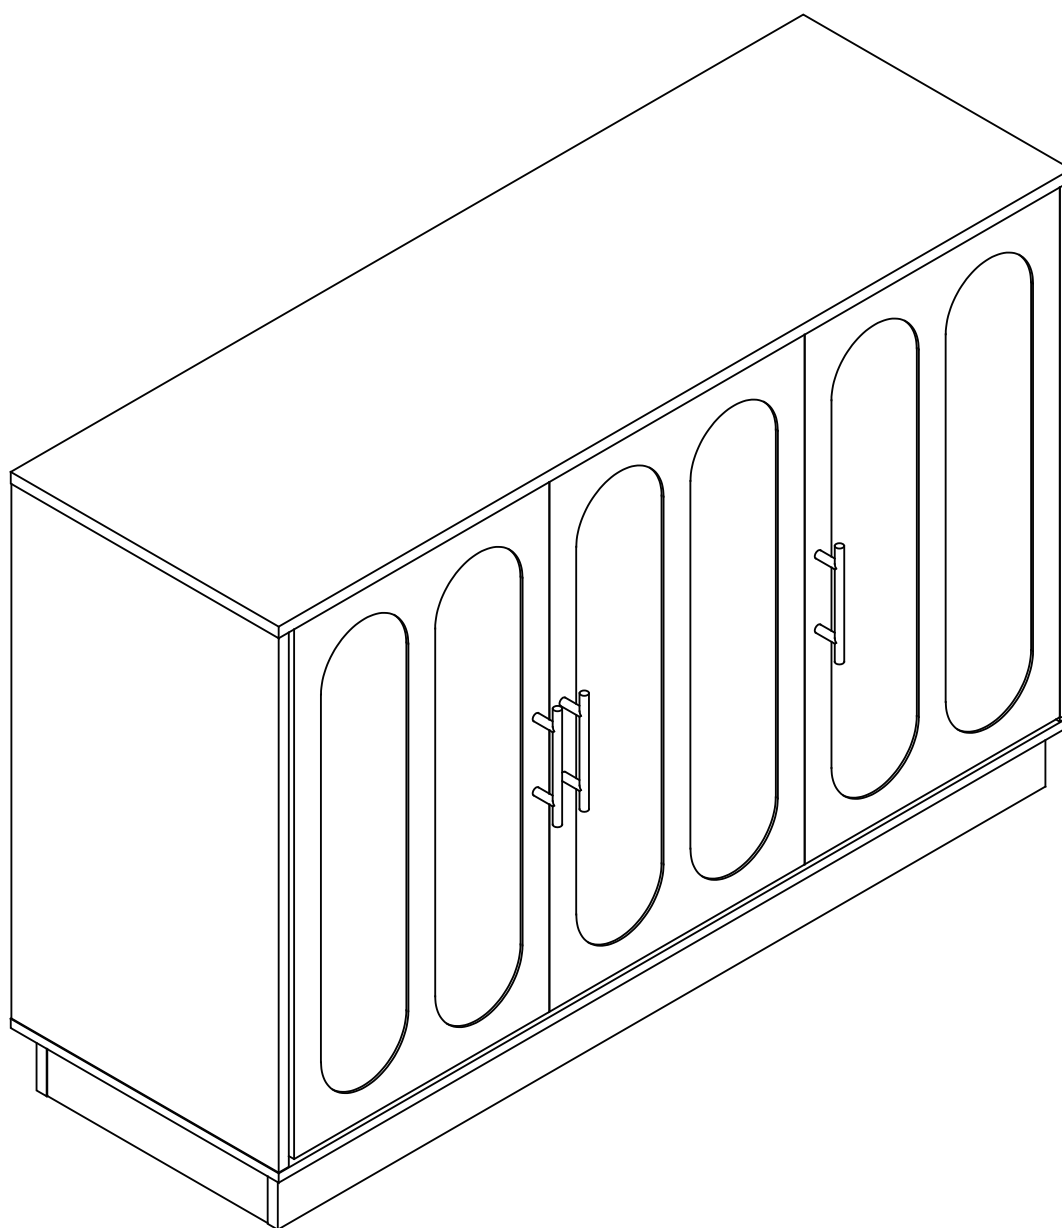

Made in China

For a Hassle-Free installation

1. Ensure you have received all cartons and familiarize yourself with the workload.

Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.

2. Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

3. Read instructions carefully and check no parts are missing.

4. Lay out all hardware on a soft surface so you can easily identify them.

5. Carefully identify all components according to the labeled alphabet to ensure that the parts are in the correct place.

6. Install your new product carefully following the instructions. Don't skip ahead!

* If any parts are missing or damaged, we will gladly ship you replacement parts free of charge. Please contact us order ID and the Store Name of your purchase, we're always here to help :)

WARNING

Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.

2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.


3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.

4. Unless specially designed to accommodate, do not set heavy objects on top of this product.













5. Place the heaviest items on the lowest shelf.

6. Never allow children to climb or bang on drawers, doors or shelves.





PANEL LAYOUT

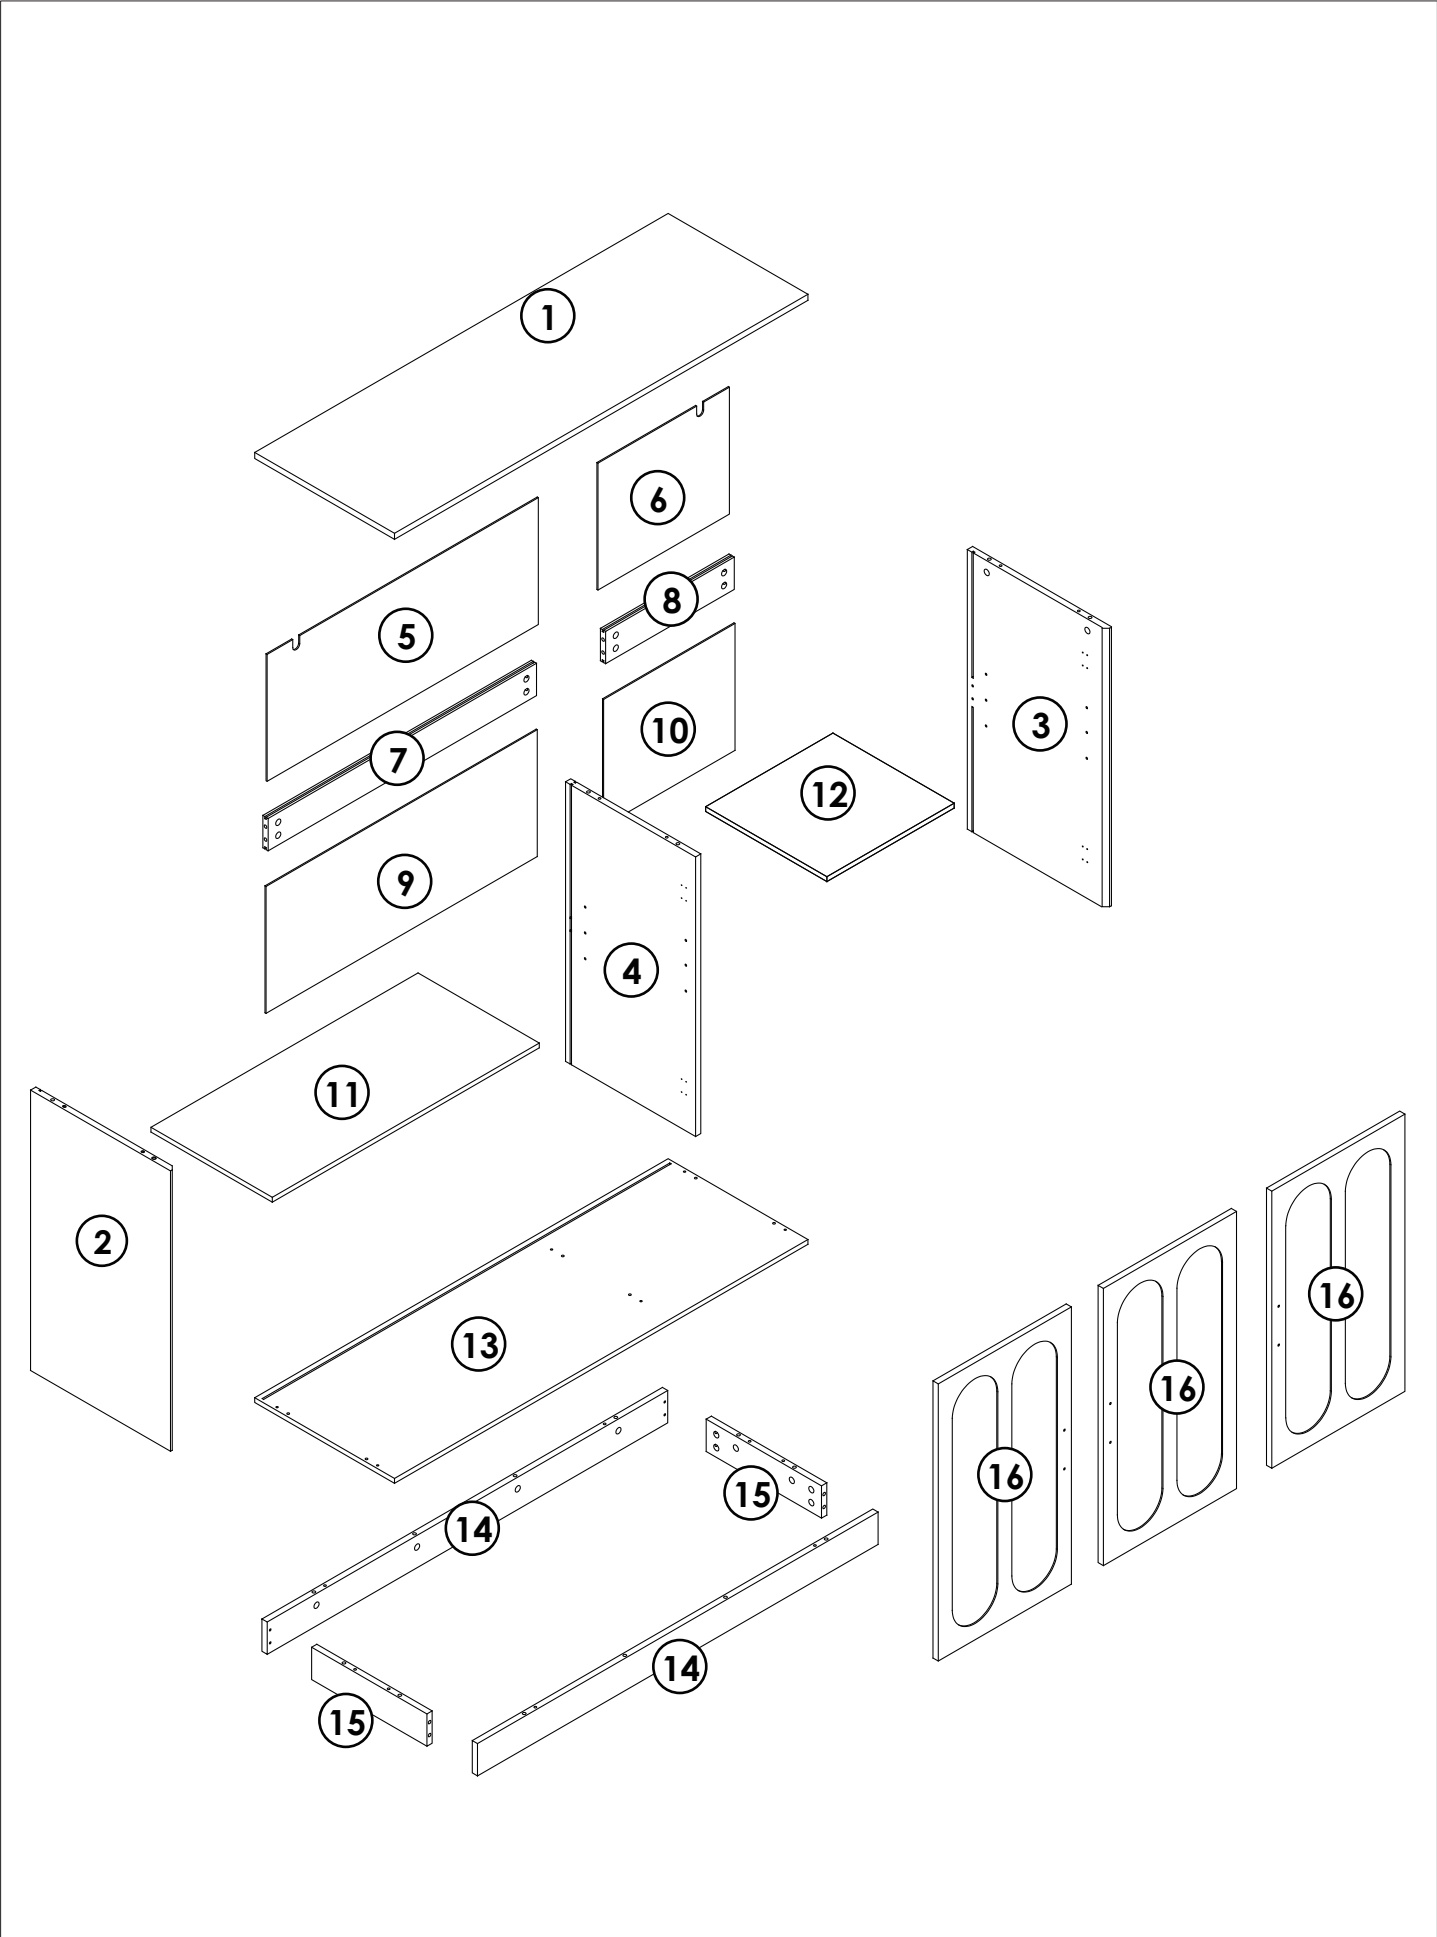





PARTS LIST

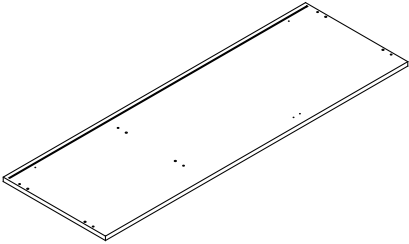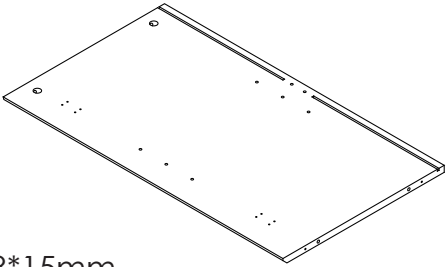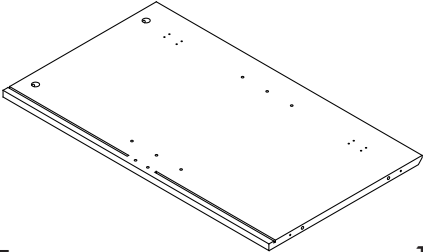
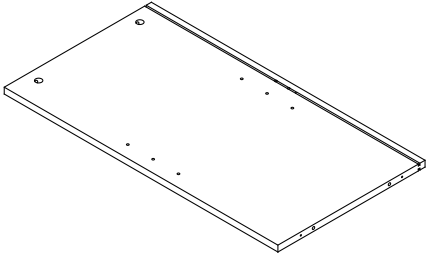
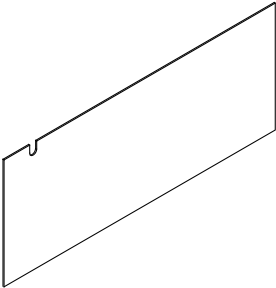
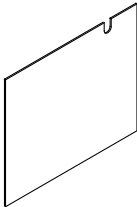
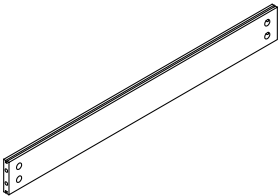

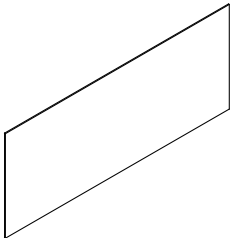
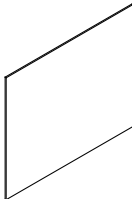
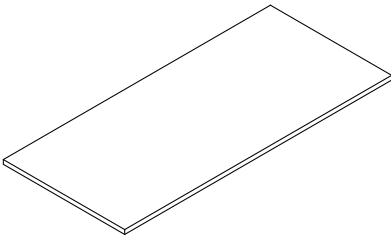
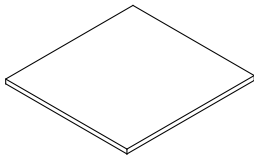
1  1182*399*15mm1 pc	2  692*398*15mm1 pc
3  692*398*15mm1 pc	4  692*371*15mm1 pc
5  776*314*3mm1 pc	6  376*314*3mm1 pc
7  768*79*15mm1 pc	8  368*79*15mm1 pc
9  776*314*3mm1 pc	10  376*314*3mm2 pcs
11  764*347*12mm1 pc	12  364*347*12mm1 pc

PARTS LIST

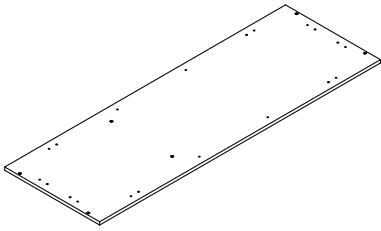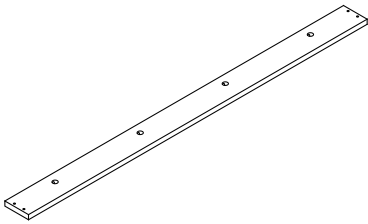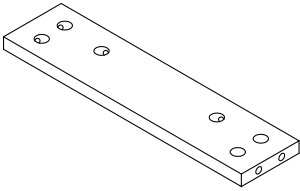13  1182*399*12mm 1 pc	14  1145*79*15mm 2 pcs
15  330*79*15mm 2 pcs	16  685*380*15mm 3 pcs


HARDWARE LIST

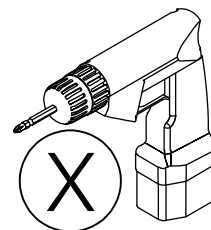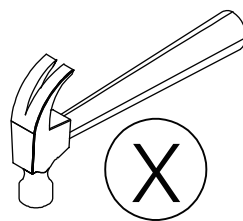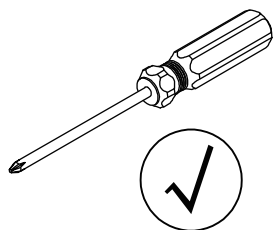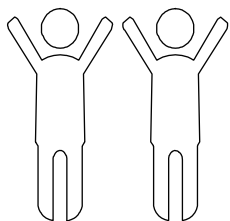

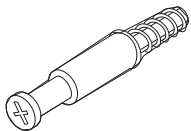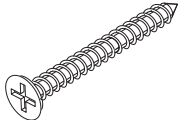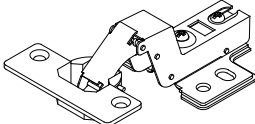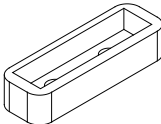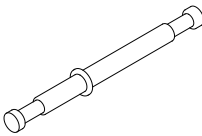A  Ø6*35mm 30 pcs	B  Ø15*10mm 34 pcs	C  Ø6*30mm 20 pcs	D  Ø4*40mm 8 pcs
E  Ø3.5*14mm 36 pcs	F  Ø5*17mm 8 pcs	G  110*62*25mm 6pcs	H  Ø3*16mm 12pcs
I  150*32mm Ø4*22mm 3 pcs	J J1  73*25mm + J2  Ø4*12mm + J3  30*8mm 2 pcs		K  38*13mm Ø3*12mm 1 pc
L  Ø5*71mm 2 pcs			

ASSEMBLY STEPS

CAM BOLT INSTALLATION AS BELOW:

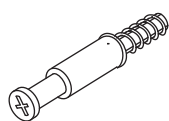

Cam bolt




Connecting piece

Pin


Panel

No gap

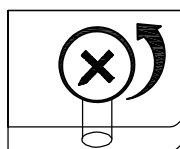

X


Rotate connecting piece if found in the position illustrated above.

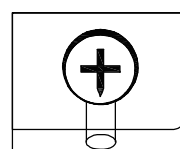


✓

Correct orientation to receive bolts.


A1.

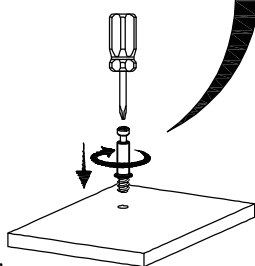


A2.

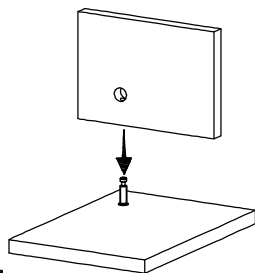

A3.

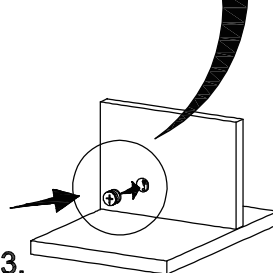




A4.

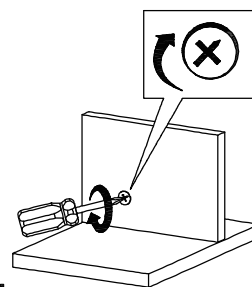

1

YOU WILL NEED

A x4


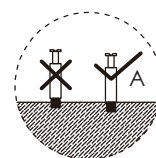
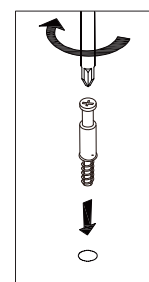
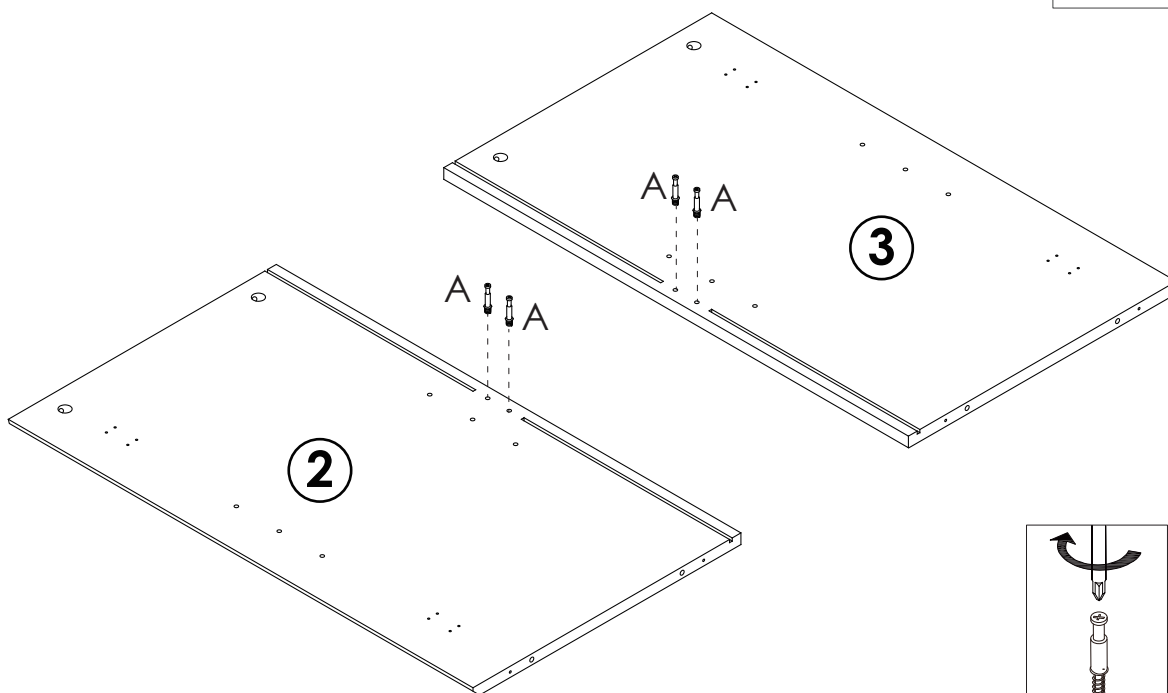


2

YOU WILL NEED

L x2

B x4

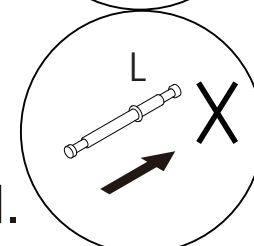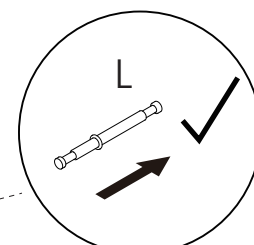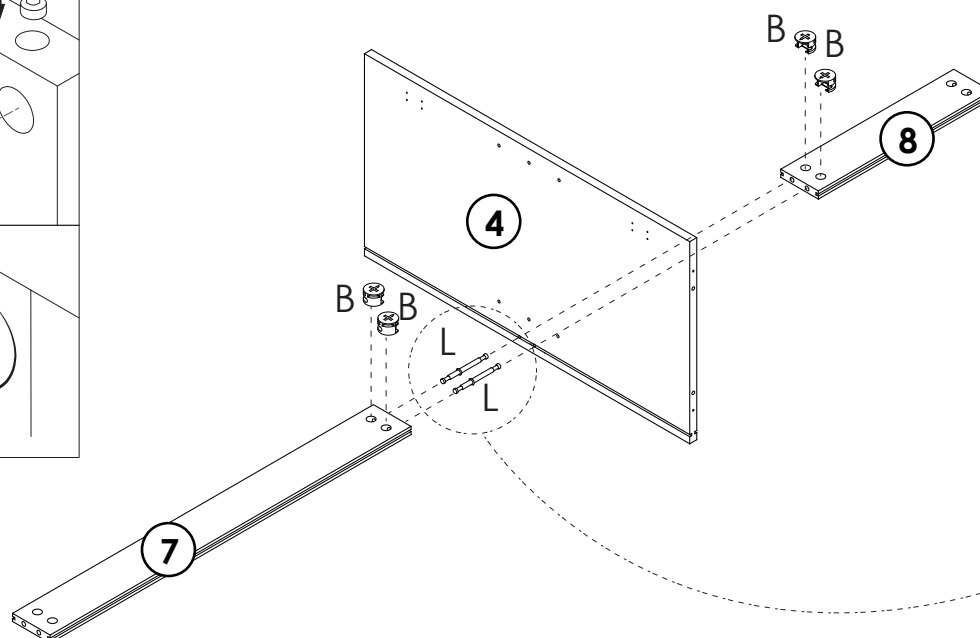
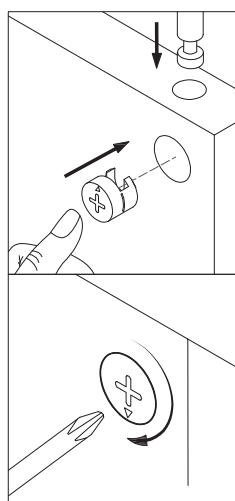


Please pay attention to the direction of the double-ended rod.


3

YOU WILL NEED

B x4

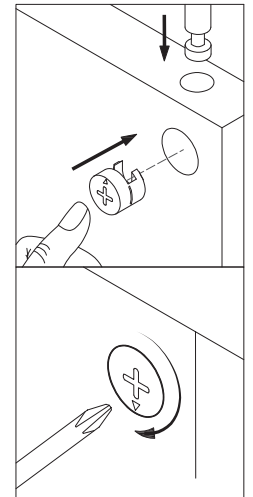
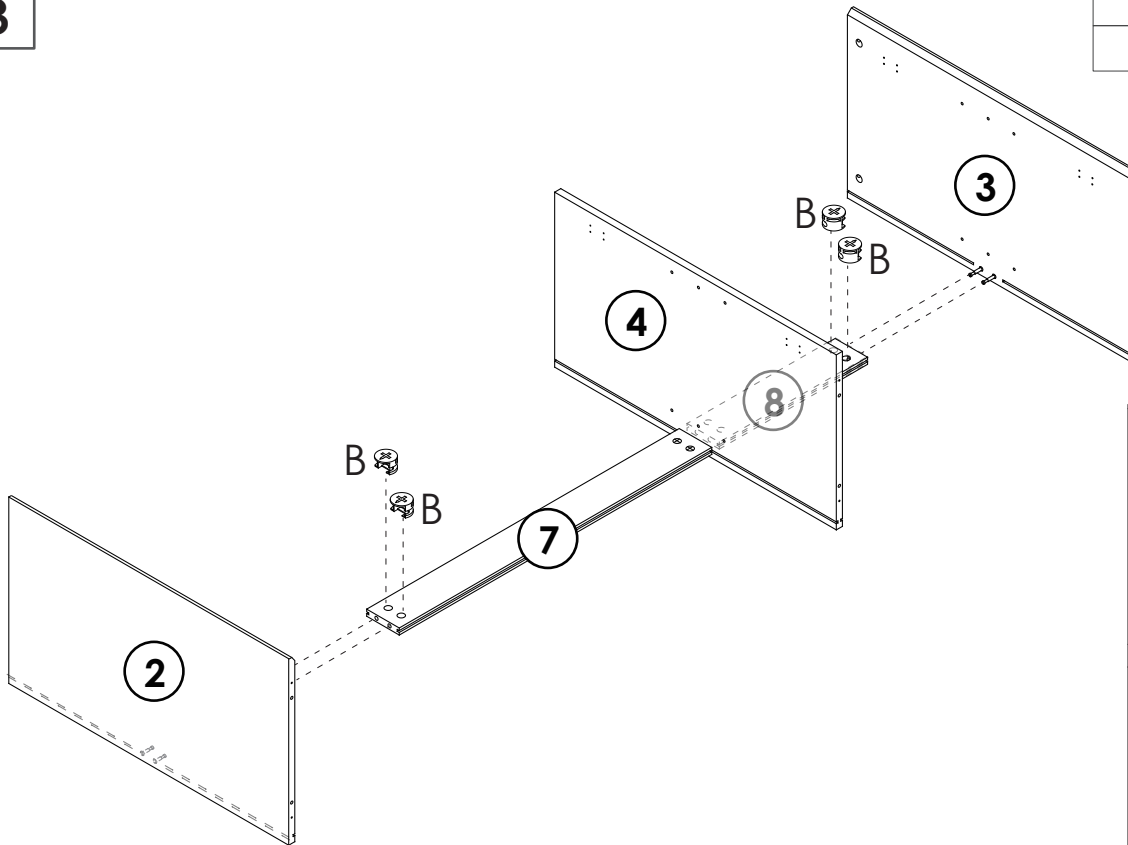


4

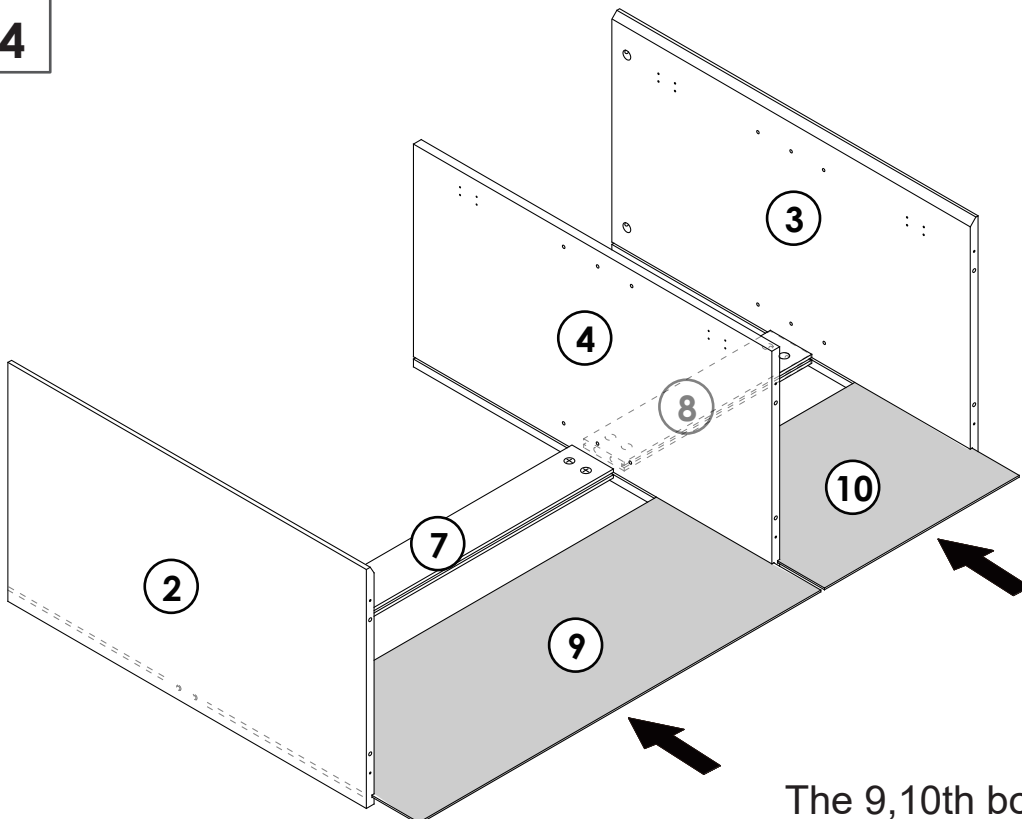

The thin backplate must be fully installed into the slot or it will prevent proper installation.




The 9,10th board needs to be fully inserted into the 7,8th board

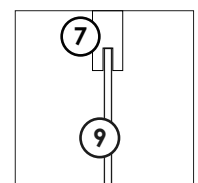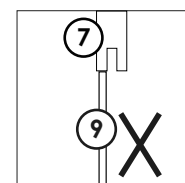

5

YOU WILL NEED

A x12

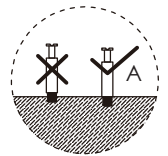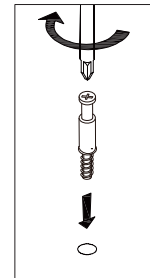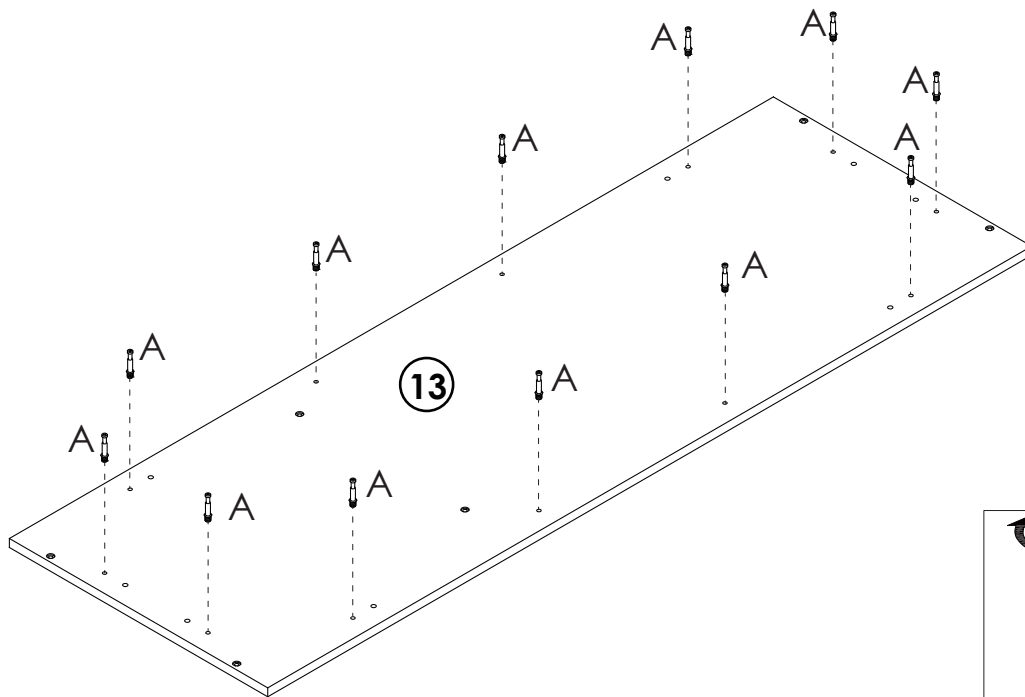


6



YOU WILL NEED

C x6

D x6

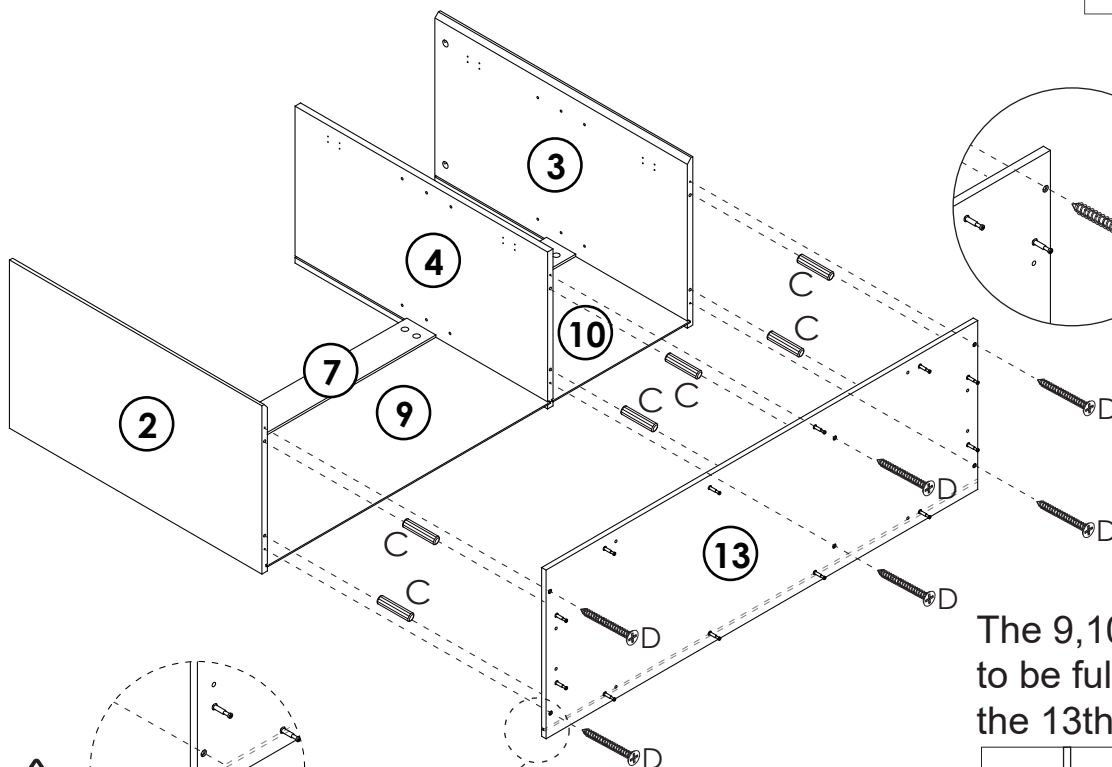


The 9,10th board needs to be fully inserted into the 13th board

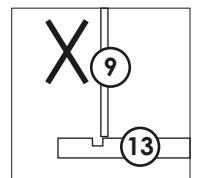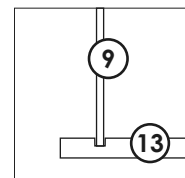



7

YOU WILL NEED

A x8

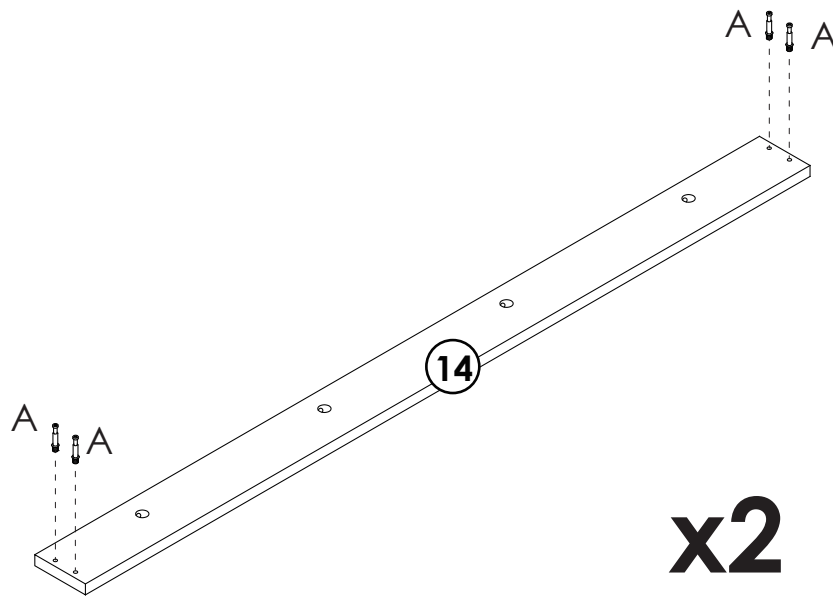



x2

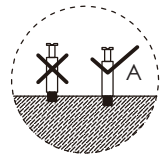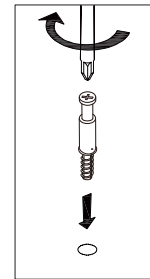

8

YOU WILL NEED

B x8

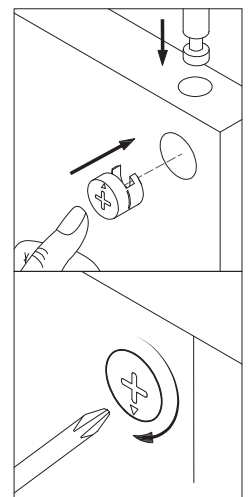
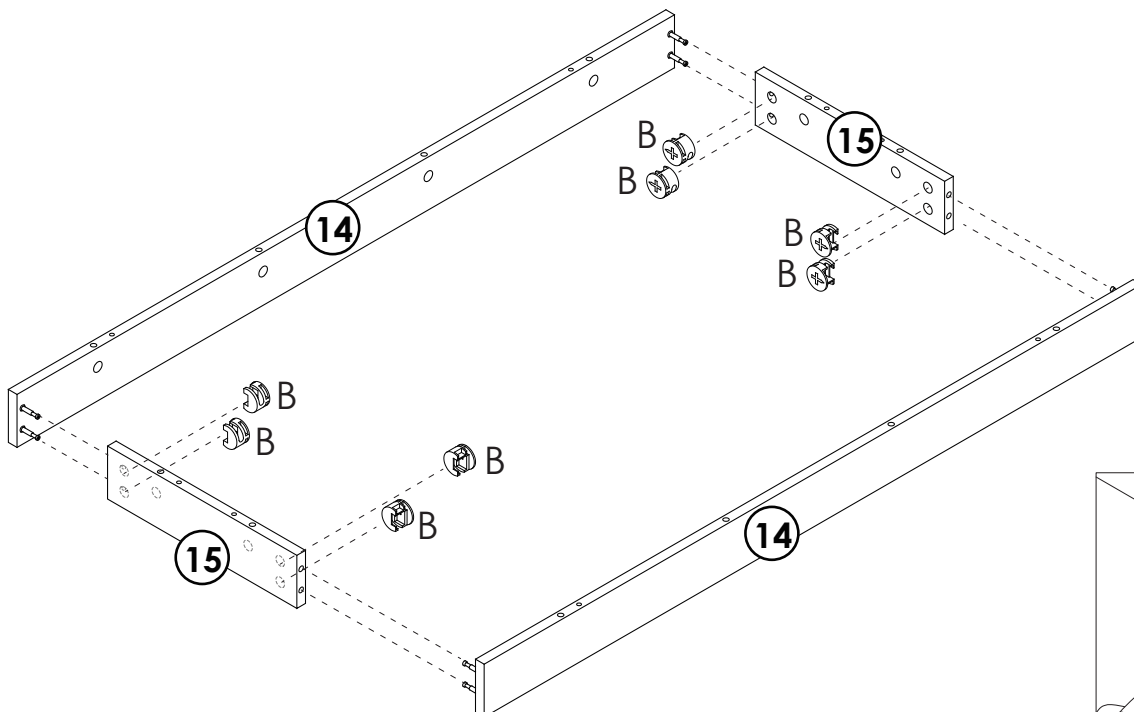


9

YOU WILL NEED


C x8

B x12

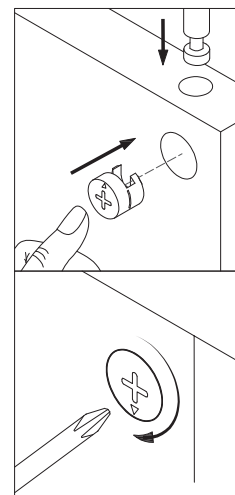
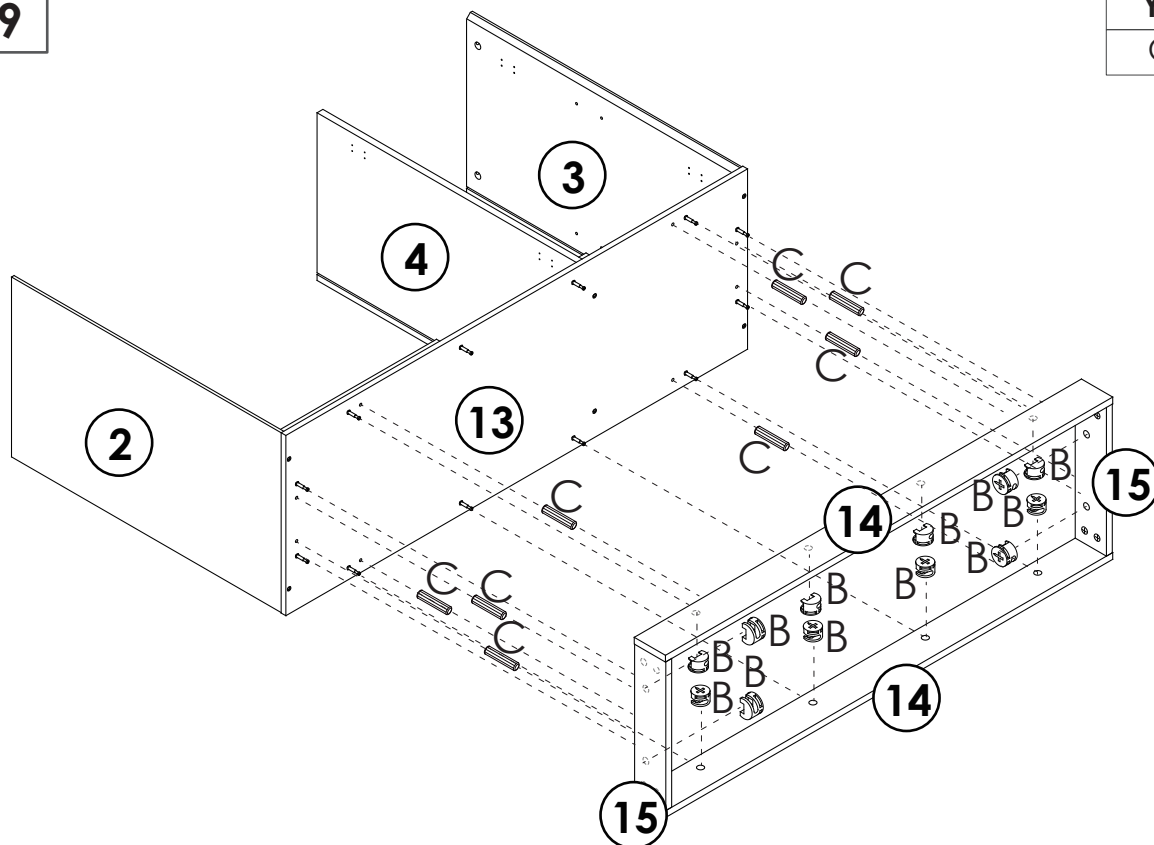


10

The thin backplate must be fully installed into the slot or it will prevent proper installation.

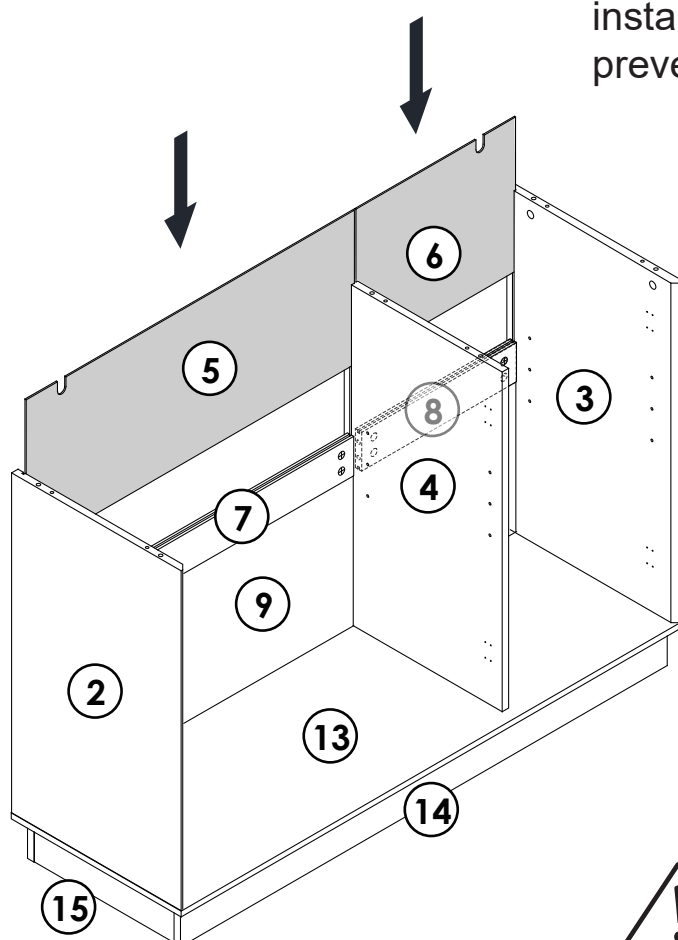

The 5,6th board needs to be fully inserted into the 7,8th board

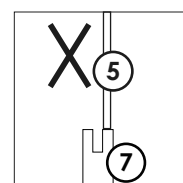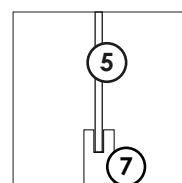

11


YOU WILL NEED

A x6

J1 x2

J2 x2

K x1

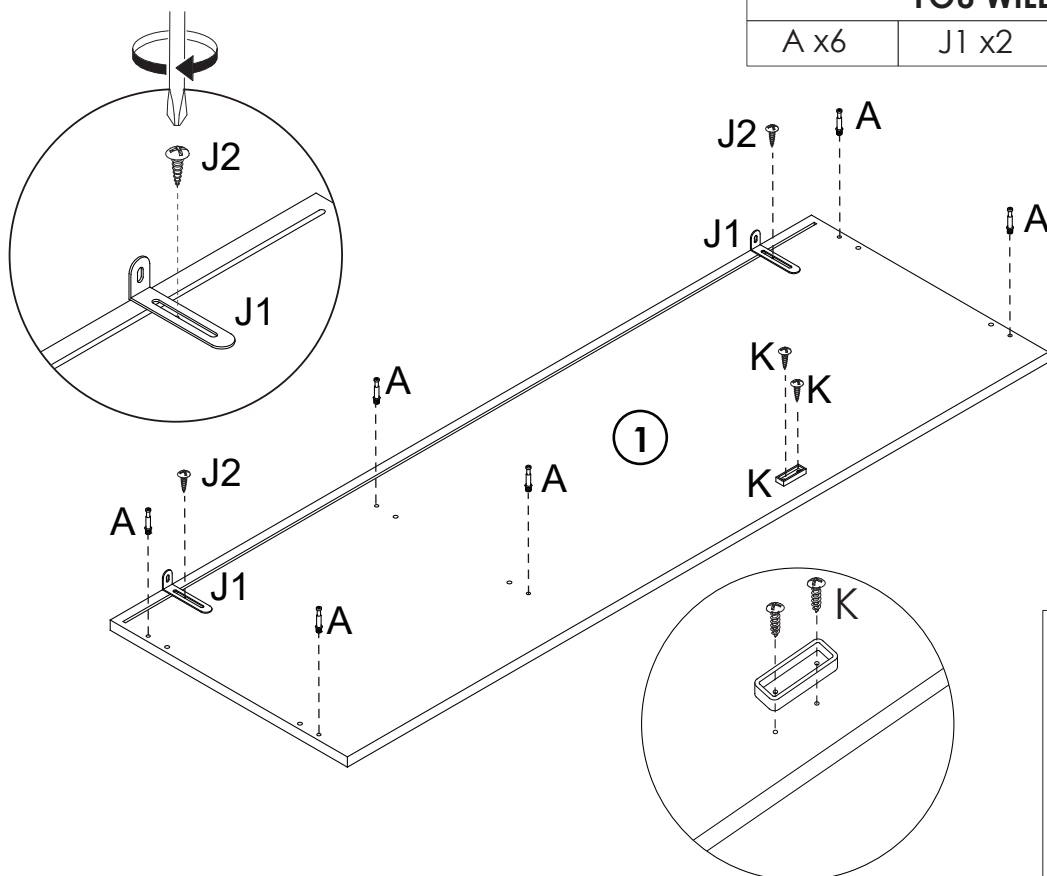


12



YOU WILL NEED

C x6

B x6

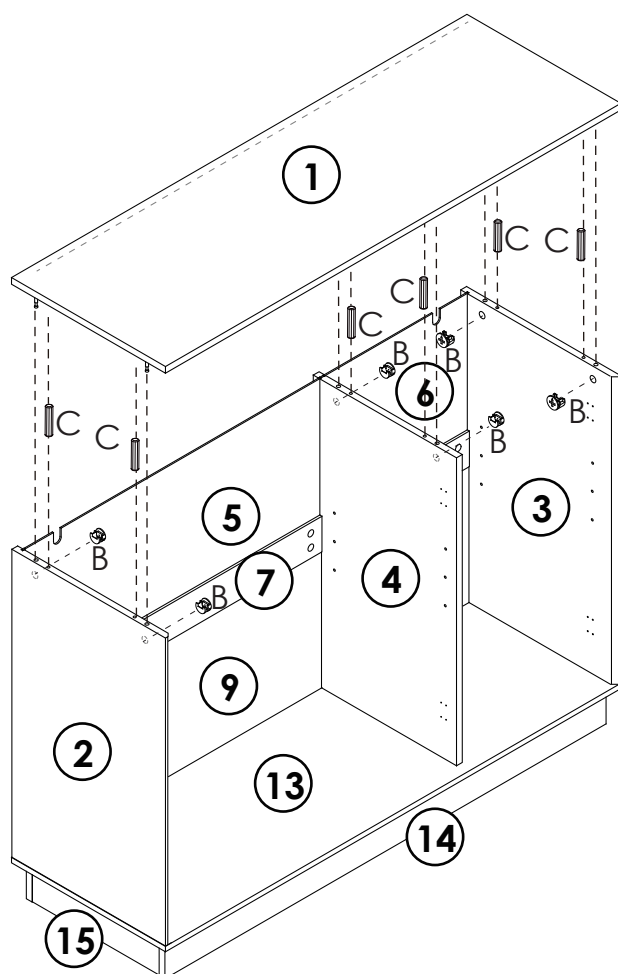


The 5,6th board needs to be fully inserted into the 1th board

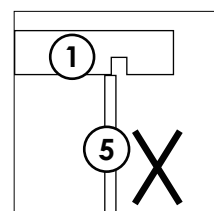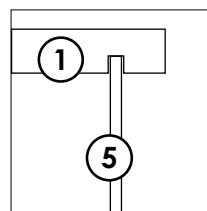

13

YOU WILL NEED


F x8

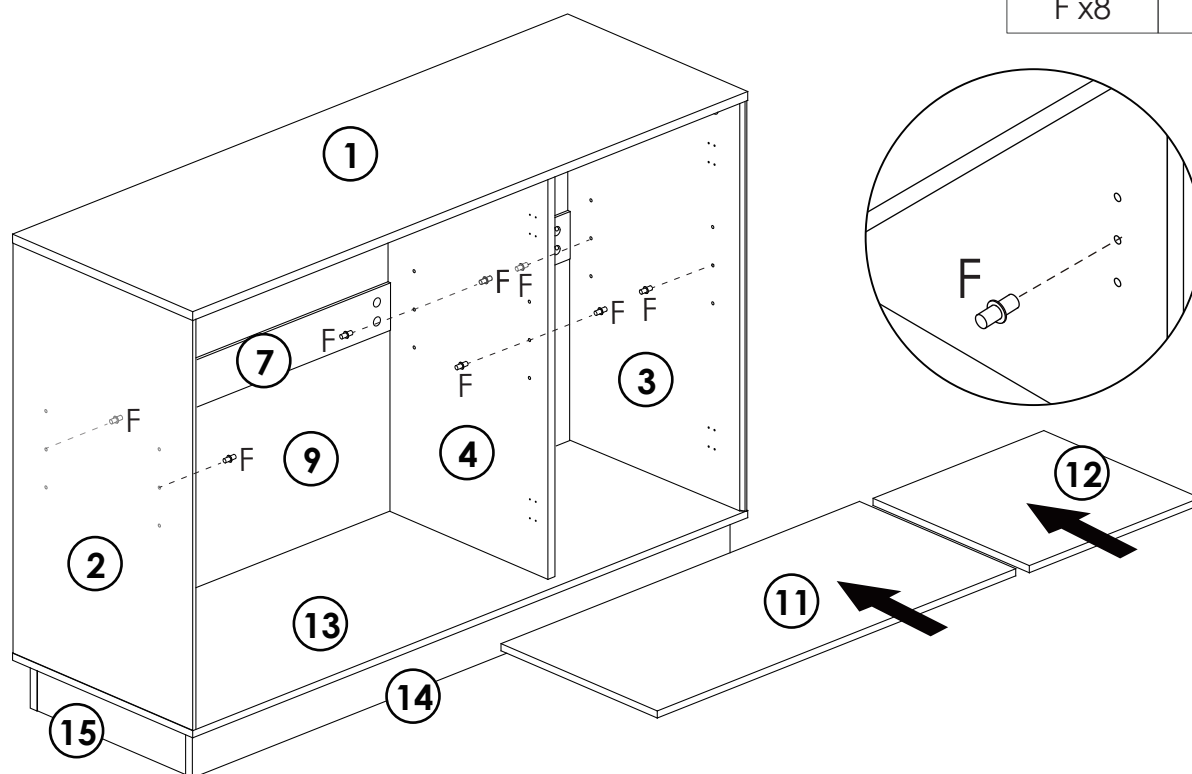

14

YOU WILL NEED


H x12

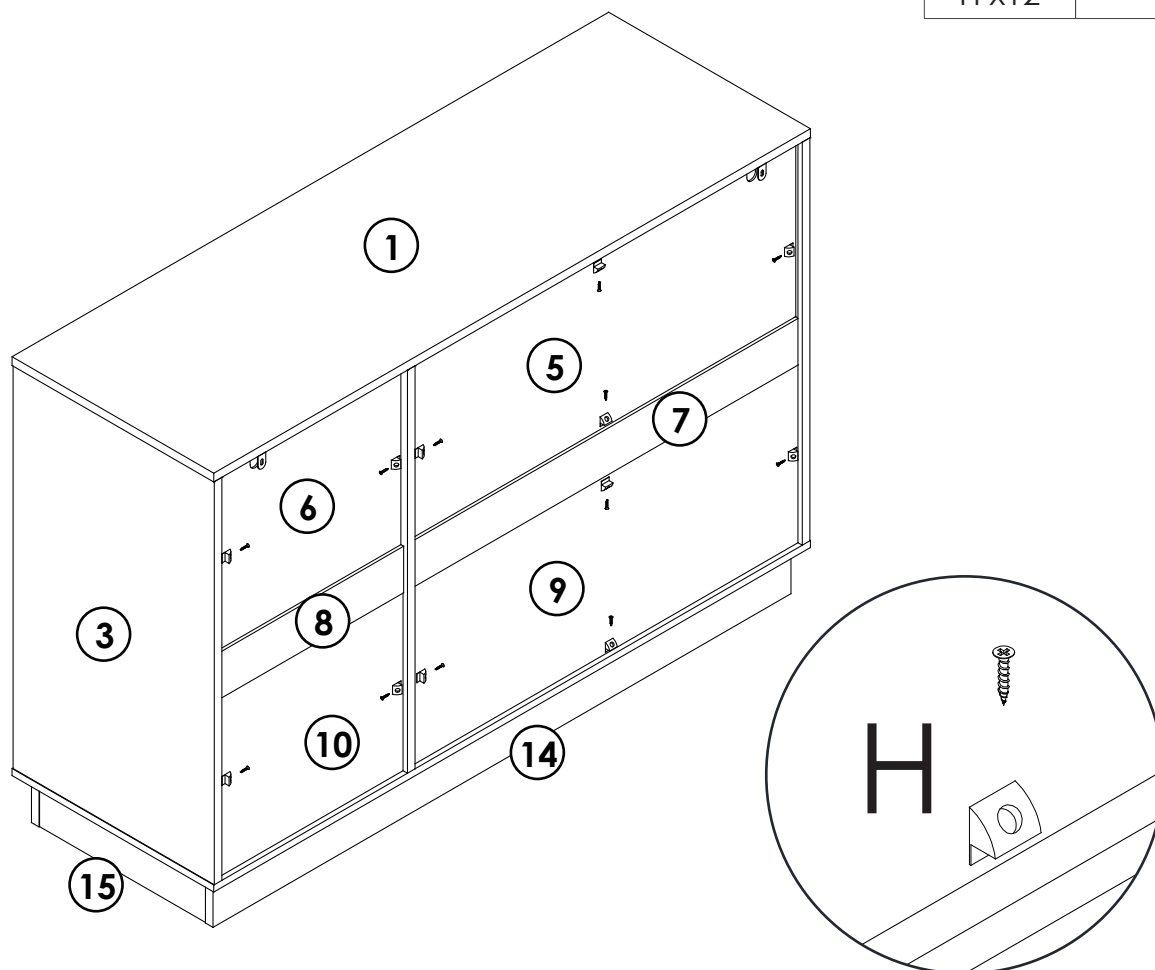

DANGER

To prevent furniture from toppling attach, mount, boor otherwise secure to walls and floors. Do not place unstable furniture near where children plAn anchor kit suitable for plaster walls is included with this item. If you require a different kit consult your nearhardware store.

Note: Toppling preventer must be installed otherwise there is a risk of tipping

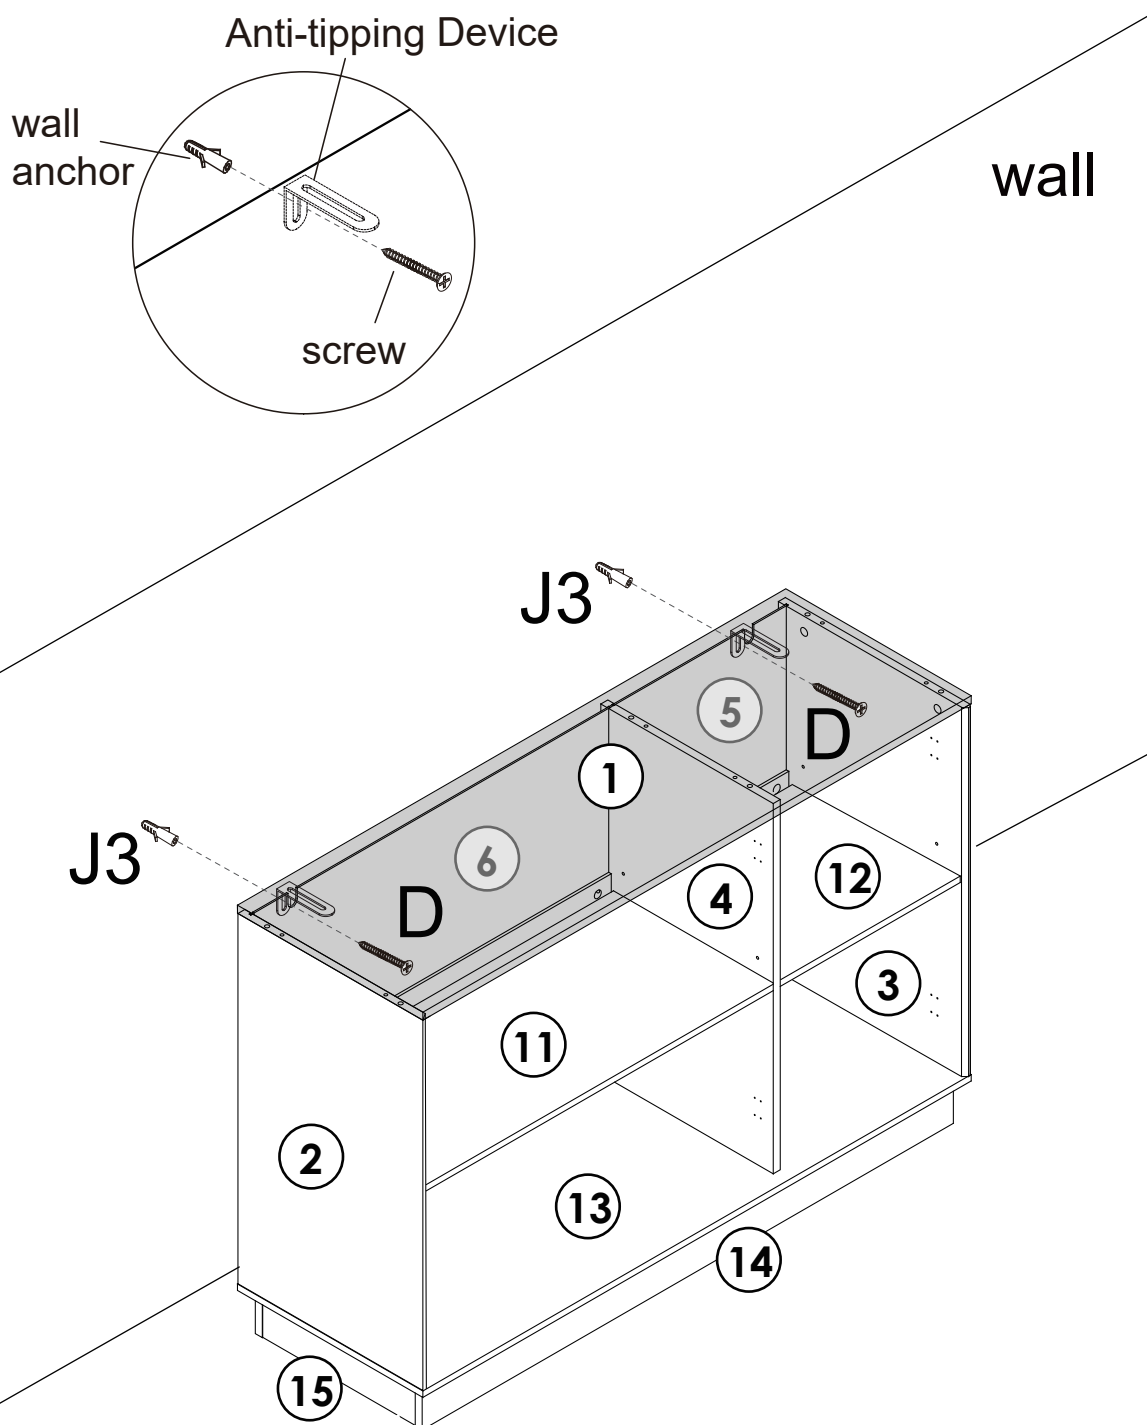


16

YOU WILL NEED

G x6

E x12

I x3

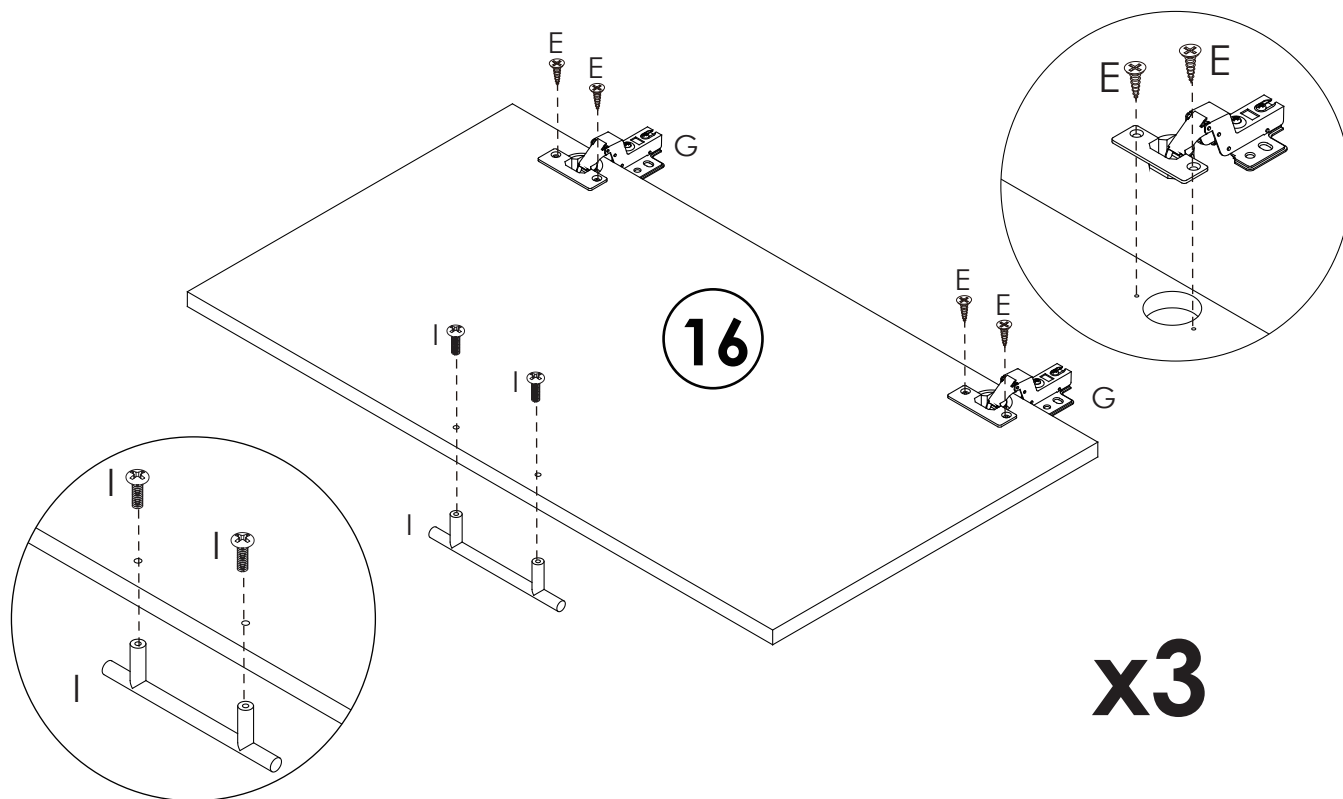


x3

17

YOU WILL NEED




E x24

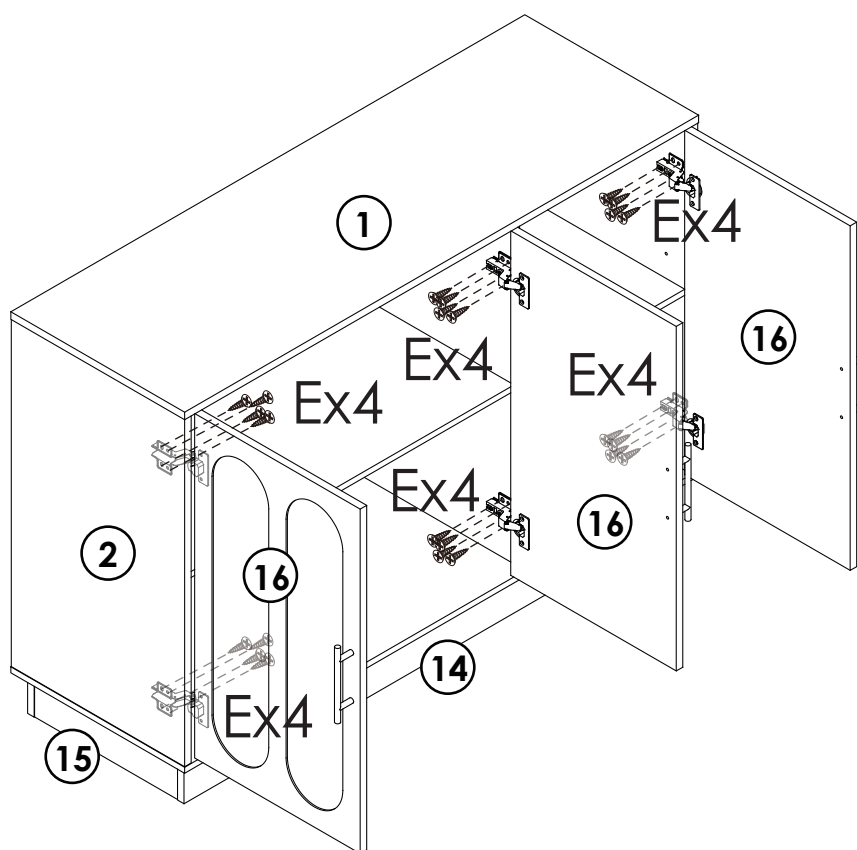


NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush.




NOTE :If you notice that the cabinet doors are not properly aligned, such as significant gaps or vertical or horizontal misalignment, please adhere to the following adjustment instructions.

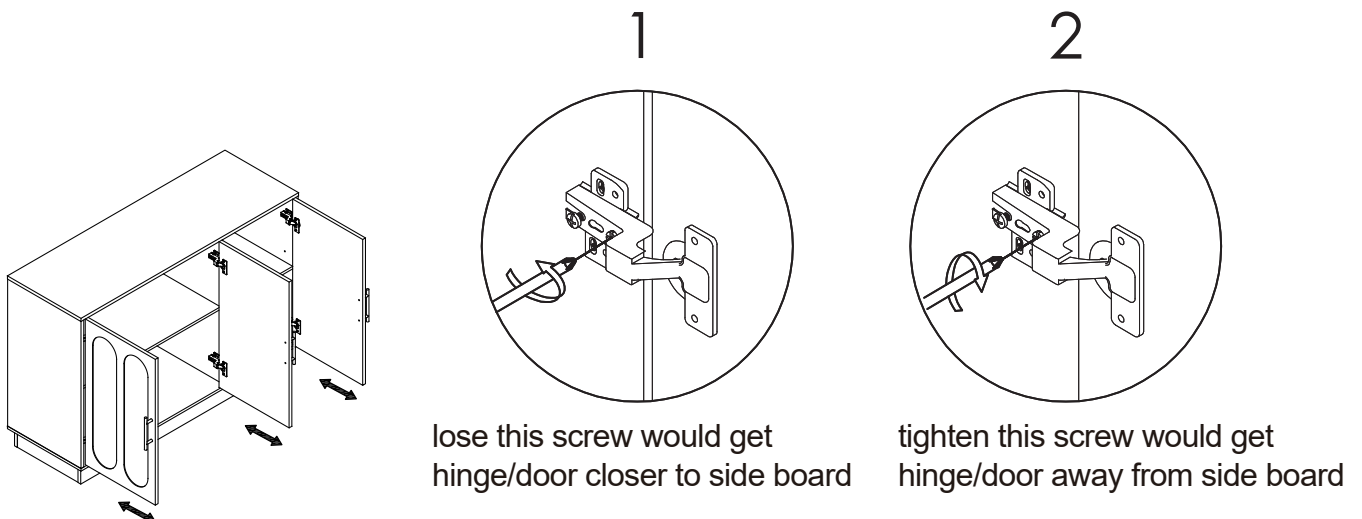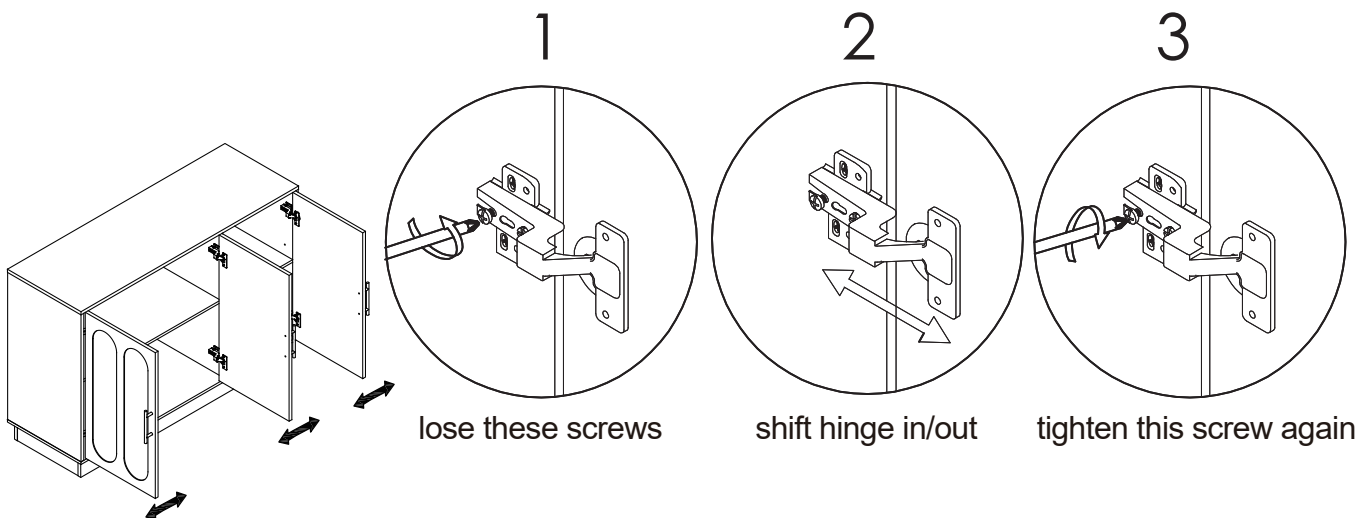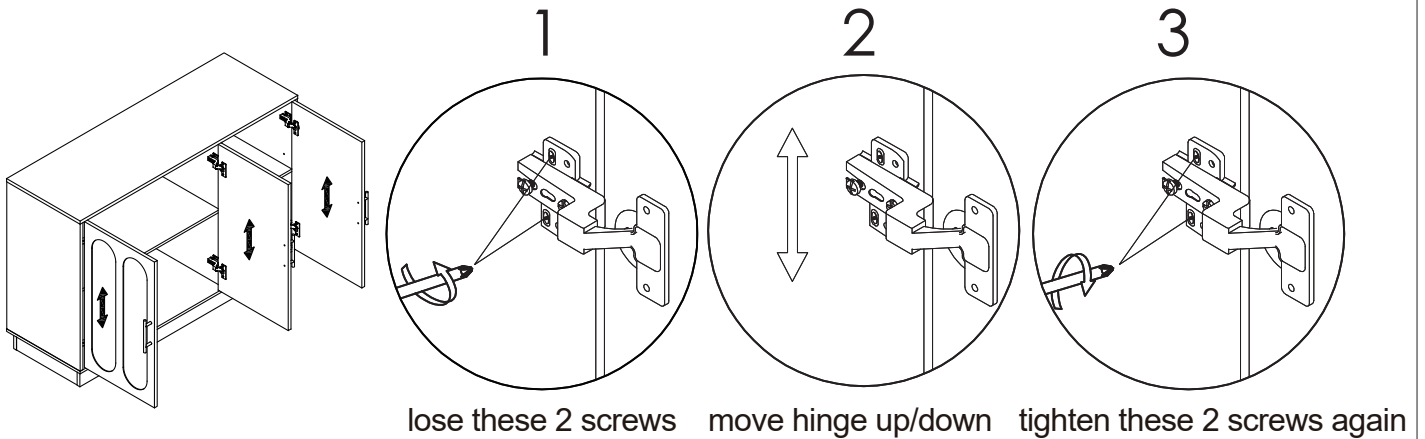

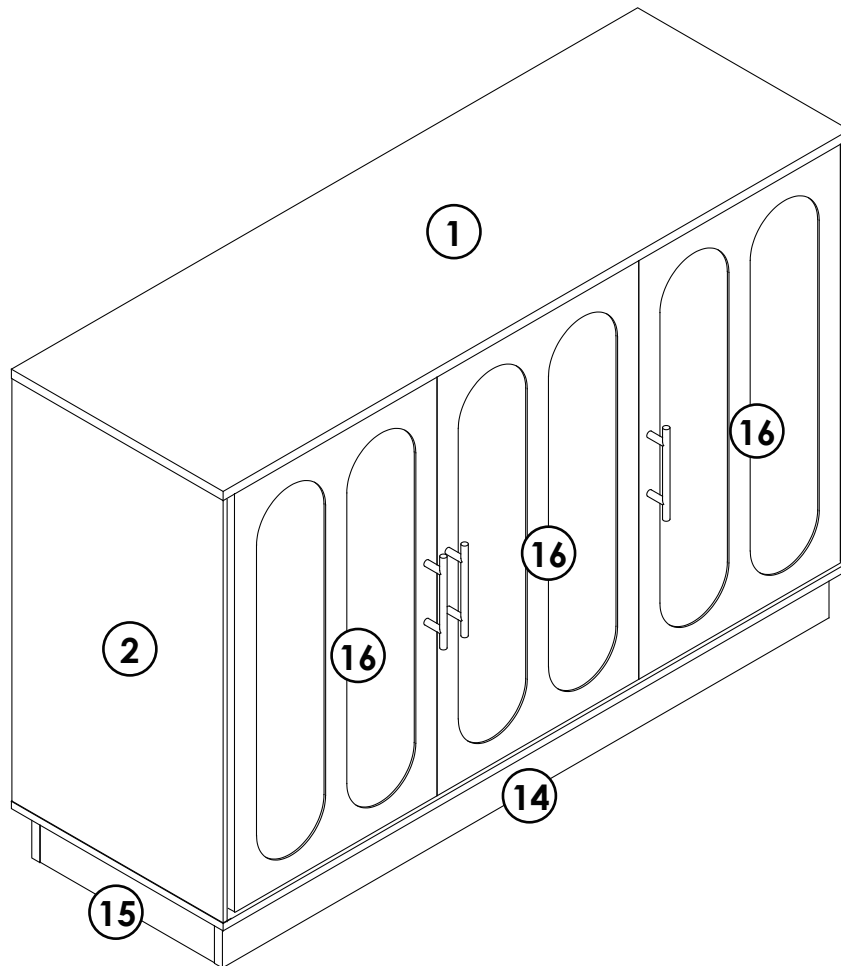

WARNING

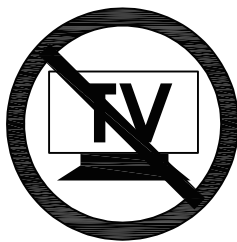

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Made in China

