


ASSEMBLY INSTRUCTIONS

SF-F80TV-40PC

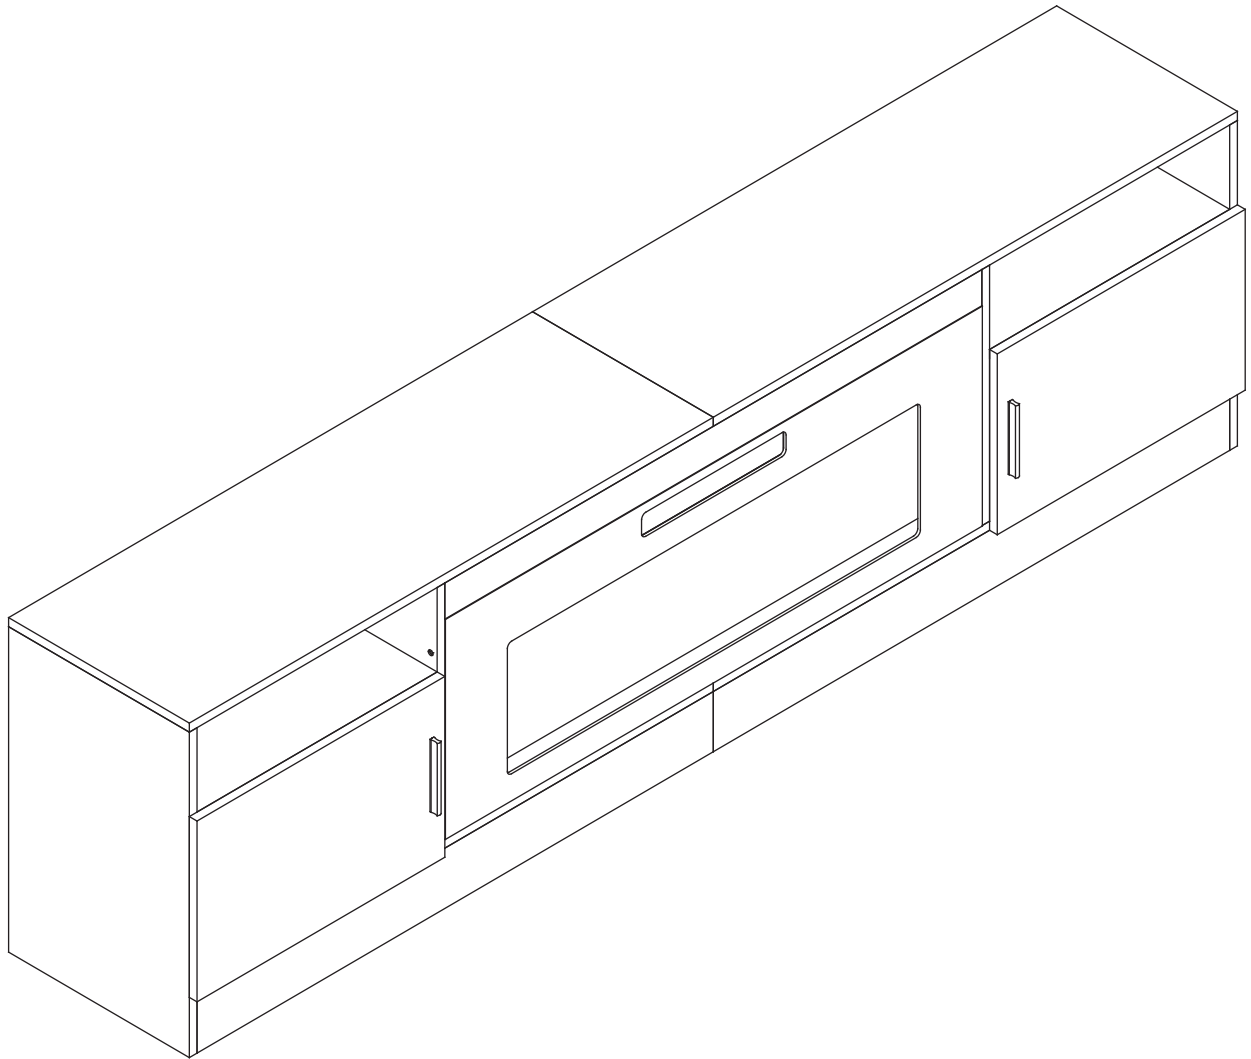

Scan the QR code for
faster installation




Attention: The Fireplace and TV stand come in **TWO PACKAGES**
Please don't be confused if only one package was received.

The light strip comes with fireplace. It should be installed
after **TWO PACKAGES** received.


 hellovitesse@gmail.com

 +1(503) 928-7812

Parts list

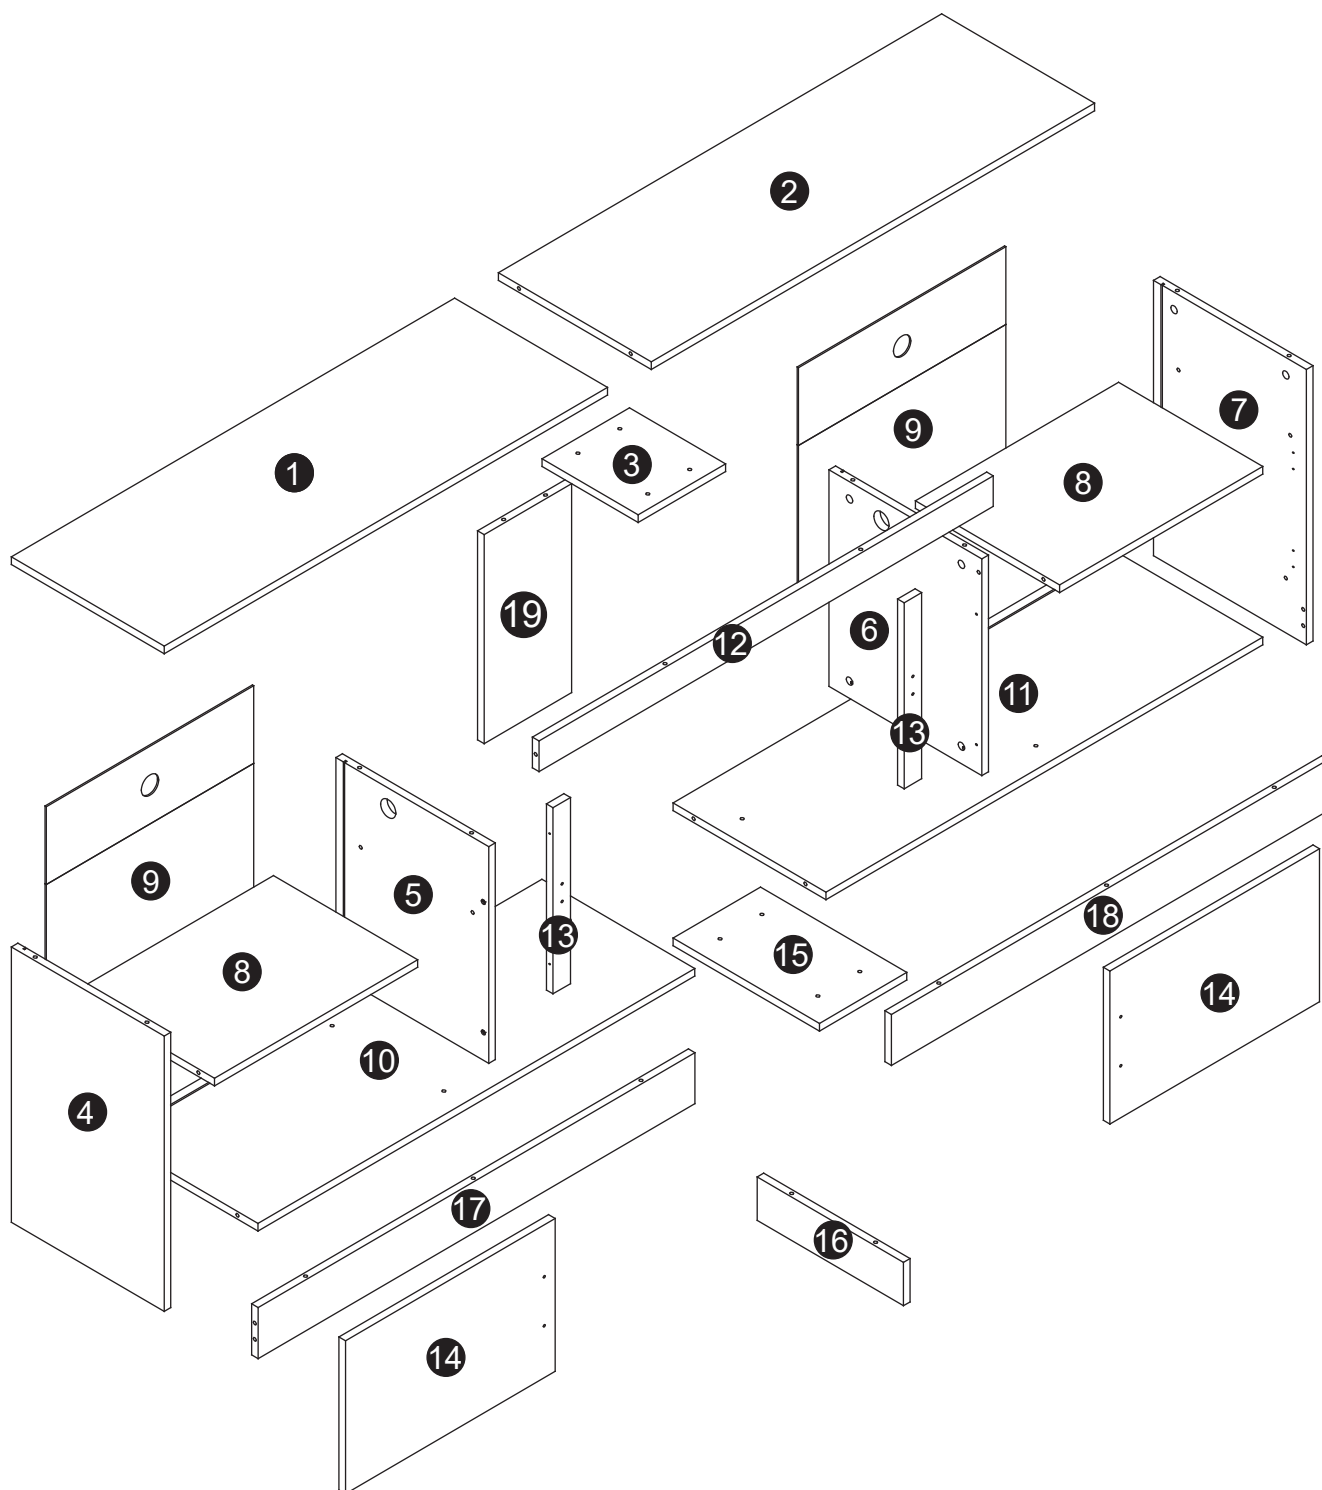


Ax44+1




Bx52+1




Cx8



Ex4



Fx2




Gx26+2




M3.5x14


Hx4



Ix4



Jx4




M4x40

Installation steps

STEP 1




If you encounter any difficulty during installation, please scan the QR code.

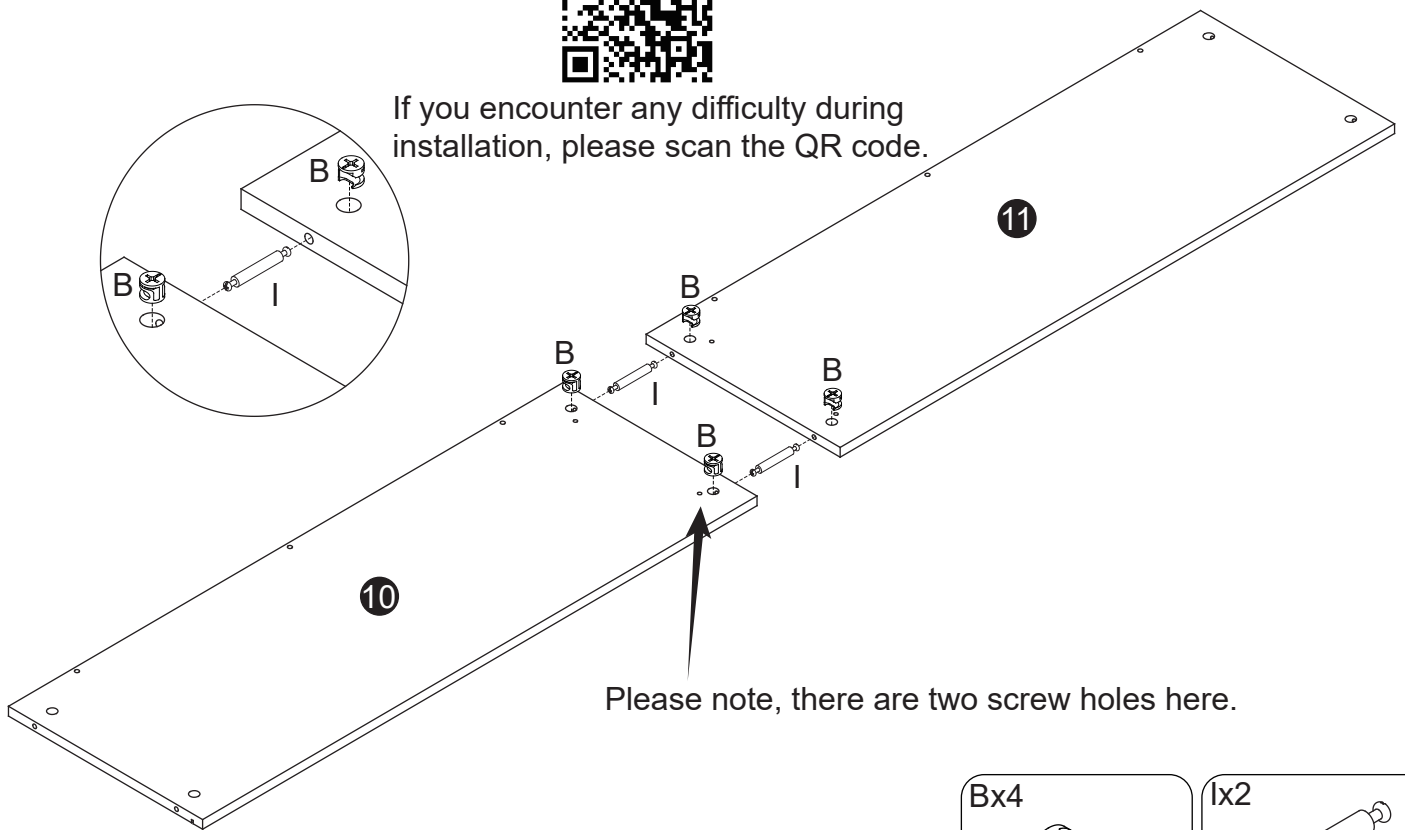



Bx4




1x2



STEP 2

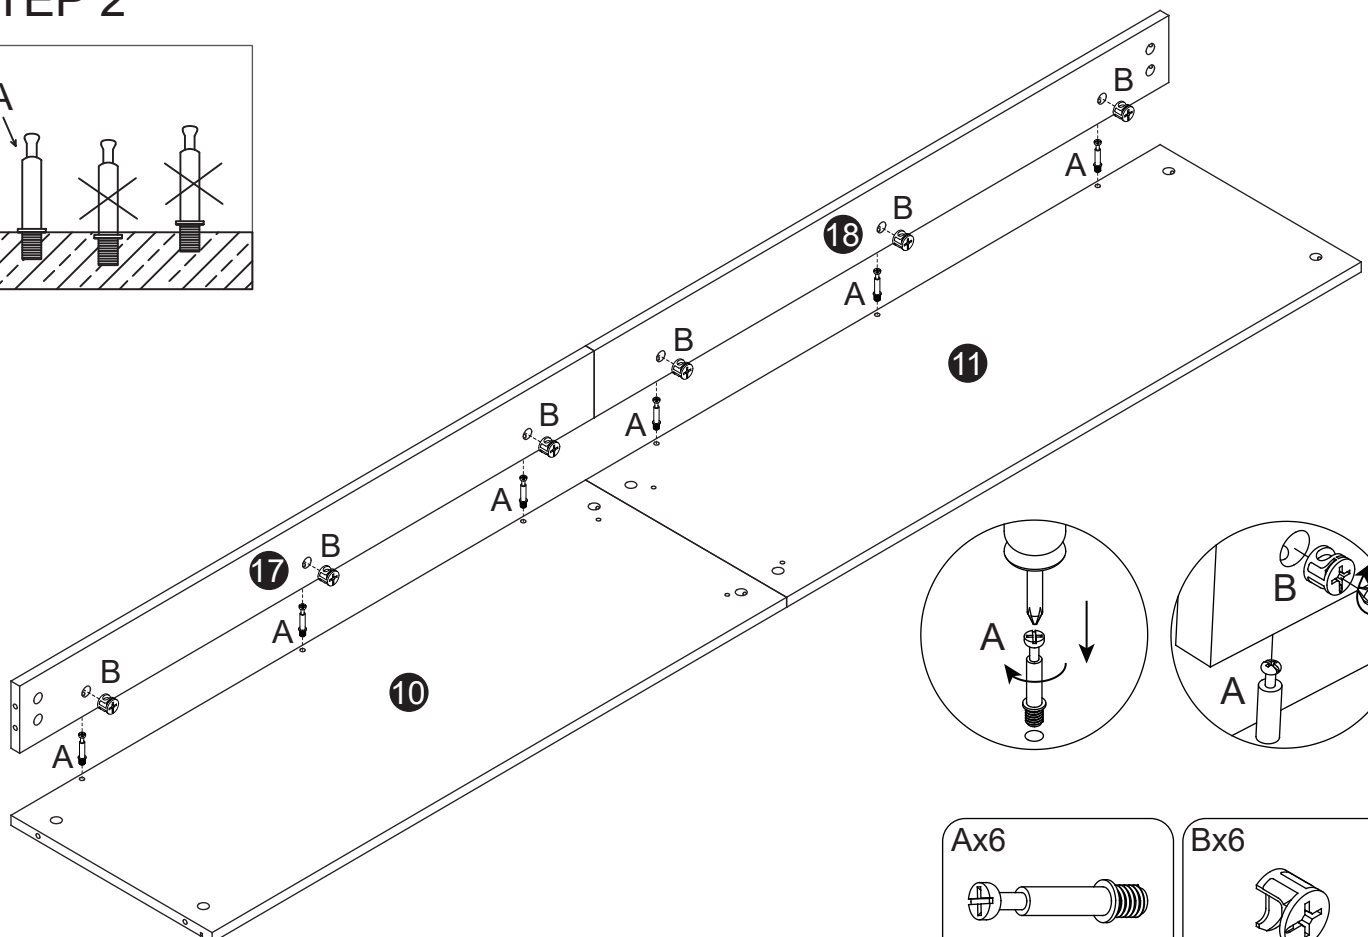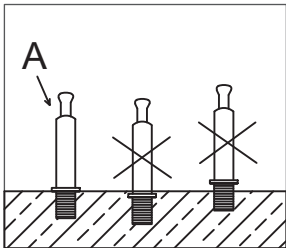

Ax6




Bx6




Installation steps


STEP 3

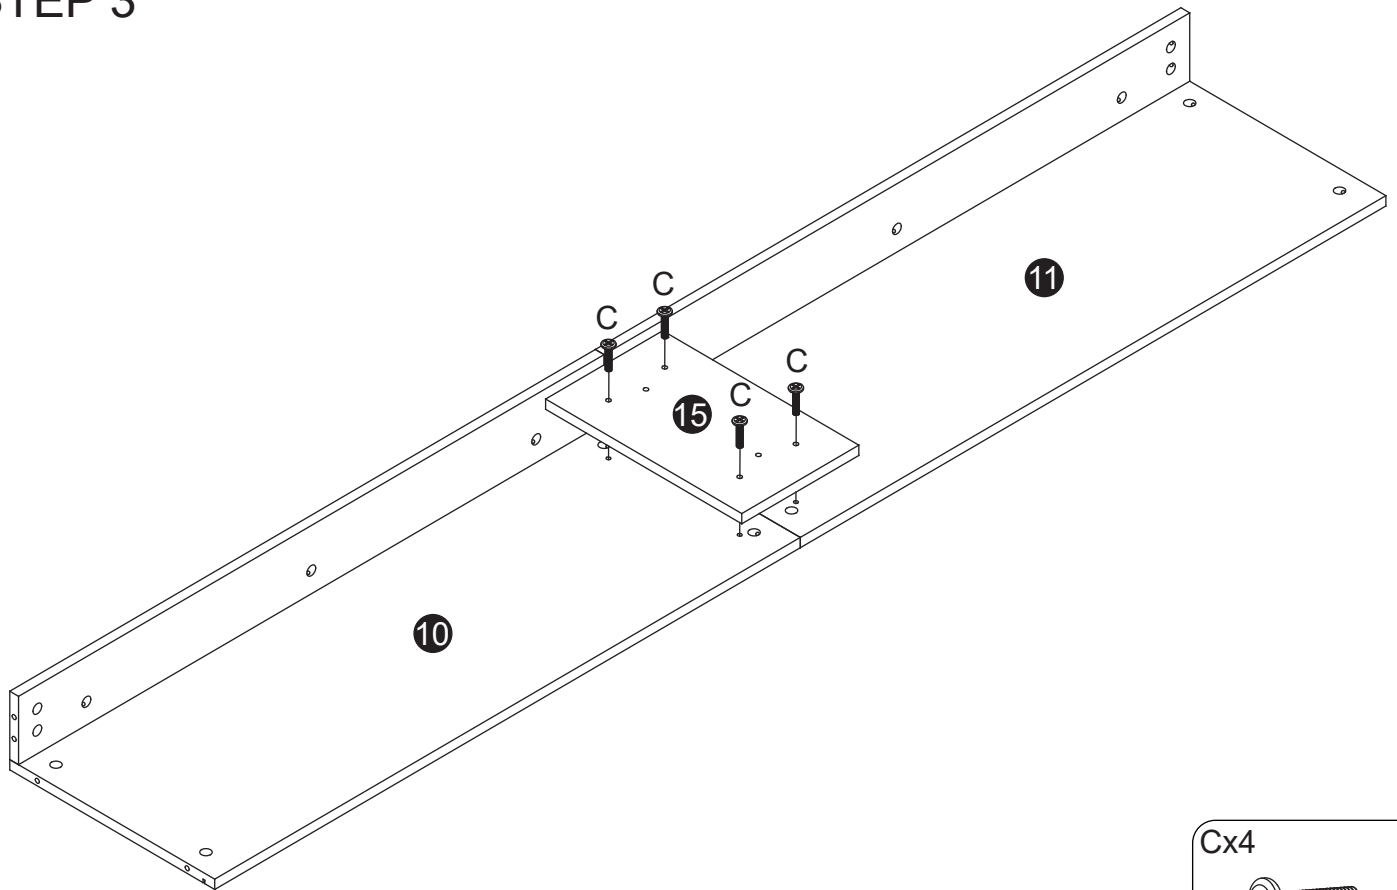


Cx4



STEP 4

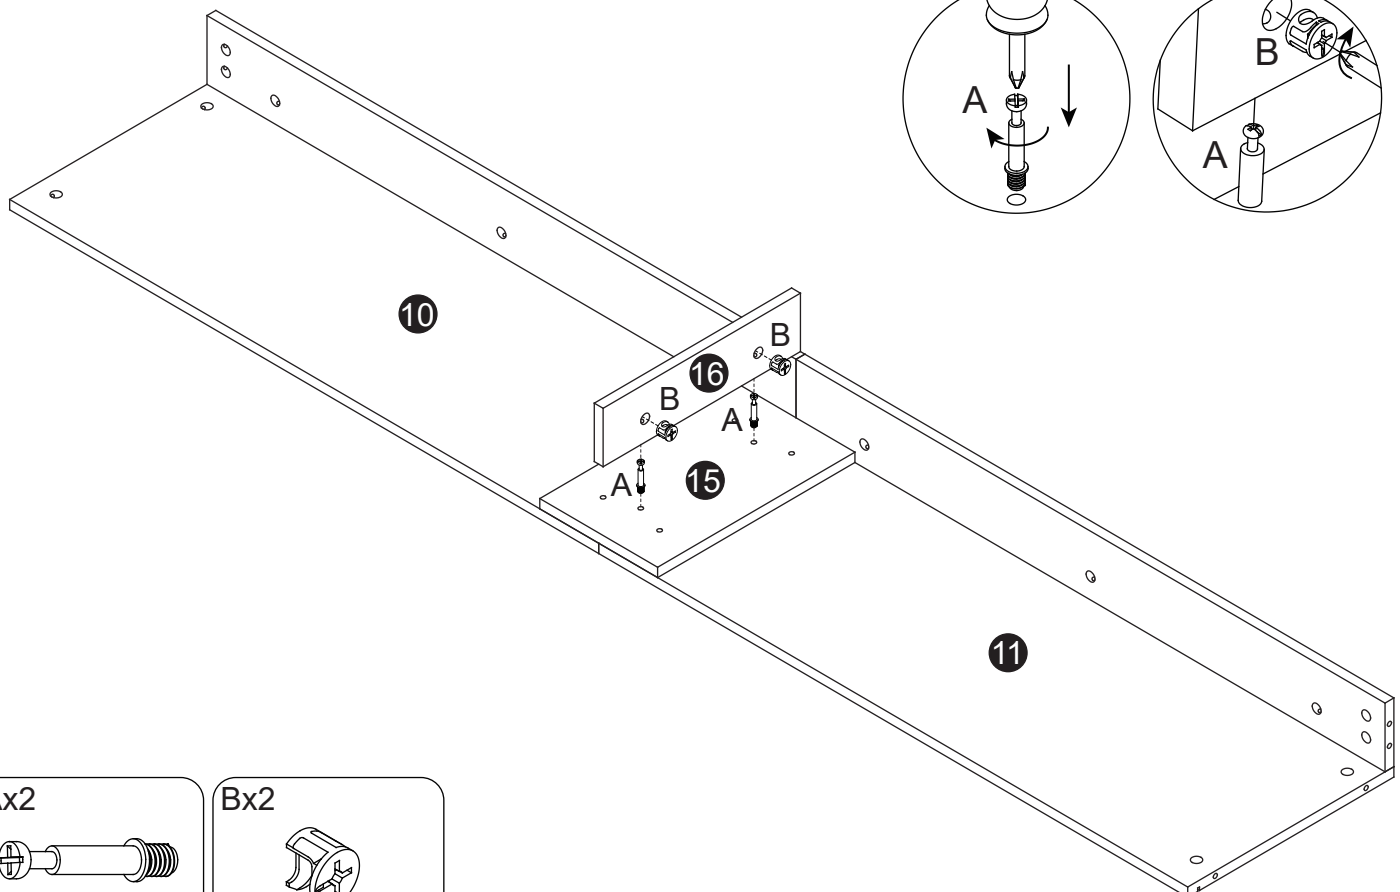

Ax2







Bx2







Installation steps

STEP 5


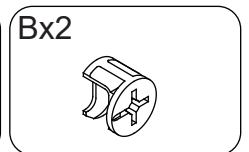
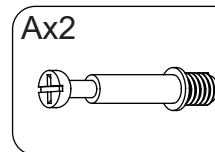
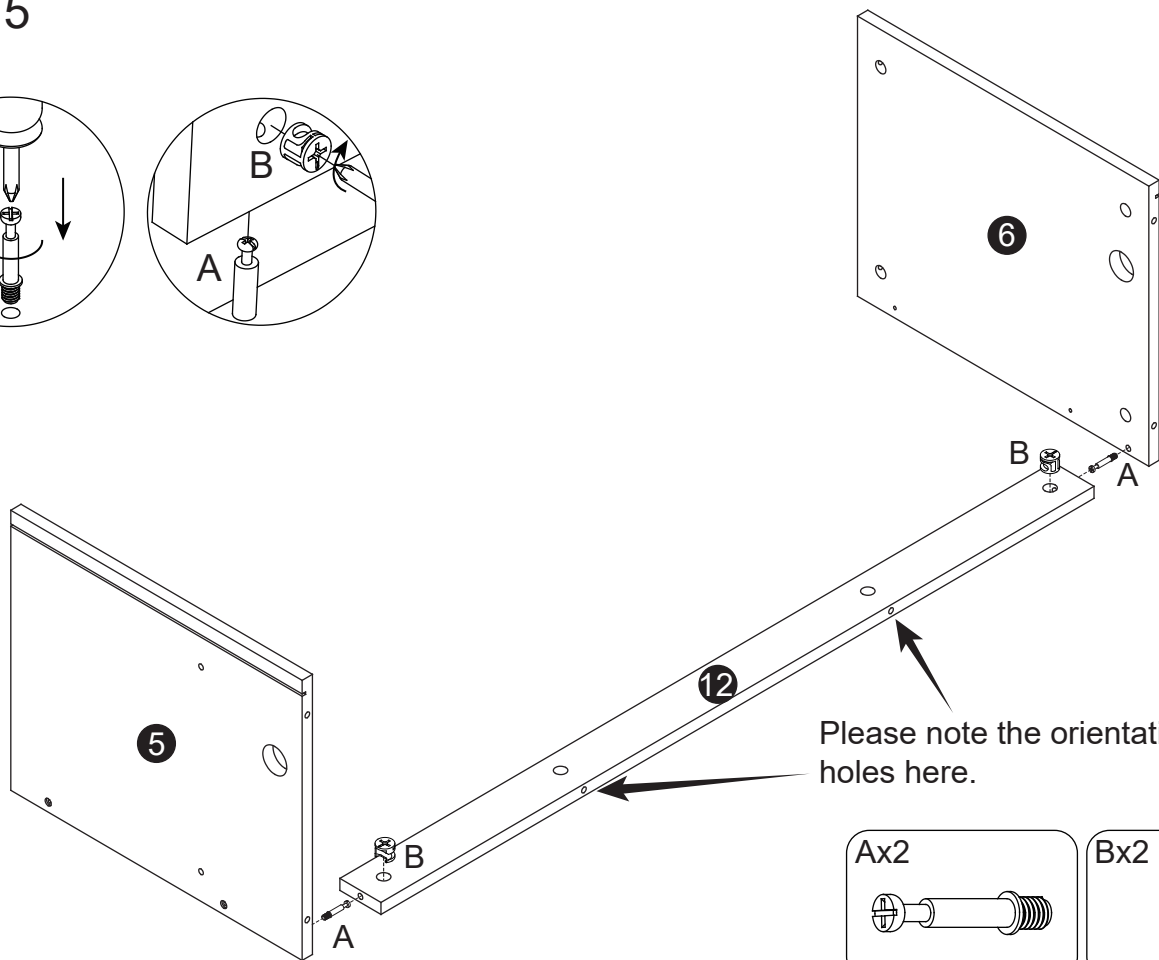
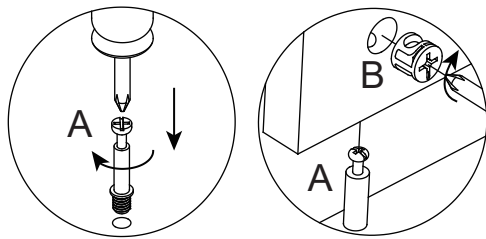


STEP 6

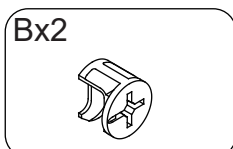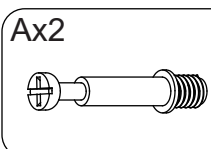
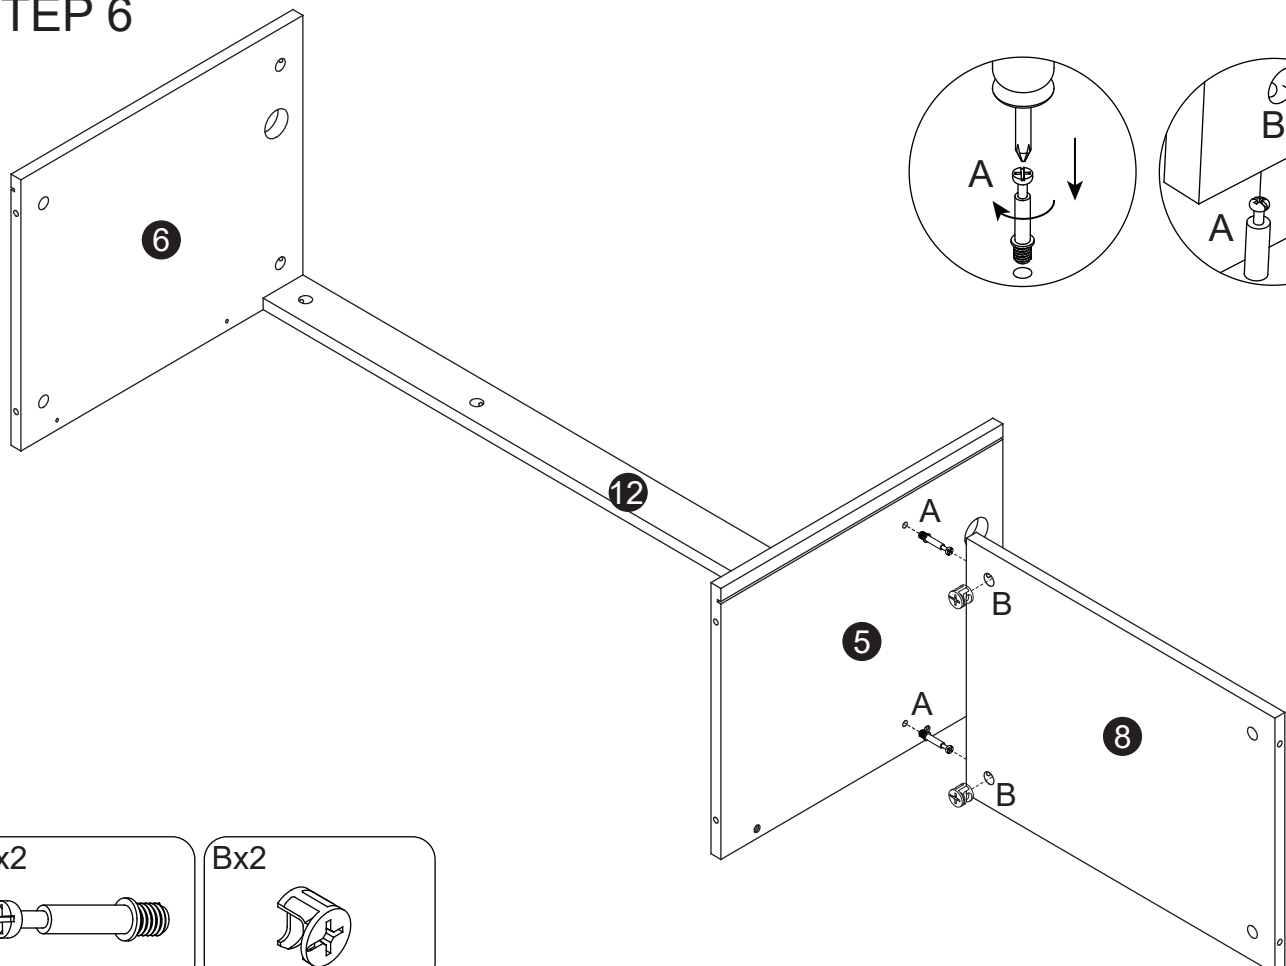
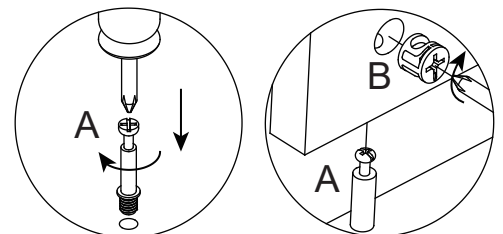


Installation steps



STEP 7

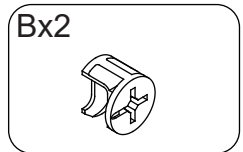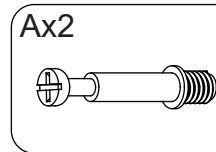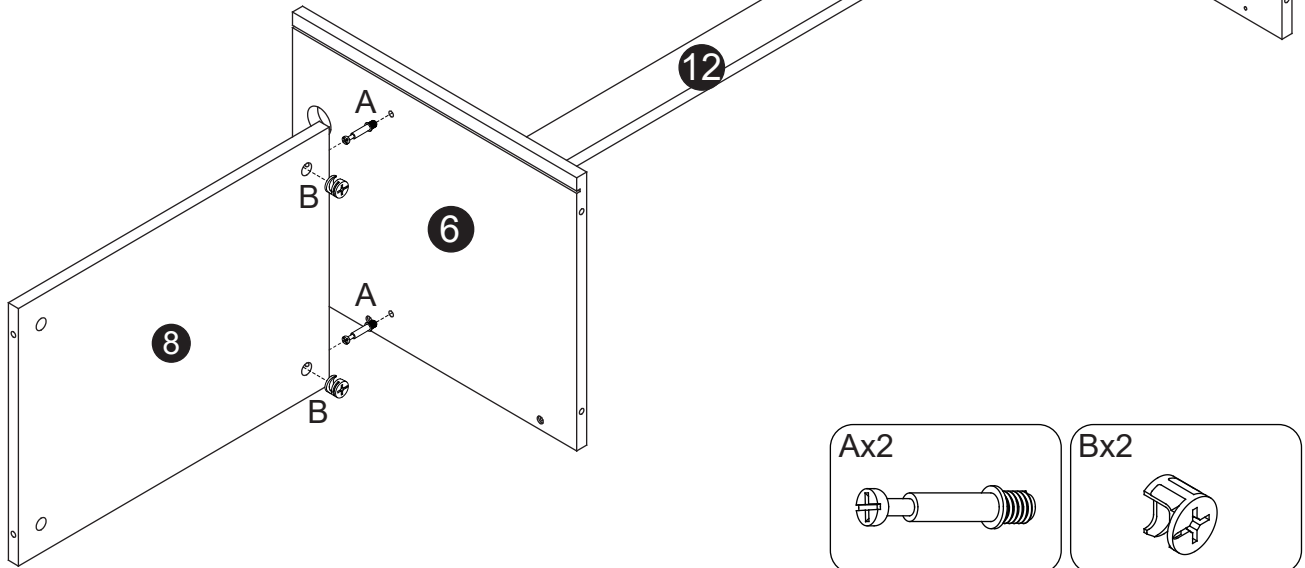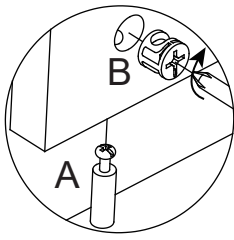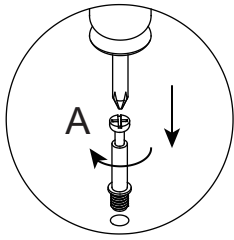

STEP 8

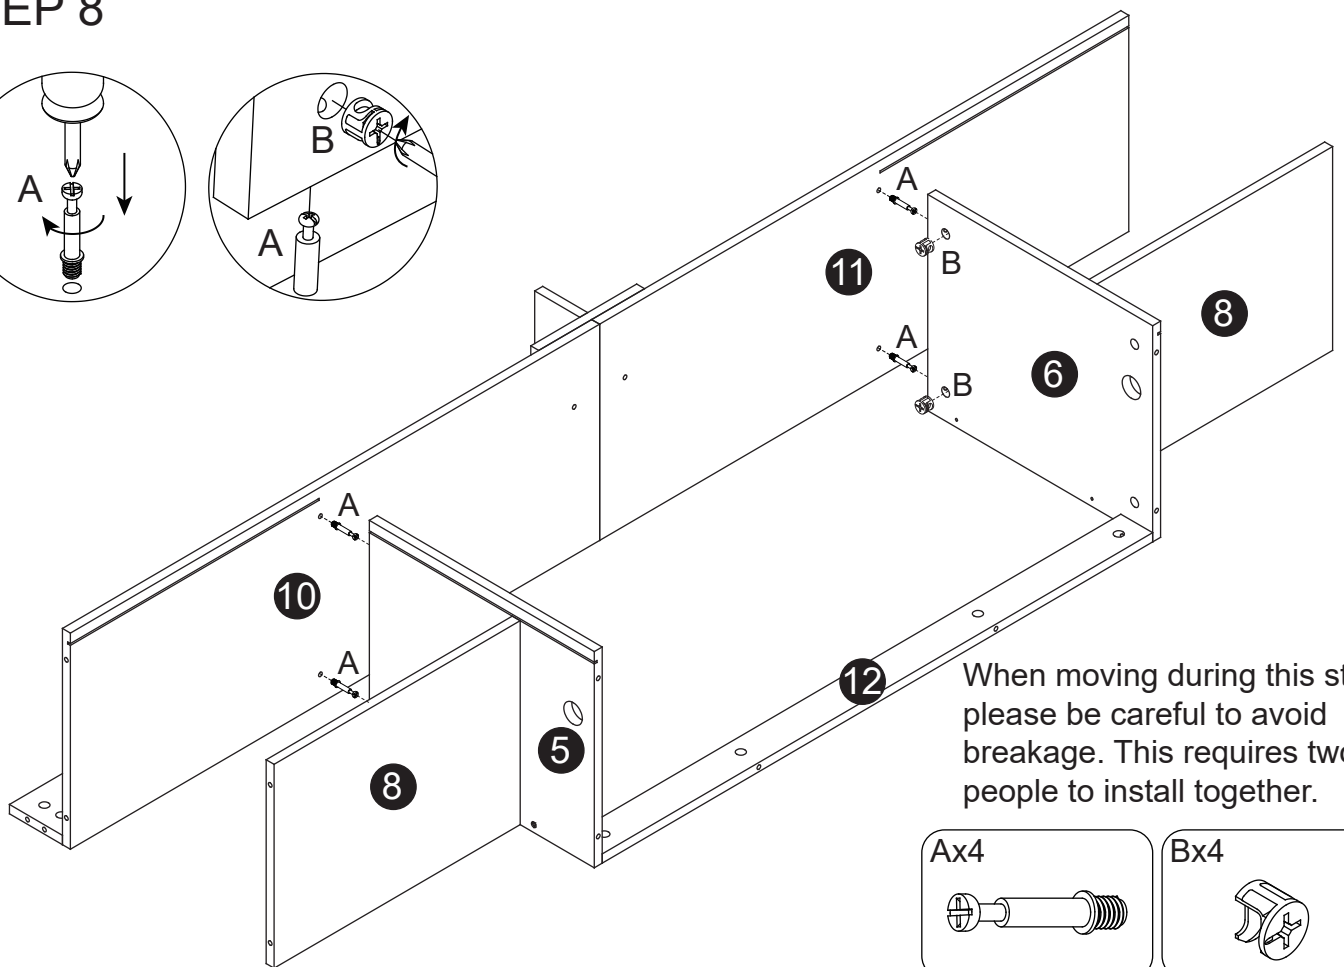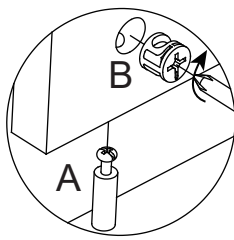
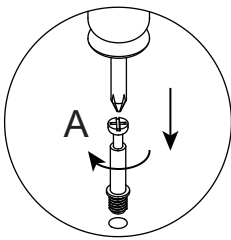


When moving during this step, please be careful to avoid breakage. This requires two people to install together.

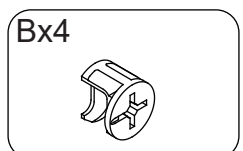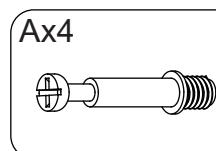


Installation steps



STEP 9

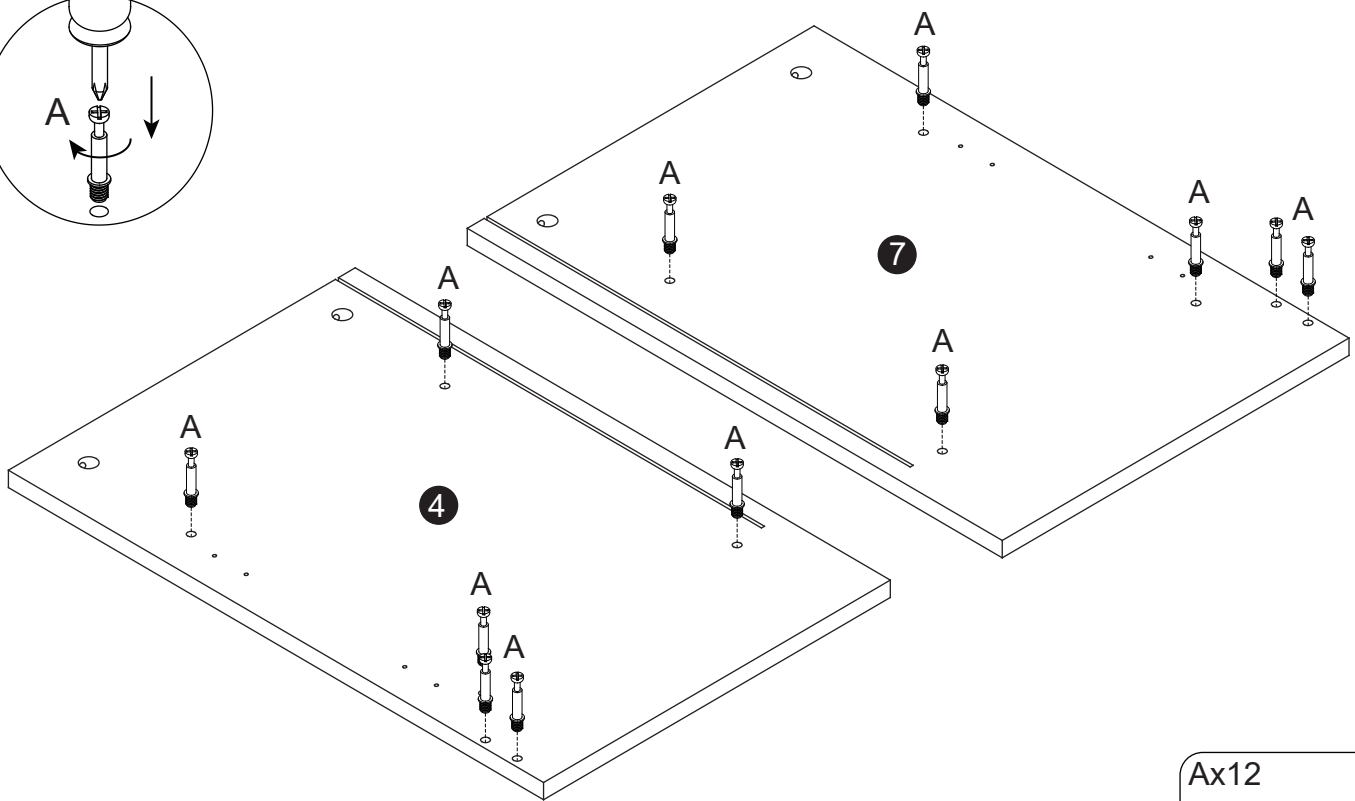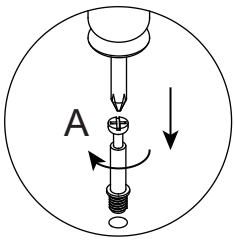

Ax12



STEP 10

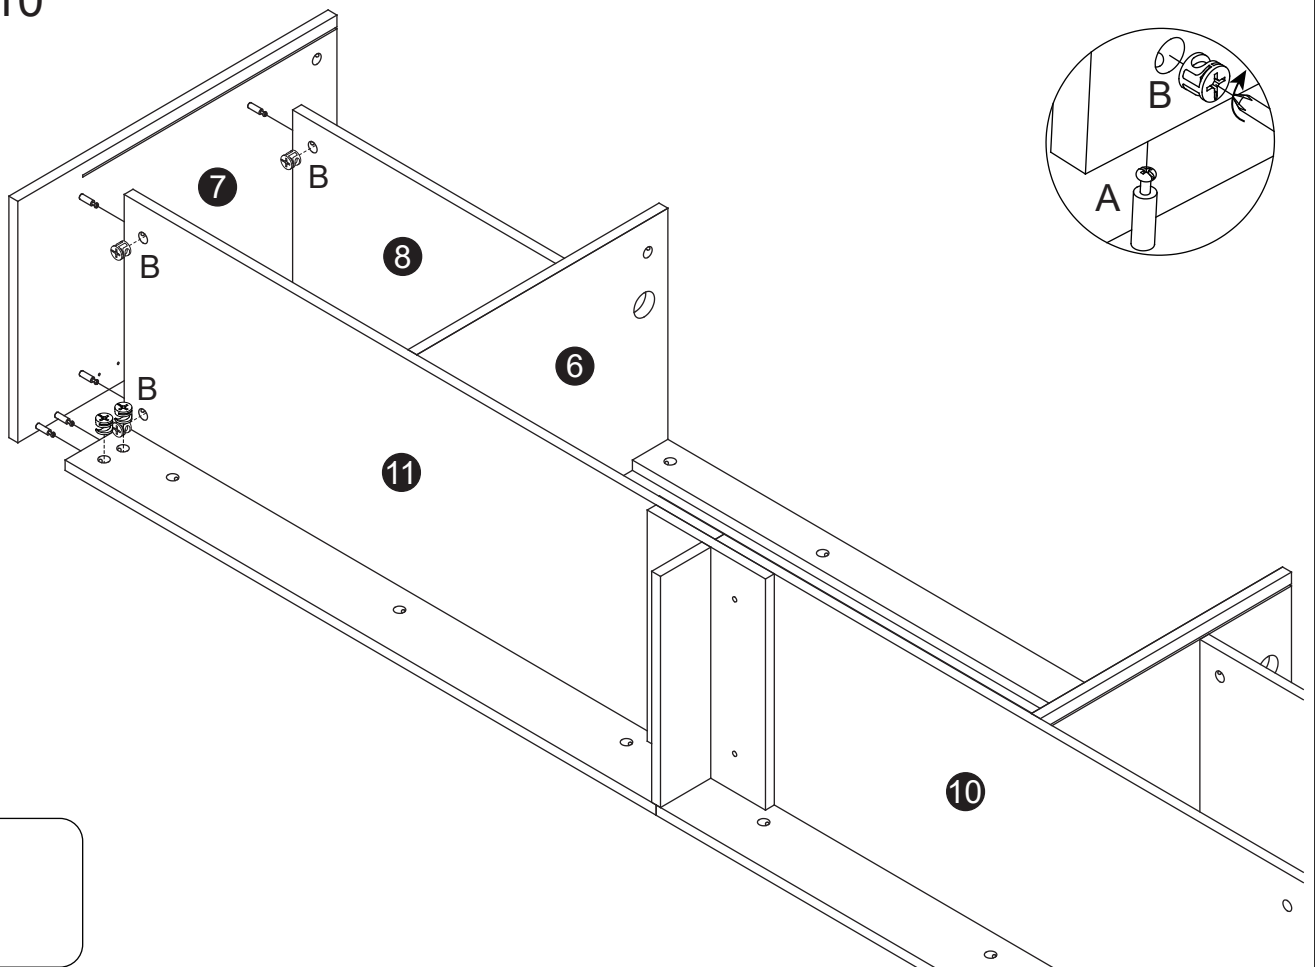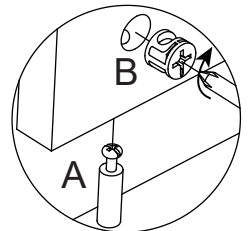


Bx6




Installation steps

STEP 11

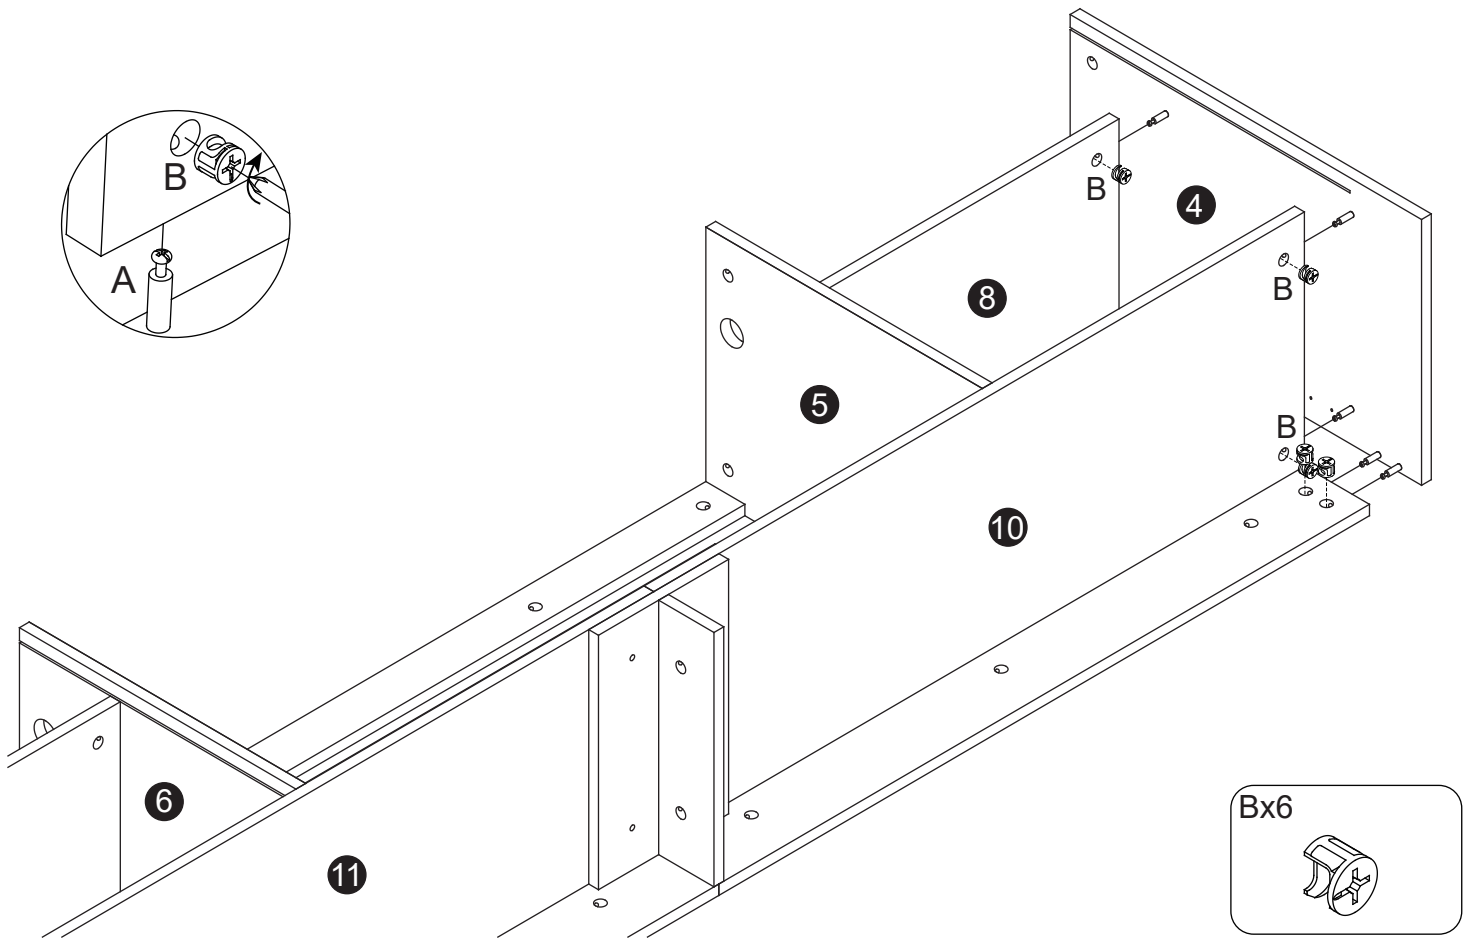


STEP 12

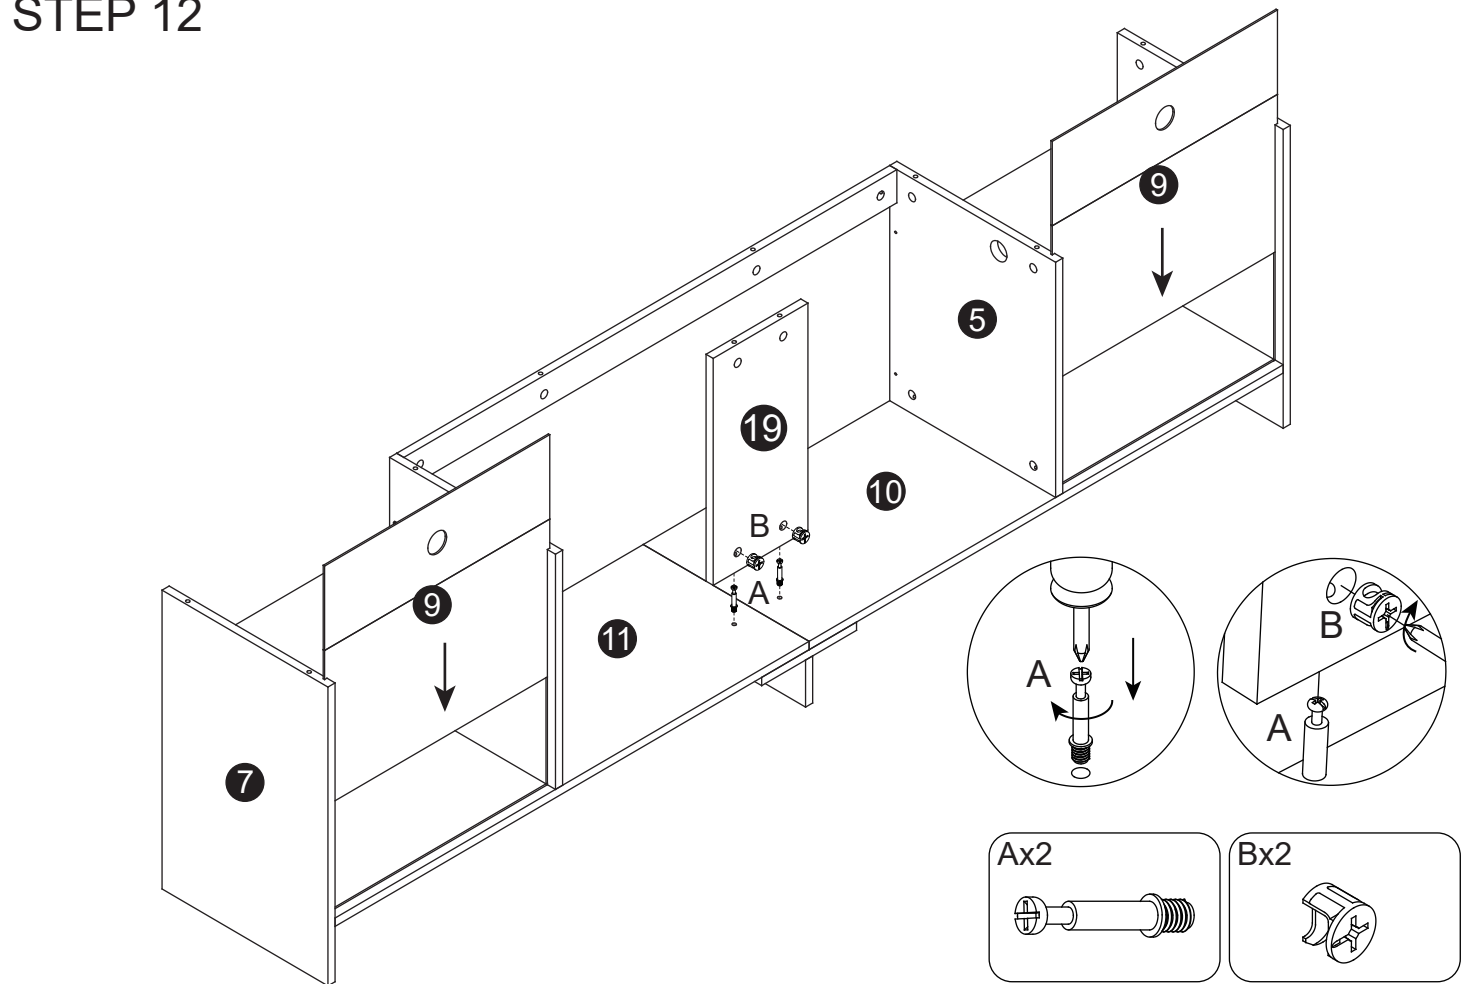

Installation steps


STEP 13

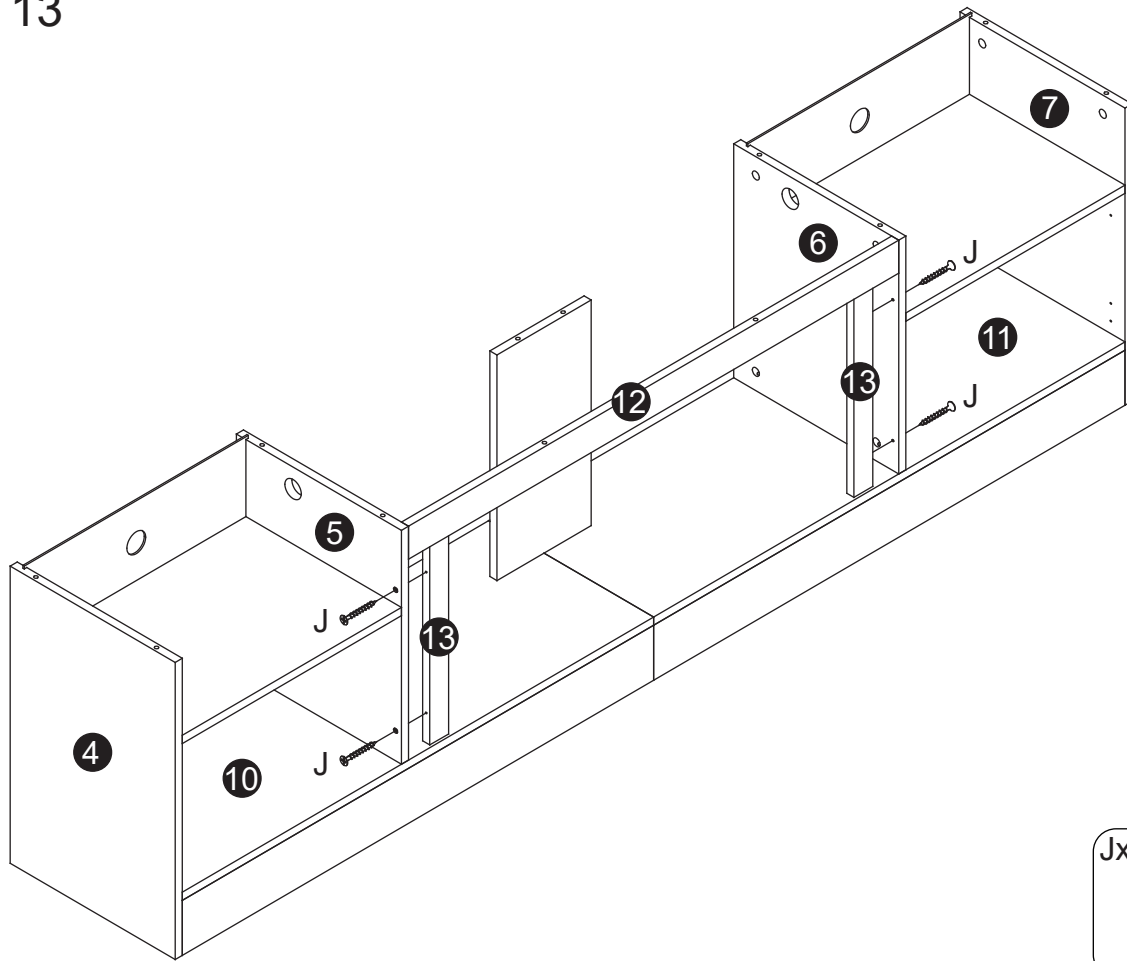

Jx4




STEP 14

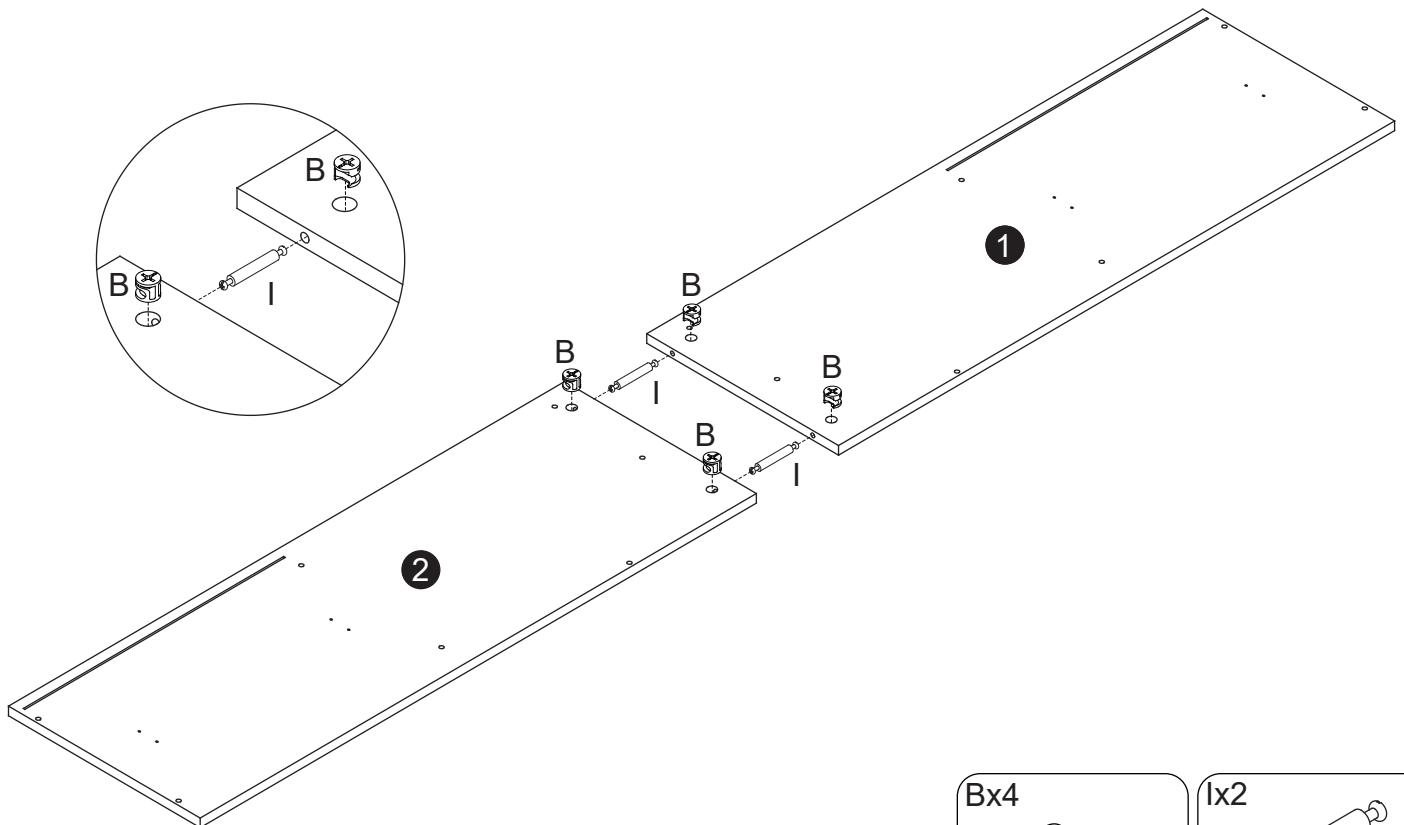

Bx4




Ix2




Installation steps

STEP 15


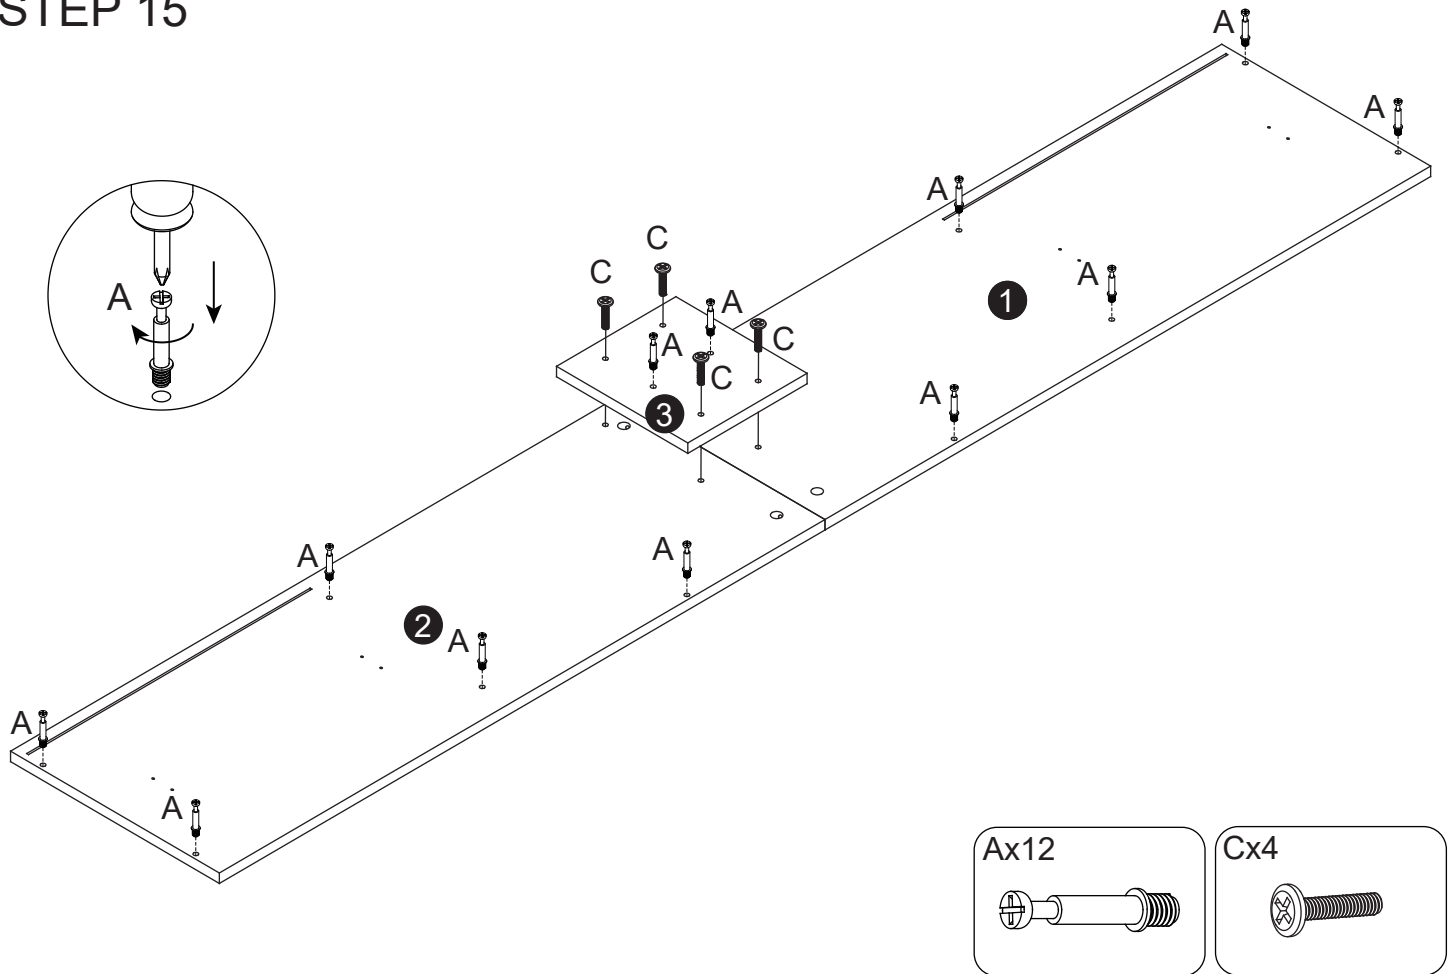


STEP 16

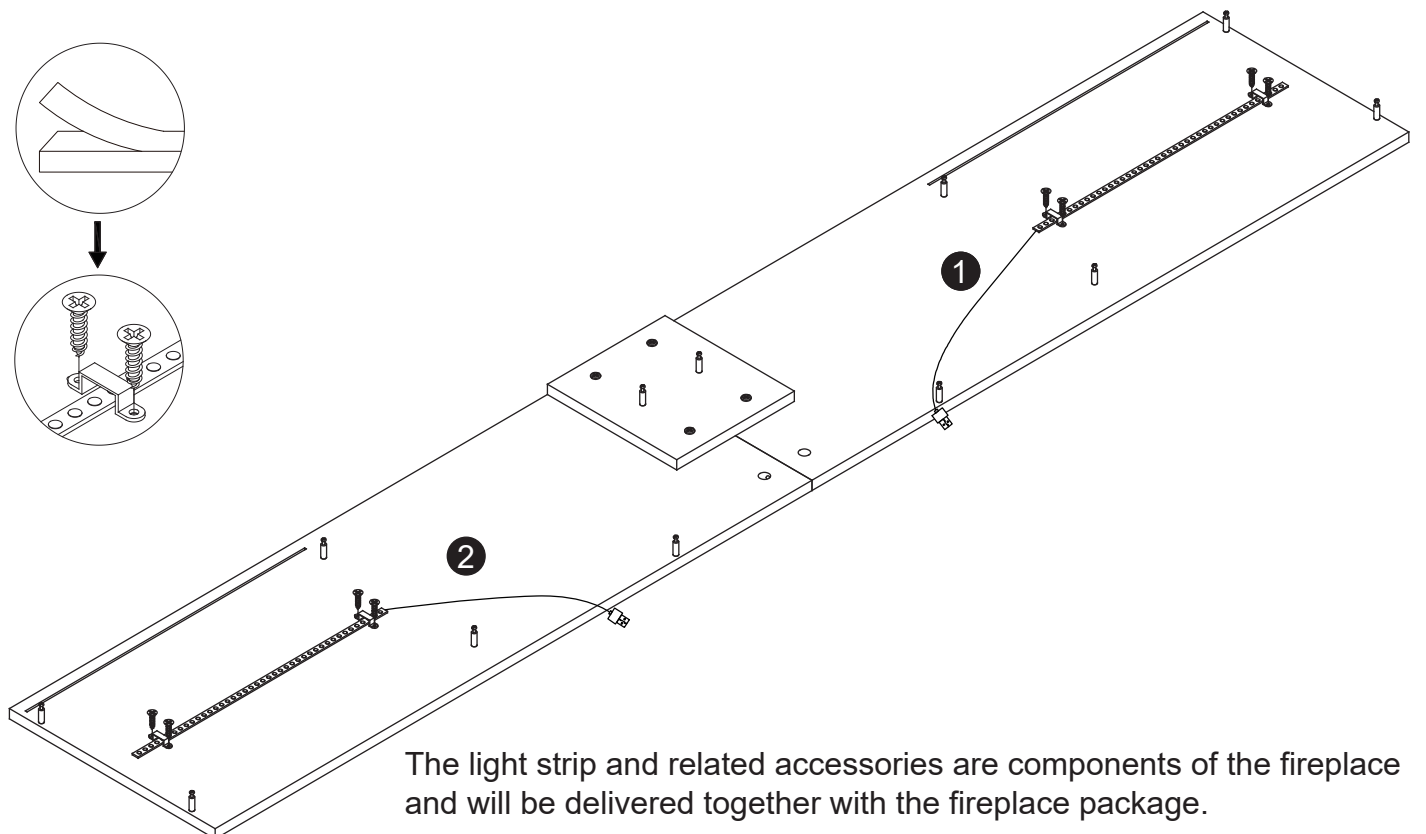

Installation steps

STEP 17

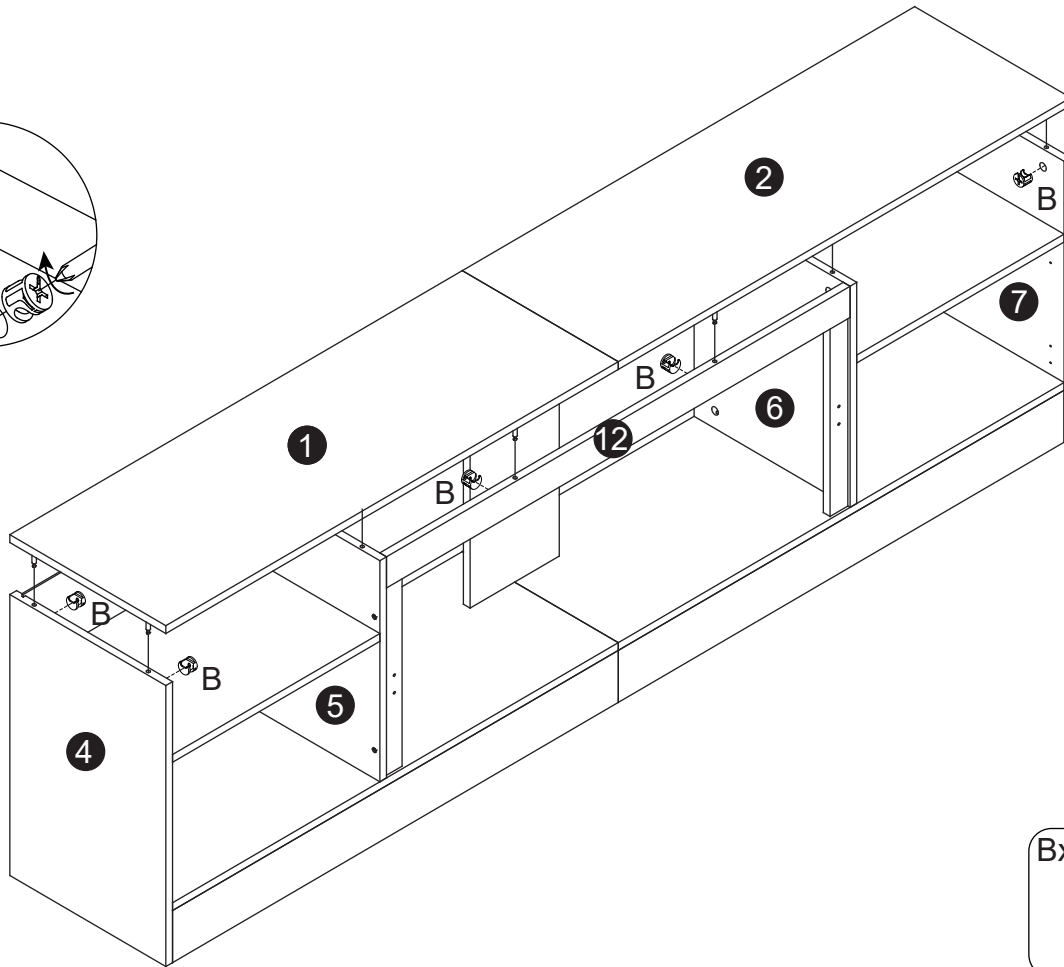
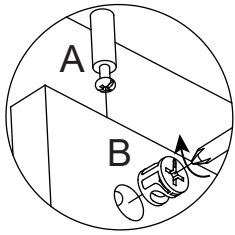


Bx12




STEP 18


Please peel off the protective film for this step.

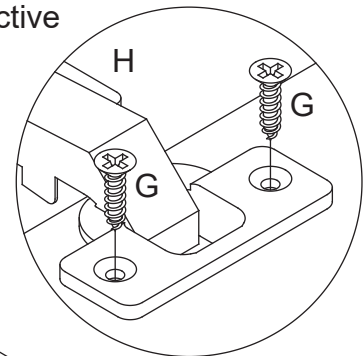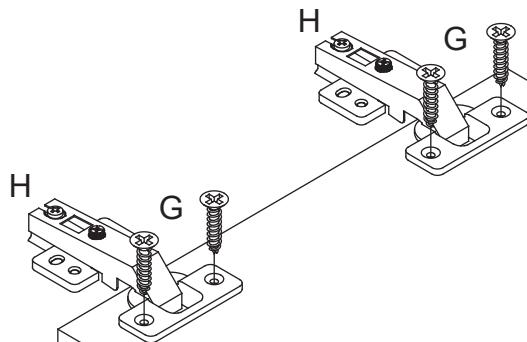


14

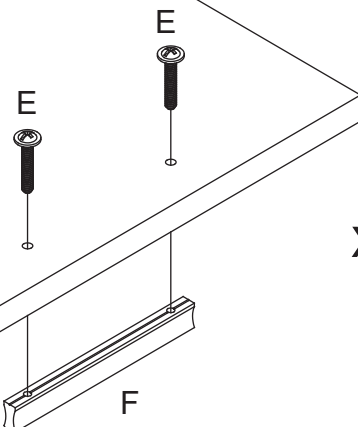


Ex4



Fx2




Gx8





M3.5x14

Hx4



Installation steps



STEP 19

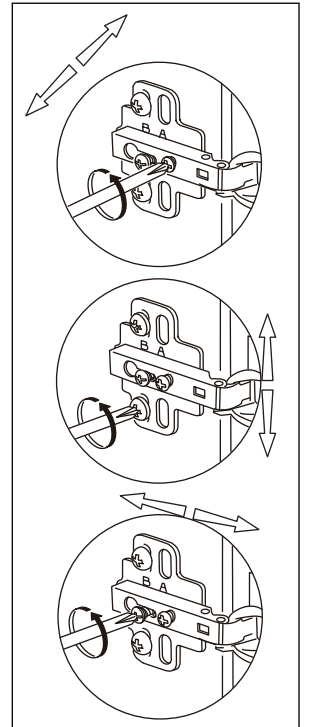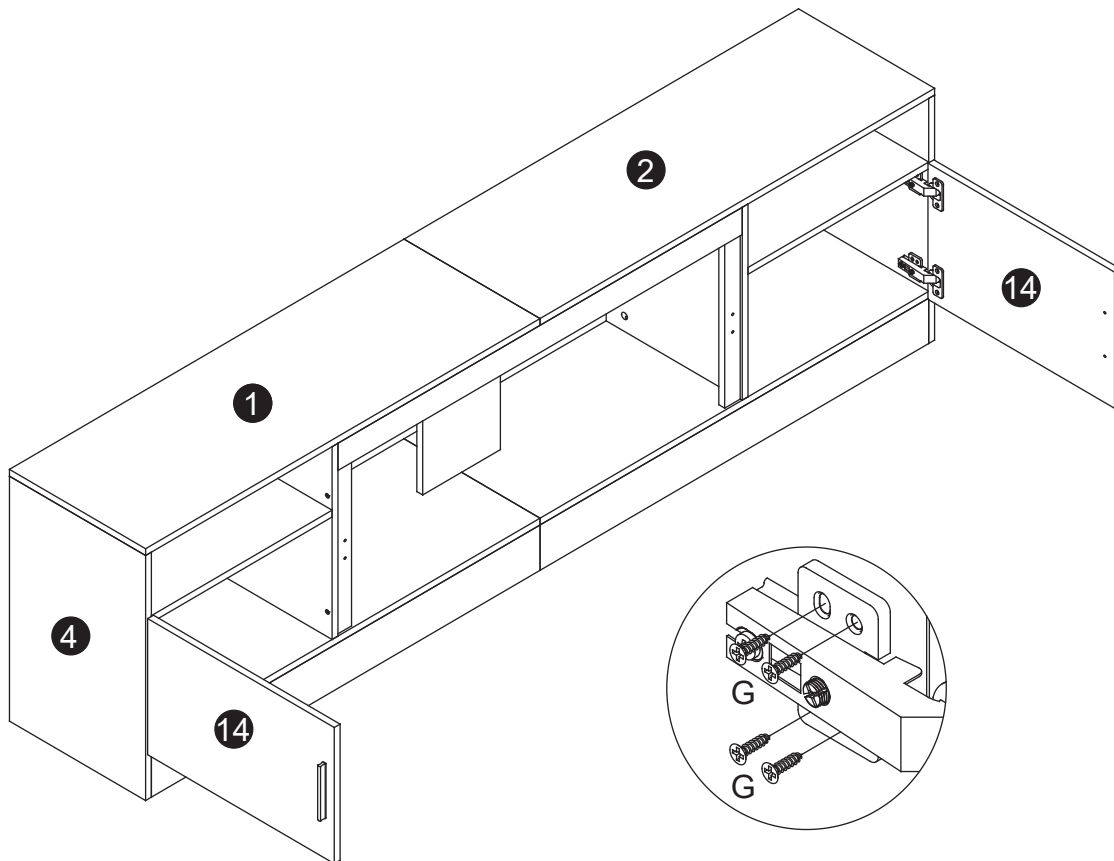

Gx16
M3.5x14


STEP 20

After separate the fireplace body and glass, installed the fireplace body directly to the hole positions (no pre-drilled holes here, the mterial of the panel is easy to drill).

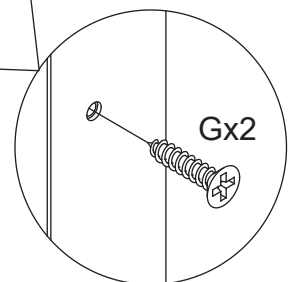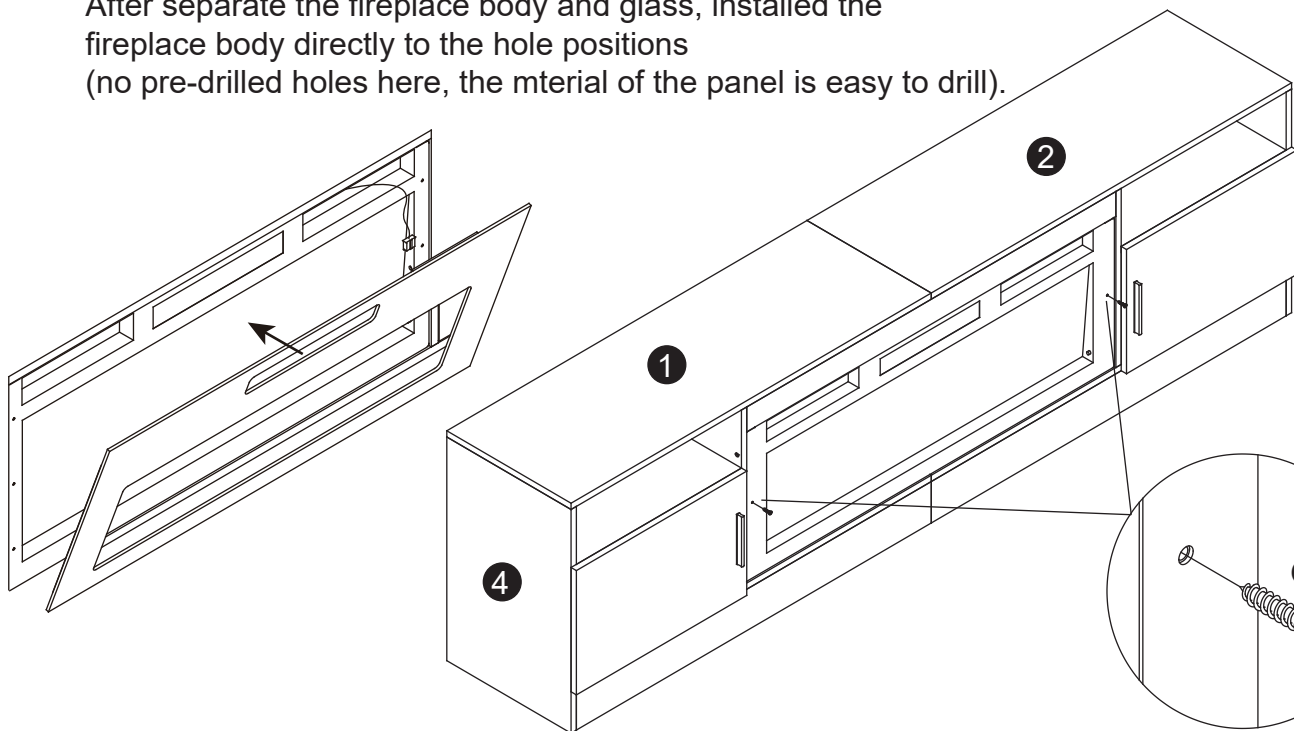

Gx2
M3.5x14

STEP 21

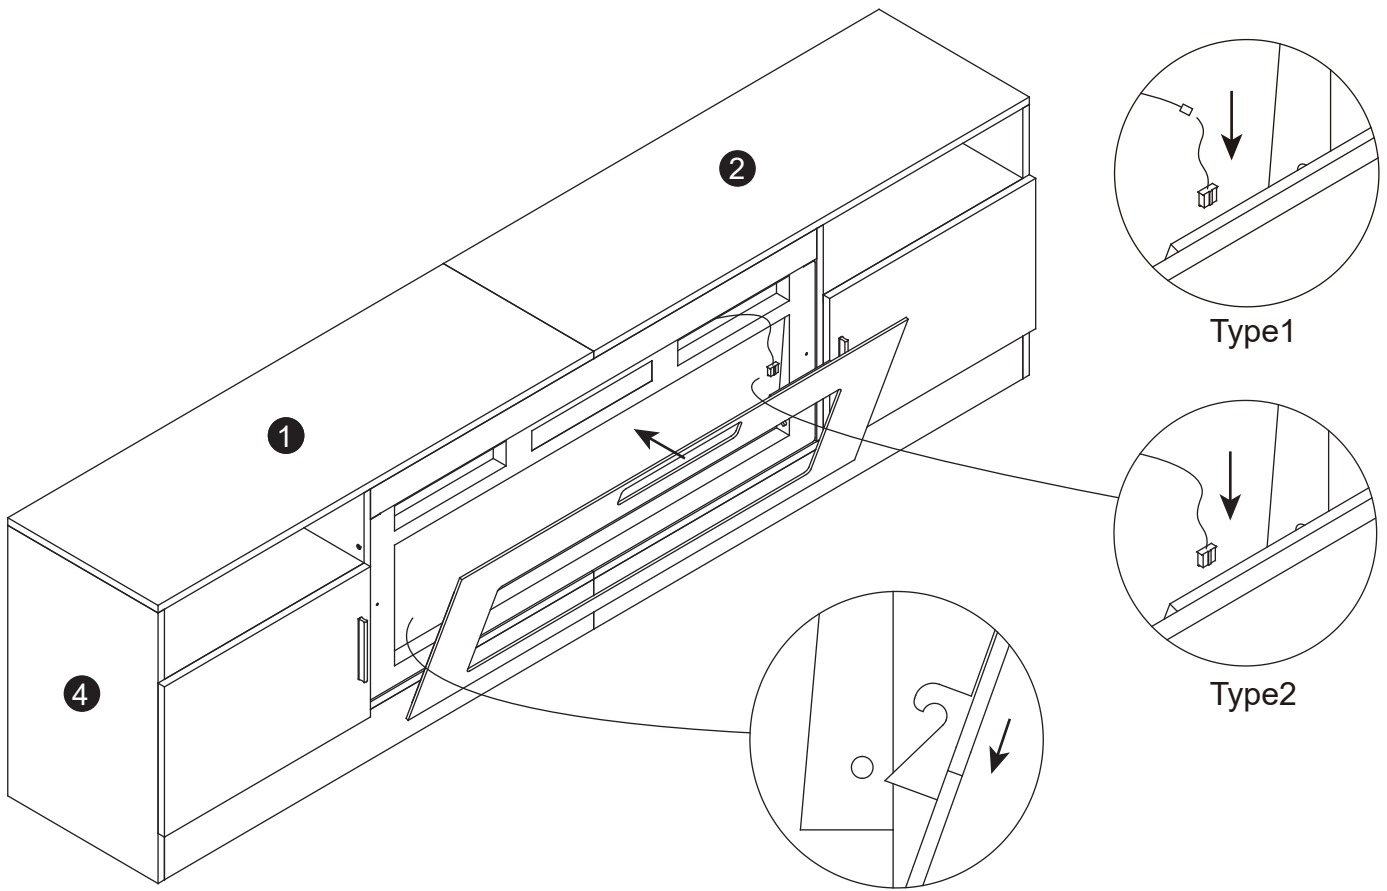

STEP 22

