

ASSEMBLY INSTRUCTIONS (CONTINUED)


STEP 4

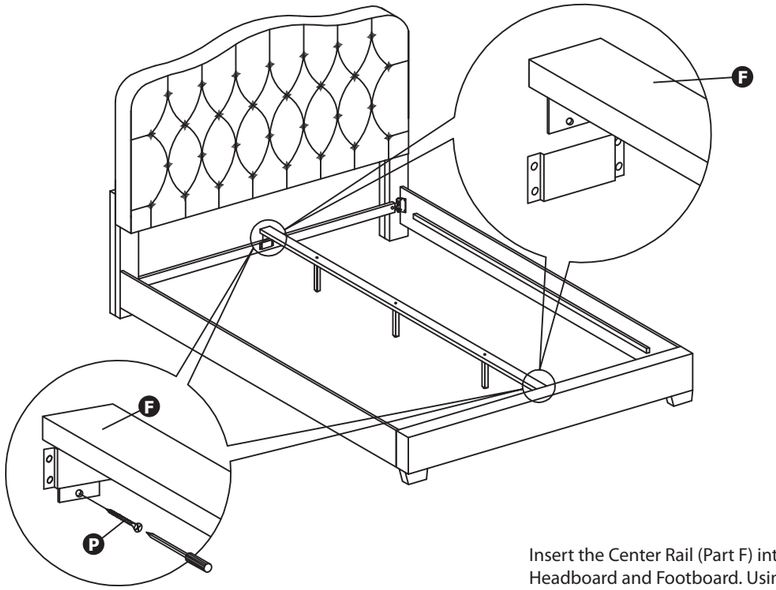

Insert the Center Rail (Part F) into the brackets on the Headboard and Footboard. Using a screwdriver, secure the center rail using two 16mm Screws (Part P).

STEP 5

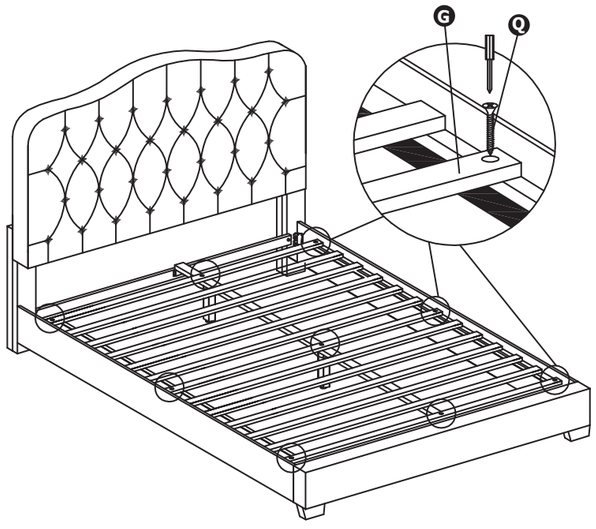


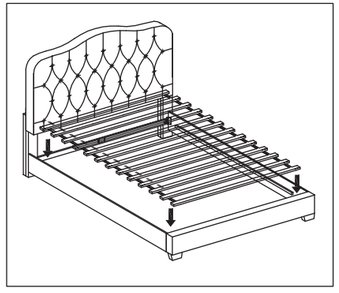

Roll out the Wood Slat System (Part G) and secure it in place using nine 32mm Screws (Part Q). Use the pre-drilled holes and a screwdriver.

Platform Bed Assembly Instructions

Contains One Bed and Hardware

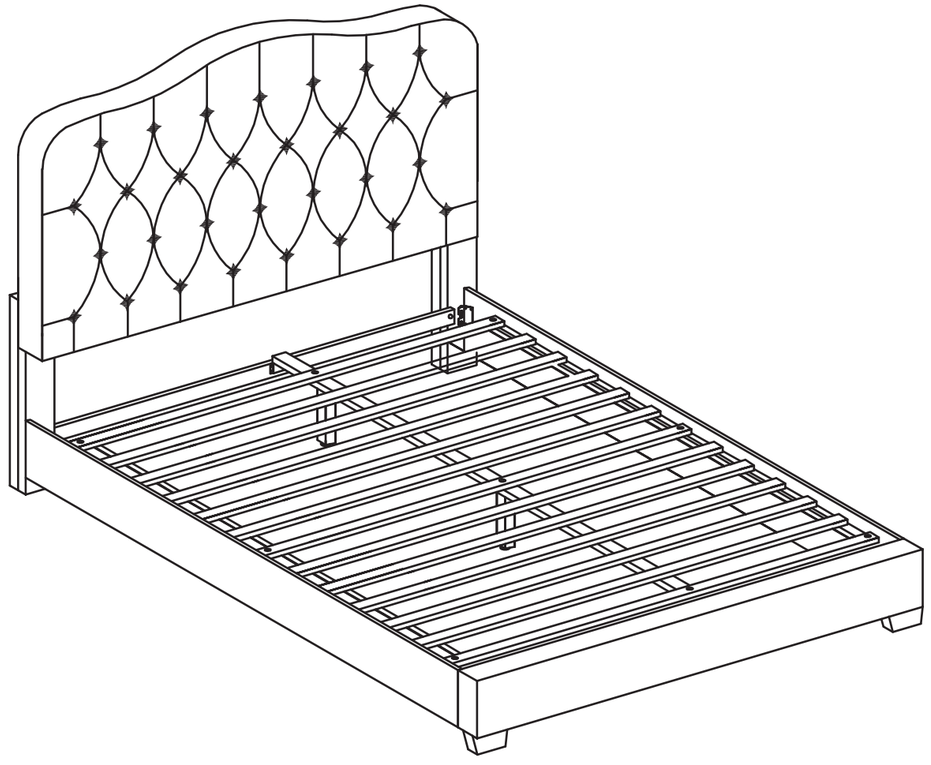


IMPORTANT NOTE:
Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.


TOOLS REQUIRED:
Phillips Screwdriver

PARTS LIST


A. Headboard Top (1 pc)

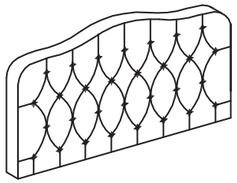


B. Footboard (1 pc)

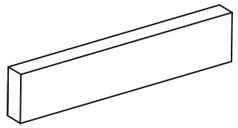


C. Side Rail (2 pcs)

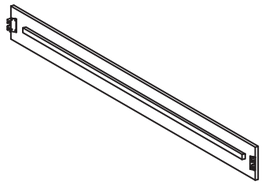


D. Headboard Leg (2 pcs)




E. Footboard Leg (2 pcs)



F. Center Rail (1 pc)




G. Wood Slat System (1 pc)

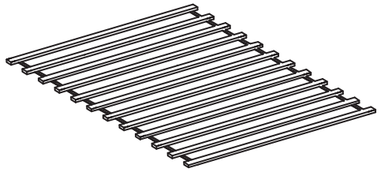

H. Center Leg (3 pcs)




I. Support Bar (1 pc)




HARDWARE LIST

J. 40mm Bolt
(11 pcs)




K. 50mm Bolt
(2 pcs)



L. Spring Washer
(6 pcs)



M. Flat Washer
(6 pcs)



N. Large Hex Key
(1 pc)



O. Small Hex Key
(1 pc)



P. 16mm Screw
(2 pcs)





Q. 32mm Screw
(9 pcs)



ASSEMBLY INSTRUCTIONS


STEP 1

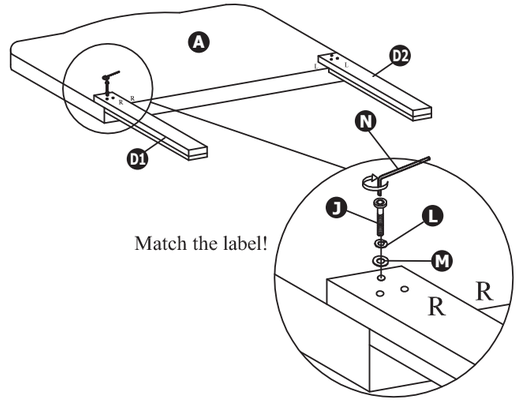


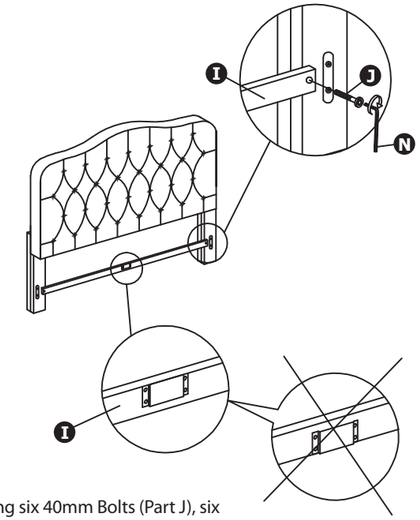

Assemble the Headboard Legs (Part D1 and D2) to the Headboard (Part A) using six 40mm Bolts (Part J), six Spring Washers (Part L) and six Flat Washers (Part M). Use the Large Hex Key (Part N) to secure the bolts. Be sure to use Part D1 for the right side and Part D2 for the left side of the headboard. Next secure the Support Bar (Part I) to the Headboard Legs (Part D) using two 40mm Bolts (Part J). Use the Large Hex Key (Part N) to secure the bolts.


STEP 2

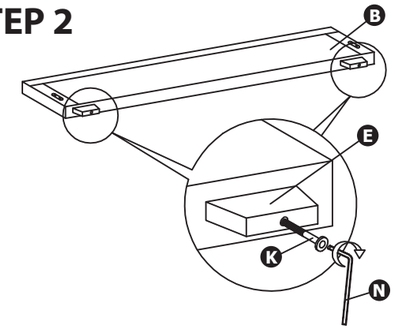

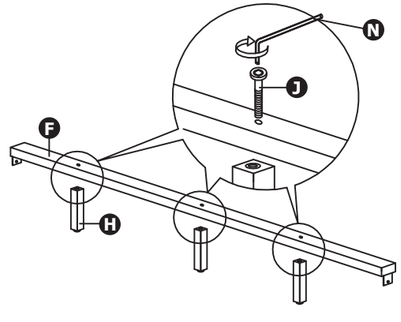

Secure the Footboard Legs (Part E) into the Footboard (Part B) using two 50mm Bolts (Part K). Use Large Hex Key (Part N) to secure the bolts. Screw the Center Legs (Part H) into the Center Rail (Part F) using three 40mm Bolts (Part J). Secure the bolts using Large Hex Key (Part N).

STEP 3

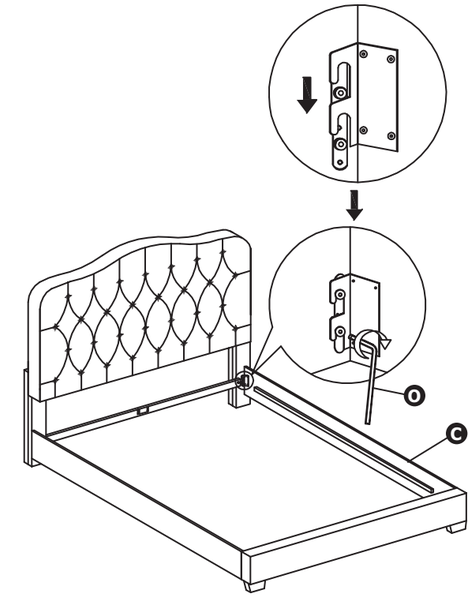

Attach the siderails (Part C) to the Headboard (Part A) and the Footboard (Part B) by hanging the siderails onto the pre-attached bolts on the Headboard and Footboard. Tighten the bolts using Small Hex Key (Part O).

(Continued on back)