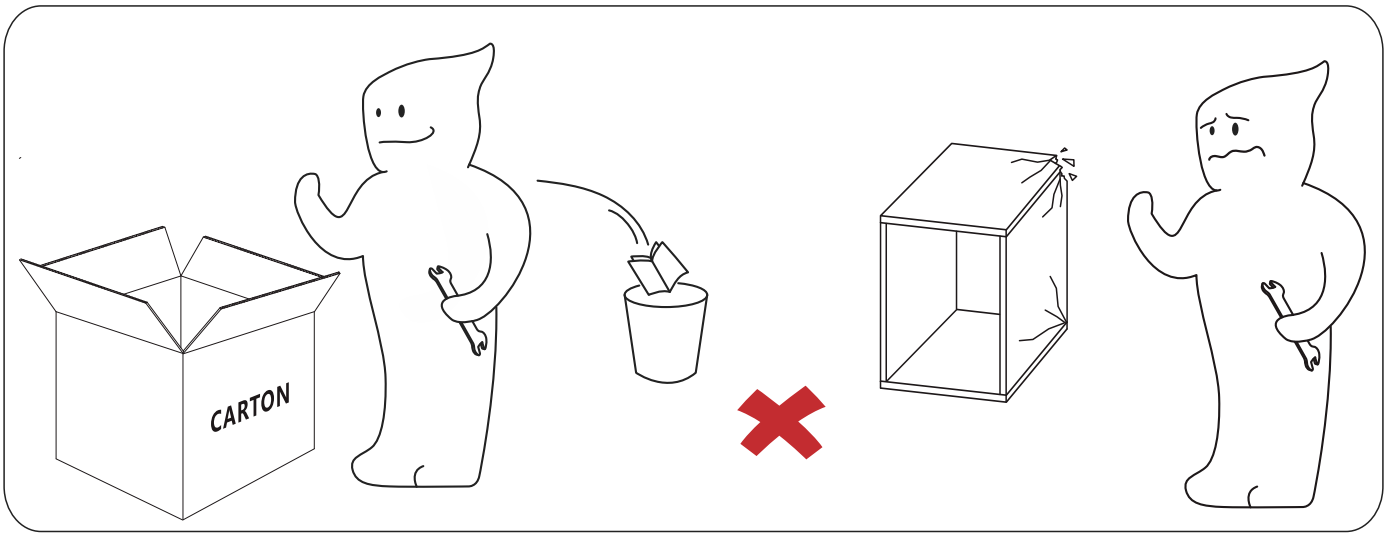
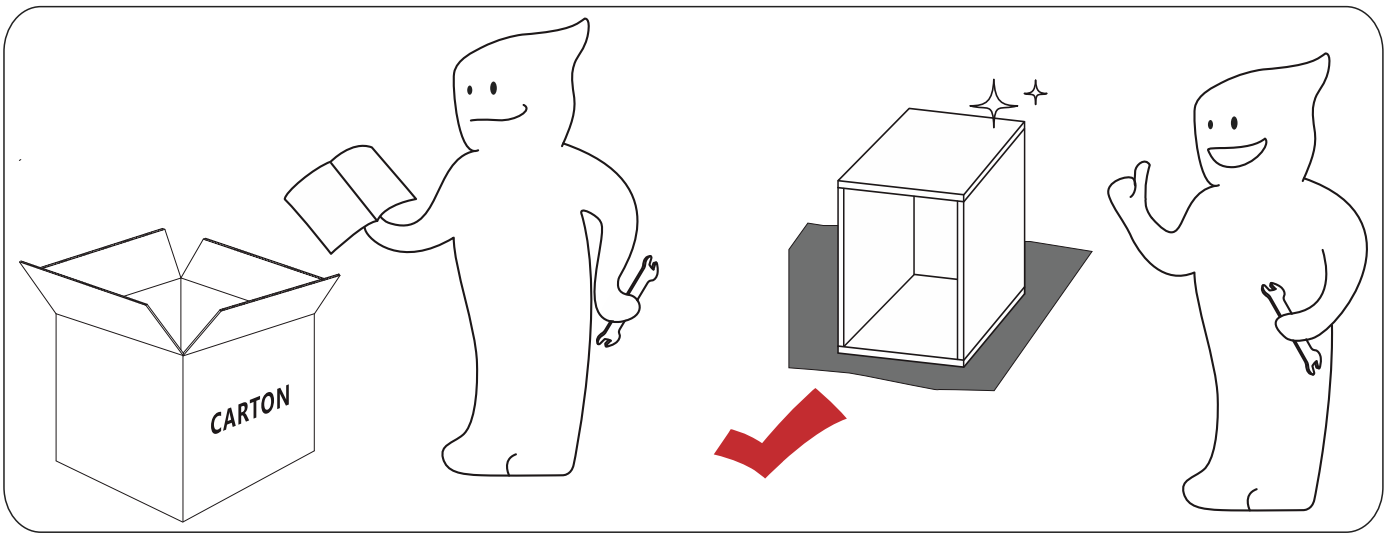
Upholstered Platform Bed with Tufted Wingback Headboard



IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

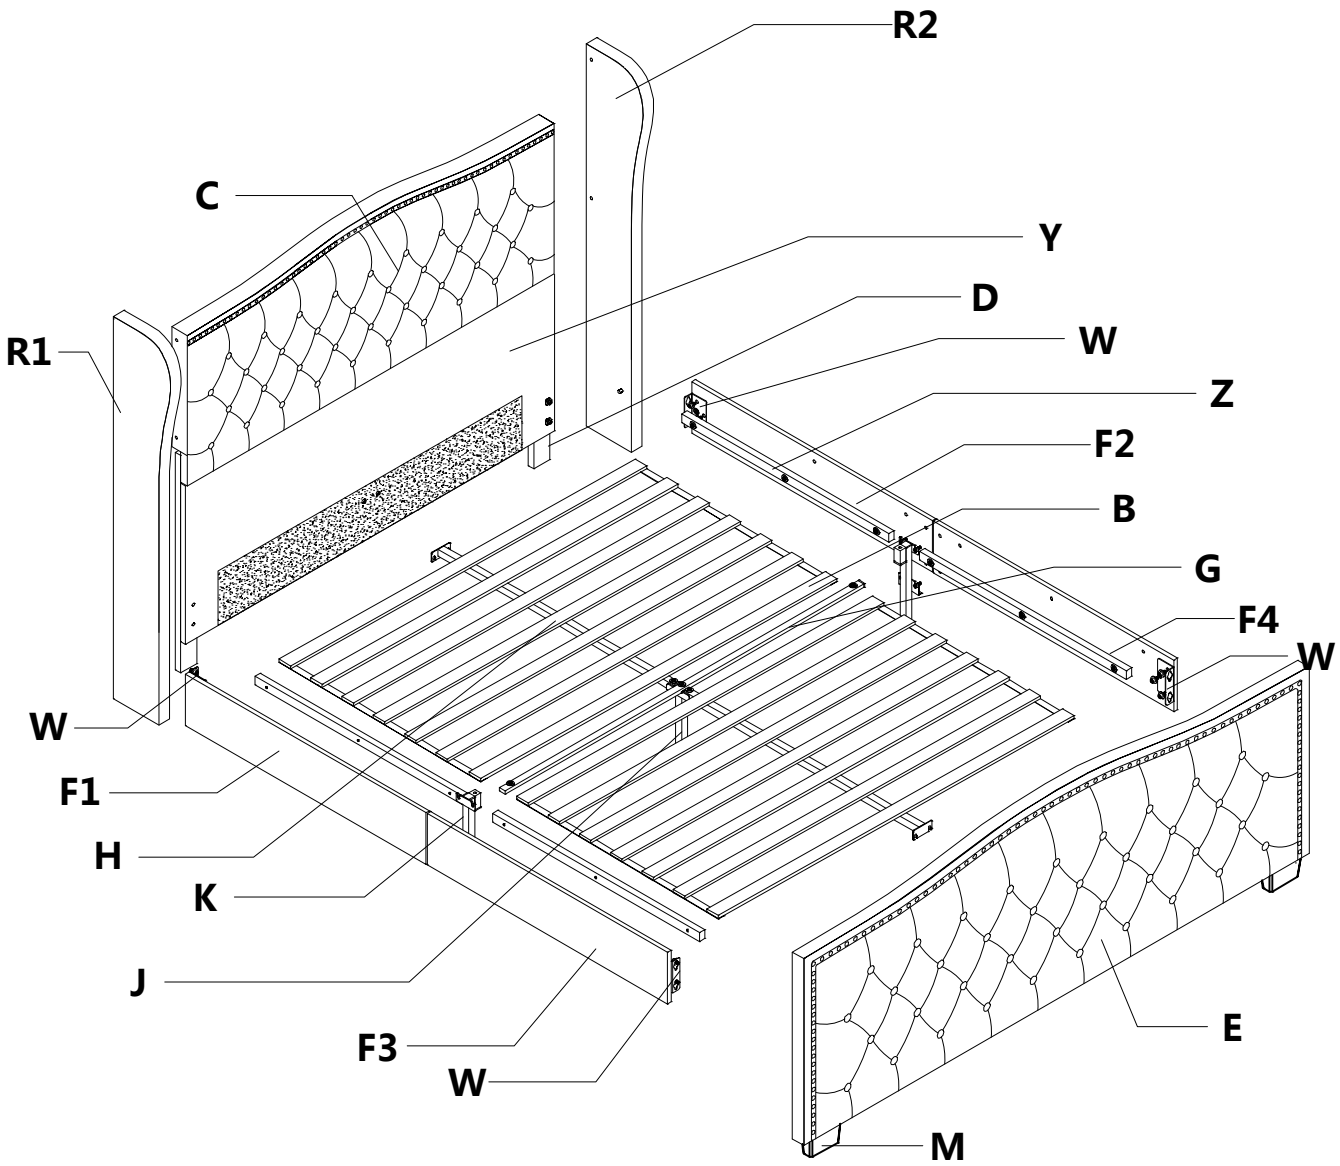

















Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.










For easier and better assembly, **2** or more adults are required.


R2
C
Y
D
R1
W
Z
F2
B
G
F4
W
W
F1
H
K
J
F3
W
E
M

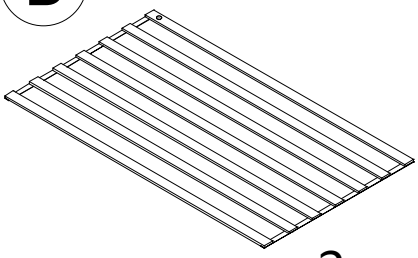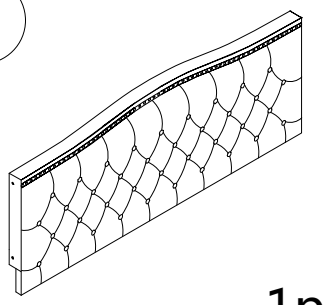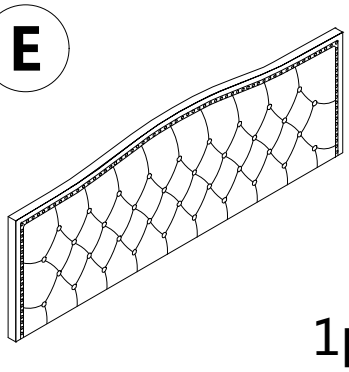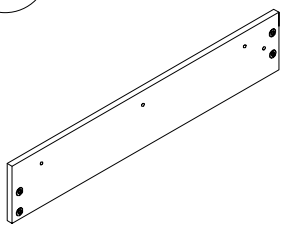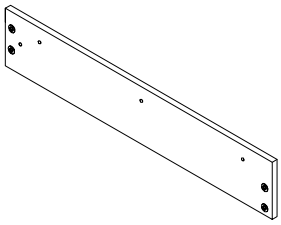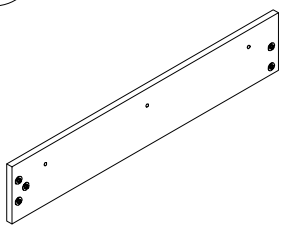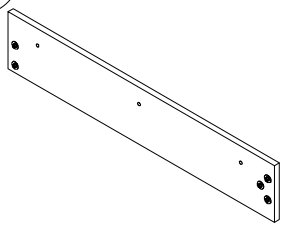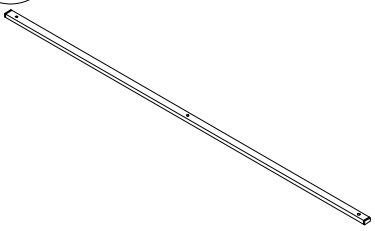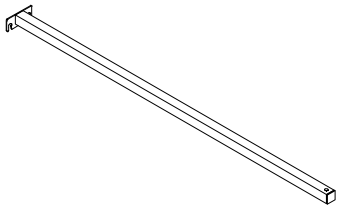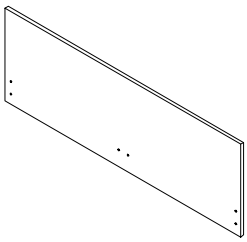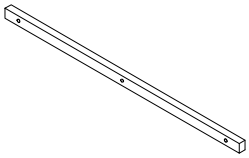BED FRAME PARTS LIST


B  2pcs	**C**  1pc	**D**  2pcs
E  1pc	**F1**  1pc	**F2**  1pc
F3  1pc	**F4**  1pc	**G**  1pc
H  2pcs	**R1**  1pc	**R2**  1pc
Y  1pc	**Z**  4pcs	

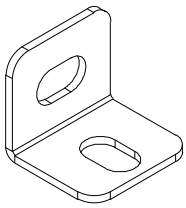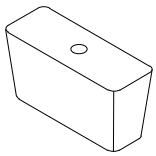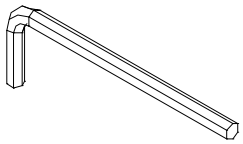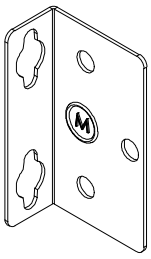FITTING PARTS LIST

I  1pc	**J**  1pc	**K**  2pcs
M  2pcs	**N**  M8 X40mm 33pcs+1pc	**P**  M8 Spanner 1pc
W  4pcs		

STEP 1

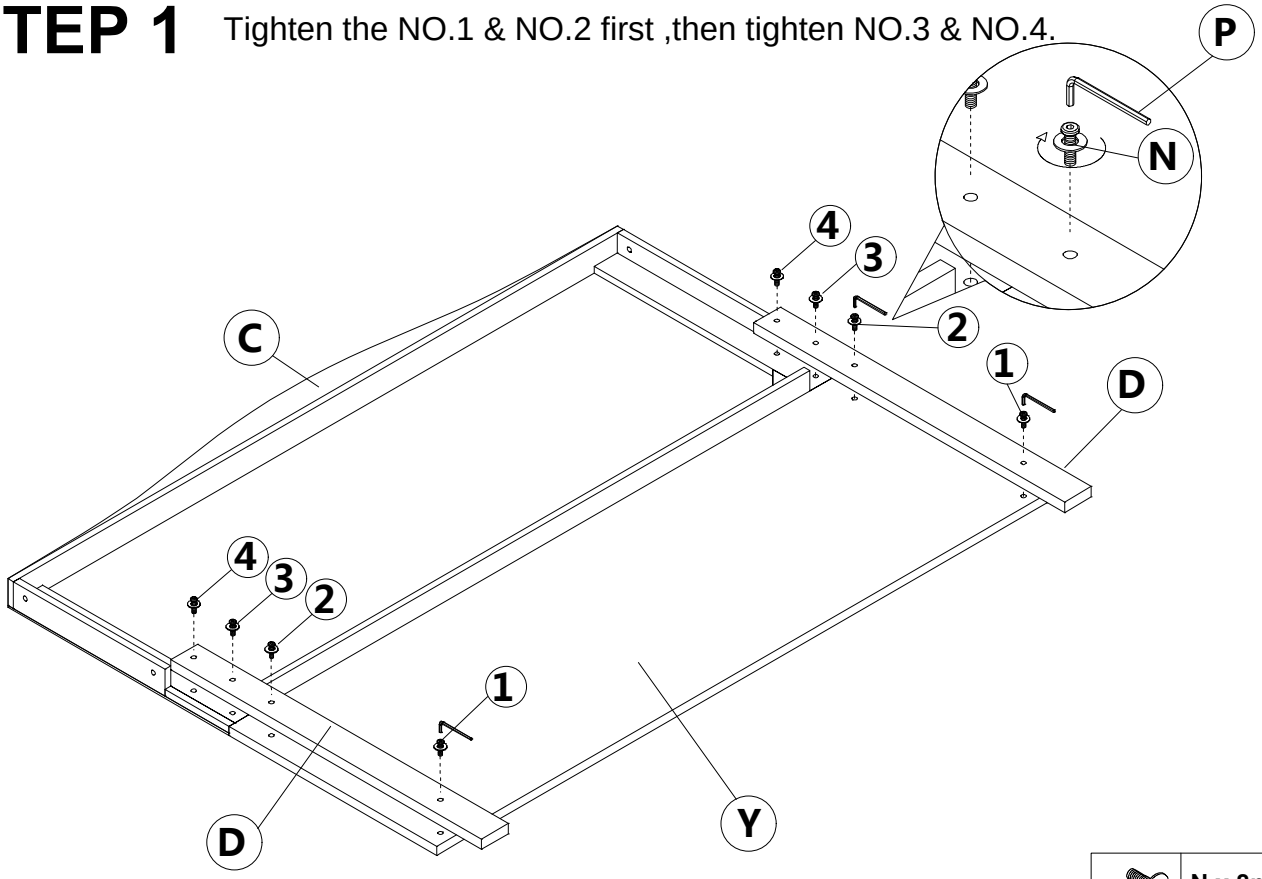
Tighten the NO.1 & NO.2 first ,then tighten NO.3 & NO.4.



	N x 8pcs
	P x 1pc


STEP 2

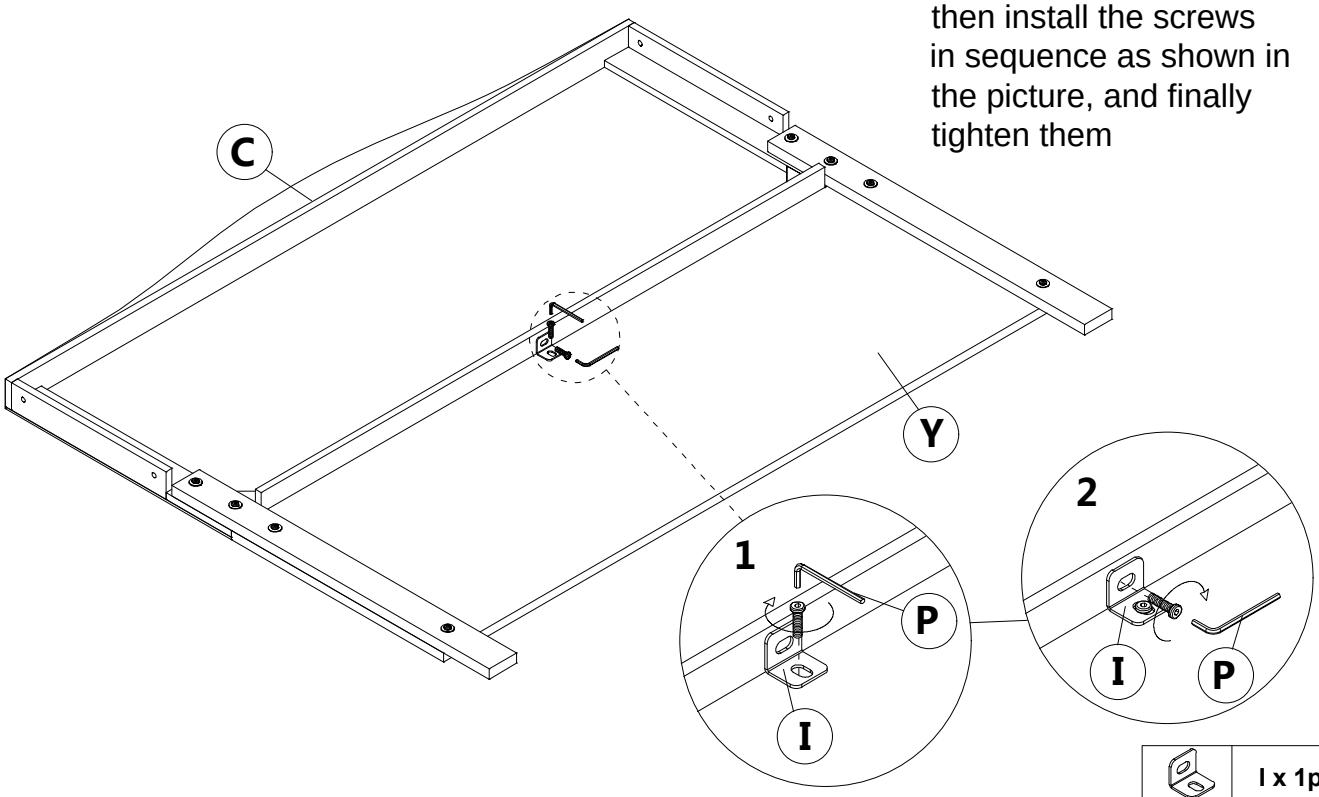First loosen the screws, then install the screws in sequence as shown in the picture, and finally tighten them



	I x 1pc
	P x 1pc

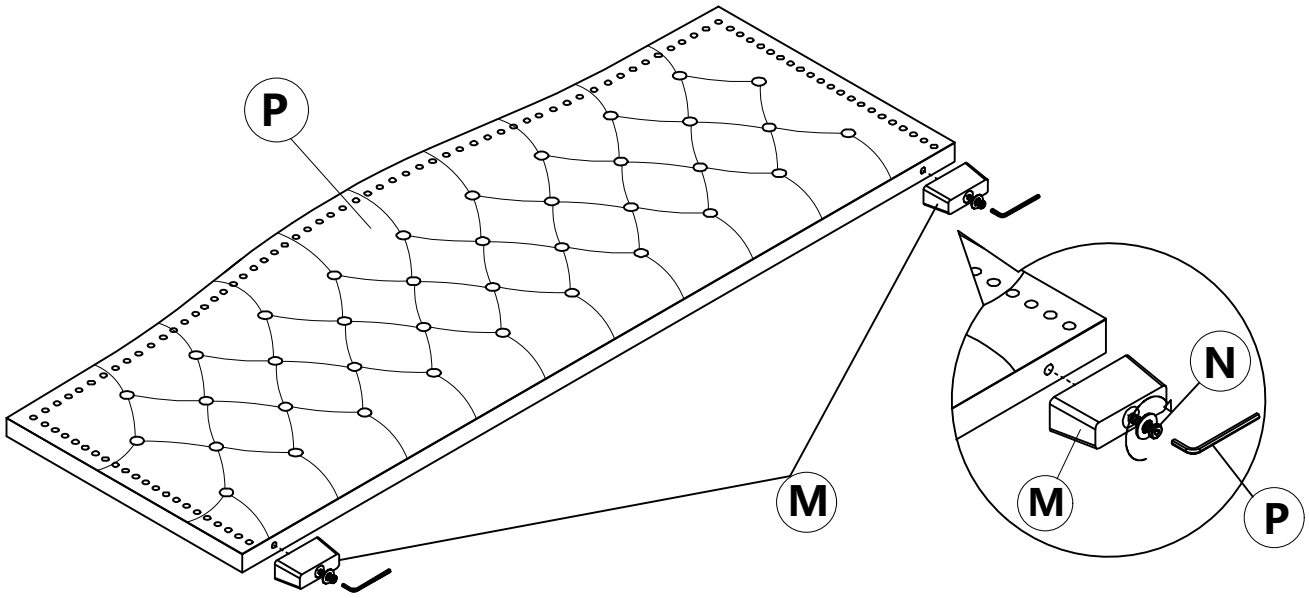
STEP 3



	N x 2pcs
	P x 1pc

STEP 4

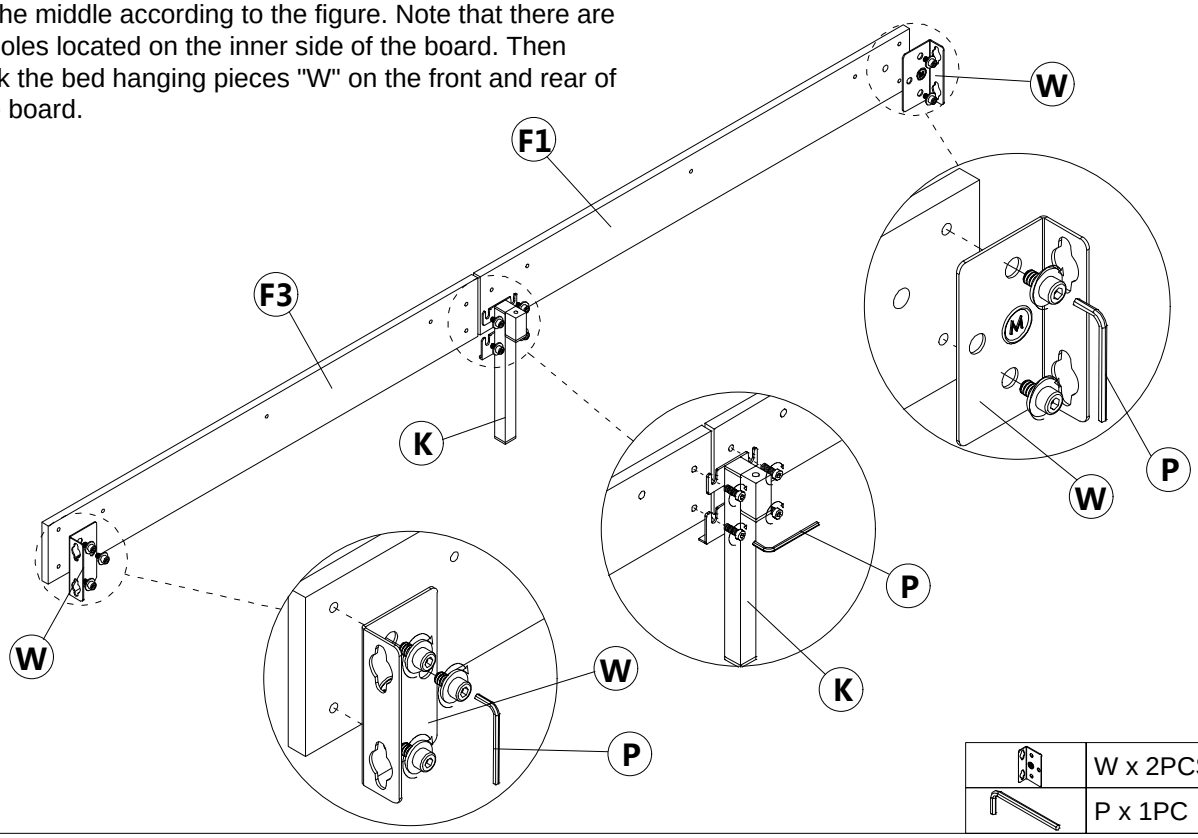
Take out parts "F1" and "F3", and lock the iron frame foot "K" in the middle according to the figure. Note that there are 2 holes located on the inner side of the board. Then lock the bed hanging pieces "W" on the front and rear of the board.



	W x 2PCS
	P x 1PC

STEP 5

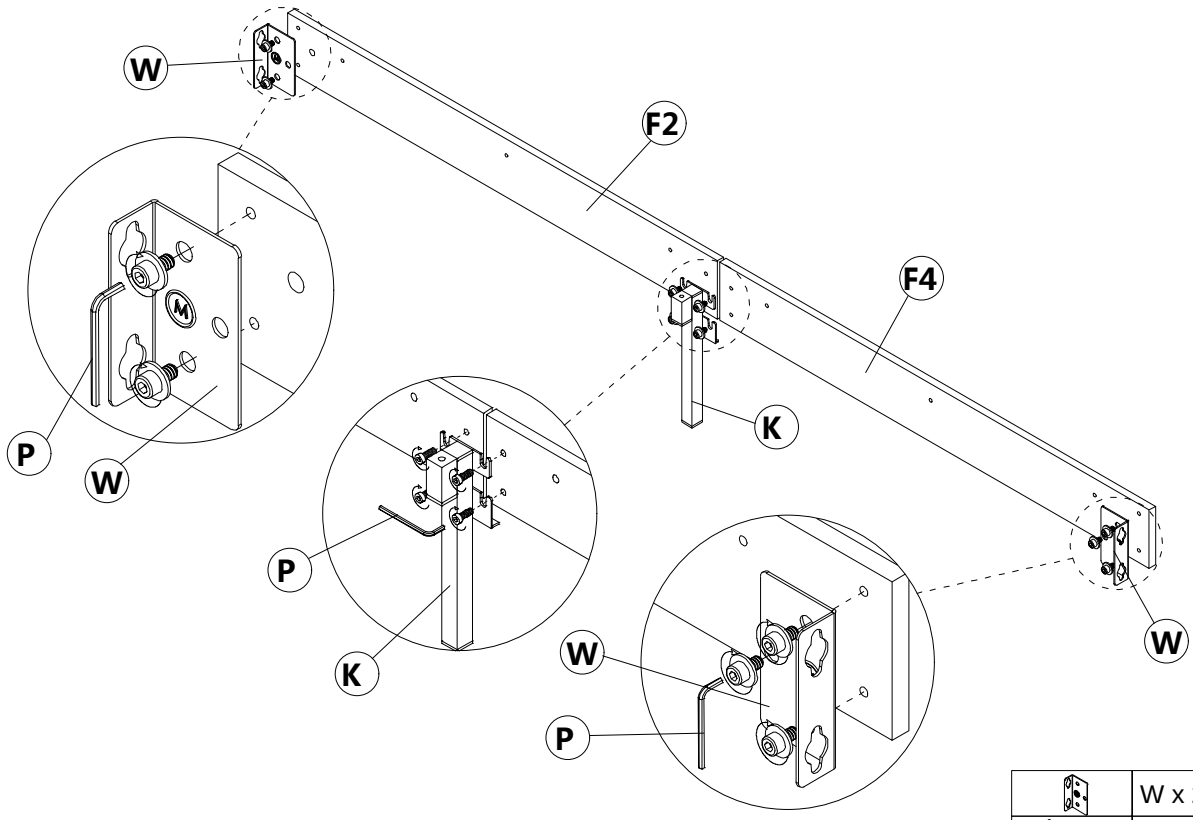
Same as Step 4



	W x 2PCS
	P x 1PC


STEP 6

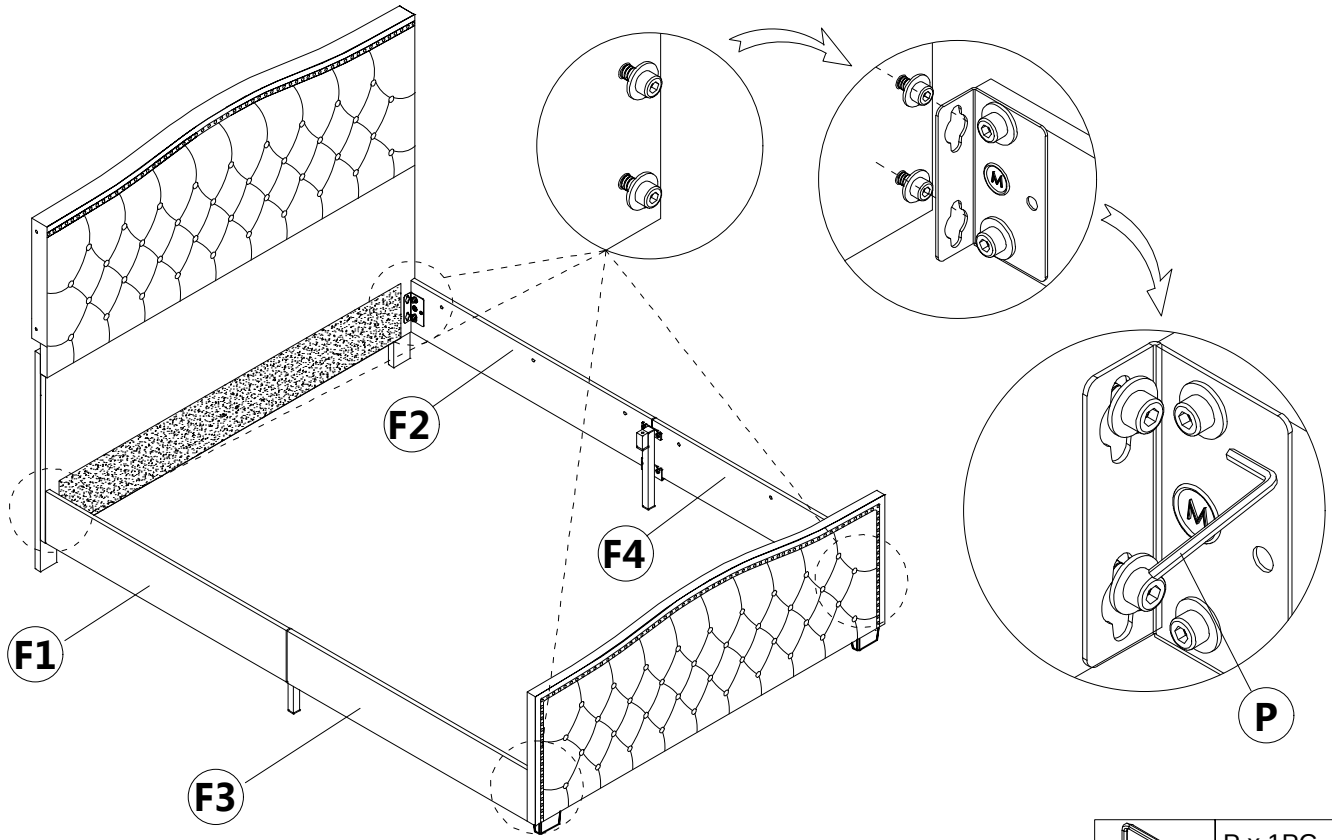Loosen the screw of headboard side leg and both sides of footboard,then hang the bracket on and tighten innerscrew .




	P x 1PC

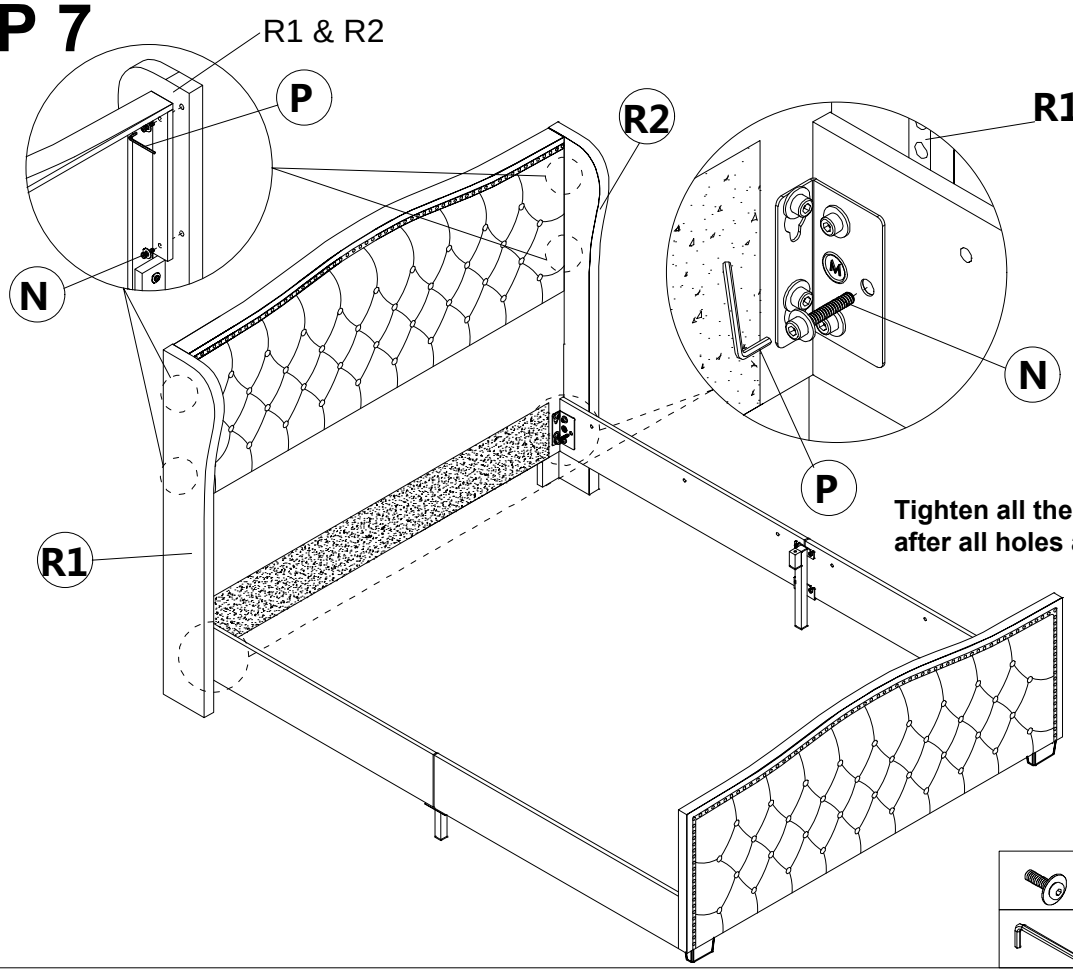STEP 7



	N x 6pcs
	P x 1pc

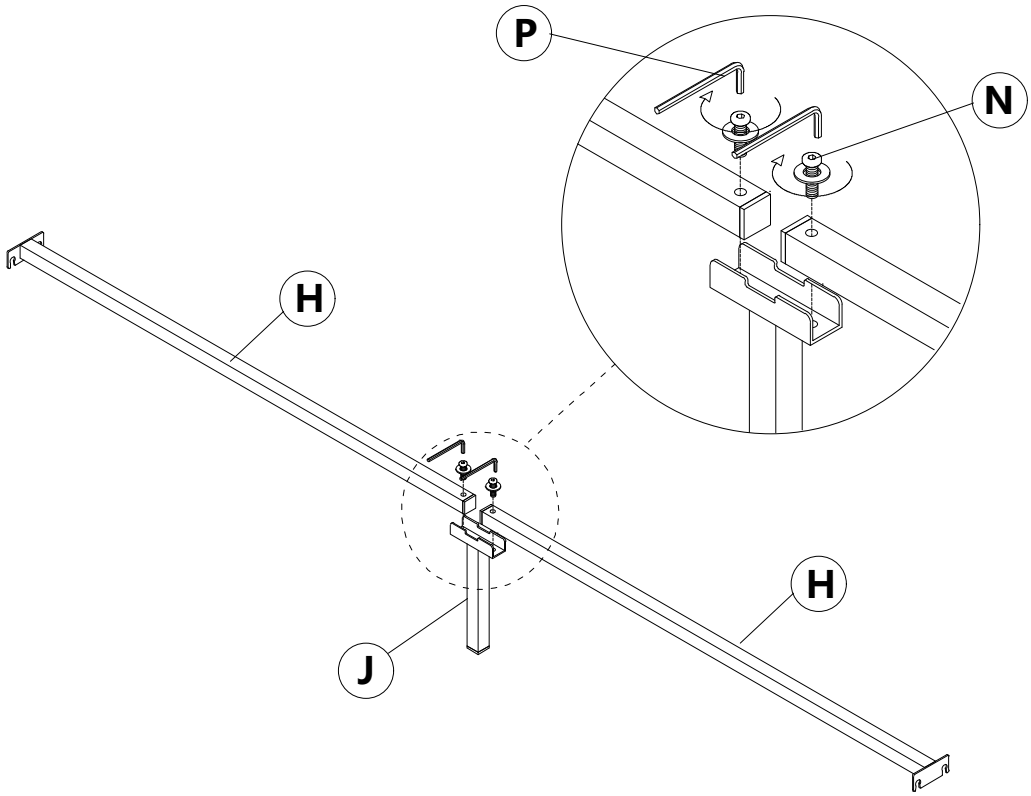
STEP 8



	N x 2pcs
	P x 1pc


STEP 9

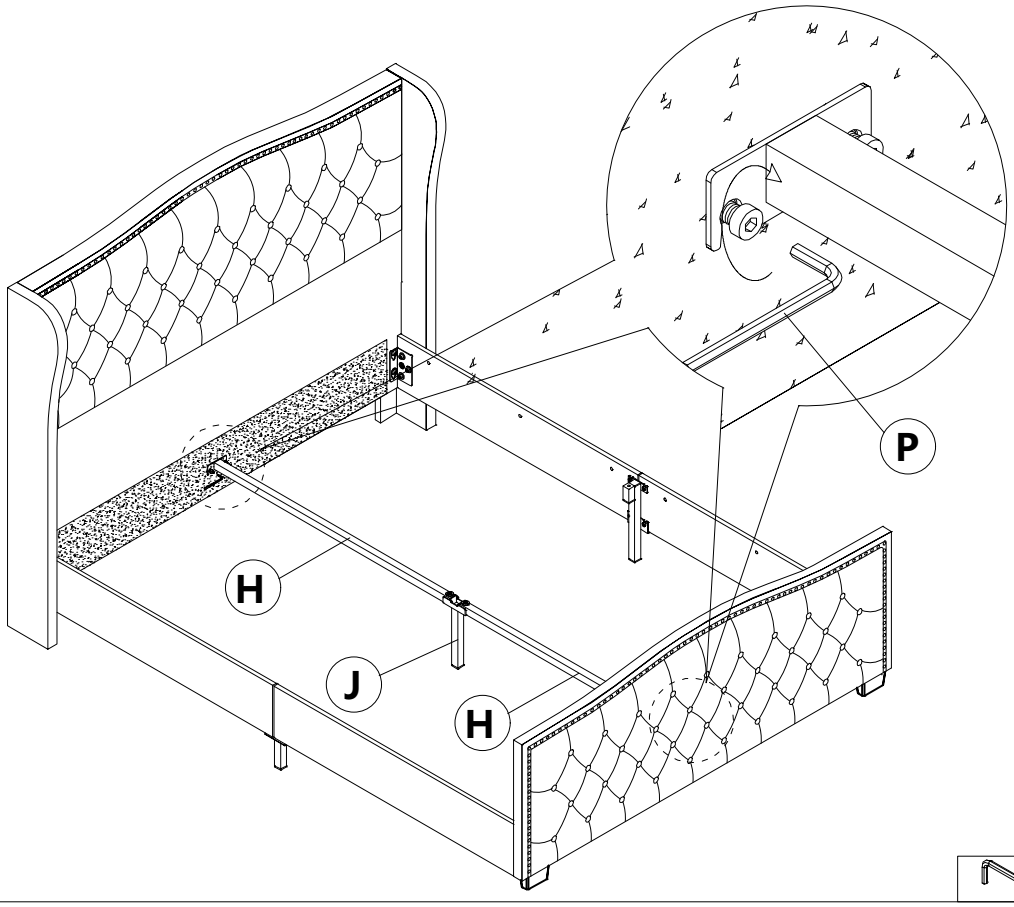Loosen the screw in the middle of the footboard,
then hang the bracket on and tighten the innerscrew.




	P x 1PC

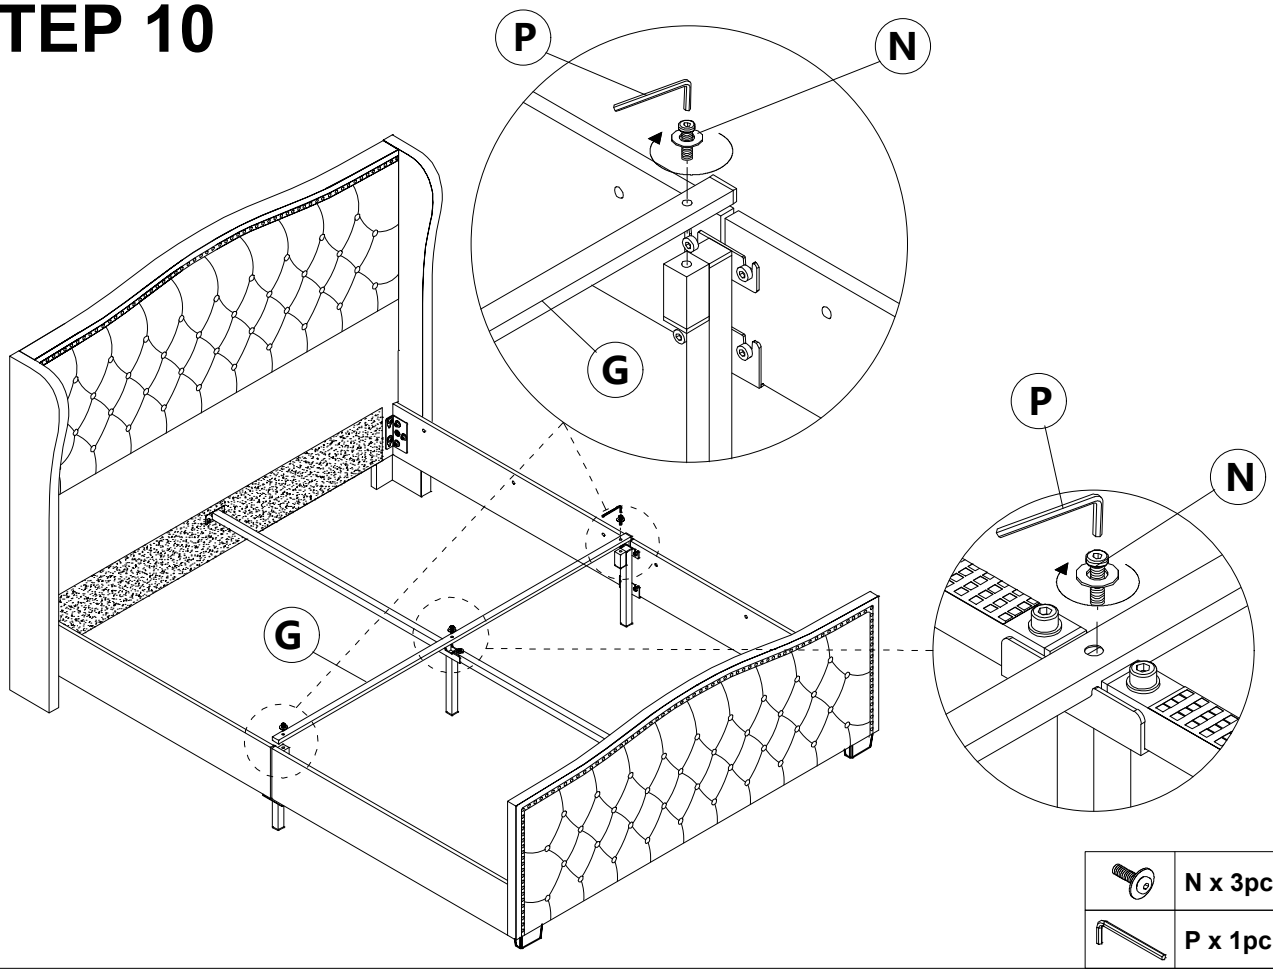STEP 10




	N x 3pcs
	P x 1pc

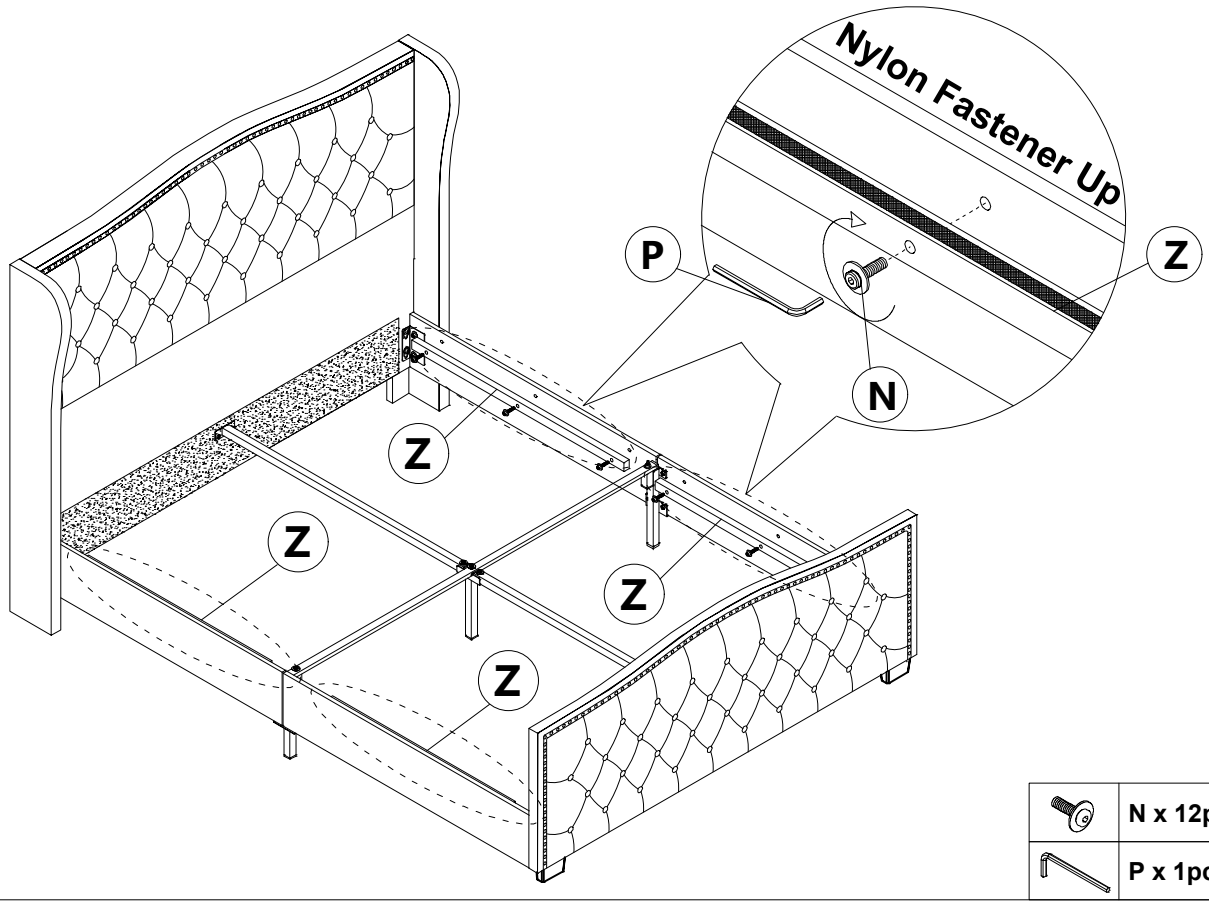STEP 11



	N x 12pcs
	P x 1pc

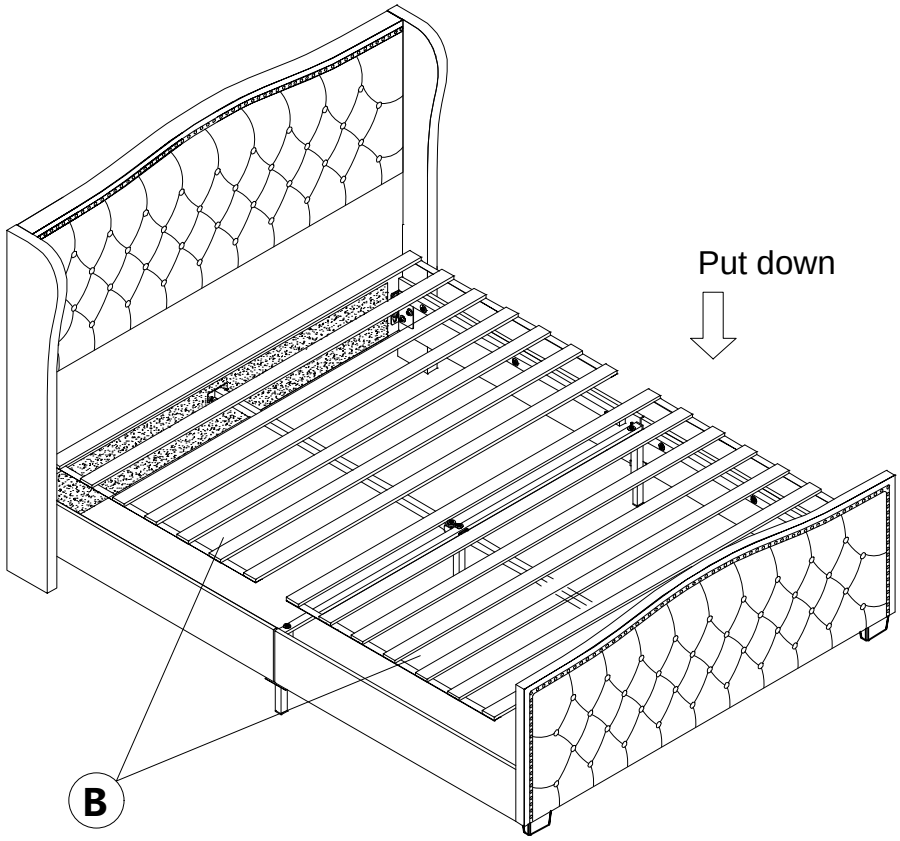STEP 12



STEP 13



Installation Complete