



Installation Instruction


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

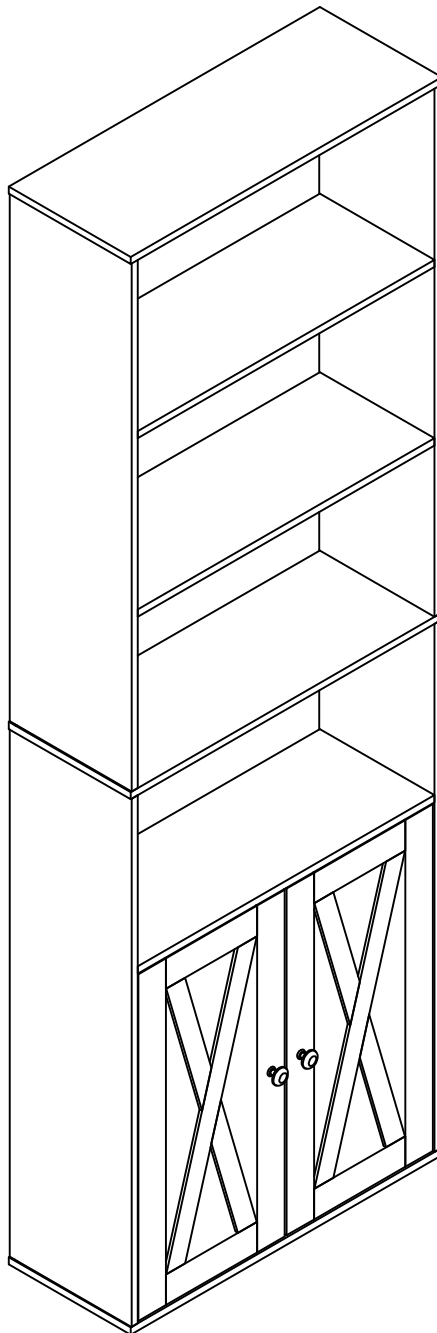


HARDWARE LIST

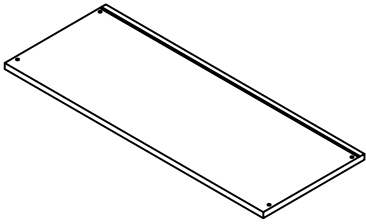


① × 1PC

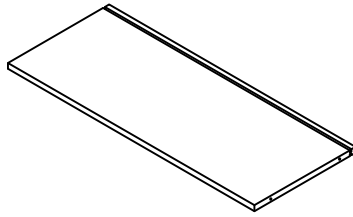


② × 2PCS

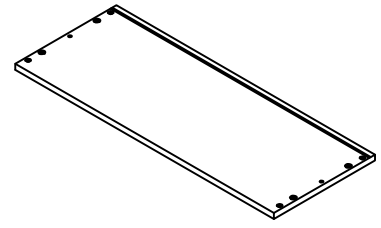


③ × 1PC

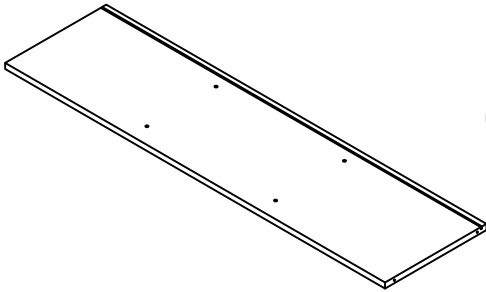


④ × 2PCS

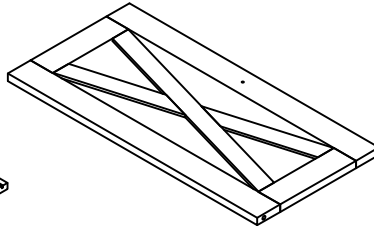


⑤ × 2PCS

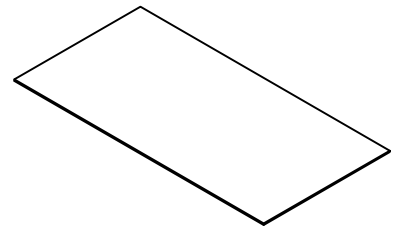


⑥ × 6PCS

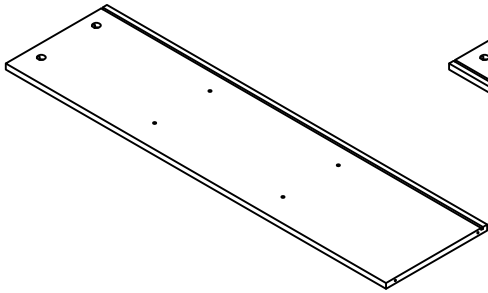


⑦ × 1PC

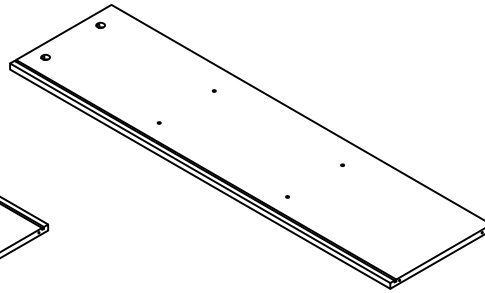


⑧ × 1PC

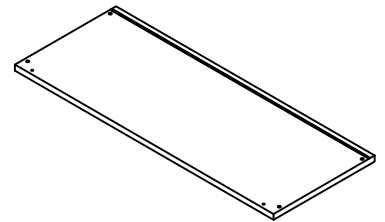

⑨ × 1PC

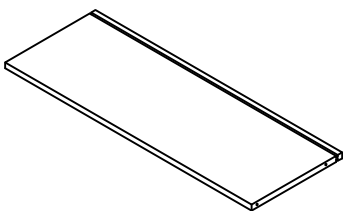

⑩ × 1PC

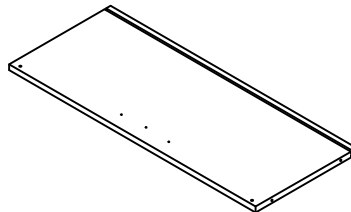


⑪ × 1PC


PARTA LIST




M4
A×1PC




Ø6x25mm
B1×1PC




M4
B2×1PC



Ø8xM4x25mm
B3×1PC

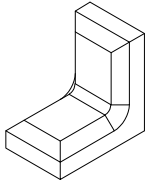


28x28x18mm
C1×1PC



26x26x13.5mm
C2×1PC




Ø6xM3x12mm
C3×5PCS




Ø29*25mm
D1×2PCS



M4*22mm
D2×2PCS

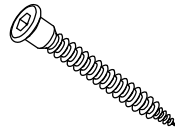


M5x45mm
E×28PCS



Ø6.5*36mm
F1×4PCS




Ø15*9.5mm
F2×4PCS




14x14x11mm
G1x24PCS




Ø6xM3x16mm
G2x27PCS




Ø12*25mm
Hx4PCS

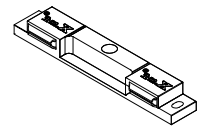


120*19mm
I1x1PC




54*12*1.0mm
I2x2PCS




30*30*2.0mm
Jx4PCS



Ø6*30mm
Kx2PCS

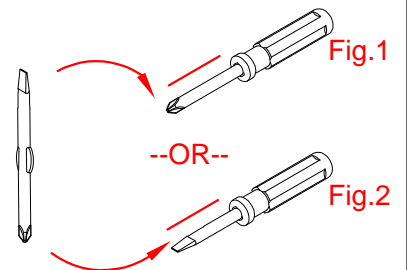


1

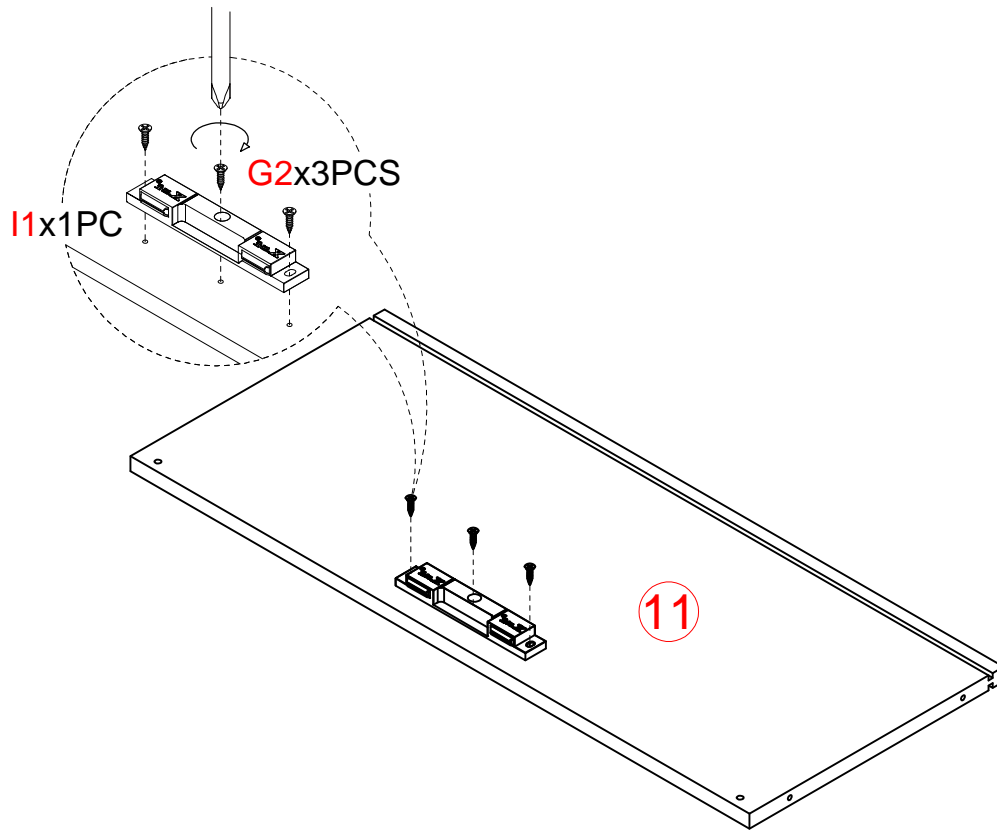


I1x1PC
G2x3PCS
⑪x1PC

2

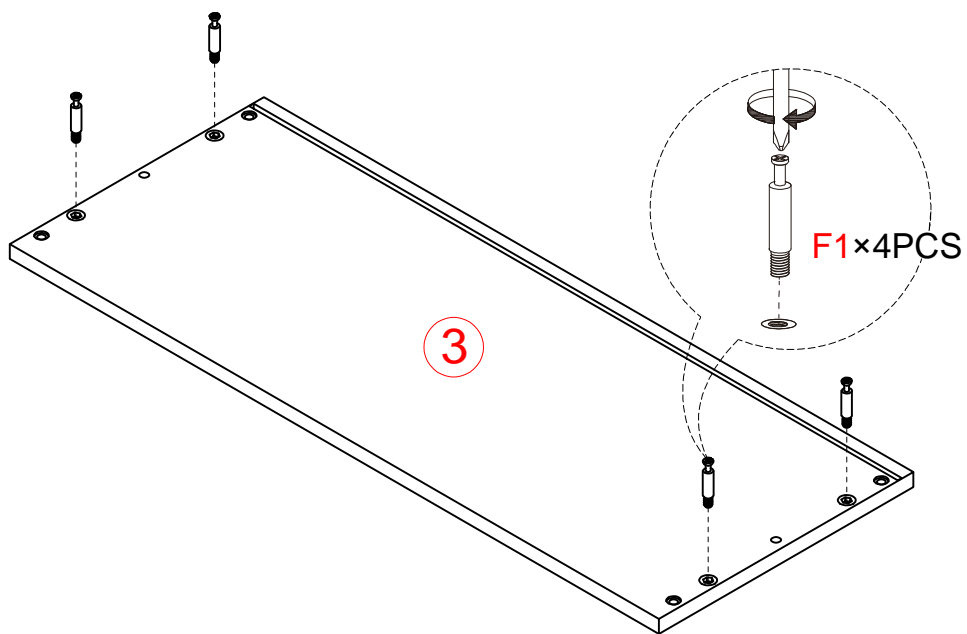


F1x4PCS
③x1PC


3

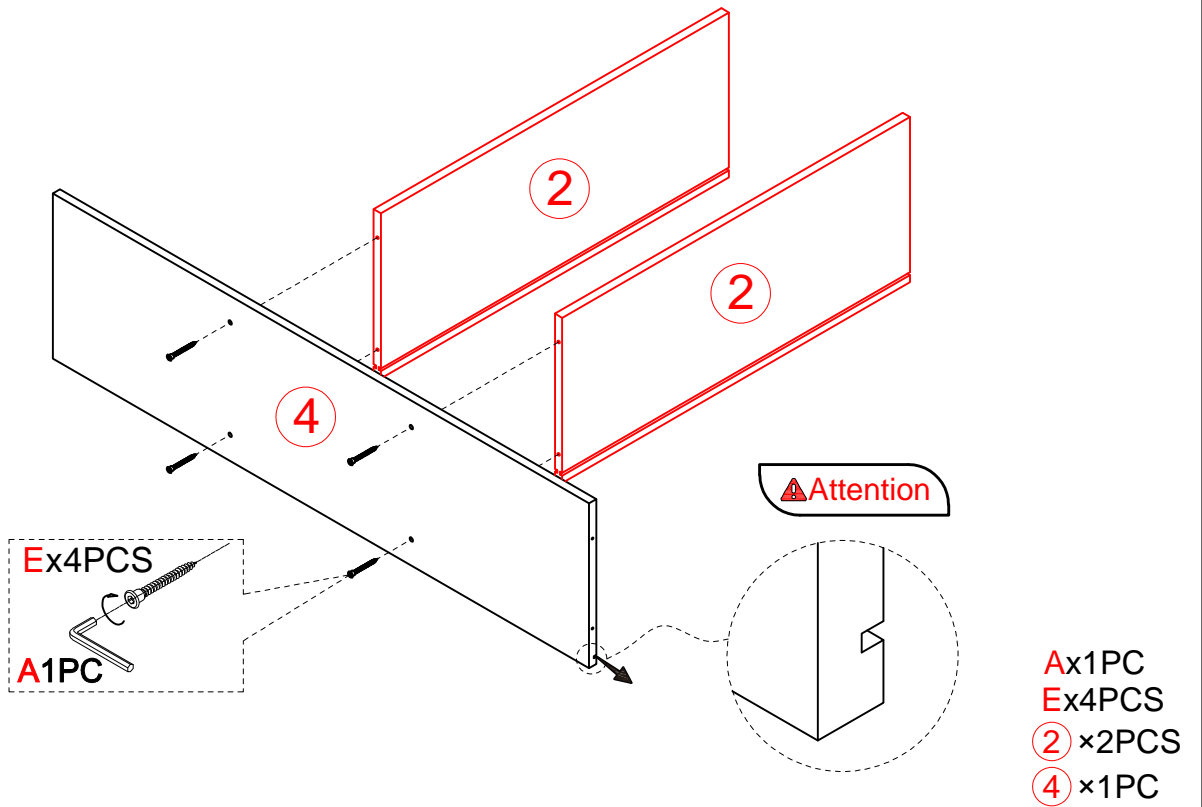


4

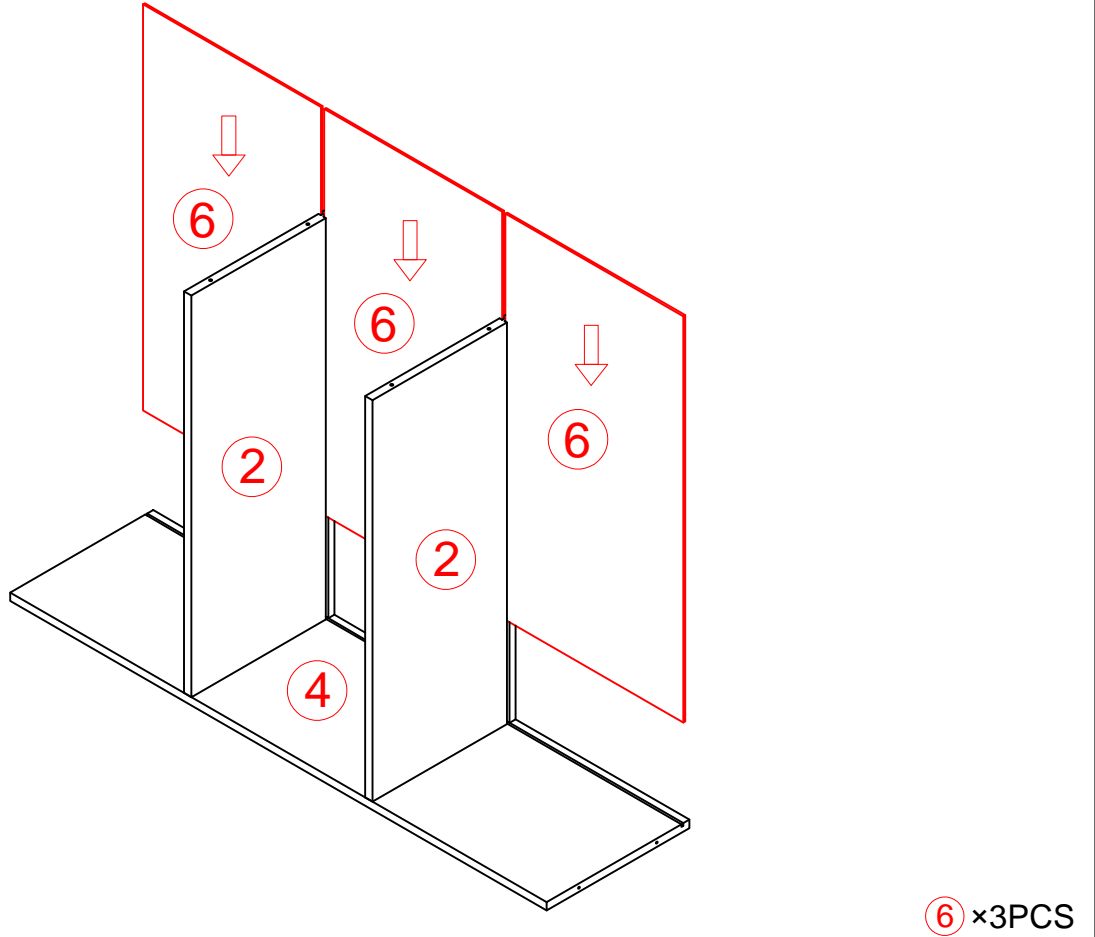


5

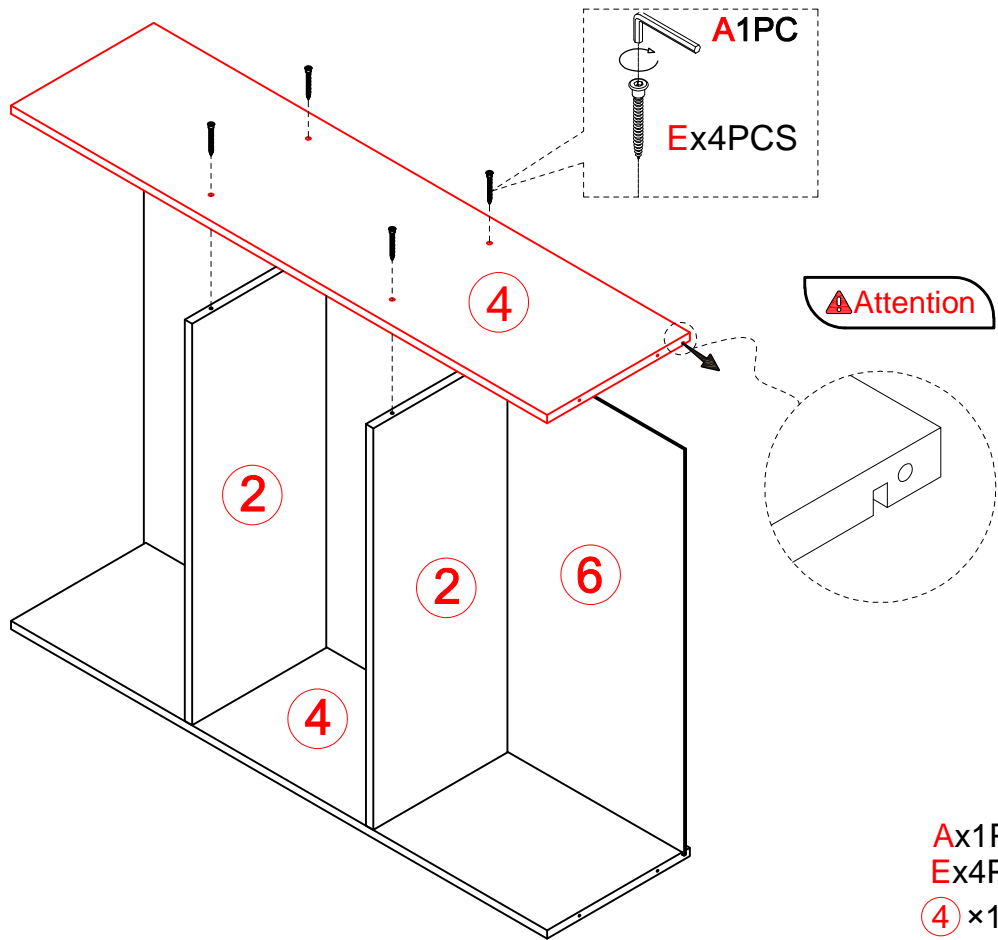


6

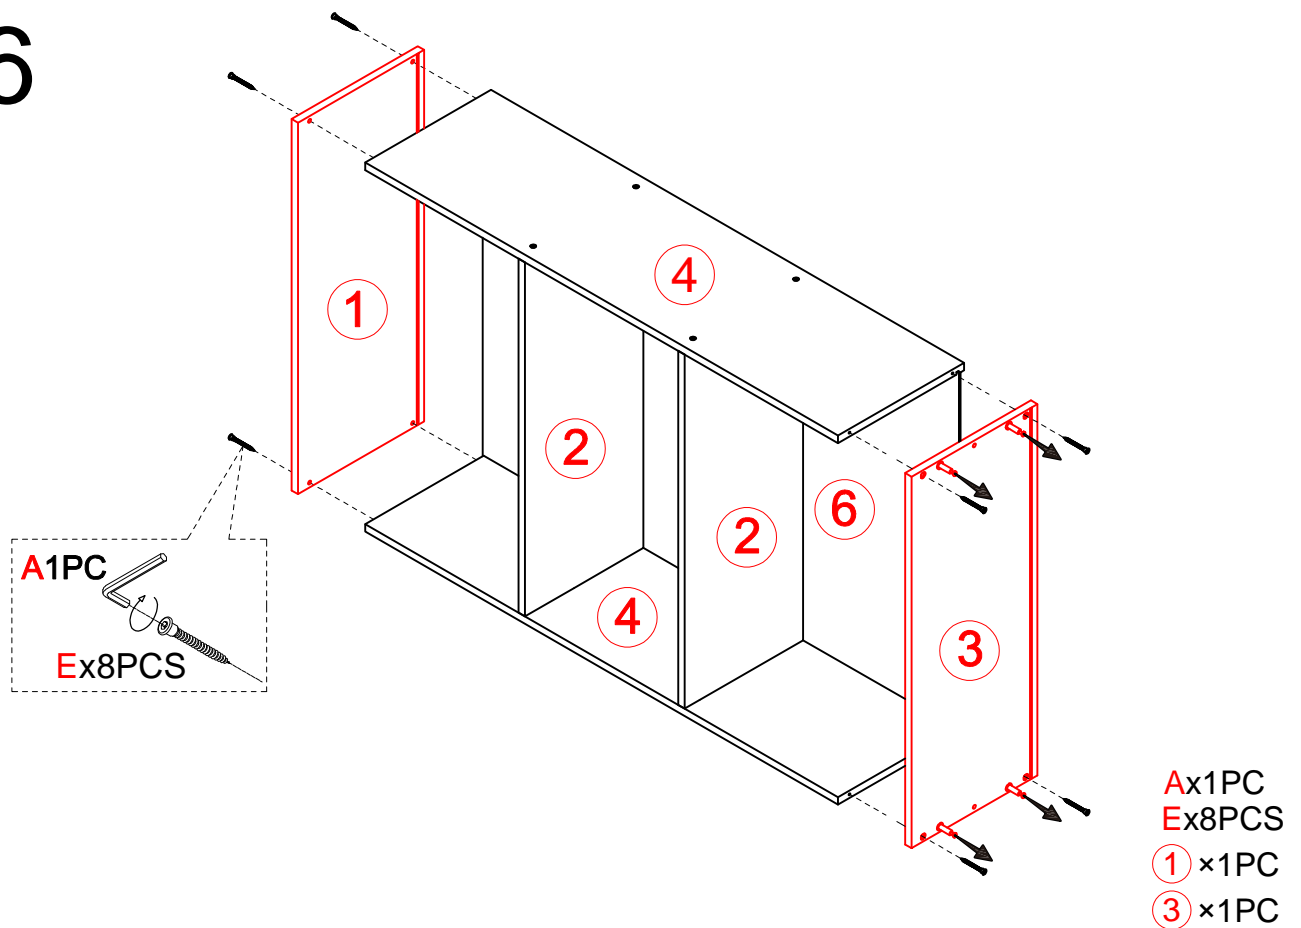


7

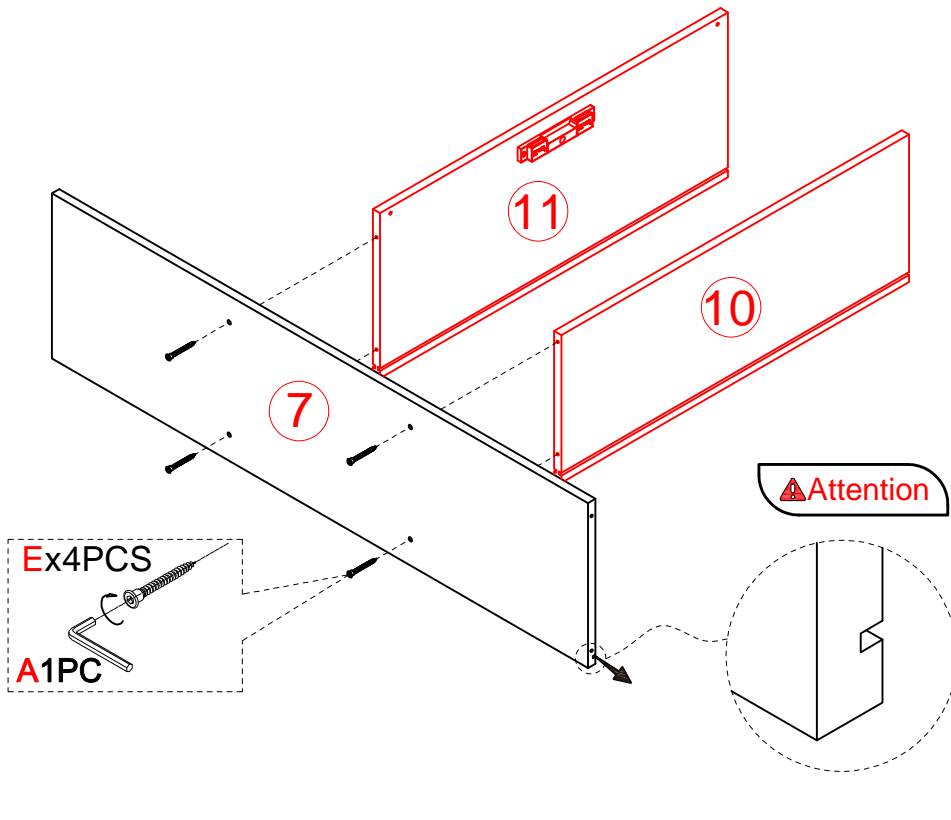


8

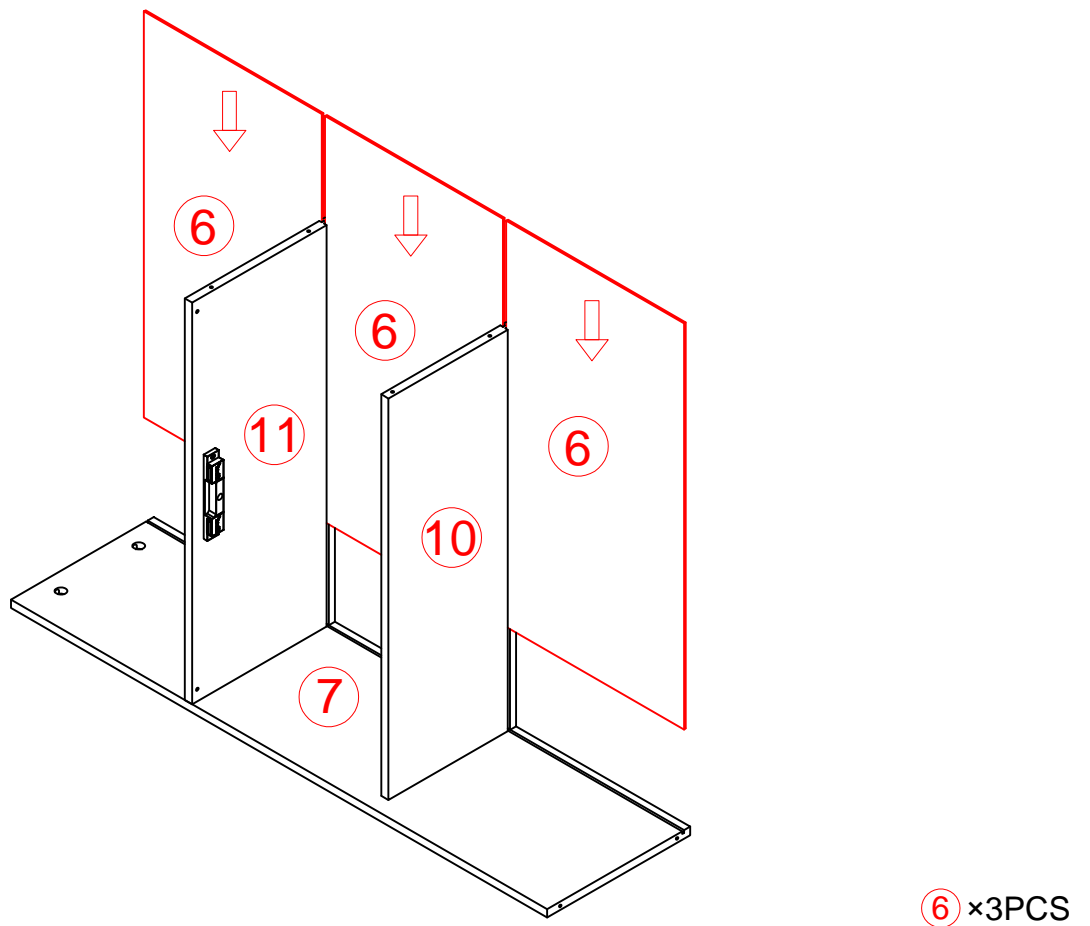


9

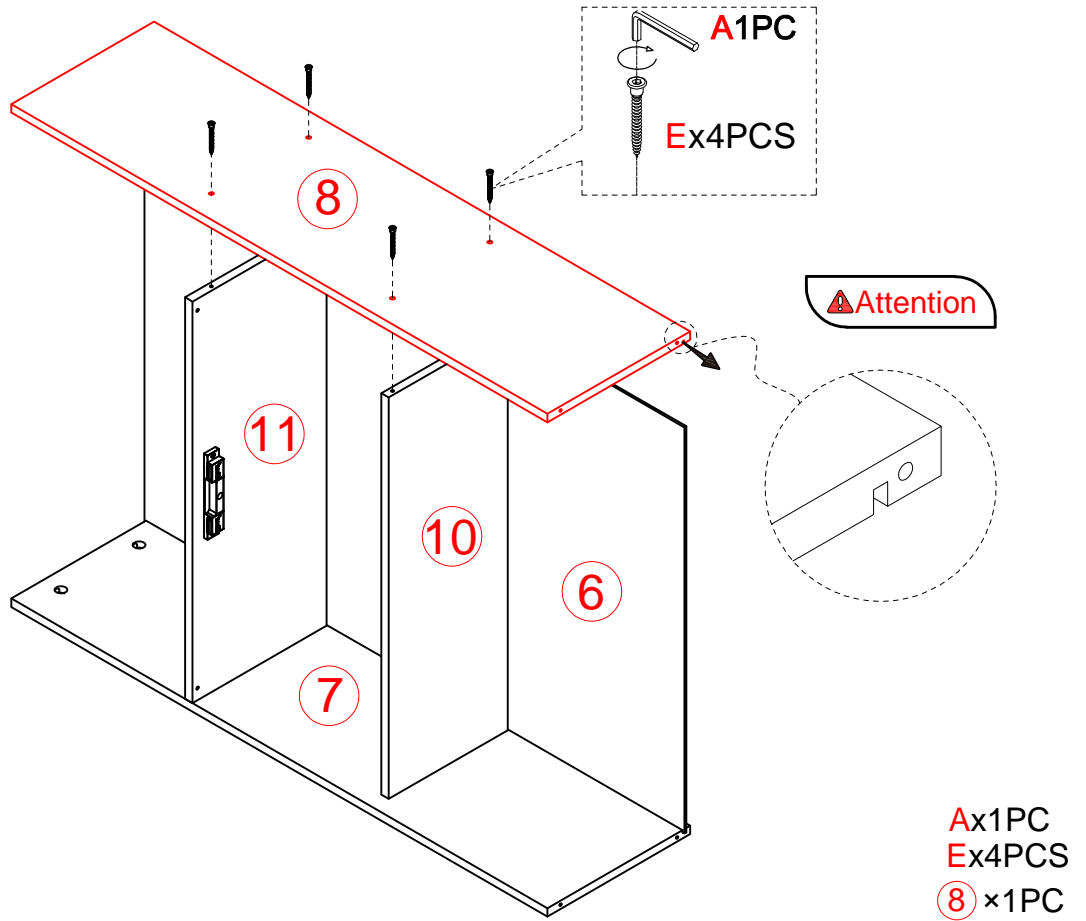


10

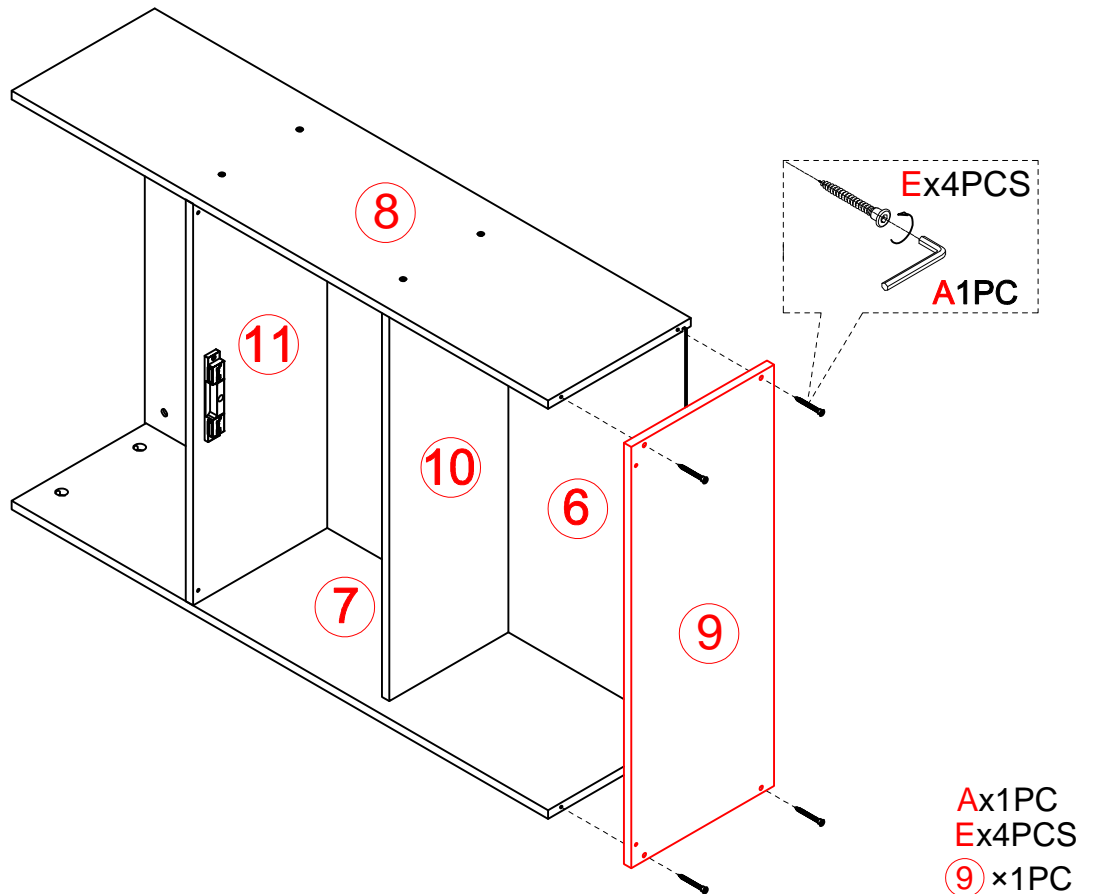


11

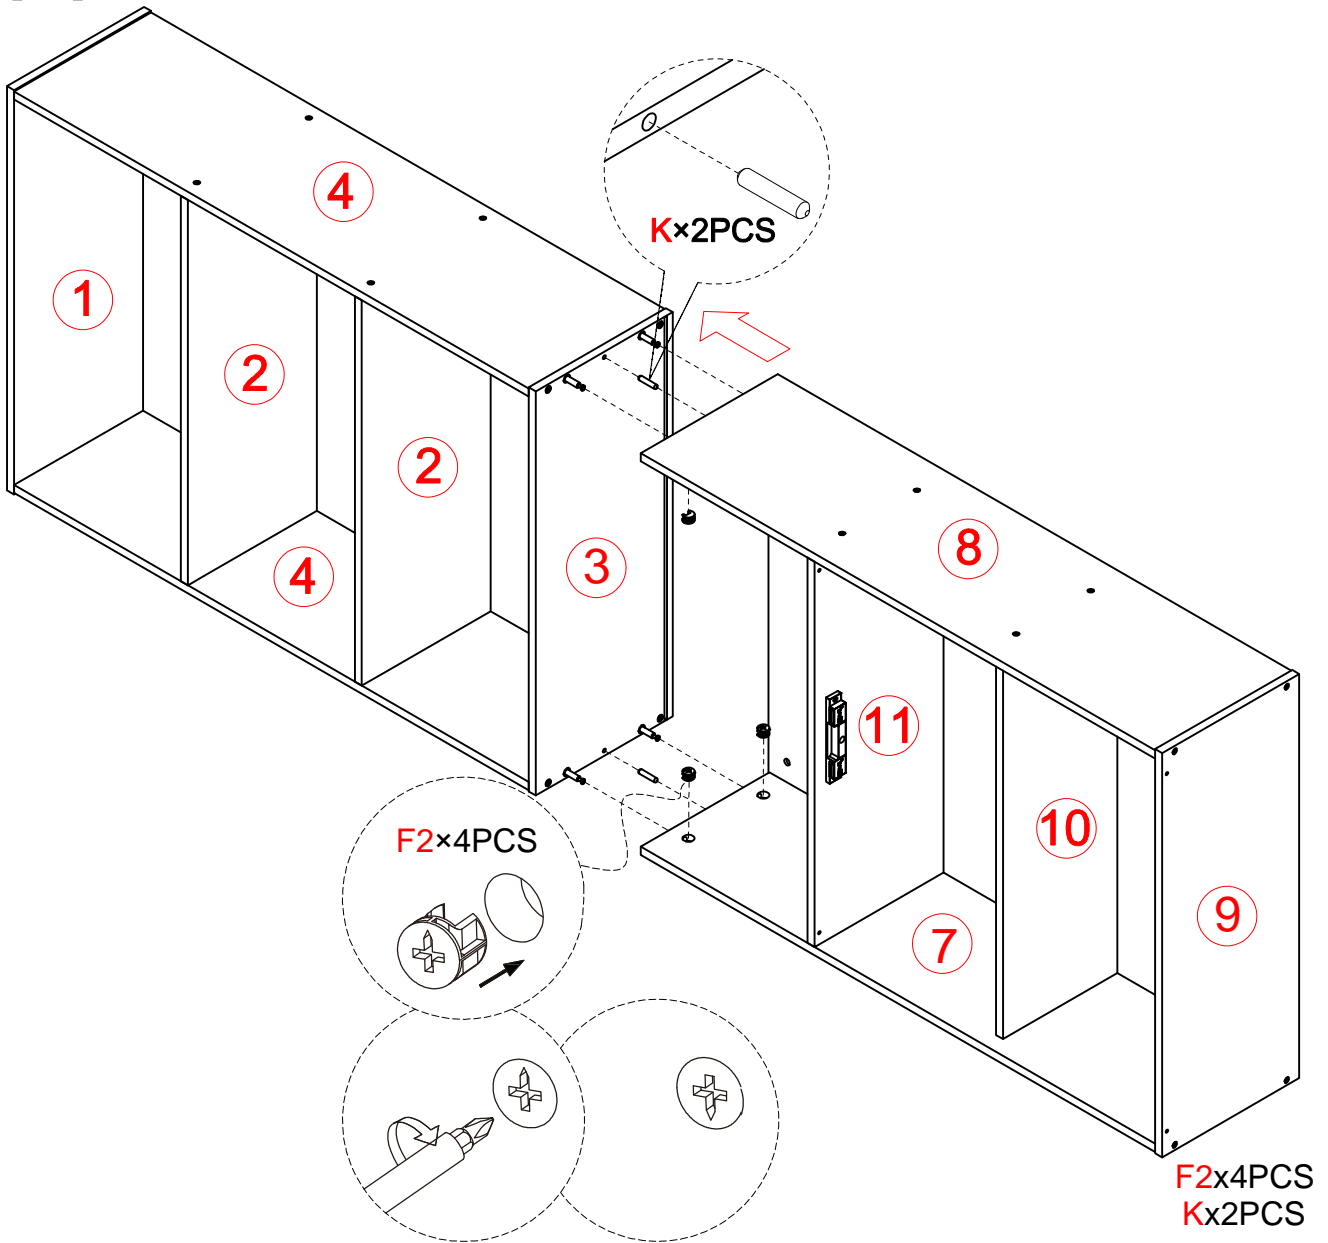

12

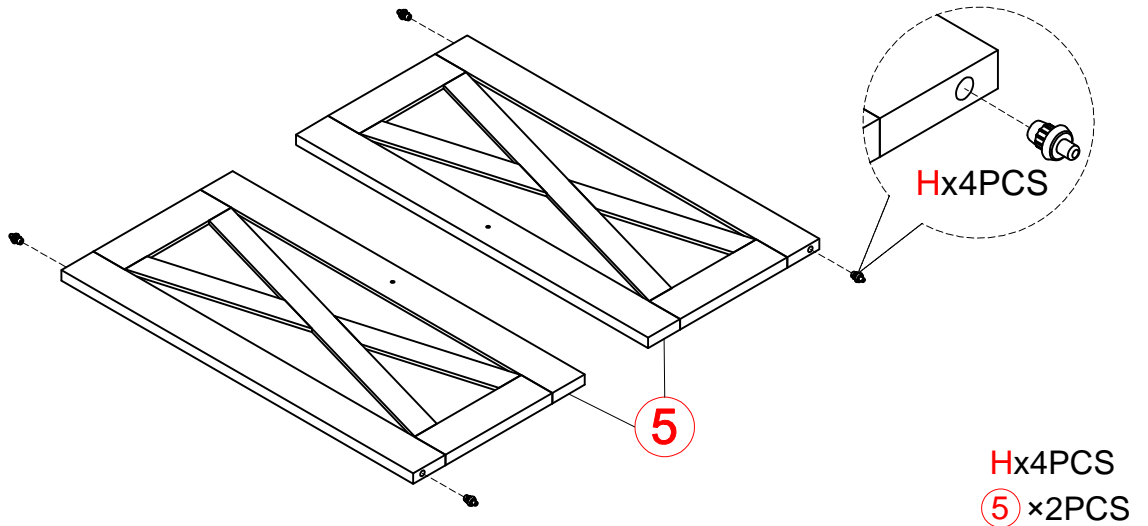


13

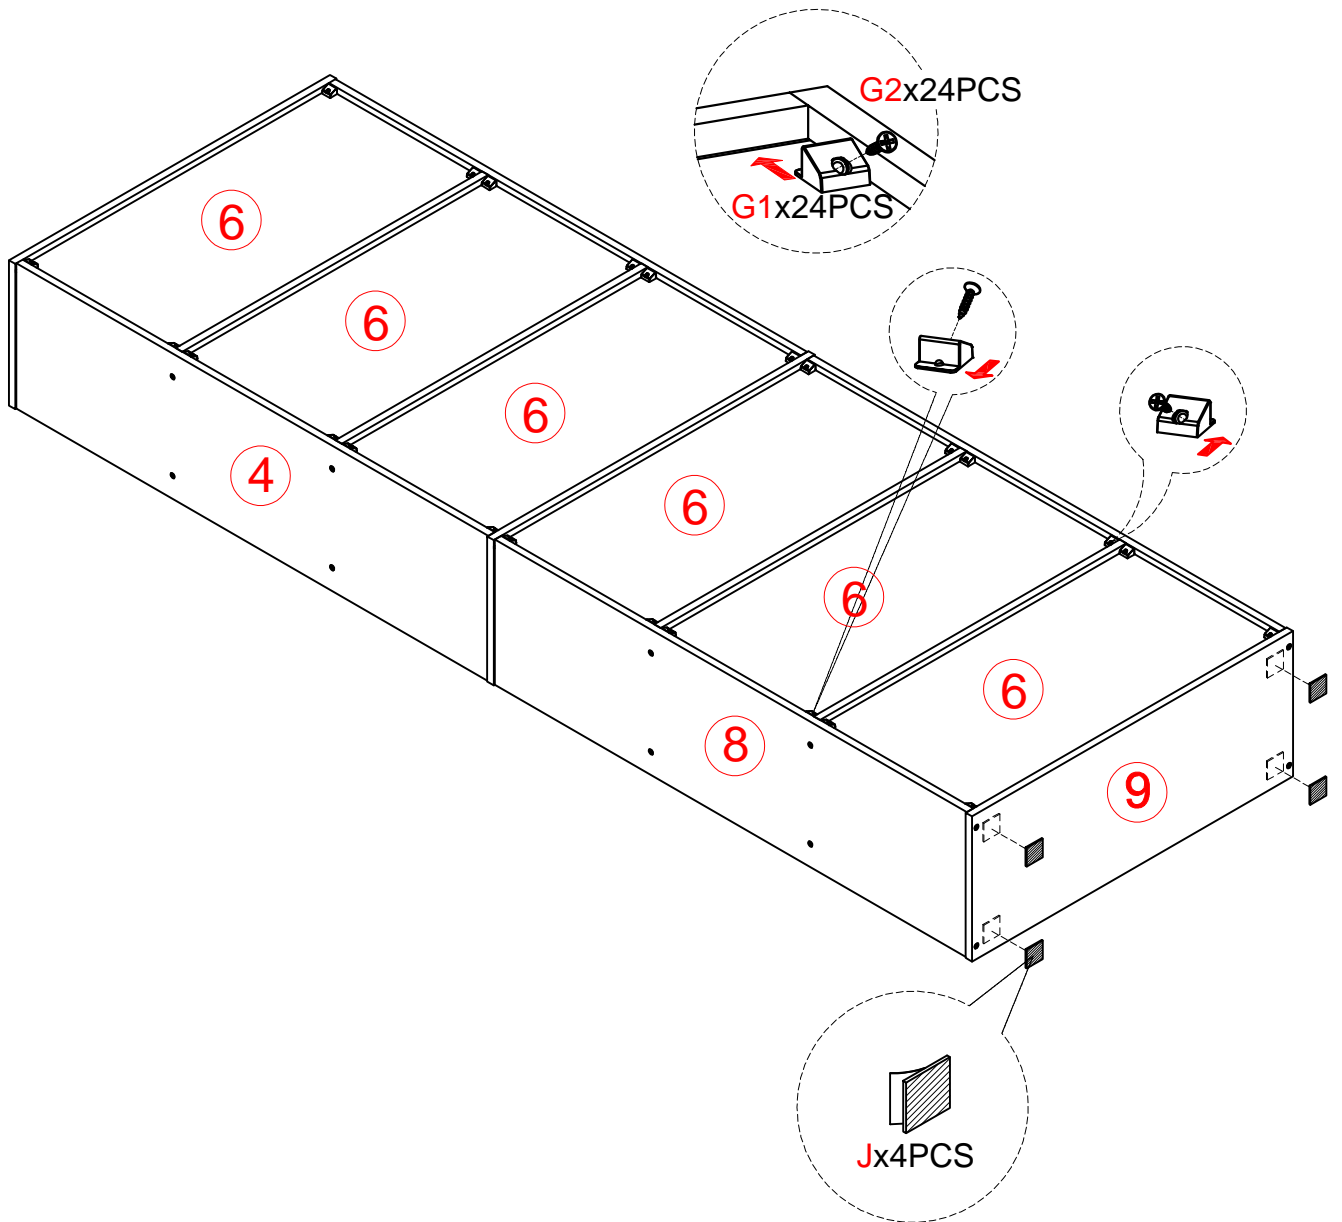


G1x24PCS
G2x24PCS
Jx4PCS

14

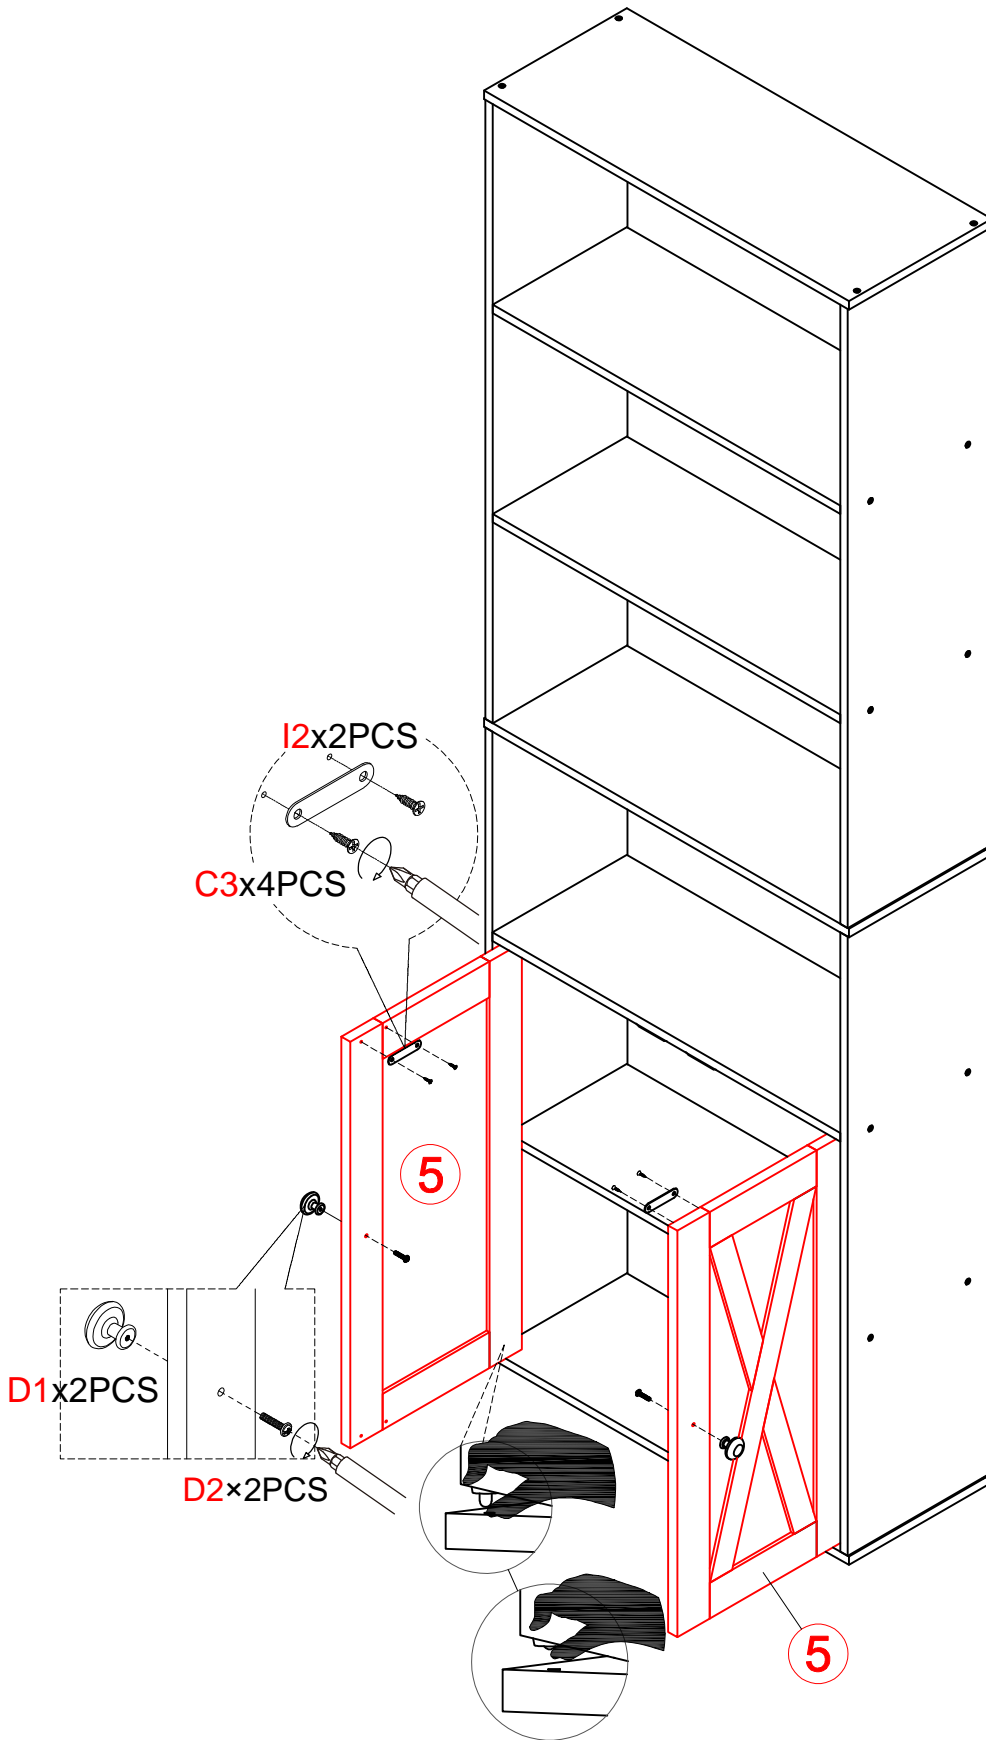

- C3x4PCS
- D1x2PCS
- D2x2PCS
- I2x2PCS
- 5 x2PCS


15

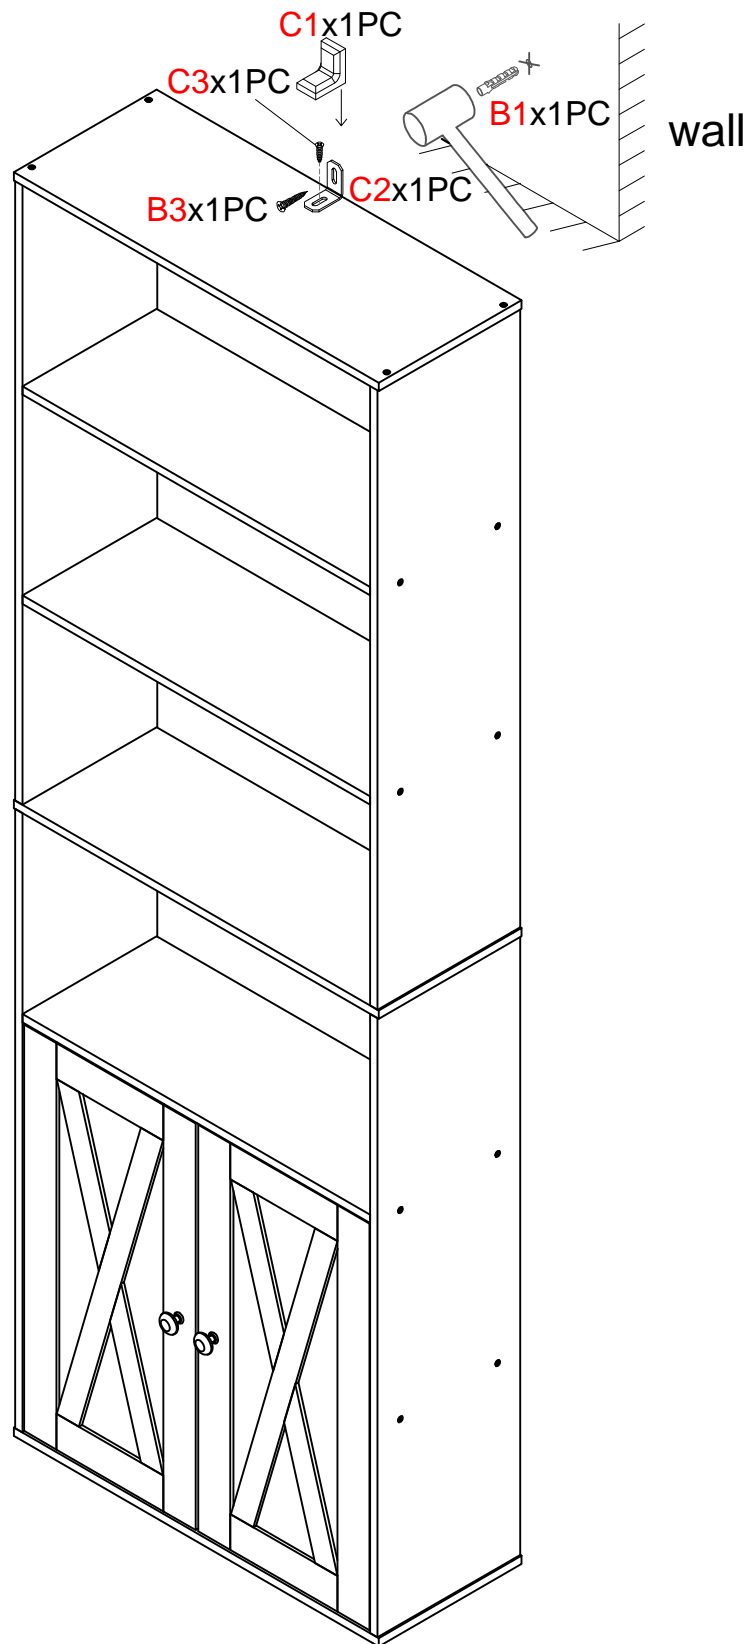

- B1x1PC
- B3x1PC
- C1x1PC
- C2x1PC
- C3x1PC

P12/13

16

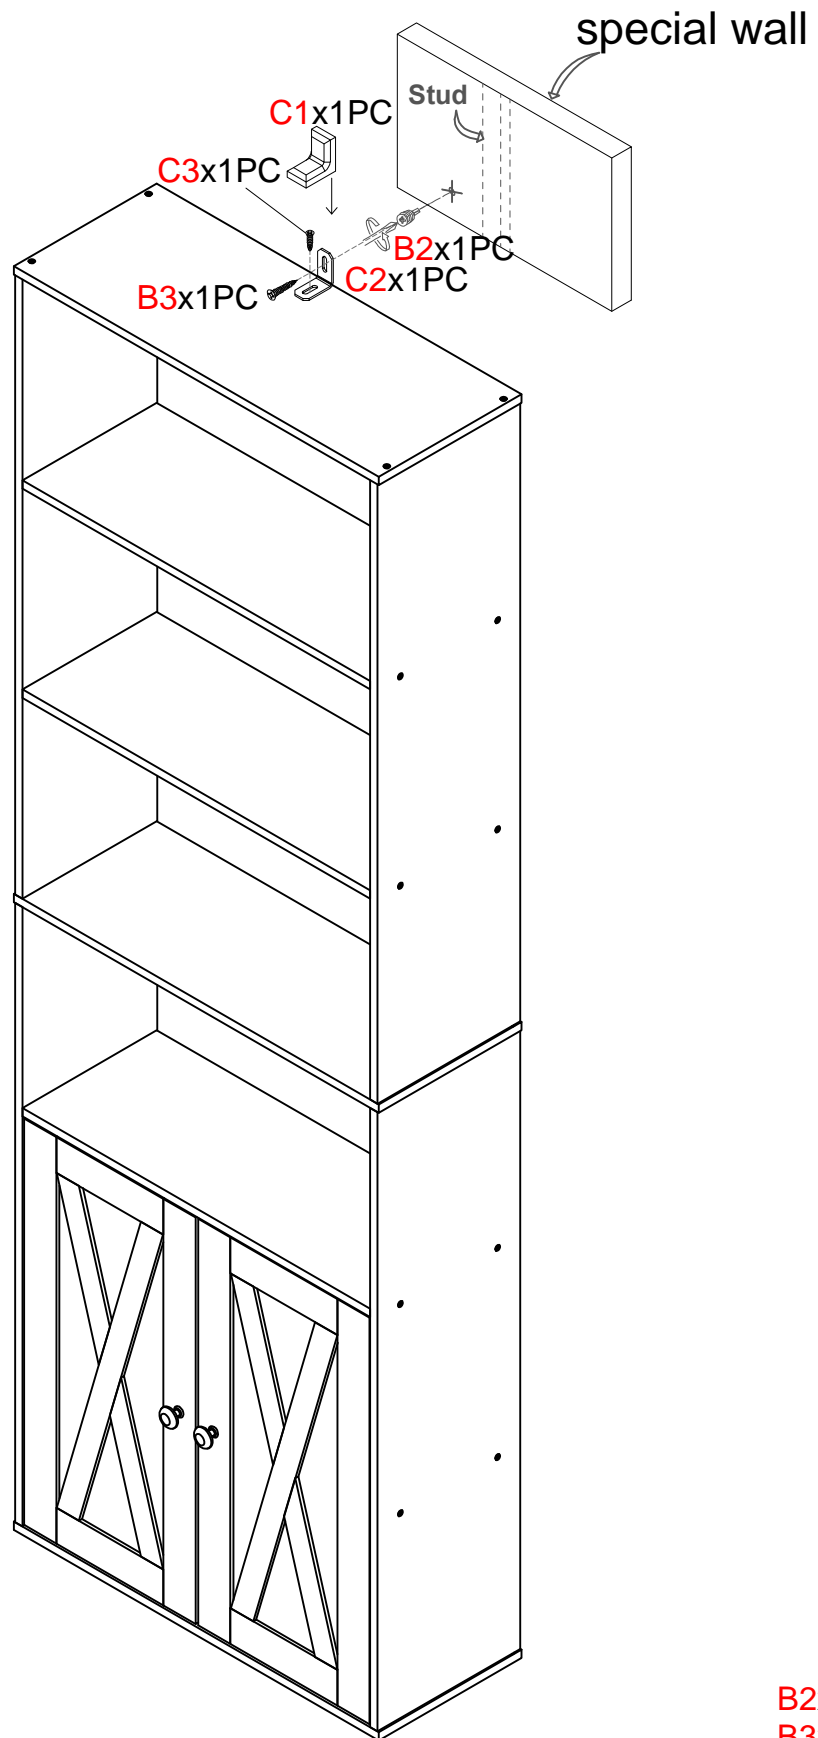

- B2x1PC
- B3x1PC
- C1x1PC
- C2x1PC
- C3x1PC