










Seaside Counter Chair

Assembly Instructions

Made in Vietnam


Components and Hardware List

Back  (A) 1pc	Seat  (B) 1pc	Front Legs  (C) 2pcs
Left Side Stretcher  (D) 1pc	Right Side Stretcher  (E) 1pc	Front Stretcher  (F) 1pc
Allen Head Bolt Ø8 x 85mm  (H1) 4pcs	Allen Head Bolt Ø8 x 55mm  (H2) 4pcs	Allen Head Bolt Ø8 x 40mm  (H3) 1pc
Spring Washer Ø9 x Ø13mm  (H4) 9pcs	Flat Washer Ø8 x Ø20mm  (H5) 9pcs	Allen Key 4 x 110mm  (H6) 1pc
		Wood Screw 4 x 50mm  (H7) 6pcs

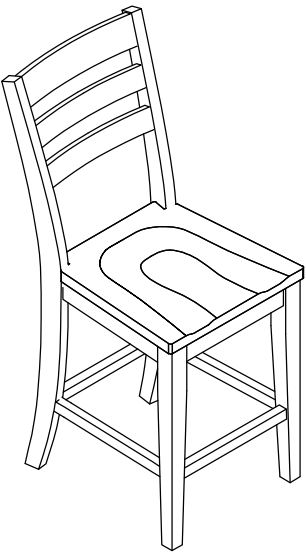


#7085 - 0741 - 0793



Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

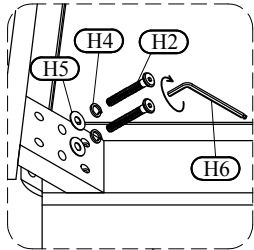


Step 1:

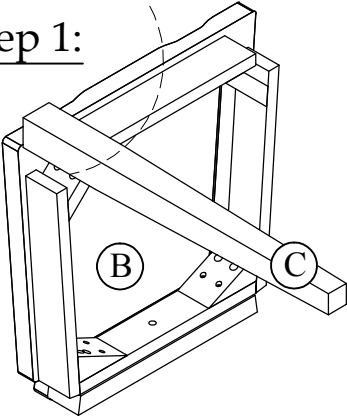



Step 2:

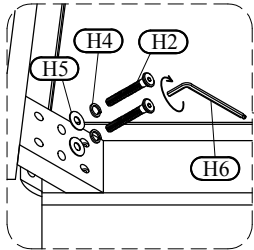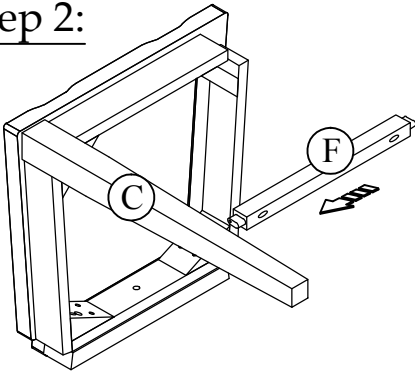

Step 3:

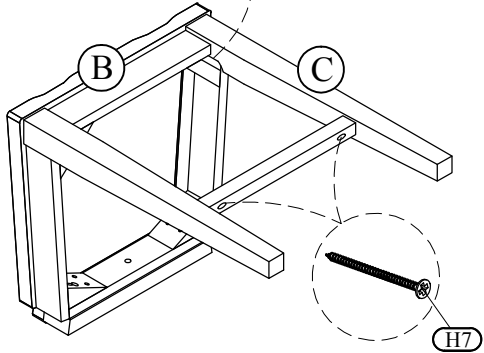

Step 4:

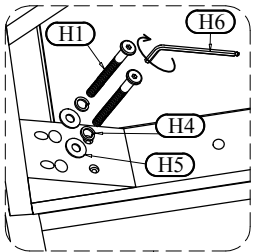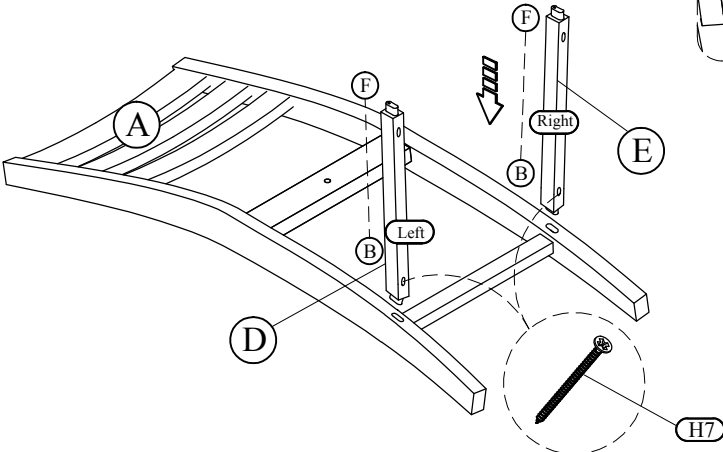

Step 5:

