
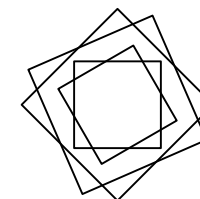


THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

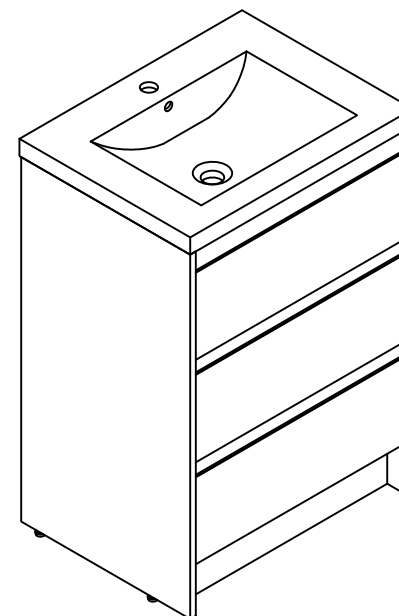


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 J24


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	58	I	 Track	3
B	 Two-in-one connector	56	J	 U-Shaped plastic	2
C	 Two-in-one connector	56	K	 Screws Ø4x20mm	12
D	 Wood plug	4	L	 Screws Ø4x10mm	14
E	 Plastic anchor(Ø10mm)	2	M	 Adjustable feet	4
F	 Screws for fix on the wall	2	N	 Anti-collision gasket	12
G	 Bracket (53x70x44mm)	2	O	 Screwdriver	1
H	 Bracket (19x19x35mm)	2			


Recommended tools

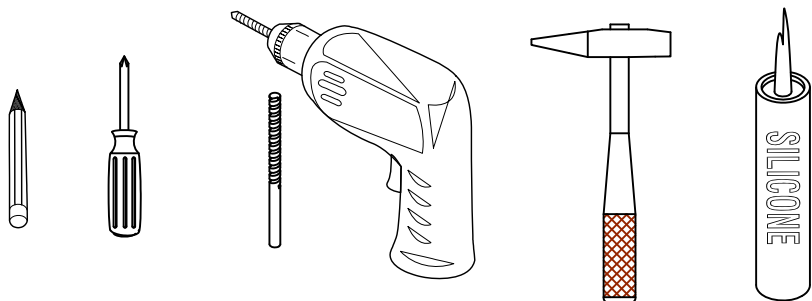


Dimensions

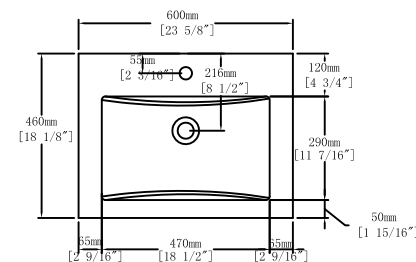

Top View

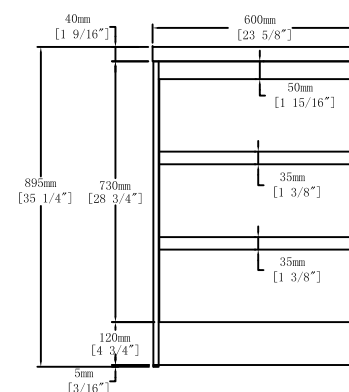

Front View

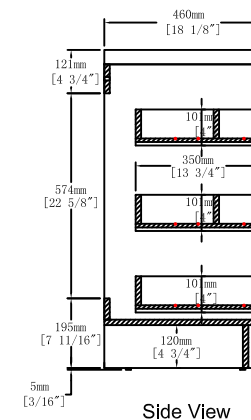


Side View


CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.The sink is fragile, please pay attention to maintaining its appearance.
- 5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.


Finished

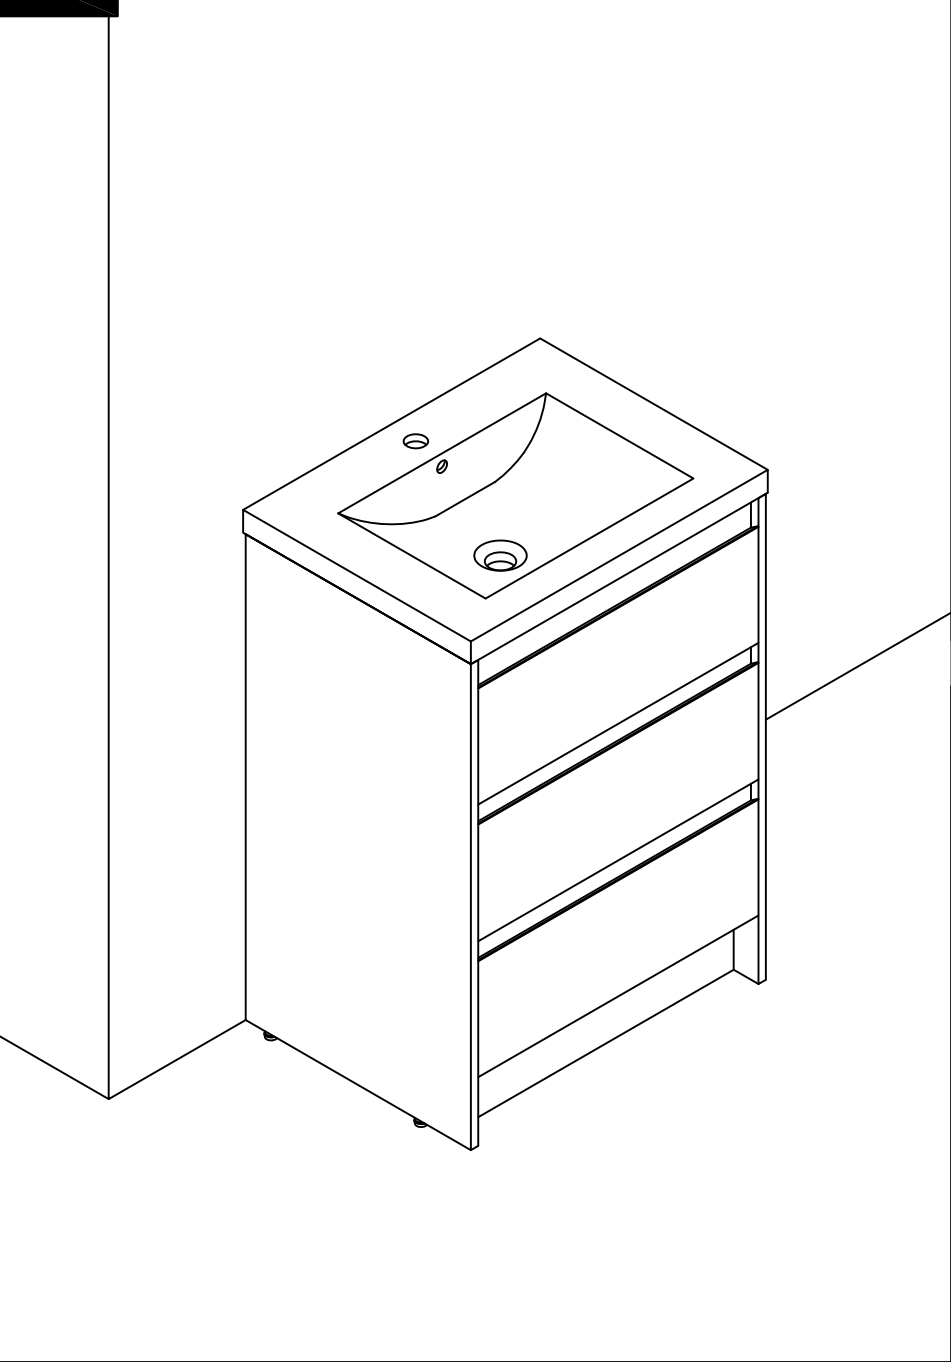

Dimensions



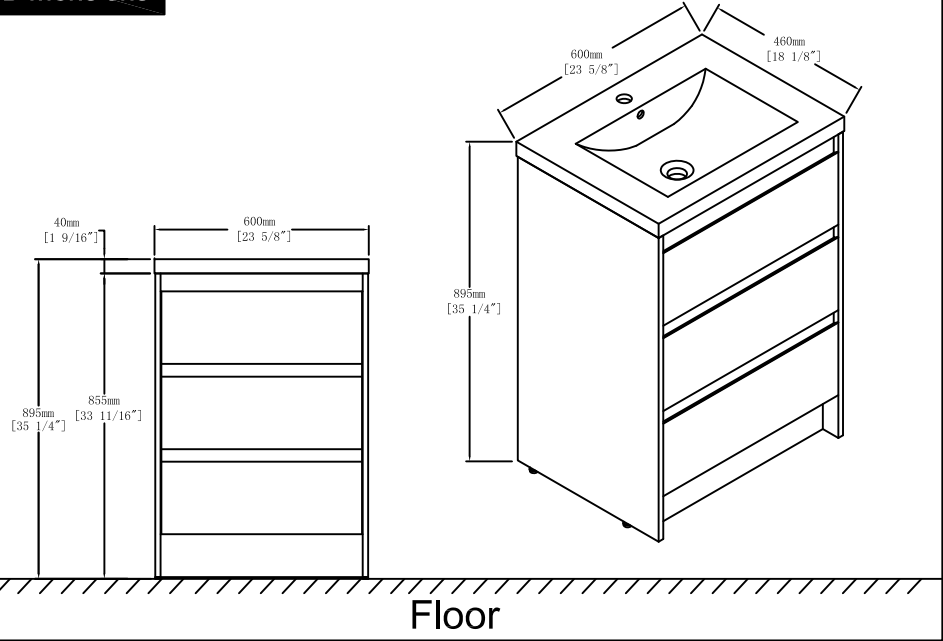


Components

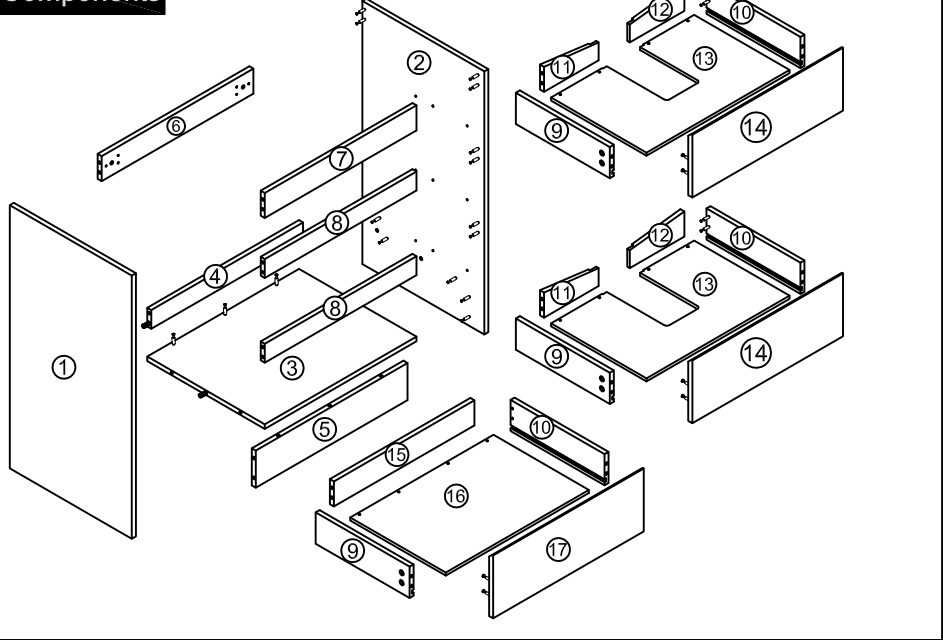



Step 1

Note: Follow the holes positions exactly.

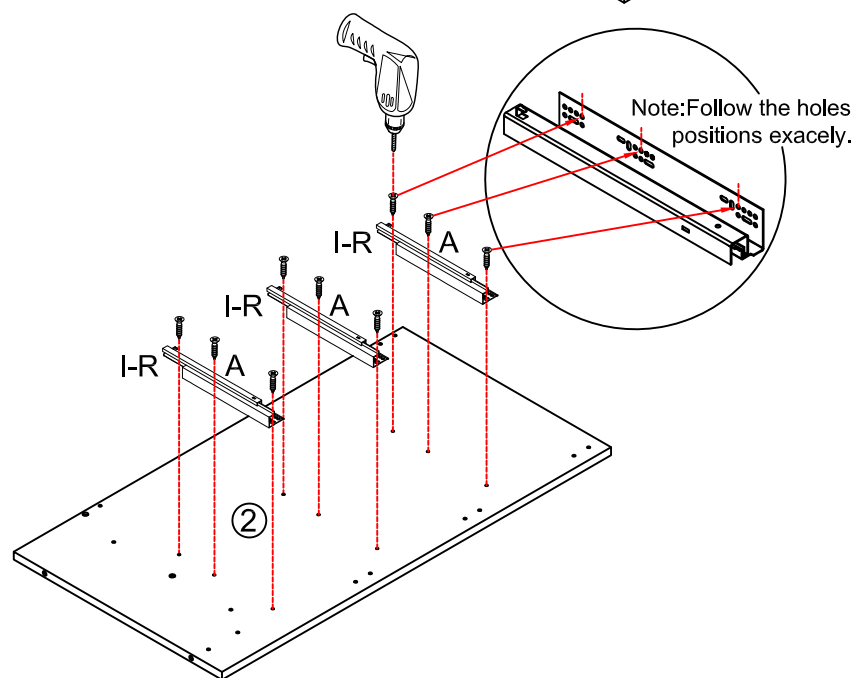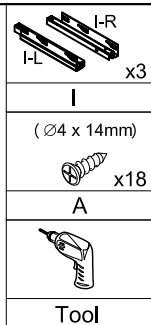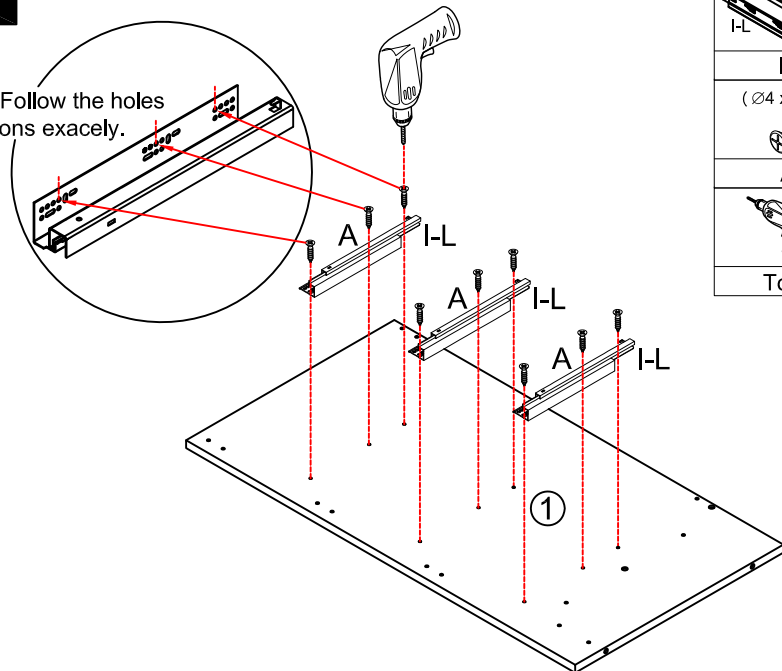


Note: Follow the holes positions exactly.

Step 17

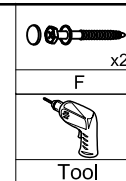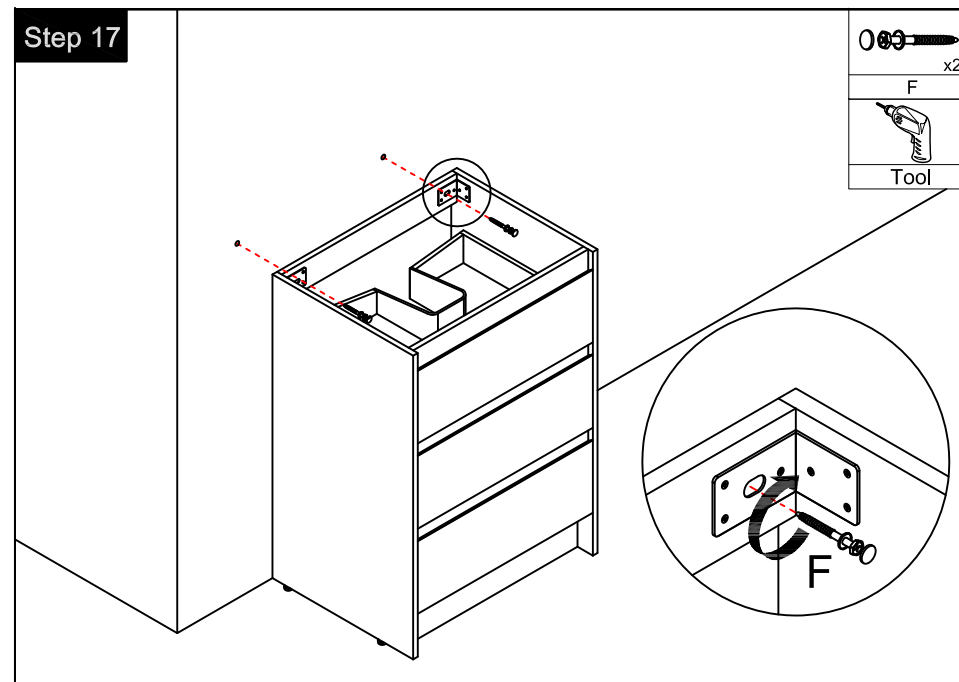


Step 18


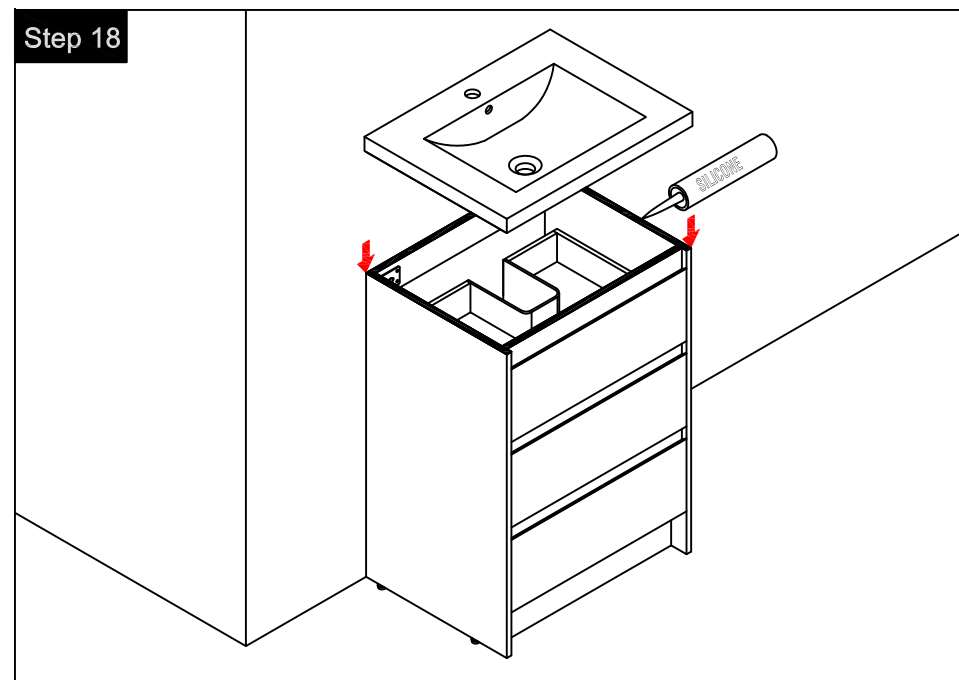


Step 16

($\varnothing 4 \times 14\text{mm}$)
A x12
Tool


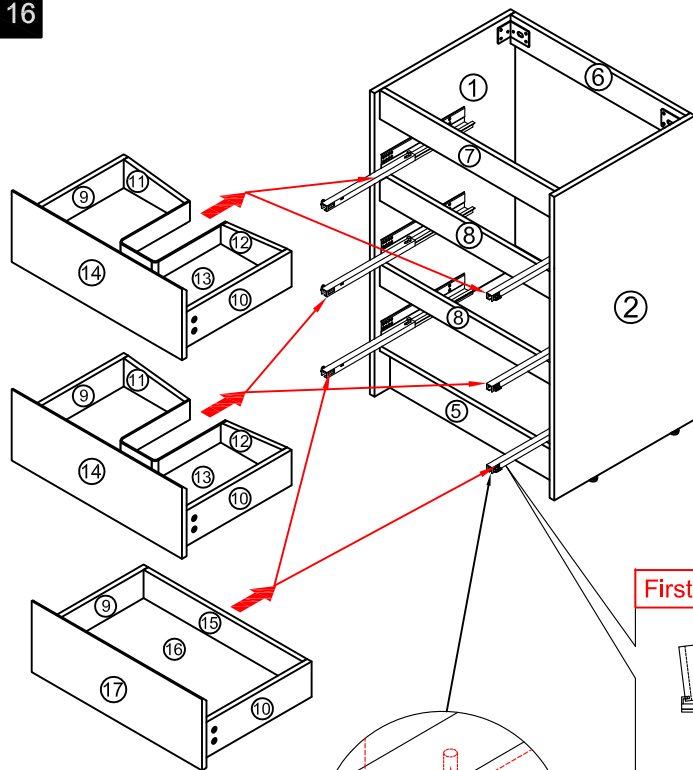


First

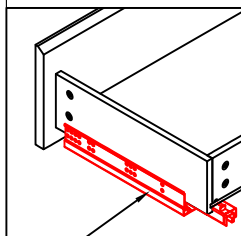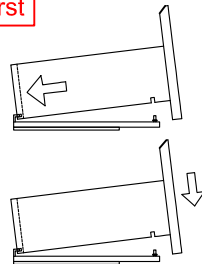




Second step: Tuck the rear holes.

Third step: The bottom of the rail is fixed with screw A.

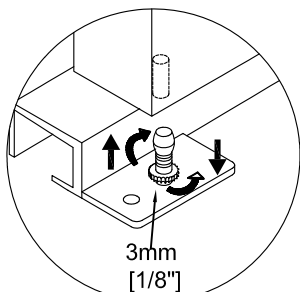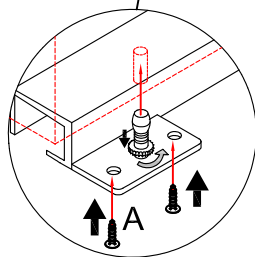


Note: The rails adjust their height 3mm.


Step 2

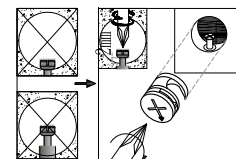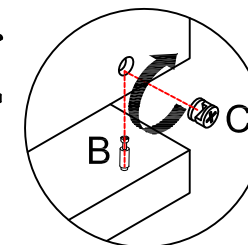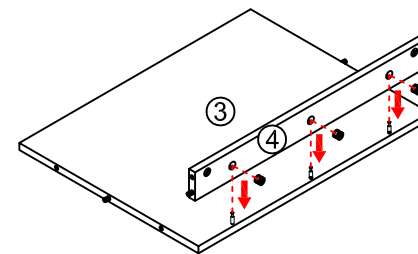

Notes: Screw installation depth as shown



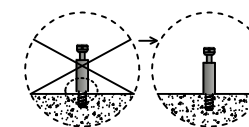


Attention: Cam lock arrow point to the steel rod.

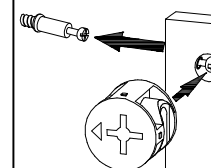

x3
B
x3
C
O


Step 3

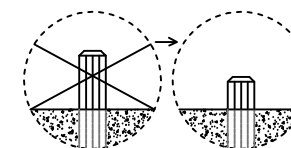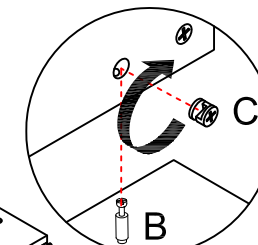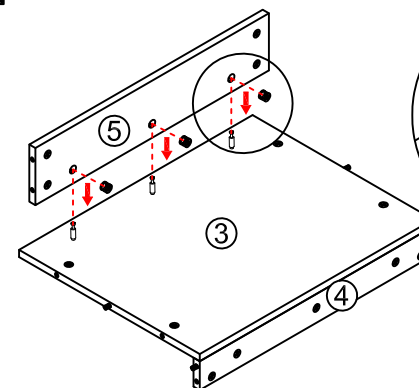





first step





second step

third step




x3
B
x3
C
O

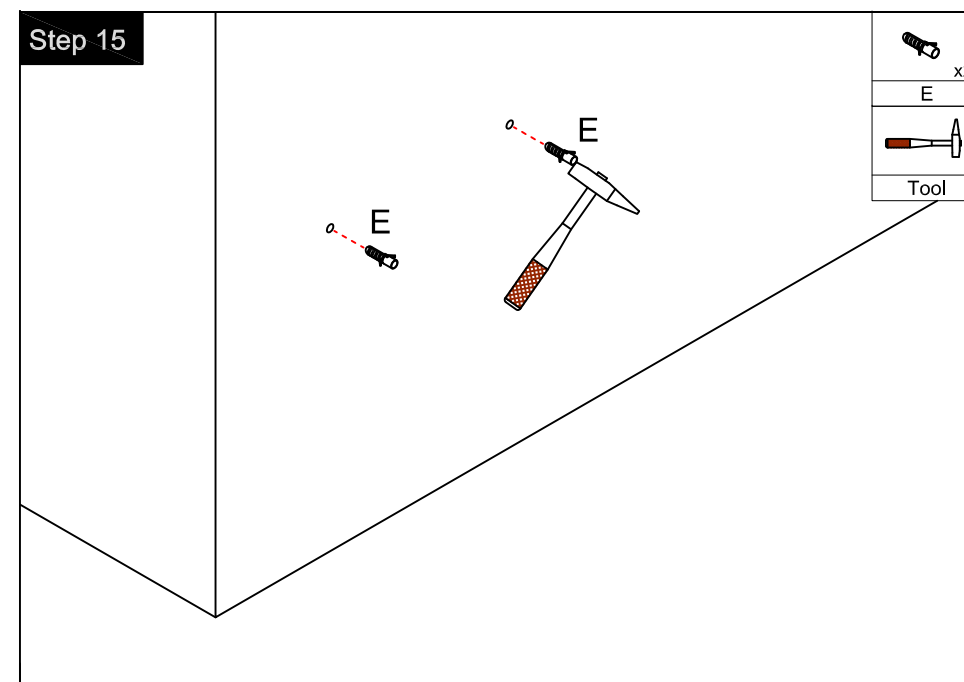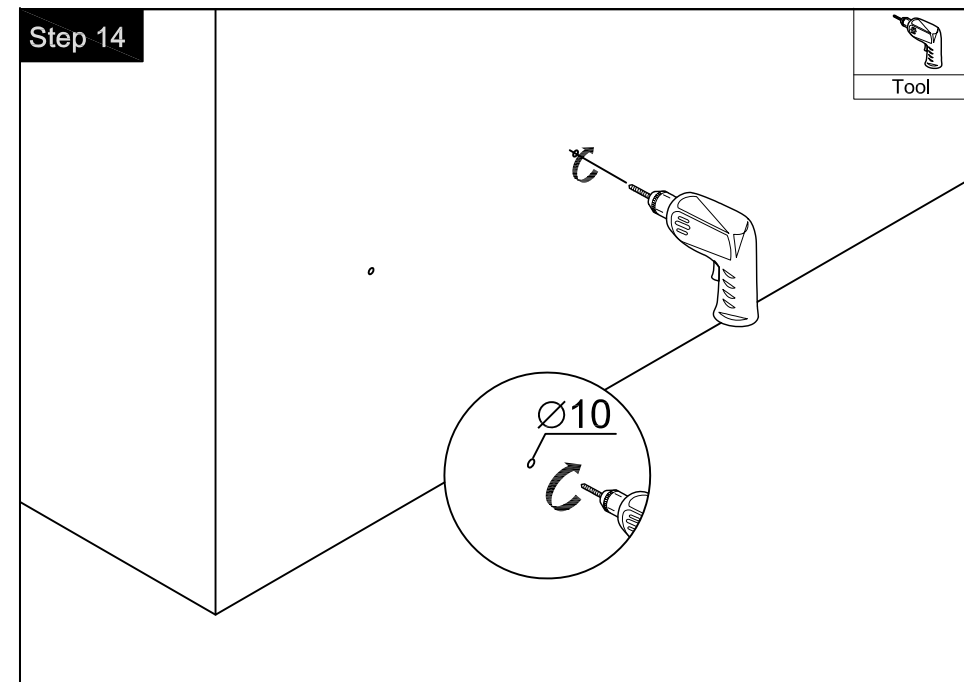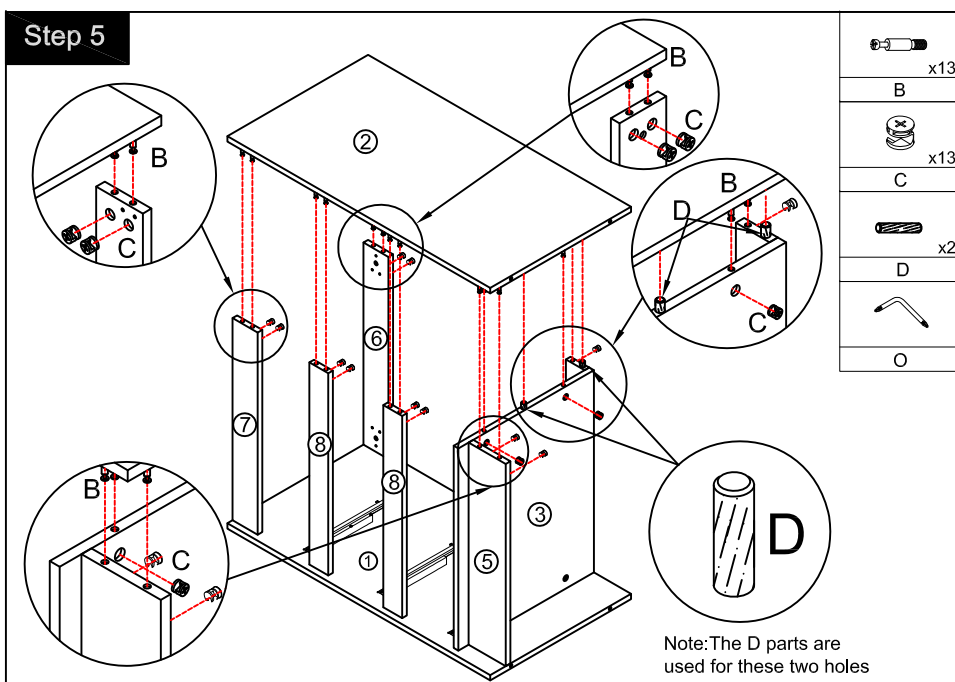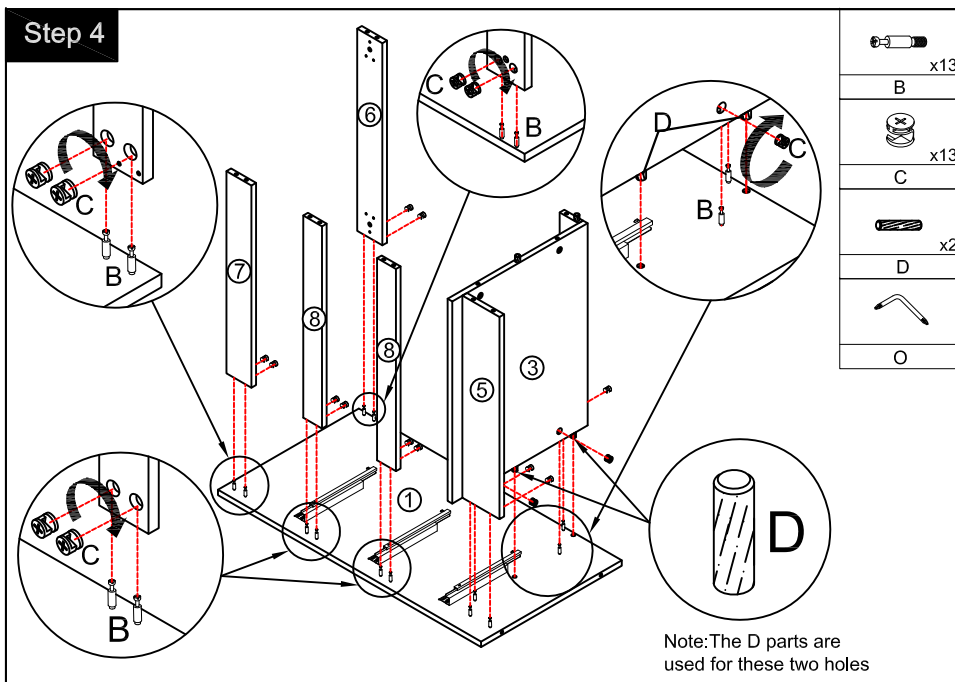


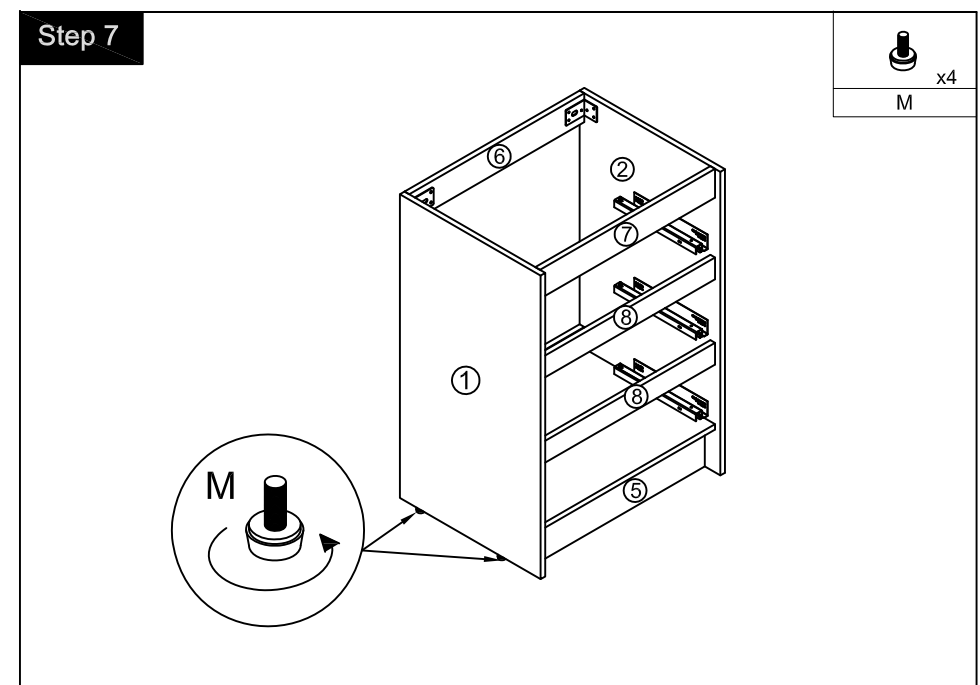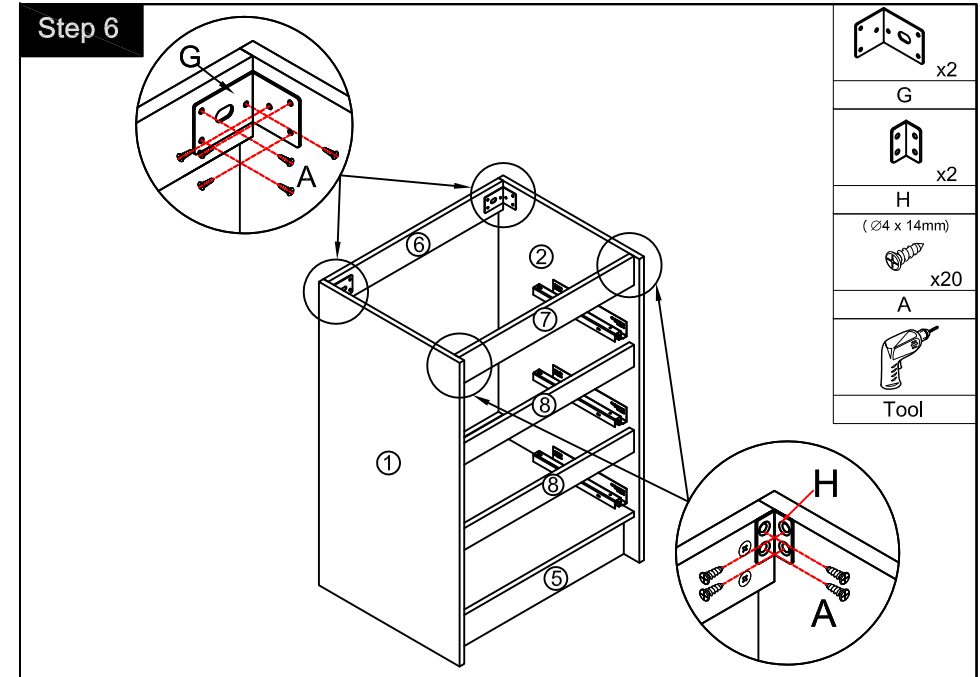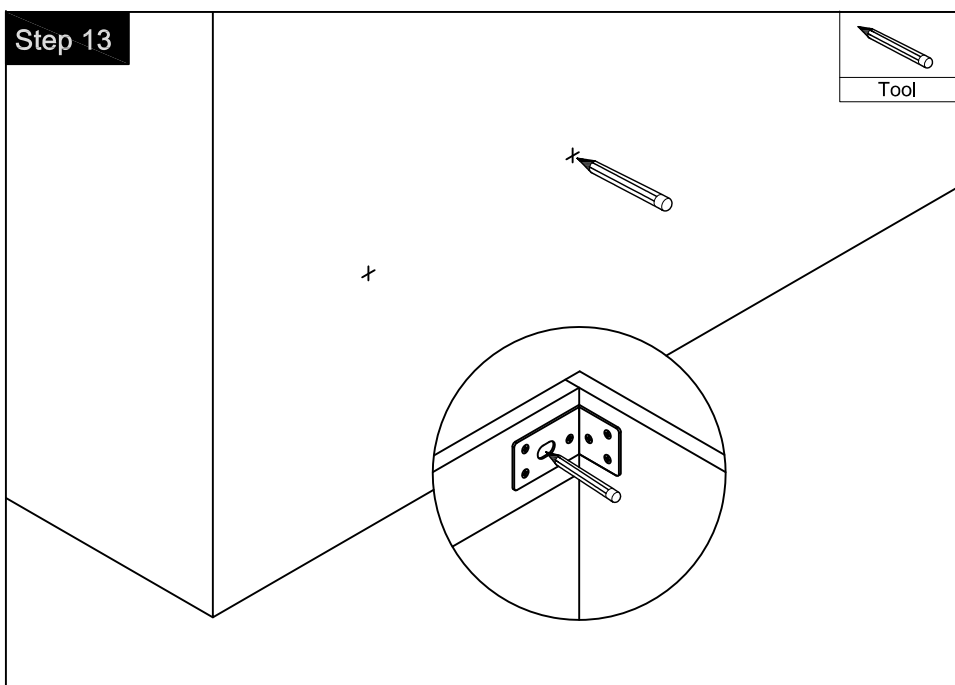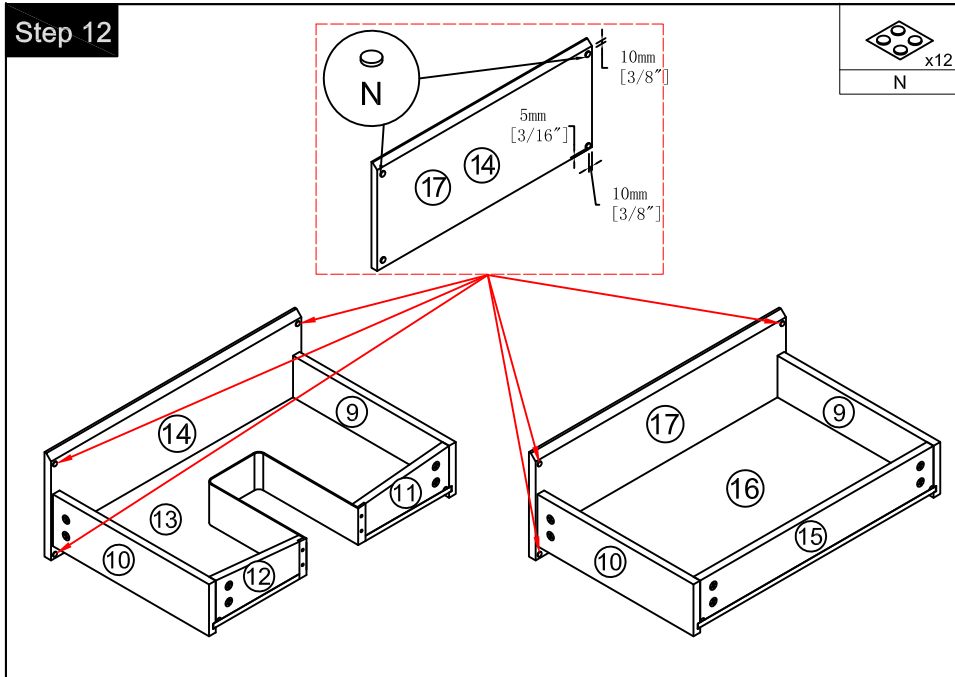


Step 8

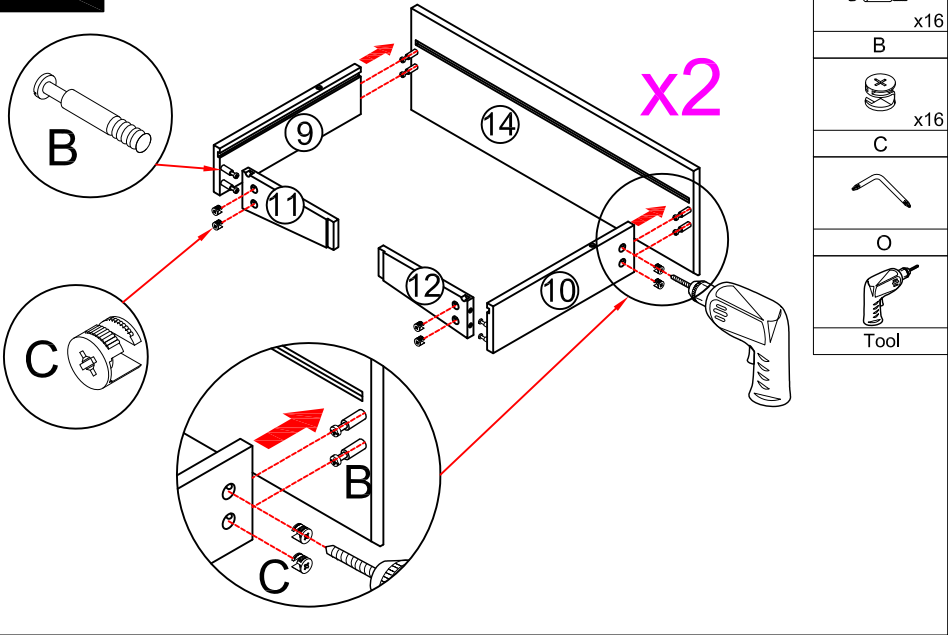


Step 10

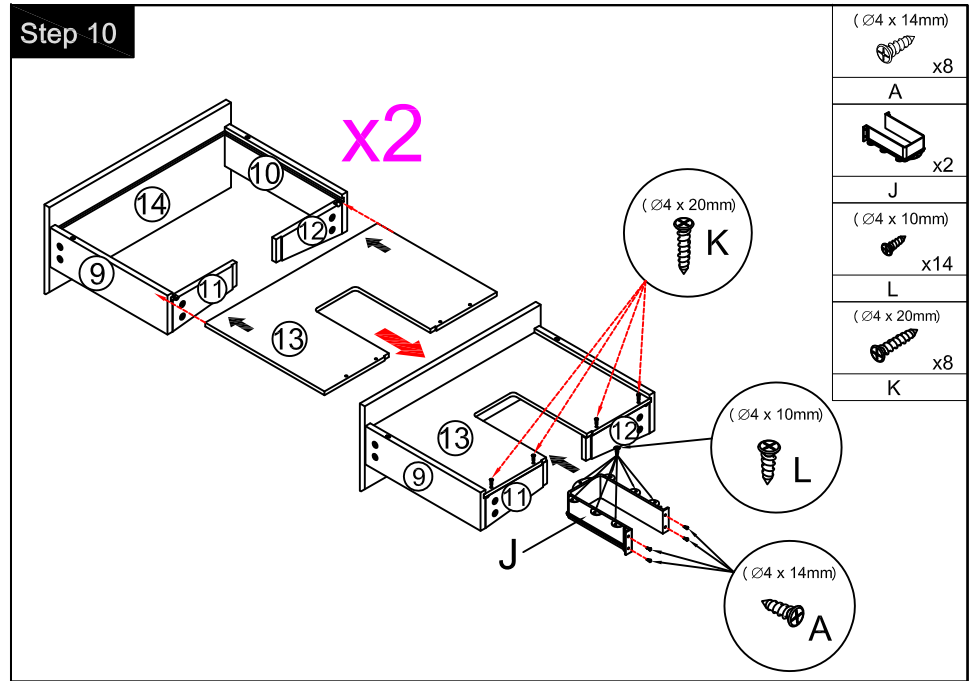

Step 9

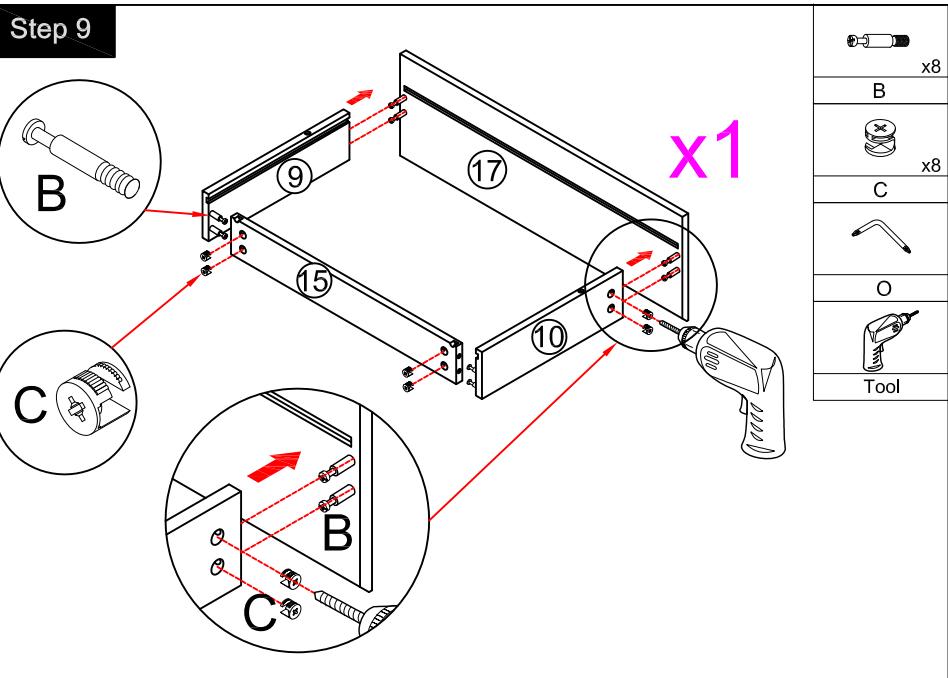

Step 11


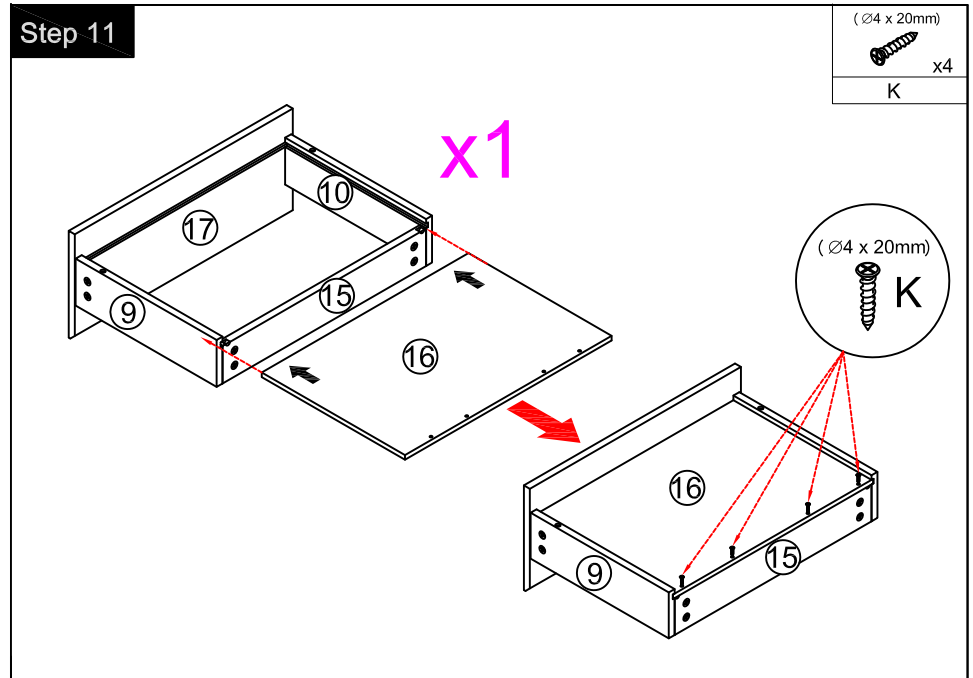


Installation Manual-BV B120 E24B

MOTIVATE
YOUR LIFE !

THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

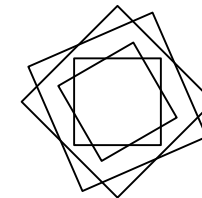
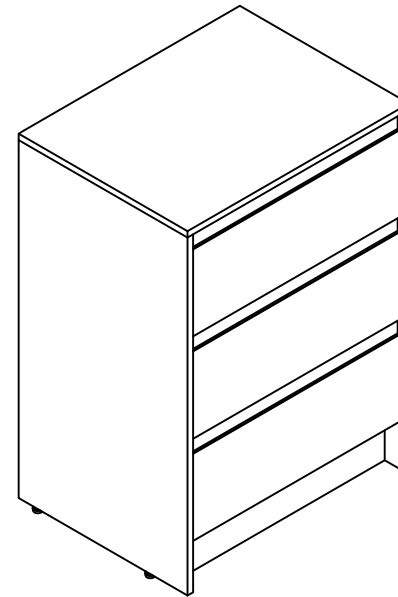


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 E24B


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	30	G	 Screws Ø4x20mm	12
B	 Two-in-one connector	64	H	 Adjustable feet	4
C	 Two-in-one connector	64	I	 Track	3
D	 Wood plug	8	J	 Anti-collision gasket	12
E	 Plastic anchor(Ø10mm)	2	K	 Screwdriver	1
F	 Screws for fix on the wall	2			


Recommended tools

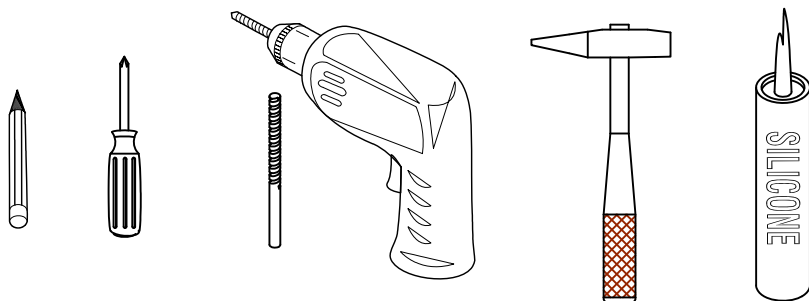


Dimensions

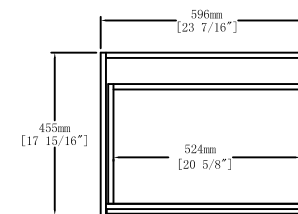

Top View

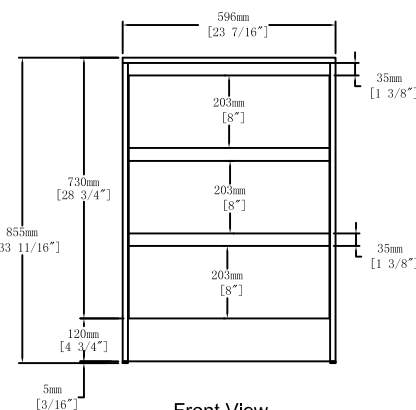

Front View

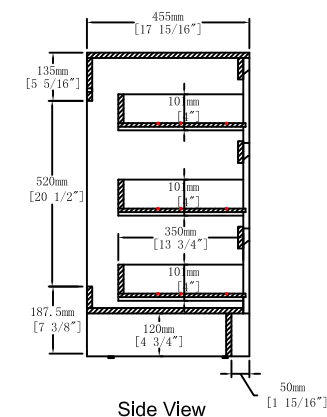


Side View


CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

Finished

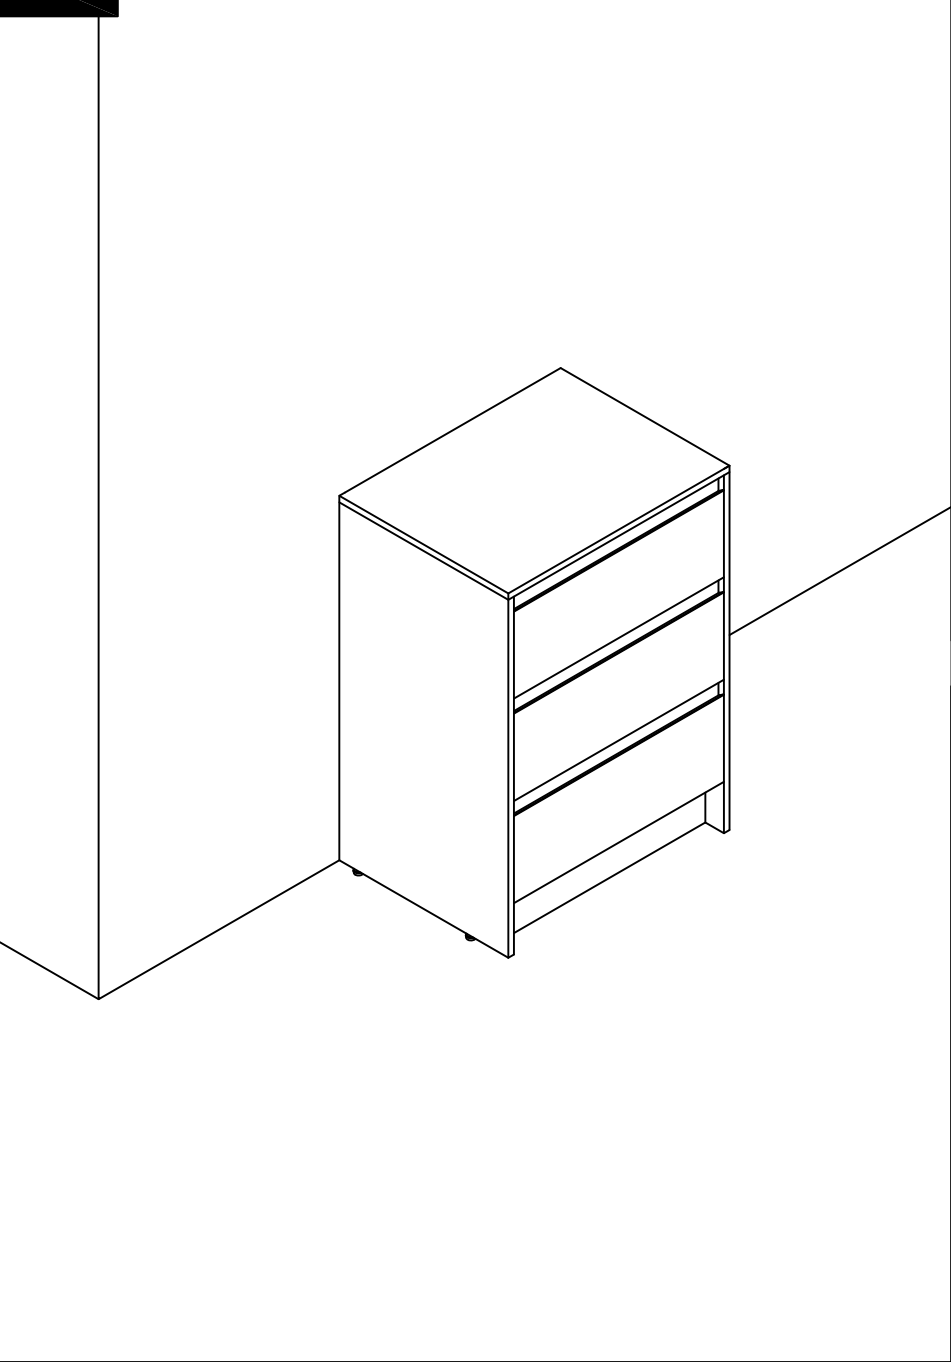


Dimensions

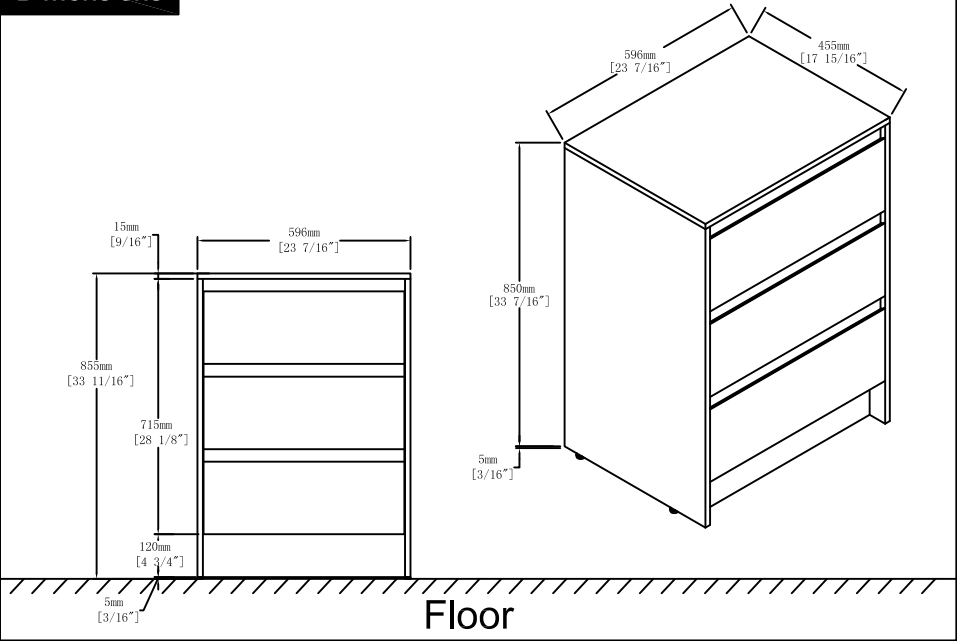




Floor

Components


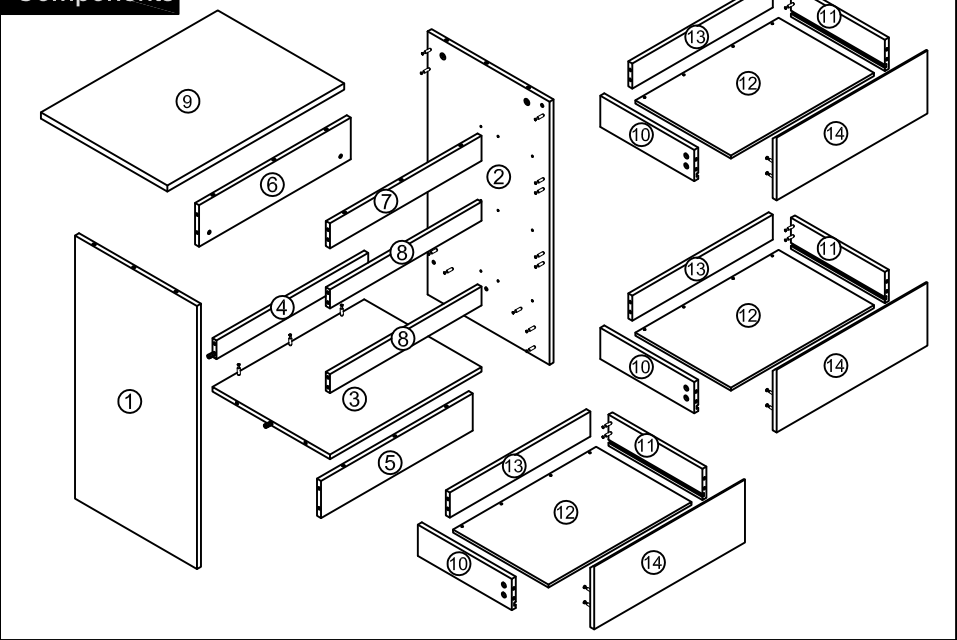


Step 1



Note: Follow the holes positions exactly.

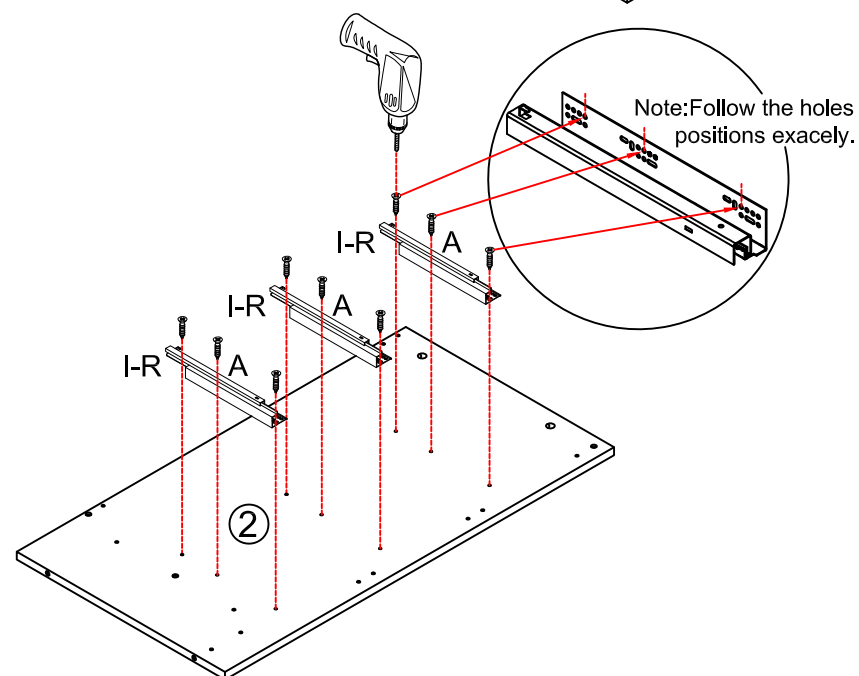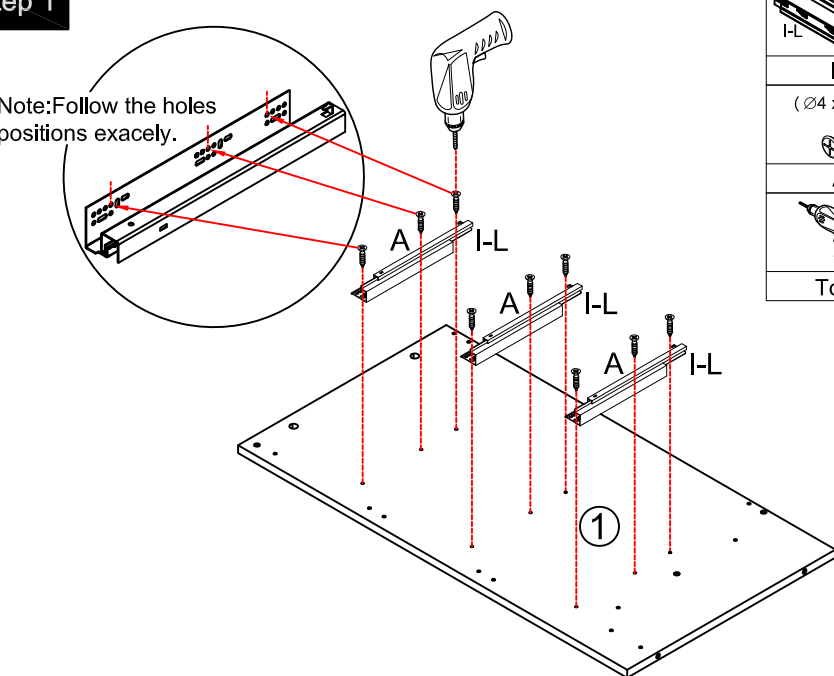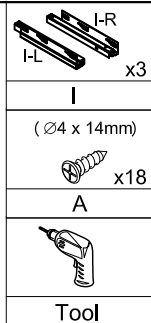

Step 16

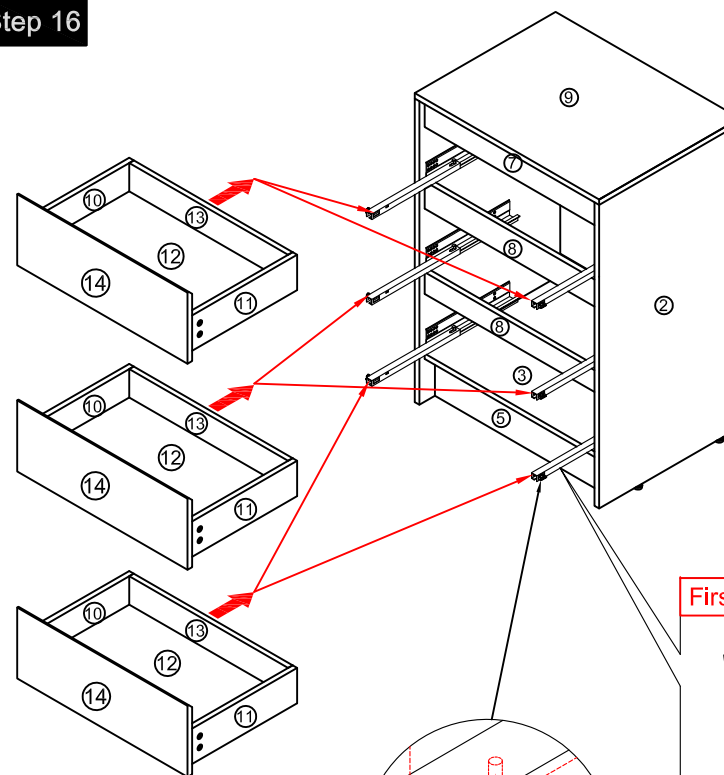
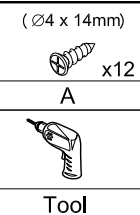


First

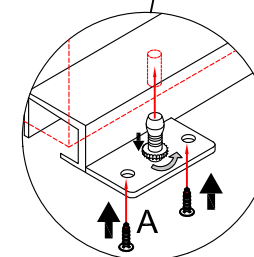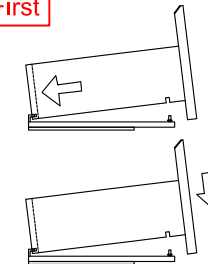




Third step: The bottom of the rail is fixed with screw A.

Second step: Tuck the rear holes.




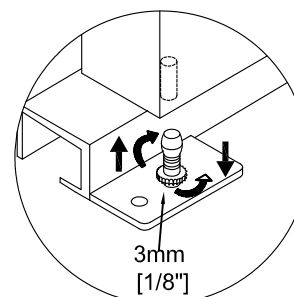
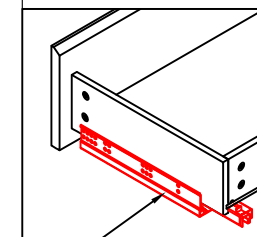


Note: The rails adjust their height 3mm.

Step 15

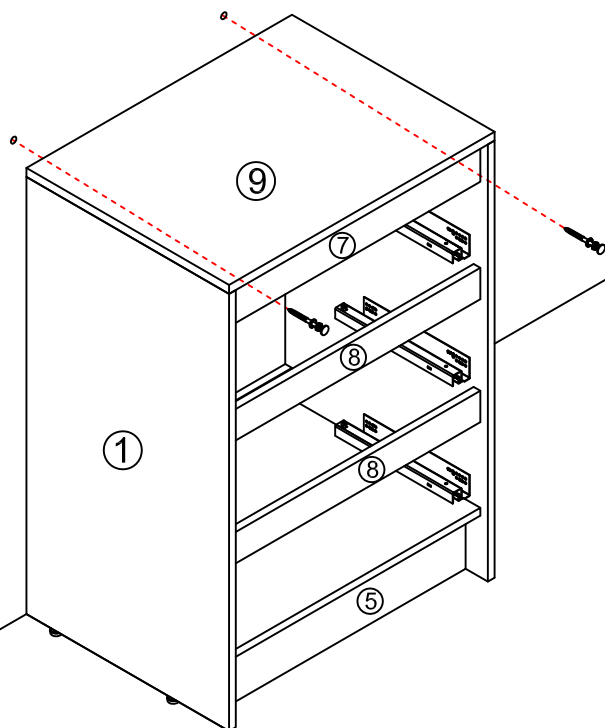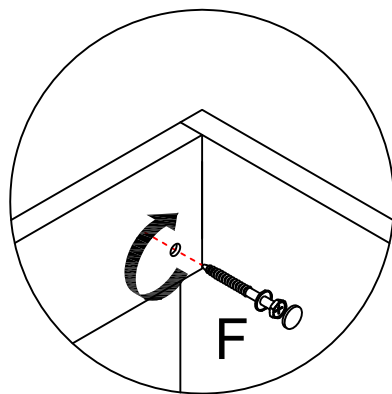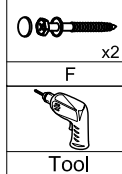


Step 2

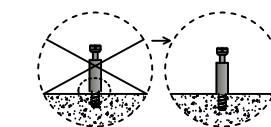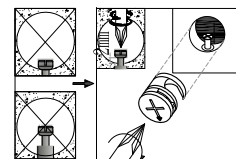
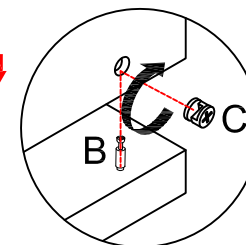
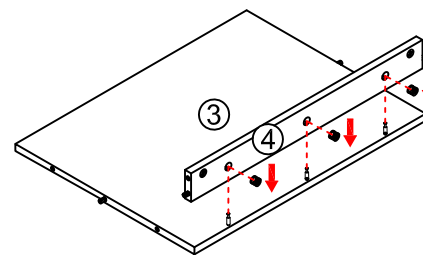
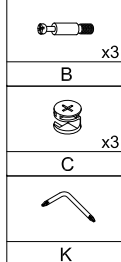


Notes: Screw installation depth as shown

Attention: Cam lock arrow point to the steel rod.

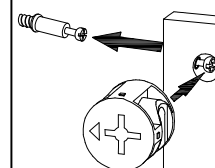



Step 3

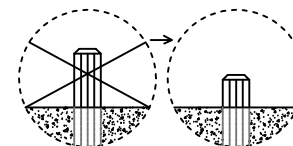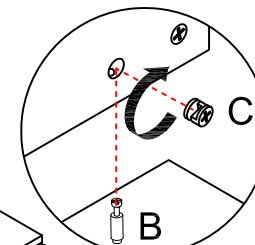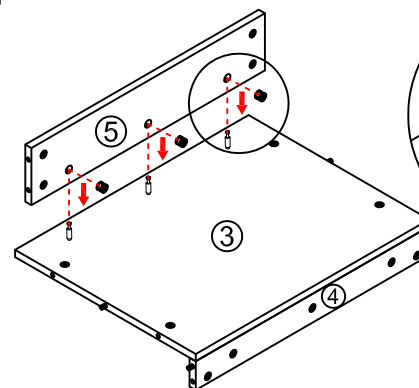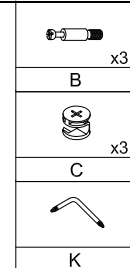


first step

second step

third step

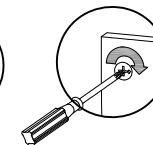


Step 4

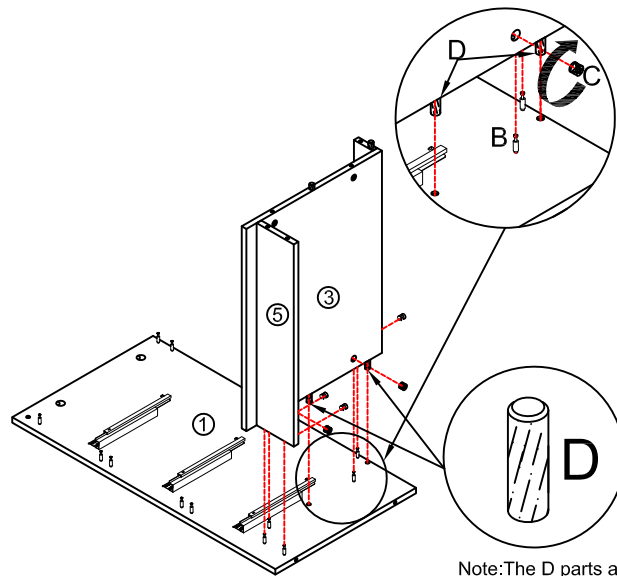

	x5
	x5
	x2


Note: The D parts are used for these two holes

Step 13

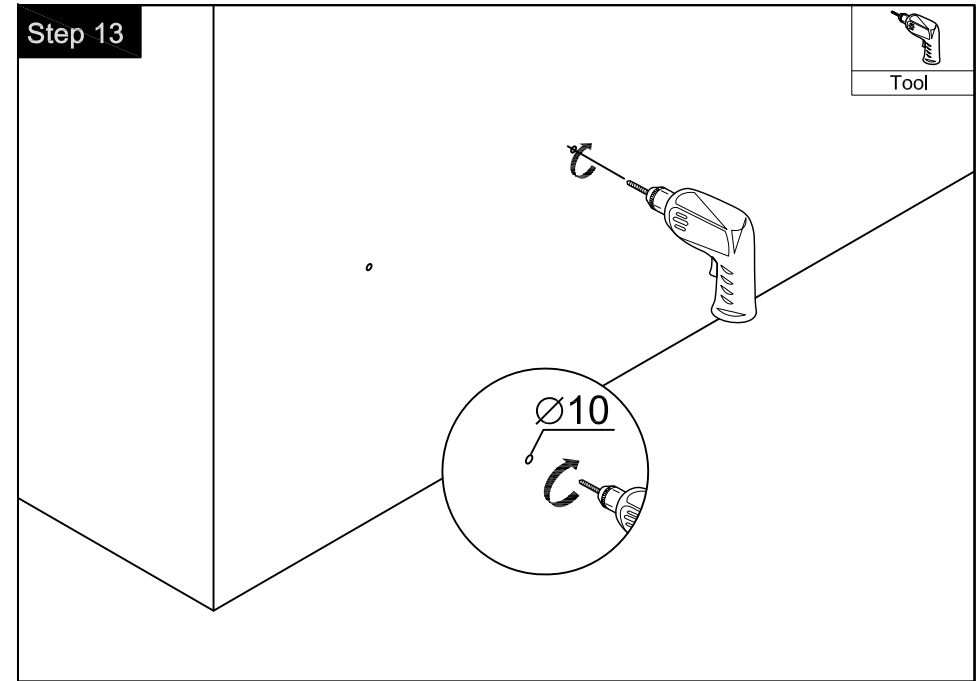

	Tool
--	------


Step 5

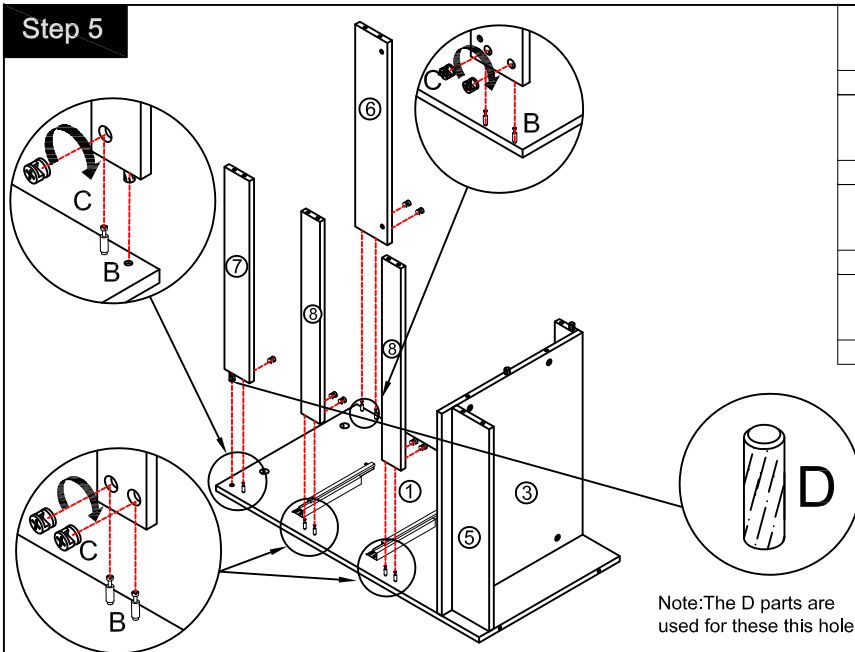

	x7
	x7
	x1



Note: The D parts are used for these this hole

Step 14

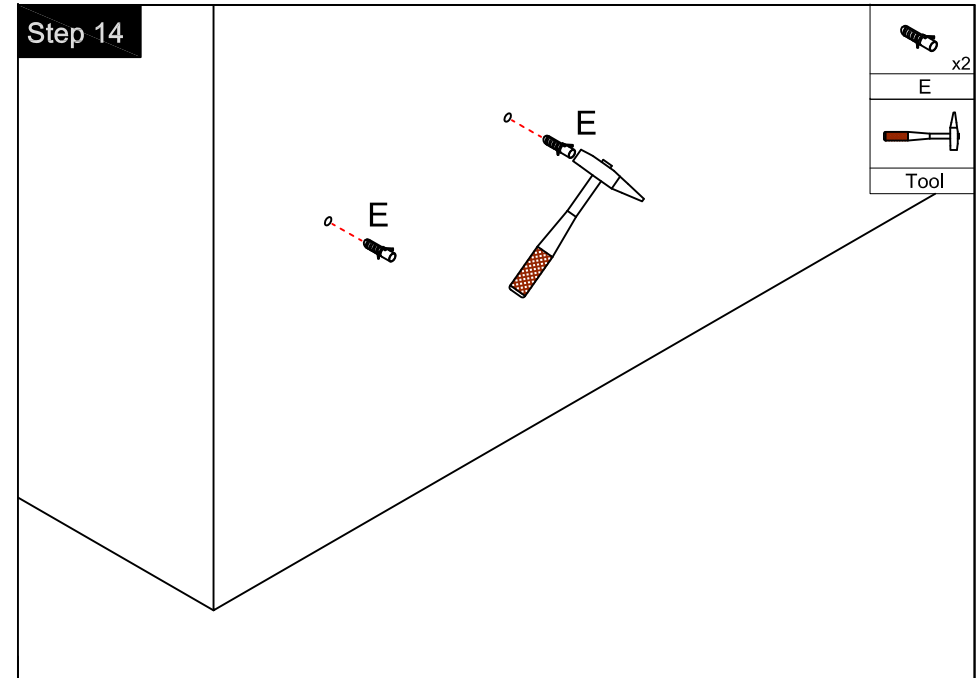



	x2
	Tool

Step 11


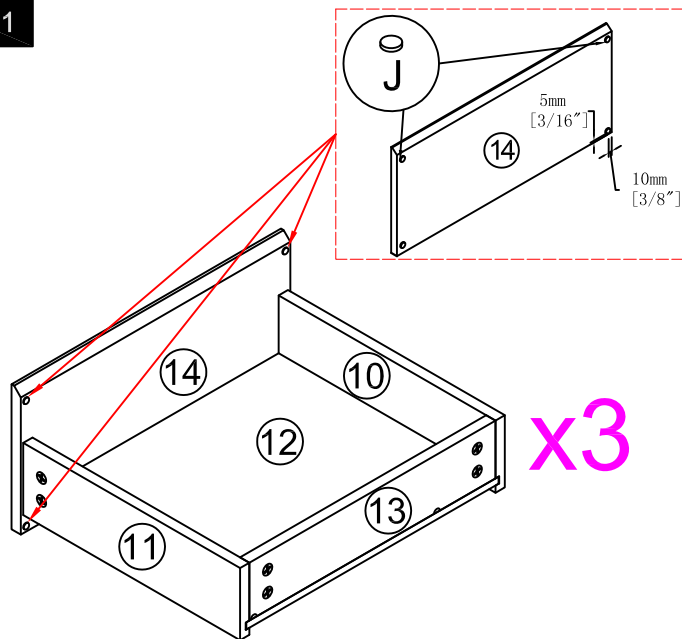


x3

Step 12

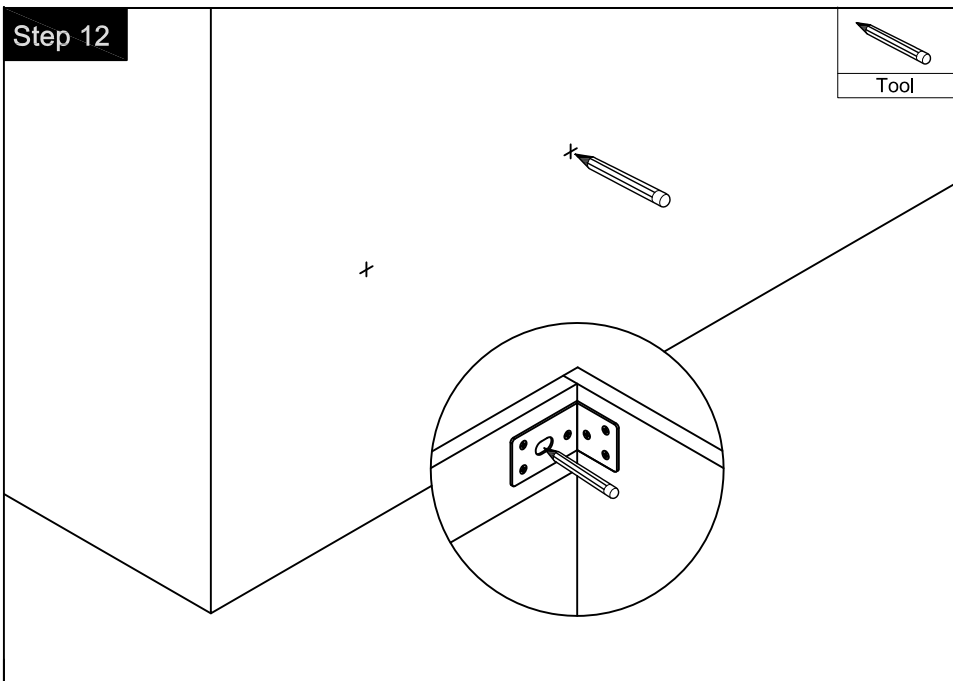


Step 6

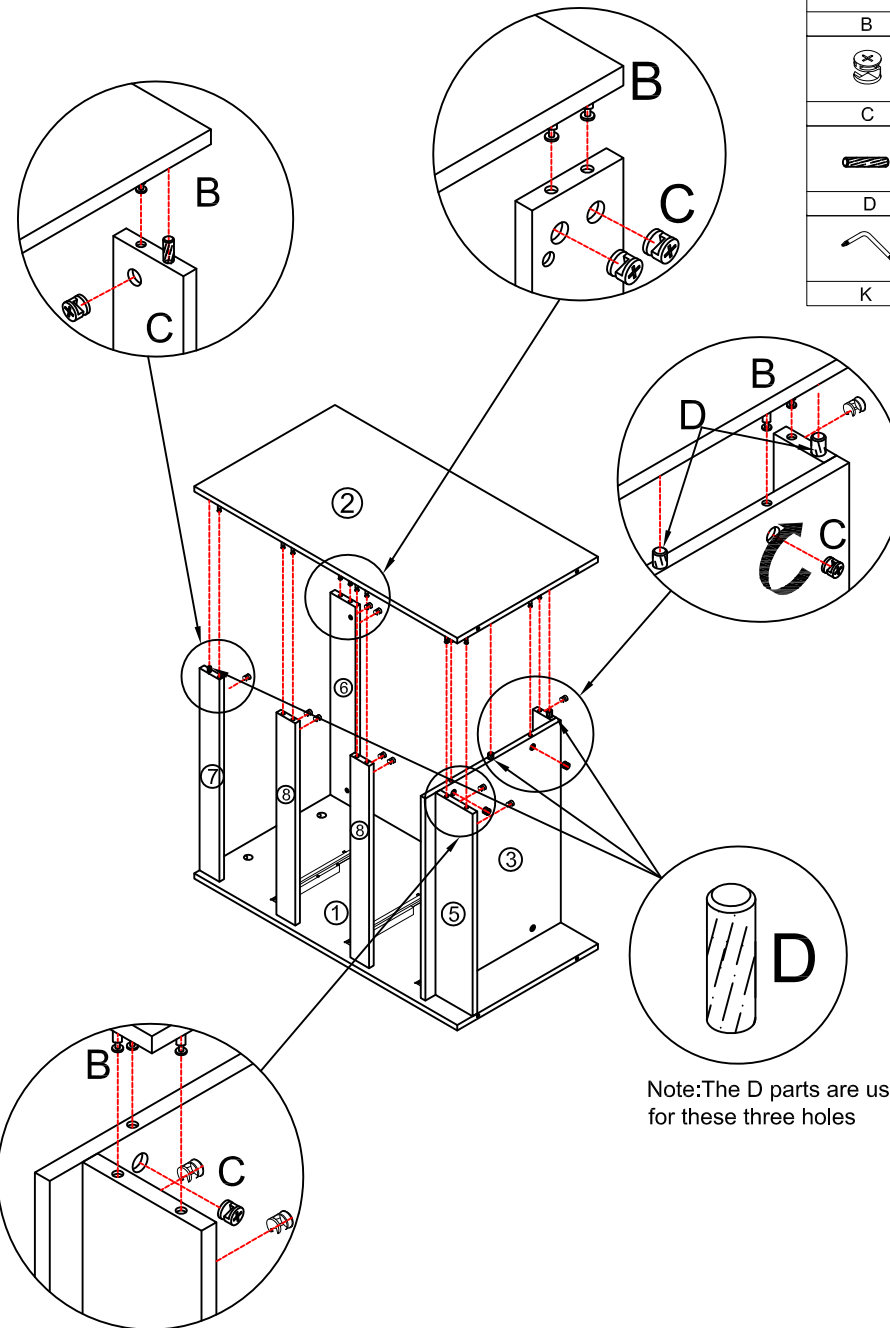


Note: The D parts are used for these three holes


Step 7

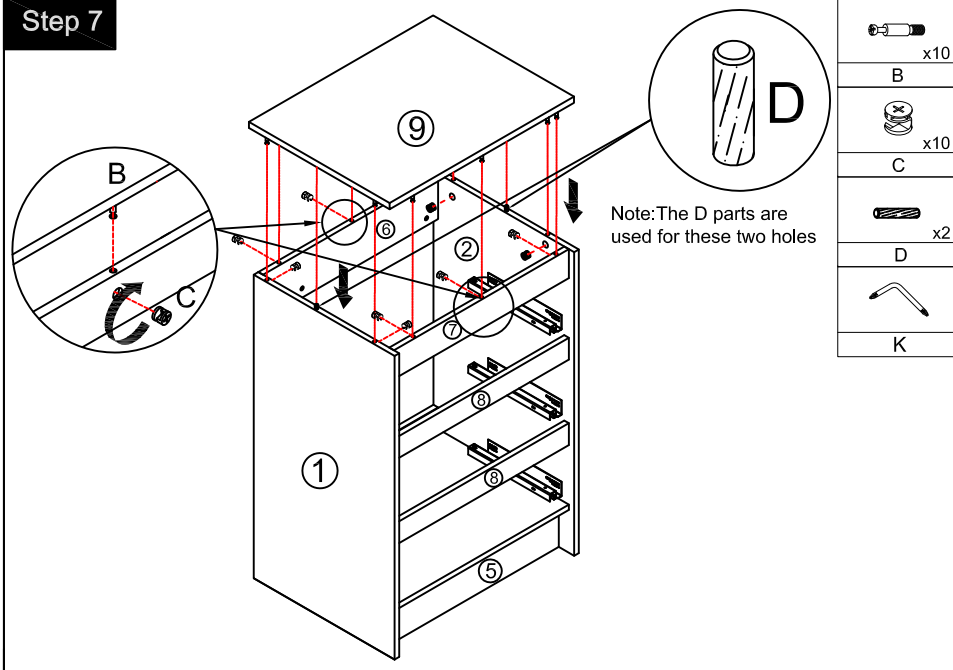

Step 8

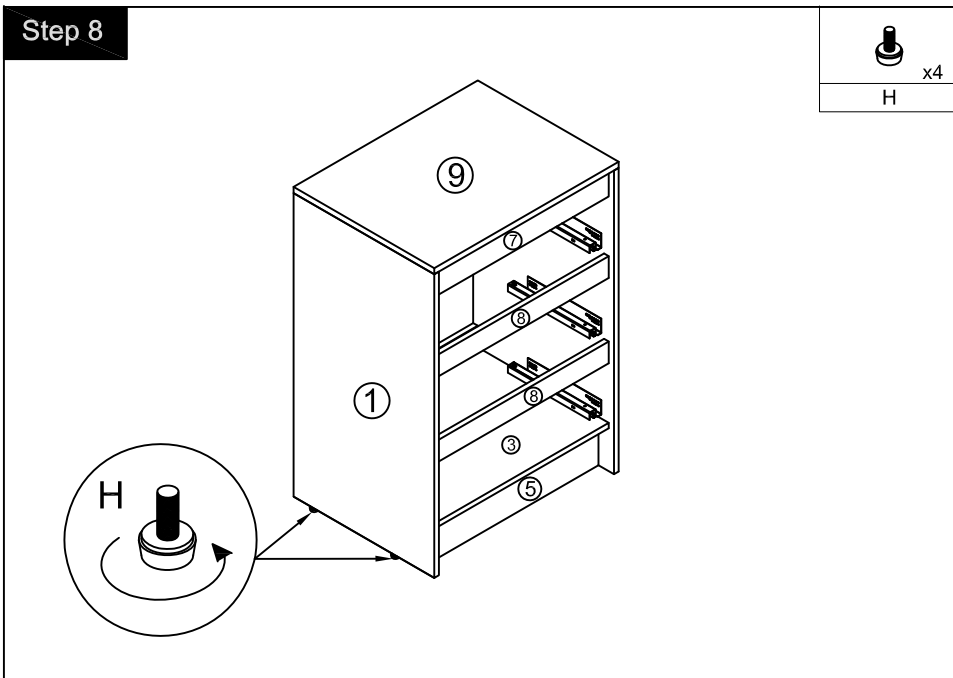

Step 9

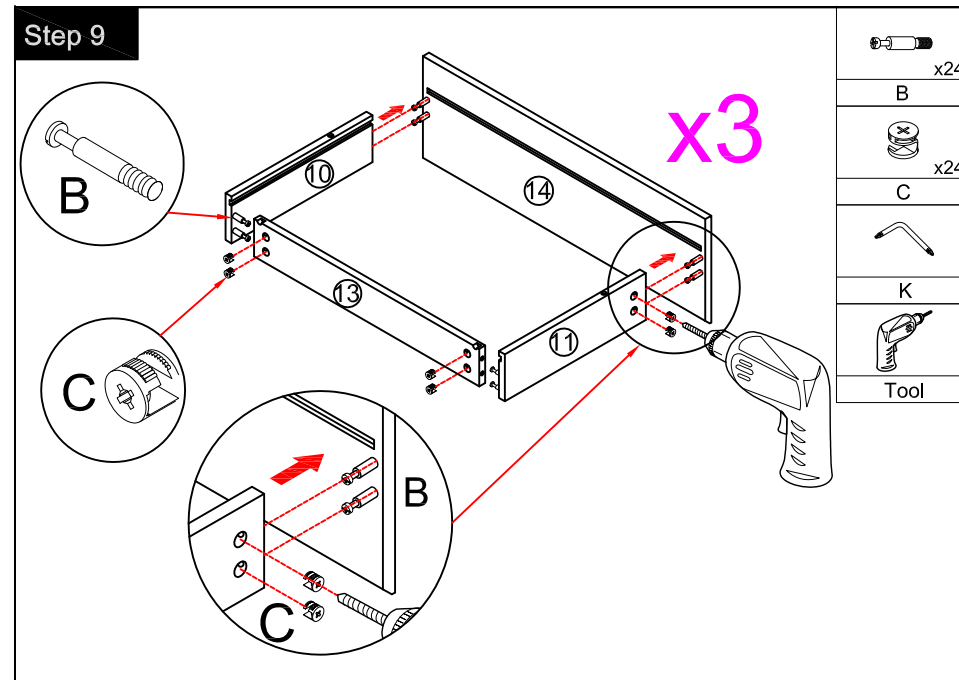

Step 10

