


TV Stand

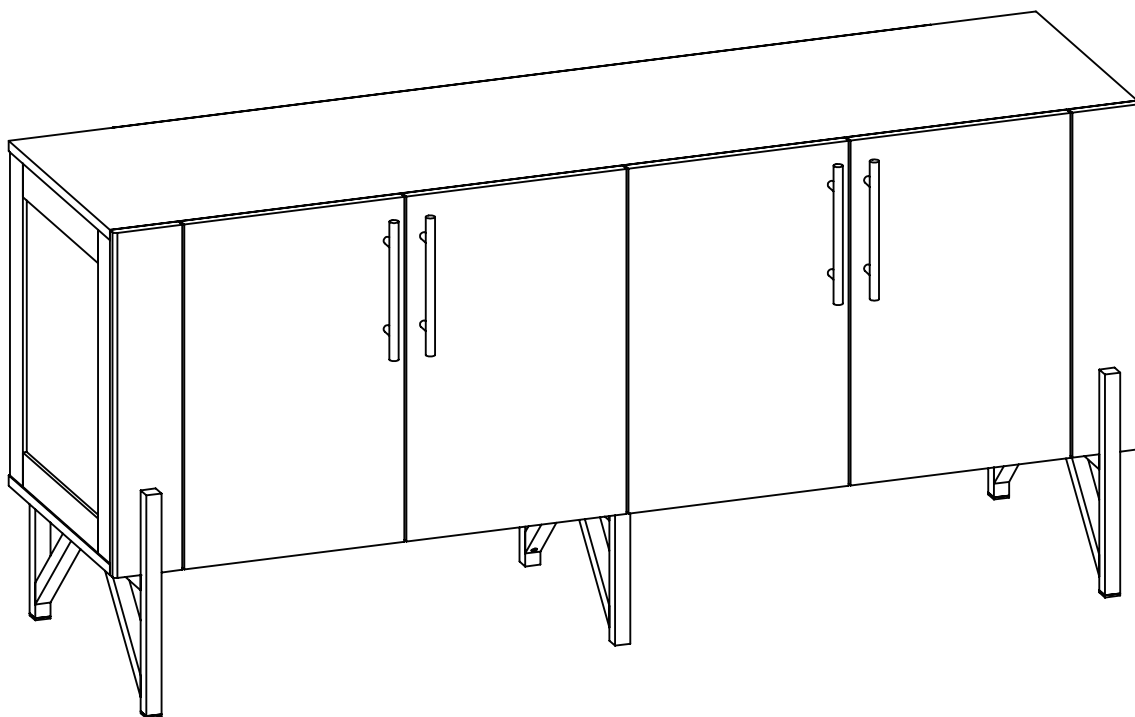


ASSEMBLY INSTRUCTION


ADULT ASSEMBLY REQUIRED

**THE PRODUCT MAY RECOMMENDED
ASSEMBLING BY MORE THAN ONE
PERSON.**

**PLEASE ASK FOR ASSISTANCE AT YOUR
CONVENIENCE BEFORE ASSEMBLING.**

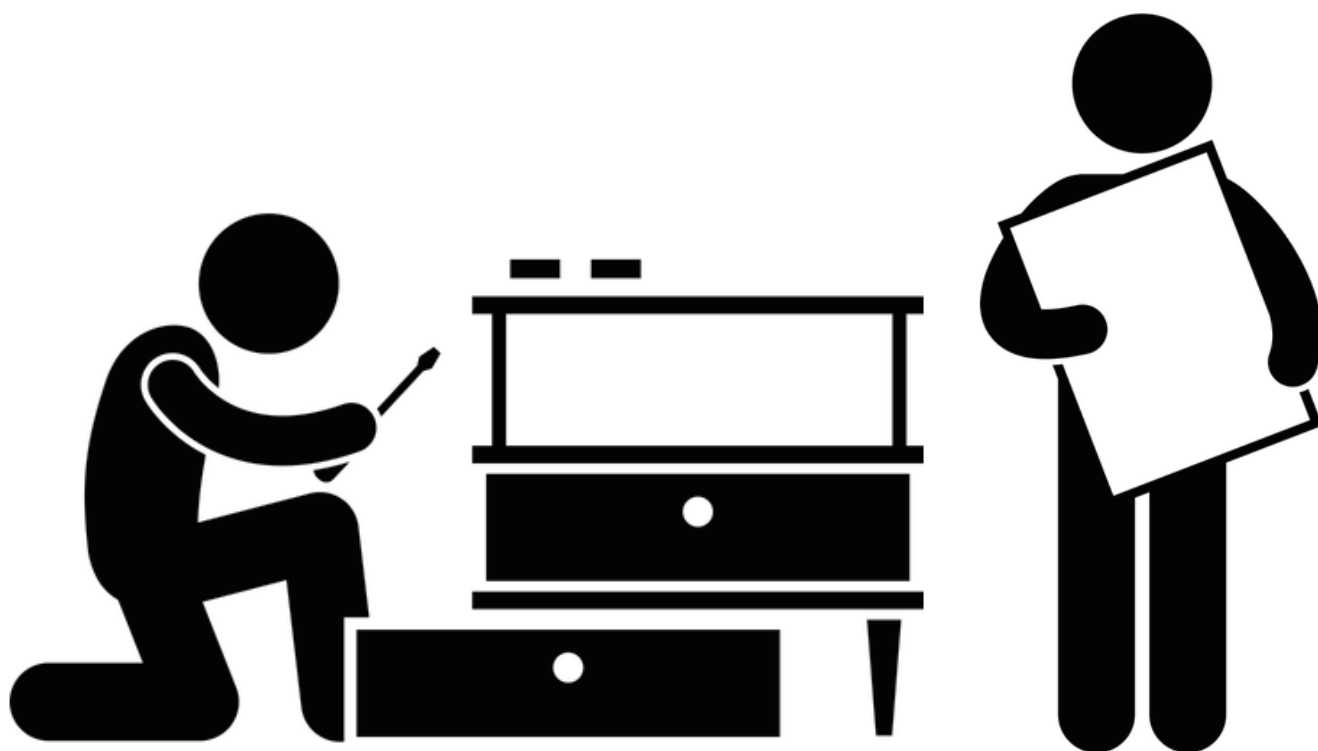

Before You Start

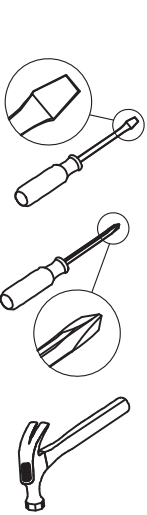

Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process


Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process.


1

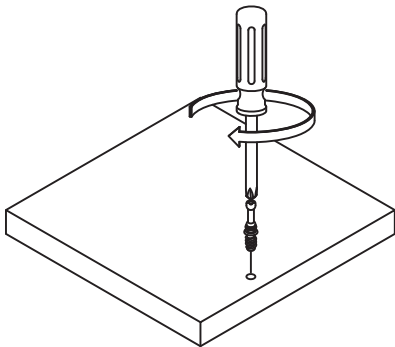


2

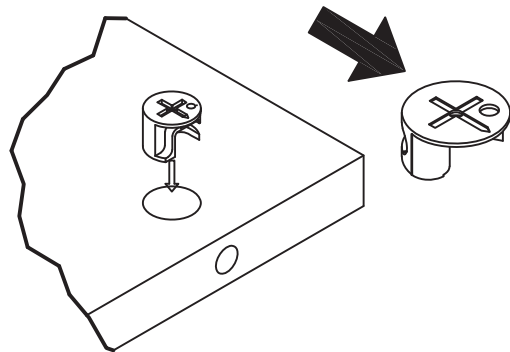


3

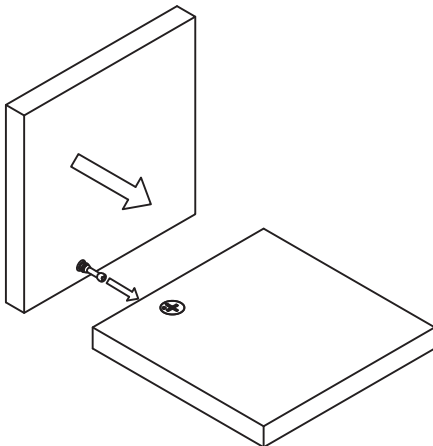


4

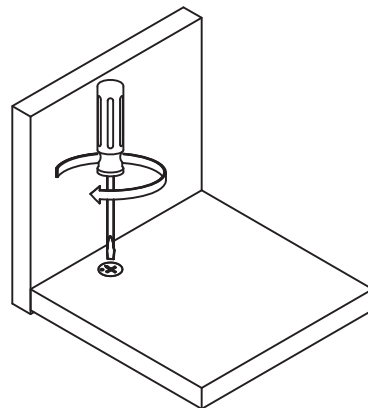

Parts Identification

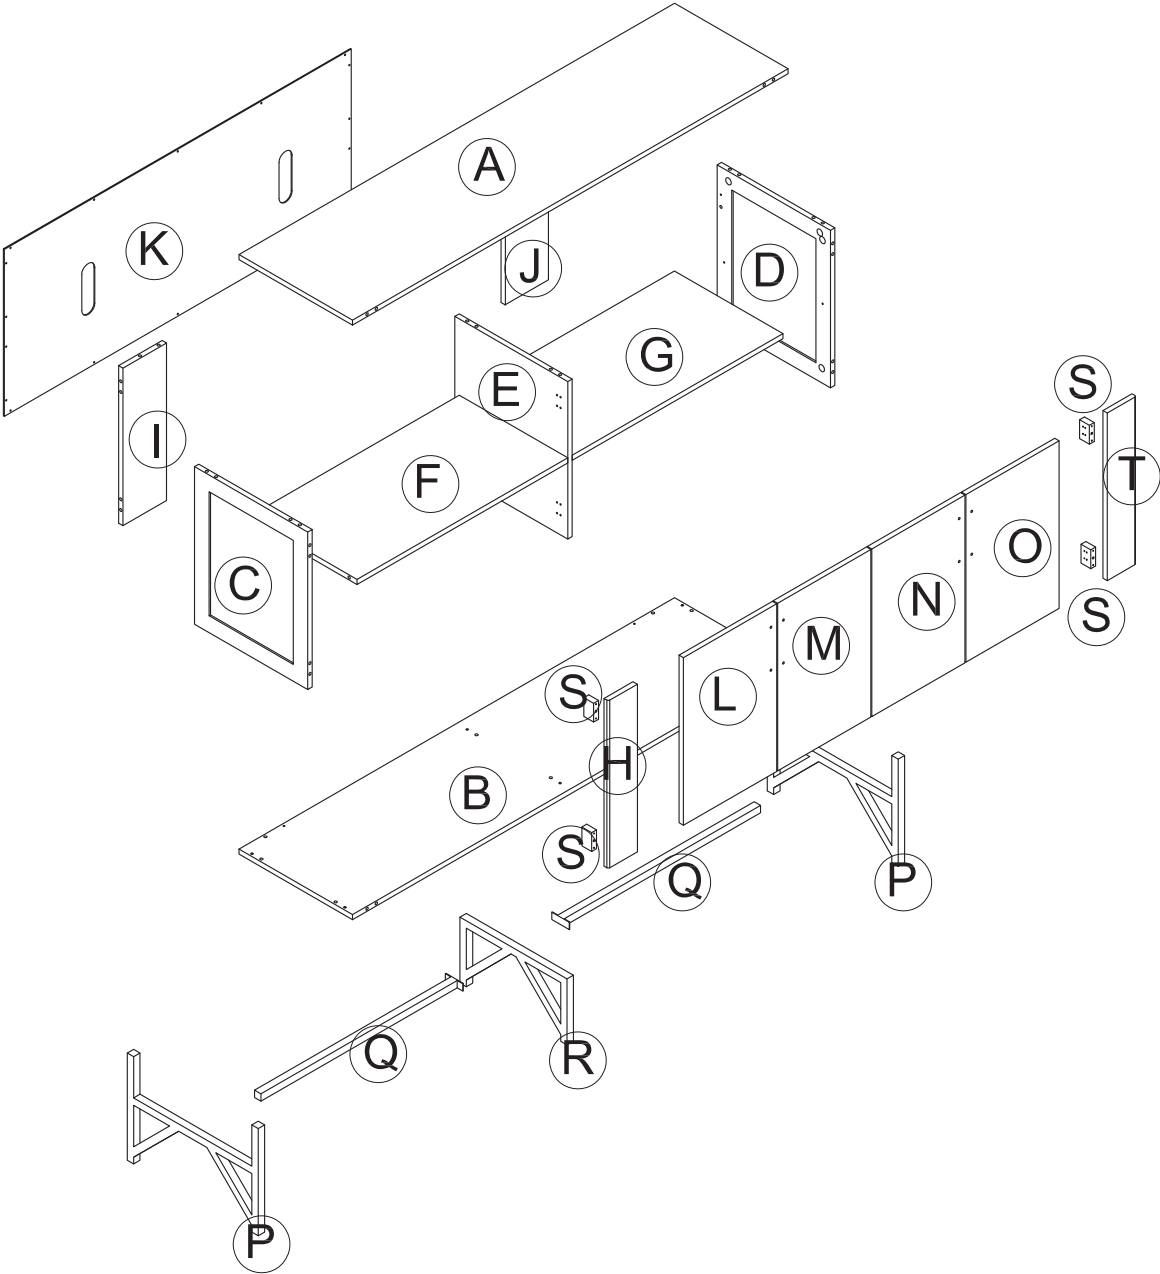


Parts Identification

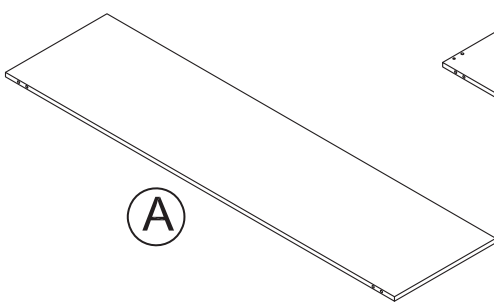


(A)

TOP

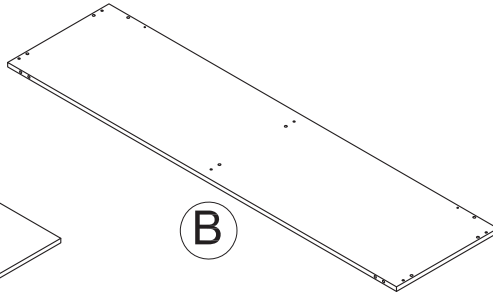


(B)

BOTTOM

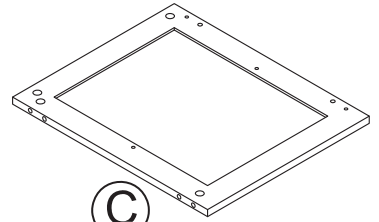


(C)

LEFT

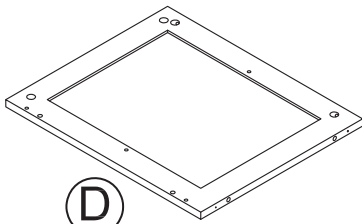


(D)

RIGHT

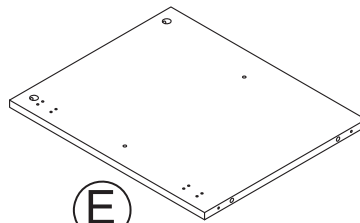


(E)

MID-VERTICAL SHELF

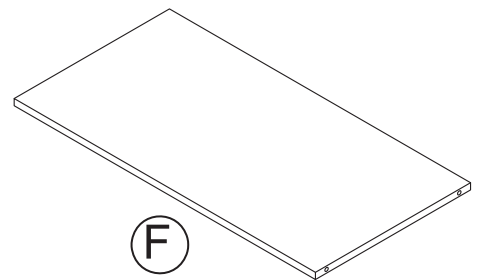


(F)

LEFT SHELF

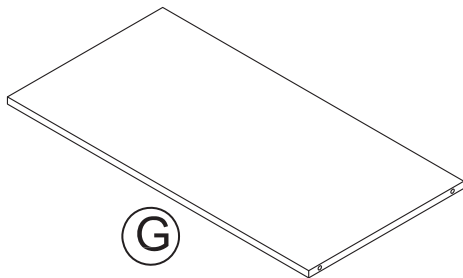


(G)

RIGHT SHELF

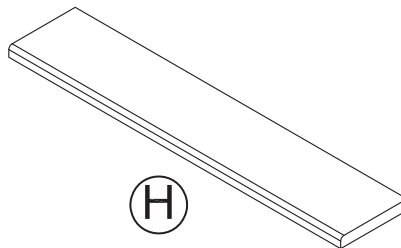


(H)

FRONT LEFT DECOR

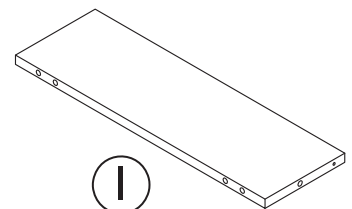


(I)

BACK LEFT DECOR

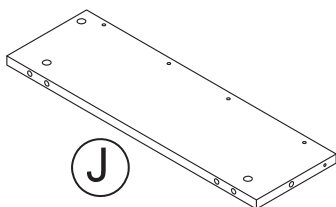


(J)

BACK RIGHT DECOR

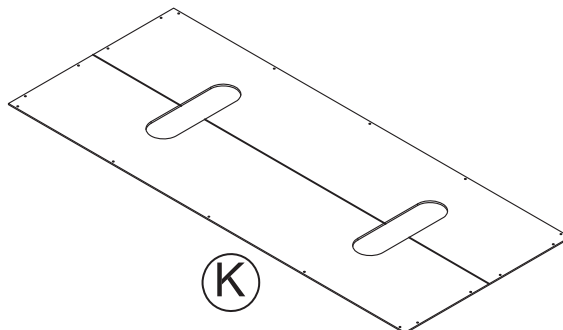

(K)


BACK PANEL

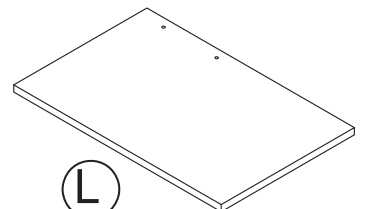


(L)

LEFT DOOR


Parts Identification

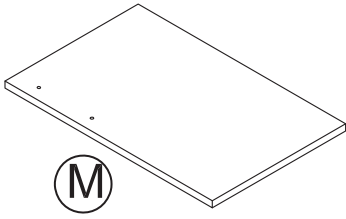


MIDDLE LEFT DOOR

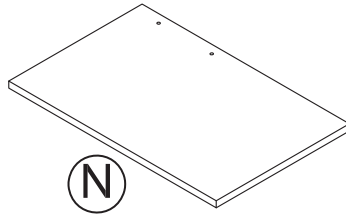


MIDDLE RIGHT DOOR

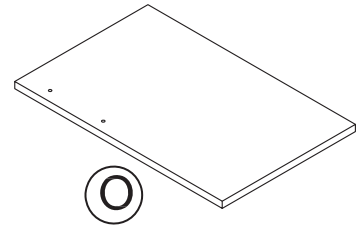


RIGHT DOOR

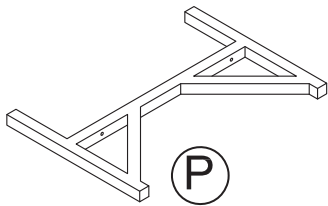


RIGHT AND LEFT END x 2

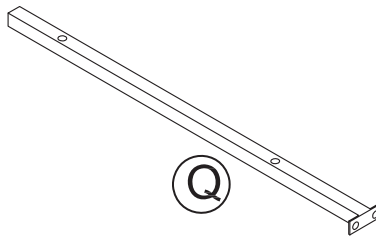


LOWER SUPPORT x 2

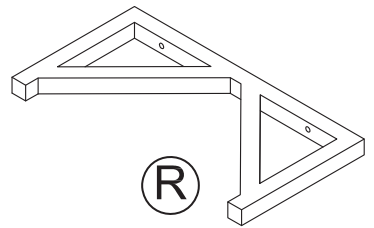

MIDDLE LEG

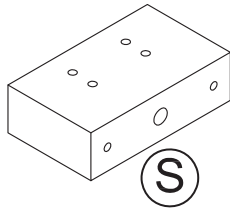


INNER SIDE SUPPORT x 4

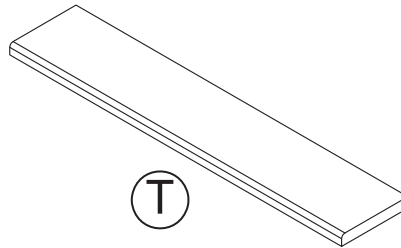












FRONT RIGHT DECOR

Hardware Identification


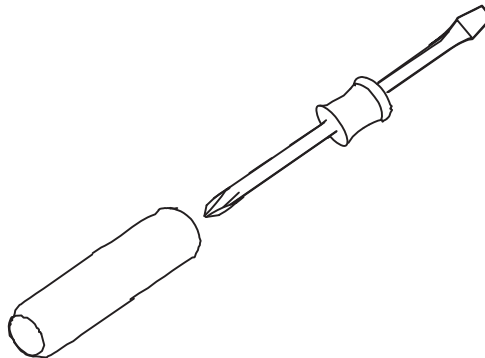


DOUBLE-HEADED SCREWDRIVER:
THIS TOOL ALLOWS YOU TO USE DIFFERENT HEAD FOR DIFFERENT
TYPE OF SCREWS BY SWITCH THE YELLOW HANDLE


Hardware Identification

 $\text{Ø}6 \times 33\text{mm}$ 1 CAM BOLT QTY: 28+1 spare	 $\text{Ø}15 \times 10\text{mm}$ 2 CAM LOCK QTY: 28+1 spare	 $\text{Ø}8 \times 30\text{mm}$ 3 WOOD DOWEL QTY: 32+1 spare	 $\text{Ø}4 \times 40\text{mm}$ 4 SCREW QTY: 8+1 spare
 $1/4" \times 30\text{mm}$ 5 BOLT QTY: 10+1 spare	 $1/4" \times 10\text{mm}$ 6 BOLT QTY: 4+1 spare	 $1/4" \times 40\text{mm}$ 7 BOLT QTY: 10+1 spare	 4mm 8 HEX KEY QTY: 1
 $\text{Ø}4 \times 14\text{mm}$ 9 SCREW QTY: 18+1 spare	 $\text{Ø}35$ 10 EUROPE HINGE QTY: 4	 $\text{Ø}35$ 11 EUROPE HINGE QTY: 4	 $\text{Ø}4 \times 14\text{mm}$ 12 SCREW QTY: 48+2spare
 $\text{M}4 \times 19\text{mm}$ 13 BOLT QTY: 8+1 spare	 14 HANDLE QTY: 4	 15 TIPPING RESTRAINT HARDWARE KIT QTY: 1	



Step 1

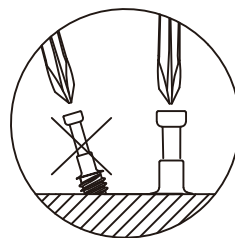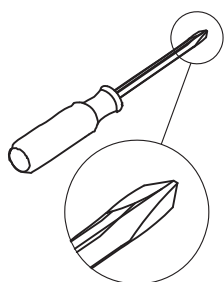


Assemble screws
(part#1) vertically

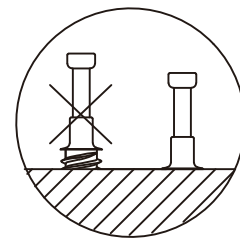



Make sure screws are
lock up evenly on board

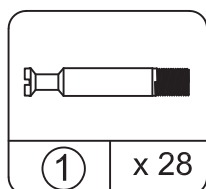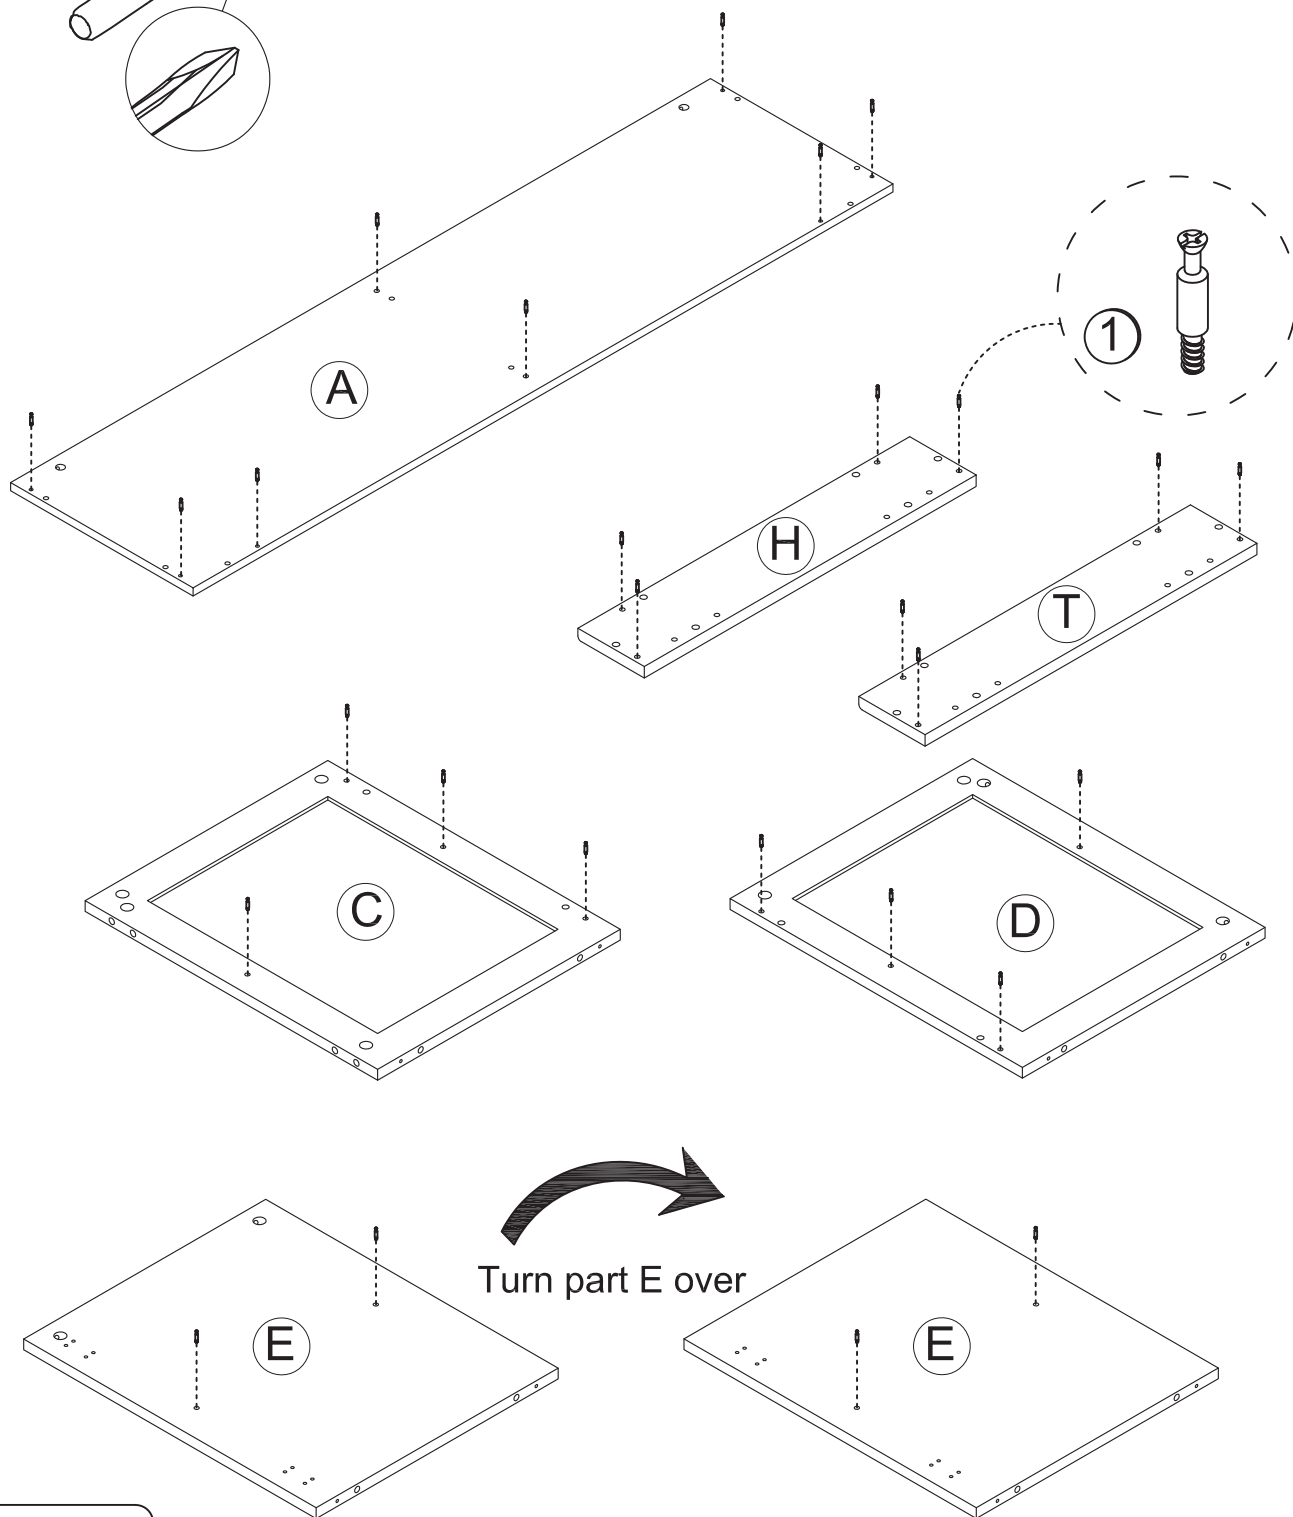



Step 2

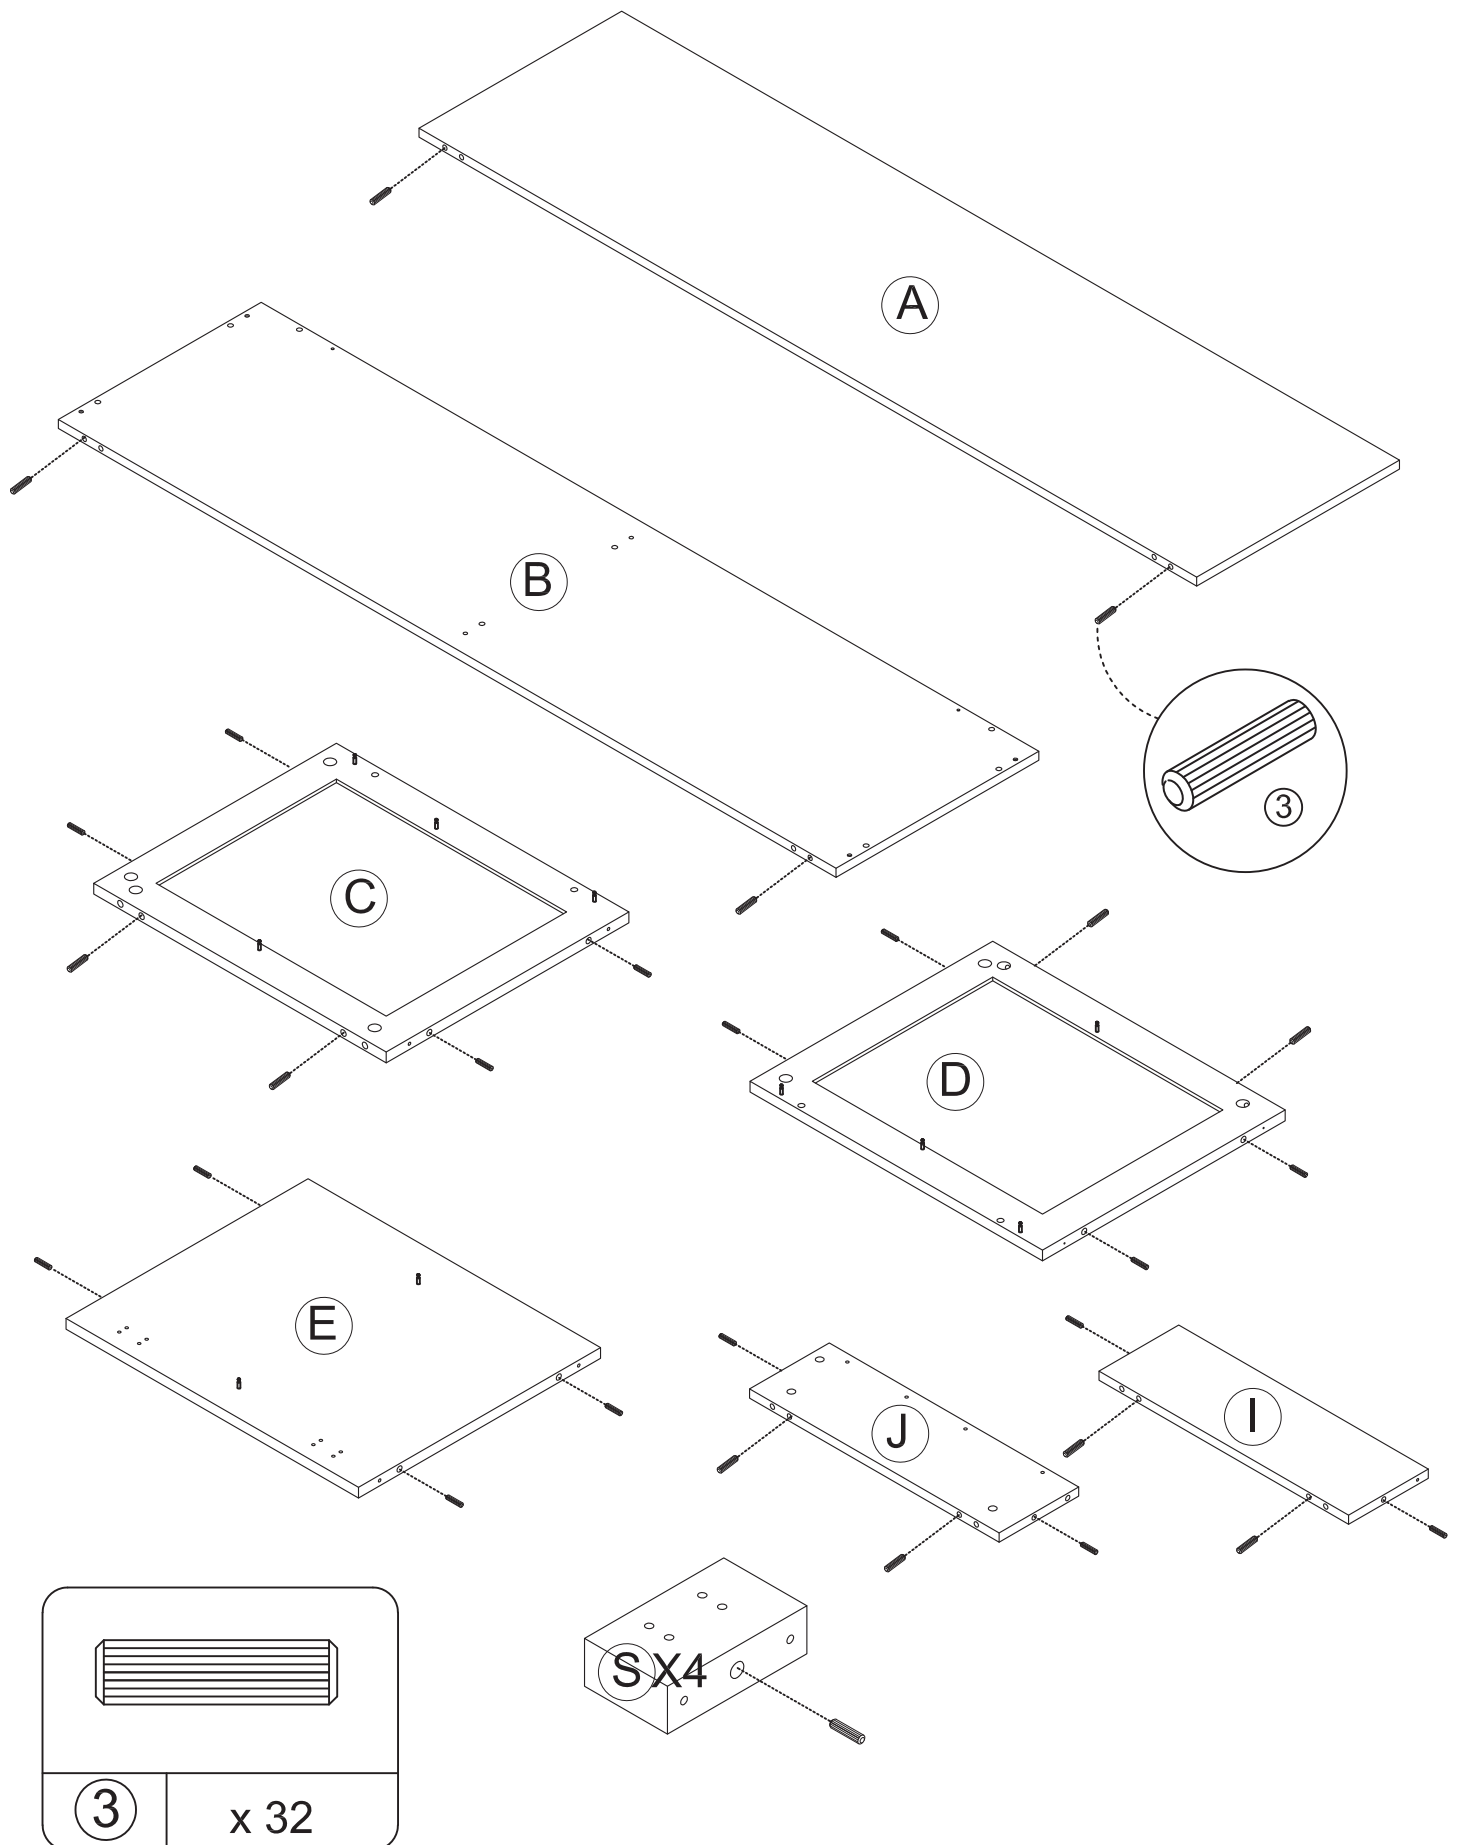


Step 3

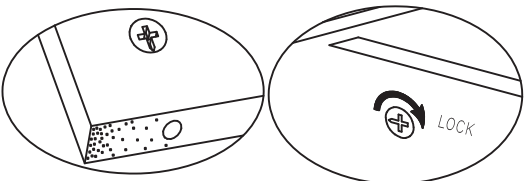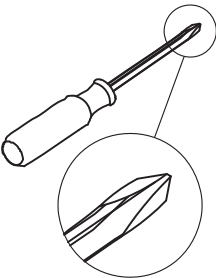

Proper orientation of CAM LOCK

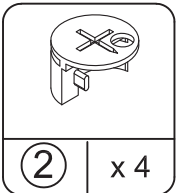
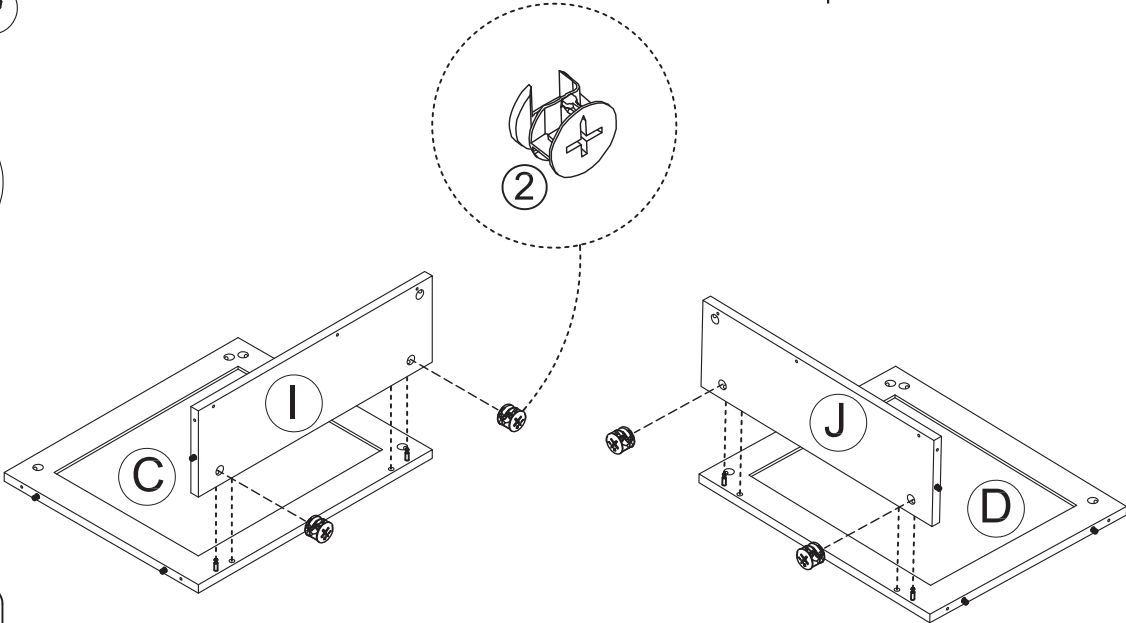


Step 4

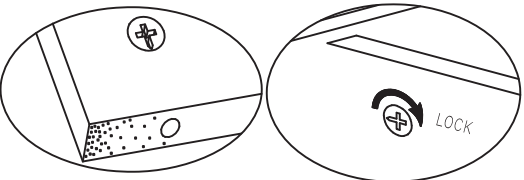


Proper orientation of CAM LOCK


FINISHED EDGE

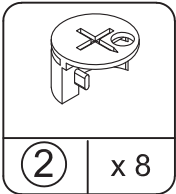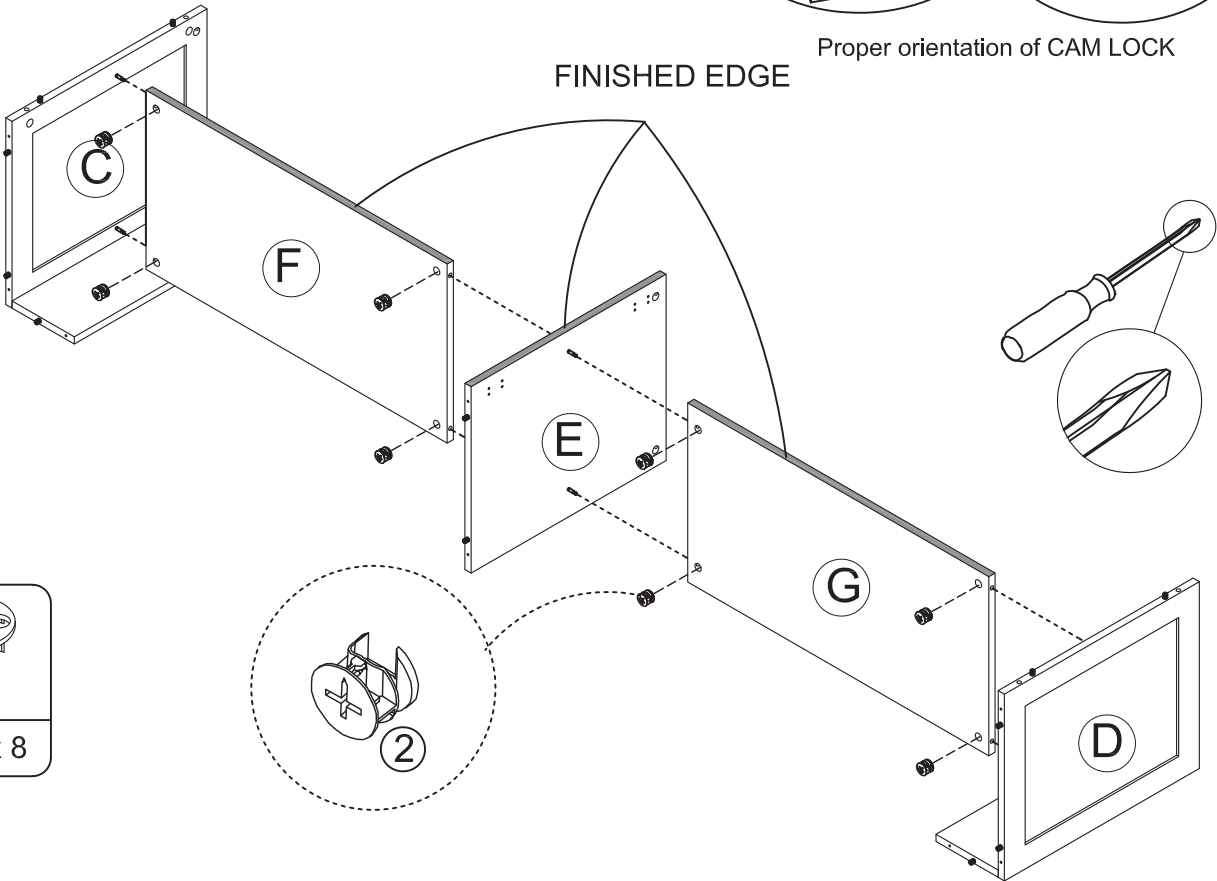


Step 5

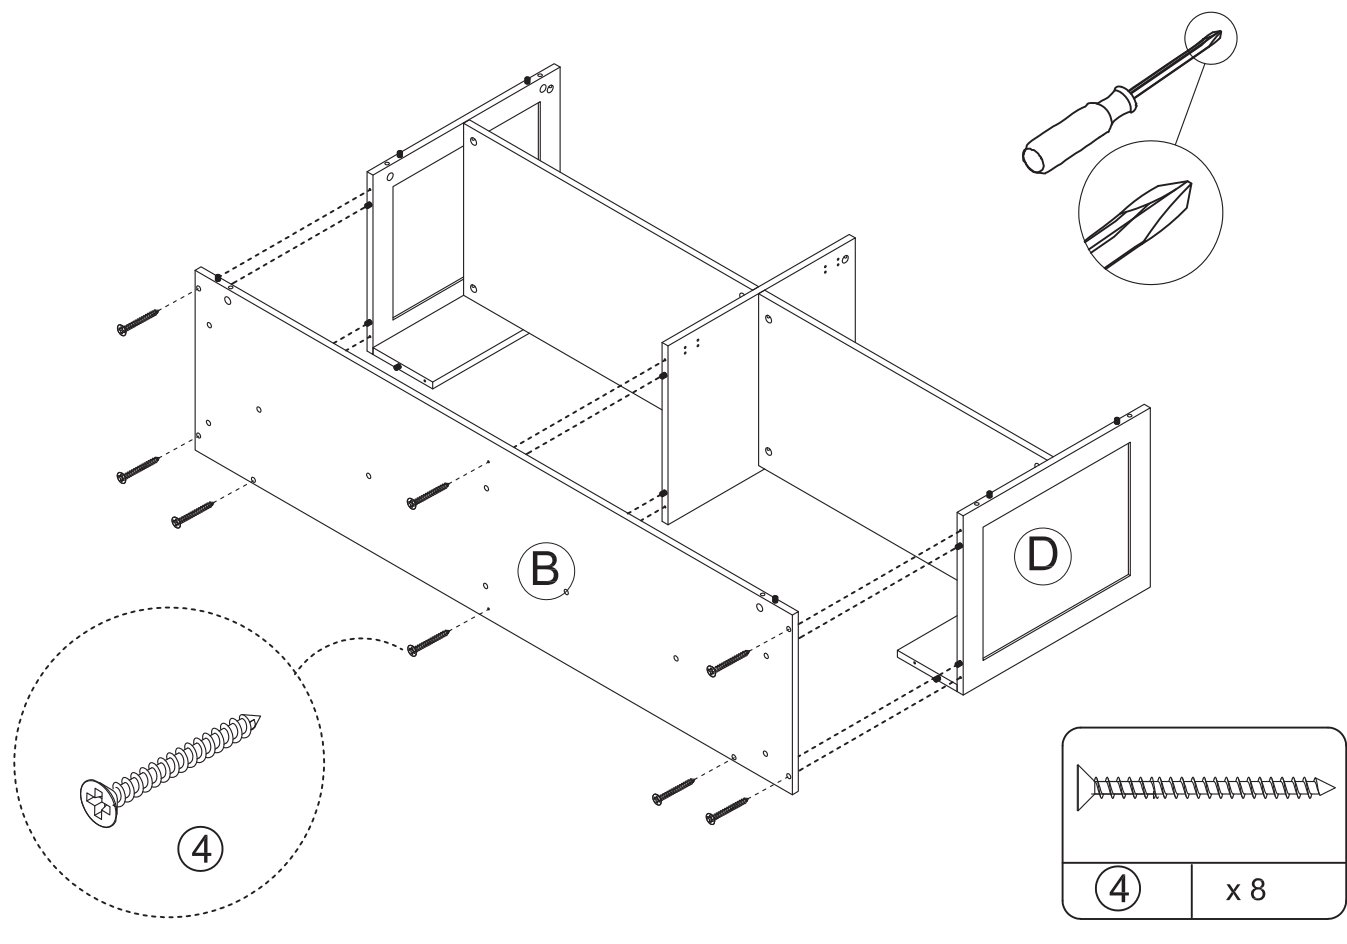


Step 6

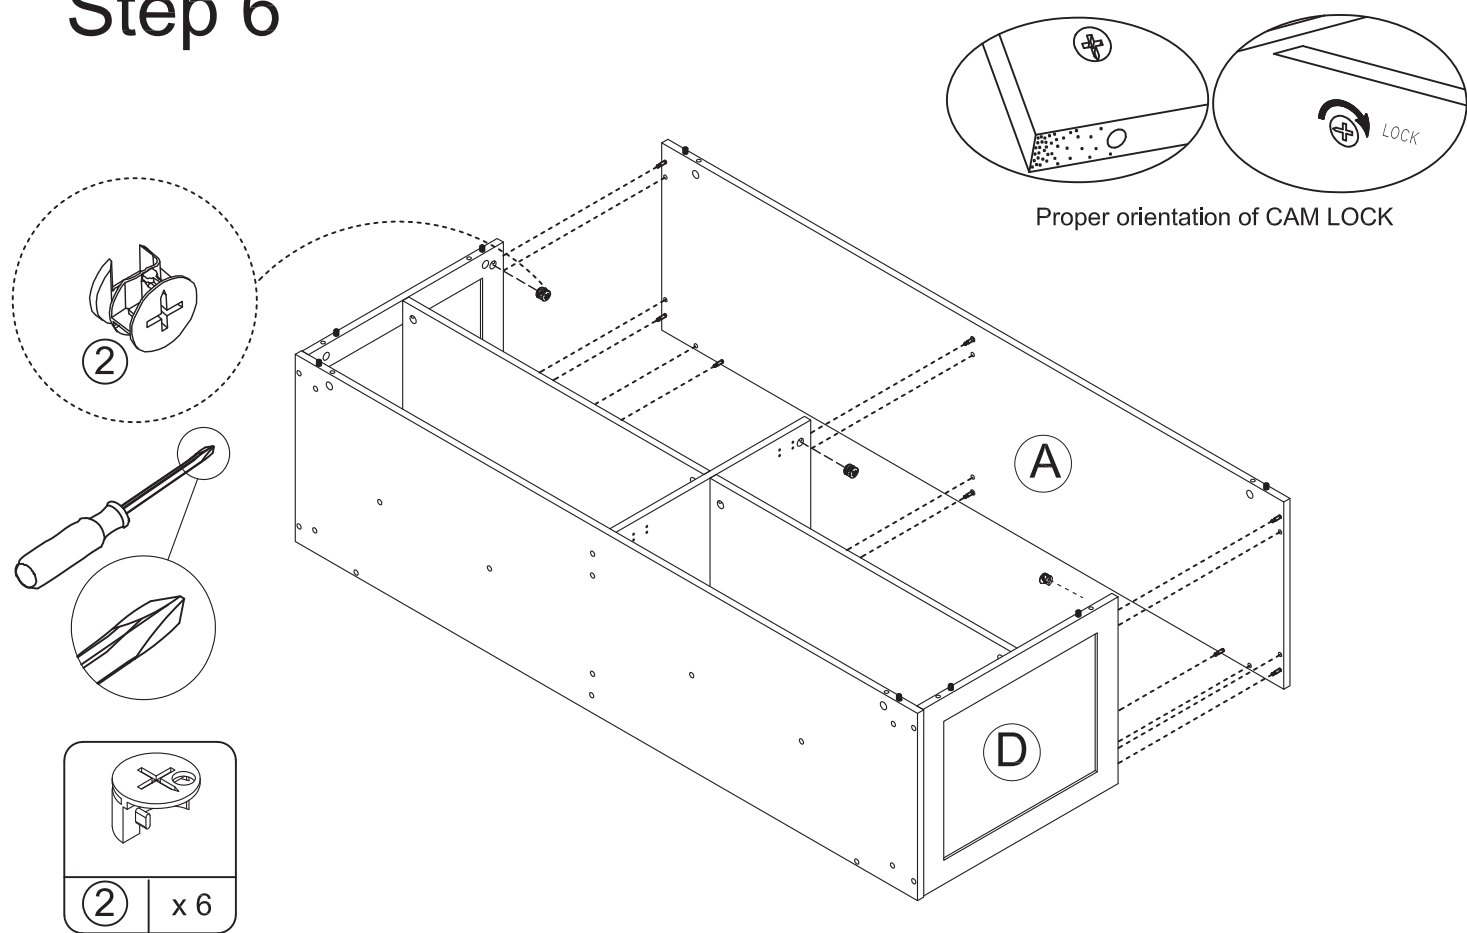

Step 7

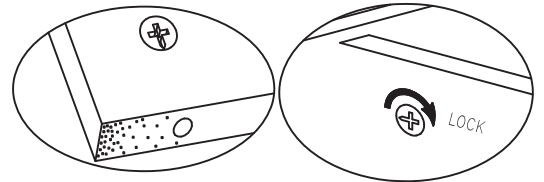

Proper orientation of CAM LOCK

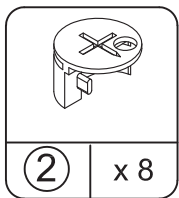

Step 8

Do Not Screw Hardware Part 6 Tightly At This Step



⑥	x 4
---	-----


⑦	$\times 2$
---	------------

②	x 2
---	-----


Parts 9

Step 9

Please Lock All Screws Tightly At This Step

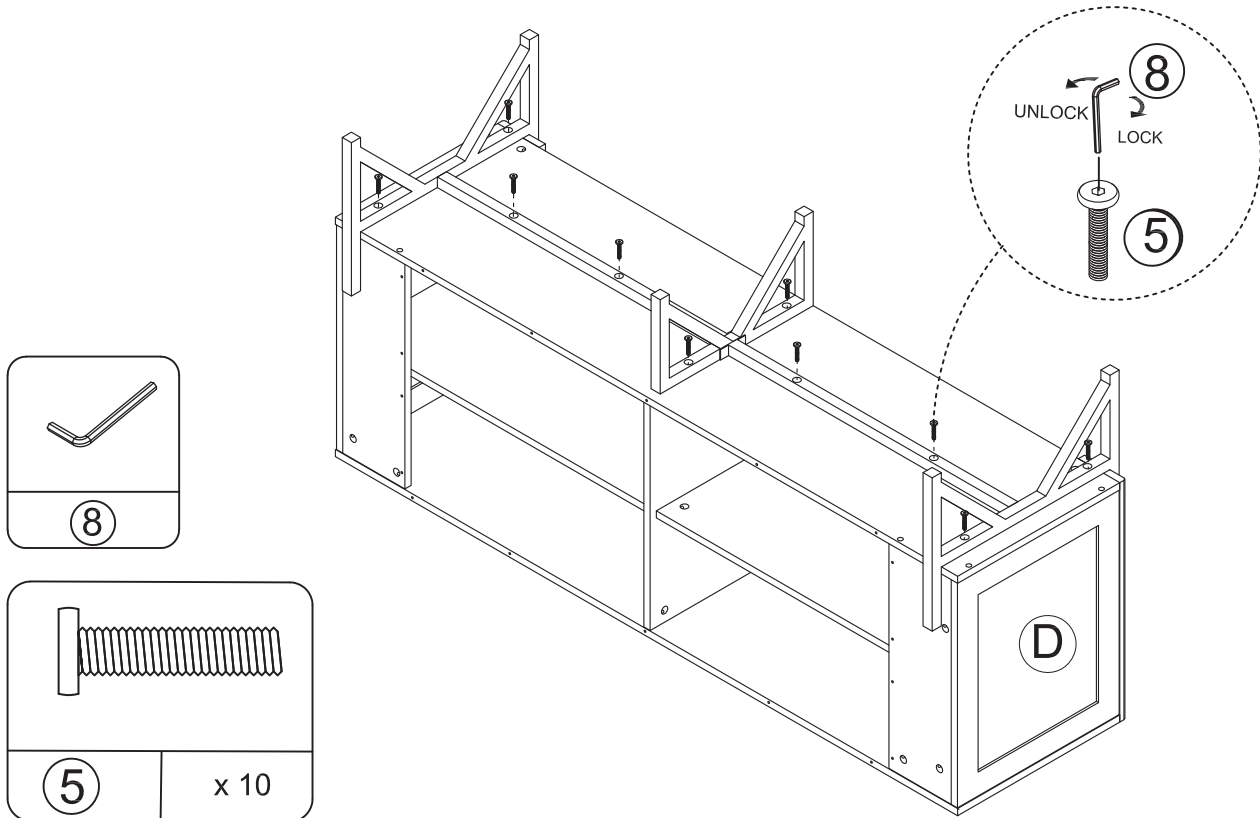


Step 10

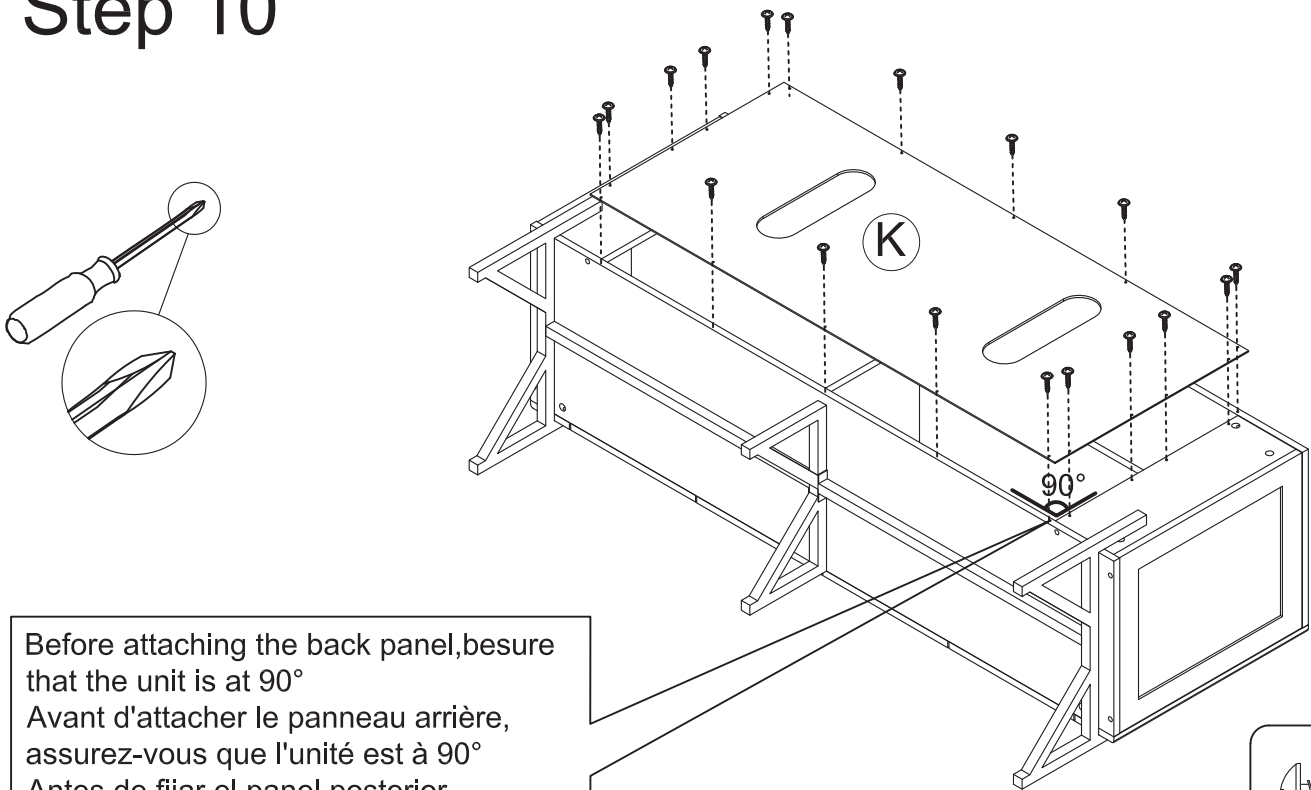


Before attaching the back panel, ensure that the unit is at 90°

Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°


Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°

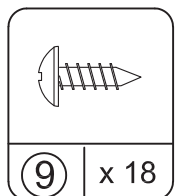


Step 11

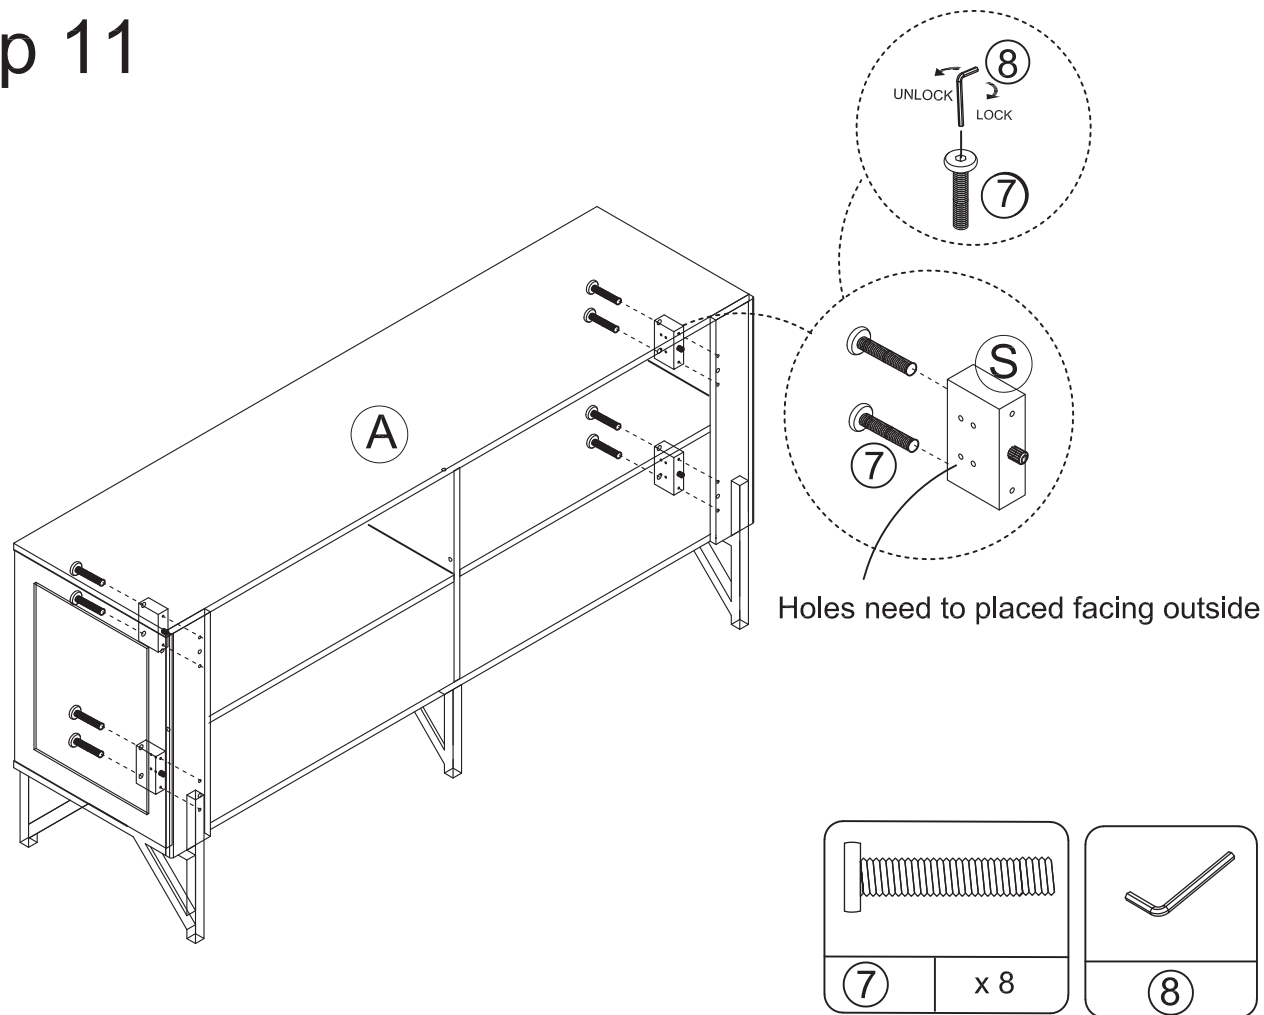


Step 12



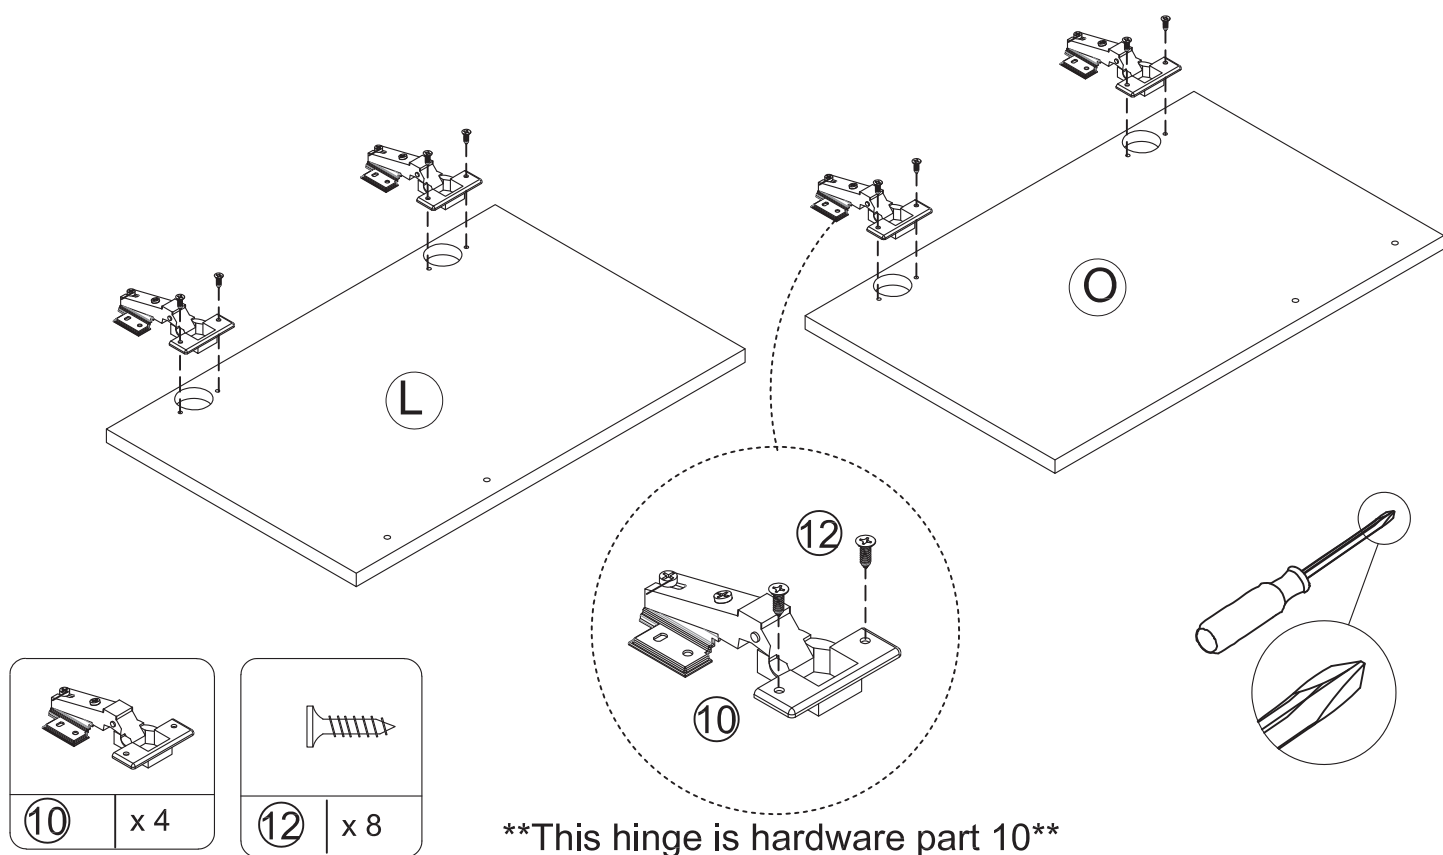


Step 13

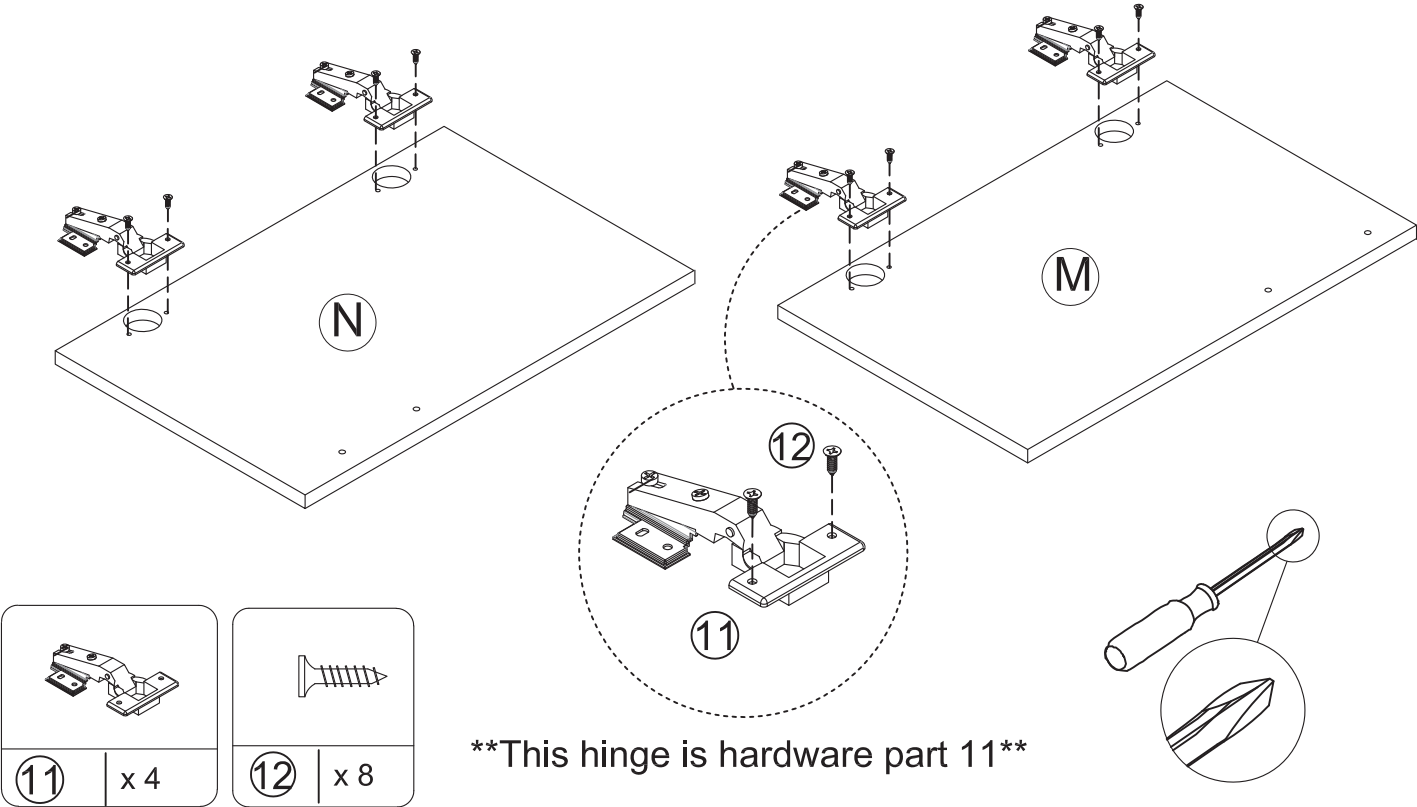



Step 14

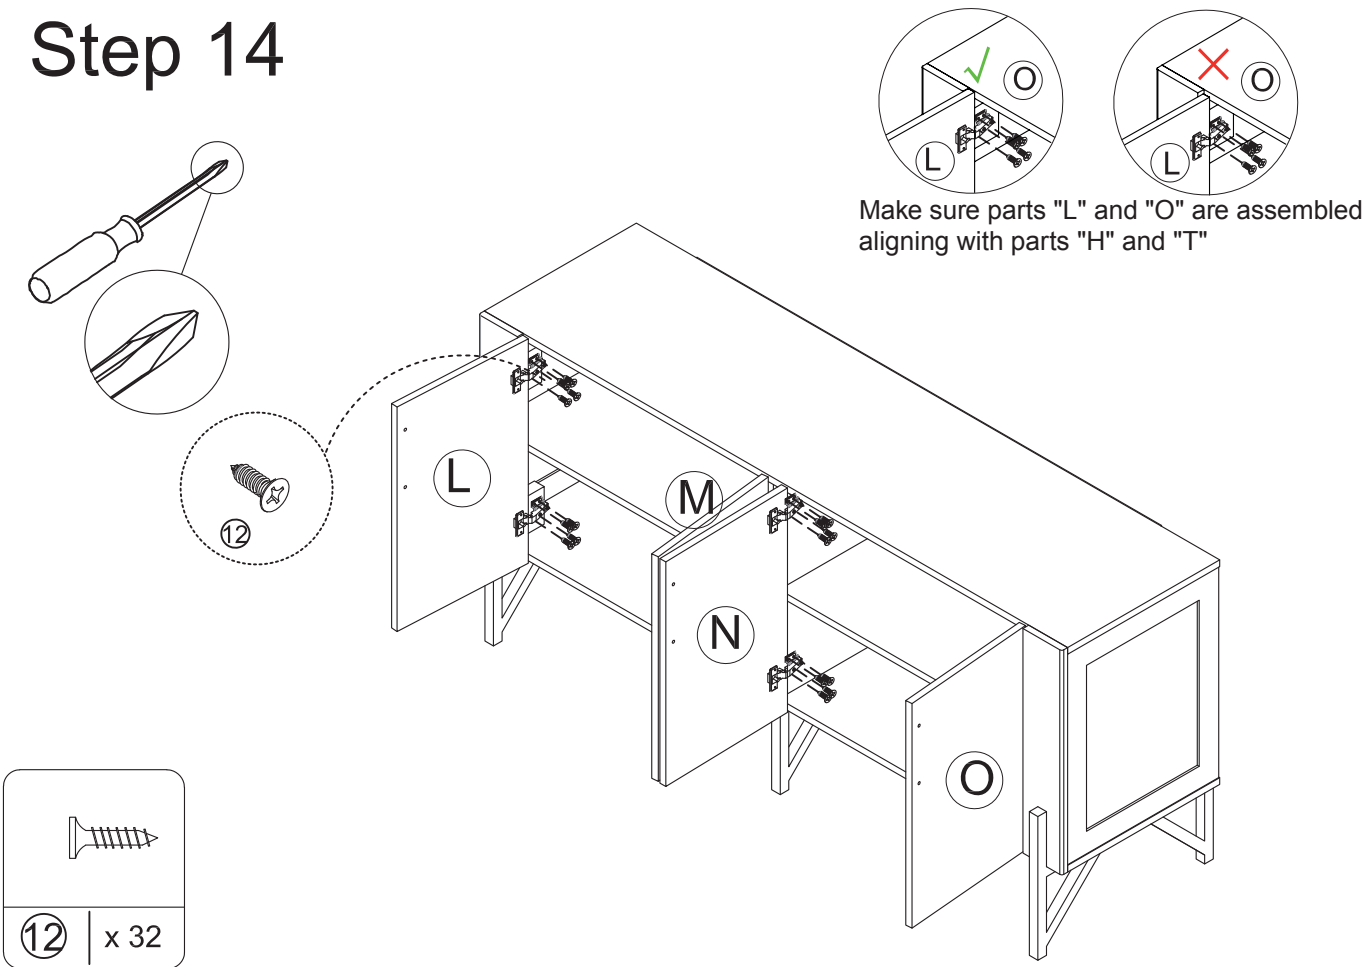

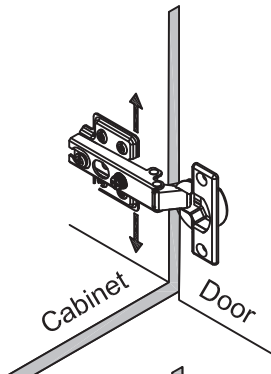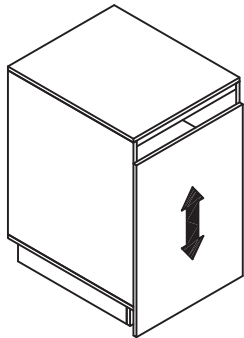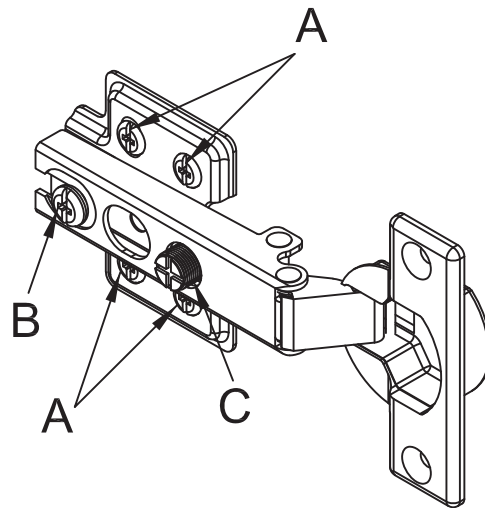



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

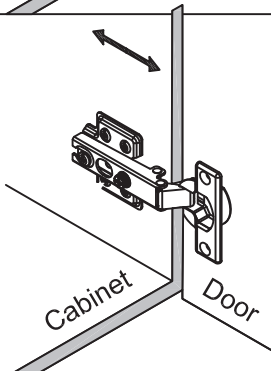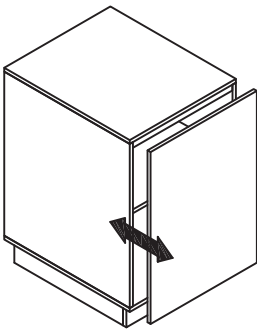

To adjust depth.


Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

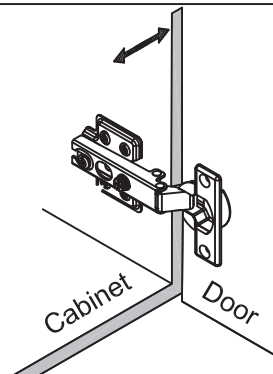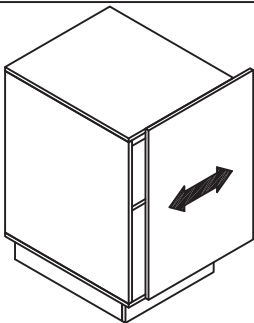


To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

Step 15

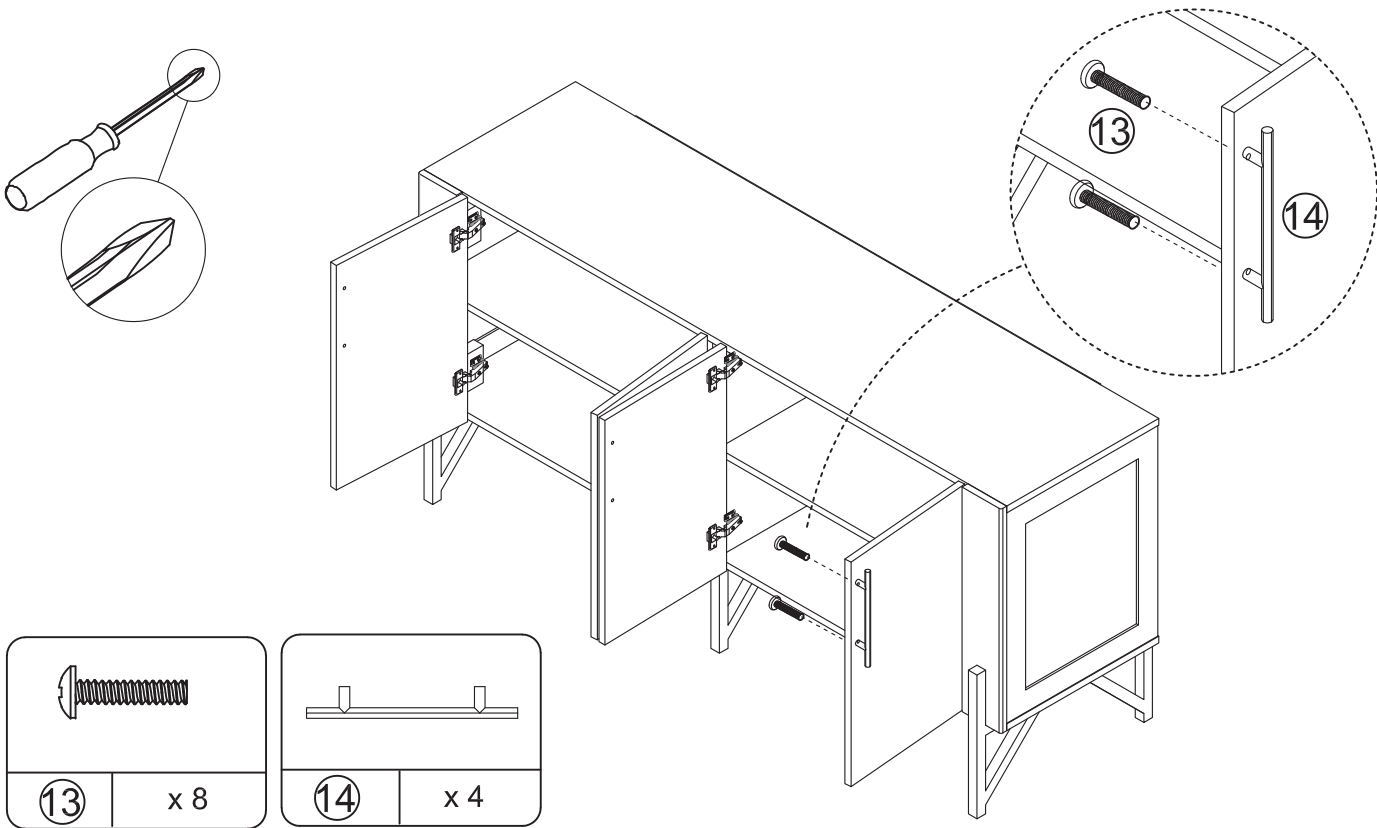

Step 16

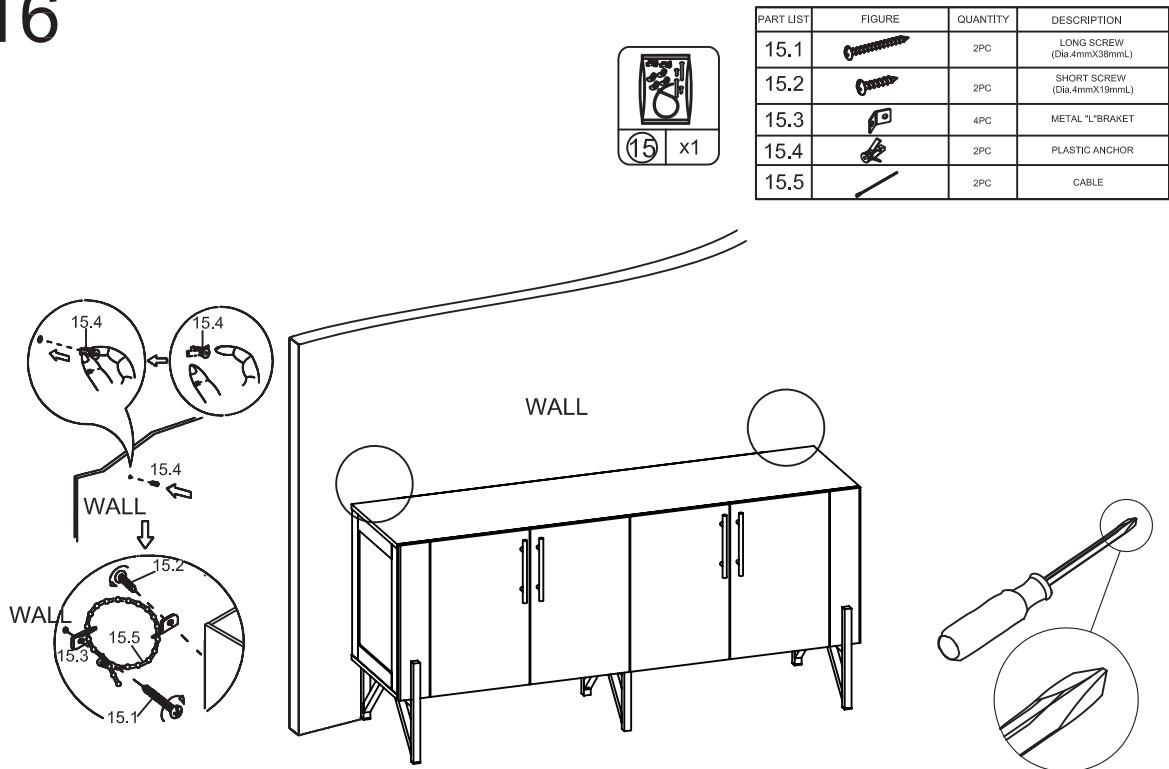


PART LIST	FIGURE	QUANTITY	DESCRIPTION
15.1		2PC	LONG SCREW (Dia.4mmX38mmL)
15.2		2PC	SHORT SCREW (Dia.4mmX19mmL)
15.3		4PC	METAL "L"BRACKET
15.4		2PC	PLASTIC ANCHOR
15.5		2PC	CABLE

Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for drywall construction. It will be necessary to drill holes for the wall anchors. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance.

Safety Maximum Loads

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

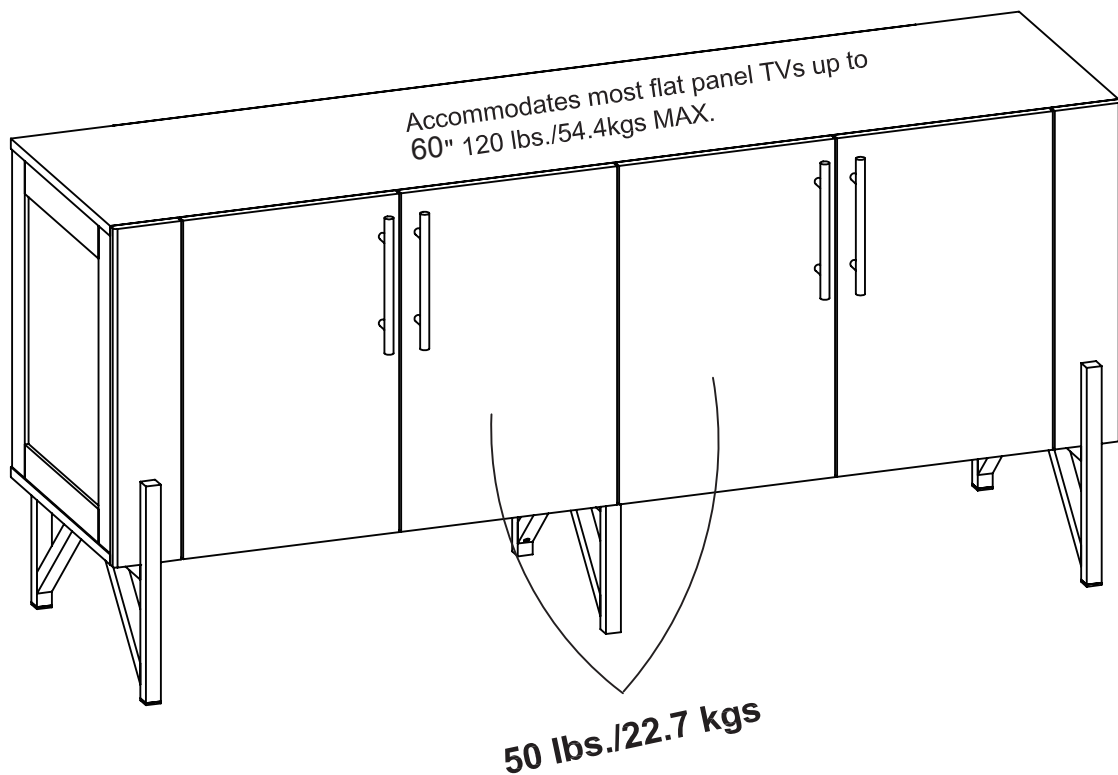

WARNING

Please make sure that all objects are removed before moving the assembled unit. The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.