

ASSEMBLY INSTRUCTIONS

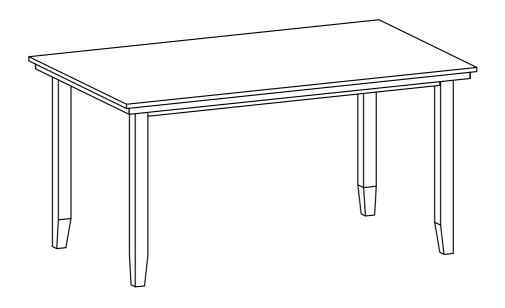

IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

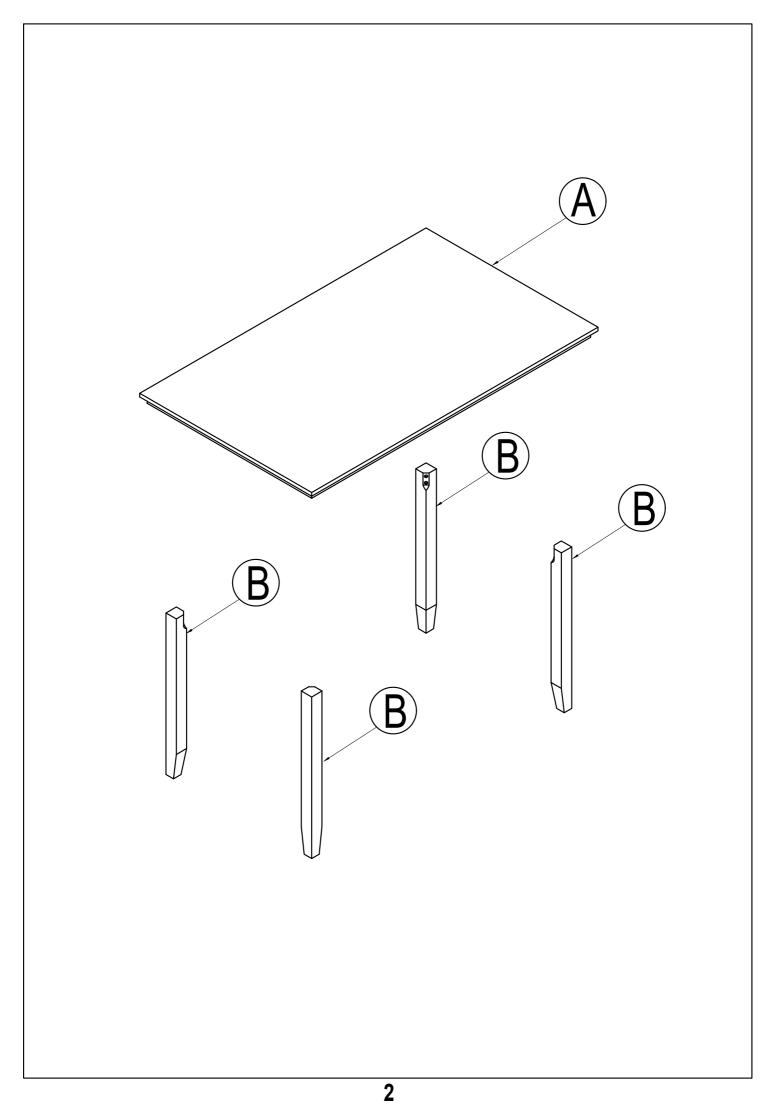


Part List


Hardware List

A	1
	Ø 5/16" x 60 mm
TABLE TOP (1 pc)	BOLT (8 pcs)
B	2
	Ø5/16" x 13 mm
TABLE LEG (4 pcs)	FLAT WASHER (8 pcs)
	3
	Ø5/16" x 19mm
	LOCK WASHER (8 pcs)
	4
	4 mm
	ALLEN KEY (1 pc)
	2

STEP 1:

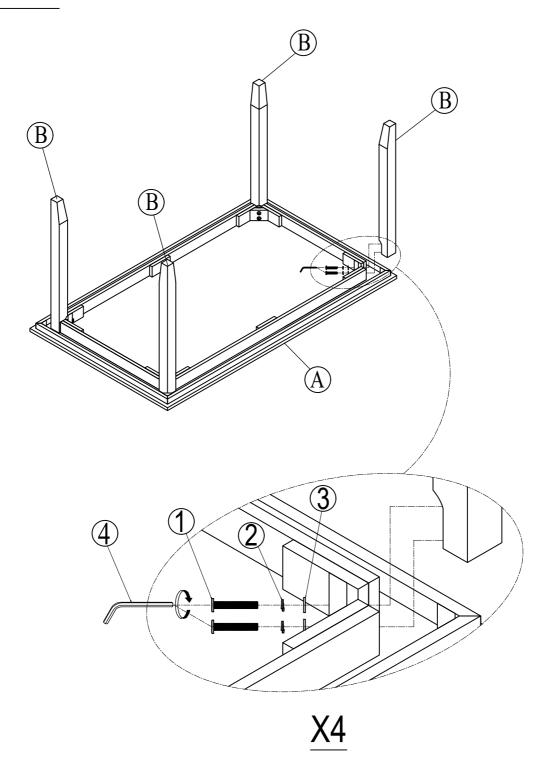


ASSEMBLY INSTRUCTIONS

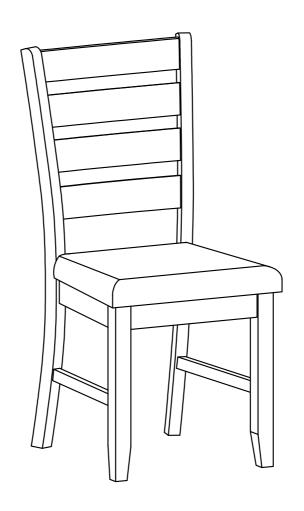


IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

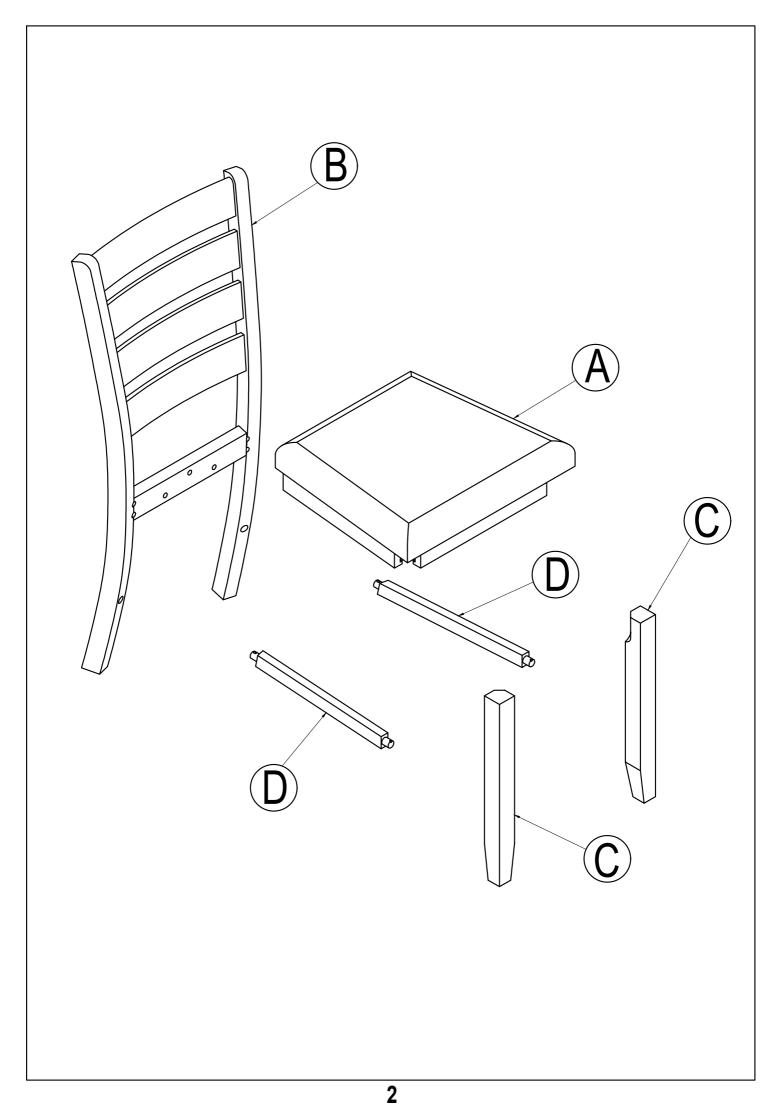

Part List


Hardware List

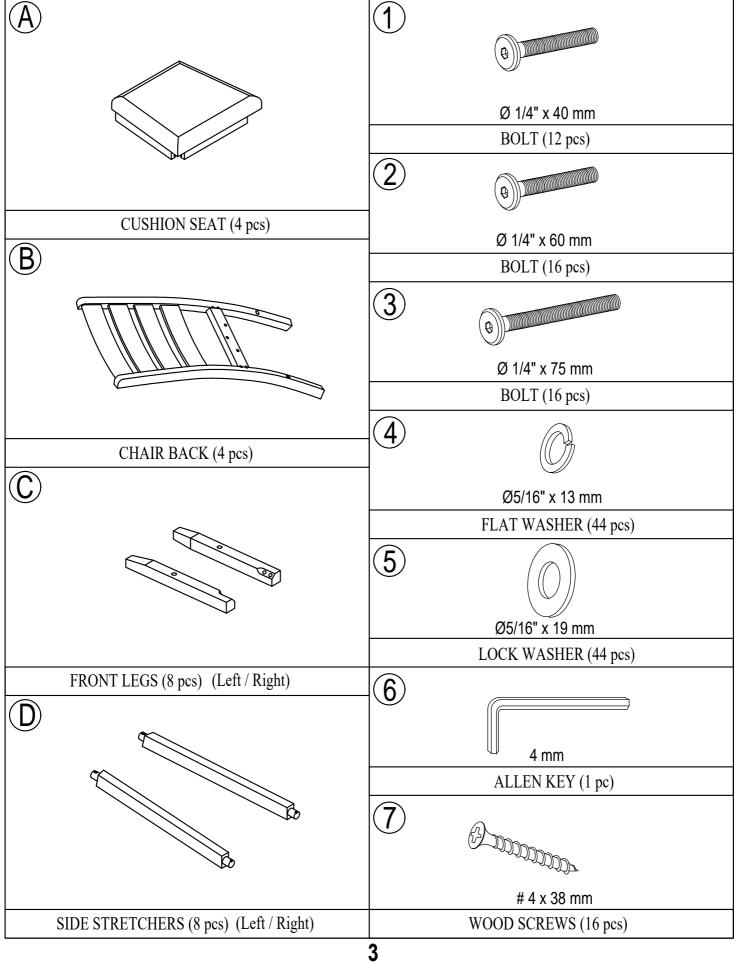

STEP 1: **B** 5 4 3 6 <u>X2</u> <u>(5)</u> 4 6 <u>X3</u> STEP 2: **B** <u>C</u> **X4** 5 4 2 6 4


ASSEMBLY INSTRUCTIONS

ITEM NO.WF212300AAE

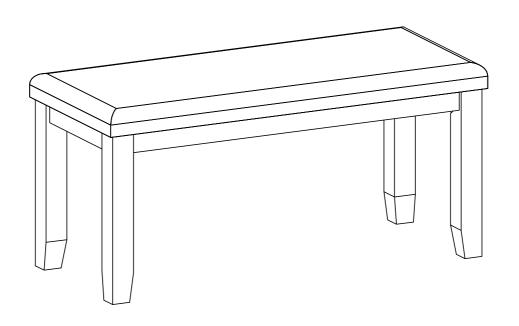

IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- **③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.**

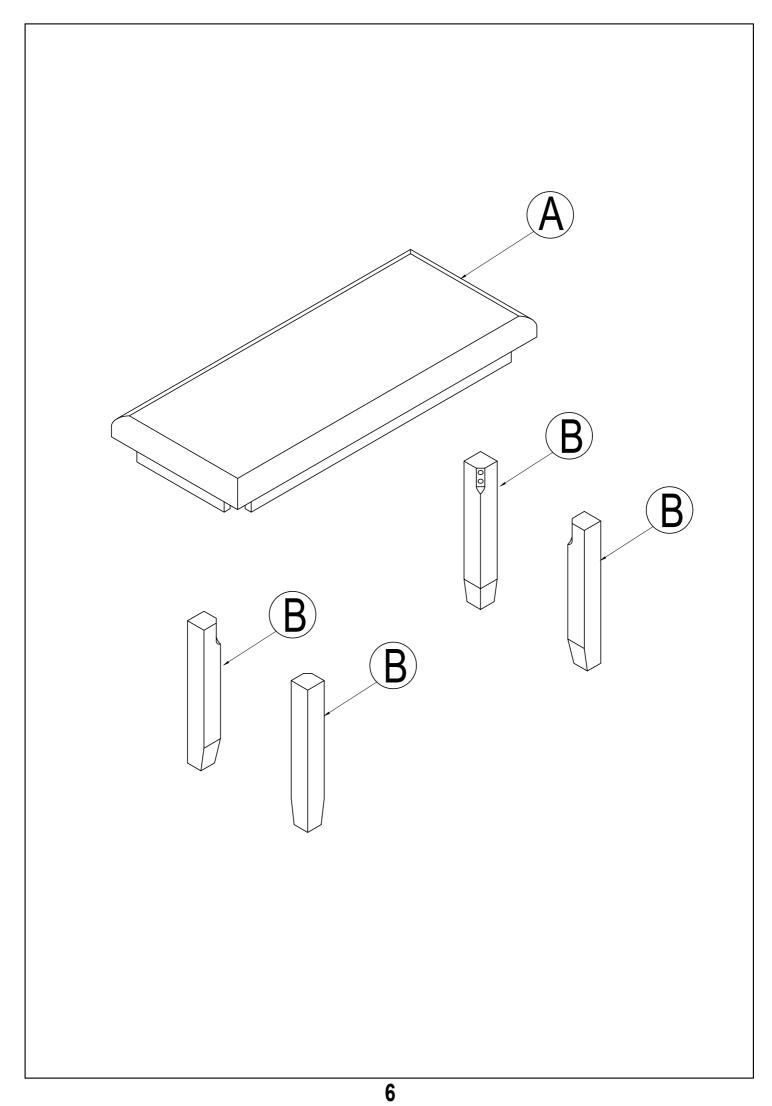

Part List

Hardware List

A	1
DENIGN GUGUNON GE A E (1	Ø1/4" x 60 mm
BENCH CUSHION SEAT (1 pc)	BOLT (8 pcs)
B	2
800	
	Ø5/16" x 13 mm
BENCH LEG (4 pcs)	FLAT WASHER (8 pcs)
	3
	Ø5/16" x 19 mm
	LOCK WASHER (8 pcs)
	4
	# 4 x 38 mm
	ALLEN KEY (1 pc)

STEP 1:

