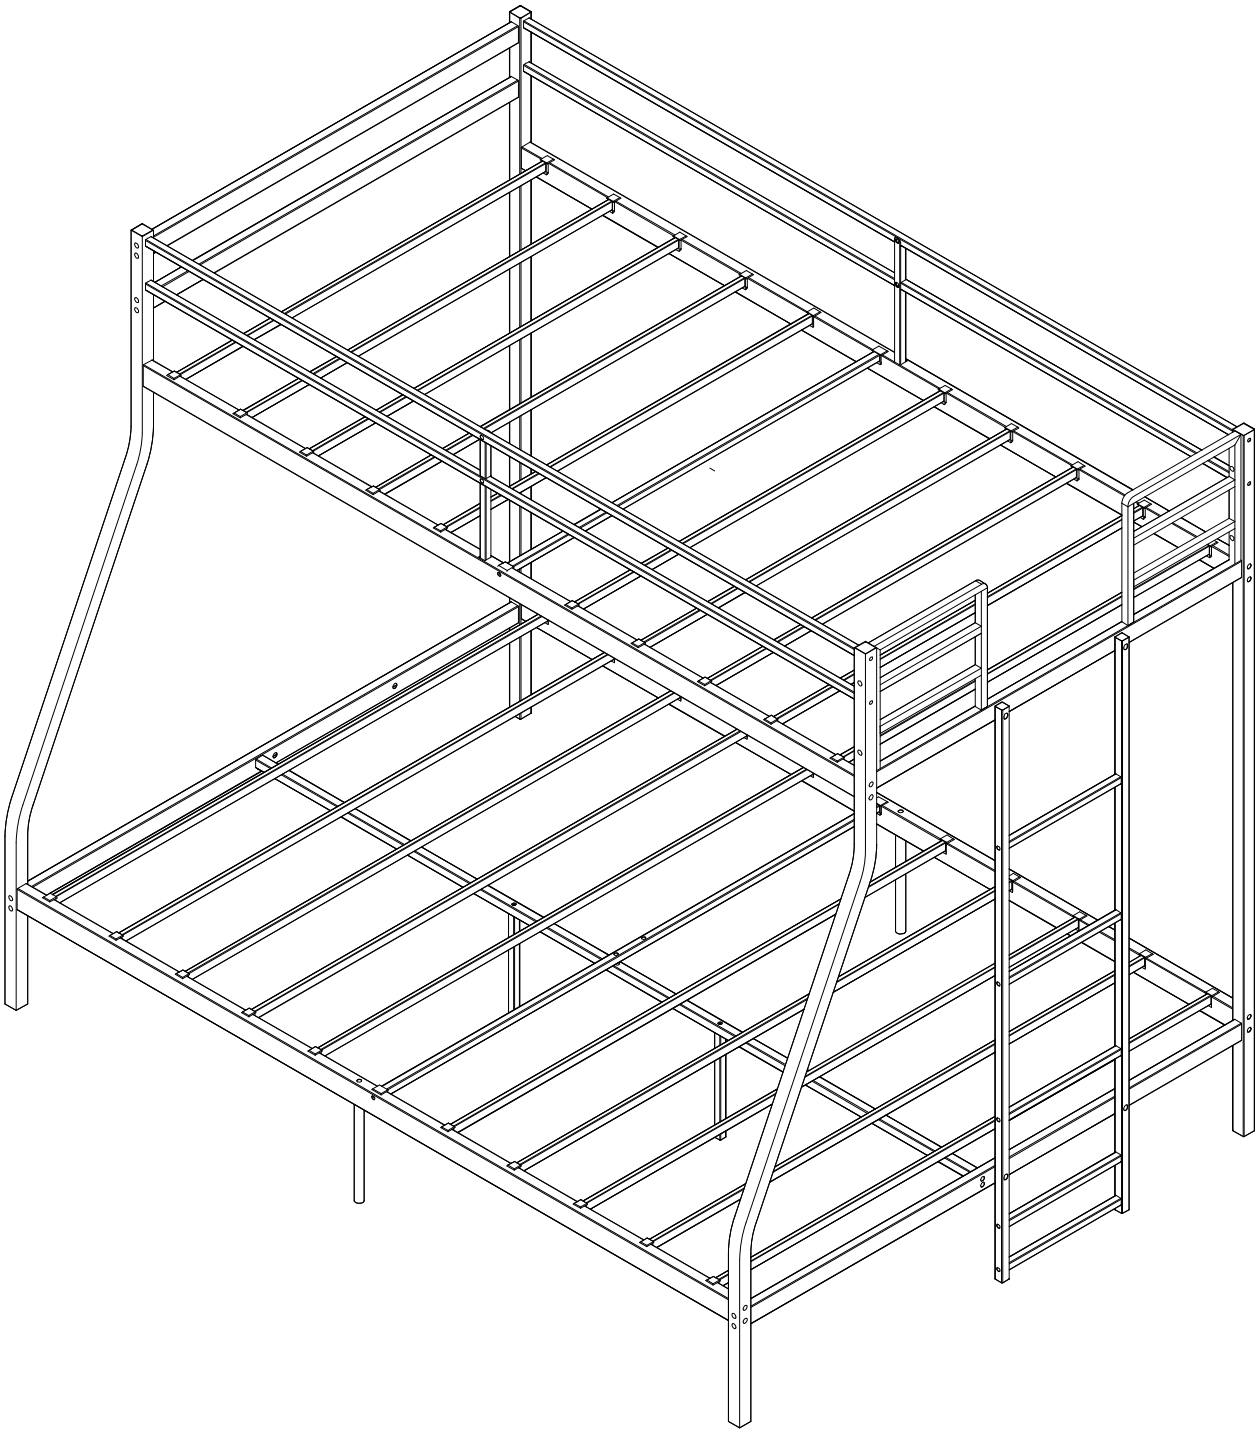



ASSEMBLY INSTRUCTION

47B



IMPORTANT NOTE

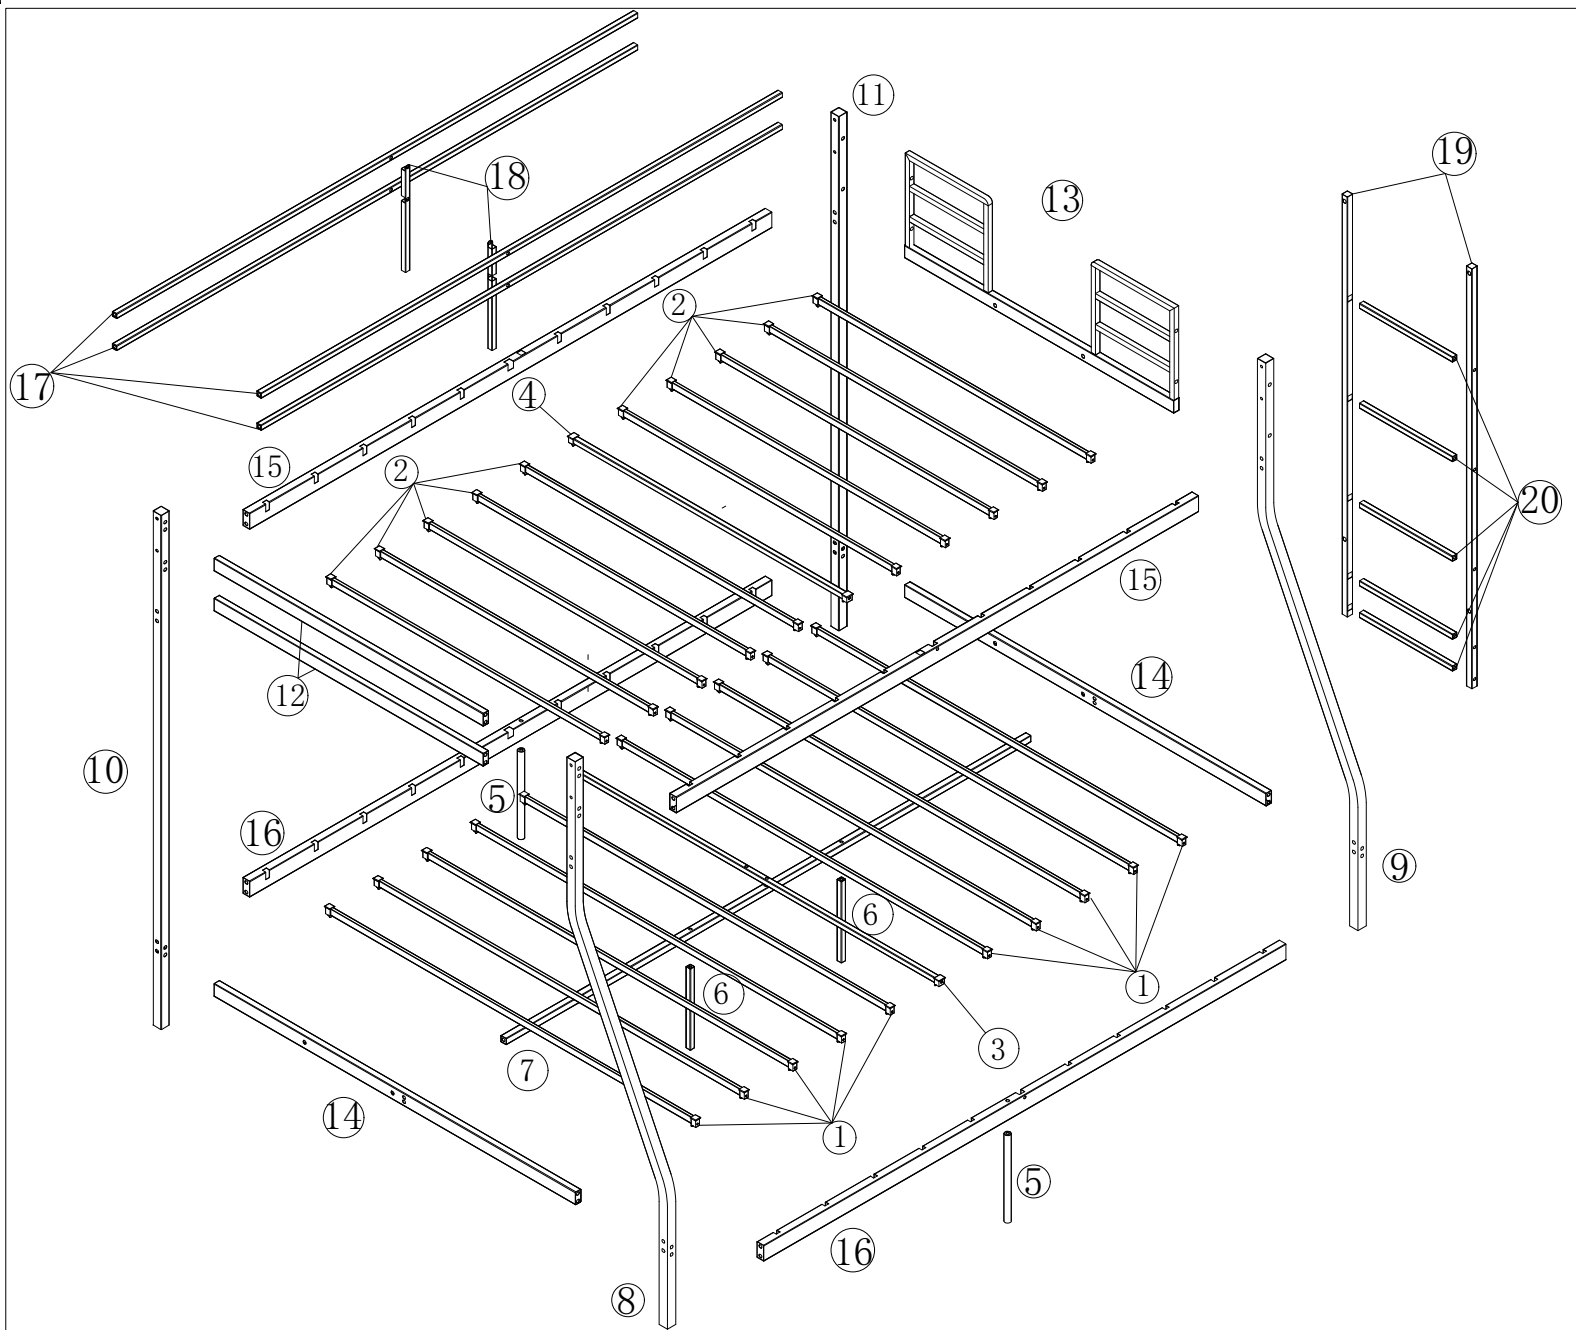1. Please check that all parts are complete before installation.
2. Please strictly follow the installation steps to install.
3. Please install the bed on a clean and smooth surface to prevent any damage
4. Please do not use the power tools to assemble the bed.
5. Please periodically check all the fittings and re-tighten as necessary.
6. Please do not use the bed unless all bolts and screw are firmly secured.
7. When assembling the bed, first secure the screws loosely, then tighten them all at the end after all parts are assembled.




Components List


① x10




② x10



③ x1



④ x1




⑤ x2




⑥ x2












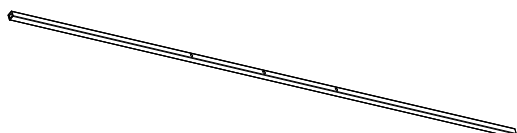
⑦ x1





⑧ x1

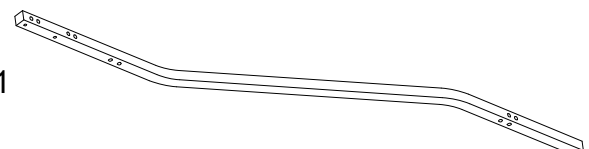

Components List

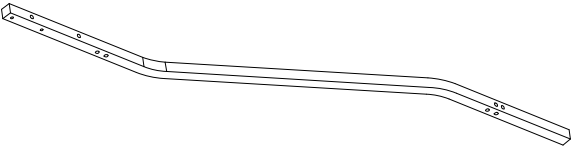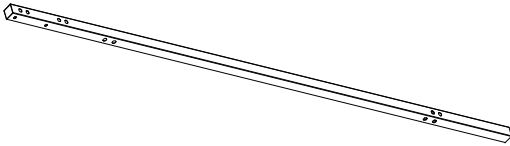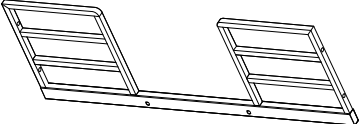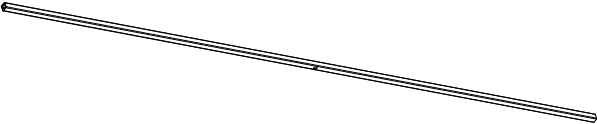 <p>9 x1</p>	 <p>10 x1</p>
 <p>11 x1</p>	 <p>12 x2</p>
 <p>13 x1</p>	 <p>14 x2</p>
 <p>15 x2 Lower Rail</p>	 <p>16 x2 Lower Rail</p>
 <p>17 x4</p>	 <p>18 x2</p>
 <p>19 x2</p>	 <p>20 x5</p>


Hardwares List

Item	Description	Qty
A	 M8x50	32
B	 M8x40	2
C	 M8x35	4
D	 M8x30	4
T	 M8x16	2
E	 M8x25	8
F	 M6x50	8
G	 M6x40	4
H	 M6x30	1


R	 M6x20	14
I	 M6x12	4
J	 M6x12	5
K	 (16*16)	4
L	 (10*20)	40
M	 M6 Allen key	2
N	 M8 Allen key	2
P	 Sound Insulation Cotton	1
Q	 Bubble Pads	1


STEP1

(A)		M8x50	16	(C)		M8x35	4	(E)		M8x25	4
-----	--	-------	----	-----	--	-------	---	-----	--	-------	---

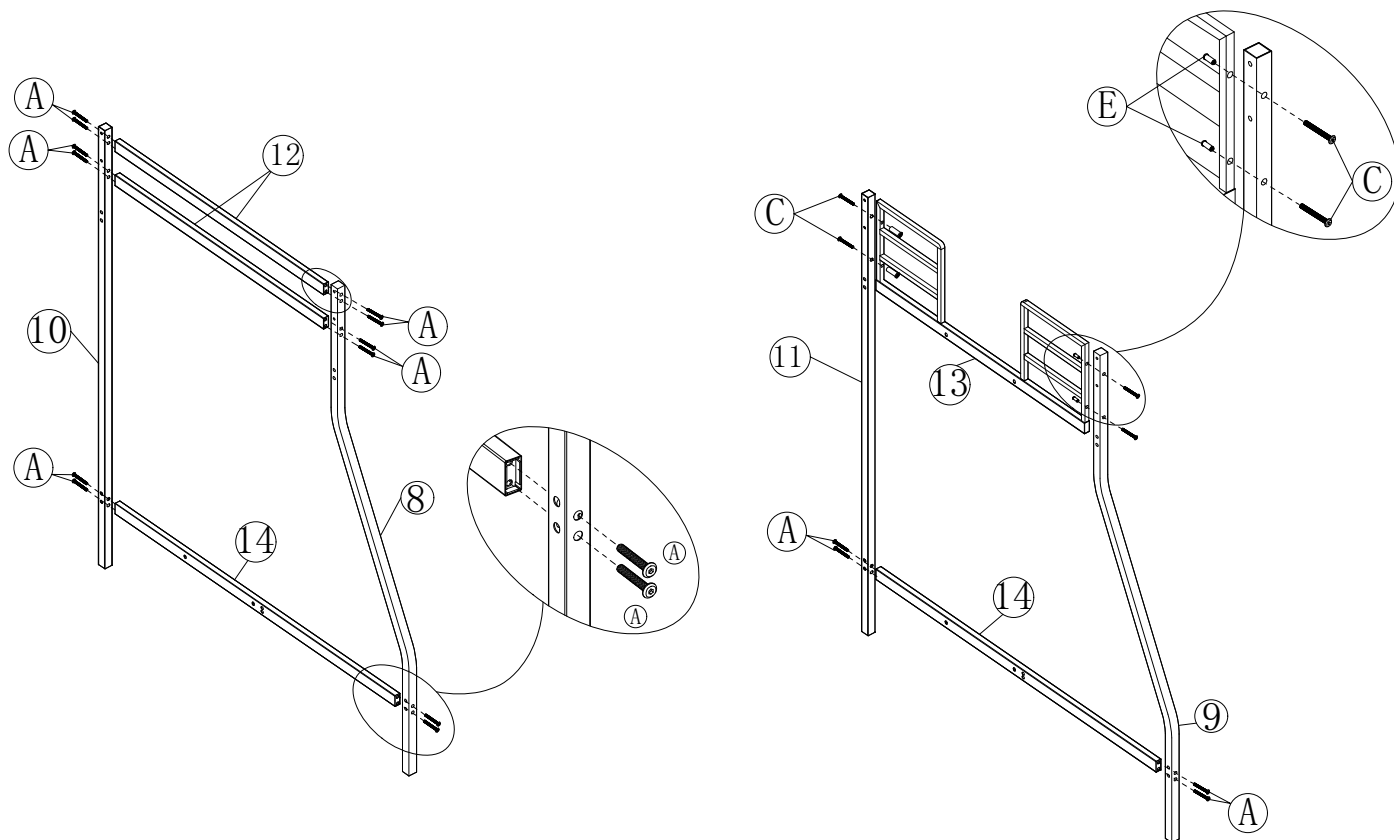


STEP2

(A)		M8x50	16	(B)		M8x40	2	(T)		M8*16	2
(R)		M6*20	2								

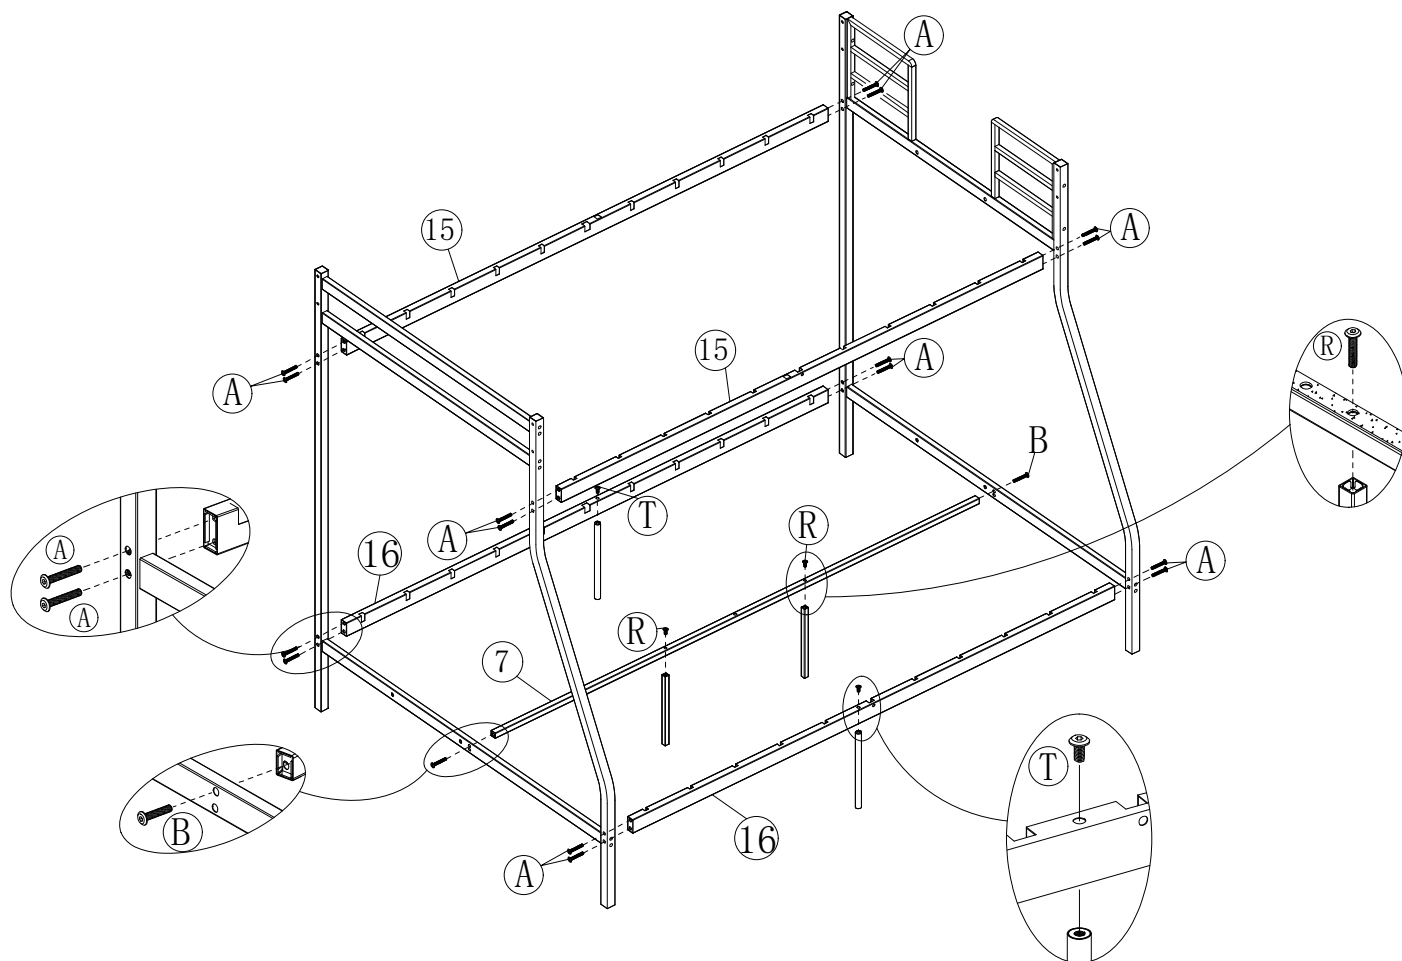

STEP3


(G)		M6x40	4	(H)		M6*30	1	(J)		M6x12	1
(K)		(16*16)	4	(L)		(10*20)	40	(P)			1

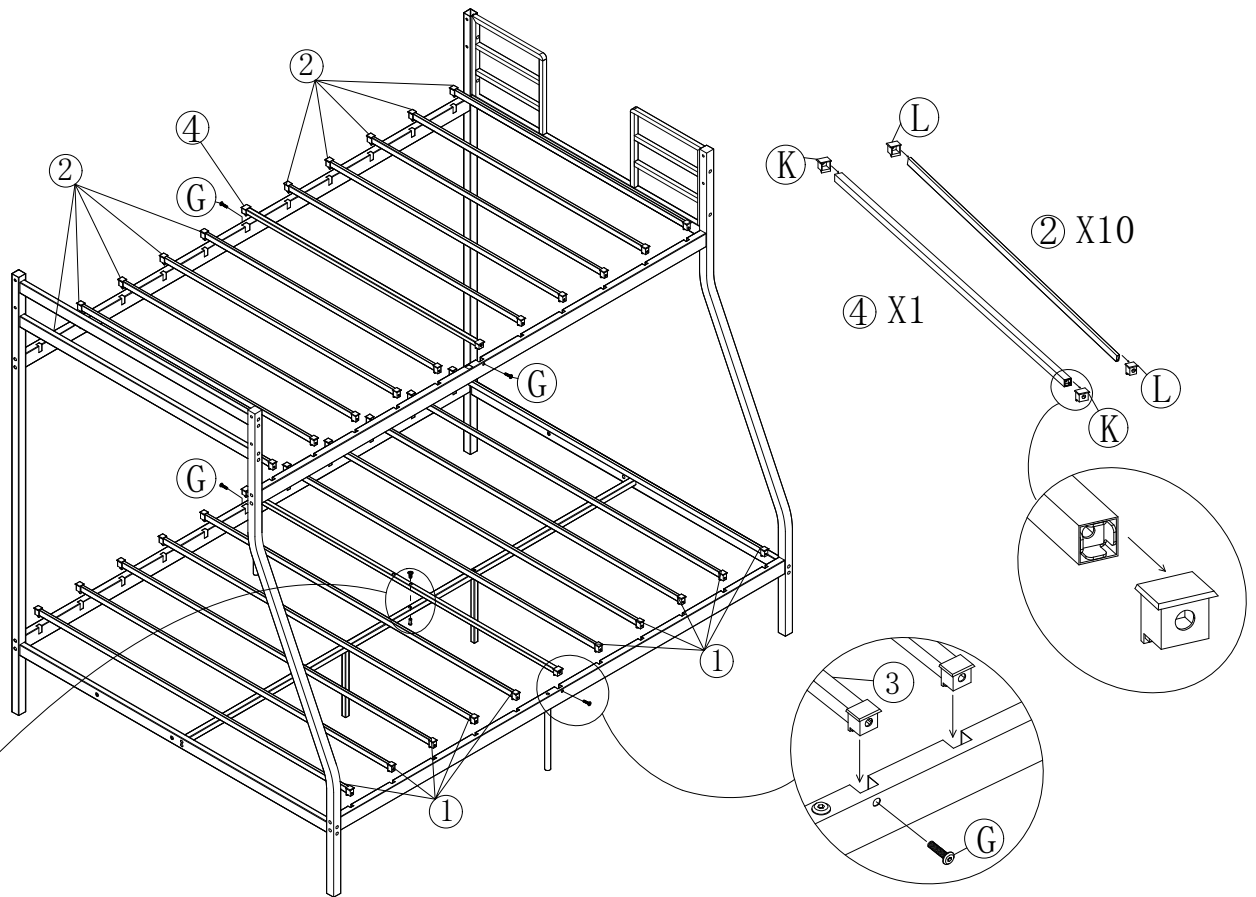

REMARK: 14.1
Tear off the white isolation paper on the back of Sound Insulation Cotton

STEP4

(D)		M8x30	4	(E)		M8x25	4	(F)		M6x50	8
(R)		M6*20	12	(I)		M6x12	4	(J)		M6x12	4
(Q)		Bubble Pads	5								

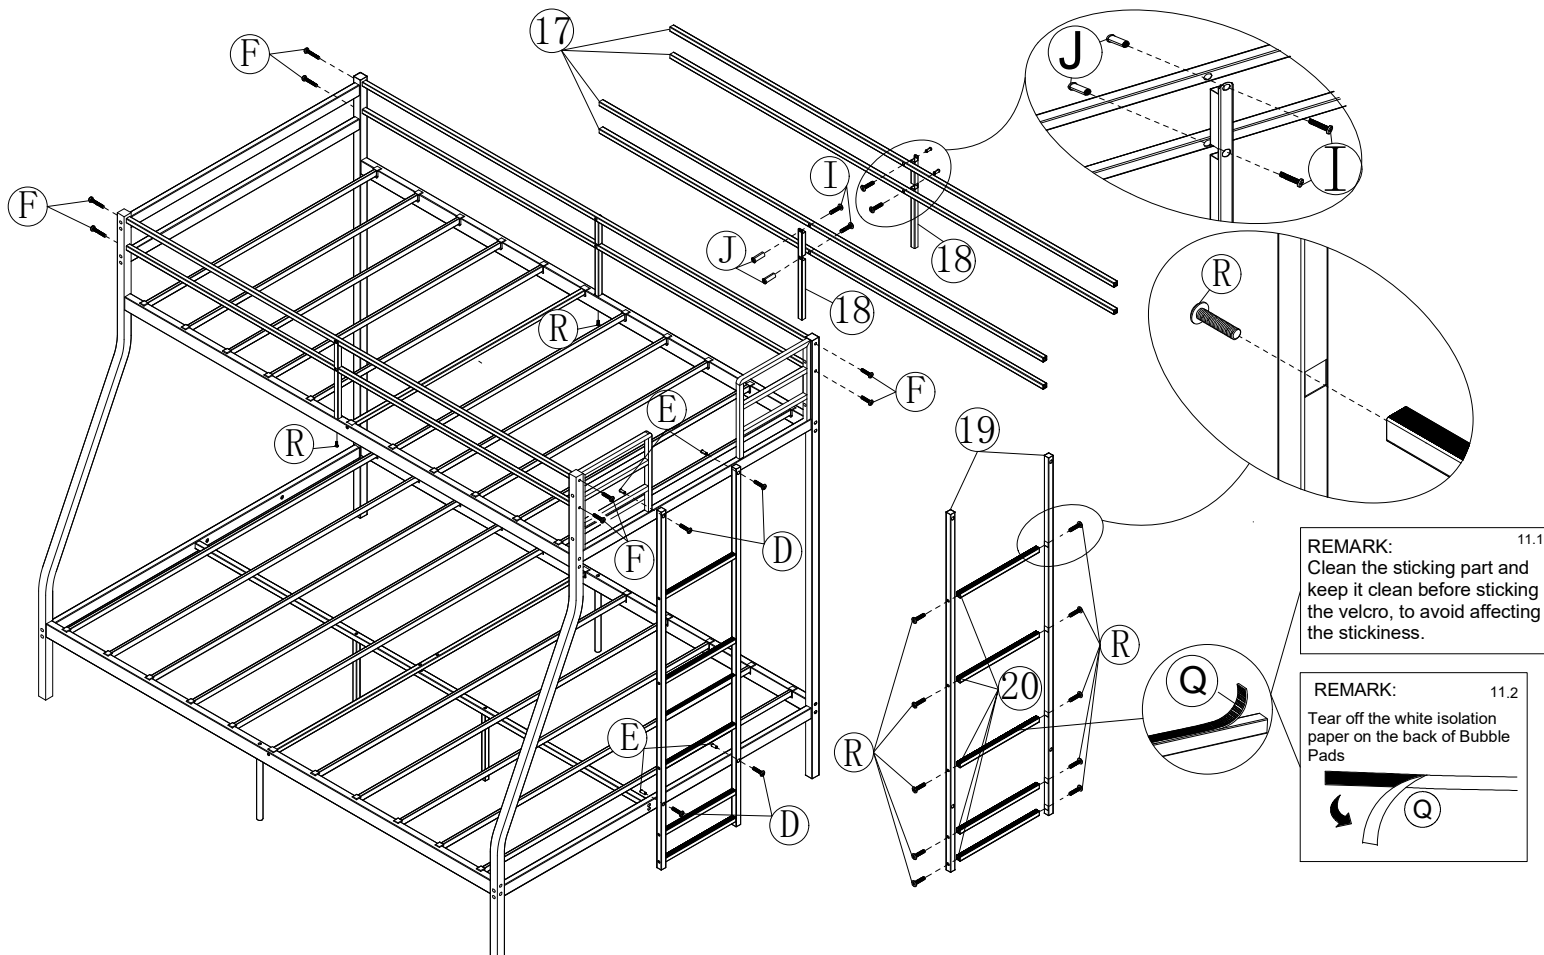

REMARK: 11.1
Clean the sticking part and keep it clean before sticking the velcro, to avoid affecting the stickiness.

REMARK: 11.2
Tear off the white isolation paper on the back of Bubble Pads