

Barber Chair Instruction



warning notice



Open your item in the area where you plan to keep it to reduce heavy lifting.



Identify, sort, and count the parts before assembling.



Lay all parts on smooth flat surface.



Make sure to always face the point on the top of the Cam Lock towards the outer edge.




Do NOT use harsh chemicals or abrasive cleaners on this item.



Never push, pull, or drag your furniture.

Teamwork


Not having two people involved in the assembly can potentially result in damage to the unit and pose a risk of personal injury.

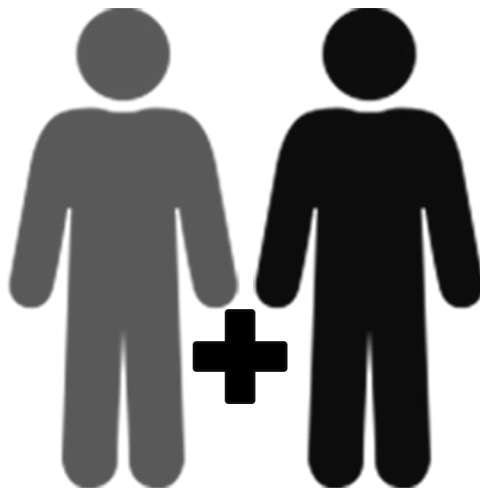

Components

Step 1


Check all parts you received.

Part List					
					
Ax1	Bx1		Cx1		
					
Dx1	Ex1		Fx1	Gx1	
					
Hx1	Ix1	Jx6	Kx1	Lx1	Mx4

Assembly Instructions

Step 2

Insert "I" into the holes on top of "H". Tighten and locking by "J".

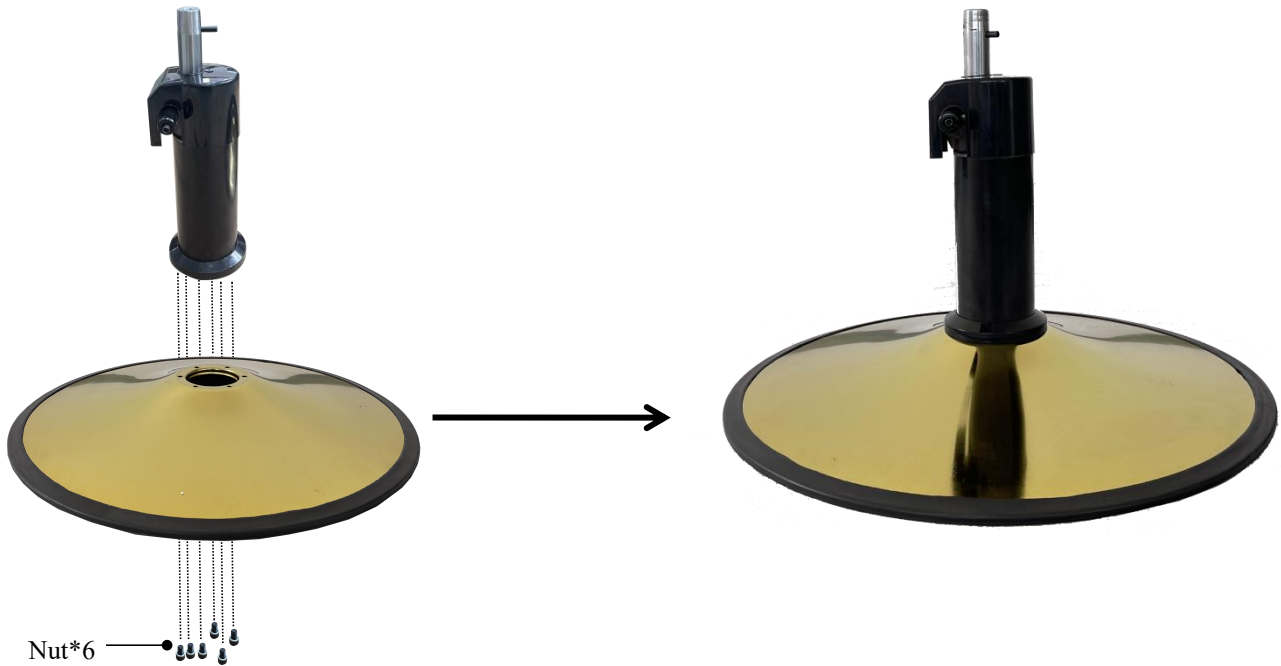

Step 3


Insert "K" into "I", tighten the screws on the both sides.(please noted the direction of "K").




Assembly Instructions

Step 4

First:unscrew 4 screws black color on the part "G" ,assemble part "G" to part "B" ,tighten.

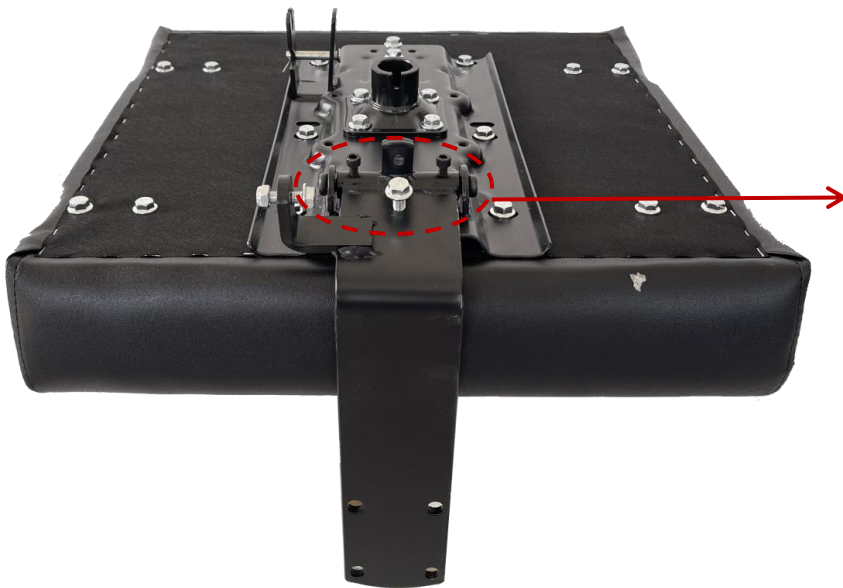

Step two tighten the two screws on the top.

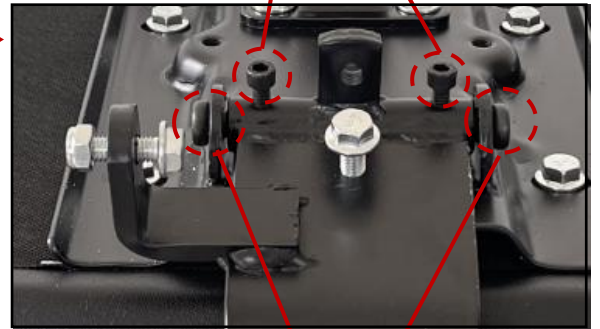

The first step is to tighten the screws on both sides.

Step 5

Unscrew 4 screws previously assembled on the part "D" and part "E" ,assemble part "M" to part "D" and part "E" , tighten.




Longer

Assembly Instructions

Step 6

Unscrew 8 screws previously assembled on the part "B" ,assemble part "D" and part "E" to part "B" , tighten.

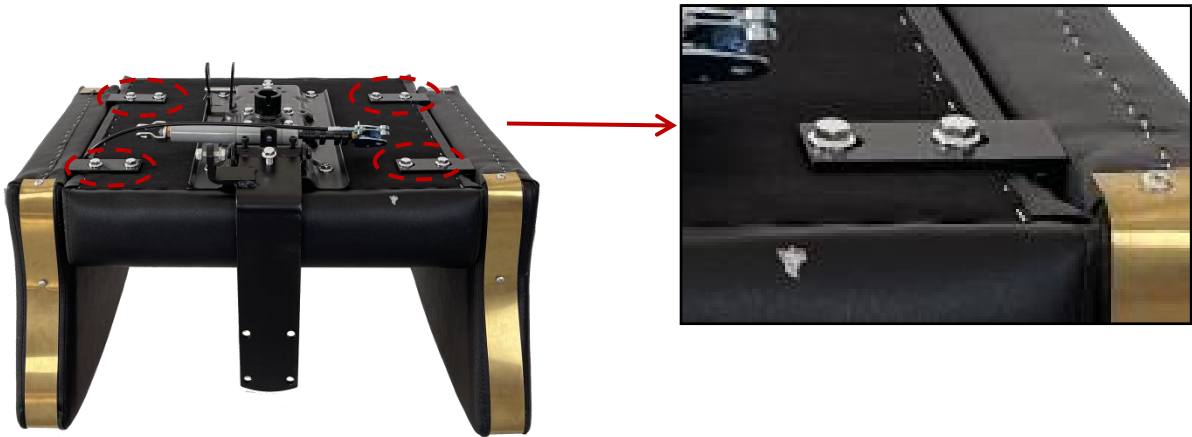

Step 7

Unscrew 2 screws previously assembled on part "F",connect part "F" and part "C" together,tighten.,as picture.



Assembly Instructions




Step 8

Unscrew 2 screws previously assembled on part "B" ,assemble part "C" to part "B" ,tighten.,as picture.

Note:tighten this screws after assembled the gas,and it is contral the angle of part "G", it means controlling the angle of the backrest.



Unscrew the bolt on the black metal of part "B" , assemble the one side of gas as picture by the bolt,and bend one end of the dowel.

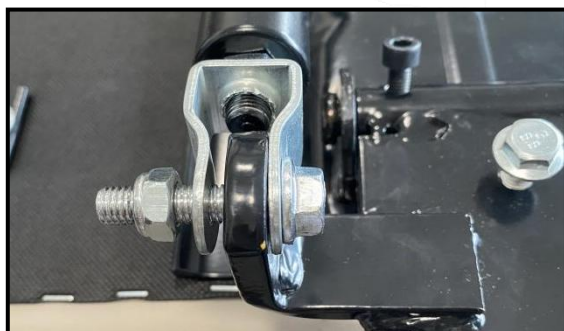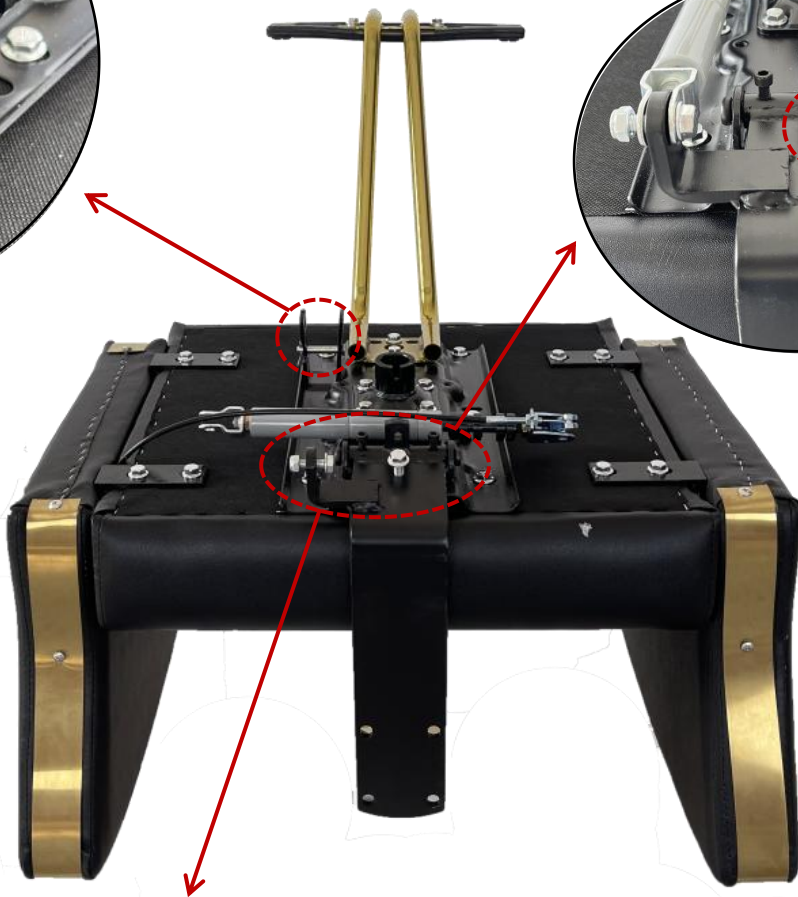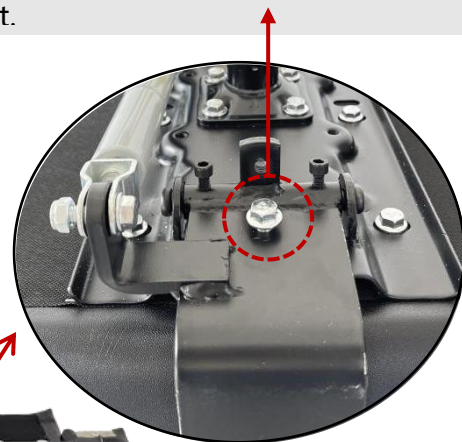

Unscrew nut and bolt on part "G" ,assemble the other side of gas to part "G",tighten the nut to one-third of the screw.

Assembly Instructions

Step 9

Put the assembled seat to the hydraulic pump.



Noted:the tray on the set plate must be aligned with the black pin of hydraulic pump.

Step 10

Unscrew 4 screws previously assembled on part "A",assemble part "A" to the assembled part "G",tighten.,as picture



First connect the part "A" to the part "G" with screws, but do not tighten the screws, then adjust the position of the backrest, and finally tighten the screws.