


MOE'S

Assembly Instructions



ARCHED FLOOR MIRROR

PZ-1032-03

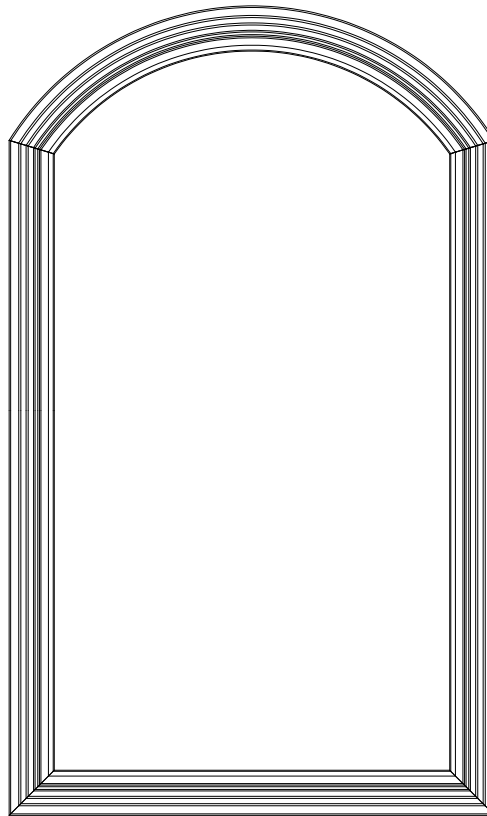


Thank you for your purchase!


Parts and Hardware

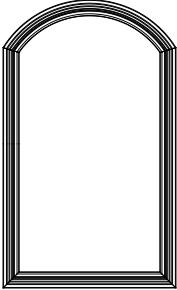1. IRON MIRROR FRAME x 1 	2. WALL MOUNT BRACKET x 1 
3. WALL ANCHOR x 6 L40 mm x Ø13 mm 	4. SCREW x 6 L38 mm x Ø7 mm 
5. SCREWDRIVER x 1 (NOT INCLUDED) 	6. POWER DRILL x 1 (NOT INCLUDED) 


Step 1

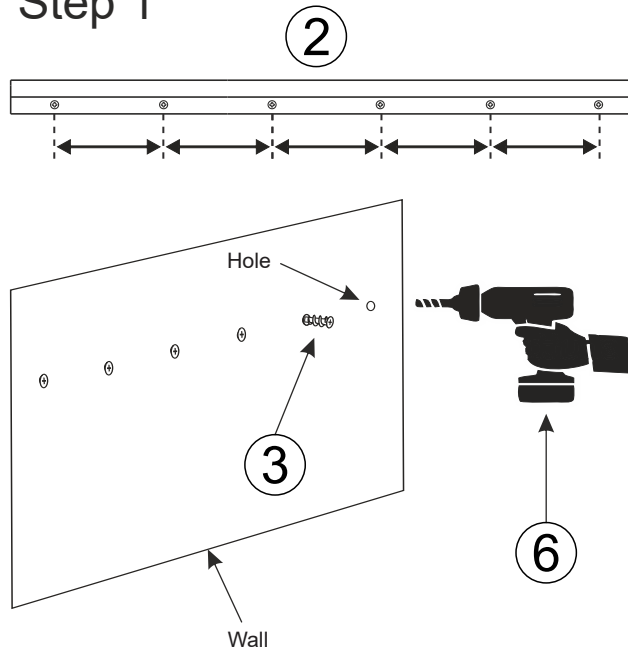


Step 2

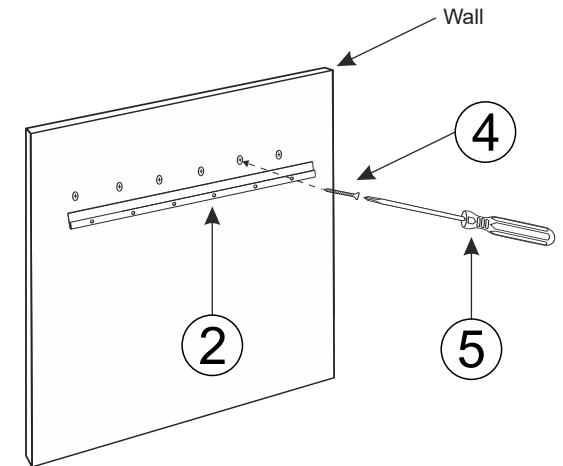

Step 3

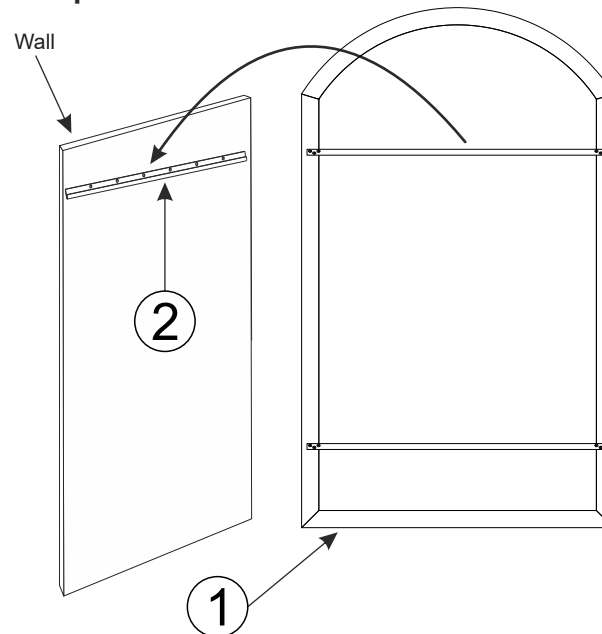

Step 4

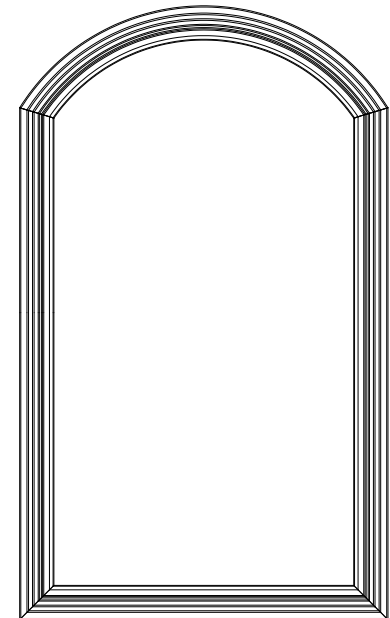

Notes

Thank you for purchasing this quality product!
Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

Caution: The item is heavy, assembly should be performed by two people.