
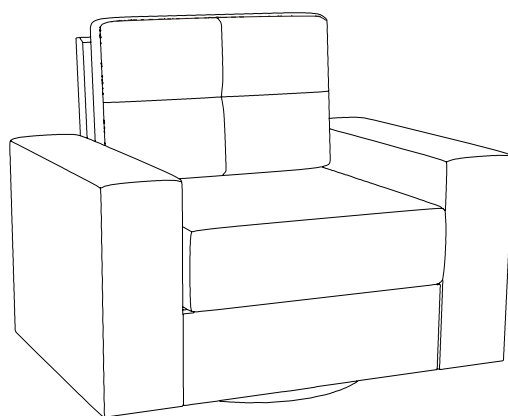








ASSEMBLY INSTRUCTION





PARTS LIST

 x1	 x1	 x1	 x1	 x1
 x1	 x1	 x1	 x1	

HARDWARE LIST

 1/4*2cm 1 x12	 1/4*5cm 2 x4	 19mm 3 x8	 4 x4	 5 x2	 M5*40mm*100mm 6 x1	 M4*40mm*100mm 7
 8 x1						


BEFORE ASSEMBLY

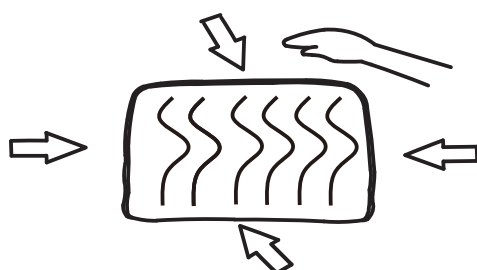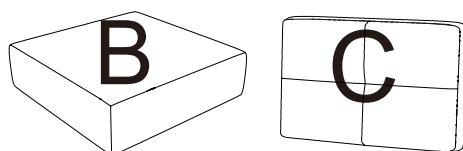


1.After removing the cushion from the compress bag, please allow air to flow through the cushion for few days.
You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to




2.Please allow at least 72 hours for the cushions to recover to its natural state after removing from the package.

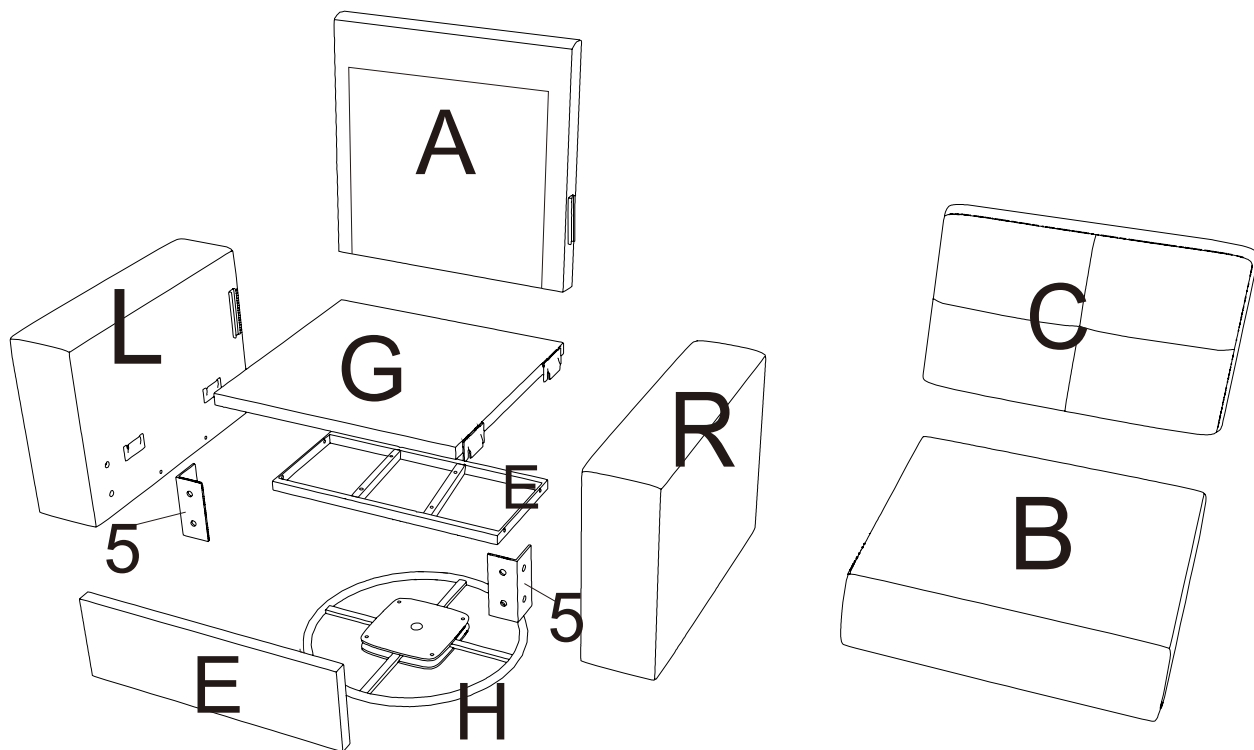


Step1

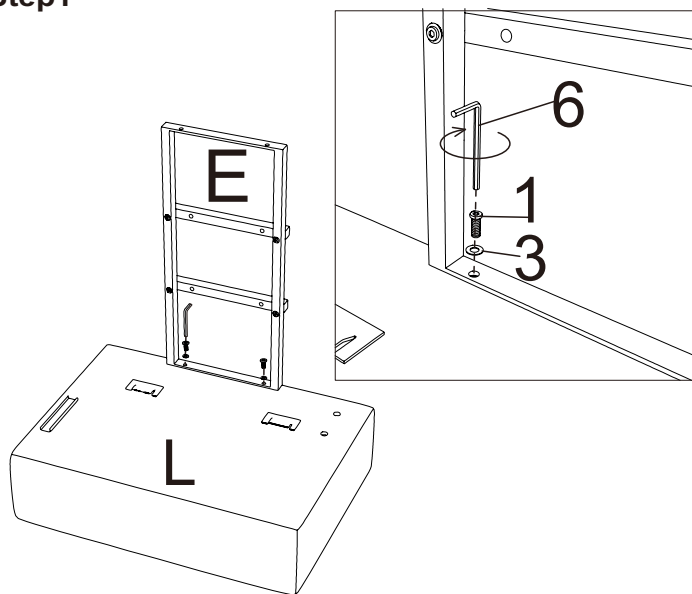


Step2

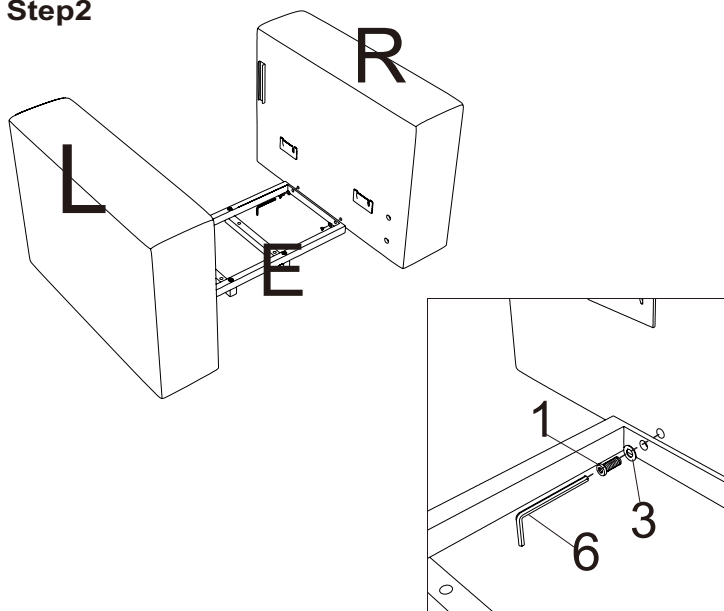



Step3

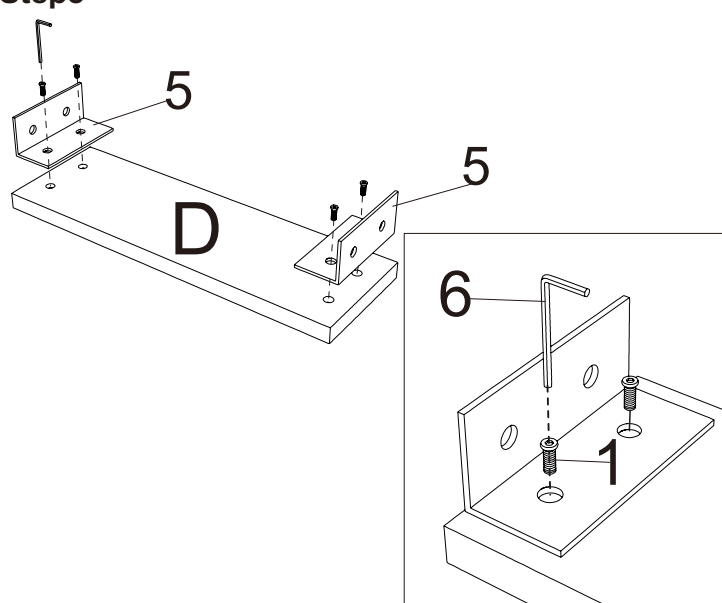



Step4

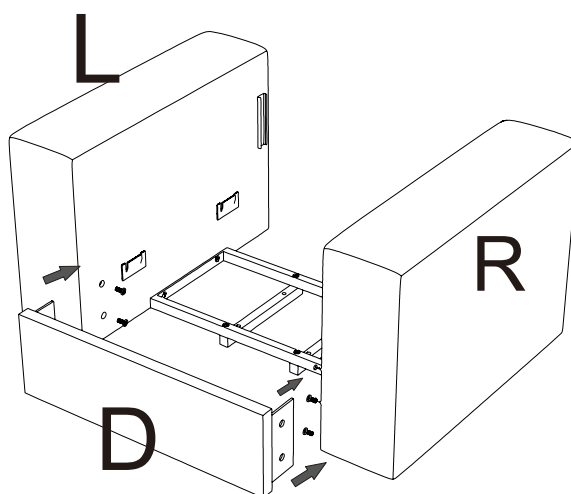


Step5

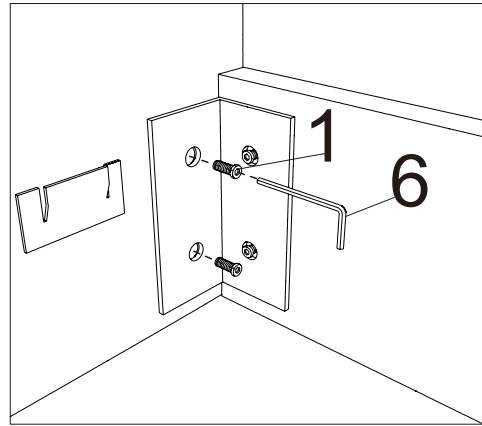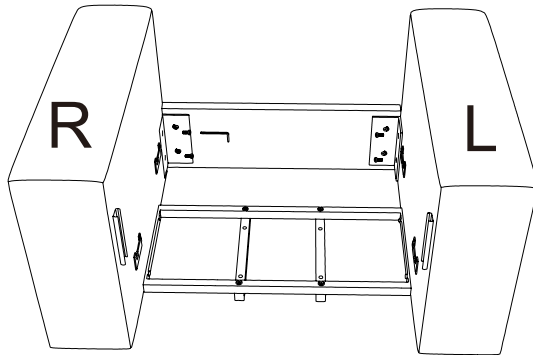


Step6

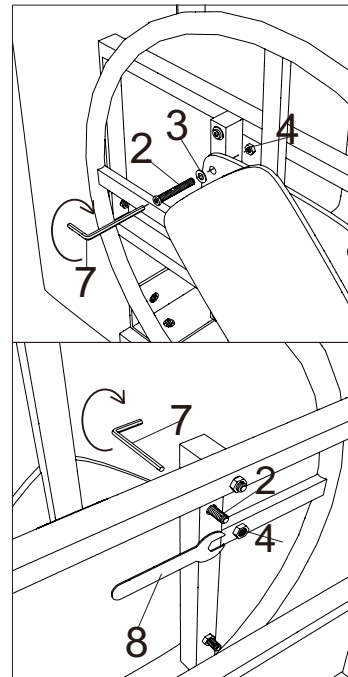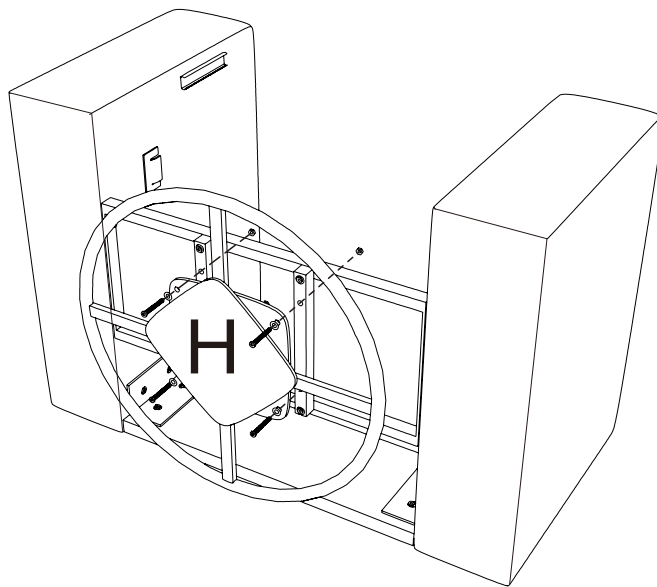

Step7

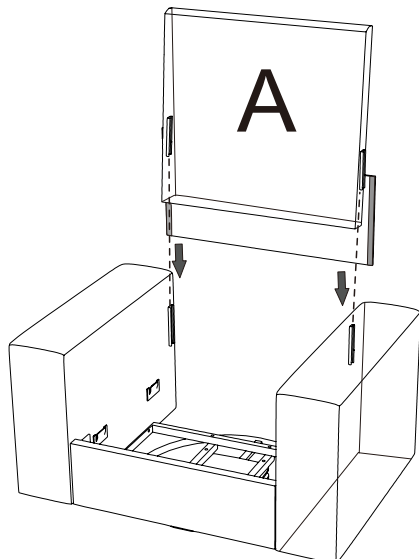

Step8

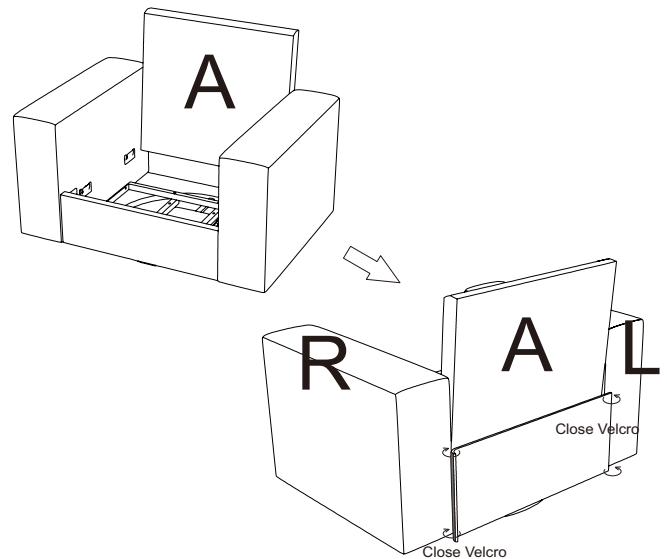

Step9