


RDY07B

Different Types of Installation


A

Option A:

For wall to wall installation,
shower sliding door

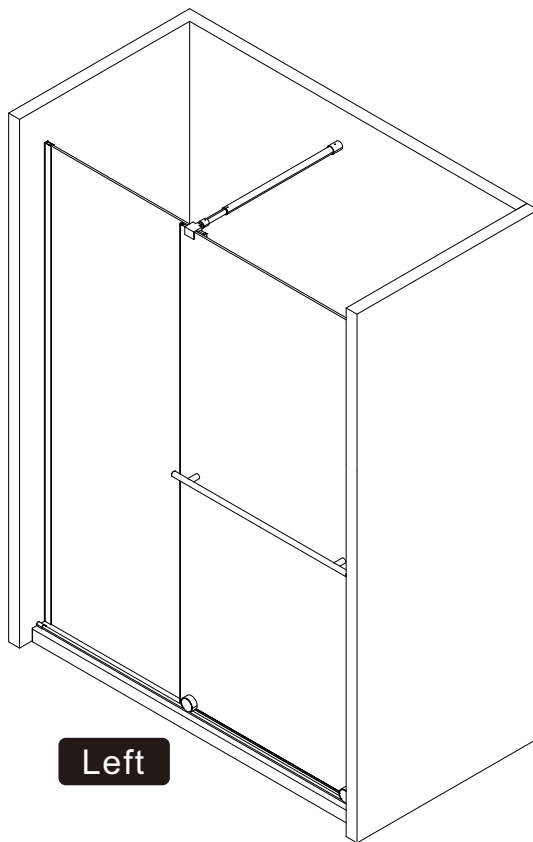


Right

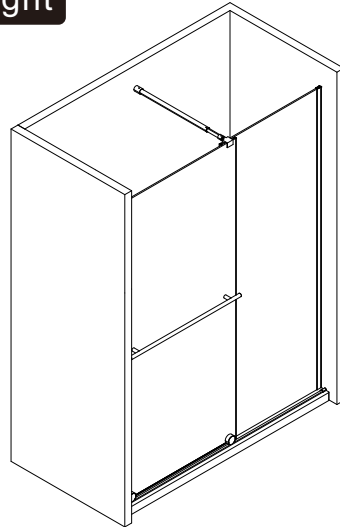


B











Option B:


For 1-side wall shower
walk-in wetroom

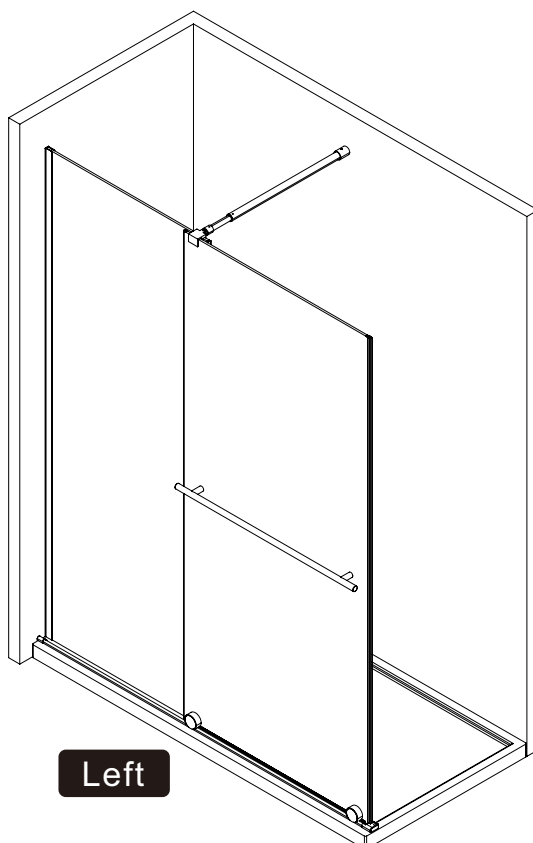


Right

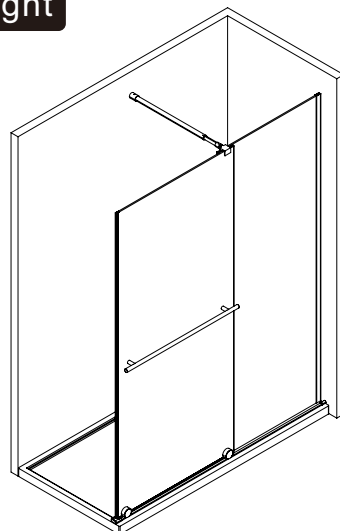

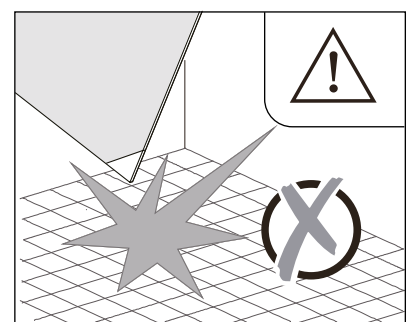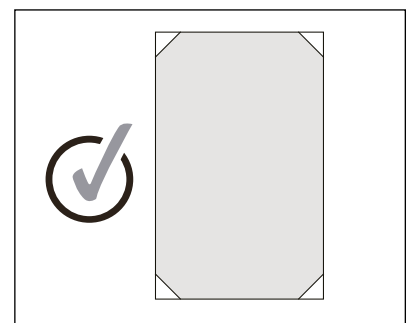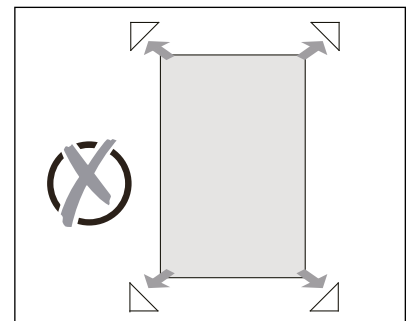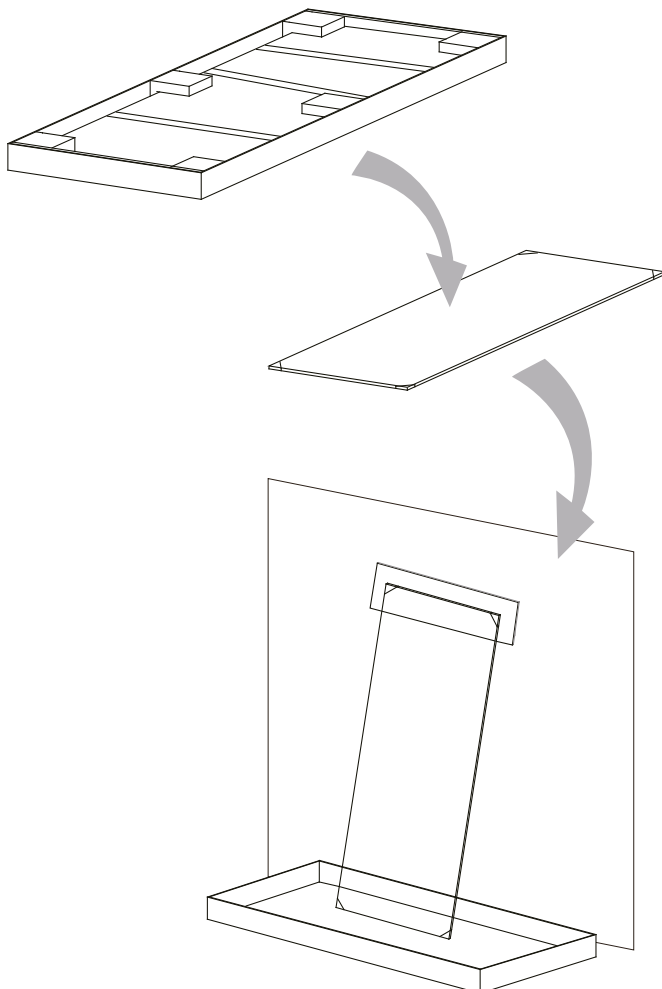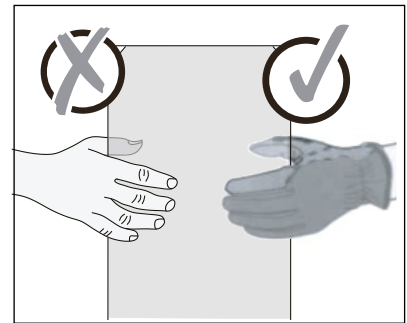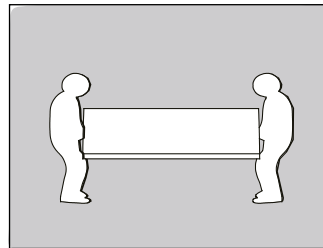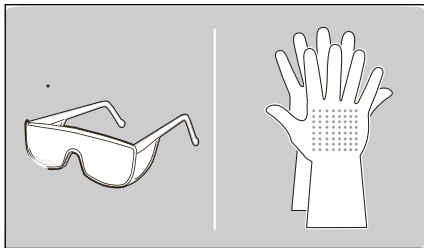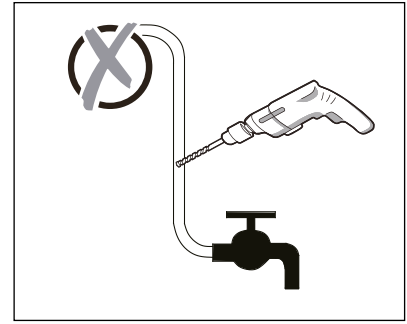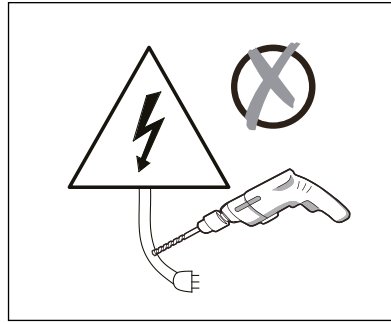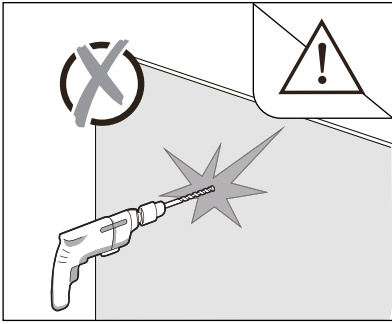




















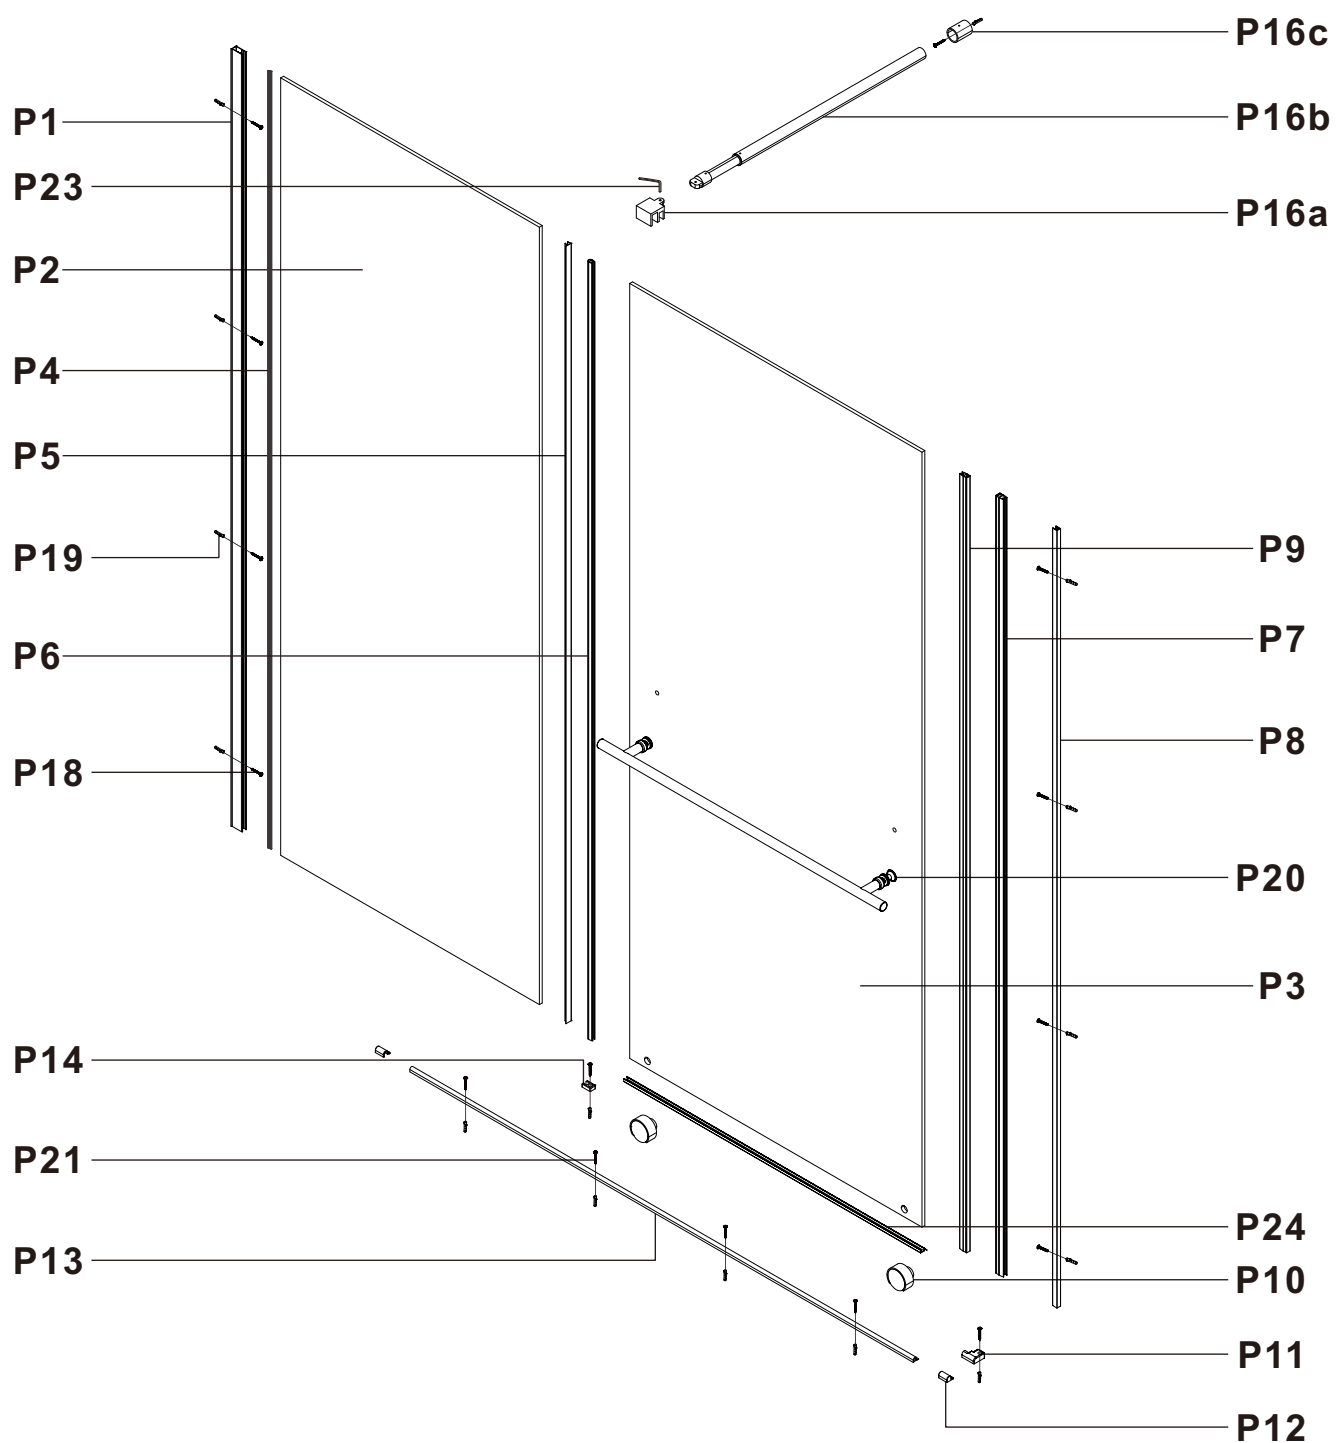








Option A

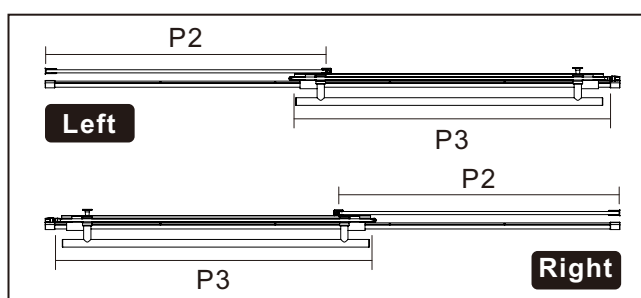


Option B

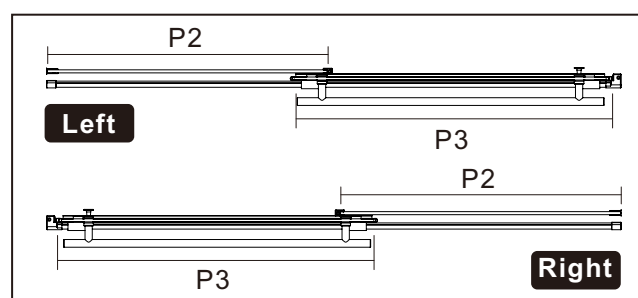

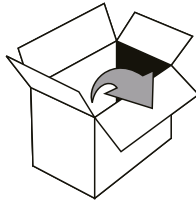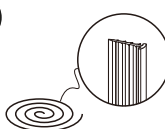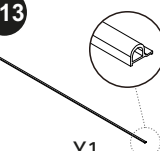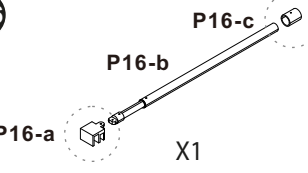
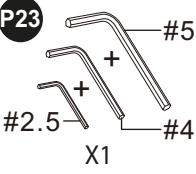
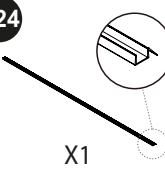
			
P1  X1	P2  X1	P3  X1	P4  X1
P5  X1	P6  X1	P7  X1	P8  X1
P9  X1	P10  X2	P11  X1	P12  X1
P13  X1	P14  X1	P16  X1	
P18 ST4x30MM  X9	P19  X15	P20  X1	P21 ST4x25MM  X6
P23  X1	P24  X1		

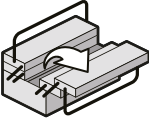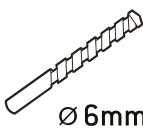


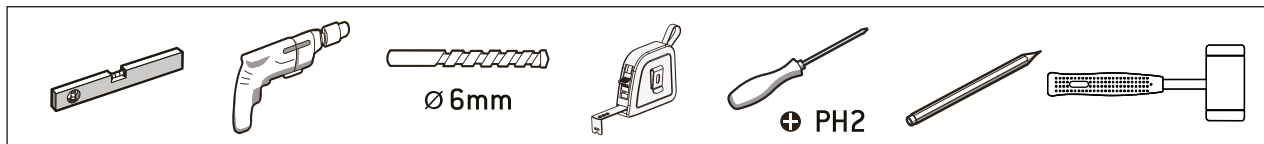5



1 Wall Profile Installation

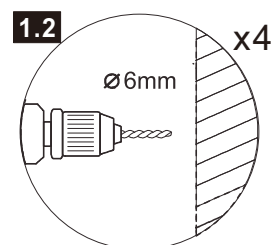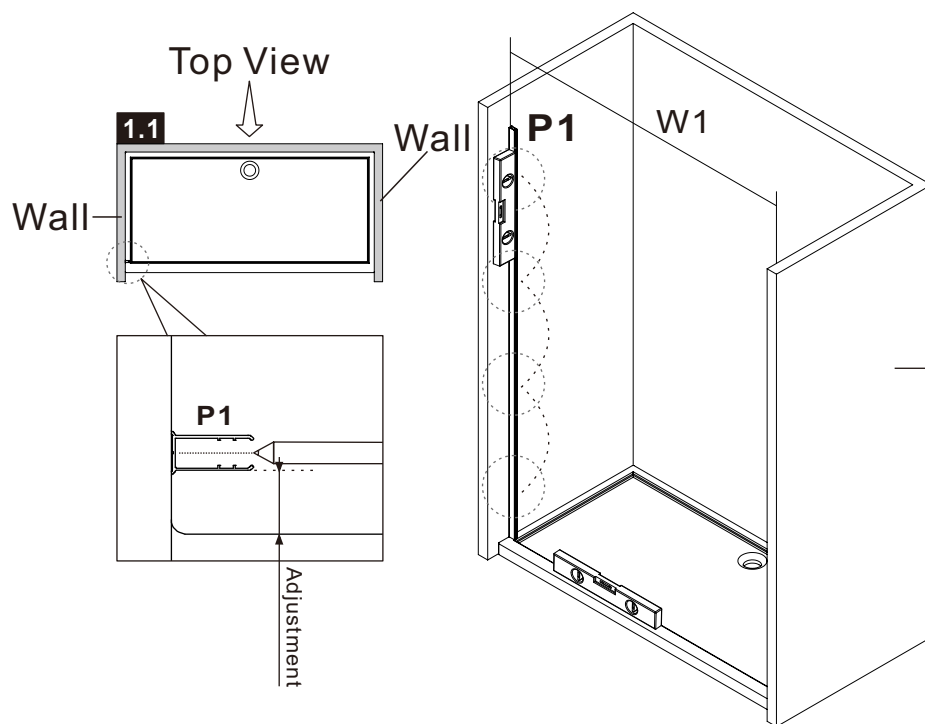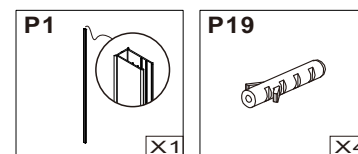


For wall to wall installation, shower sliding door






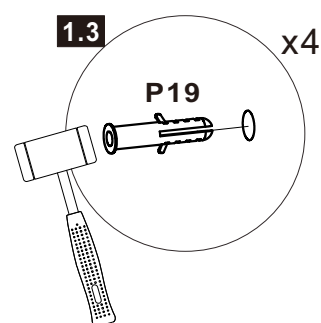


Wall Profile Installation 2

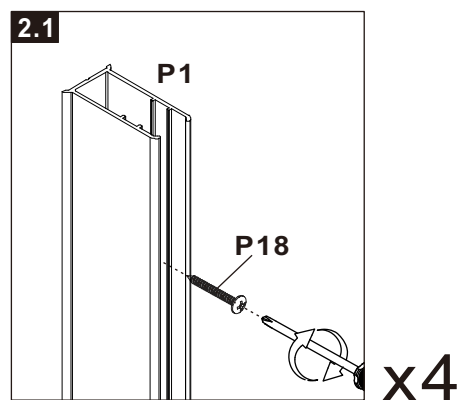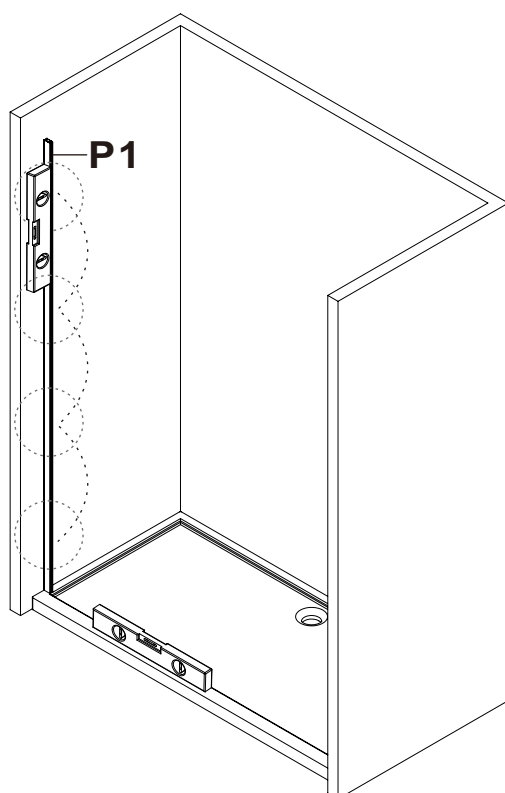













3 Fixed Glass Installation

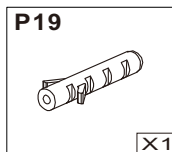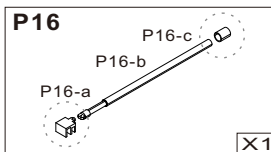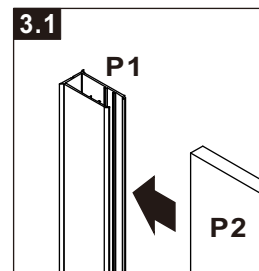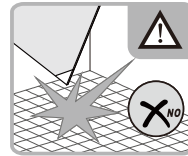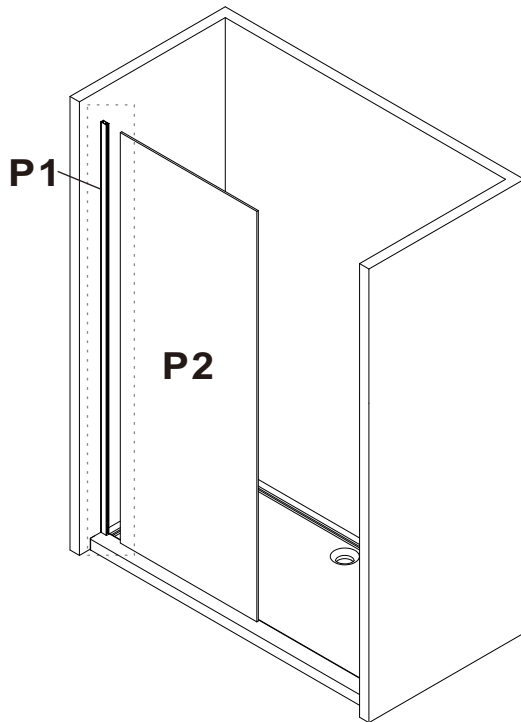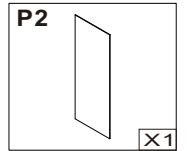

Support Bar Installation 4






Note: the support bar shall be fixed less than 4" from the glass edge.

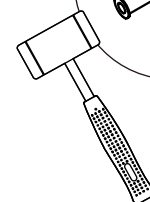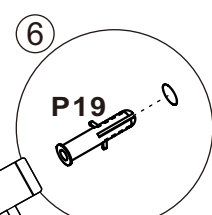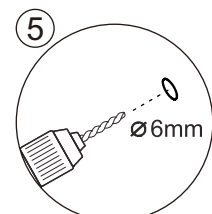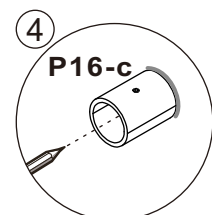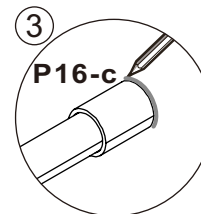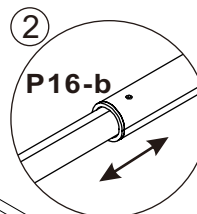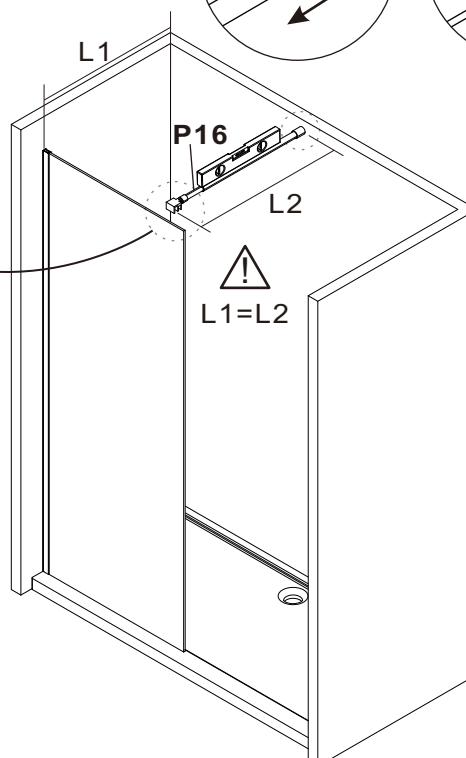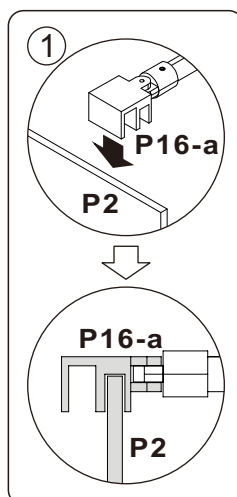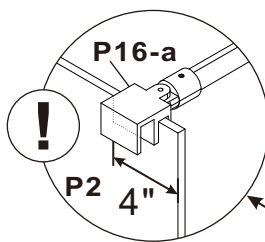





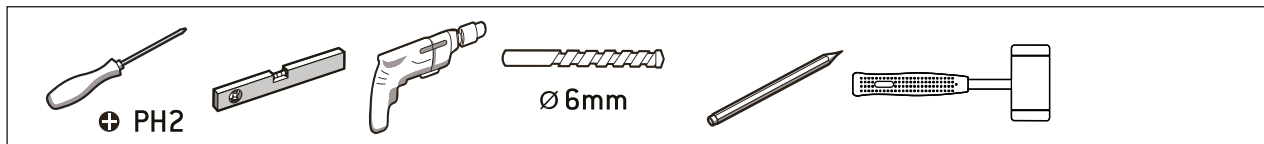



7

5 Support Bar Installation

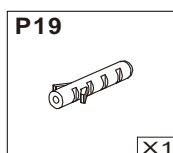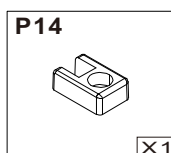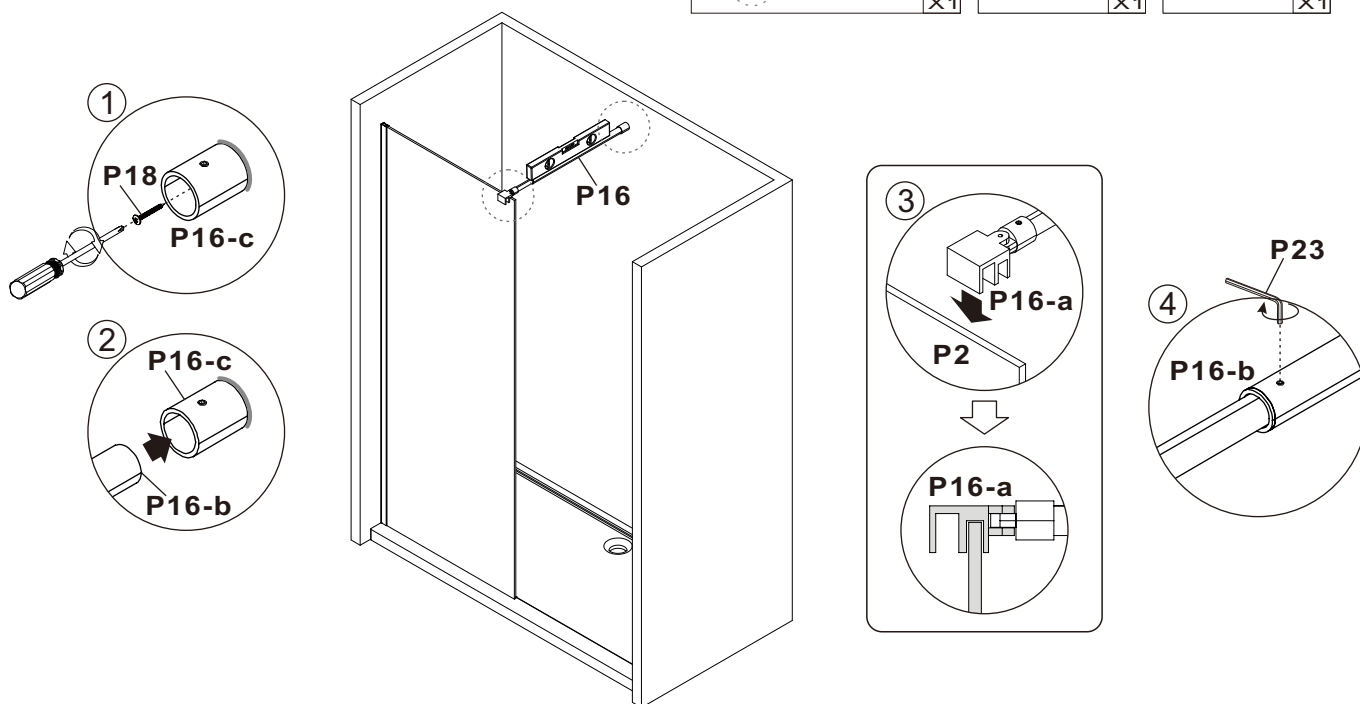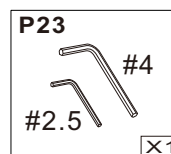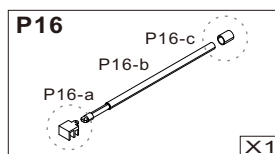








Bottom Fixture Installation 6

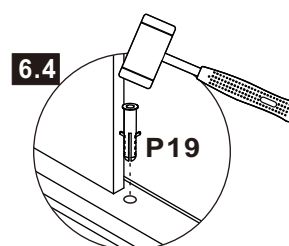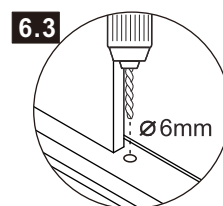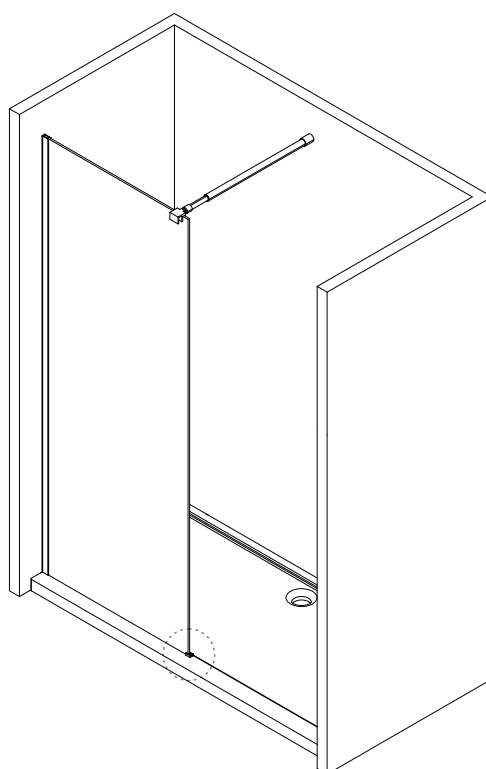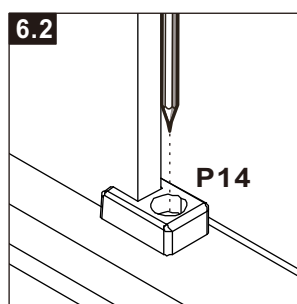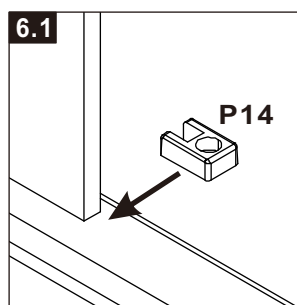



PH2
















7 Strips Installation

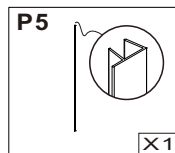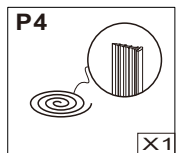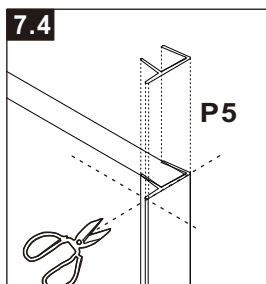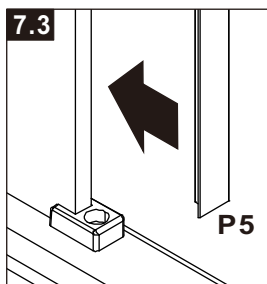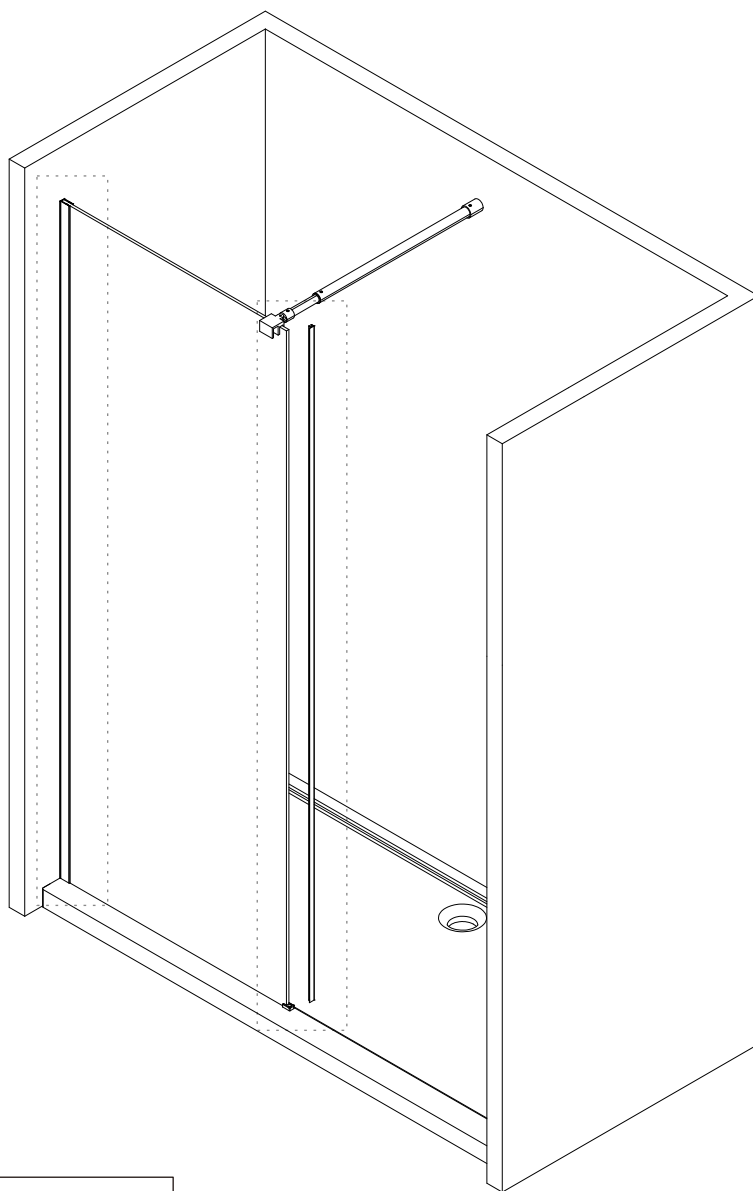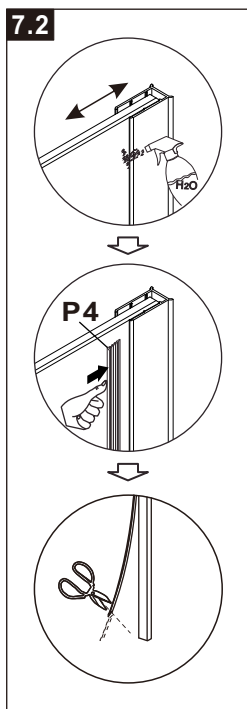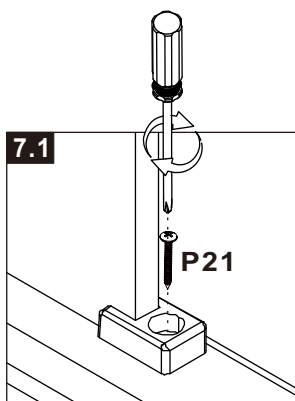P21
ST4x25MM










8 Sliding Door Assembly


! Leftward Open

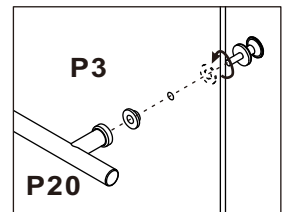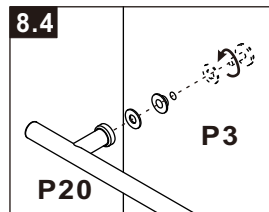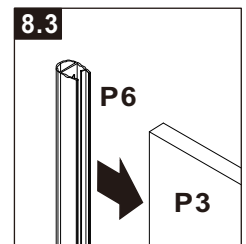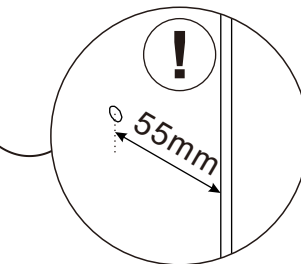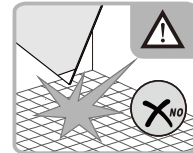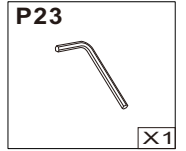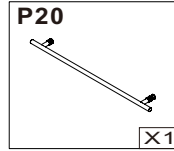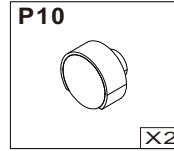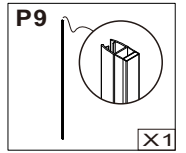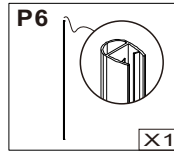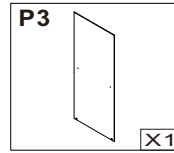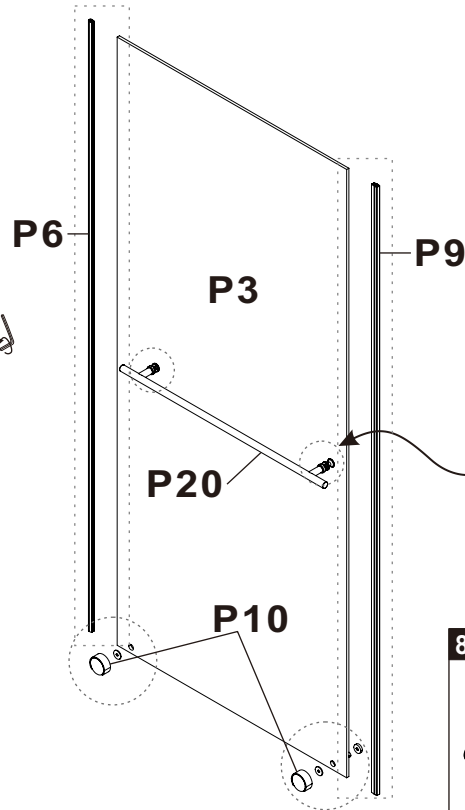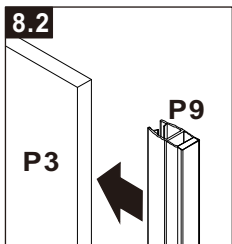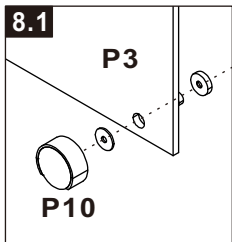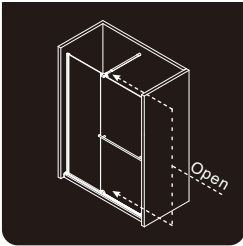






! Rightward Open

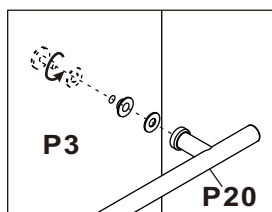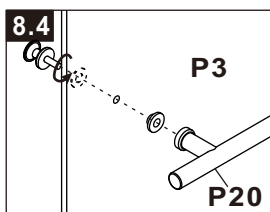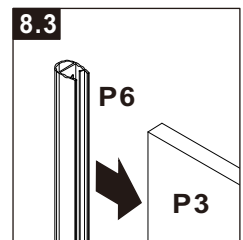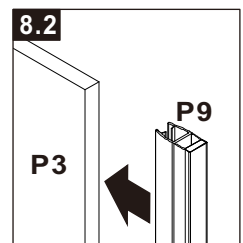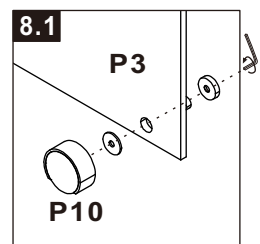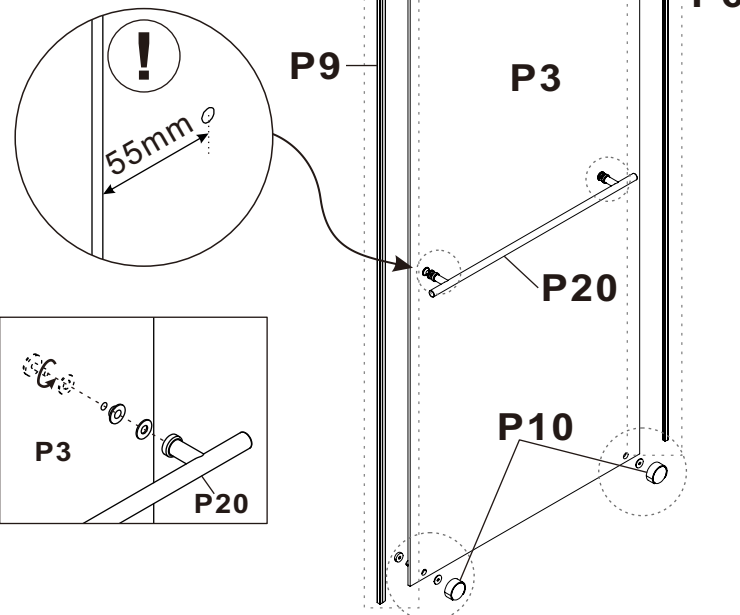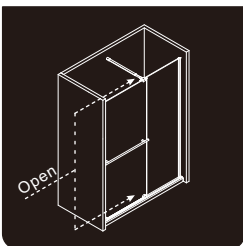





9 Bottom Seal Installation

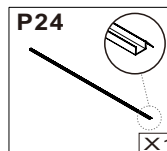

! Leftward Open

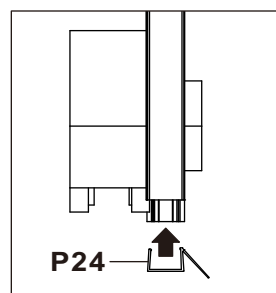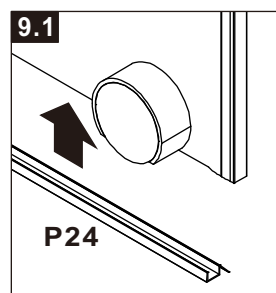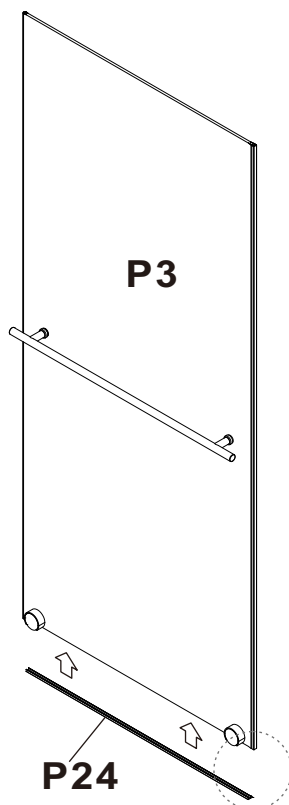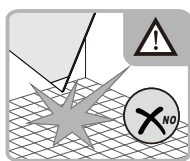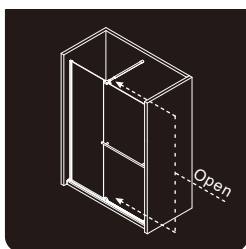



! Rightward Open

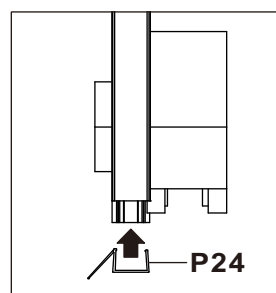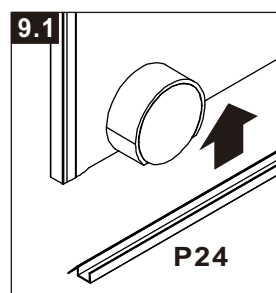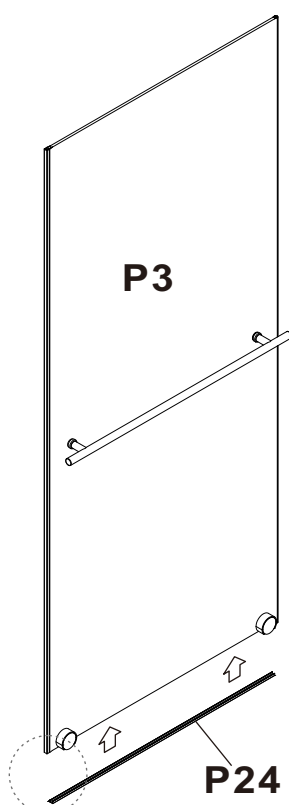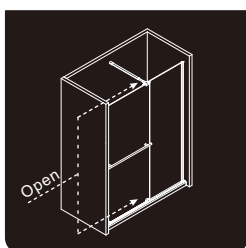

A

Option A:
For wall to wall installation,
shower sliding door



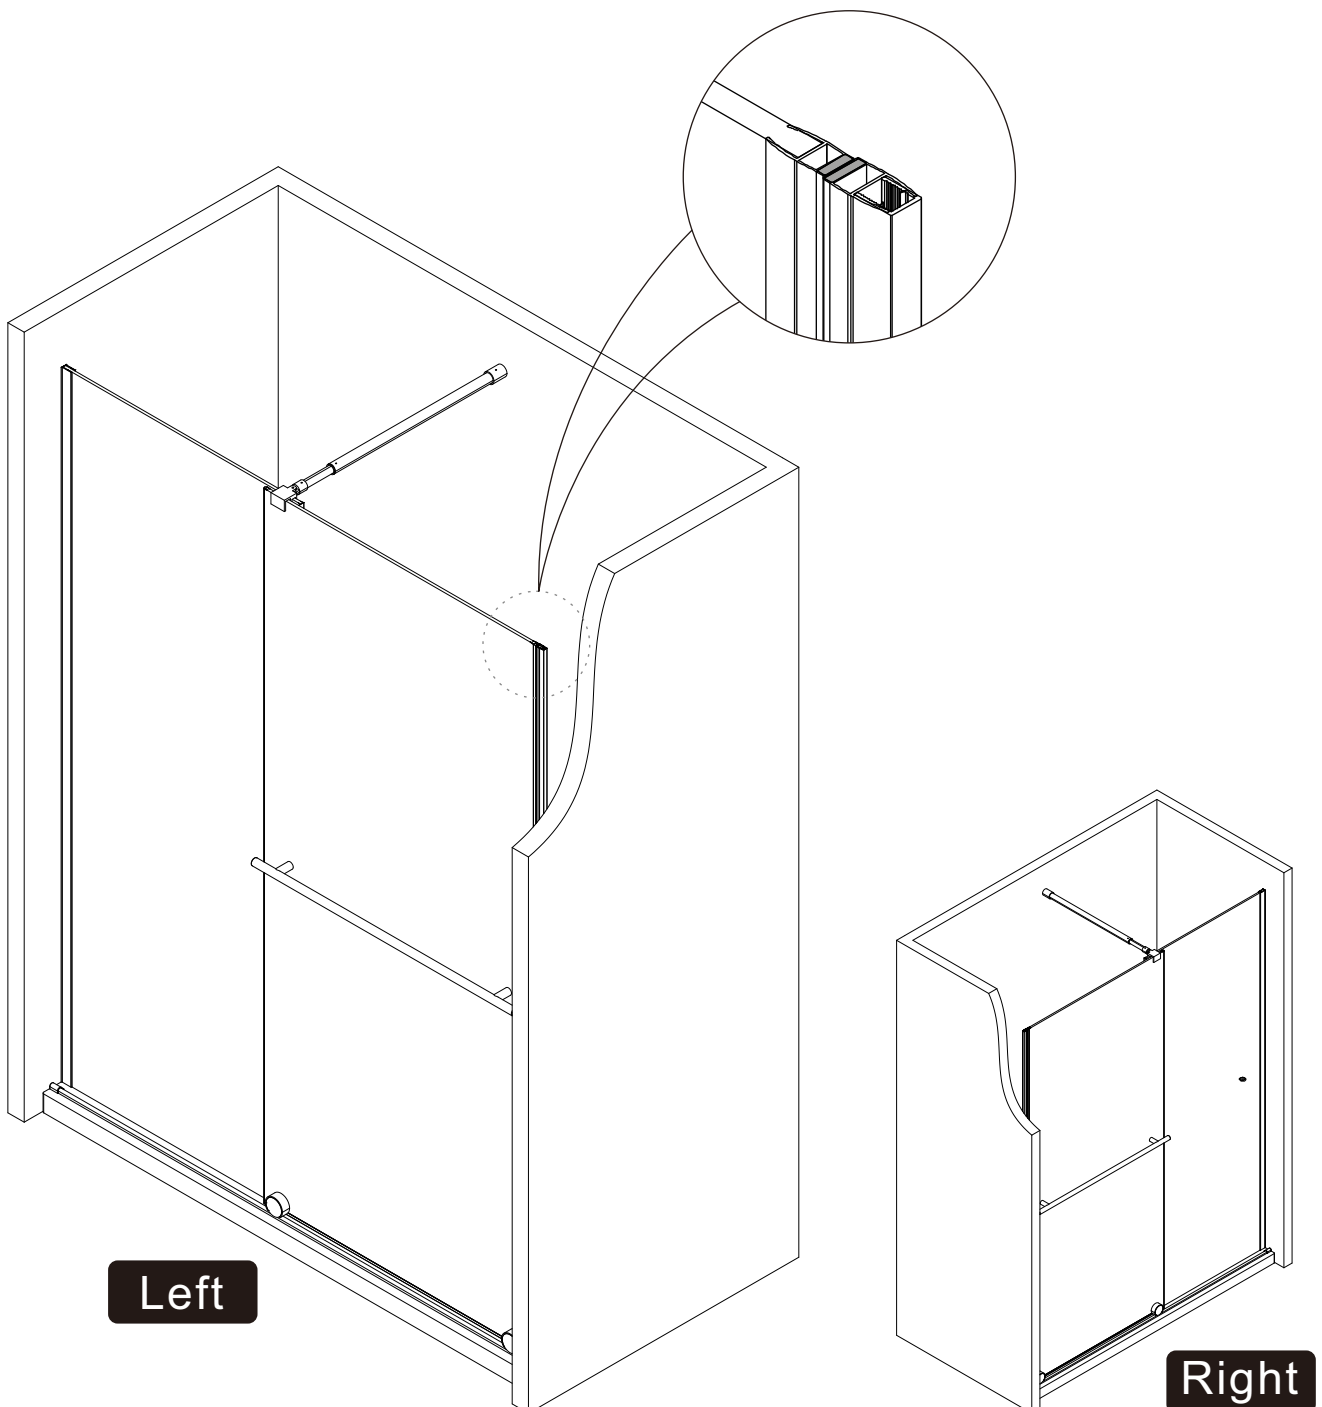


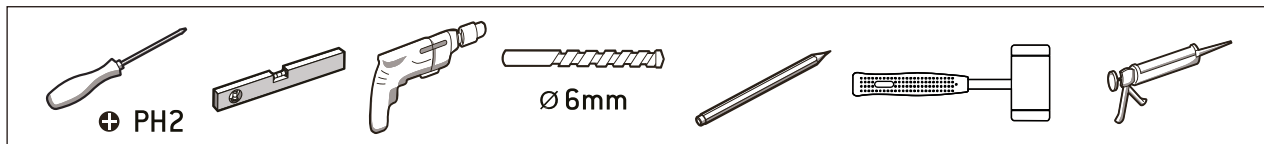

12

10 Door Threshold Installation


A

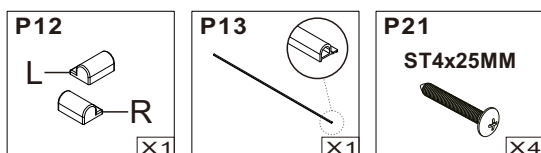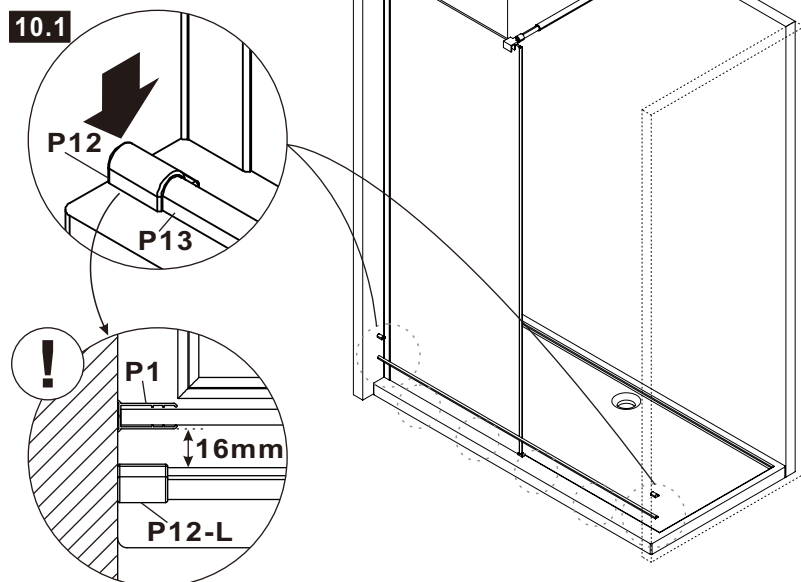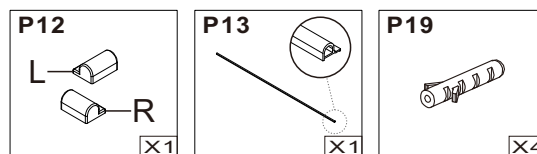


Door Threshold Installation

11


A

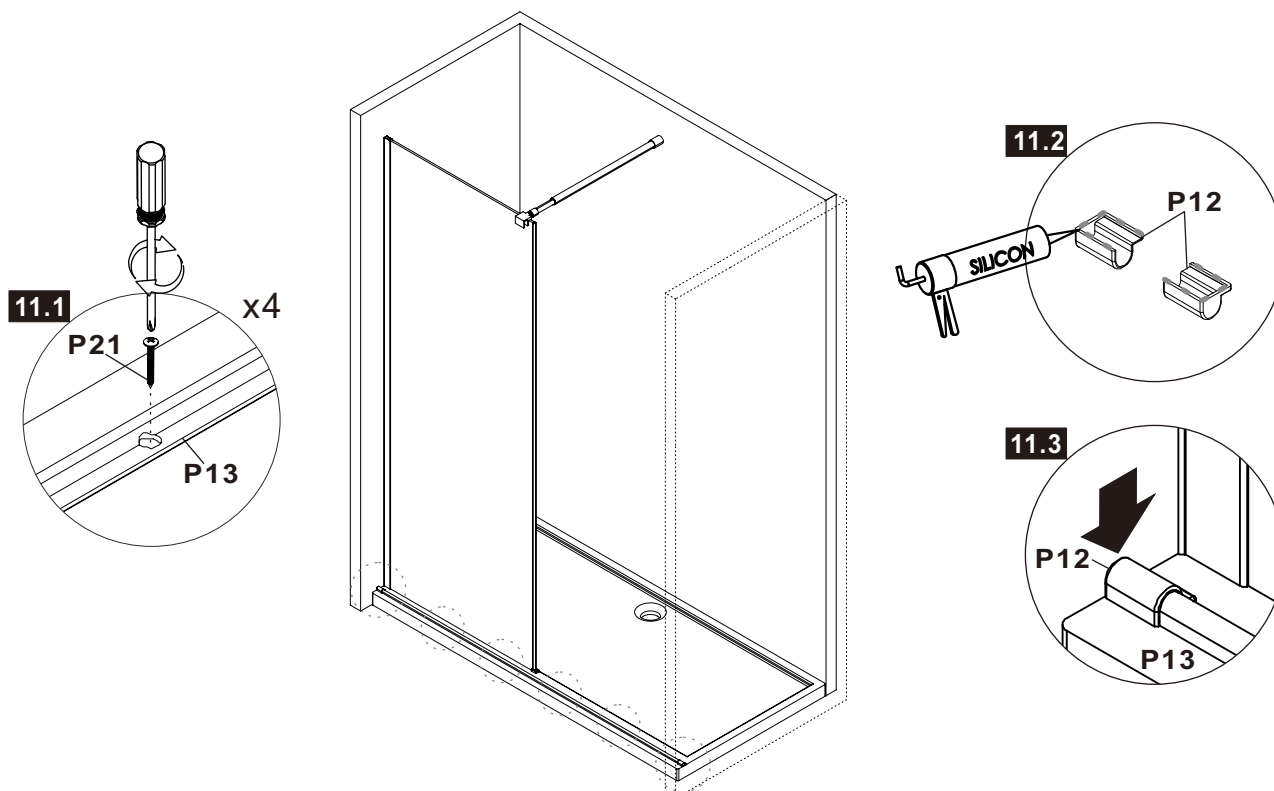

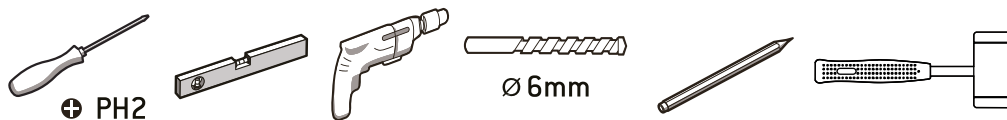


12 Sliding Door Installation

A

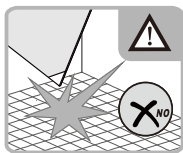

12.2


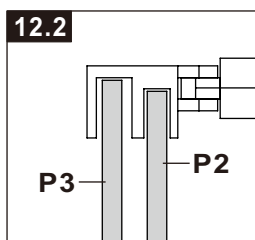


P23

#4
#2.5

X1


12.1

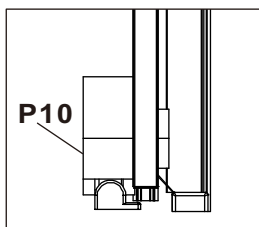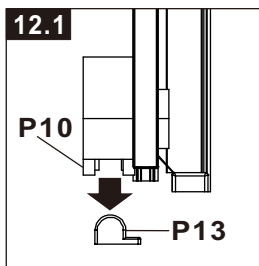



P2

P3

12.3

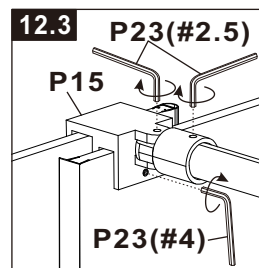

12.4

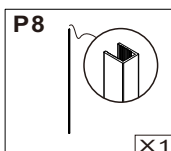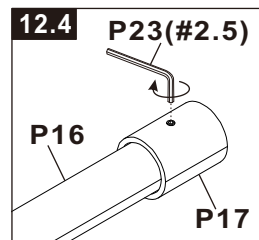

X1

P18
ST4x30MM

X4


P19




X4

Wall Profile Installation 13


A

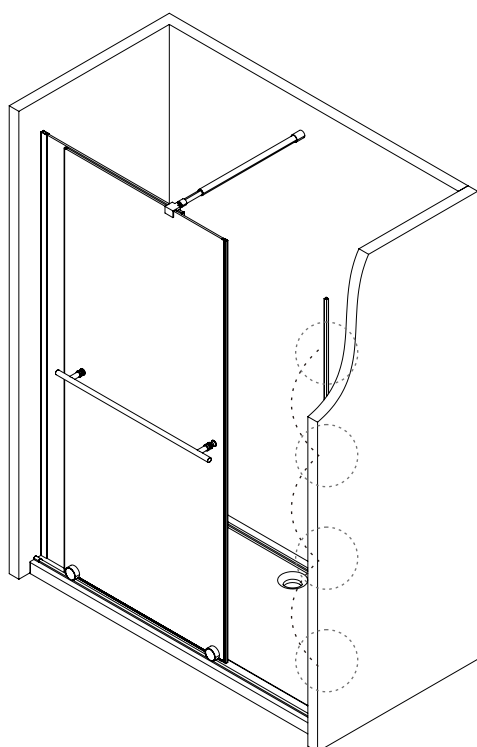

13.1

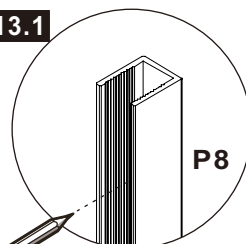


13.2

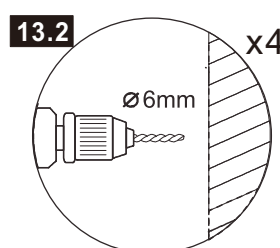


x4

13.3

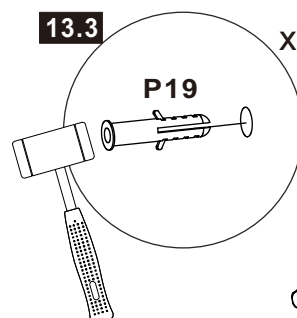

x4


13.4

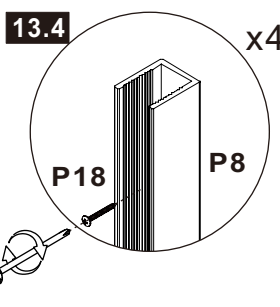




x4



14 Wall Profile Installation

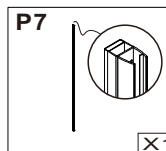



A

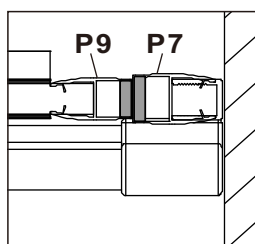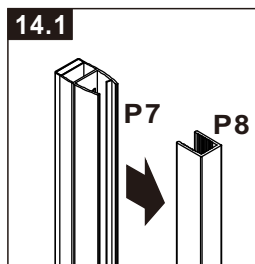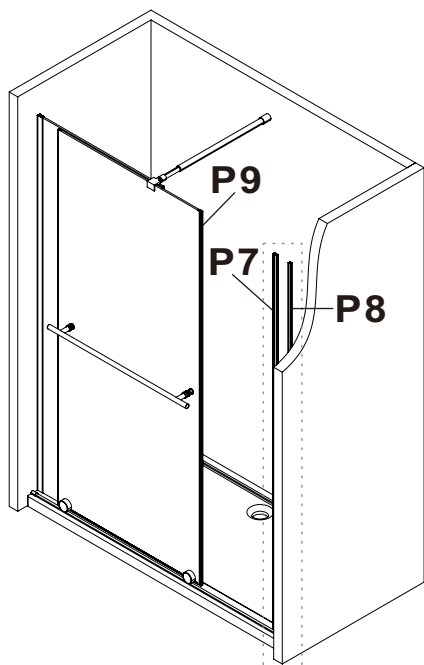

Make sure that the two magnetic strips P7 and P9 can fit tightly.

15

A

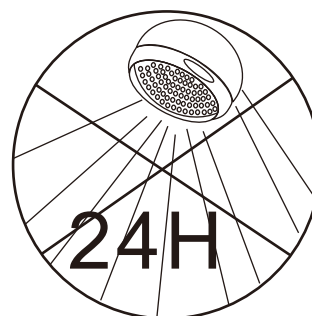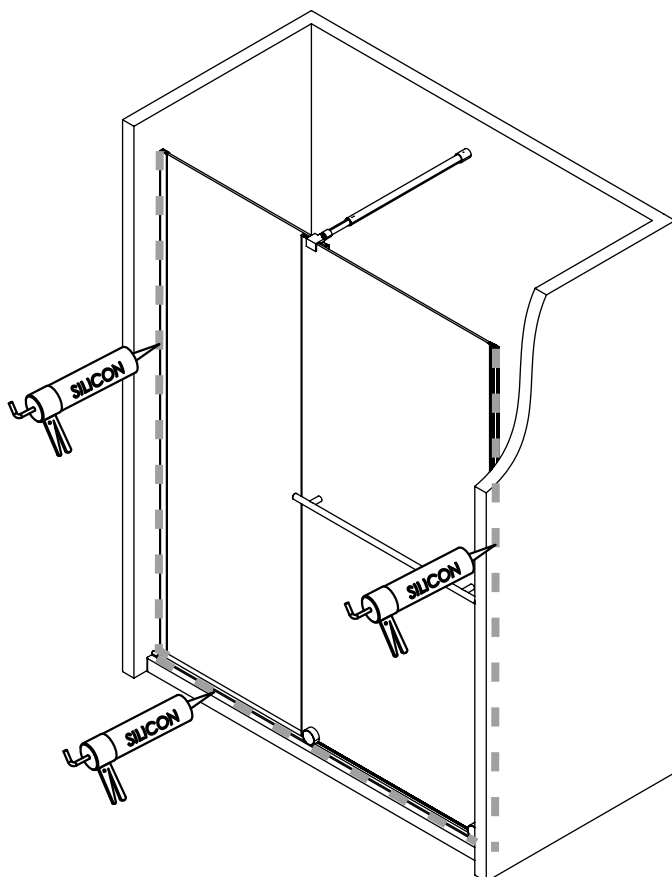


B

Option B:
For 1-side wall shower walk-in
wetroom


Left




Option B:
For single wall
installation-Walk-in
Shower Screen Door

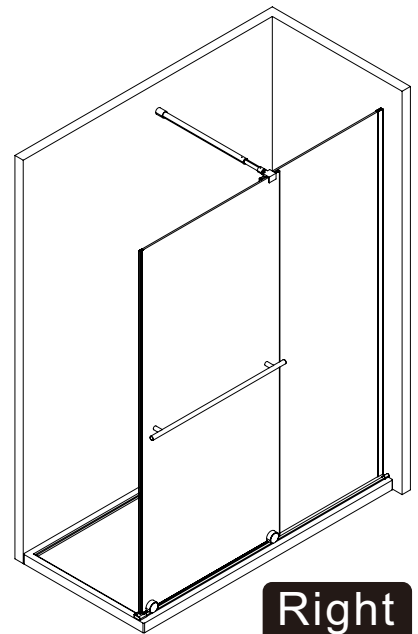




Right

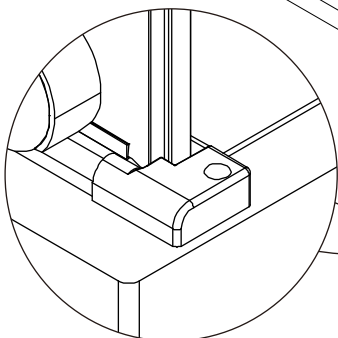

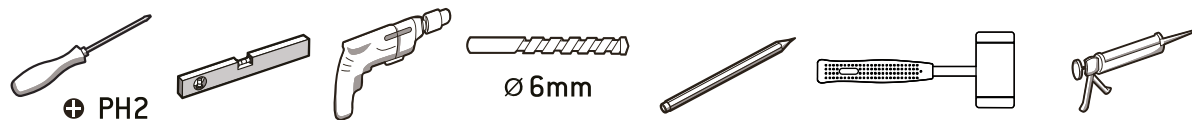


10 Door Threshold Installation

B

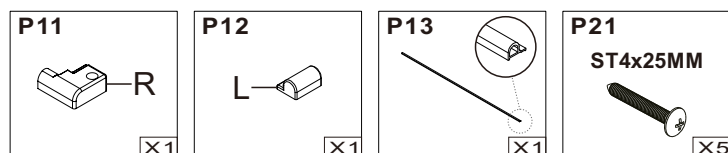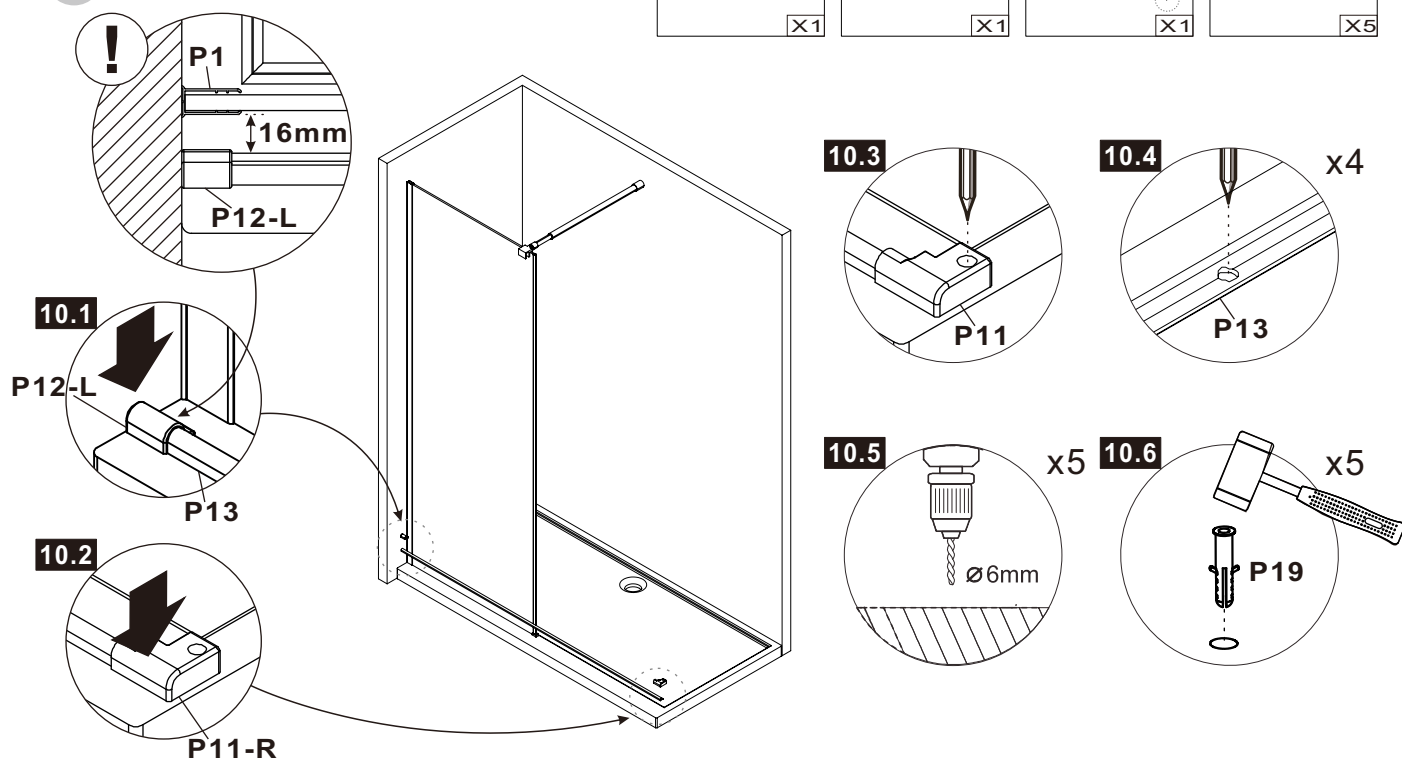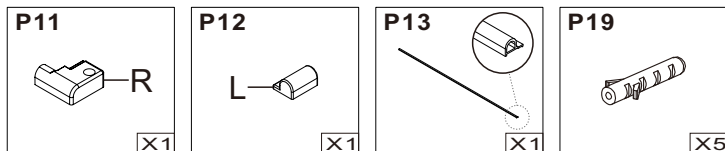









Door Threshold Installation

11 B

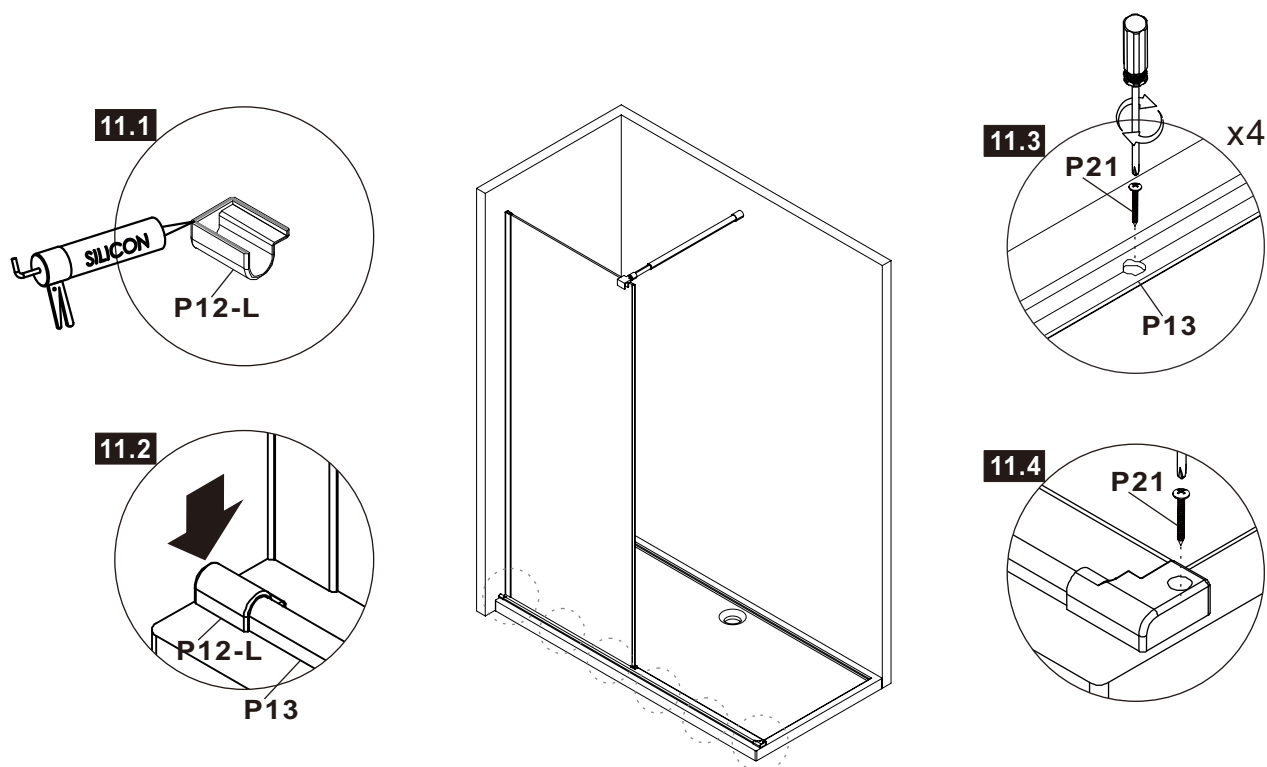



12 Sliding Door Installation

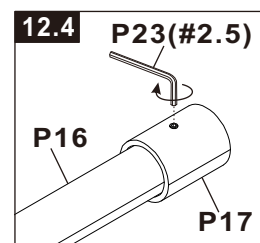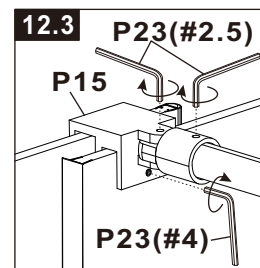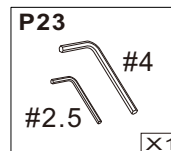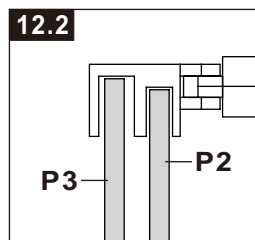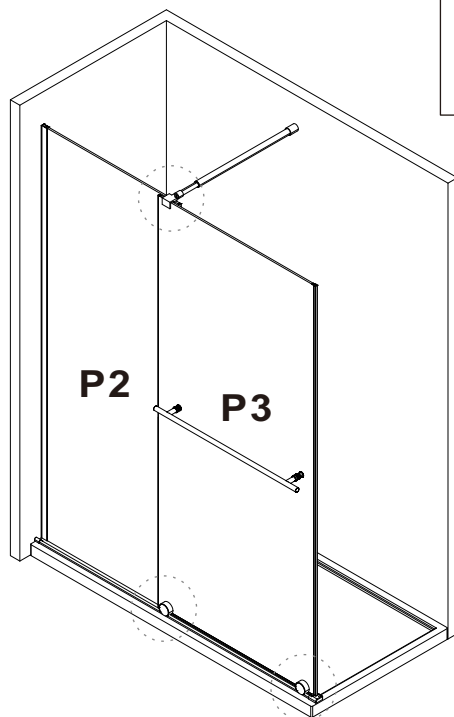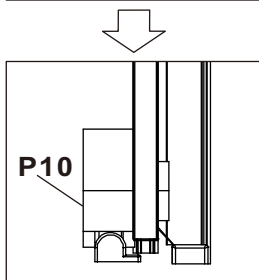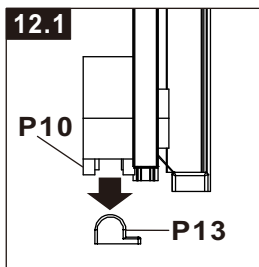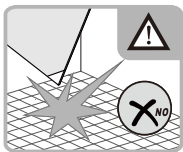B**13****B**