
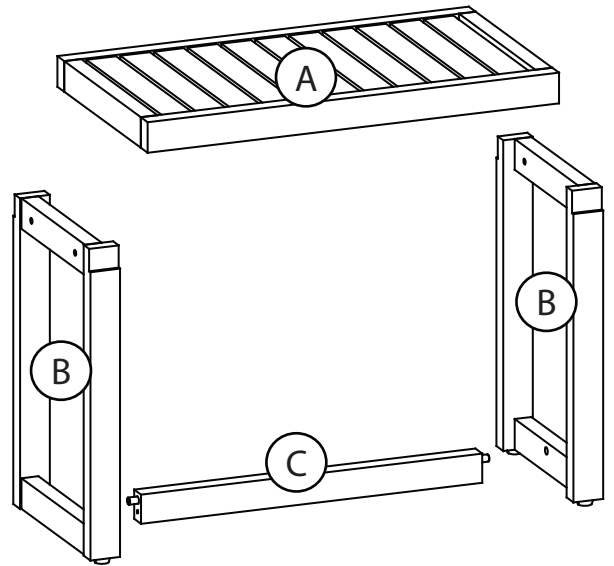


## Assembly Instruction


### 18" White Oak Shower Bench

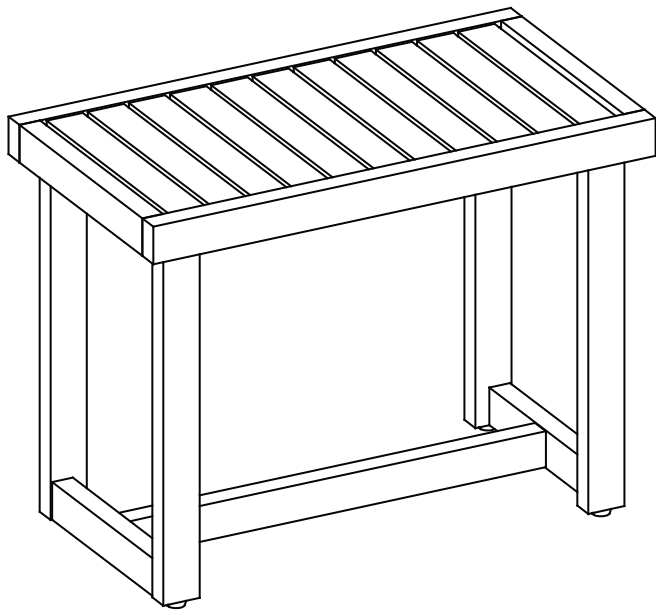

#### Parts List


(A)	Seat	1 Pc.
(B)	Side Panel	2 Pcs.
(C)	Crossbar	1 Pc.

#### Hardware




x 2

F6 x 1 1/4"




x 4

JCB M6 x 30

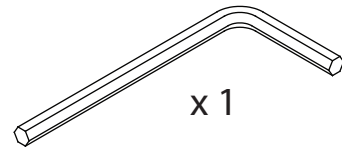

x 1

Allen Key

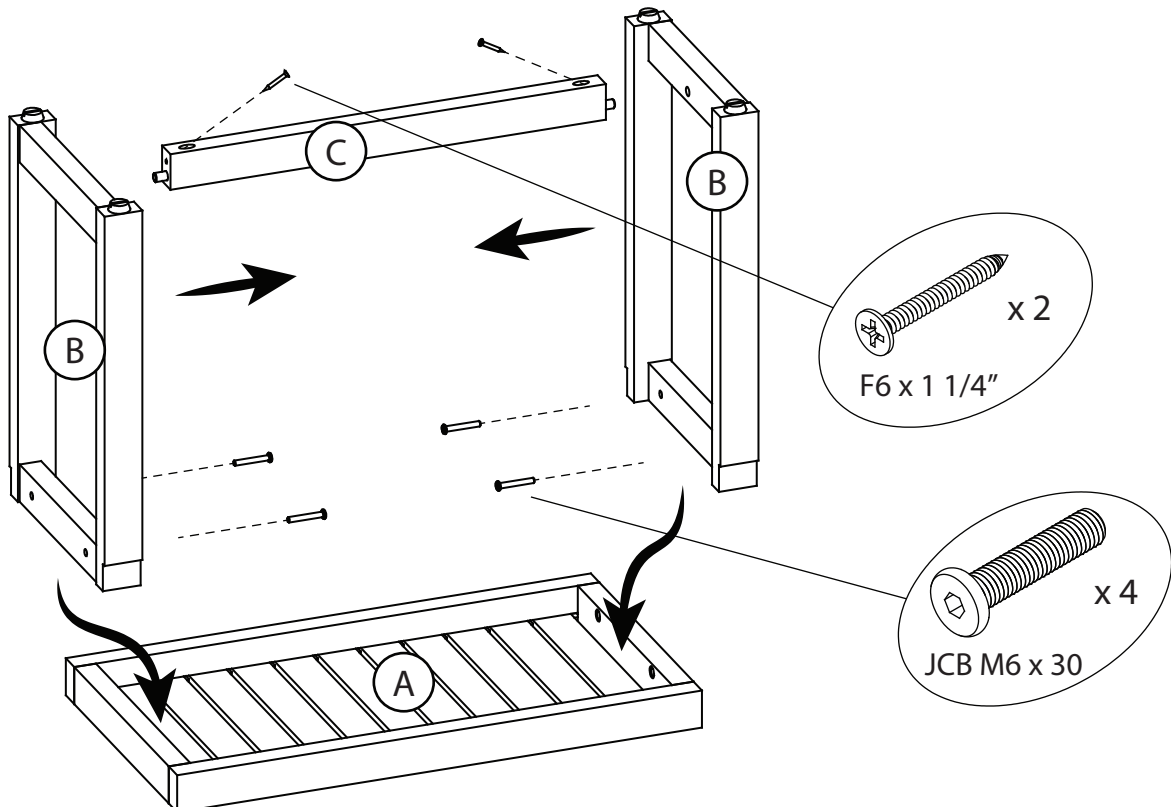

Assembly the unit by attaching the Seat (A), Side Panels (B) and Crossbar (C) together by using Screw JCB M6 x 30 and Screw F6 x 1 1/4" as shown in diagram.