



Arc-leg four-door cabinet

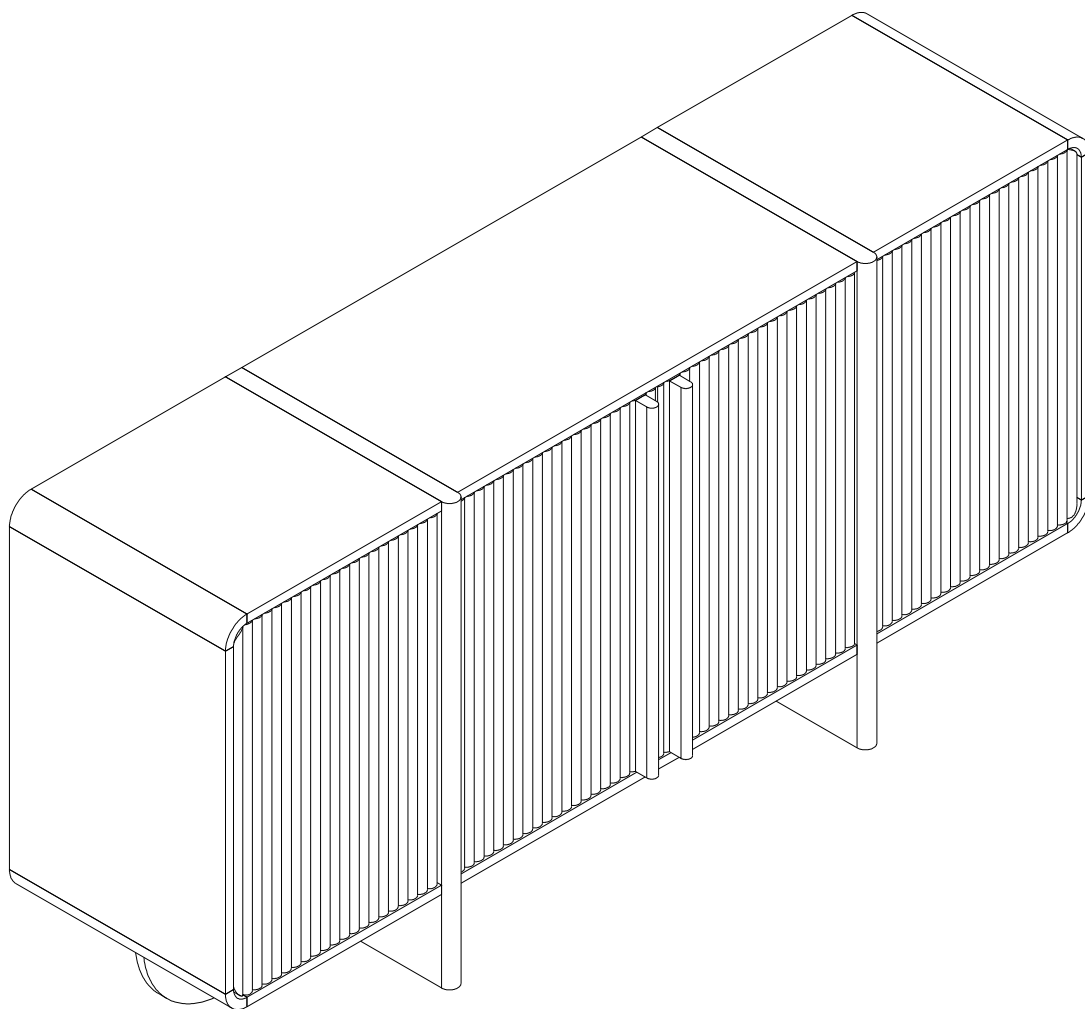


Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

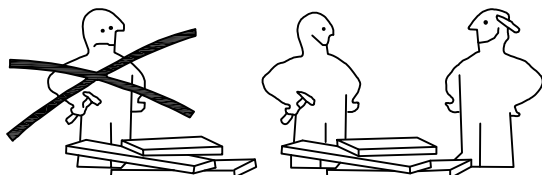


What' included


Code	Description	Qty
A	Cam Bolt M6X35MM	78
B	Cam Lock15X10MM	78
C	Wooden Dowel M8X30MM	72
D	Screw M4X40MM	4
E	Screw M3.5X14MM	2
F	Hole position sticker	78
G	Ron absorption	2
H	Nylon Strap	2
I	Shelf Holder	12
J	Anchor	2
K	Screw M3.0X12MM	12
L	Sheet iron	4
M	Door Rebound Device Holder	2
N	Door Rebound Device	2
O	Cam Bolt M4X22MM	8
P	Phillips screwdriver	1
Q	Door latch	8
R	Screw M3.0X14MM	4

The Hardwares


(A)




(B)



(C)



(D)




(E)




(F)



(G)



(H)



(I)




(J)




(K)




(L)



(M)



(N)



(O)



(P)



(Q)



(R)



IMPORTANT:

- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Left panel	1
3	Right panel	1
4	Bottom panel	1
5	Left bottom plates	1
6	Left Side Panel	1
7	Right Side Panel	1
8	Left vertical platel	1
9	Right vertical platel	1
10	Solid wood handle	2
11	Left and right movable shelf	2
12	The movable middle shelf	1
13	Left strengthening board	1
14	Right strengthening board	1

Included Accessories


Code	Description	Qty
15	Intermediate reinforcement strip	2
16	Back Cross Brace	2
17	Back Cross Brace	2
18	Back Cross Brace	2
19	Backboard	2
20	Backboard	2
21	Coaming panel	2
22	Supporting plate	1
23	Supporting plate	1
24	Curved Connecting Strip	4
25	Door panel	1
26	Door panel	1
27	Door panel	1
28	Door panel	1
29	Right bottom plates	1

The Accessoriess

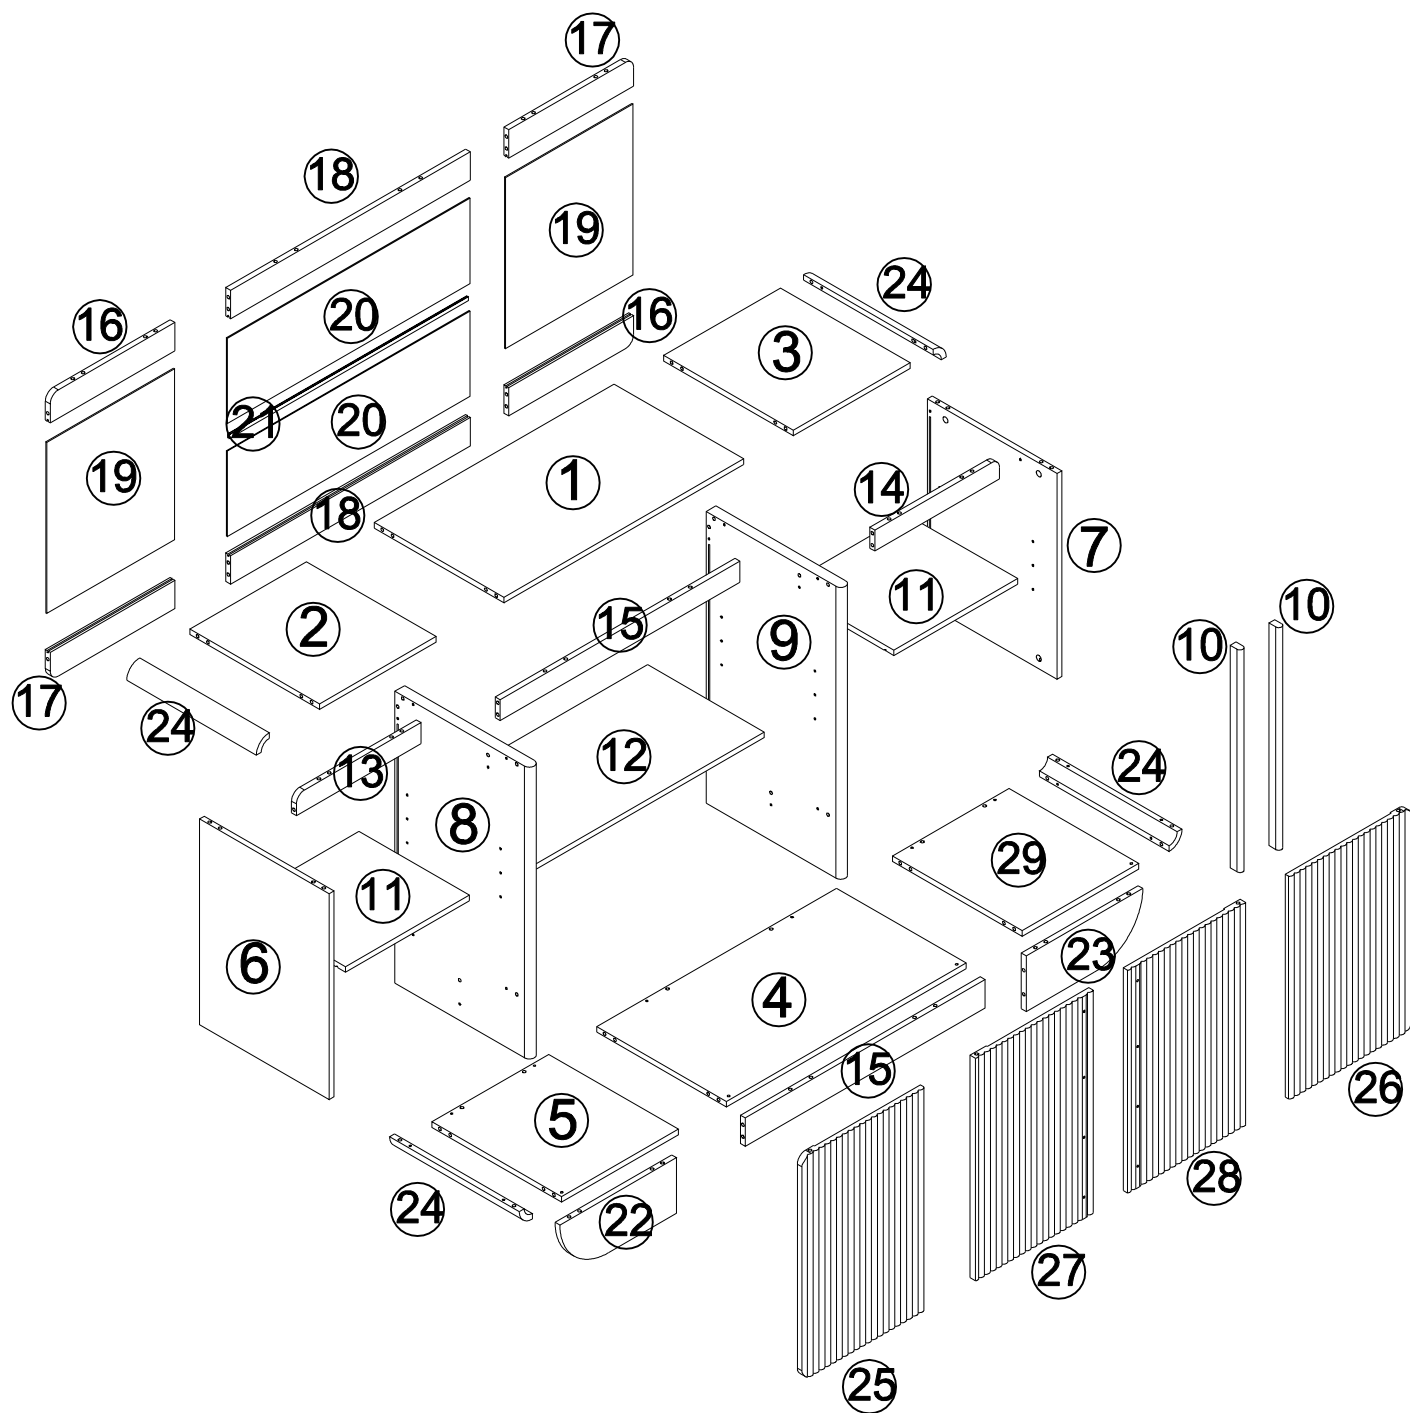


HARDWARE USAGE GUIDE

Hidden Cam Bolt/Cam Lock Usage Instructions

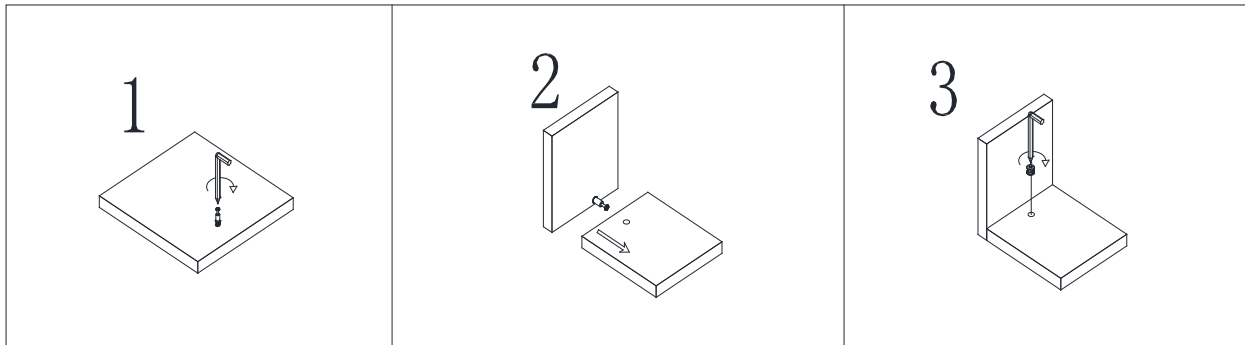


Step 1




Cam Bolt

Turn the Cam Bolt until the shoulder is firmly against the part.

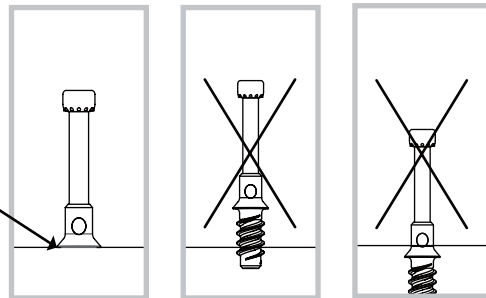


Step 2

Connect the two plates at 90 degrees.

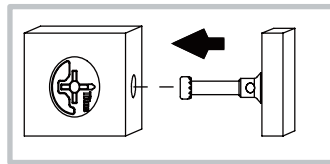


Step 3.1

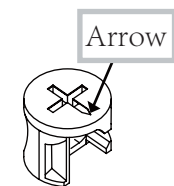


Cam Lock

Push the cam lock into the part. The arrow must point directly toward the hole on the board's edge (see diagram).







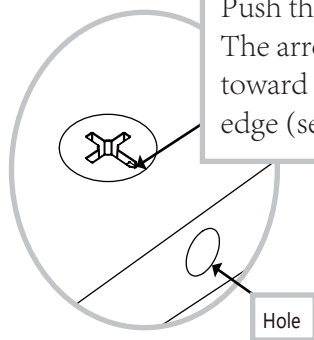


Step 3.2








Install the cam lock nut and fix it by rotation.

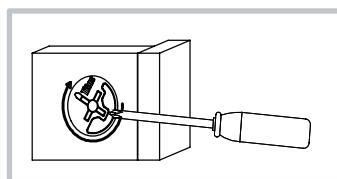


Step 1

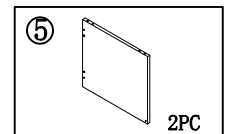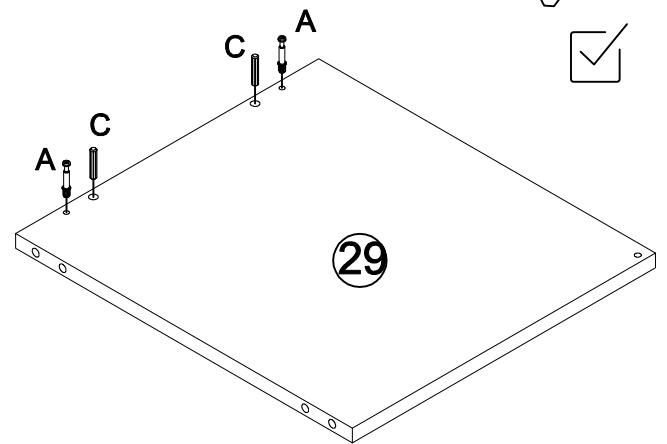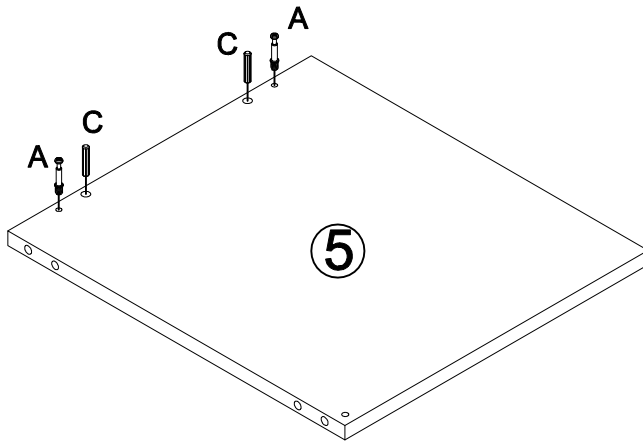
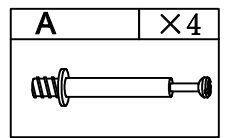
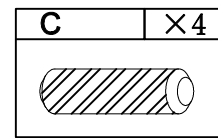
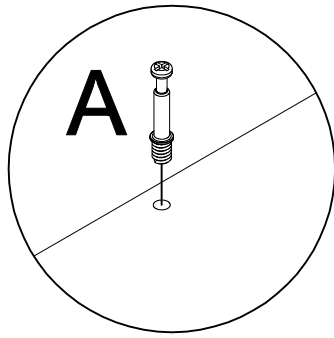


Step 2

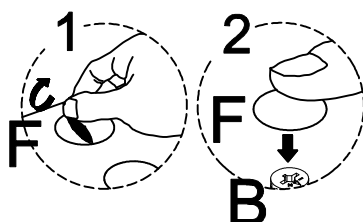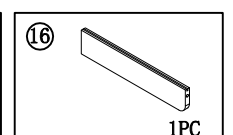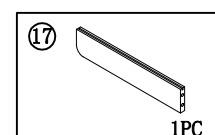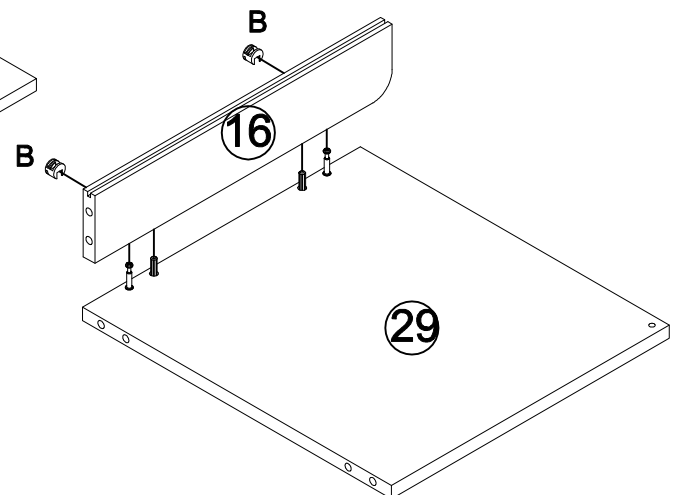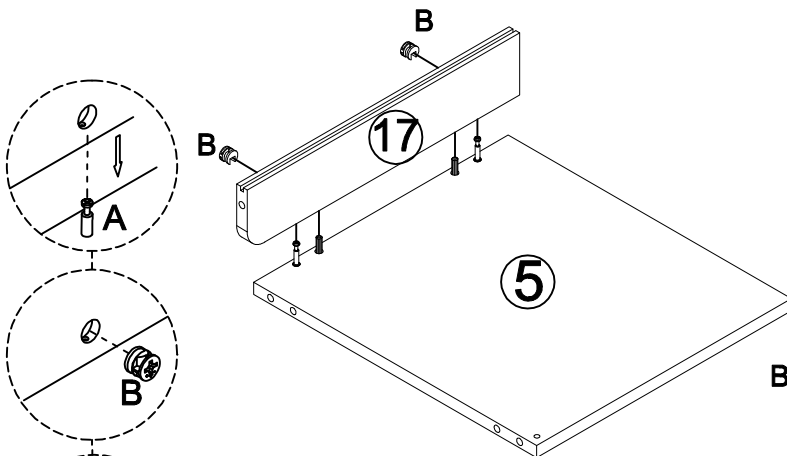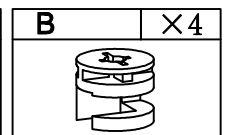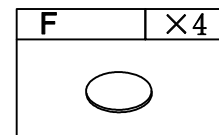










Step 3

C	×4	A	×4
			




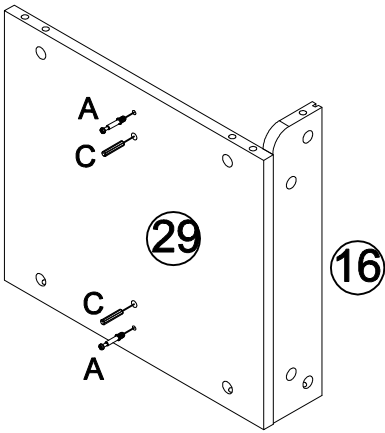
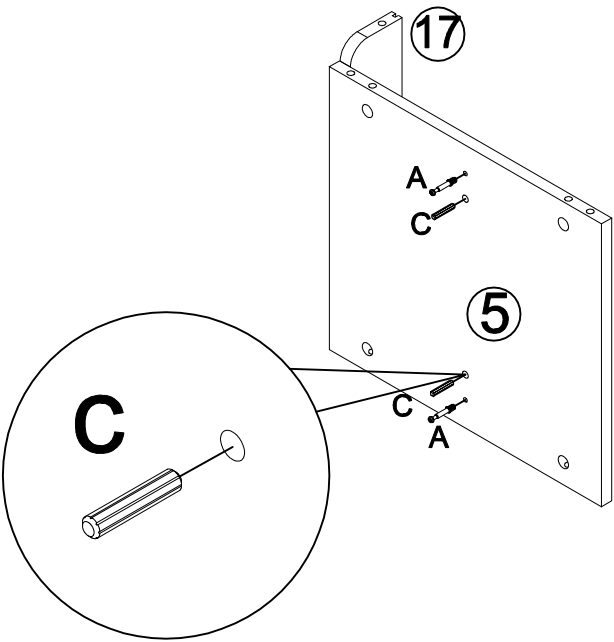




Step 4









F	×4	B	×4
			

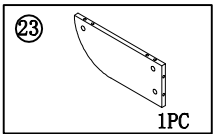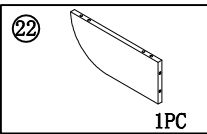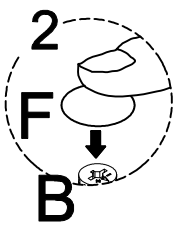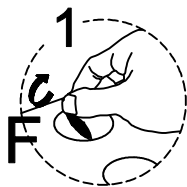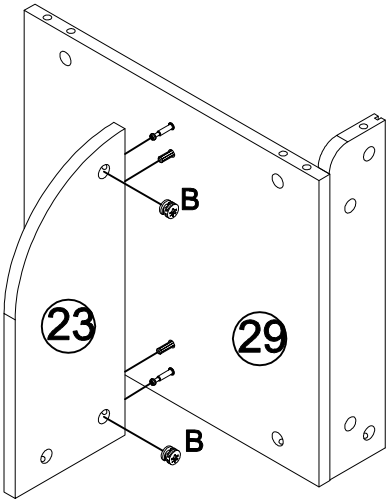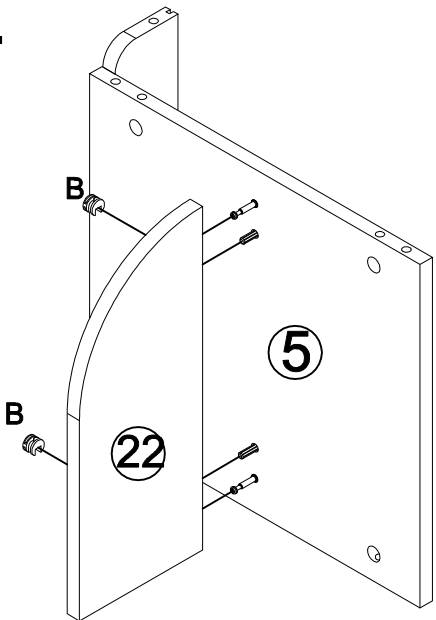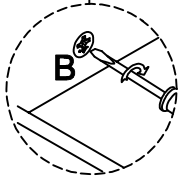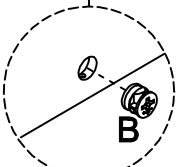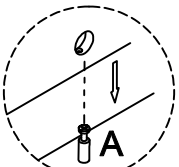


Step 5

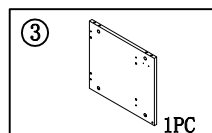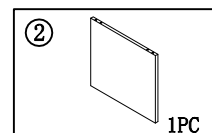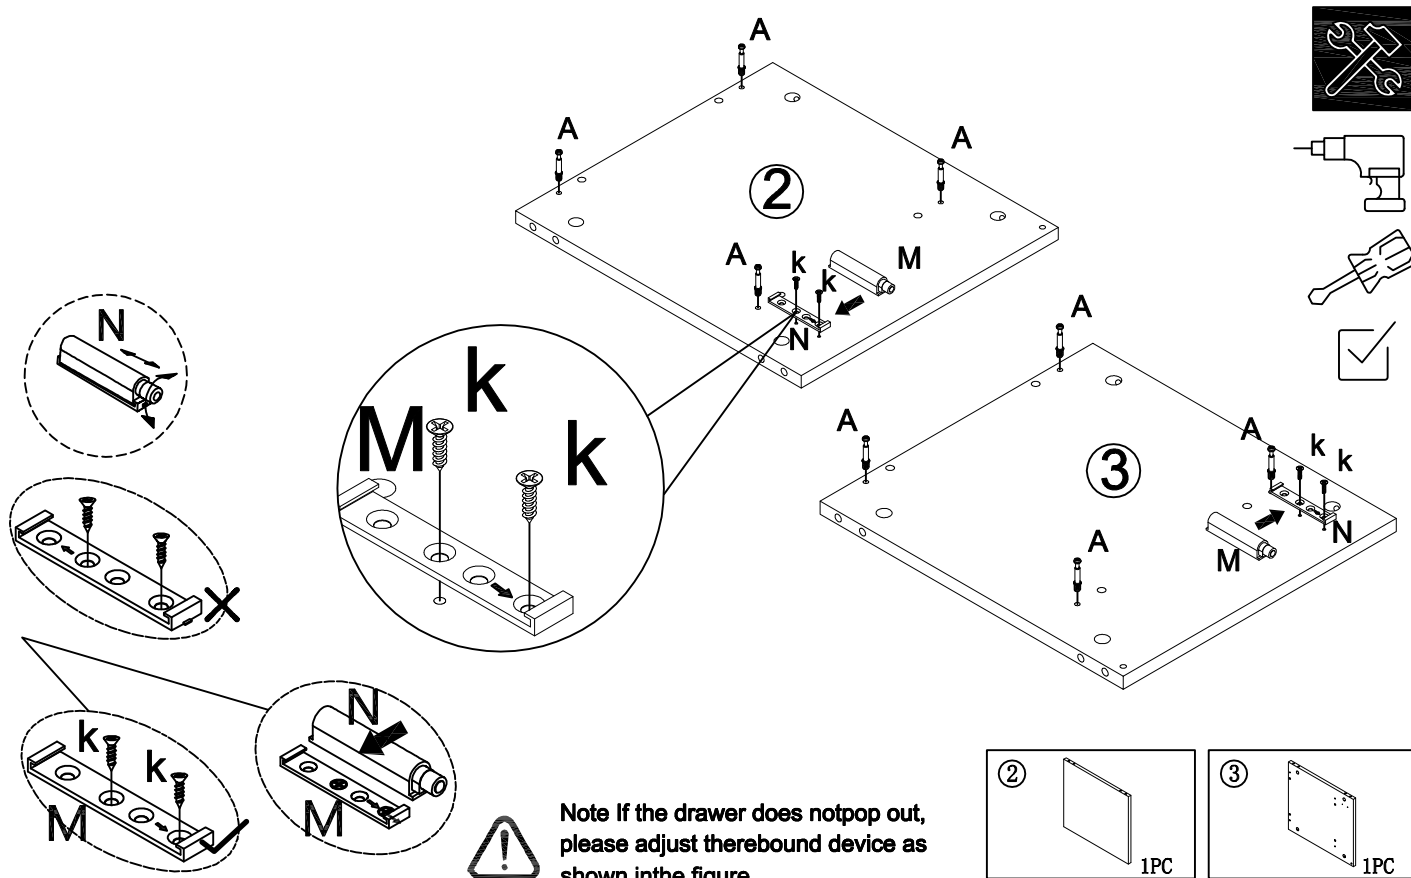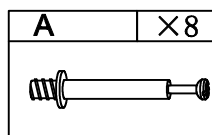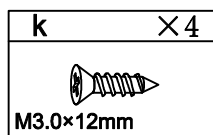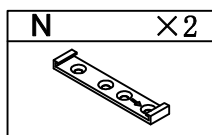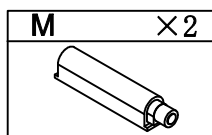




Step 6

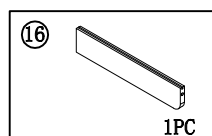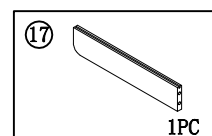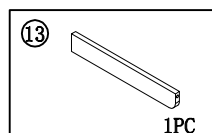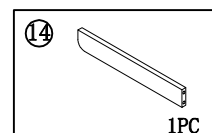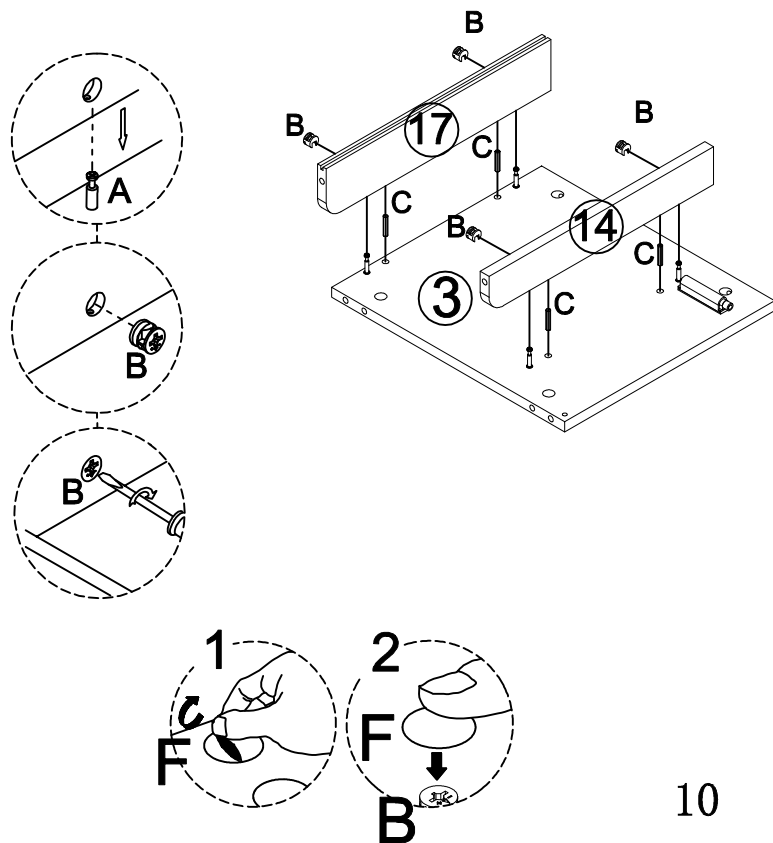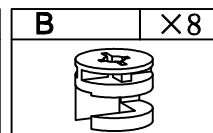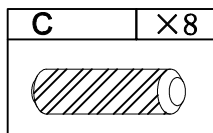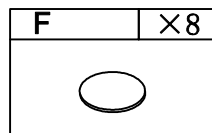






Step 7

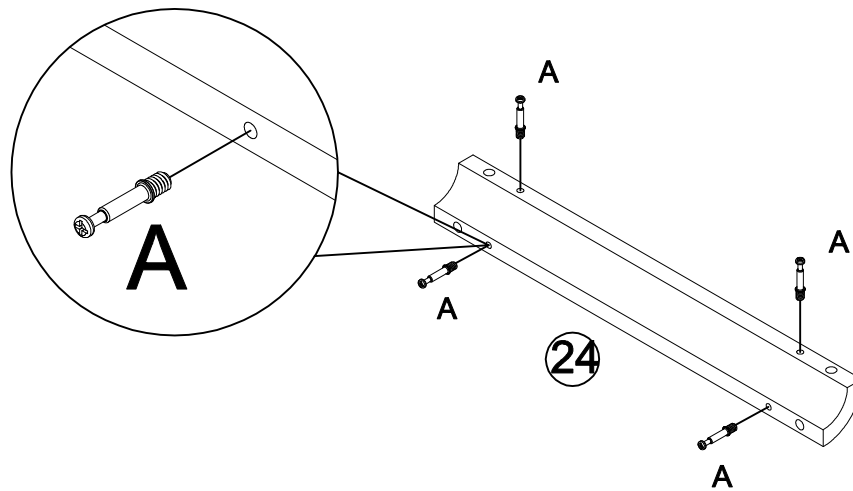

× 4

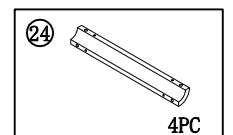

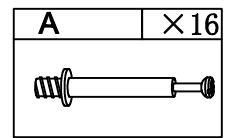


Step 8

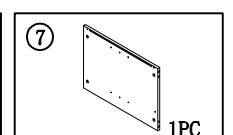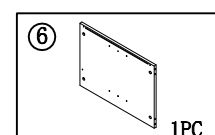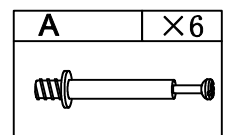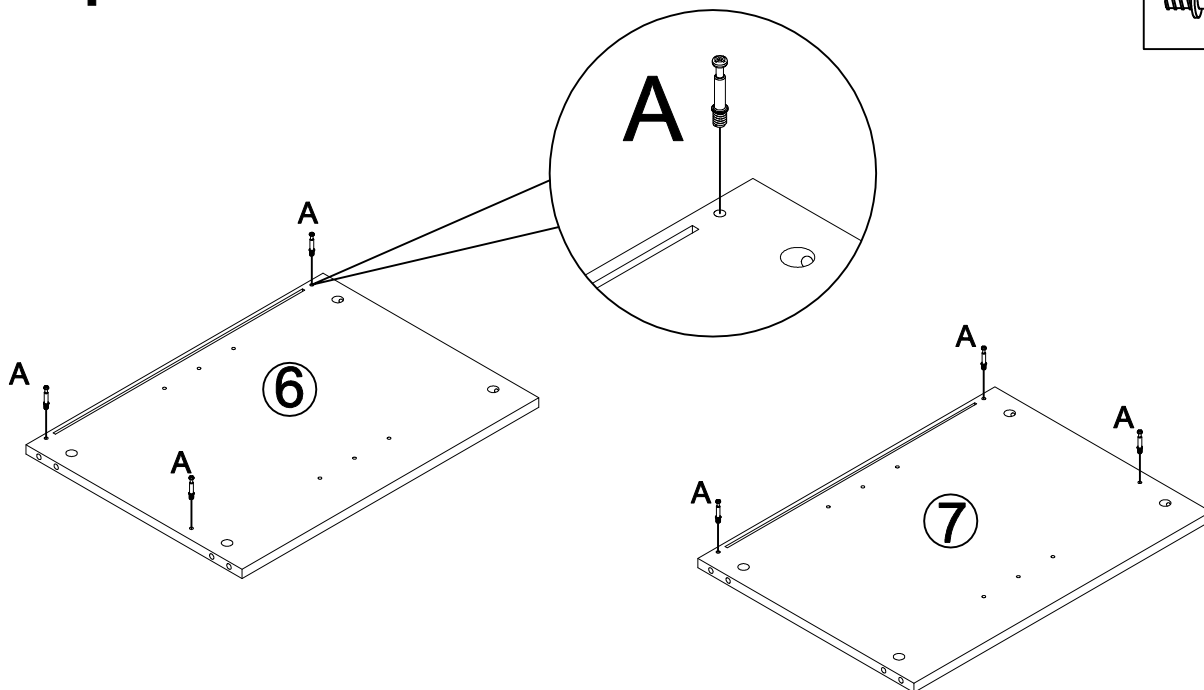




Step 9

F	X8	C	X8	B	X8
					

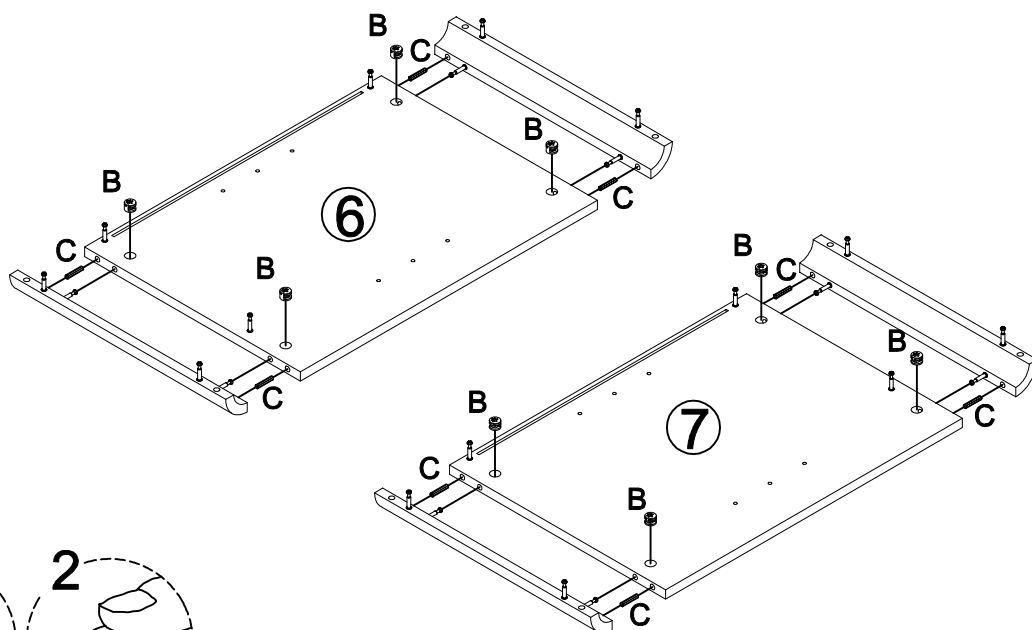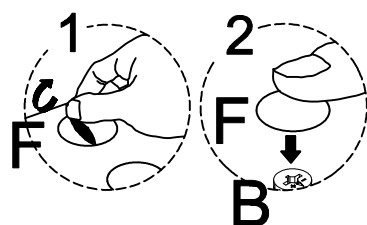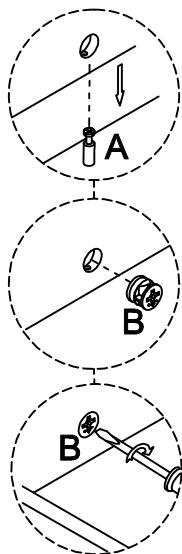




Step 10

F	X7	C	X4	B	X7
					

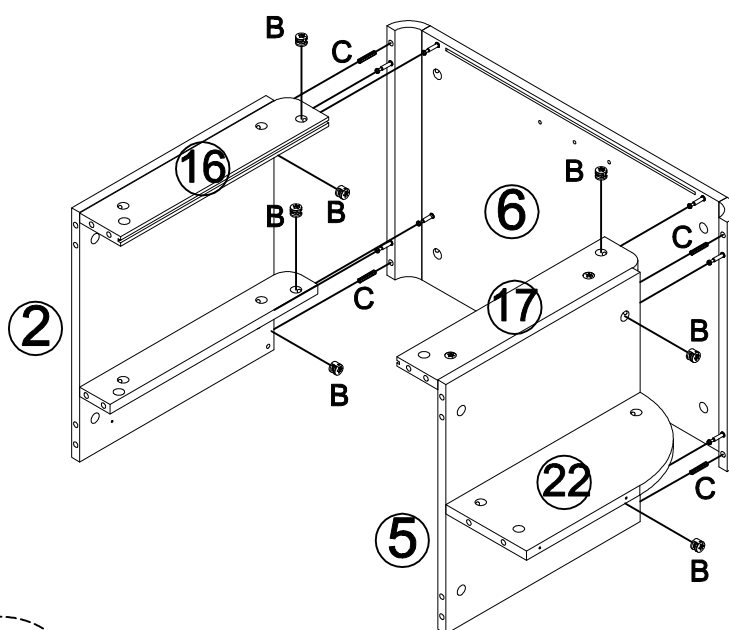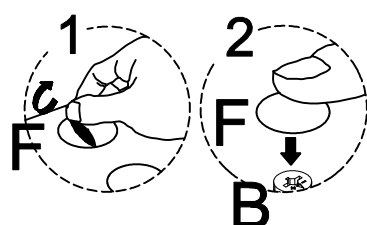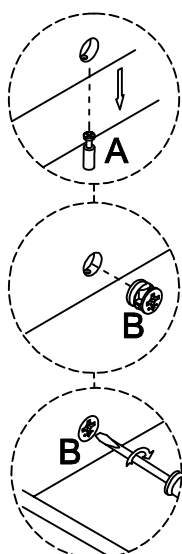




Step 11

F	×7	C	×4	B	×7
					

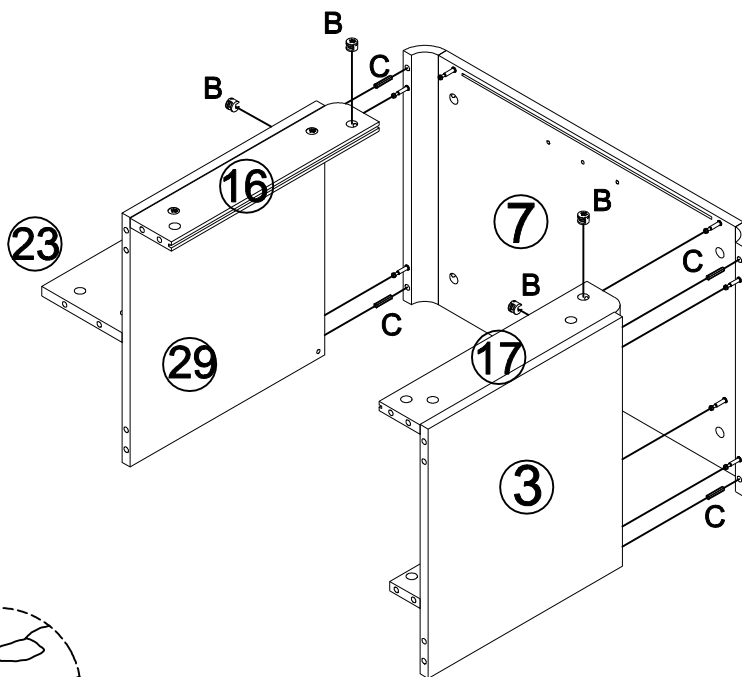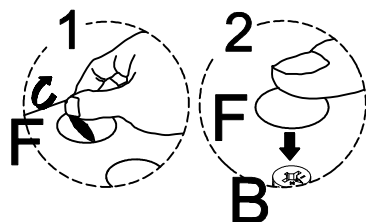
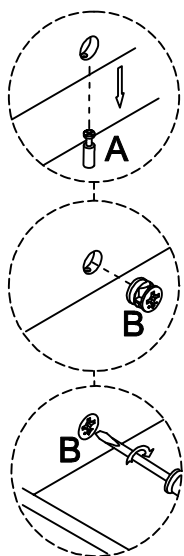





Step 12

Please insert the back panel 19 into the slot correctly.

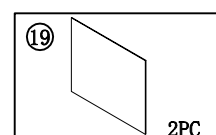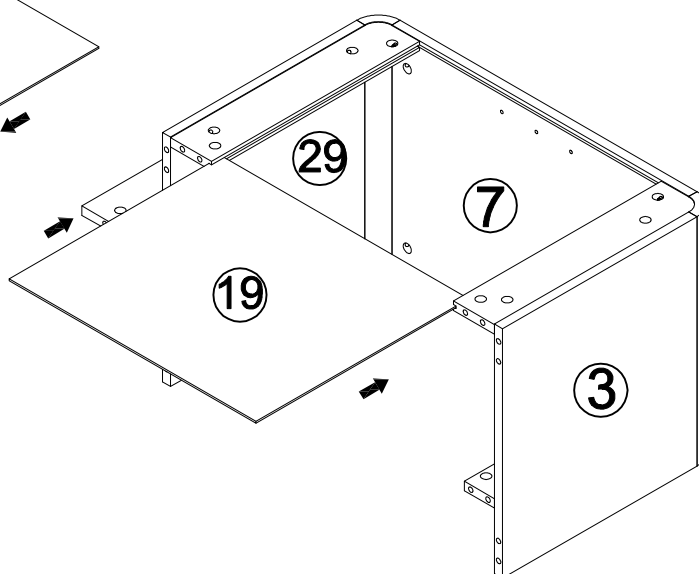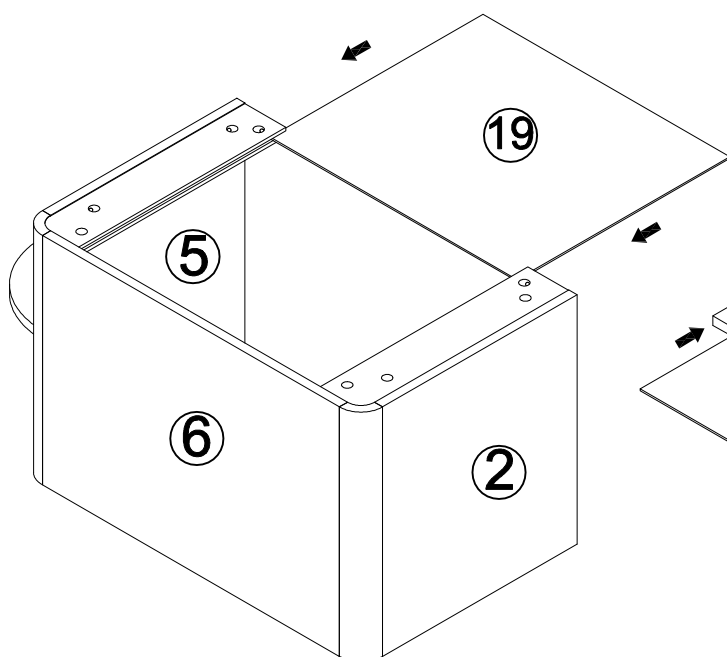






Step 13

G	×2	R	×4	C	×4	A	×4
		 M3.0×14mm					

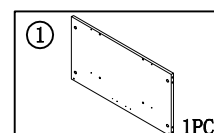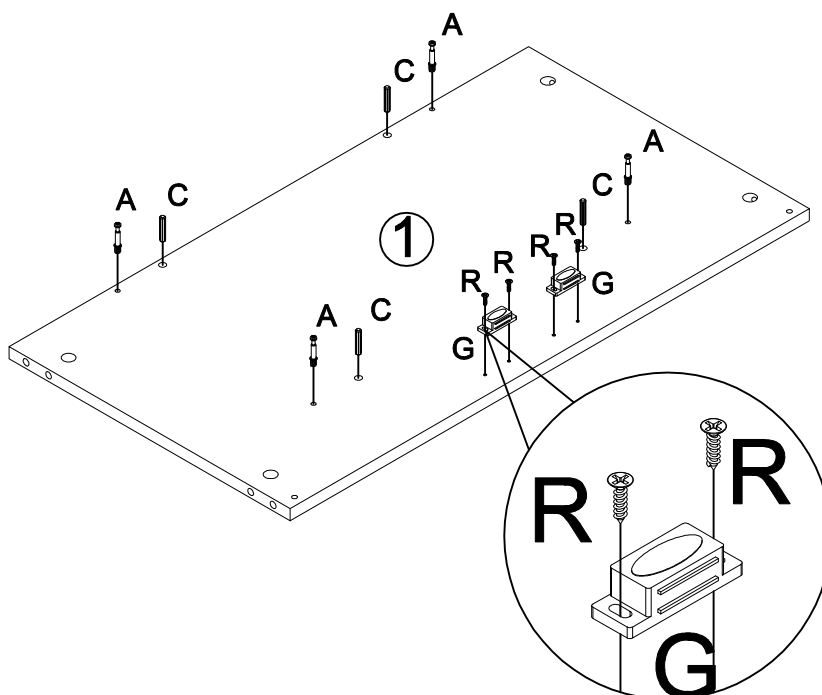








Step 14

F	×4	B	×4
			

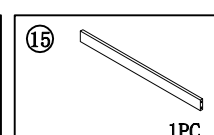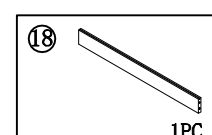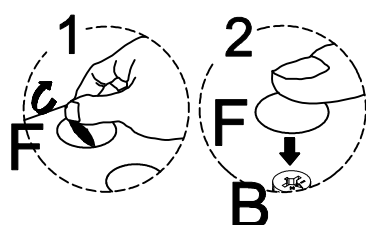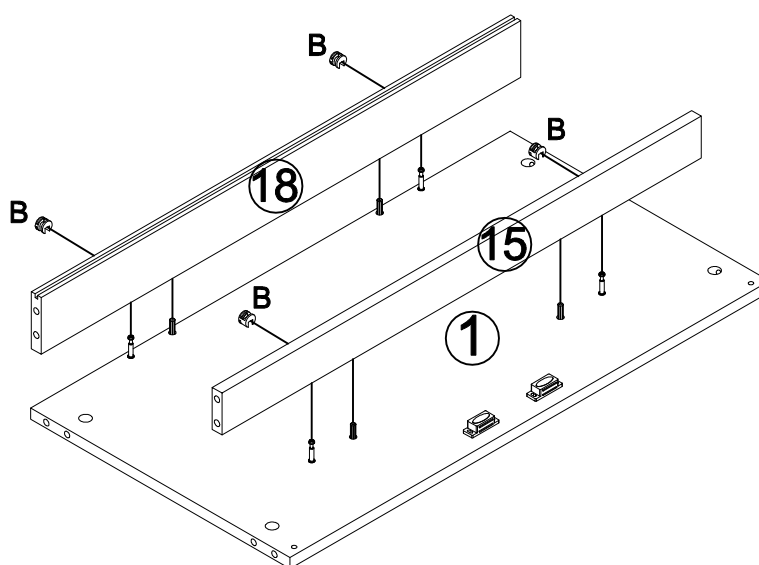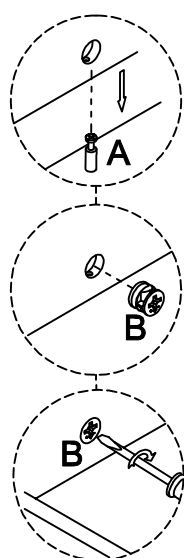








Step 15

F	×2	C	×2	B	×2	A	×2

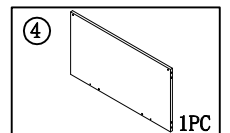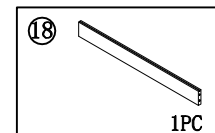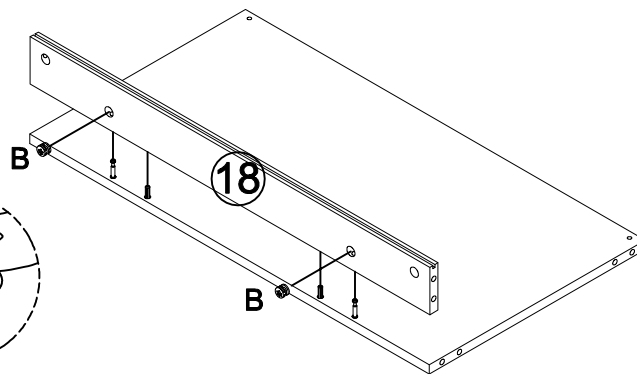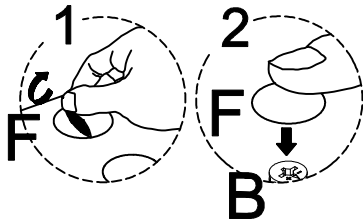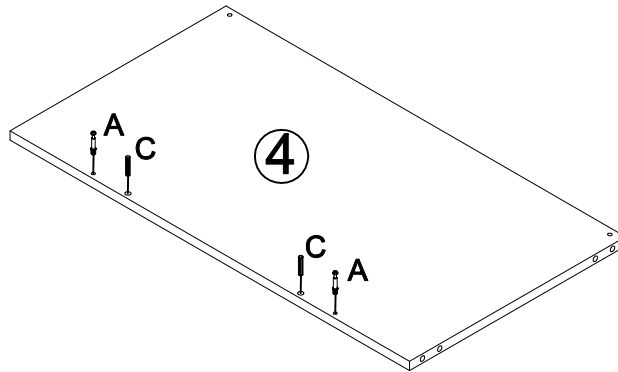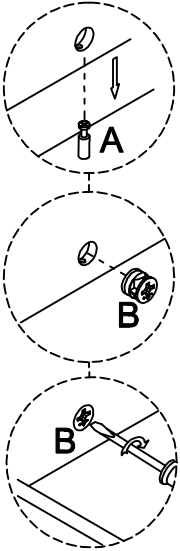







Step 16

F	×2	C	×2	B	×2	A	×2

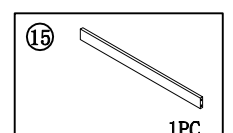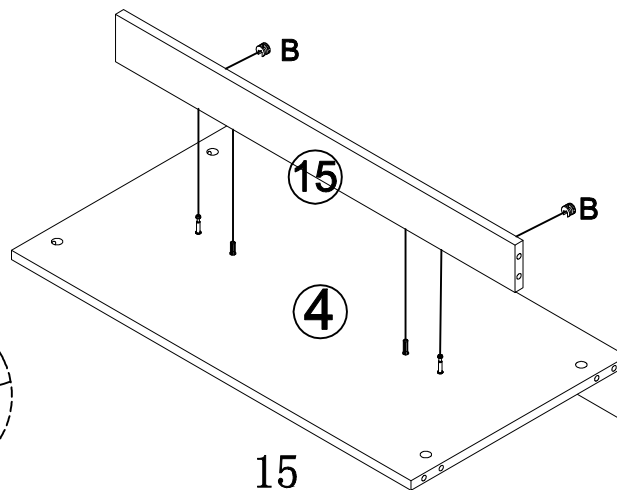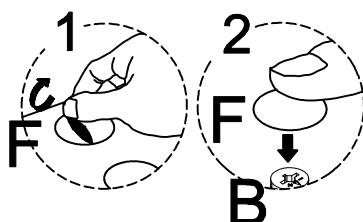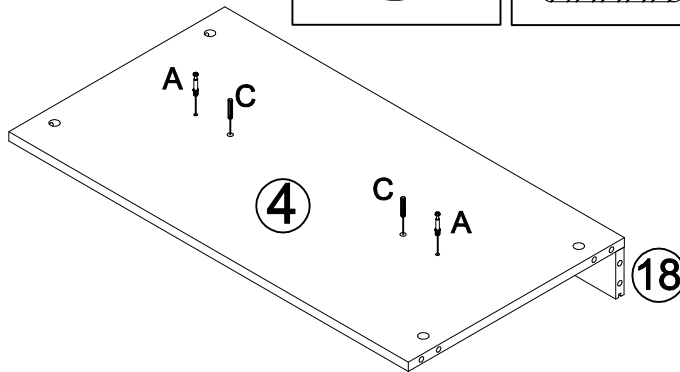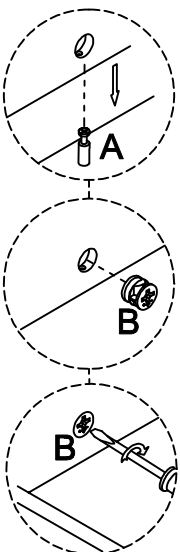

Step 17

A	×16
	


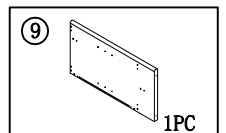
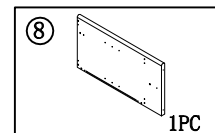
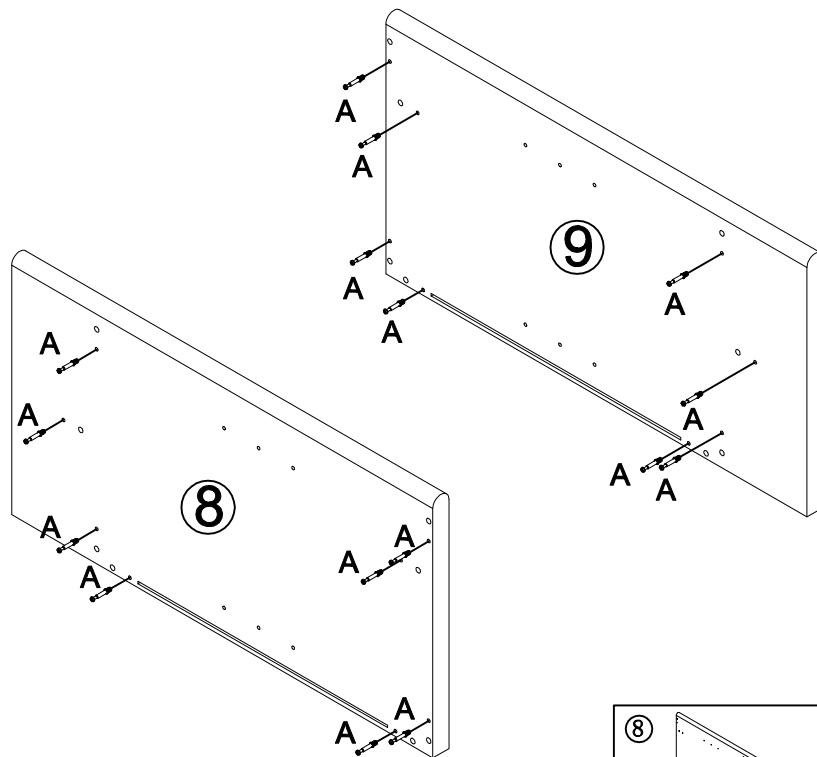




Step 18

F	×8
	


C	×8
	

B	×8
	

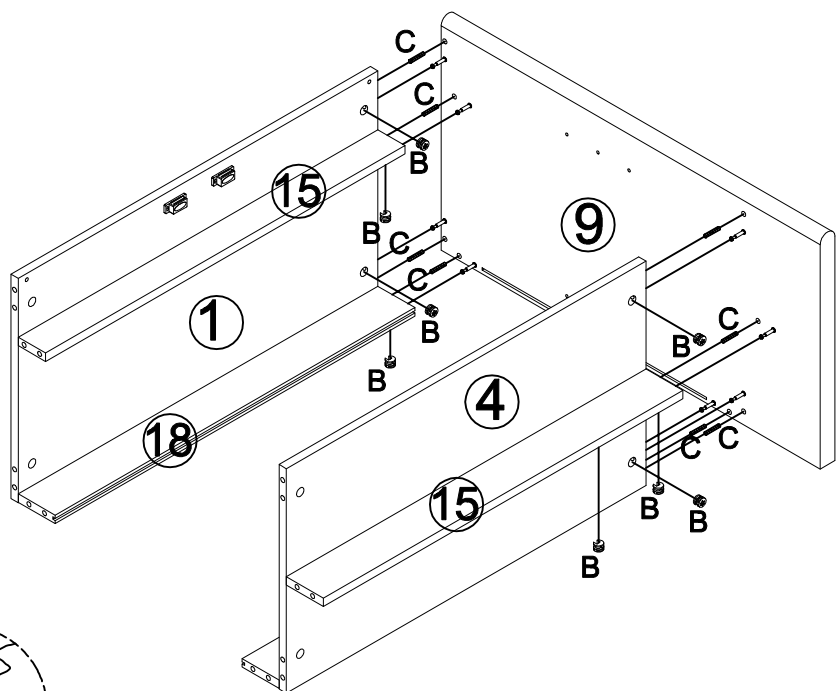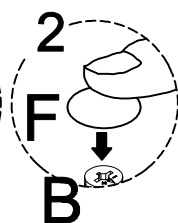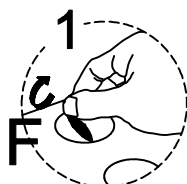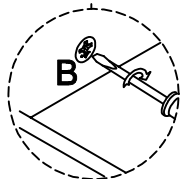
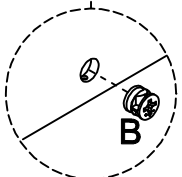
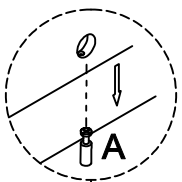


Step 19


First, correctly install the backboard marked "20" on one side of the slot. Then install component 21. Finally, insert the other backboard marked "20" into the other side of the slot.



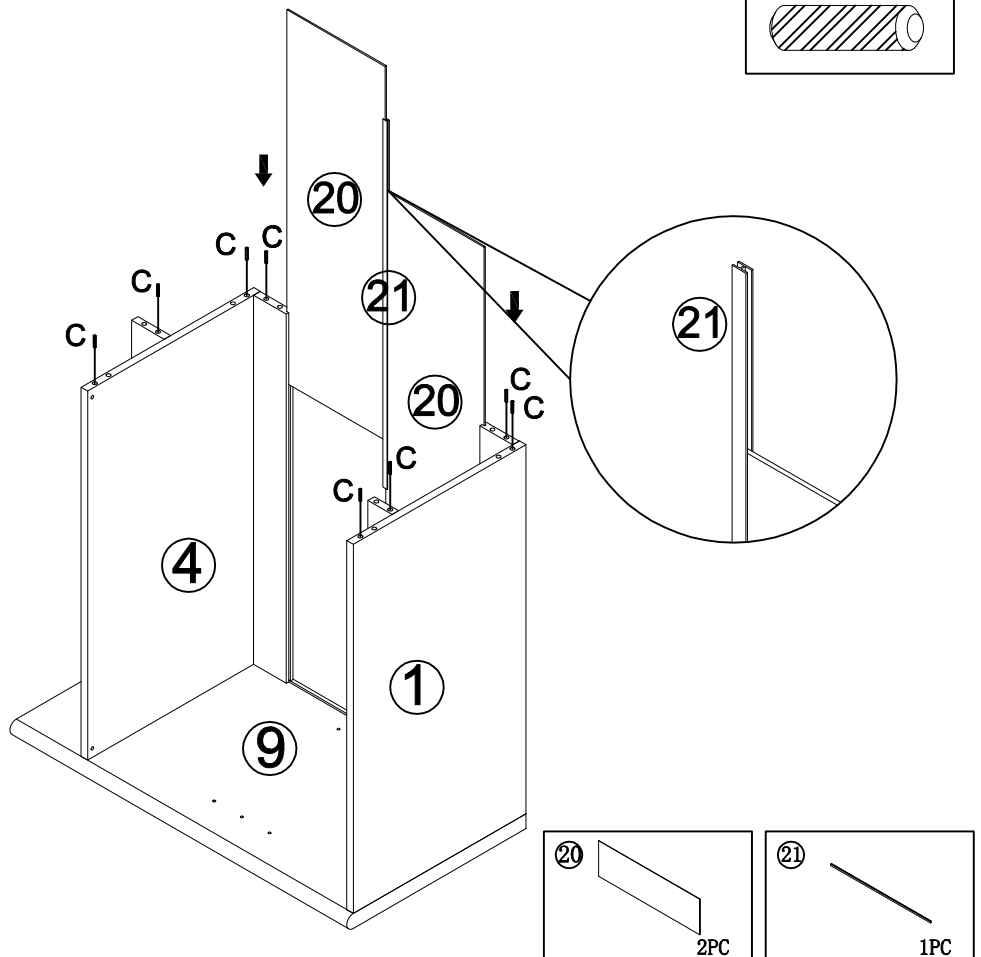


Step 20

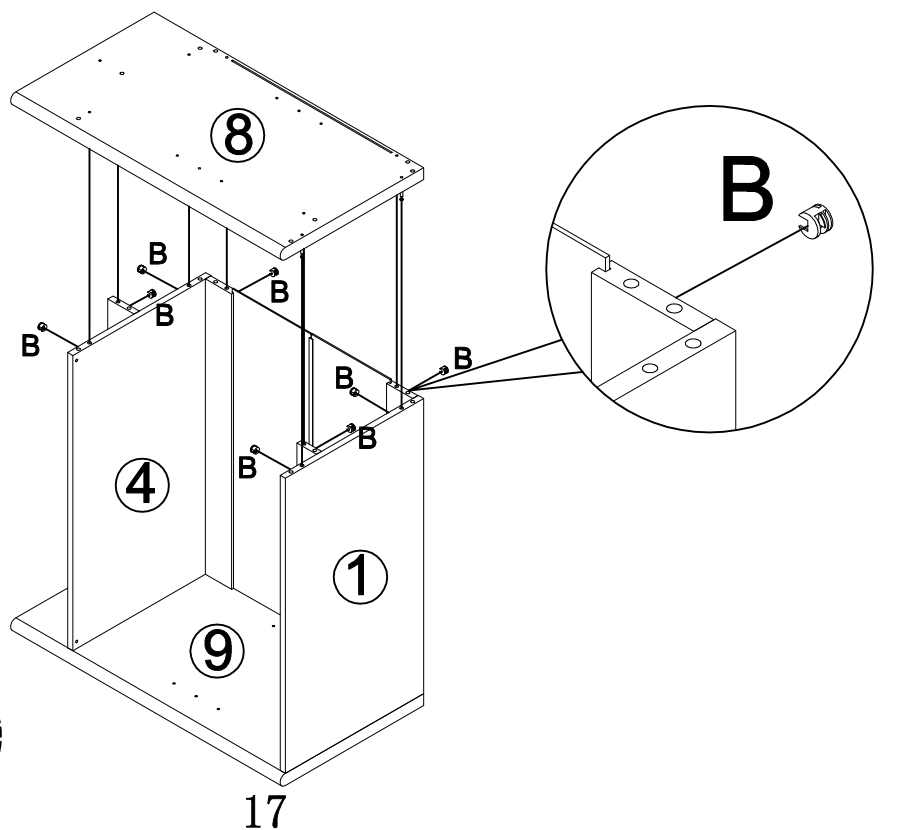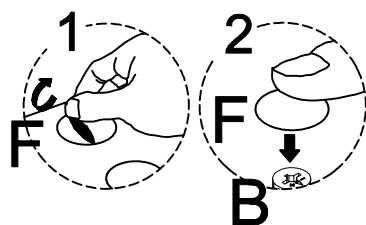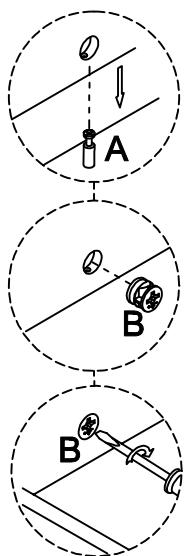

Step 21

A	×16
	

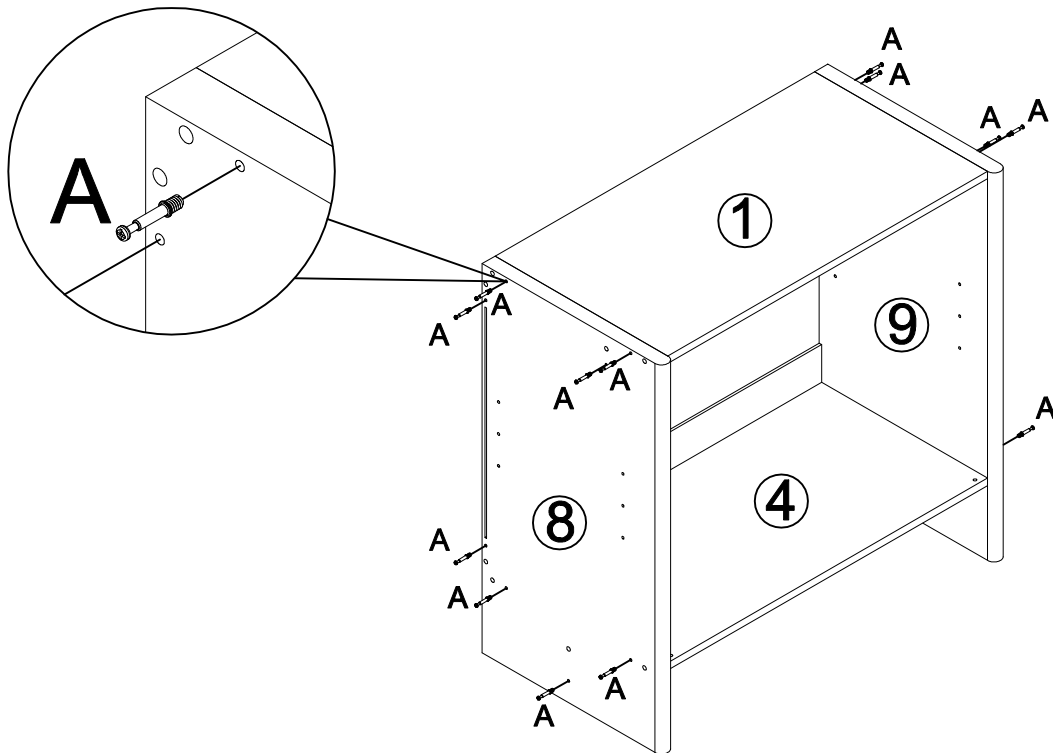







Step 22

F	×16
	



C	×16
	

B	×16
	



When lifting the structure composed of component 2.5.6 and the structure composed of 3.5.7, please operate gently and try to concentrate the barycentre on the side with the backboard to avoid damaging the structure.

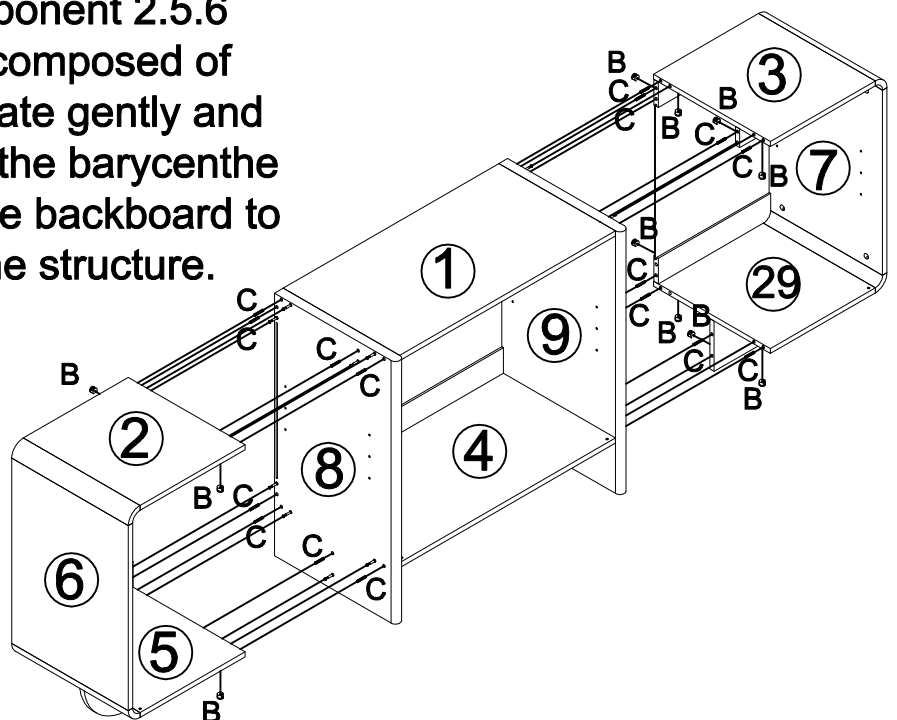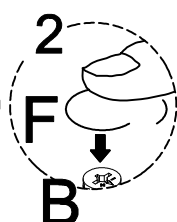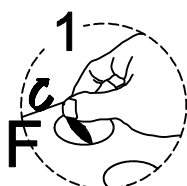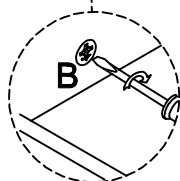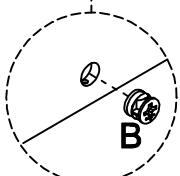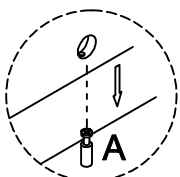


Step 23



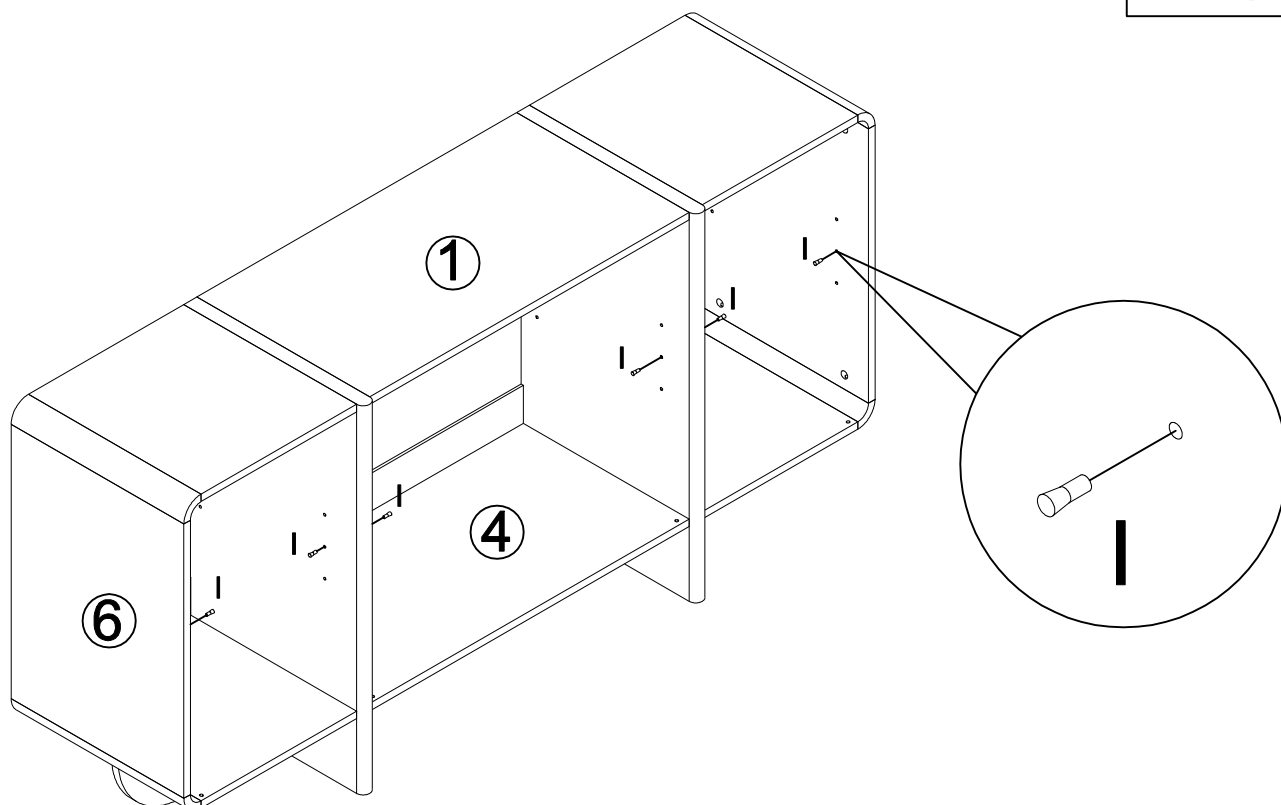
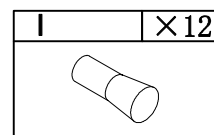




Step 24

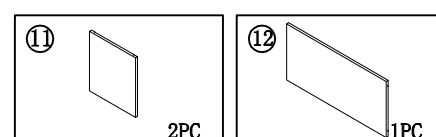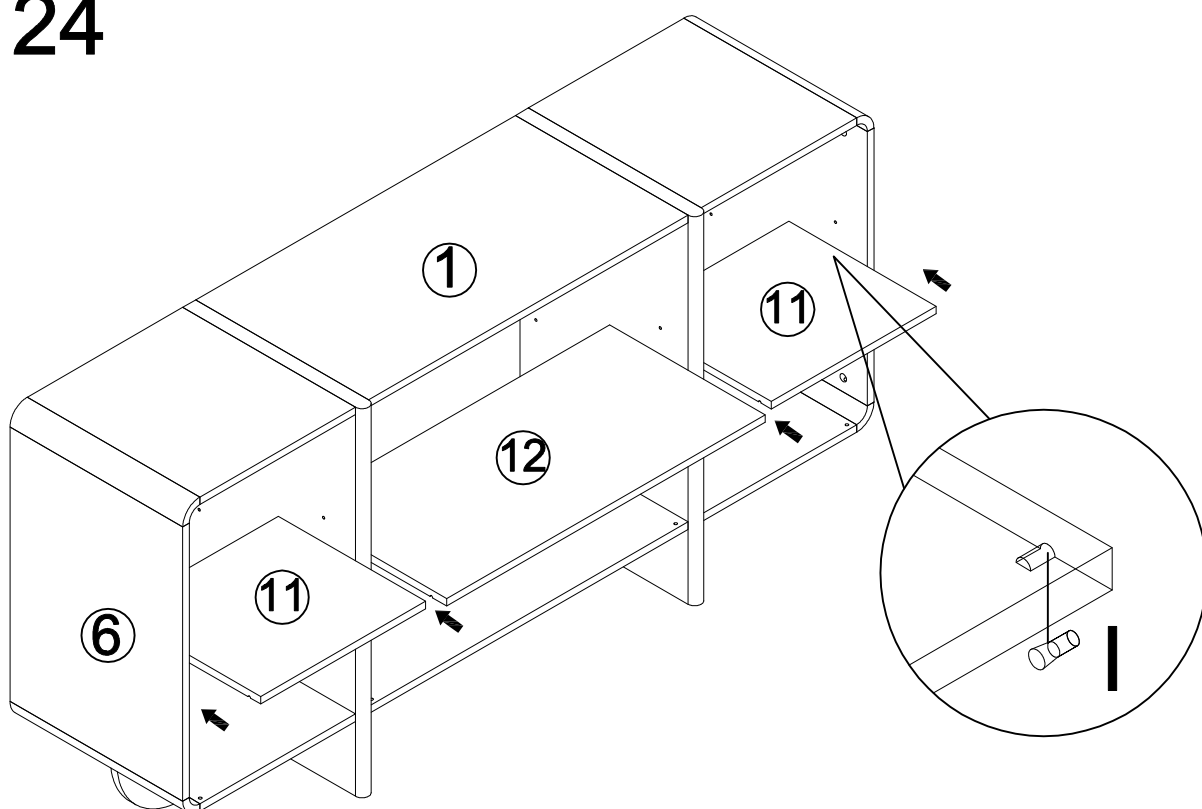

Step 25




L	×2	K	×4	O	×8	Q	×4
		 M3.0×12mm		 M4×22mm			

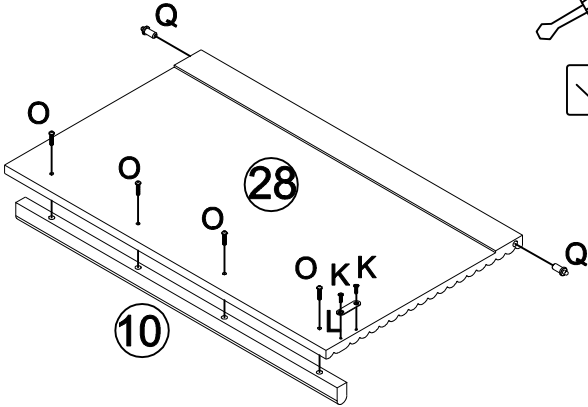
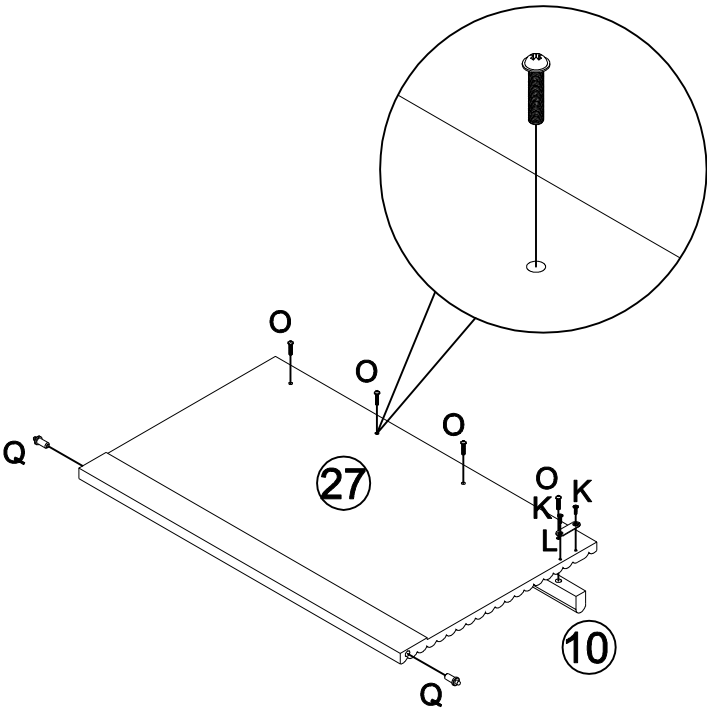


27	1PC	10	2PC	28	1PC
					



Step 26

L	×2	K	×4	Q	×4
		 M3.0×12mm			


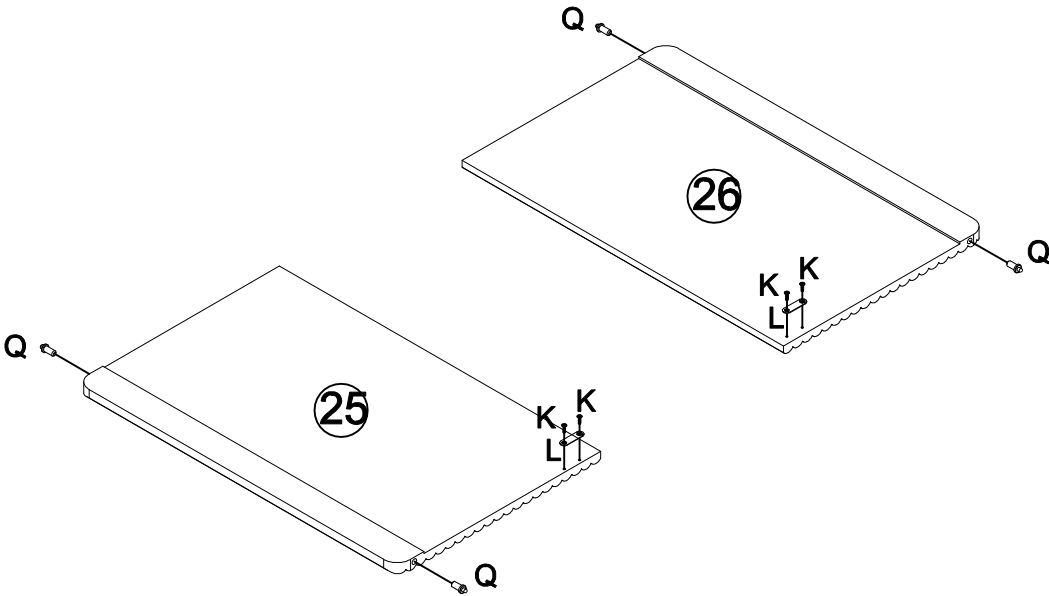


25	1PC	26	1PC
			

Step 27




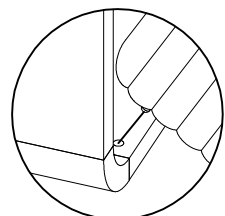
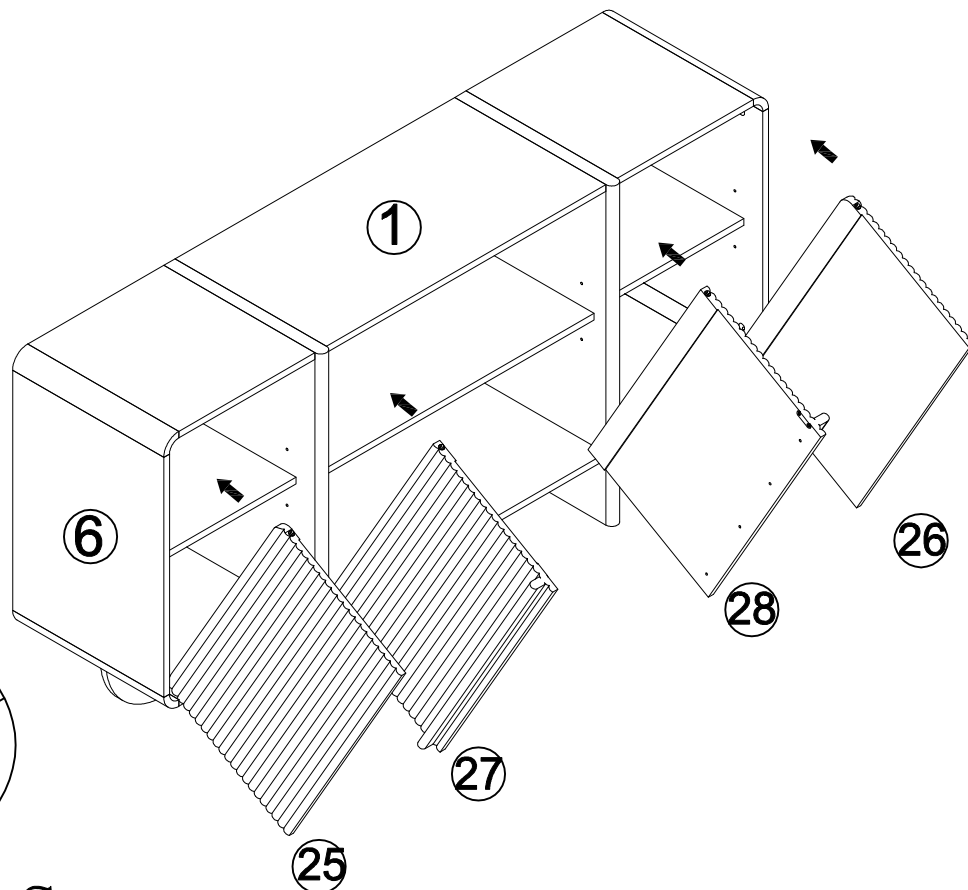


First Step

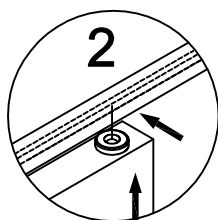
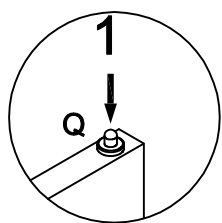


The second Step

Step 28

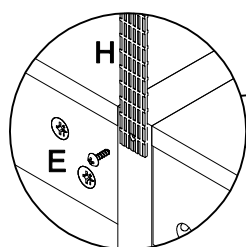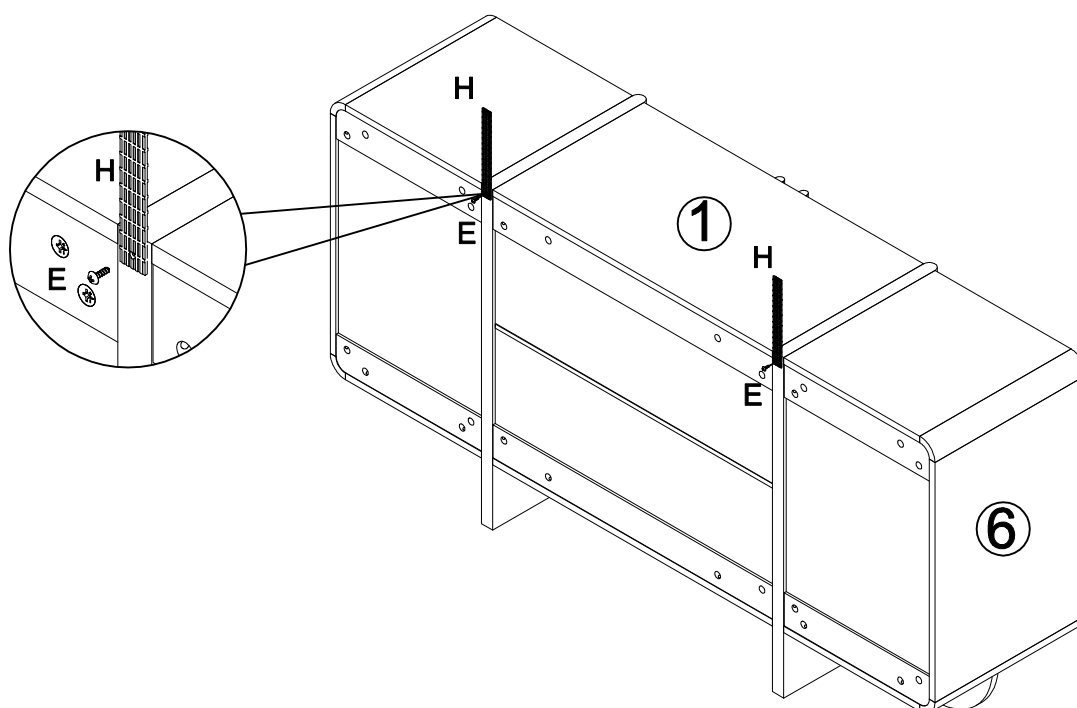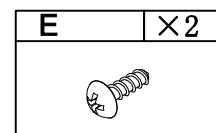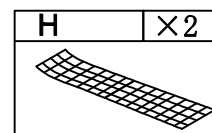

Step 29

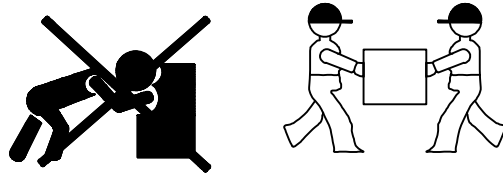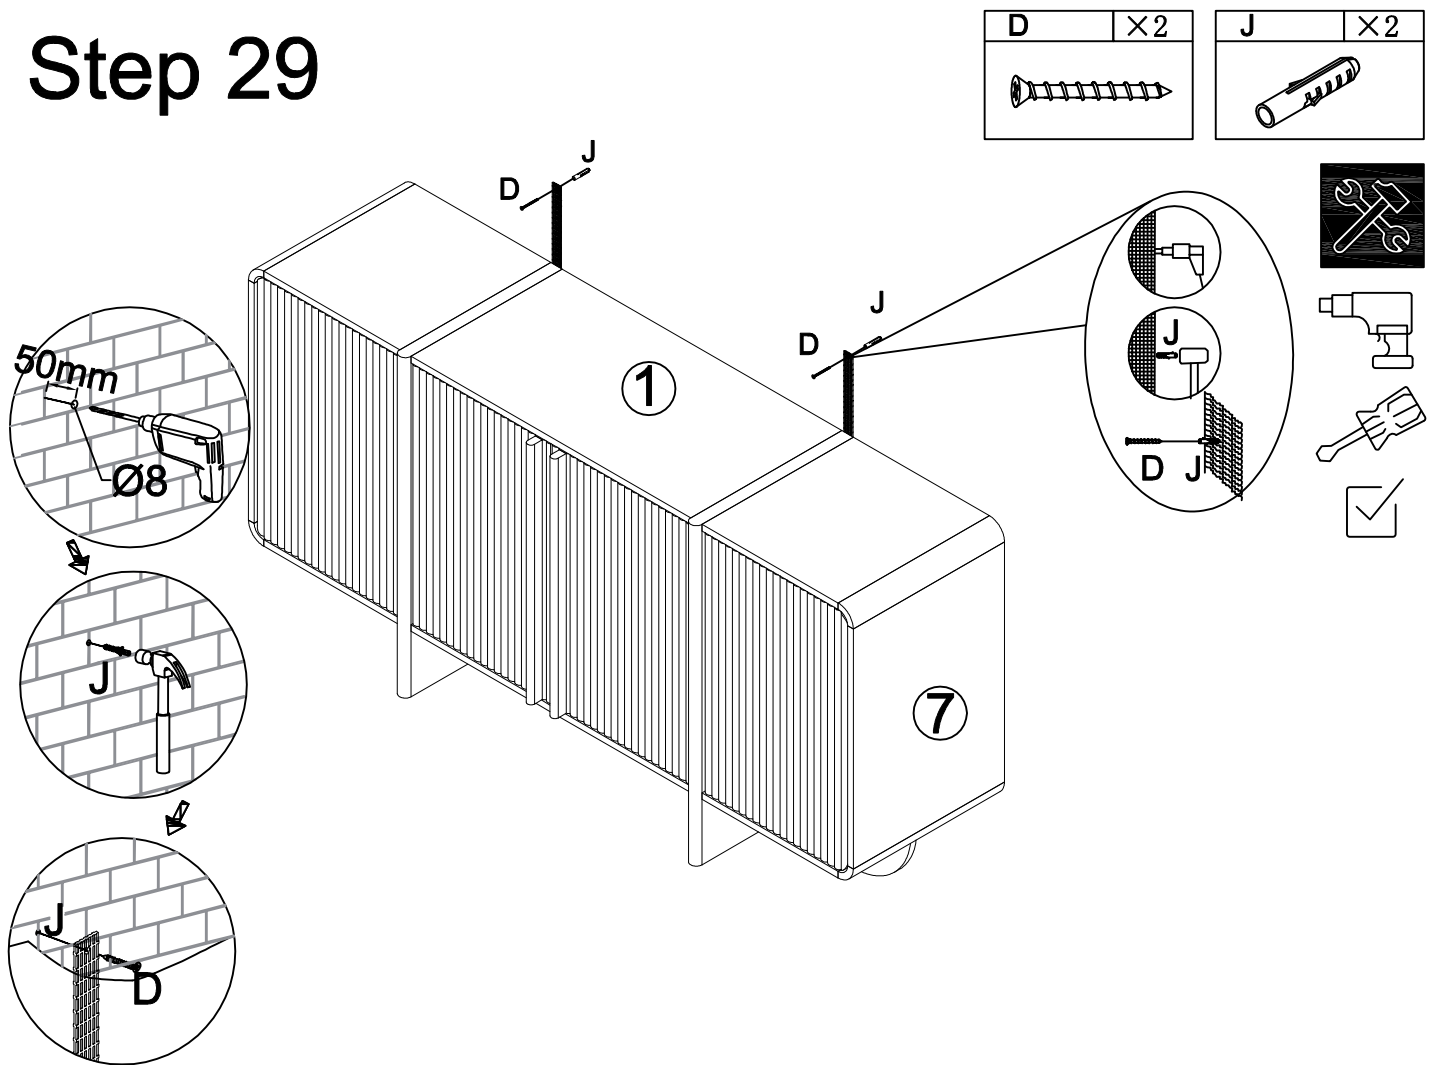

Two people work together to move the cabinet.
Make sure you lift it off the ground.
Don't push and pull.