

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

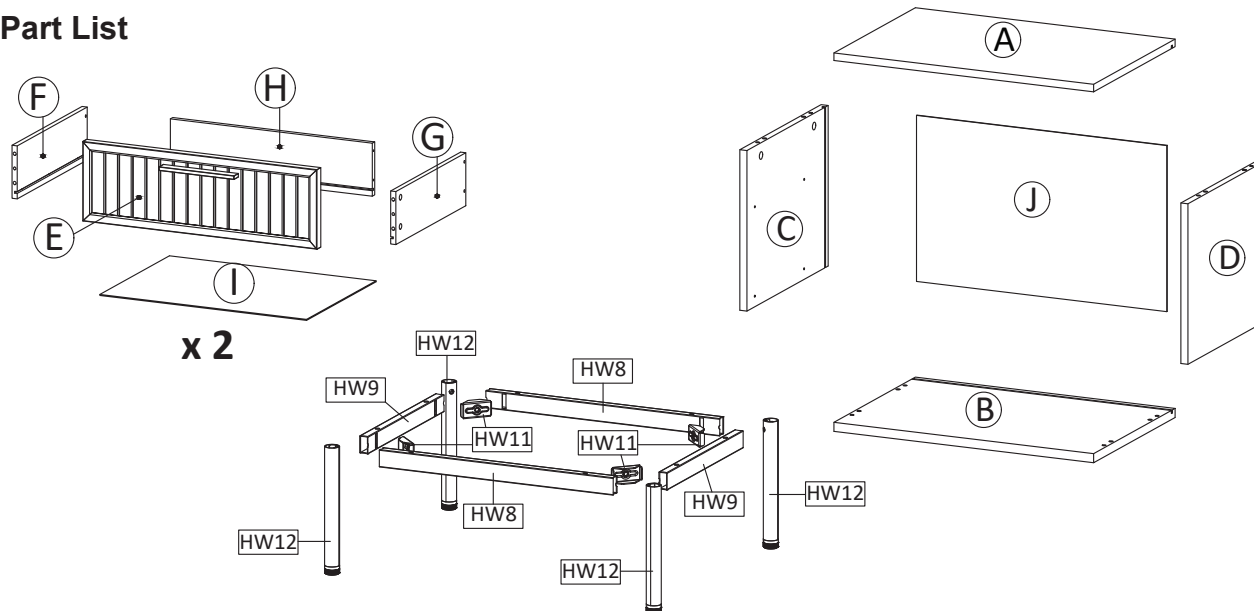

Owner Manual

Product Dimensions: 21.46"Wx15.39"Dx22.52"H

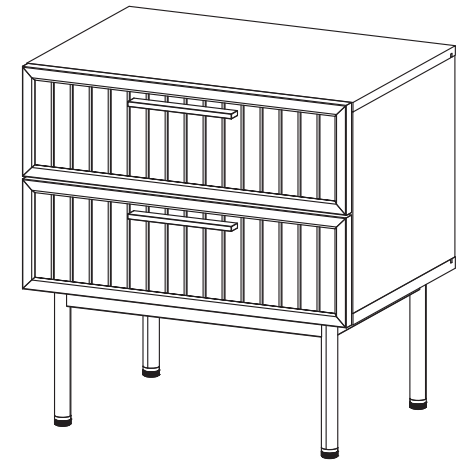

WARNING :












WEIGHT CAPACITY: 29 LBS.

DRAWER LOAD CAPACITY 22 LBS

Warning : Do not stand on chest.

Warning : Do not over torque bolts.

Hardware List

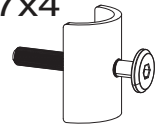HW1x12  $\varnothing 6 \times 35 \text{ mm}$	HW2x4  $\varnothing 15 \text{ mm}$	HW3x8  $\varnothing 12 \text{ mm}$	HW4x8  $\varnothing 8 \times 30 \text{ mm}$	HW5x4  $M7 \times 50 \text{ mm}$
HW6x8  $M6.4 \times 45 \text{ mm}$	HW7x4  	HW8x2  	HW9x2  	HW10x1 
HW11x4  	HW12x4  	HW13x8  $M6 \times 10.5 \text{ mm}$	HW14x12  $M3.5 \times 13 \text{ mm}$	HW15x8  $M8 \times 39 \text{ mm}$
HW16x12  	HW17x12  $M3.5 \times 15.5 \text{ mm}$	HW18x2  	HW19x4  $M4 \times 22 \text{ mm}$	HW20x4  $\varnothing 6 \times 30 \text{ mm}$
HW RM35Ax2  				

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Front Drawer	2
F	Side Drawer Left	2
G	Side Drawer Right	2
H	Back Drawer	2
I	Bottom Drawer	2
J	Back Board	1

Piece	Description	Qty
HW1	Cambolt	12
HW2	CamLock Big	4
HW3	CamLock Small	8
HW4	Dowel Big	8
HW5	Screw M7 x 50 mm	4
HW6	Screw M6.4 x 45 mm	8
HW7	Support Corner Brace&Screw M6 x 40 mm	4
HW8	Support Metal Leg 1	2
HW9	Support Metal Leg 2	2
HW10	Allen Key	1
HW11	Corner Brace	4
HW12	Leg	4
HW13	Screw M6 x 10.5 mm	8
HW14	Screw M3.5 x 13 mm	12
HW15	Screw M8 x 39 mm	8
HW16	Wedge	12
HW17	Screw M3.5 x 15.5 mm	12
HW18	Handle	2
HW19	Screw M4 x 22 mm	4
HW20	Dowel Small	4
HW RM35A	Drawer Runner	2

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

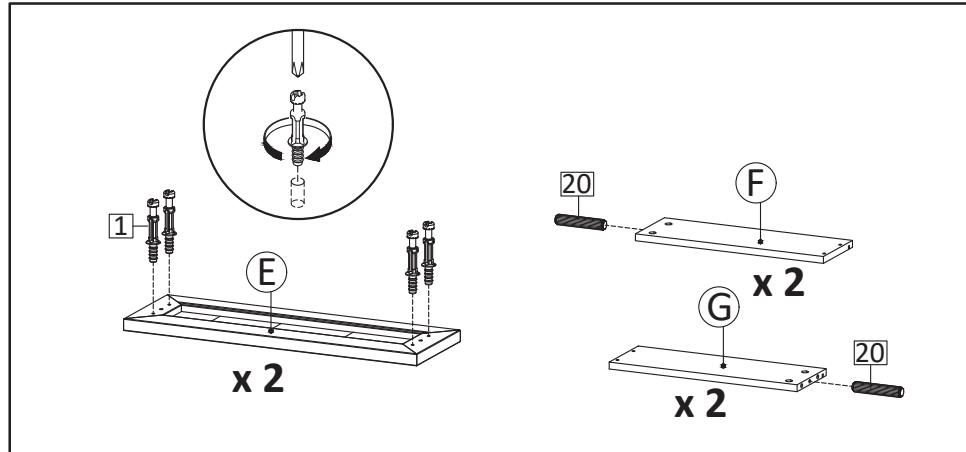


STEP1: Insert Cambolt (HW1) into Front Drawer (E). Insert Dowel Small (HW20) into Side Drawers (F&G).

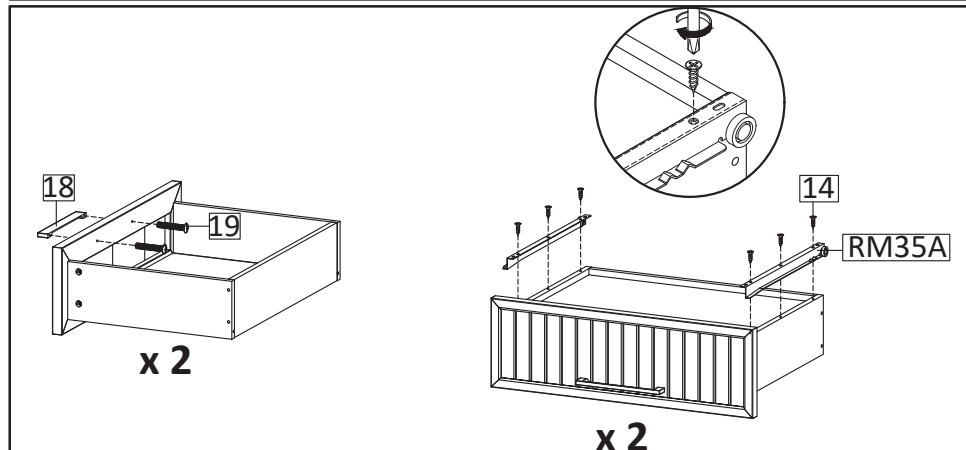

STEP3: Use Screw M4x22mm (HW19) to attach Handle (HW18) to the Front Drawer. Install the Drawer Runner (HW RM35A) into position as shown in picture. Secure with screws M3.5x13mm (HW14).

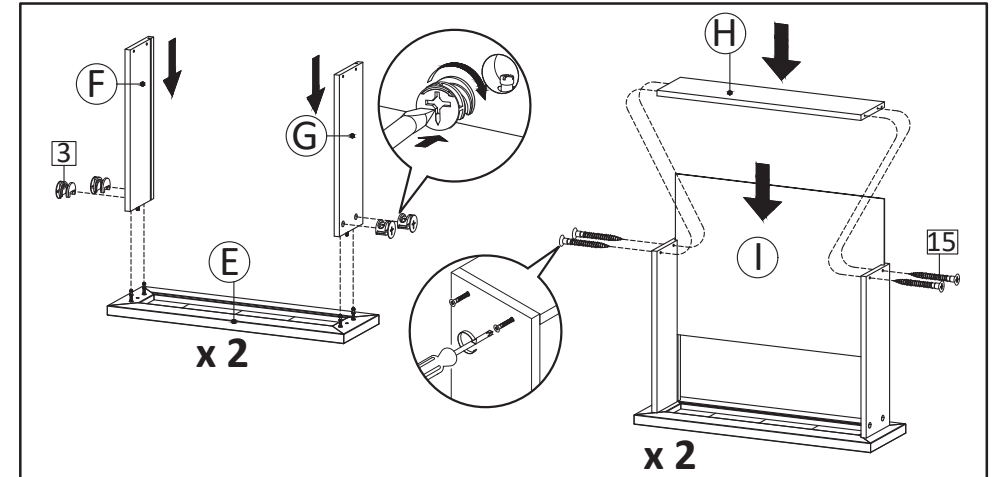

STEP2: Combine Side Drawers (F&G) into Front Drawer (E) then tighten Camlock Small (HW3) using screwdriver. Insert Bottom Drawer (I) with laminated face facing upward then put Back Drawer (H) and secure with Screw M8x39mm (HW15).

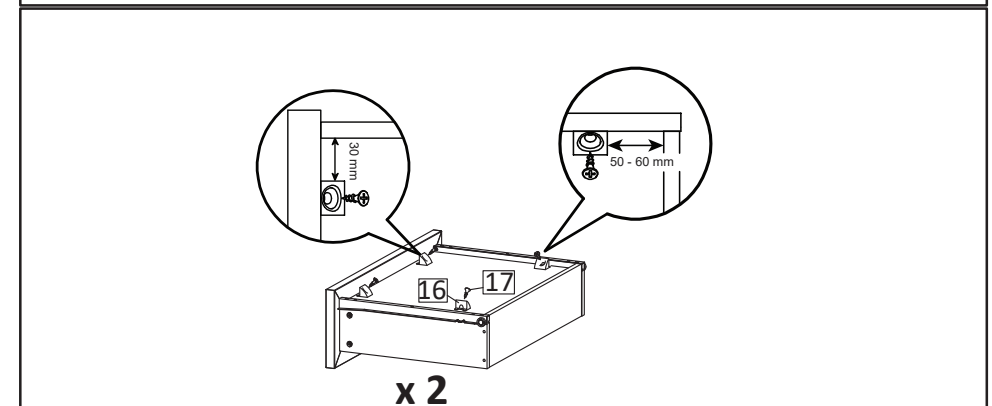

STEP4: Insert the Screw M3.5x15.5mm (HW17) and Wedge (HW16) into the bottom of the drawer according to the picture.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

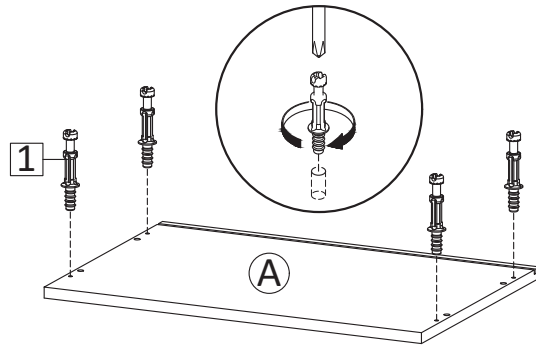


STEP5: Insert Cambolt (HW1) into Top Board (A).

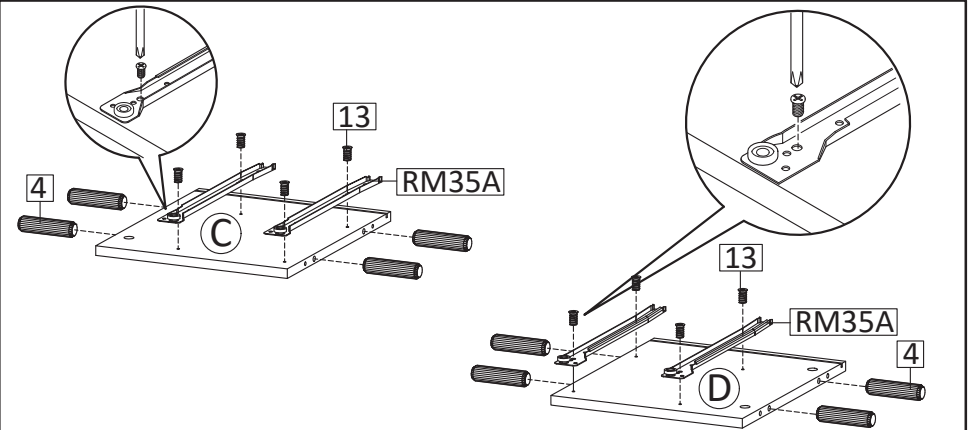

STEP6: Insert Dowel Big (HW4) into Side Board Left (C) and Side Board Right (D). Continue with securing part of the Drawer Runner (HW RM35A) into position as the above image, using screw M6x10.5mm (HW13).

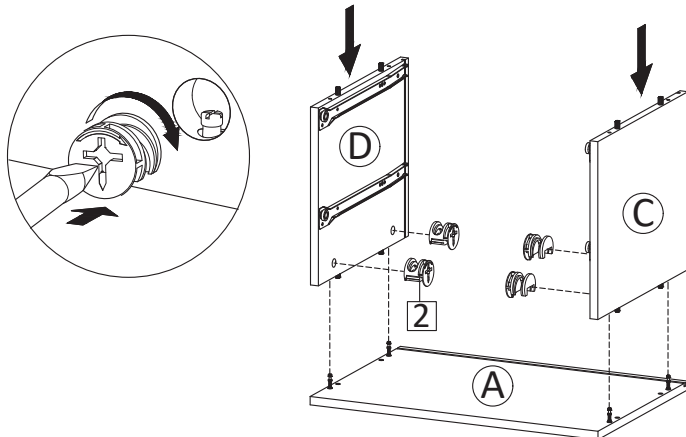

STEP7: Attach Side Board Left (C) and Side Board Right (D) into Top Board (A). Secure with Camlock Big (HW2) and tighten it using screwdriver.

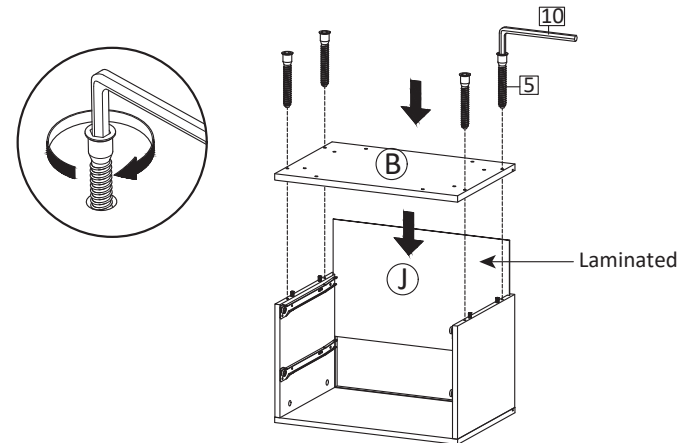

STEP8: Attach Back Board (J) and Insert Bottom Board (B), secure with Screw M7x50mm (HW5), tighten screws using Allen Key (HW10).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

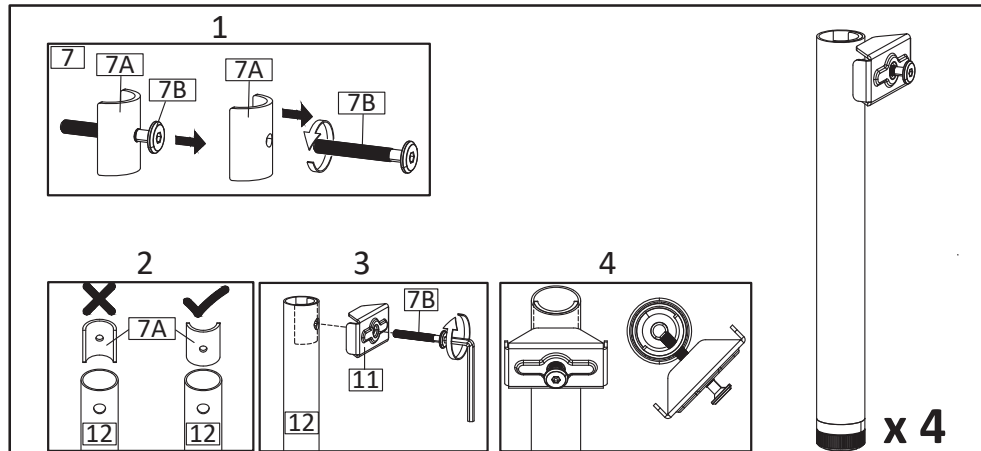


STEP9: First, remove the M6 x 40 mm screw (HW7B) from the Support Corner Brace (HW7A). Second, insert the Support Corner Brace (HW7A) into the Leg (HW12), ensuring that the hole in the Support Corner Brace aligns with the hole in the Leg. Third, insert the M6 x 40 mm screw (HW7B) into the hole in the Corner Brace (HW11), and insert it into the hole in the Leg, then tighten it slightly.

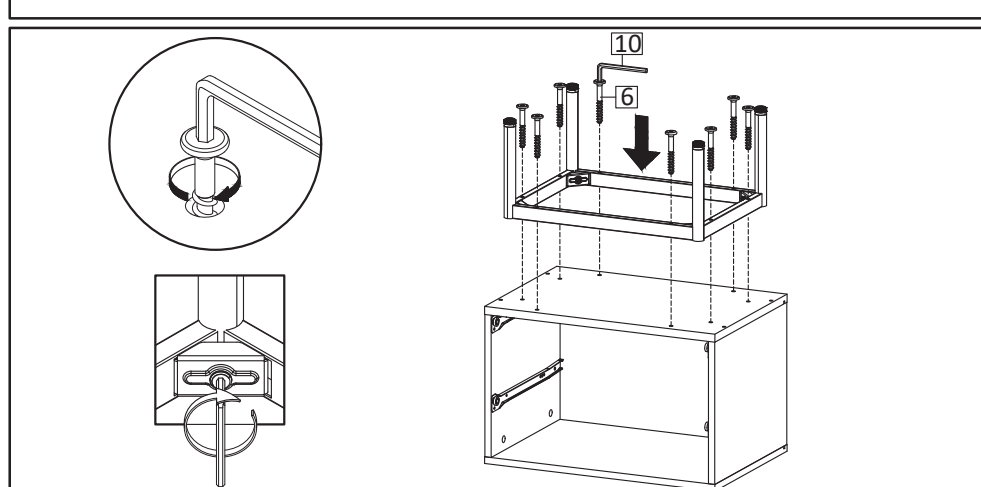

STEP11: Install assembled leg unit from Step 10 onto main assembled unit by inserting Screw (HW6). Tighten with Allen Key (HW10). Then tighten all the Screw on all corners of assembled leg.

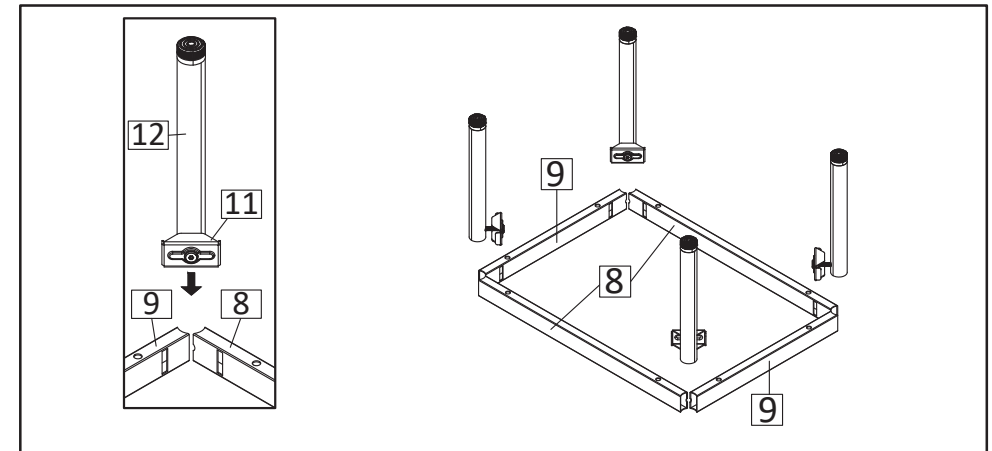



STEP10: Place Support Metal Leg 1 (HW8) and Support Metal Leg 2 (HW9) on the floor as shown in the image. Then, install the prepared leg (HW12). Ensure that the Corner Brace (HW11) hooks into the holes of Support Metal Leg 1 (HW8) and Support Metal Leg 2 (HW9).

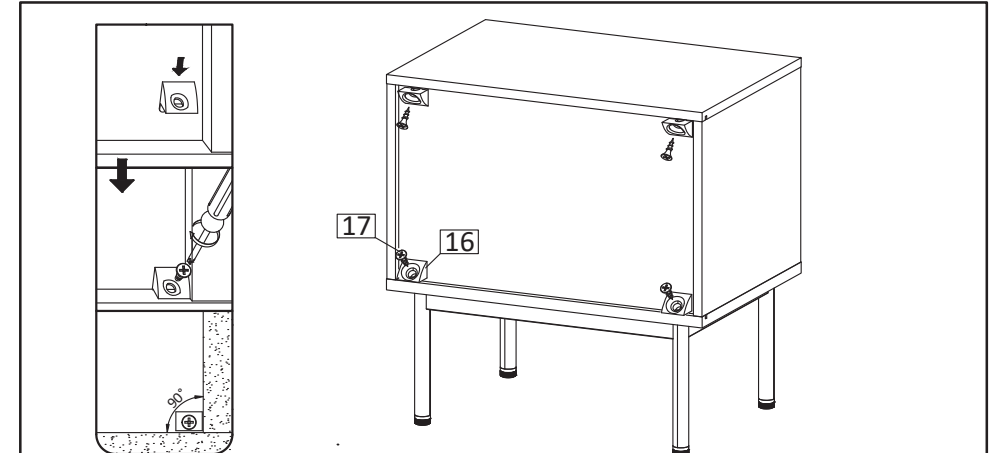

STEP12: Use Wedge (HW16), Screw M3.5x15.5mm (HW17) to tighten the back of night stand by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW16).

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

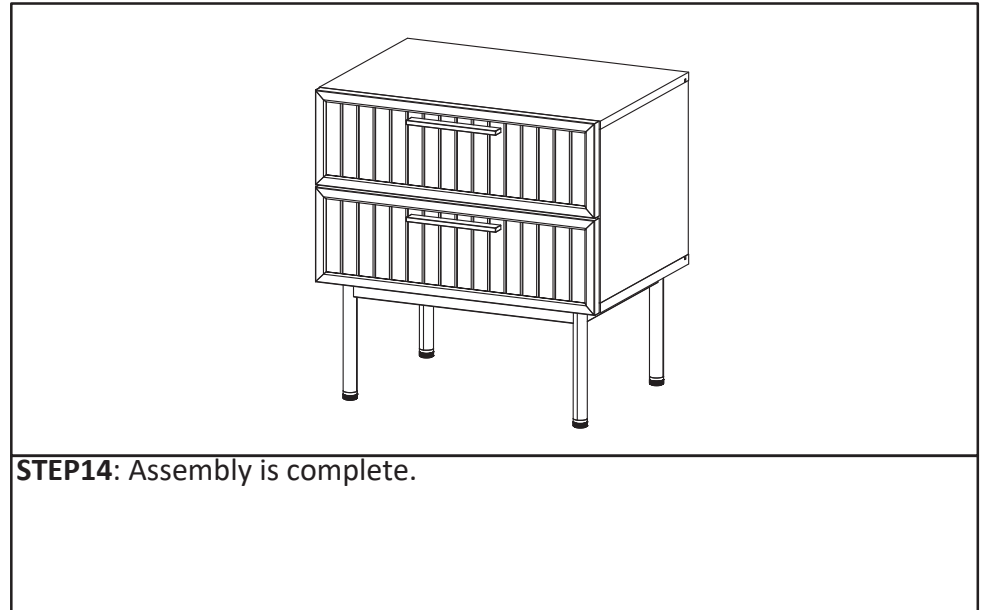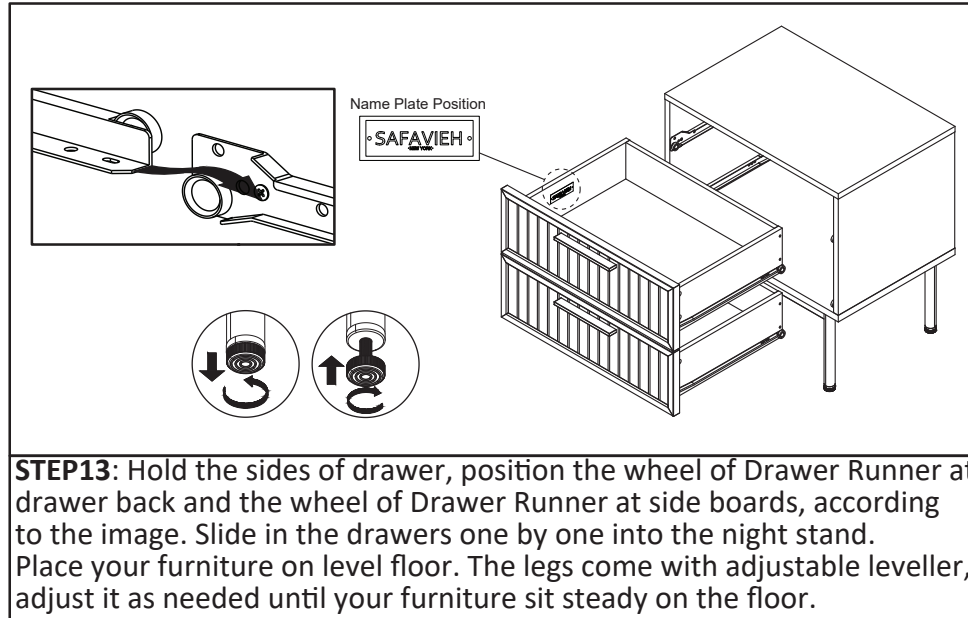

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

