







Note: Do not tighten all screws until last step.

NOTICE




1. Do not overtighten screws. (Insert all screws before tightening screws.)
2. Please do not exceed the weight limitations of this item.
3. Do not stand on or use any part of this item as a step ladder.
4. Firmly secure all screws before use.
5. Reconfirm that all screws are secure every 90 days.
6. Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
7. Be aware that some parts have sharp edges.




PARTS

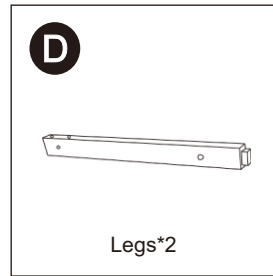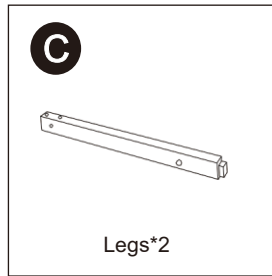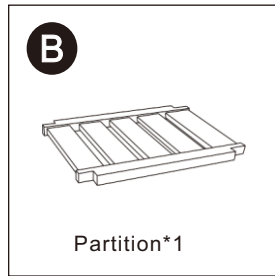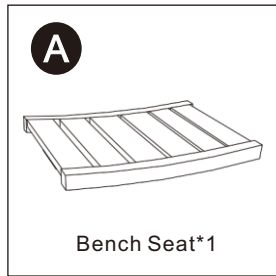


HARDWARE

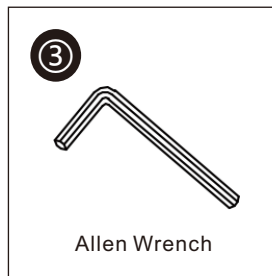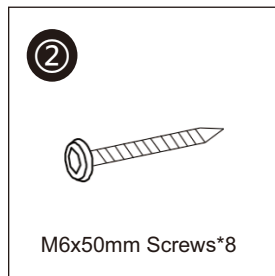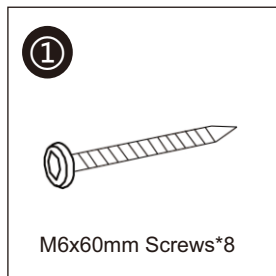

PRODUCT ASSEMBLY-OVERALL VIEW

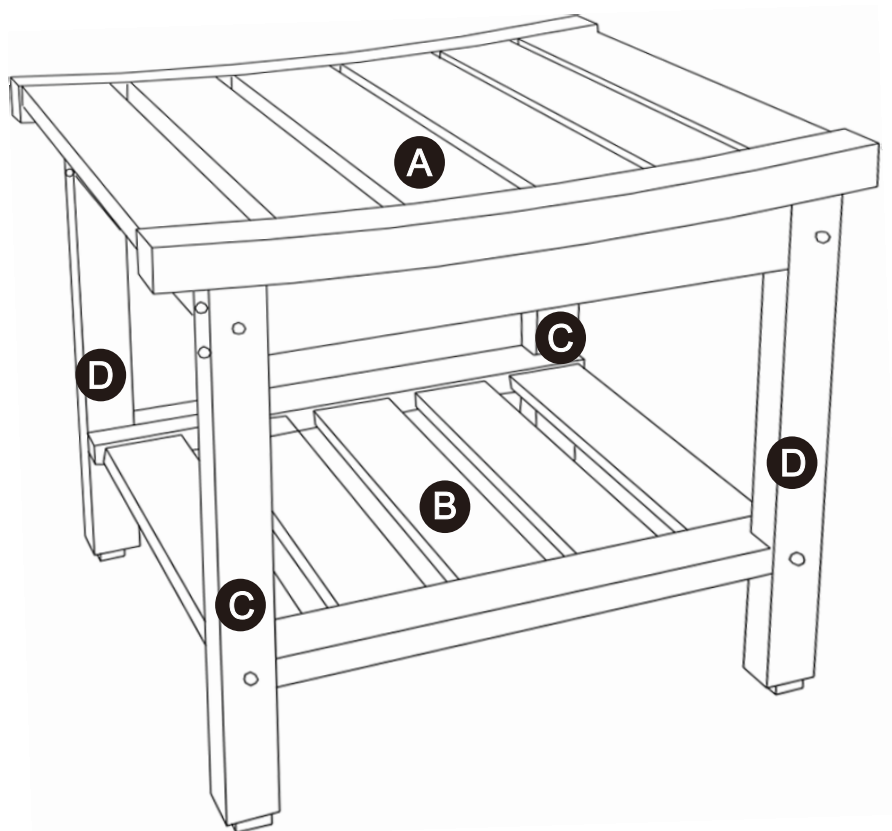


Step 1

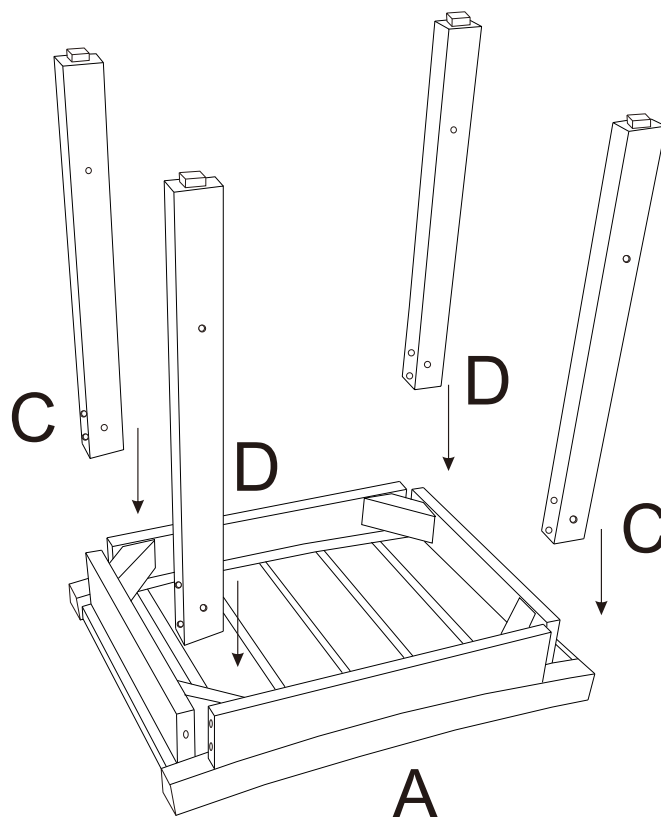

A=1pc
D=2pcs
C=2pcs

Attach 2 legs (Part C) and 2 legs (Part D) to Bench Seat (Part A).

Step 2

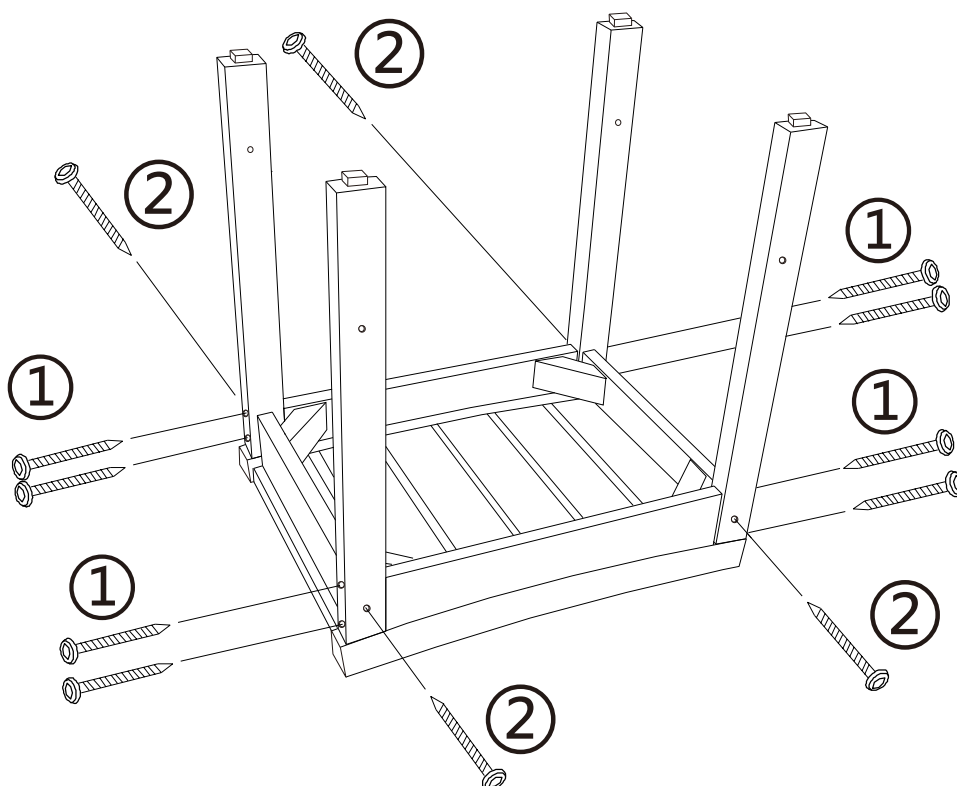


①=8pcs
②=4pcs

Screw 8pcs of self-tapping screws (Hardware ① M6x60mm) to 4 Legs (Part C & D).

Screw 4pcs of self-tapping screws (Hardware ② M6x50mm) to 4 Legs (Part C & D).

Step 3

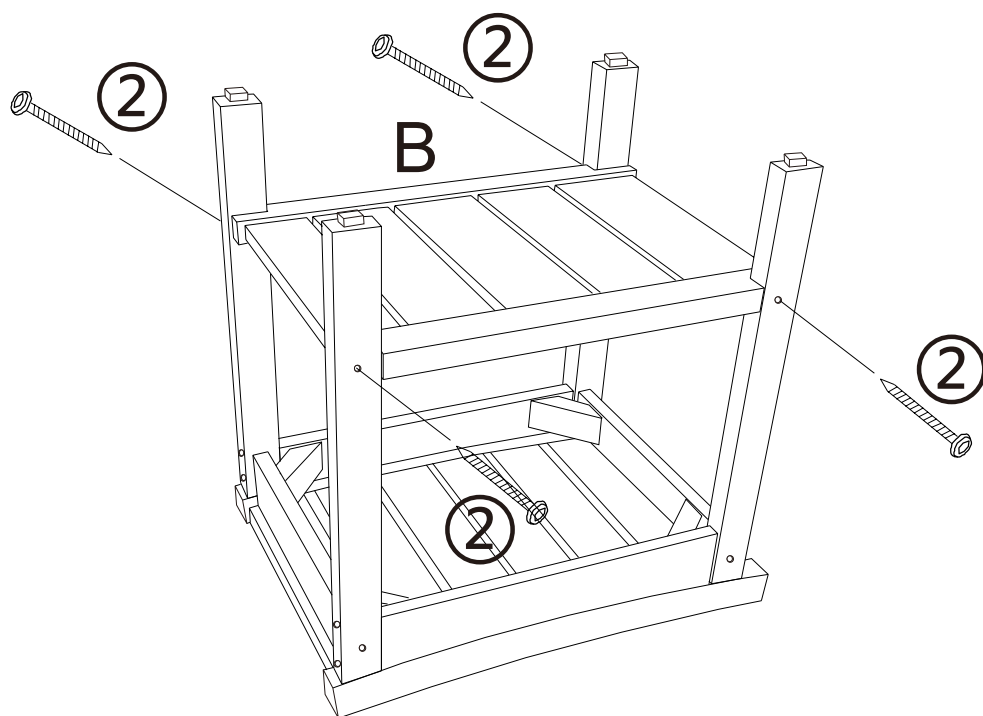

B = 1pc
② = 4pcs

Attach partition (Part B) to 4 legs (Part C & D) with 4pcs of self-tapping screws (Hardware ② M6x50mm).



Congratulation! You finish the assembly of the HDPE shower bench.