



ASSEMBLY INSTRUCTION

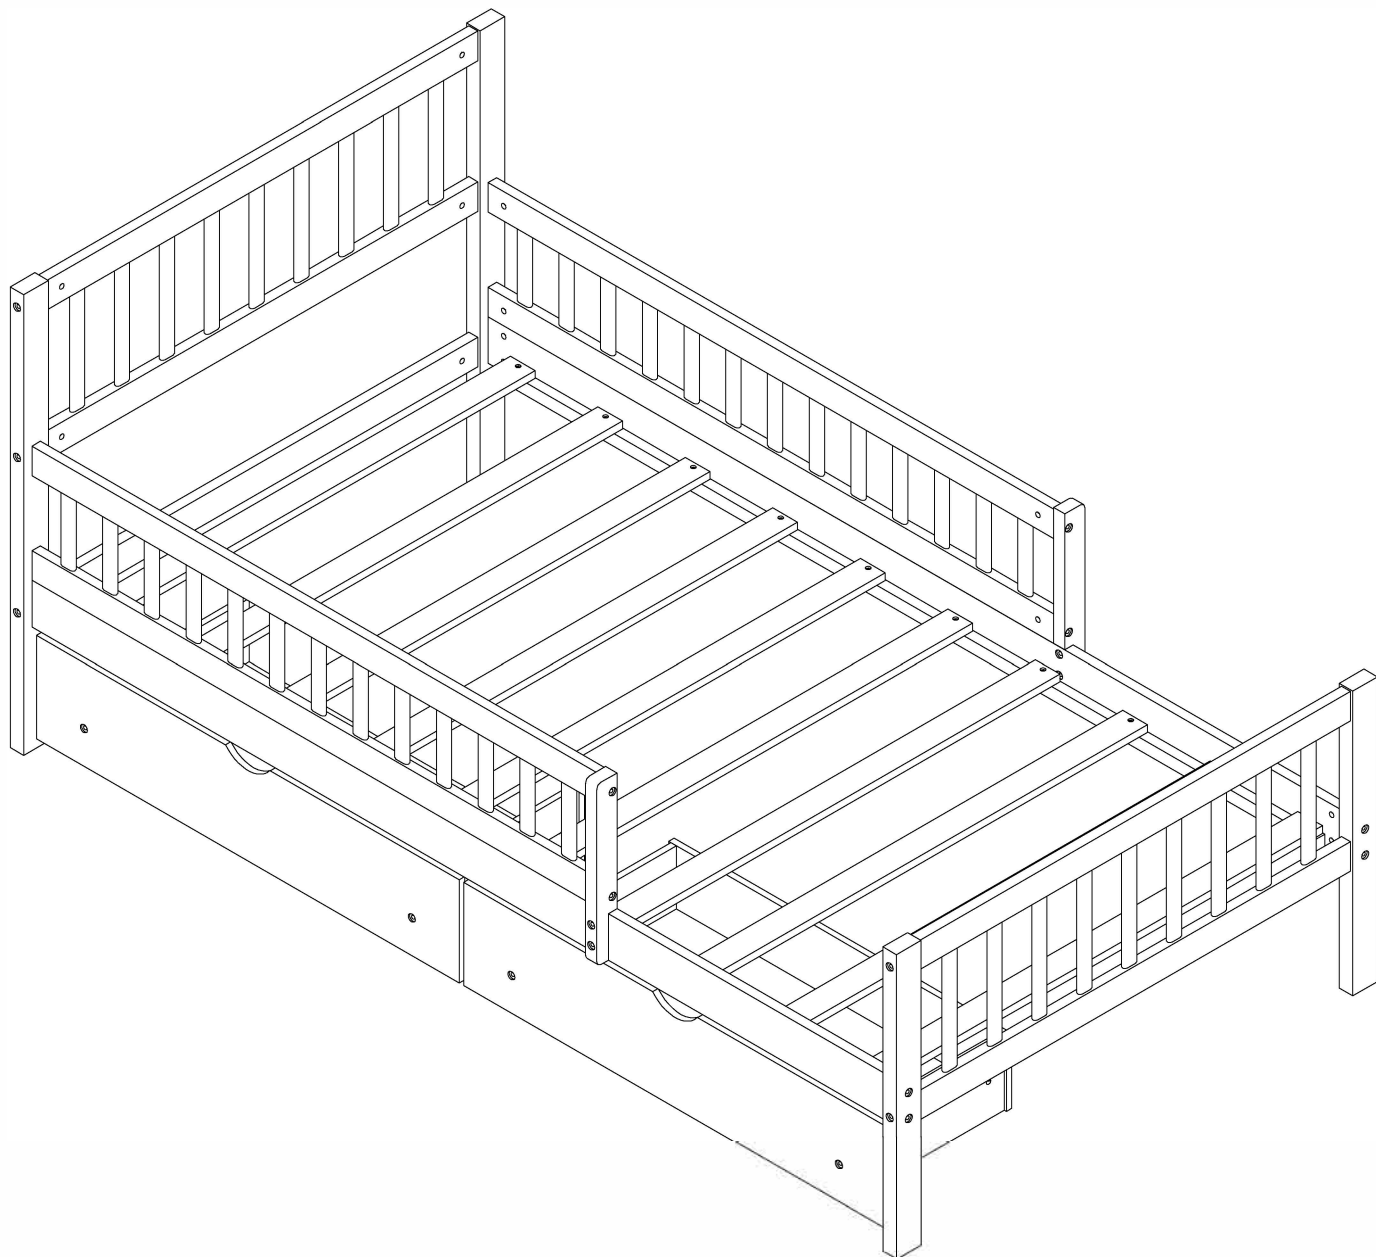








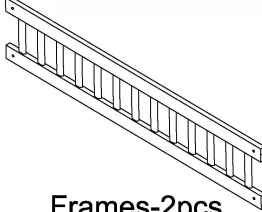
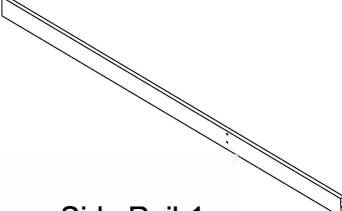
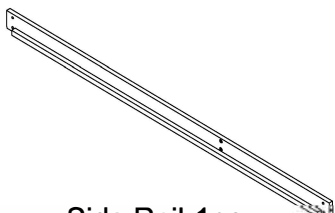






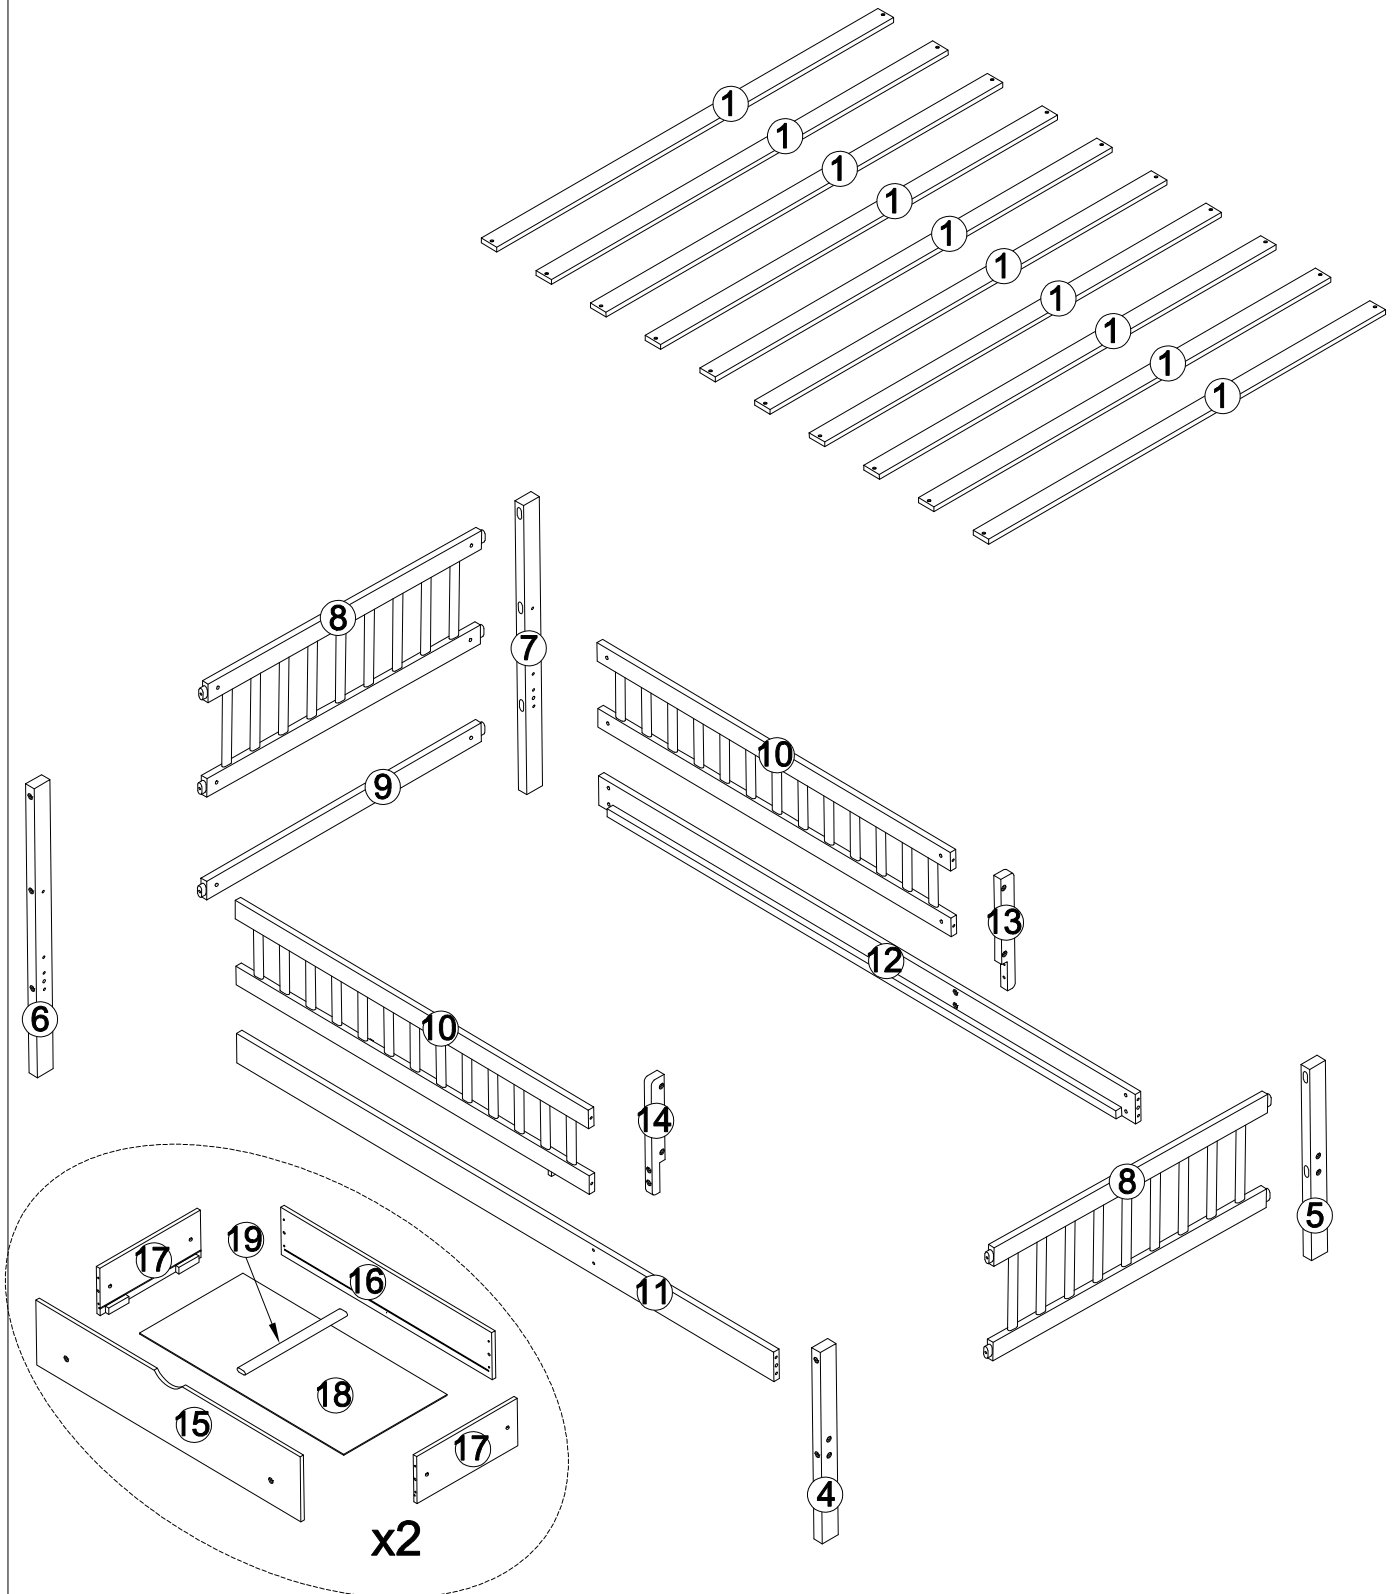
SAFETY WARNINGS AND GENERAL NOTES:

1. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
2. Keep these instructions for future reference.
3. We recommend assembling your bed on the shipping carton to protect your floor.
4. Be certain all staples are out of the box before beginning assembly on the shipping carton.
5. Replacement Parts:
Replacement Parts, including additional guardrails, may be obtained from any of our dealers.

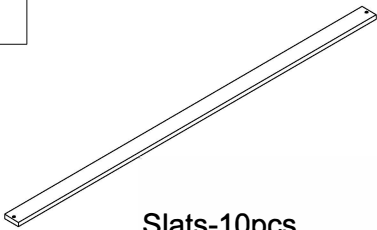



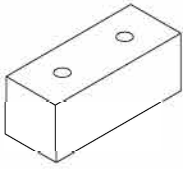


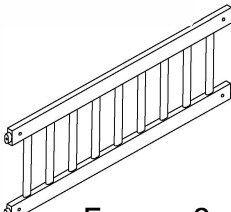




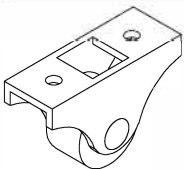

ASSEMBLY INSTRUCTION

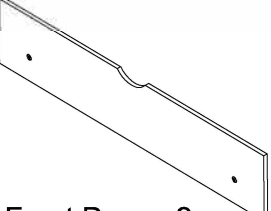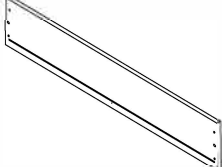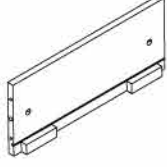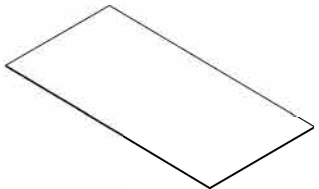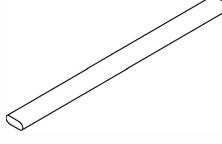


Part List

<p>1</p>  <p>Slats-10pcs</p>	<p>4</p>  <p>Leg-1pc</p>	<p>5</p>  <p>Leg-1pc</p>
<p>6</p>  <p>Leg-1pc</p>	<p>7</p>  <p>Leg-1pc</p>	<p>8</p>  <p>Frames-2pcs</p>
<p>9</p>  <p>Wood bar-1pc</p>	<p>10</p>  <p>Frames-2pcs</p>	<p>11</p>  <p>Side Rail-1pc</p>
<p>12</p>  <p>Side Rail-1pc</p>	<p>13</p>  <p>Rail-1pc</p>	<p>14</p>  <p>Rail-1pc</p>
<p>15</p>  <p>Drawer-Front Panes-2pcs</p>	<p>16</p>  <p>Drawer-Back Panes-2pcs</p>	<p>17</p>  <p>Drawer-Side Panes-4pcs</p>
<p>18</p>  <p>Drawer-Bottom Panes-2pcs</p>	<p>19</p>  <p>Drawer-Sup Bottom Panes-2pcs</p>	

Hardware List

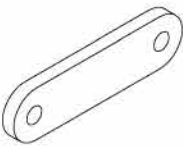
<p>A</p>  <p>Ø1/4" x 100 mm Hex-Head bolts 10pcs</p>	<p>B</p>  <p>Ø1/4" x 13 mm Horizontal-Hole bolts 34pcs</p>	<p>C</p>  <p>Ø1/4" x 70 mm Hex-Head bolts 16pcs</p>
<p>D</p>  <p>Ø10 x 40 mm Wood dowel 4pcs</p>	<p>E</p>  <p>Stop Drawer-3pcs</p>	<p>F</p>  <p>M4 x 30 mm Wood Screws 28pcs</p>
<p>G</p>  <p>Ø1/4" x 35 mm Hex-Head bolts 4pcs</p>	<p>H</p>  <p>Ø1/4" x 15 mm Canopy head though - 4pcs</p>	<p>K</p>  <p>M4 x15 mm Wood Screws 20pcs</p>
<p>L</p>  <p>Steel Bracket -2pcs</p>	<p>M</p>  <p>Ø1/4" x 50 mm Hex-Head bolts 8pcs</p>	<p>N</p>  <p>Ø6 x 25 mm Wood dowel 16pcs</p>
<p>P</p>  <p>Wheels 8pcs (H=28mm)</p>	<p>Q</p>  <p>Allen Key 1pc</p>	





Assembly Tools Required (Not Included)

STEP 1: Following below illustration:

- Using HW #A,#B to connect 6 & 7 Legs with 8 Frame and 9 Wood Bar
- Using HW #A,#B to connect 4 & 5 Legs with 8 Frame



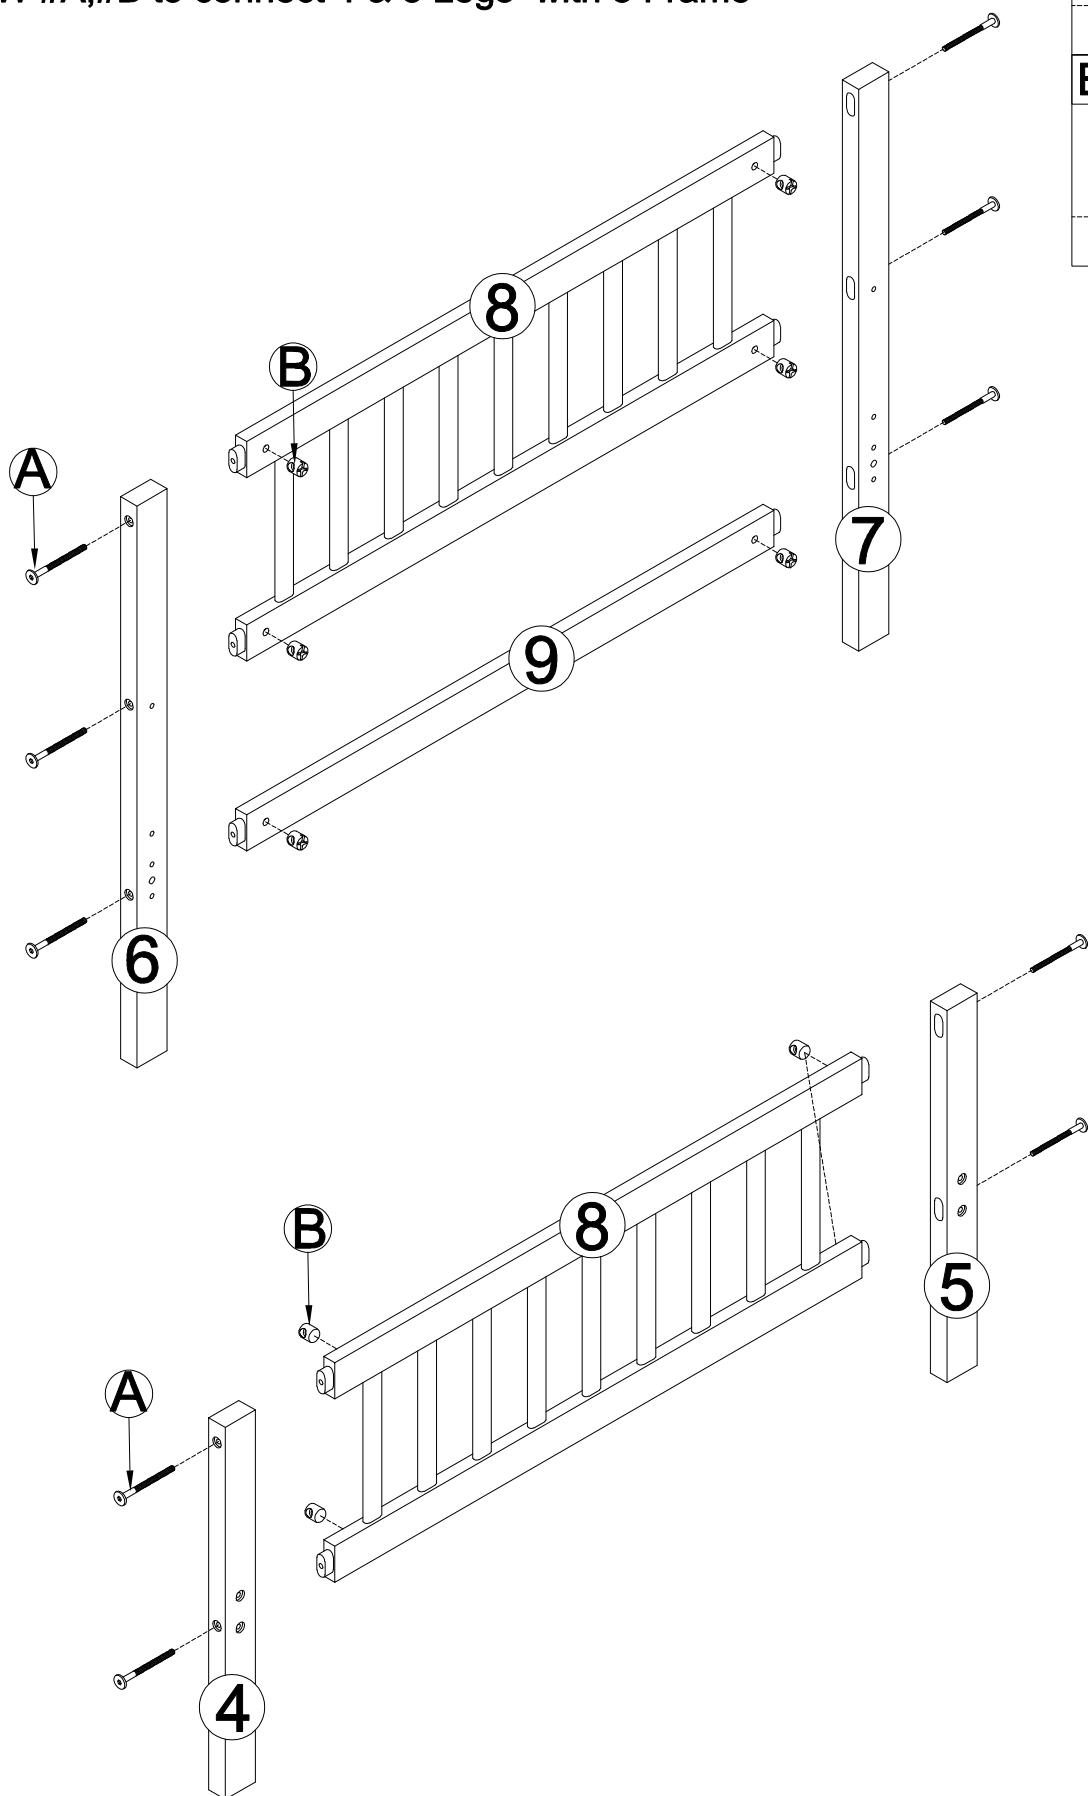


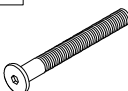


A	
	10pcs
B	
	10pcs

STEP 2: Following below illustration:



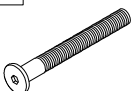



-Using HW #B,#C and Dowel D to connect 11 & 12 Side Rails with Frame (completed in step 1)


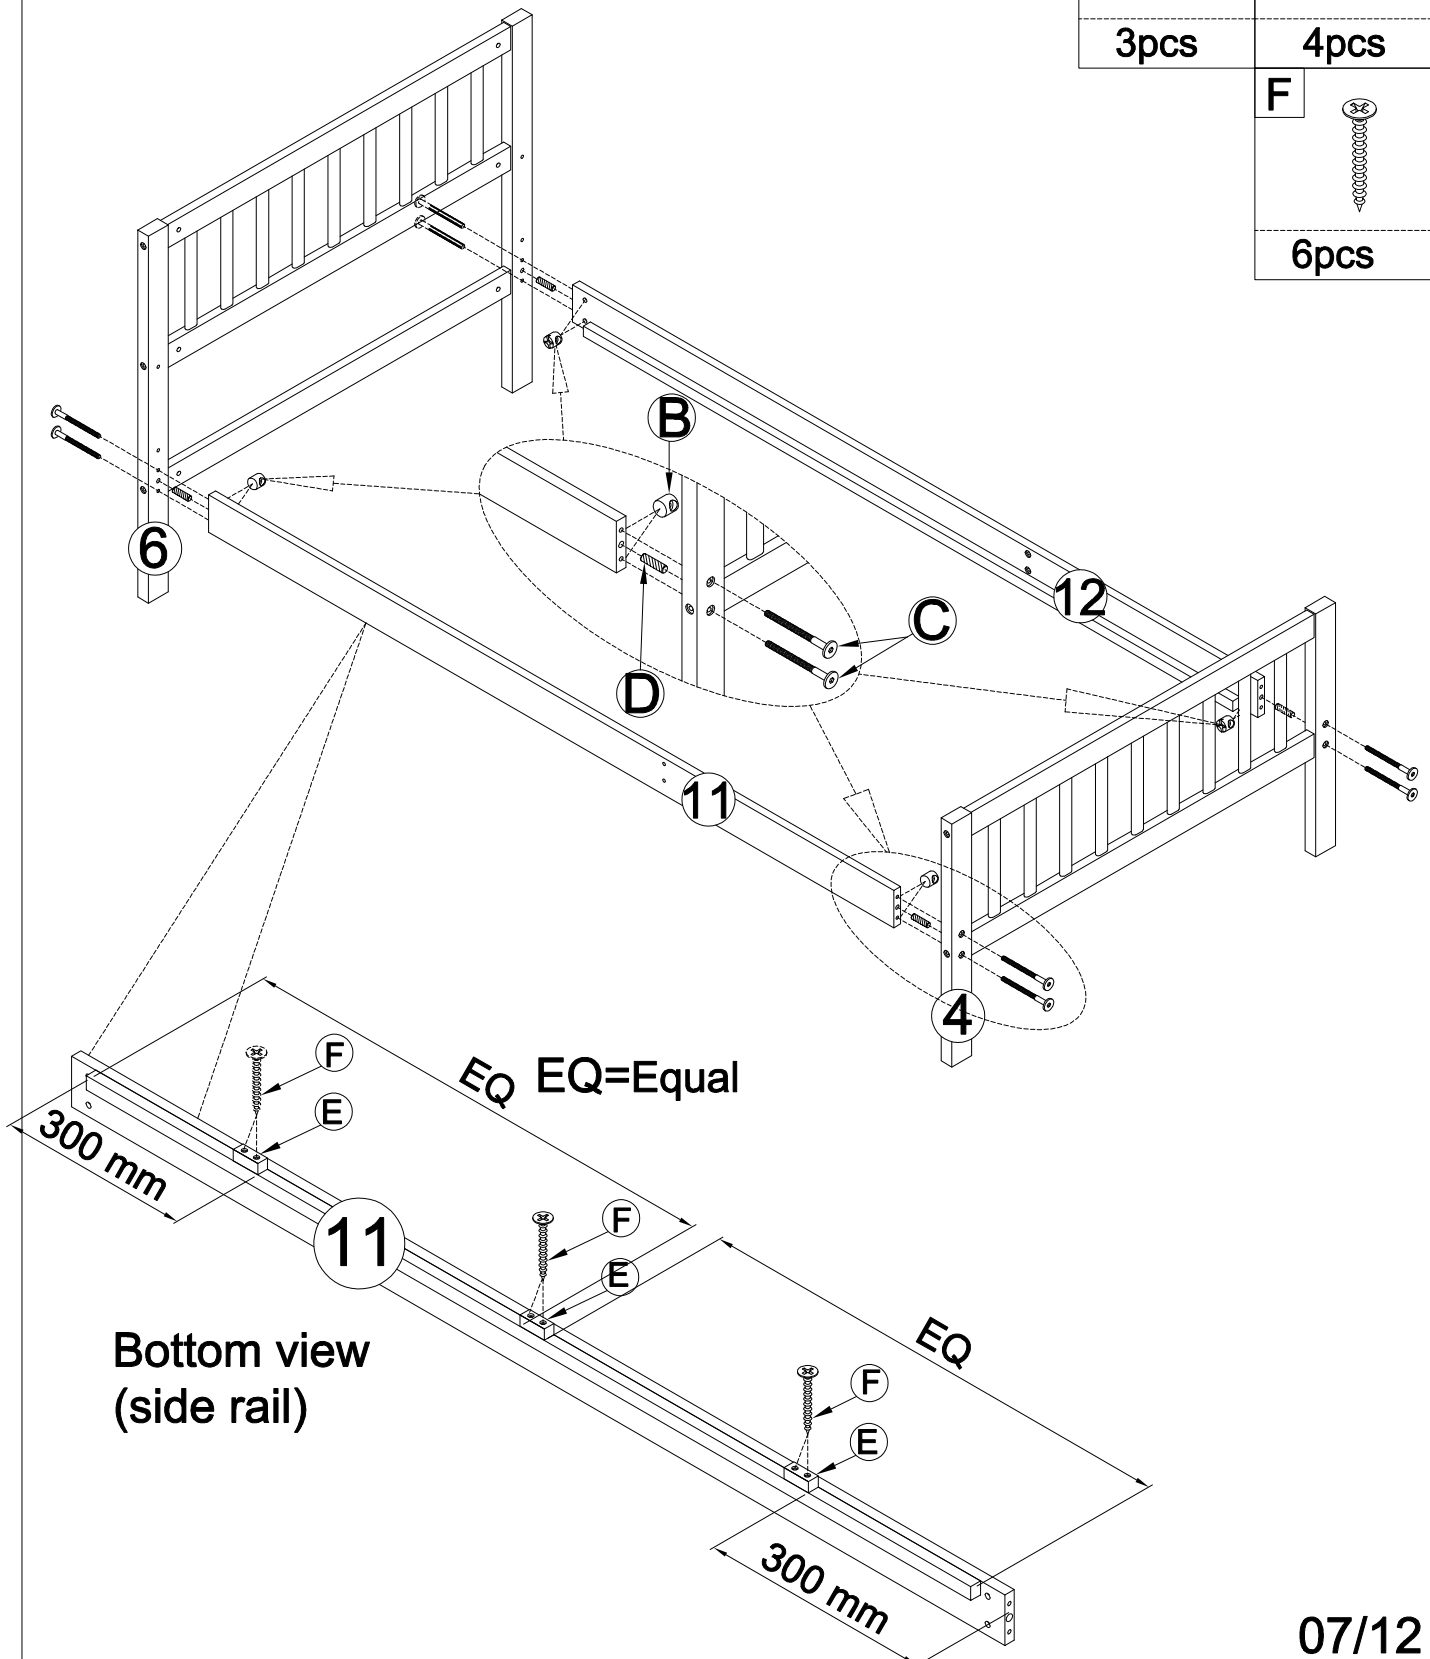
-Using HW #F to connect Stop Drawer E with 11 Side Rails

B		C	
	8pcs		8pcs
E		D	
	3pcs		4pcs
		F	
			6pcs

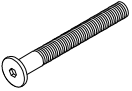



STEP 3: Following below illustration:

K 	B 	C 
4pcs	8pcs	8pcs
L 	H 	G 
2pcs	4pcs	4pcs

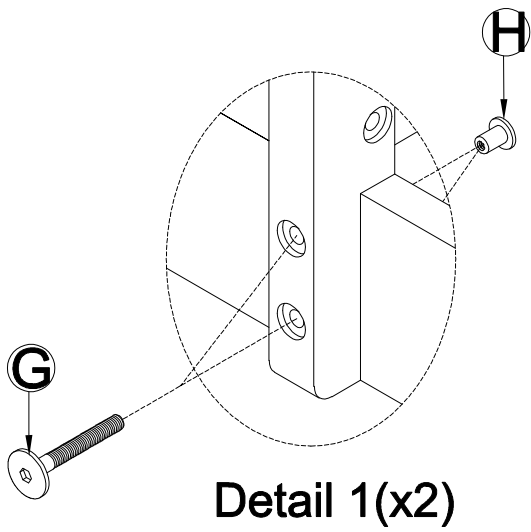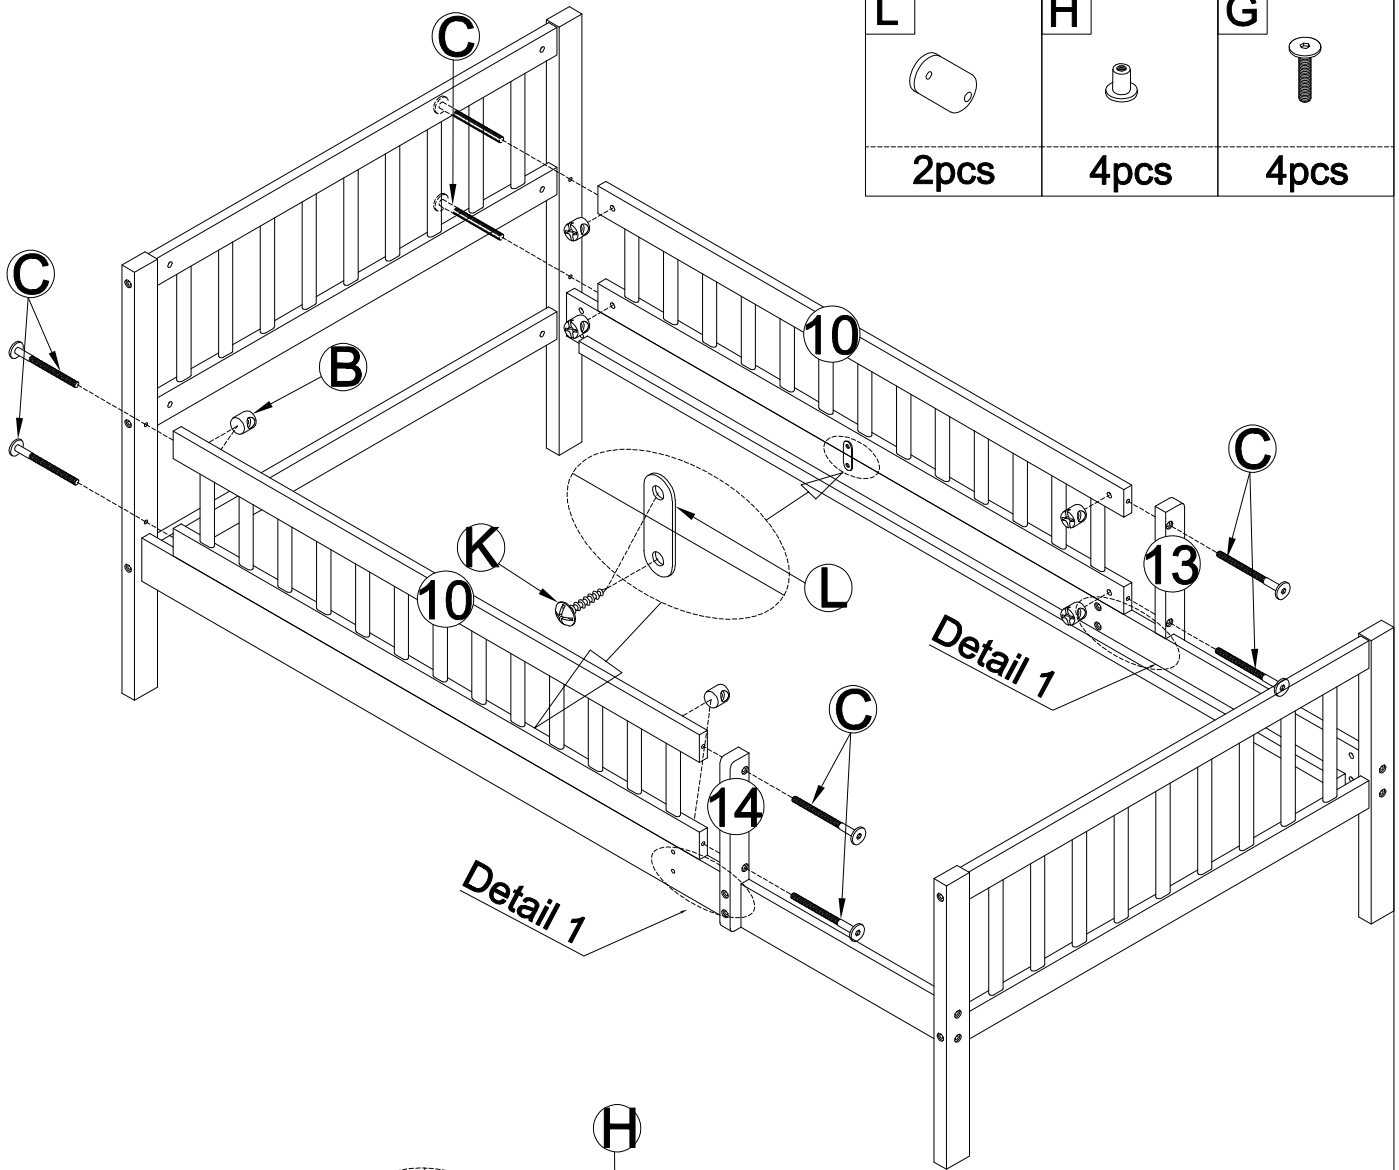





STEP 4: Following below illustration:

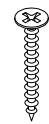F	
20pcs	

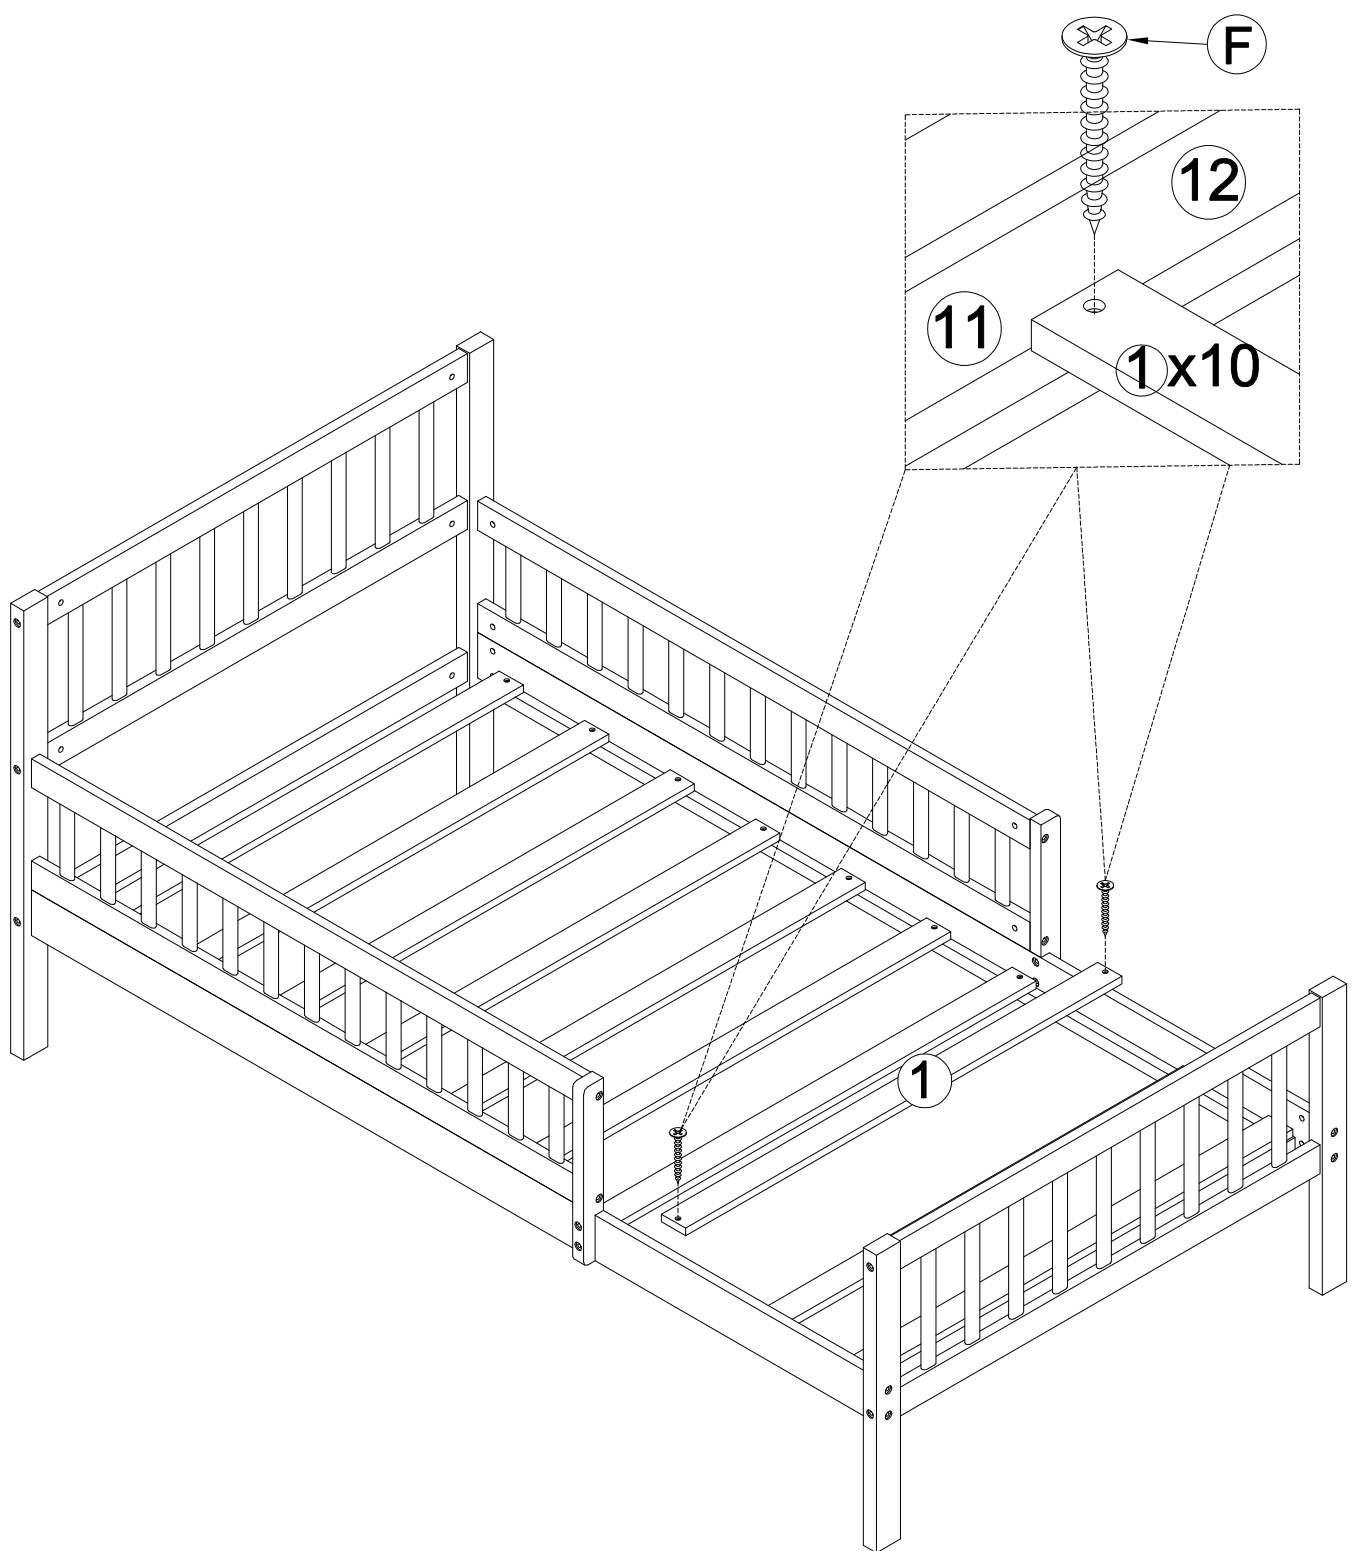


STEP 5-1: Following below illustration:

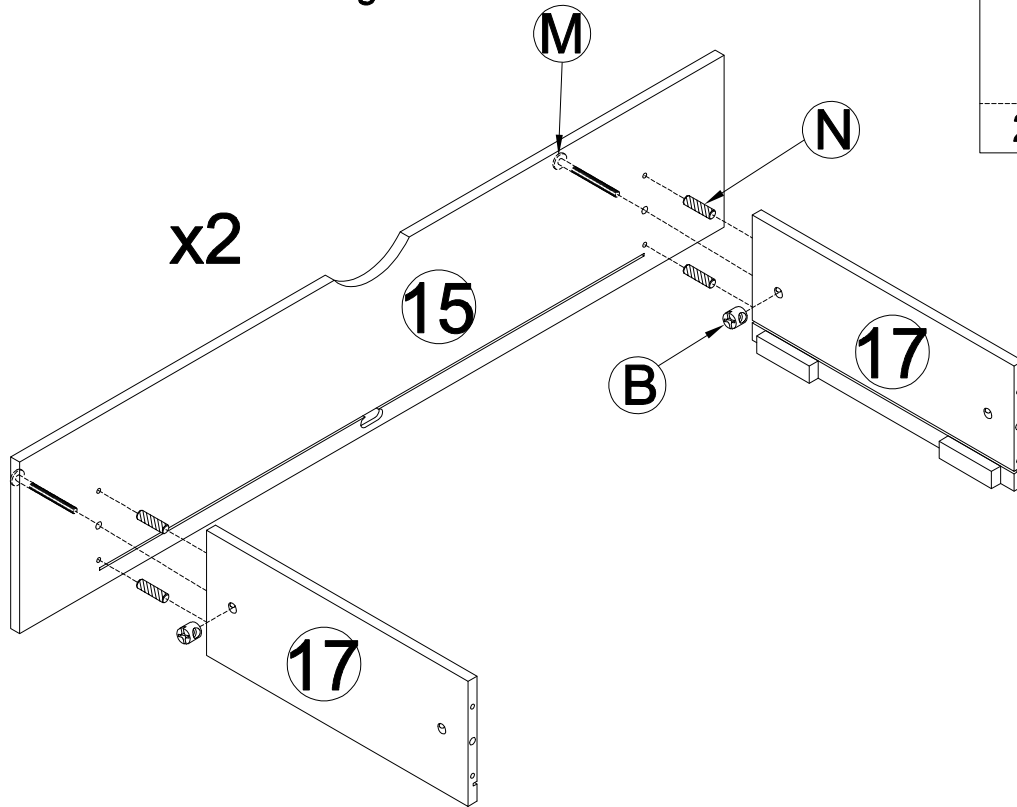

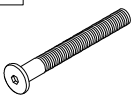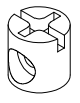
N 	M 
2x4pcs	2x2pcs
B 	
	2x2pcs


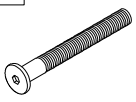


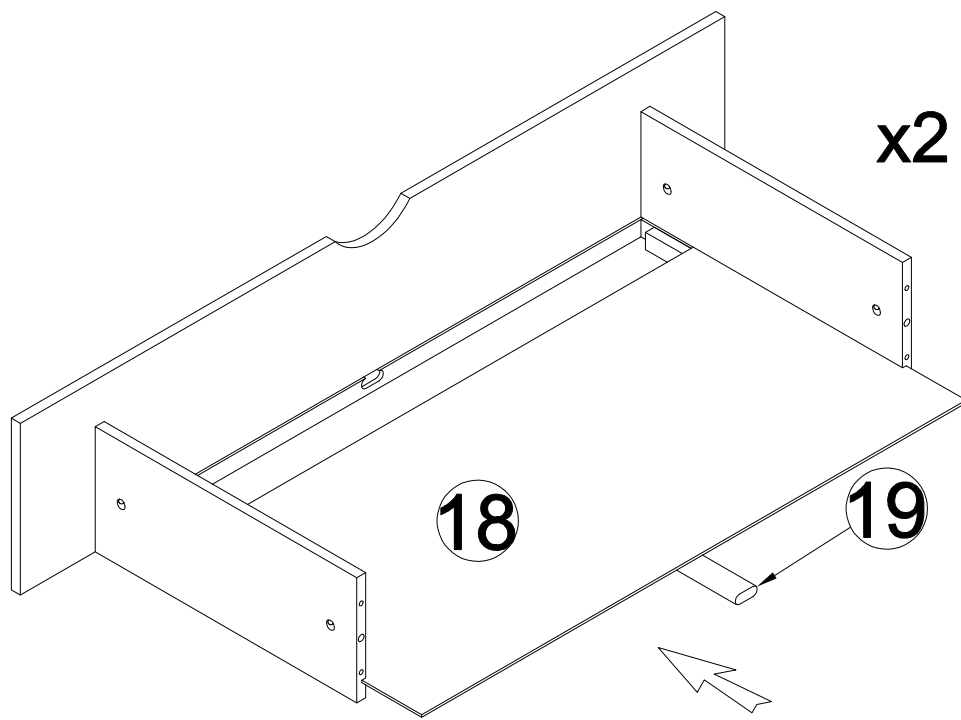STEP 5-2: Following below illustration:




Push detail 19 in first and then push detail 18 into position


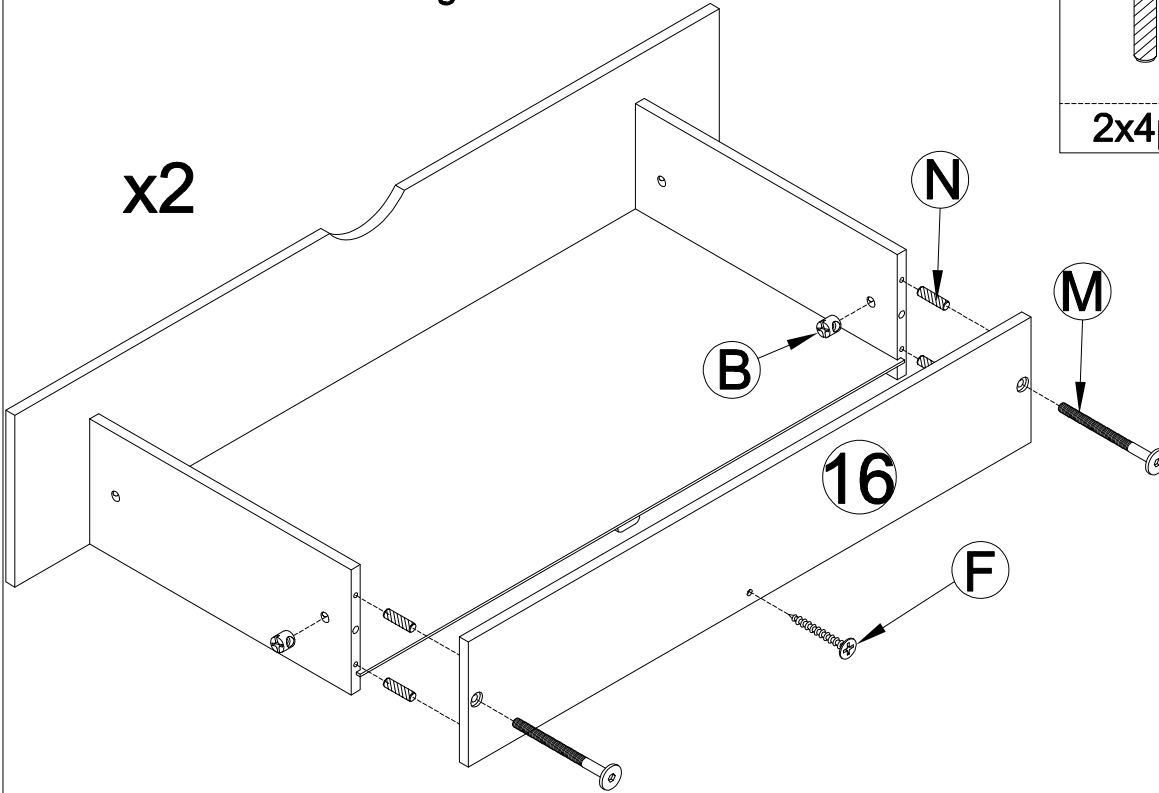
STEP 5-3: Following below illustration:



N 	M 
2x4pcs	2x2pcs
B 	2x2pcs
F 	2x1pcs

STEP 5-4: Following below illustration:

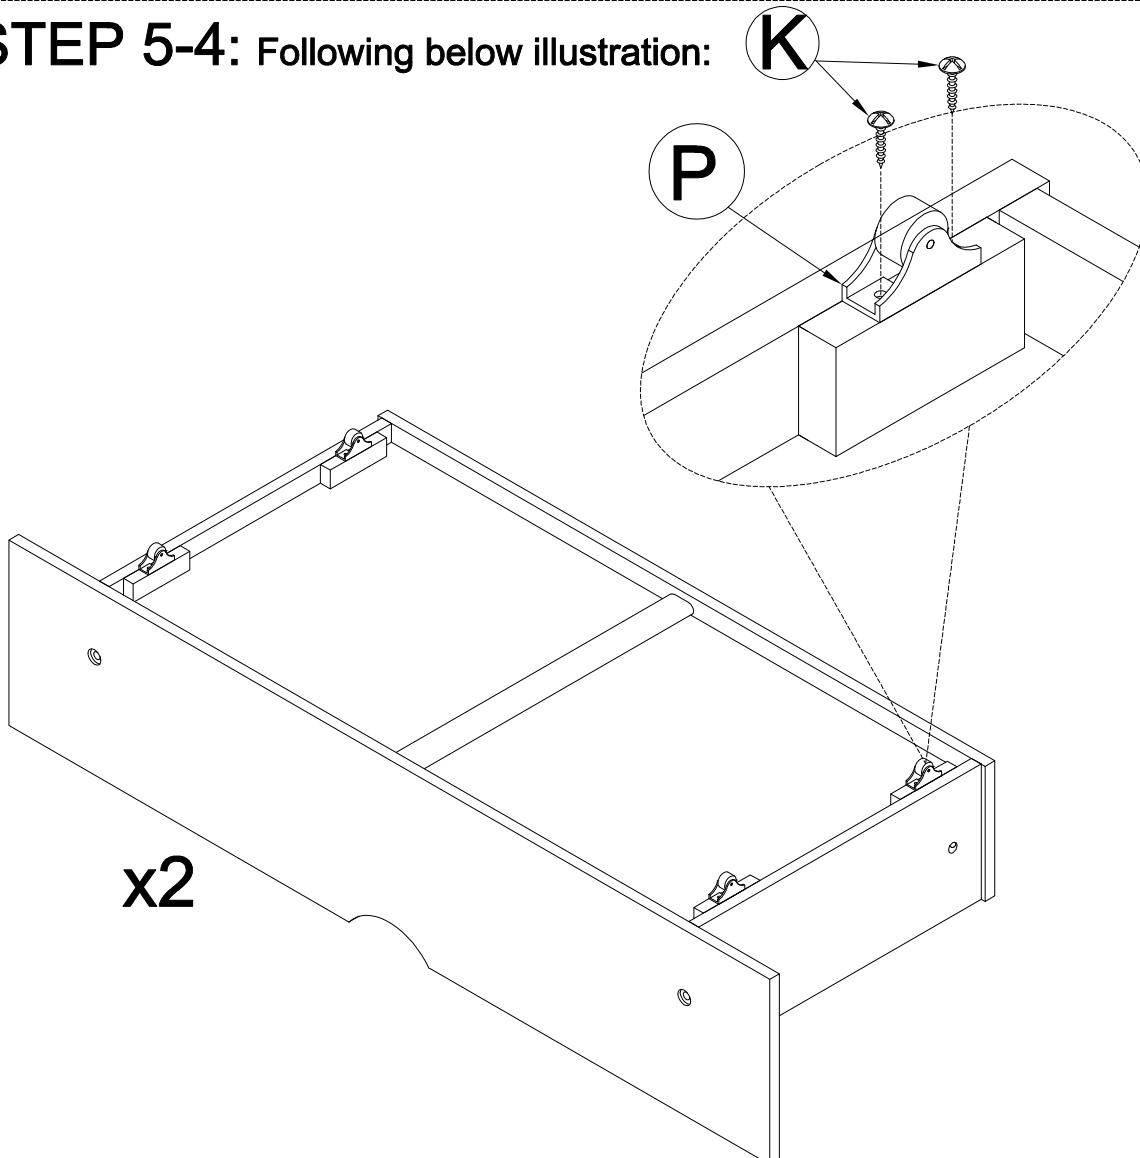

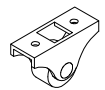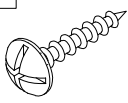P 	2x4pcs
K 	2x8pcs

STEP 6: CONGRATULATION. YOU HAVE COMPLETED THE BED
Push 2 Drawers into position

