


PRODUCT NAME : LED Wall Sconce

Please consult your electrician for hanging fixture and wiring.

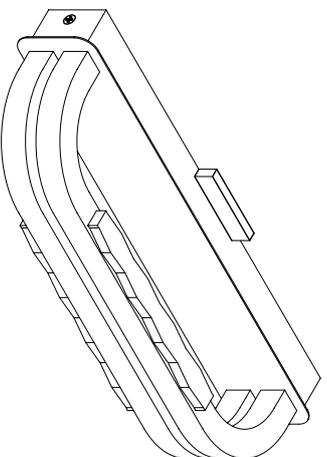

WARNING: WIRES NEED TO BE CONNECTED TO DRIVER FOUND IN CANOPY AND SHOULD NOT CONNECT DIRECTLY TO POWER SOURCE OR A SWITCH MIGHT OCCUR.

13W LED

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.
Below is a list of recommended dimmers:
Lutron MAQL-153M
Lutron DVL-153P
Lutron SCL-153P
Leviton IPL06-10Z
Leviton 6674-PROW


Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

PRODUCTS ARE NOT INENDED FOR COMMERCIAL USE.

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation




(A)
Bracket

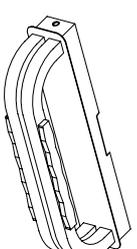


(B)
Canopy

Locate all hardware & components before discarding packaging

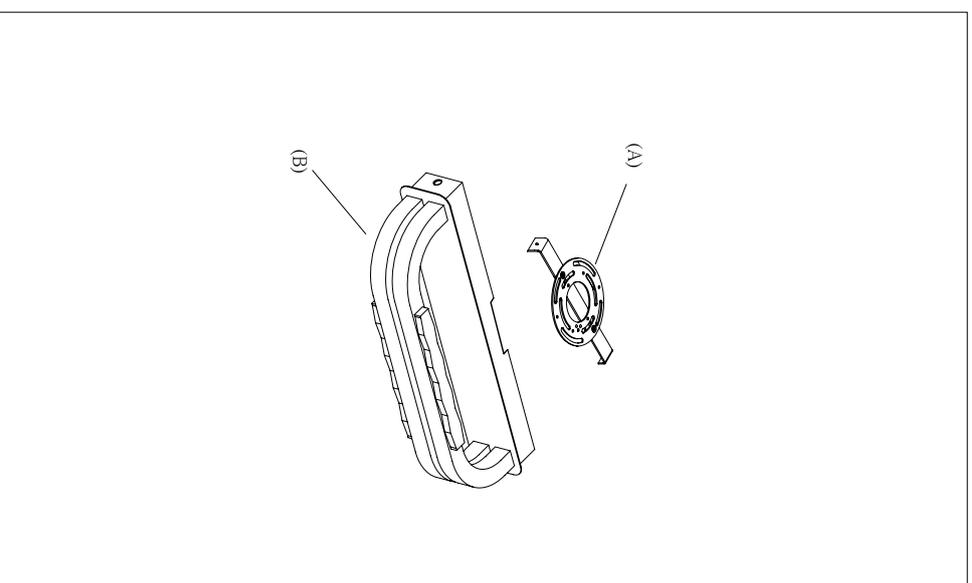


1.)

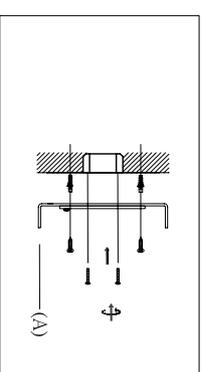


Step 1: Remove Bracket (A) from fixture and install to electrical box.

2.)

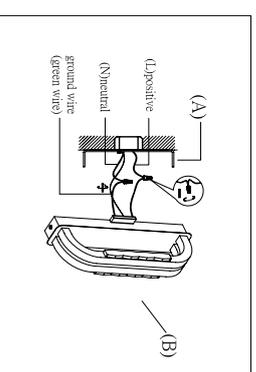

Step 2: Wire fixture to wires in outlet box. Install Green wire to Ground Screw.

3.)

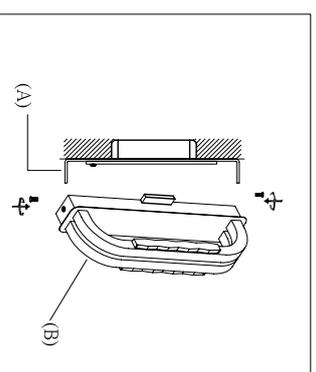

Step 3: Install Body (B) to Bracket (A) and tighten screws at the ends of the canopy to secure.

Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.