

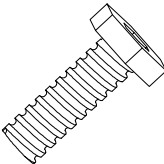

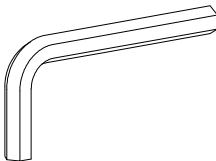


ASSEMBLY INSTRUCTION


CVFNR5305

S.NO.	DESCRIPTION			QTY	S.NO.	DESCRIPTION		QTY
A	A		TOP	1	C		ALLEN BOLT (8 x 25 mm)	1
	B1		BASE	1		D		ALLEN KEY (4 mm)
B	B2			1				


STEP 1. Place the Top and base on clean surface.

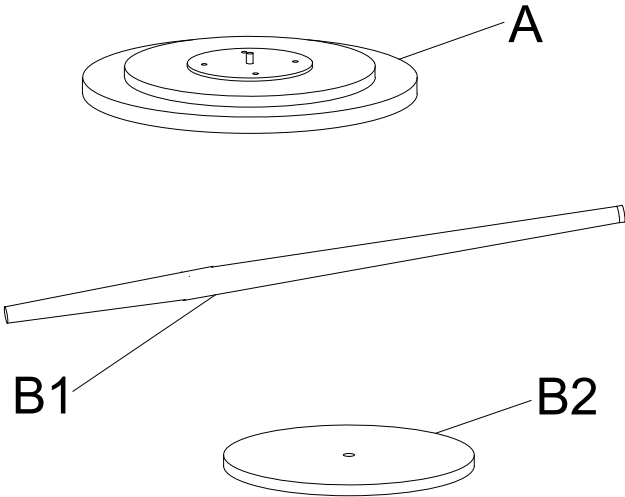

STEP 2. Place the Top upside down and rotate the Base (B1)

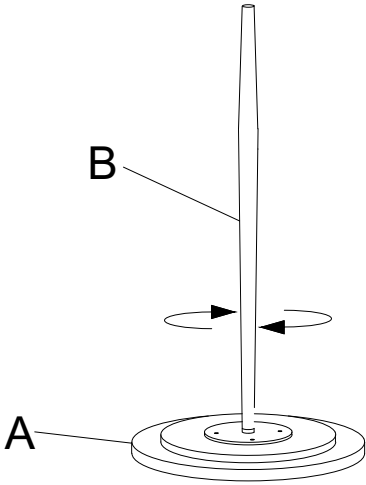

STEP 3. Now assemble the Base B2 with using Allen bolt and Allen Key.

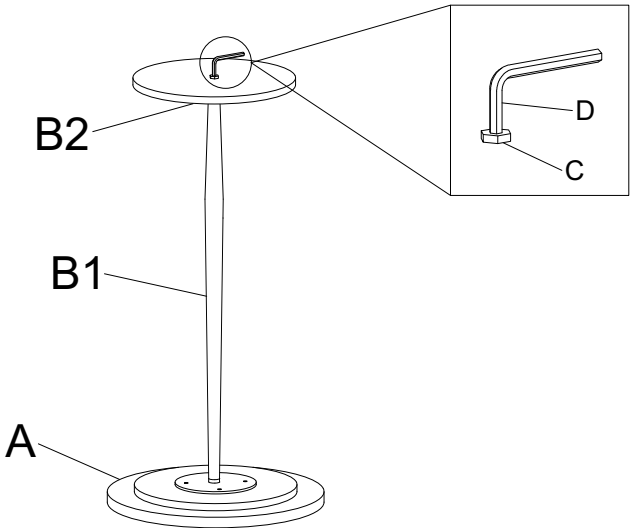

STEP 4. Assembly complete

