

HAPPINESS INSTALLATION



CAUTION

Parts are placed at the bottom of the product.

- If you have any questions with the product, please contact us by:
- **Email: customerservice@zoy-living.com**
(we will reply to you within 24 hours)

Assembly Instructions






Model: SS3583AF

CAUTION


DO NOT use any sharp objects to open plastic wrapped components as this may result damage to product or components .









Your recliner comes packaged in two boxes. Carefully remove all of components from the packaging and setaside for assembly.

Package Contents

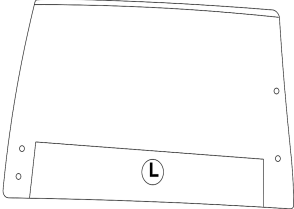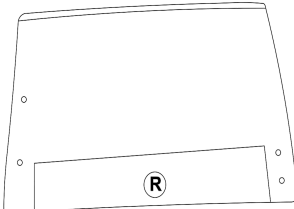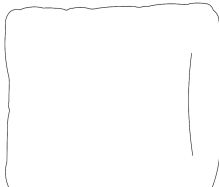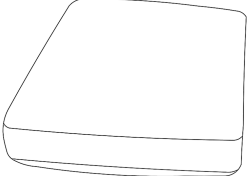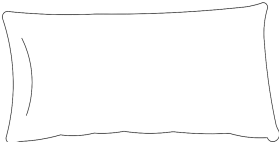
BOX 1 SS3583AF63D				
	A*1	B*1	C*3	D*1
				
E*3				








Please carefully remove all components from the cardboard box and set them aside for assembly. Note: The left and right armrests (A and B) each contain a compressed backrest and an armrest pocket (C and E) inside. To remove these backrests, gently unzip the zippers at the bottom of each armrest (A and B), then carefully pull out the compressed backrest and the armrest pocket (Cand E). After removing the backrests , rezip the zippers at the bottom closed.

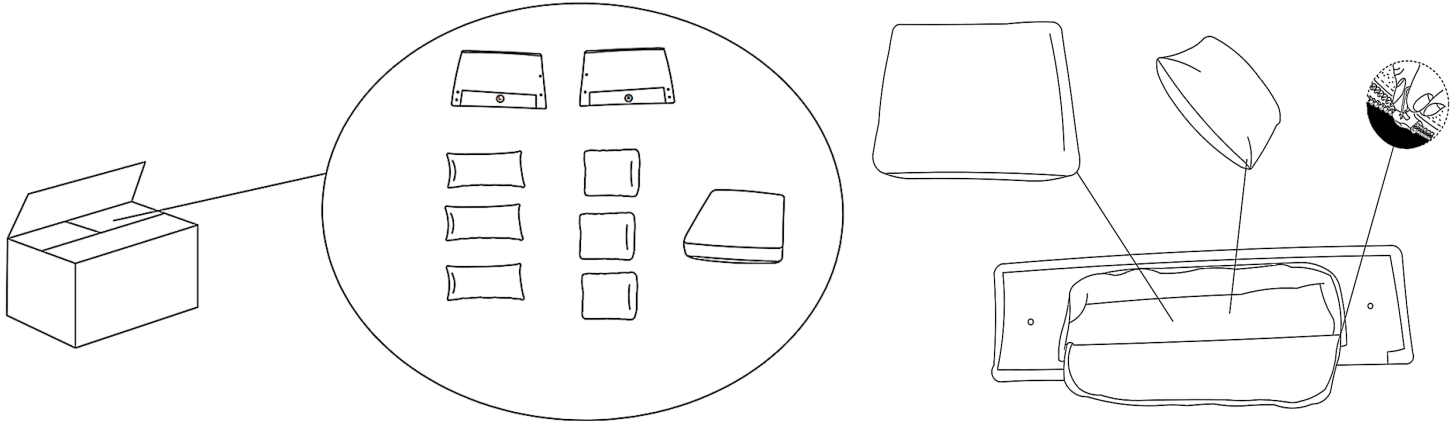

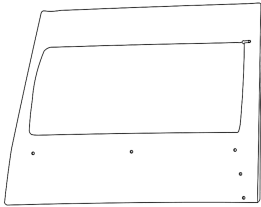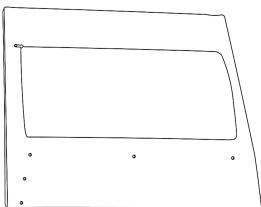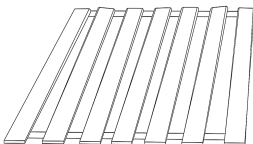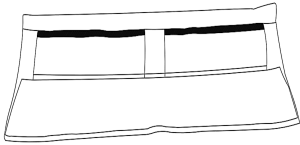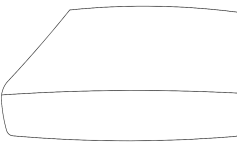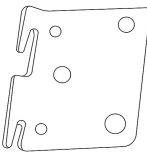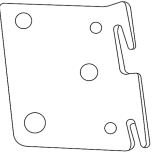BOX 2 SS3583AF63D					
	F*1	G*1	H*2	I*4	
					
J*1	K*2	L*1	D*2	M*2	
					
N*1	O*1	P*4	Q*2	H1*1	H2*1

Please carefully remove all components from the cardboard box and set them aside for assembly.


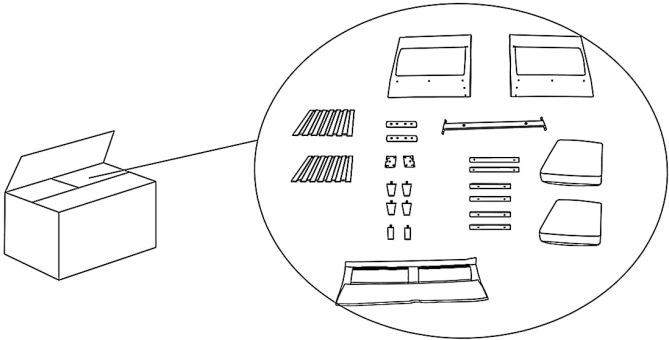


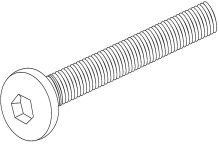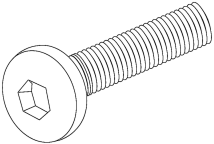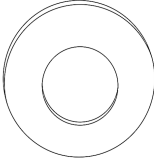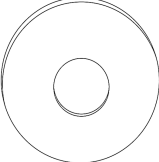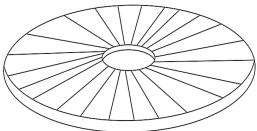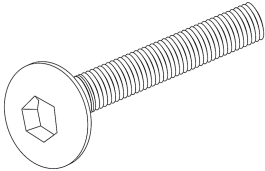R	S	T	U	V
				
M6*25-BLACK	M8*50-BLACK	M8*25-BLACK	φ8*φ20*T2-BLACK	φ6*φ16*T1-BLACK
6PCS	6PSC	12PCS	6PCS	12PCS
W	X	Y		
				
5MM-BLACK		M6*45-BLACK		
1PCS	6PCS	12PCS		



1 Sofa Assembly – Installation Steps

Step 1


Use the wrench (W) to tighten the screw (T) onto the handrails (A & B). Note: Tighten only to 50 percent.

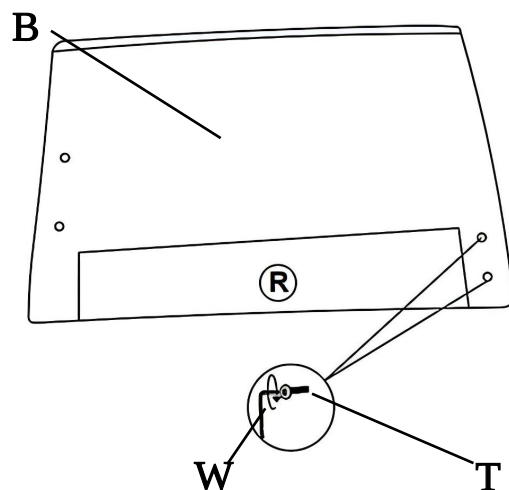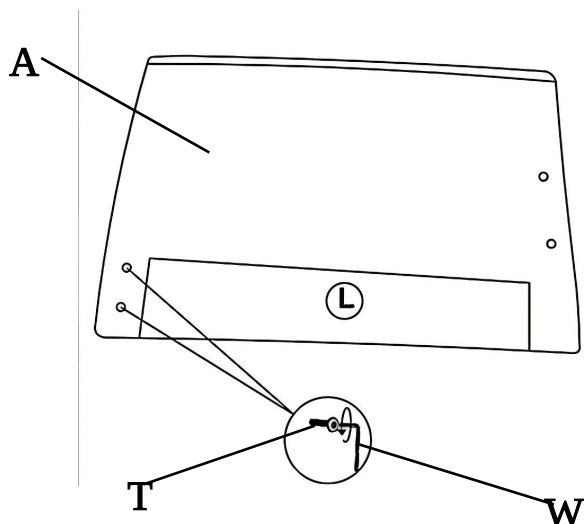

Step 2 Using wrench (W), tighten the screws (R), then secure the brackets (H1 and H2) to the front panel (N and O). Note: Be sure to tighten them to 100%.

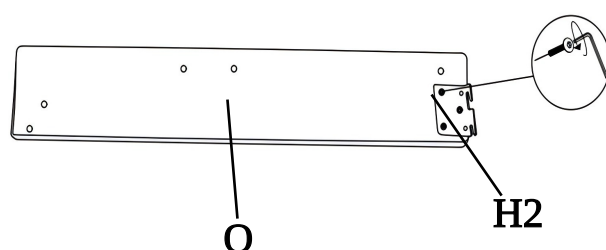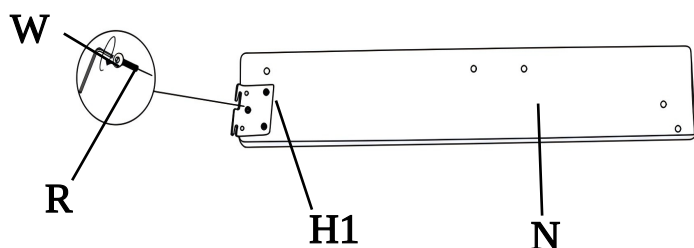


Step 3 Open the backrest (F&G) zipper.

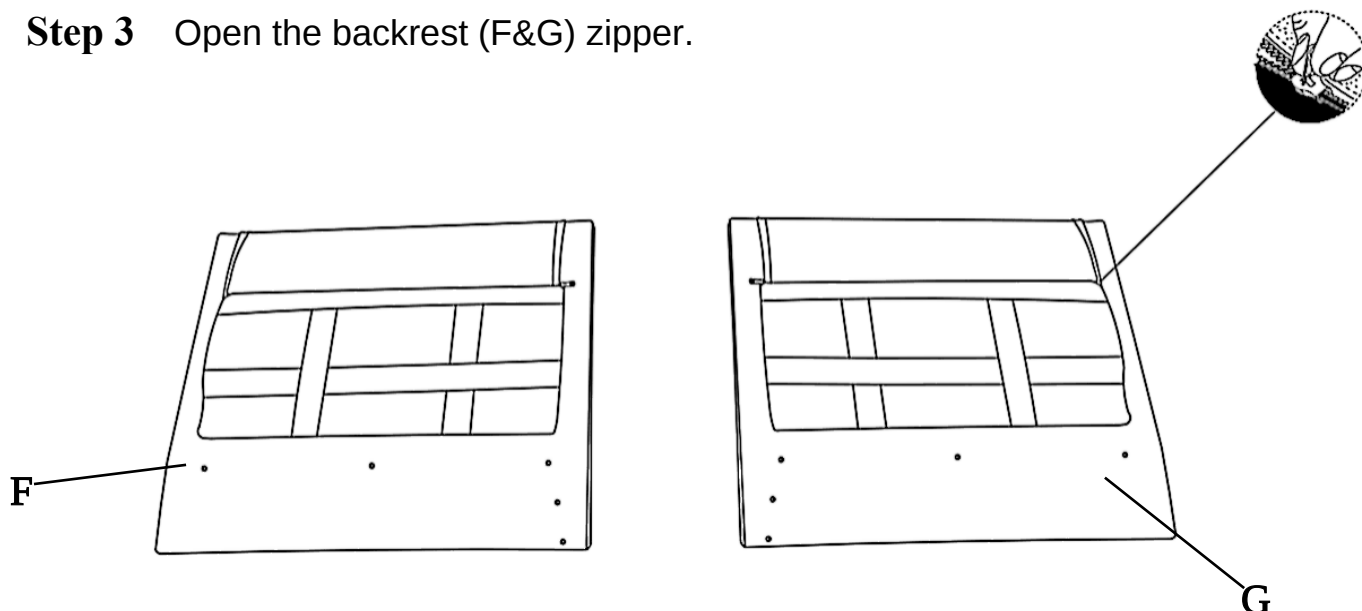


2 Sofa Assembly – Installation Steps

Step 4 Use wrench (W) to tighten the wooden crossbar (I & K & I) against the front panel (N & O), and pass the screw (Y) through the washer (V). Note: The side of the wooden crossbar with the Velcro should face upward. Tighten to 100%. Then, use wrench (W) to insert the screw (T) through the connecting metal plate (Q) and secure it to the front baffle (N & O). Tighten to 100%.

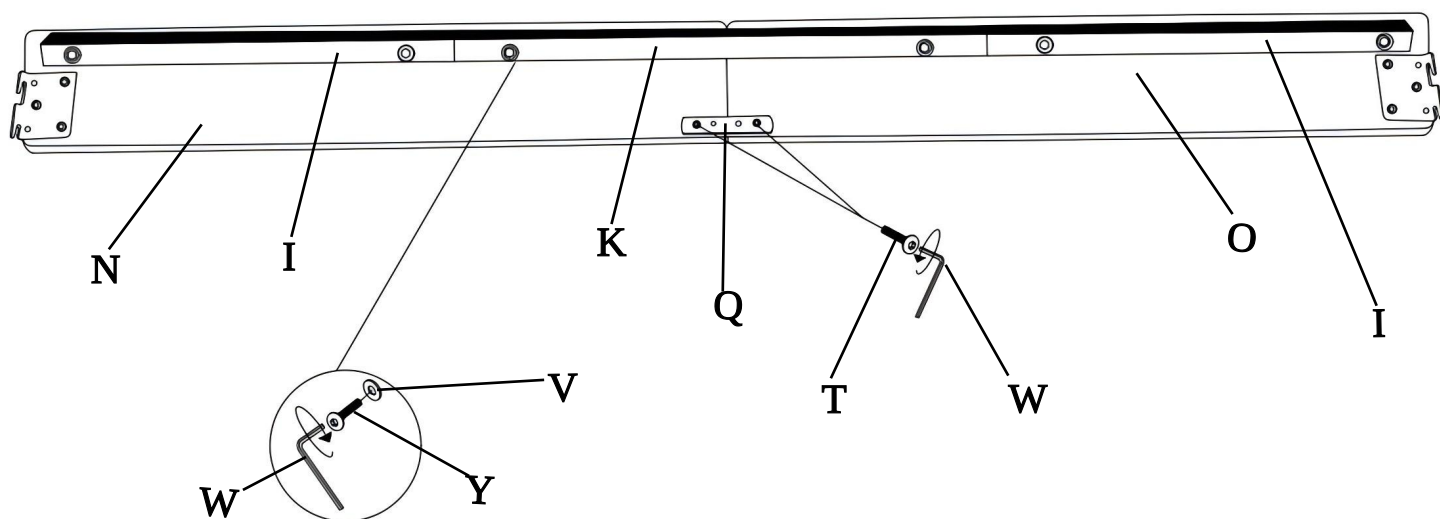


Step 5 Use wrench H8 to tighten the screw (screw S) through the washer (U) and into the wooden spacer located in the middle of the backrest (F & G).

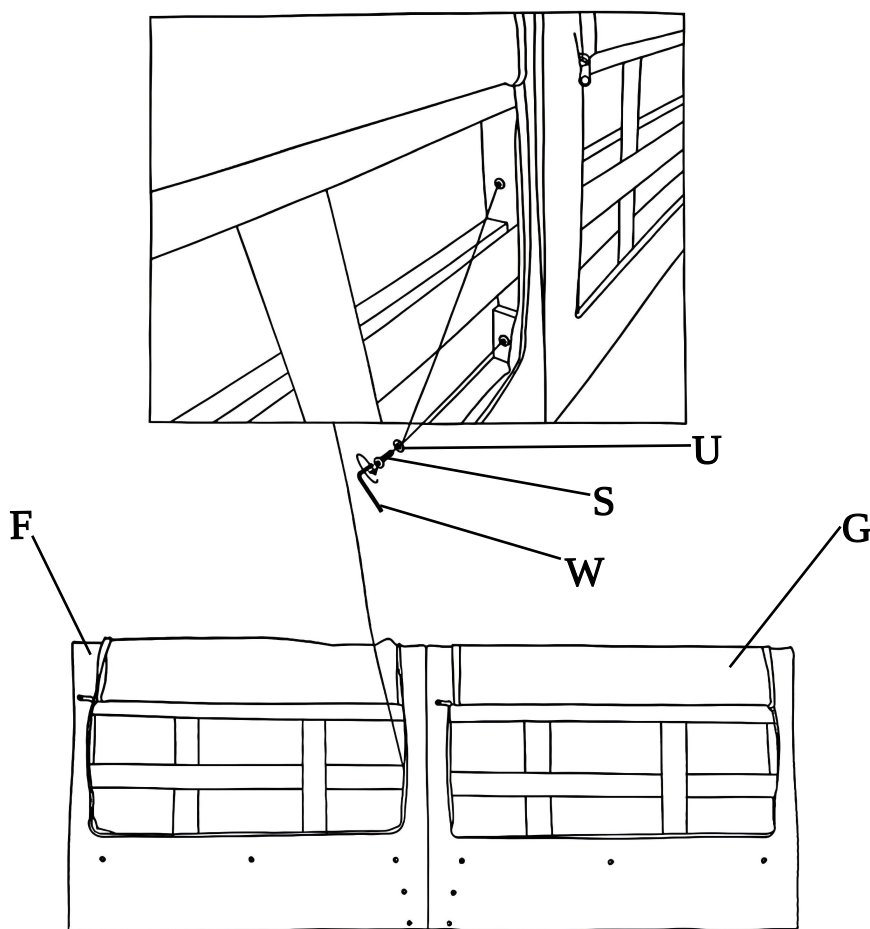


3 Sofa Assembly – Installation Steps

- Step 6** Use wrench (W) to tighten the wooden crossbars (I, K, I) to the backrest (F & G), ensuring that the screws (Y) pass through the washers (V). Note: The side of the wooden crossbar with the Velcro should face upward. Tighten to 100%. Next, use wrench (W) to insert the screws (T) through the connecting metal plate (Q) and secure them to the backrest (F & G). Again, tighten to 100%.

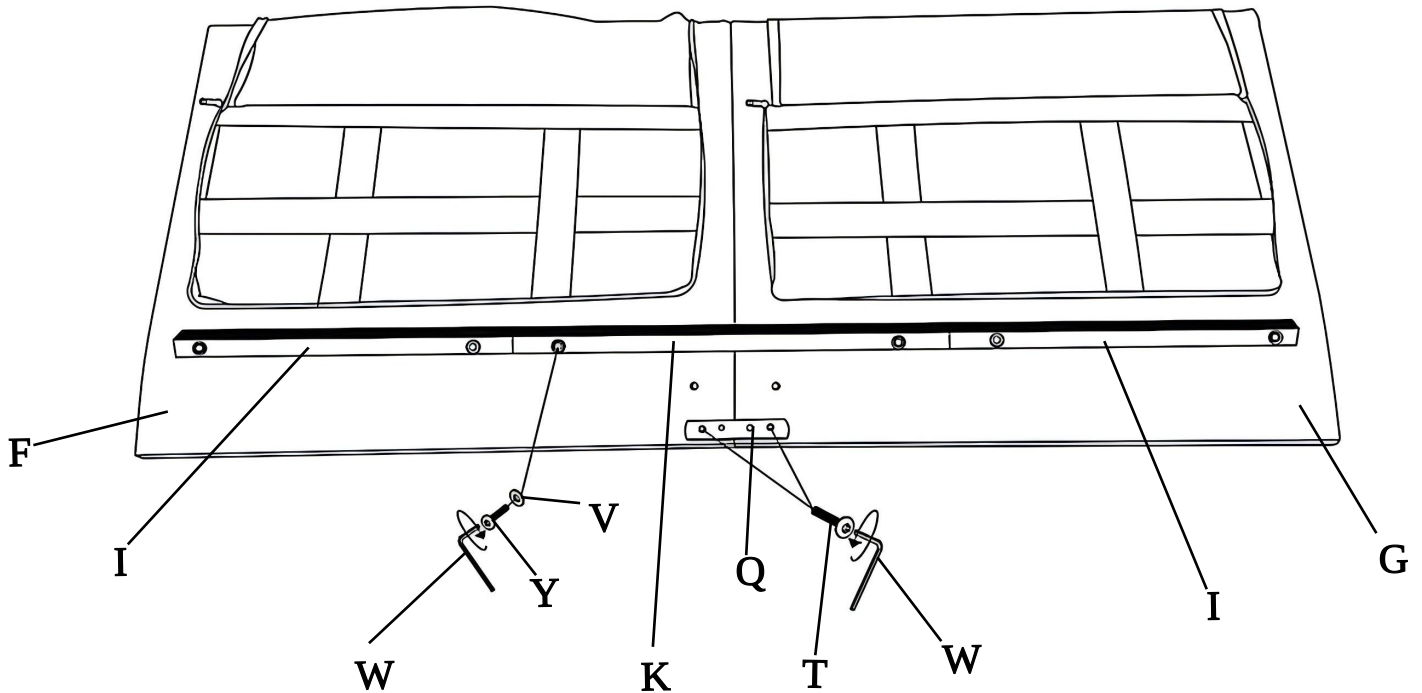


- Step 7** Attach the backrests (F & G) to the armrests (A & B) using screws (S) and washers (U). Tighten with a wrench (W) to 80%.

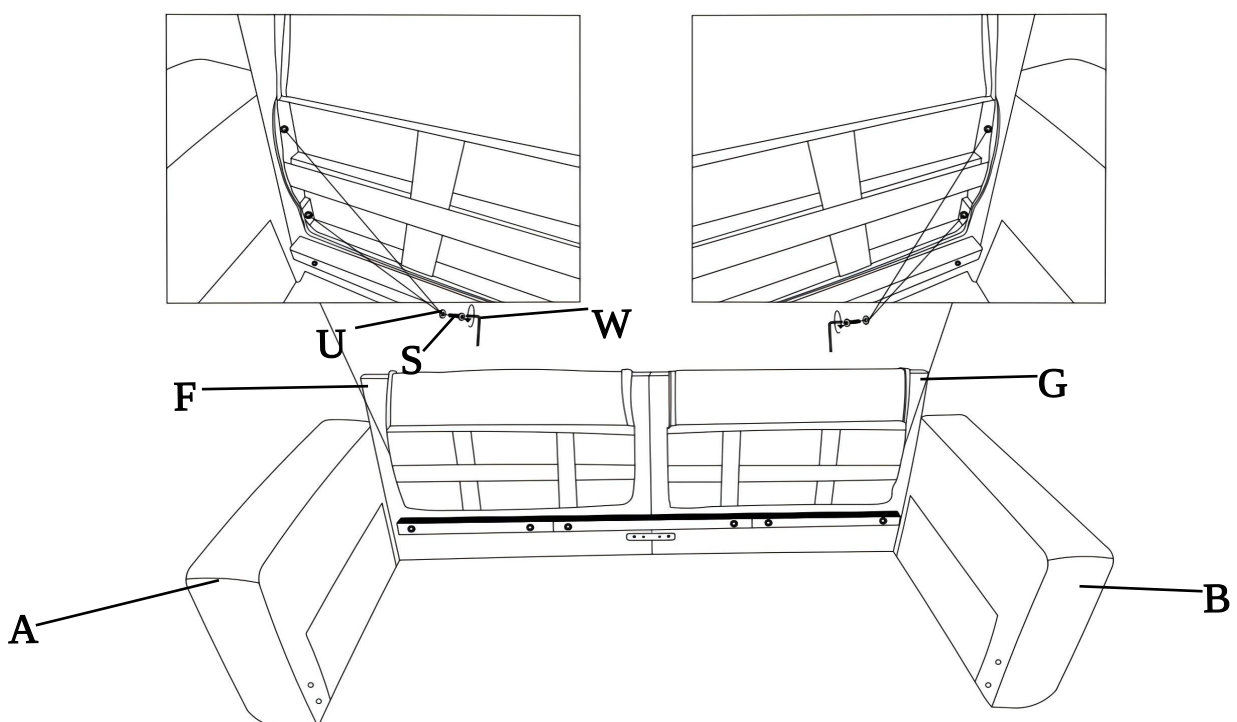

4 Sofa Assembly – Installation Steps


Step 8 The installed front panel is placed on the inner-side screws in front of the left and right armrests (A&B) using hanging clips.

Note: Do not tighten them yet.

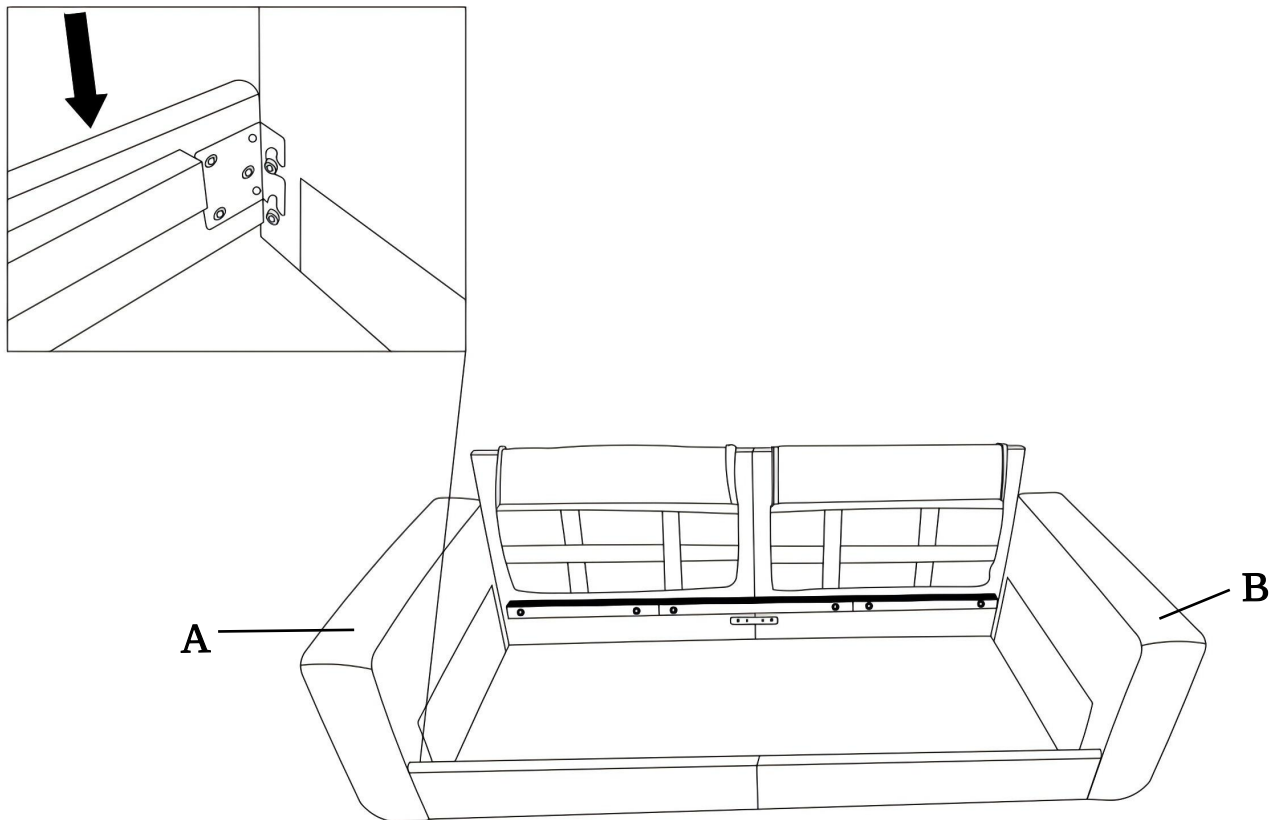


Step 9

Tighten all screws on the armrests (A and B) and the backrest (F & G) using a wrench (W).

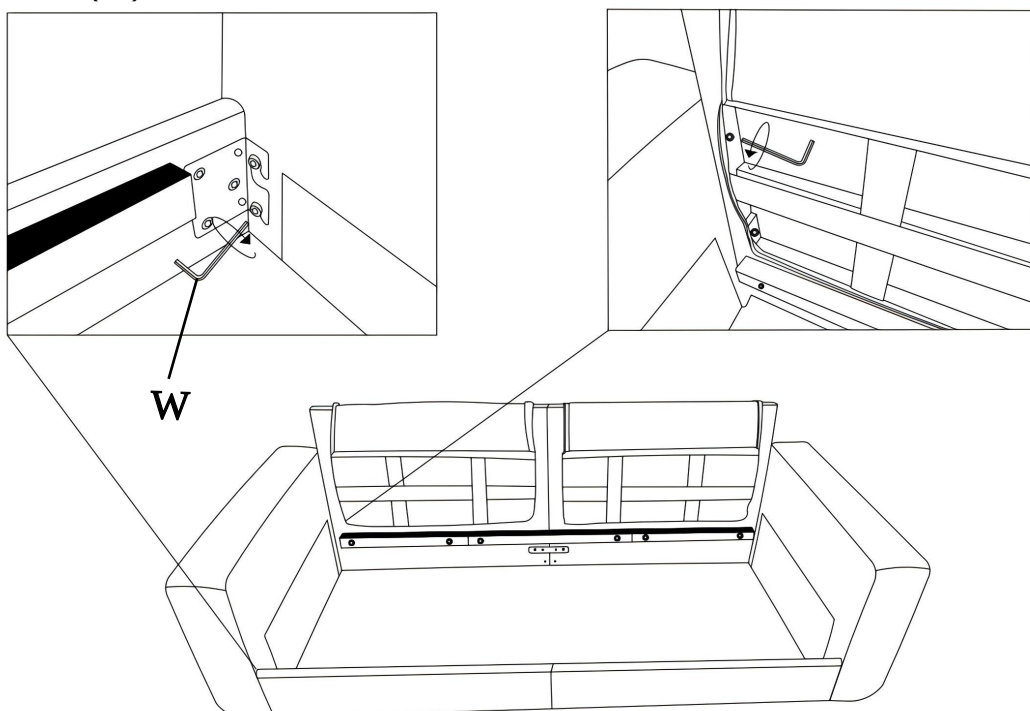


5 Sofa Assembly – Installation Steps

Step 1 0 Zip up the backrest.

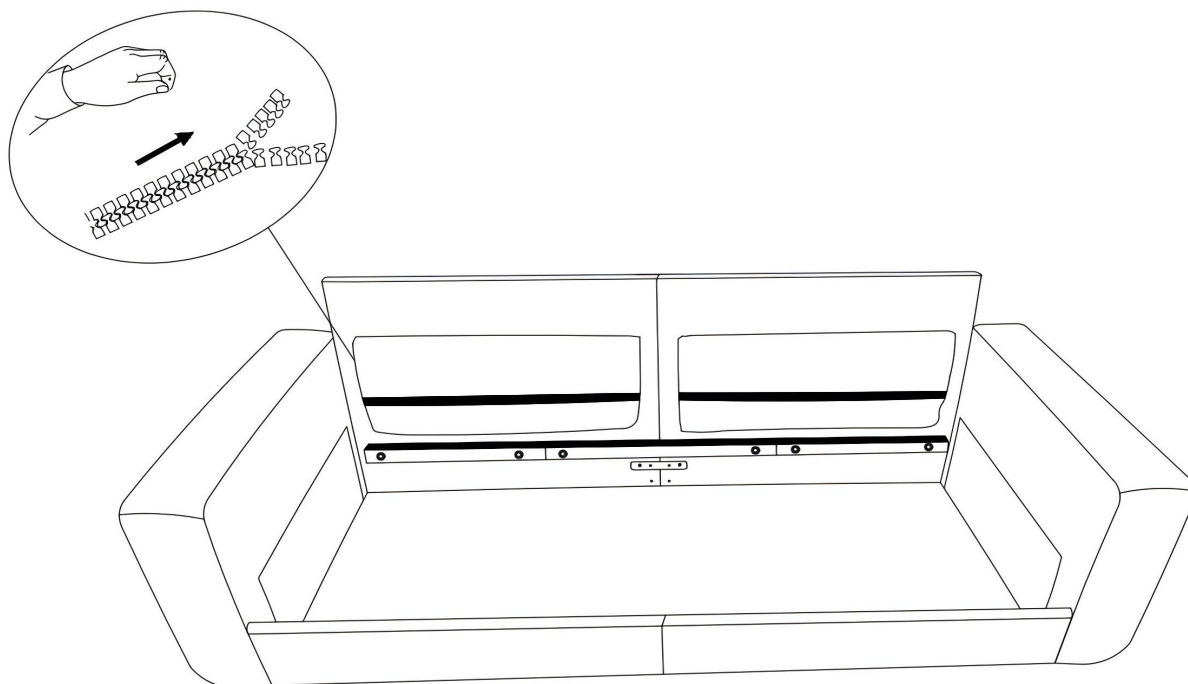


Step 1 1 Attach the iron crossbar (L) to the front panel and backrest using screws (T), and tighten them with a wrench (W). Note: Be sure to tighten the screws to 100%.

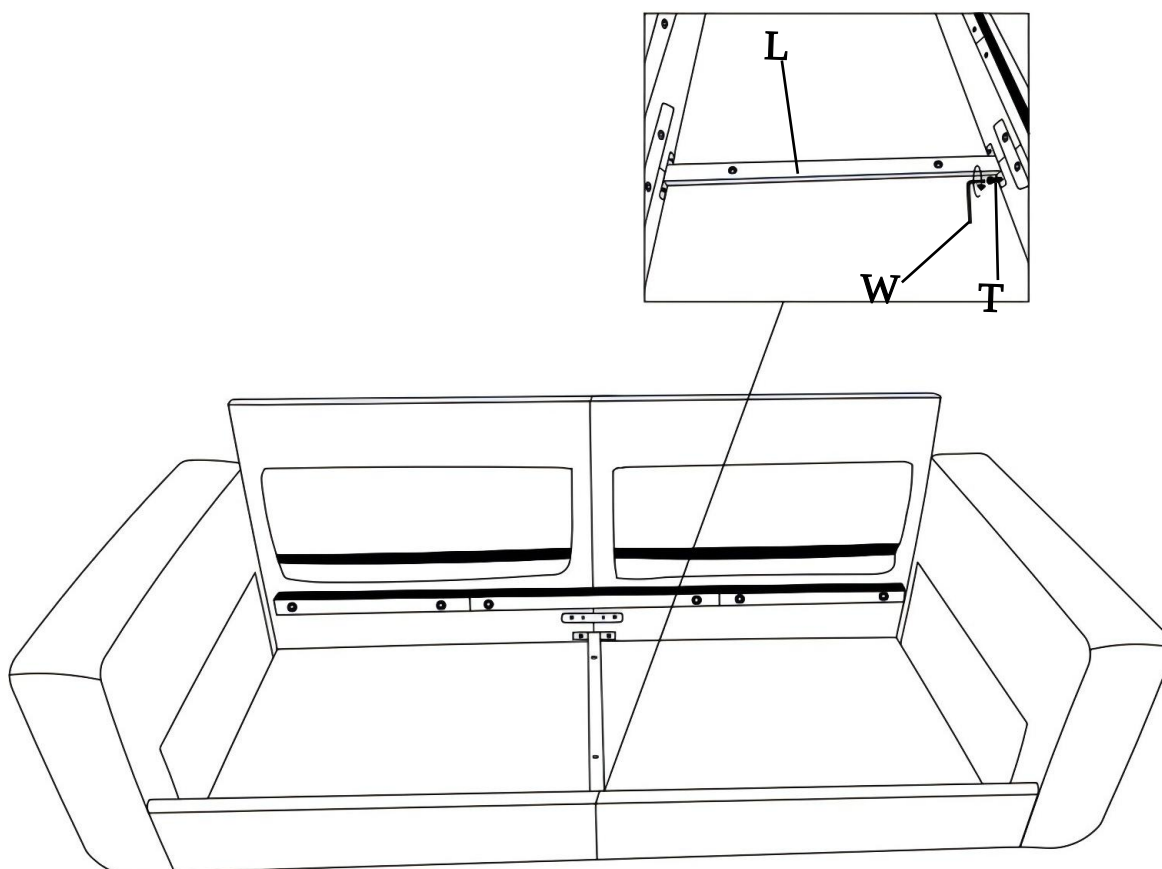


6

RECLINER ASSEMBLY - BODY SETUP

Step 1 2 Attach the plastic feet (P*4&M*2) with plastic washers (X*6) by screwing them into the four corner mounting holes and the two middle mounting holes.

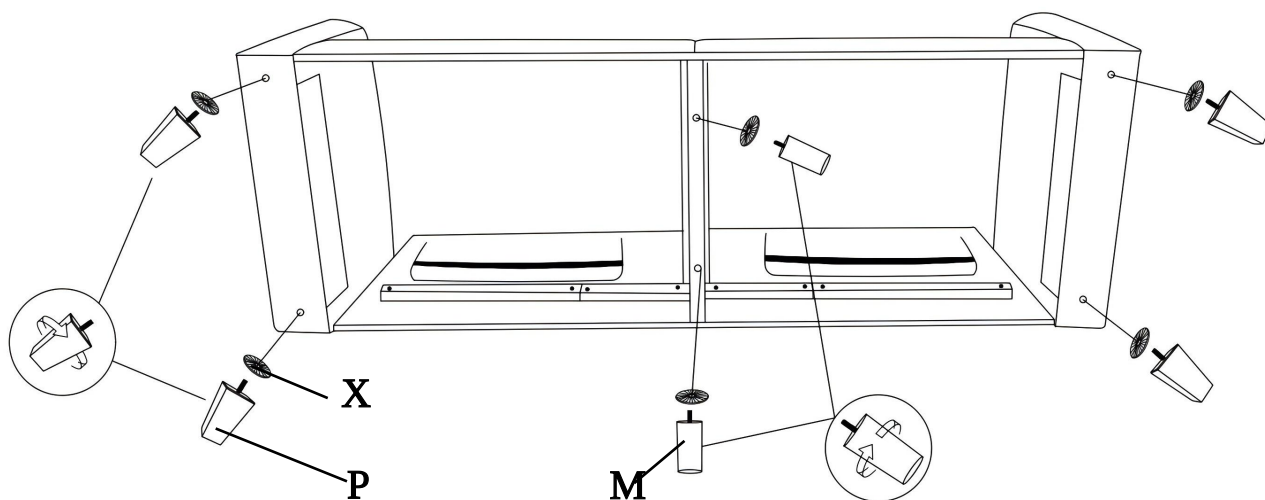


Step 1 3 Put the assembled backrest cover (J) over the backrest, and after installation, securely fasten the front and back Velcro straps on the backrest and the cover.

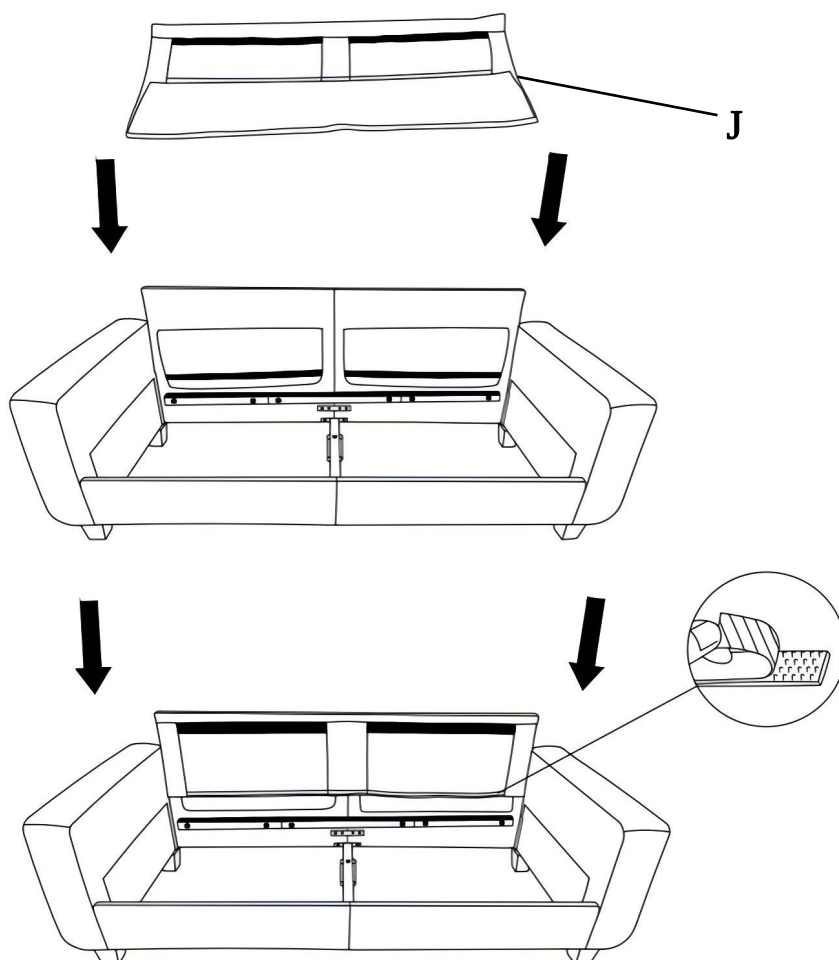


7 Sofa Assembly – Installation Steps

Step 1 4 Attach the rib strips (H*2) to the middle crossbar of the front panel and backrest. Note: The side with the Velcro should face downward.

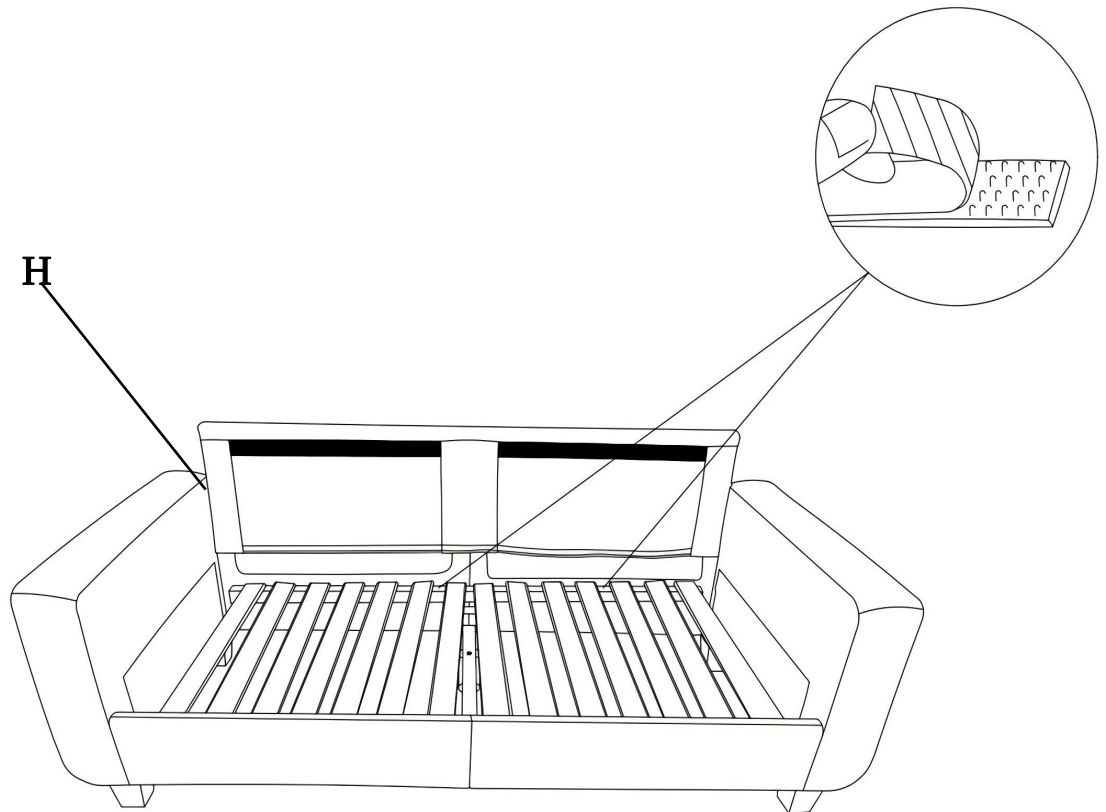


Step 1 5 Place the cushion bag (D*3) above the ribs.

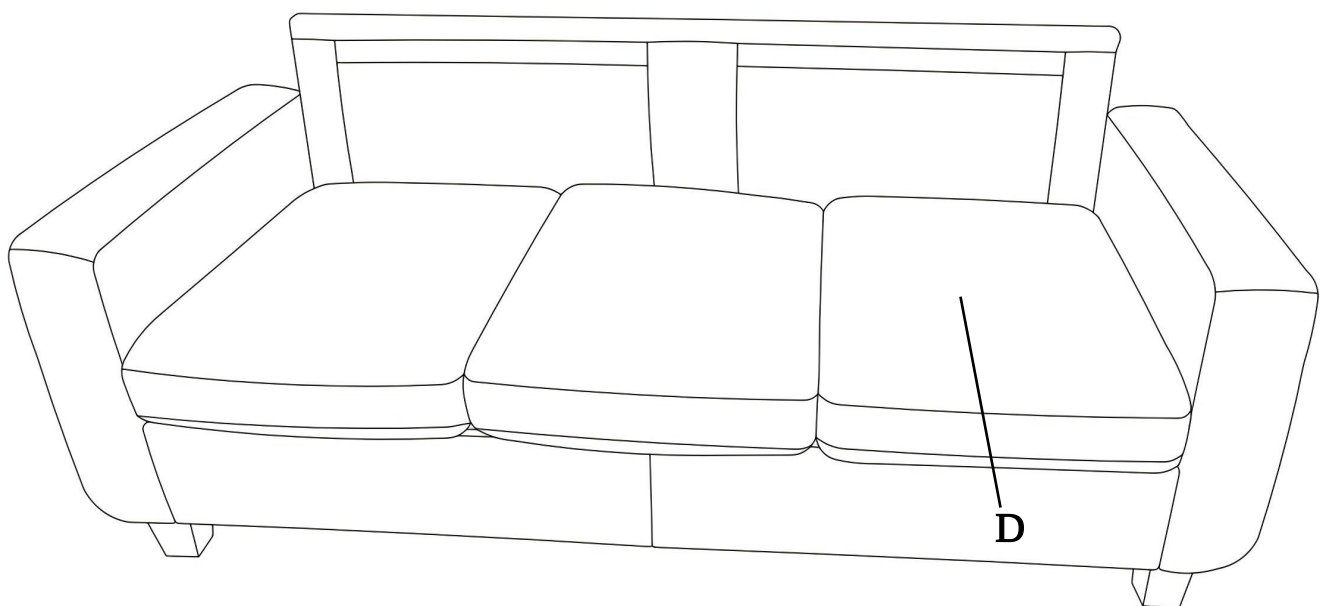

8 Sofa assembly—assembly completed


Step 16

The backrest (C*3) is placed on top of the cushion bag, and the Velcro on its back side sticks to the Velcro on the backrest.

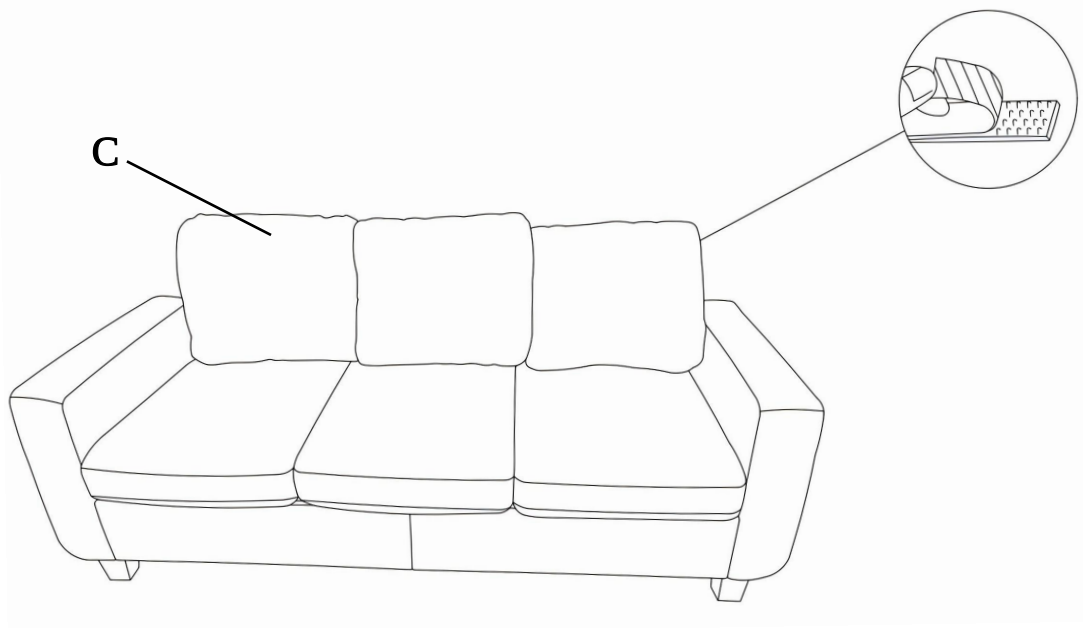


Step 17

The lumbar pillow (E*3) is placed above the cushion bag.

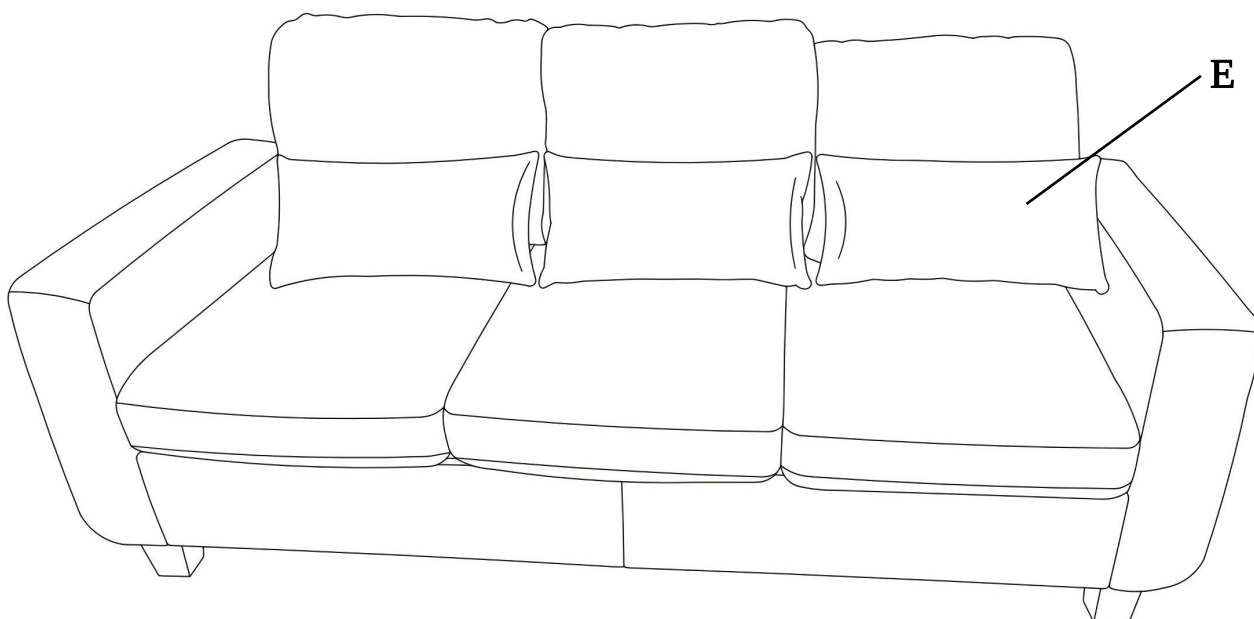

9 Sofa assembly—assembly completed

Assembly
completed

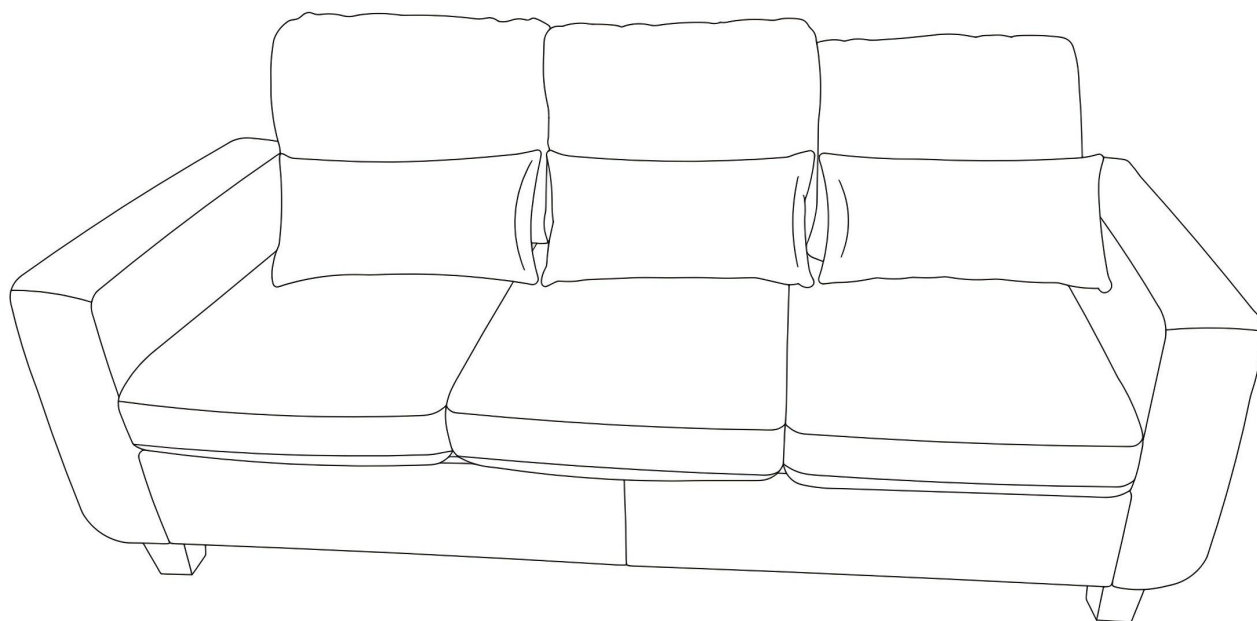

SOFA
SS3583A

⚠️ WARNINGS

1. Please check if the components of the chair are all included and can be used normally.
2. Assemble all components according to the instruction correctly before you connect the chair to the power.
3. Please DO NOT sit on the armrests or footrest to eliminate the risk of tipping over.
4. If the chair is damaged or doesn't match the website description, please send clear pictures of the product and label of the carton to our service team for further help.
5. If the recliner doesn't work, you may try the following measures for self-checking firstly:
 - a) check if all the cables are connected;
 - b) check if the light of transformer is on.

If the chair still doesn't work, please feed the information back to our customer service in time and we will help you solve the matter as soon as possible.

6. If you have any questions about our products, please contact us by:

Email: customerservice@zoy-living.com (we will respond to your inquiry within 24 hours)

