


ASSEMBLY INSTRUCTIONS FOR 3-Arm Floor Lamp

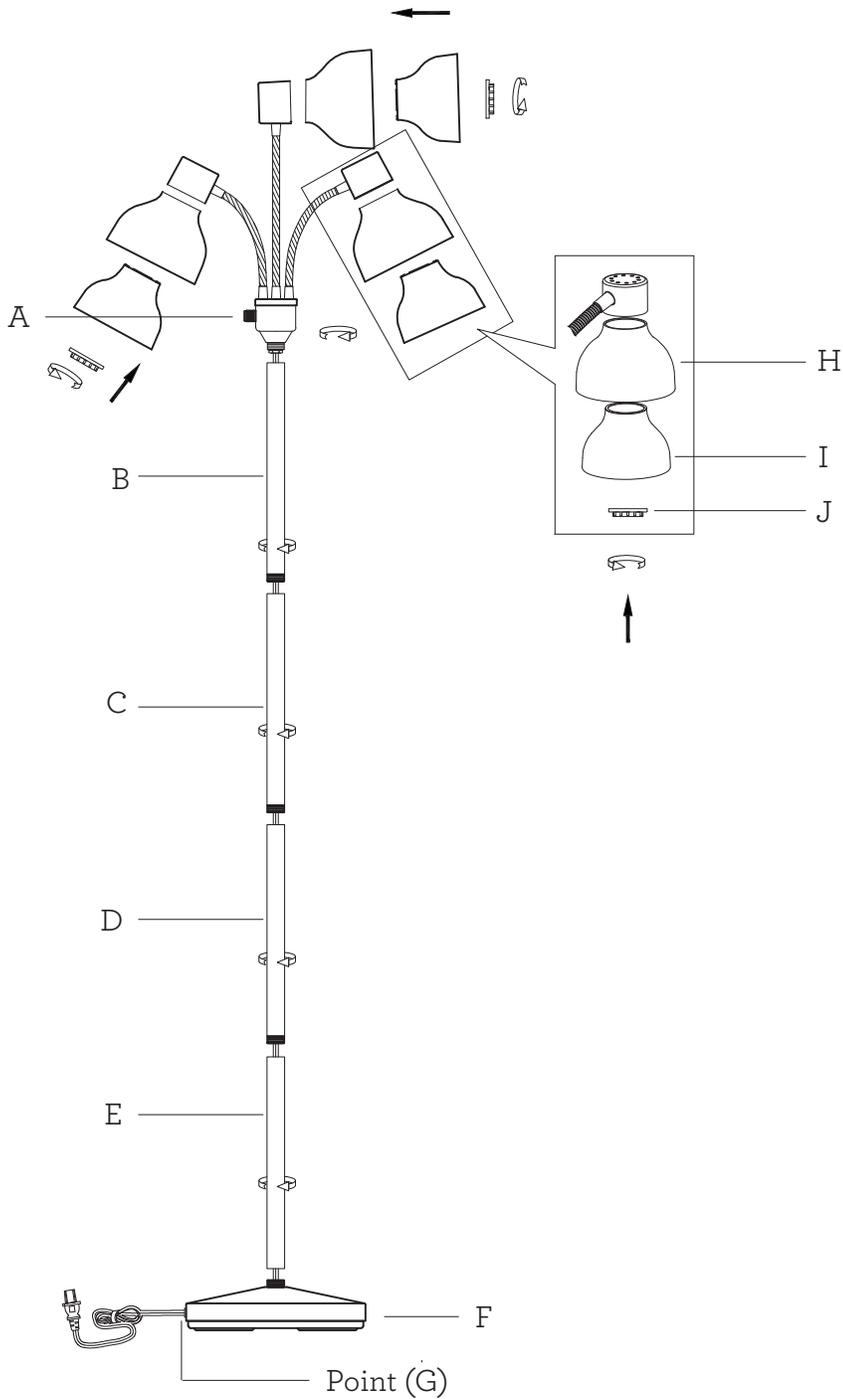

1. Remove all parts and lay on a flat surface.
2. Screw socket cup (A) clockwise into pole (B) to tighten.
3. Screw pole (B) clockwise into pole (C) to tighten.
4. Screw pole (C) clockwise into pole (D) to tighten.
5. Screw pole (D) clockwise into pole (E) to tighten.
6. Screw pole (E) clockwise into base (F) to tighten. Then get the remaining slack of the power cord out carefully from point (G).
7. Set inner shade (I) onto outer shade (H) and both shades onto socket cup (A). Then screw the socket ring (J) clockwise onto socket to secure the shade. Repeat this step for all shades.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (3) 40 watt incandescent or 13 watt CFL equivalent . (not included)