

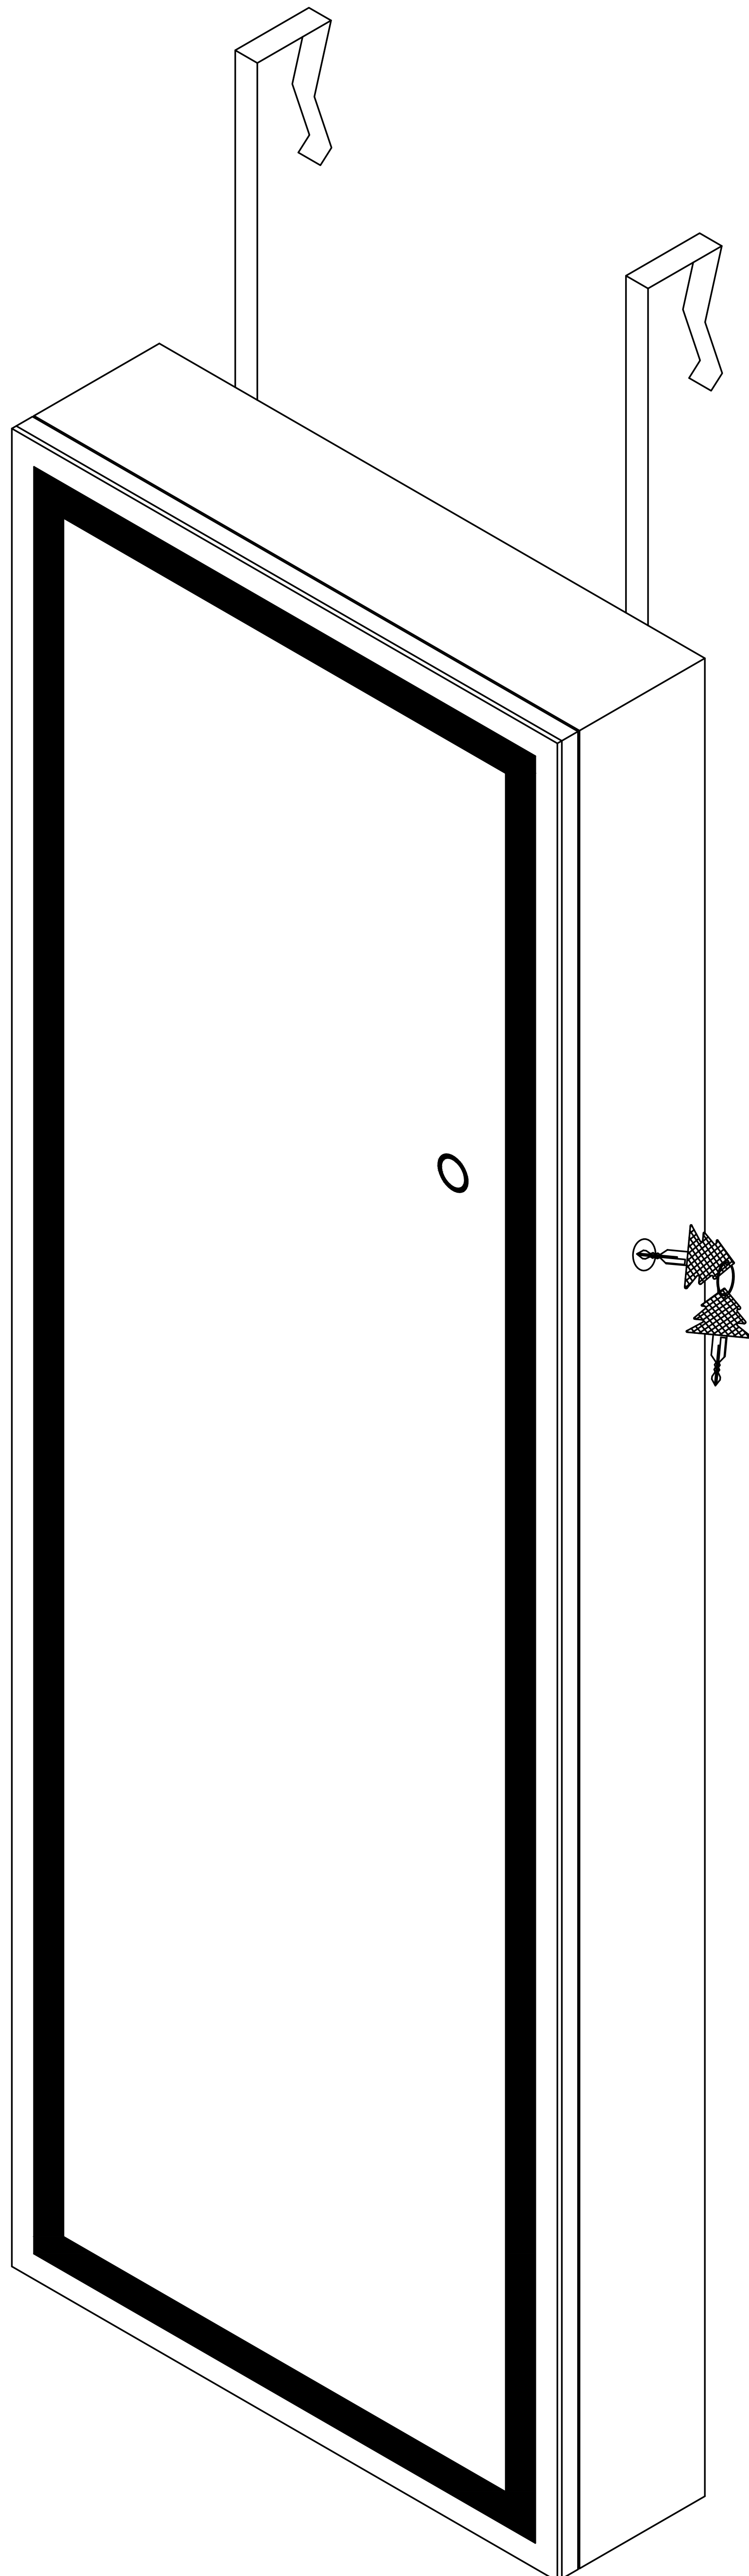
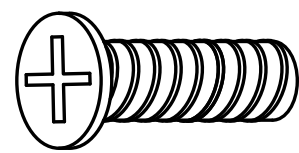
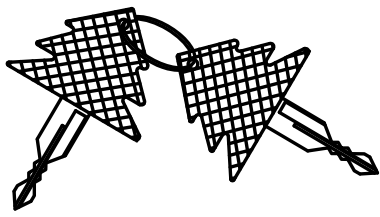
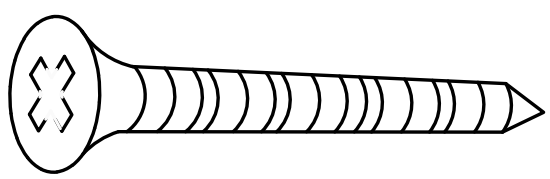
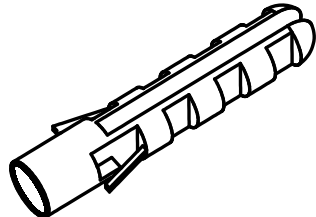
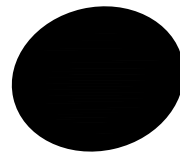

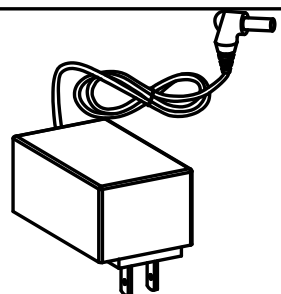


MIRROR JEWELLERY CABINET


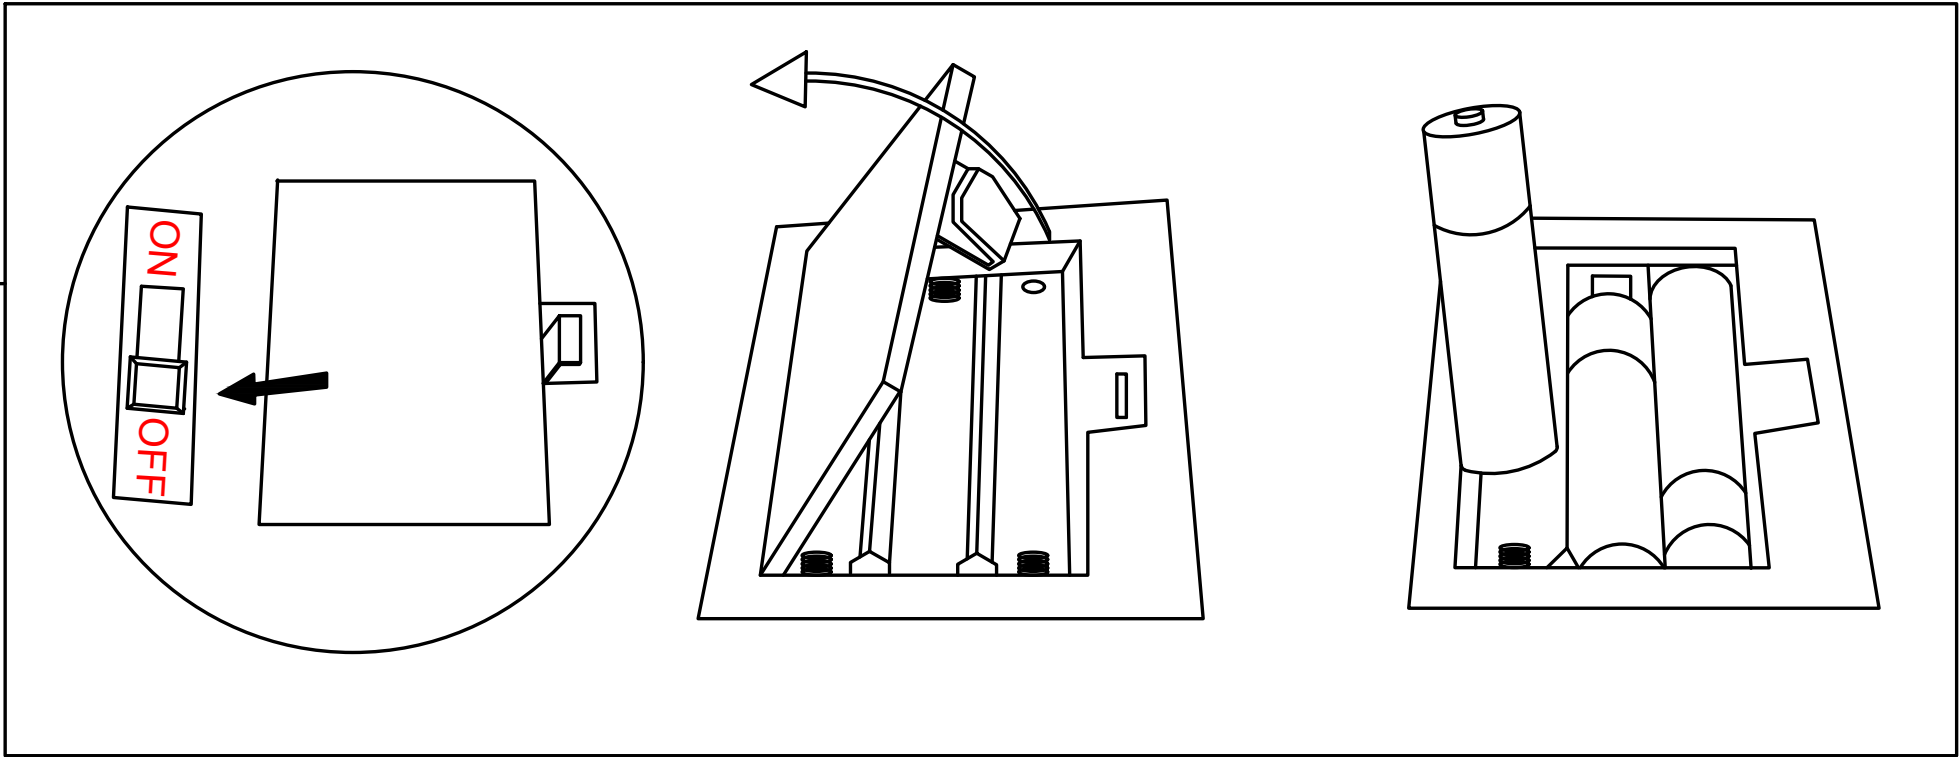





A		screw(6*16mm)	4 Pcs
B		The key	1 Pcs
C		Hook	2 Pcs
D		Self tapping wire(4x45mm)	2 Pcs
E		Colloidal granules	2 Pcs
F		Sponge gasket	4 Pcs
G		Adhesive Velcro	1 Pcs
		The power adapter(12V 3A)	1 Pcs



Battery installation
(Tip: use 3 AAA Batteries)
need to bring your own

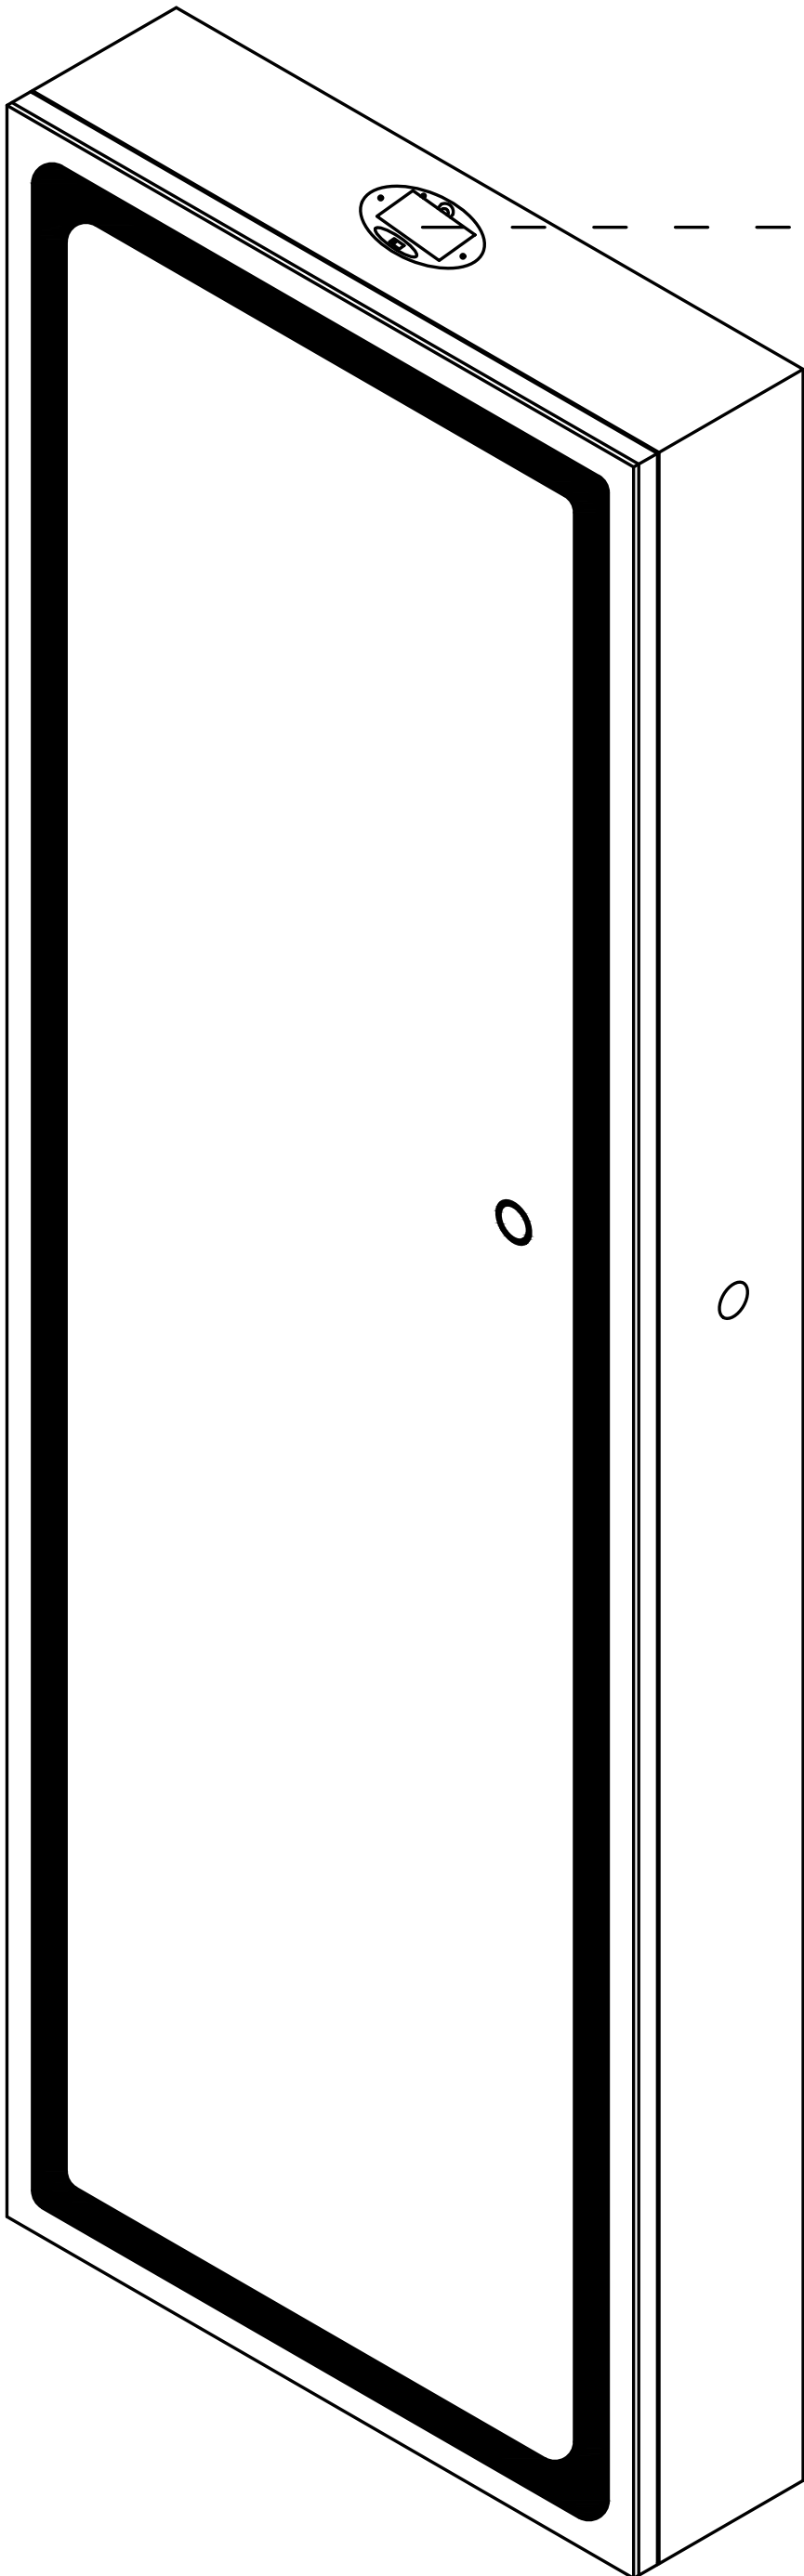





Over The Door

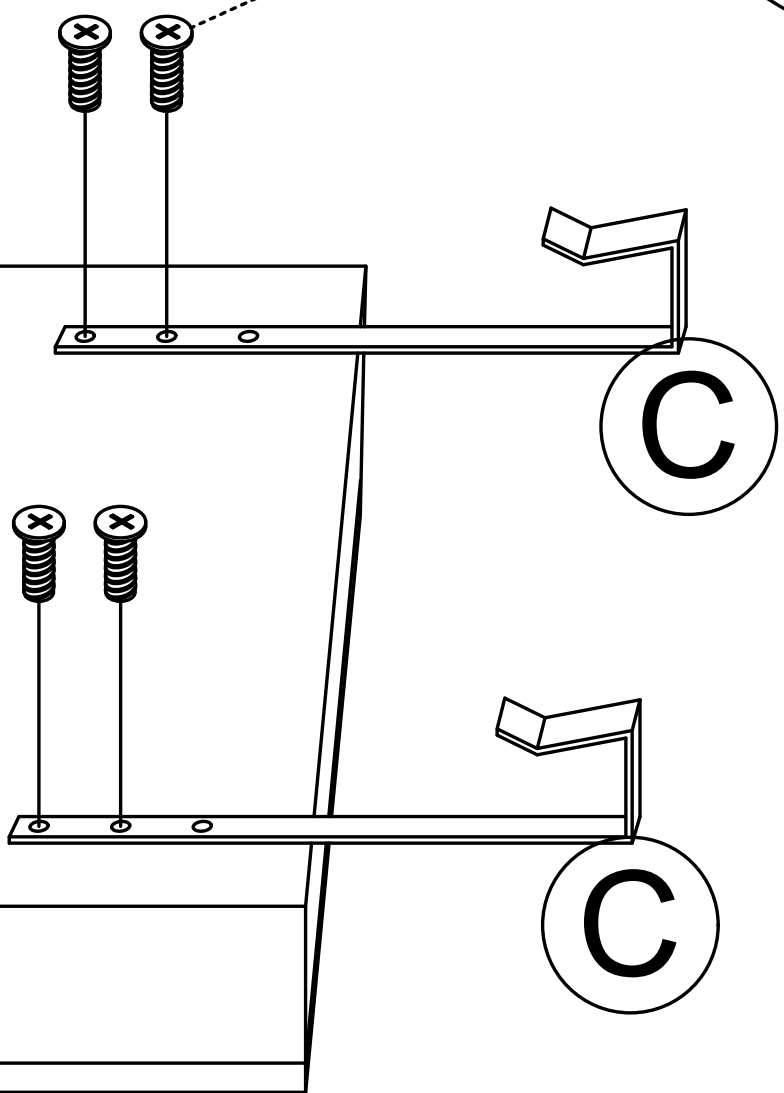
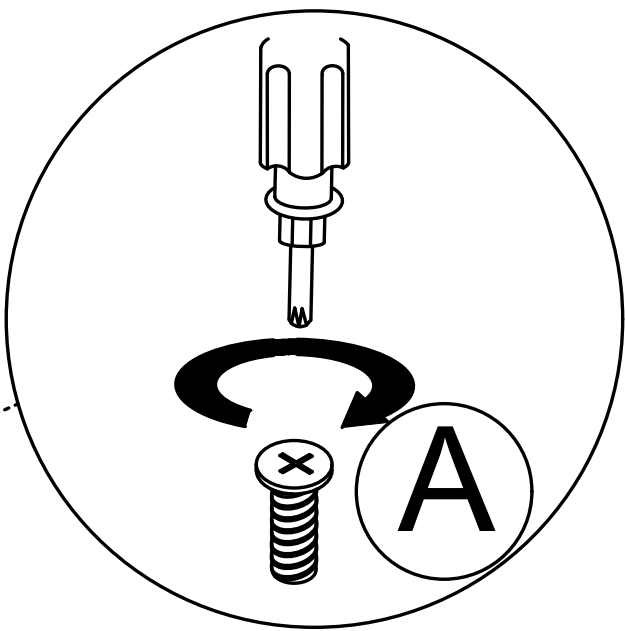


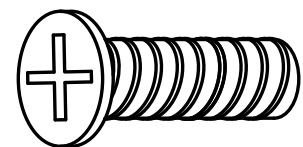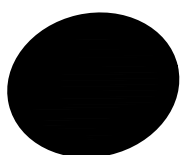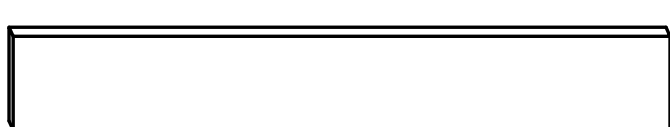A		x 4
C		x 2
F		x 4
G		x 1

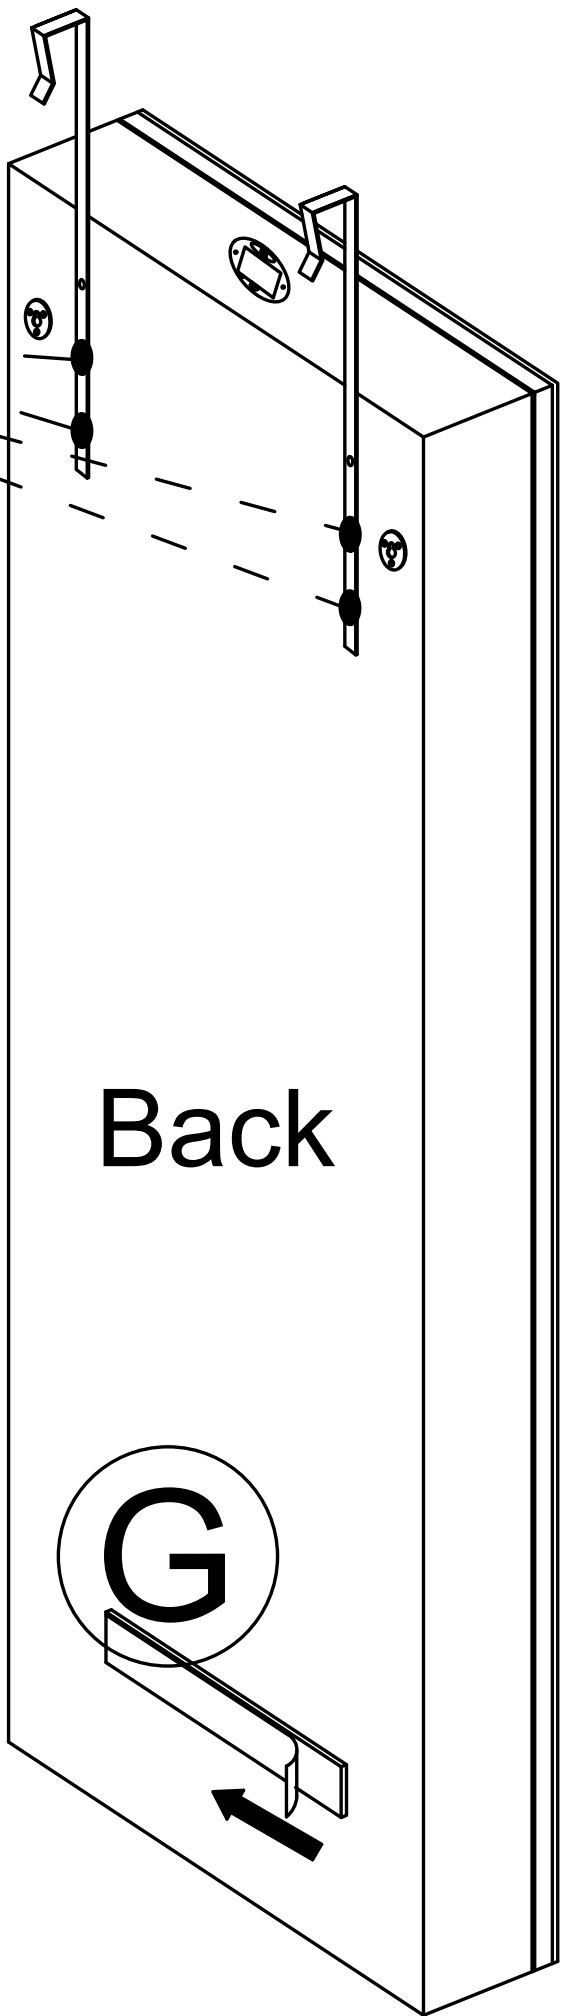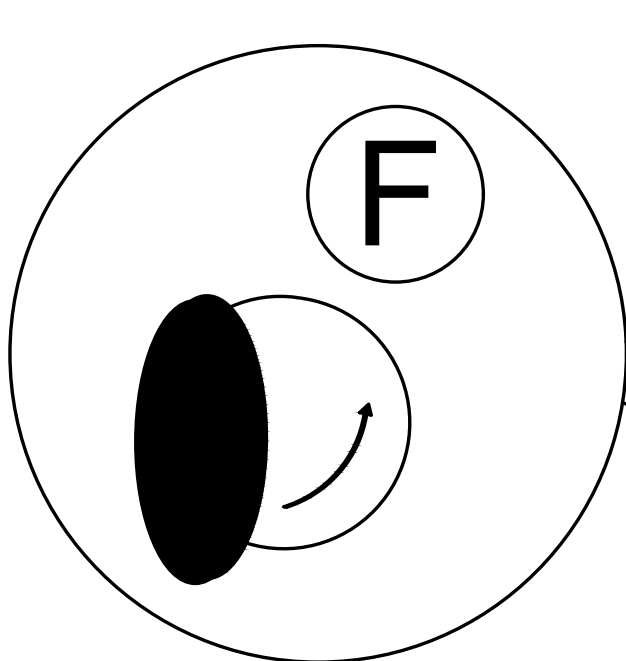


Fixed on the door to prevent swaying.

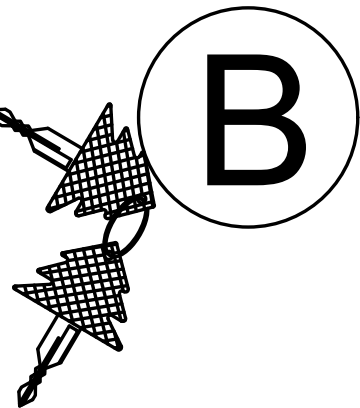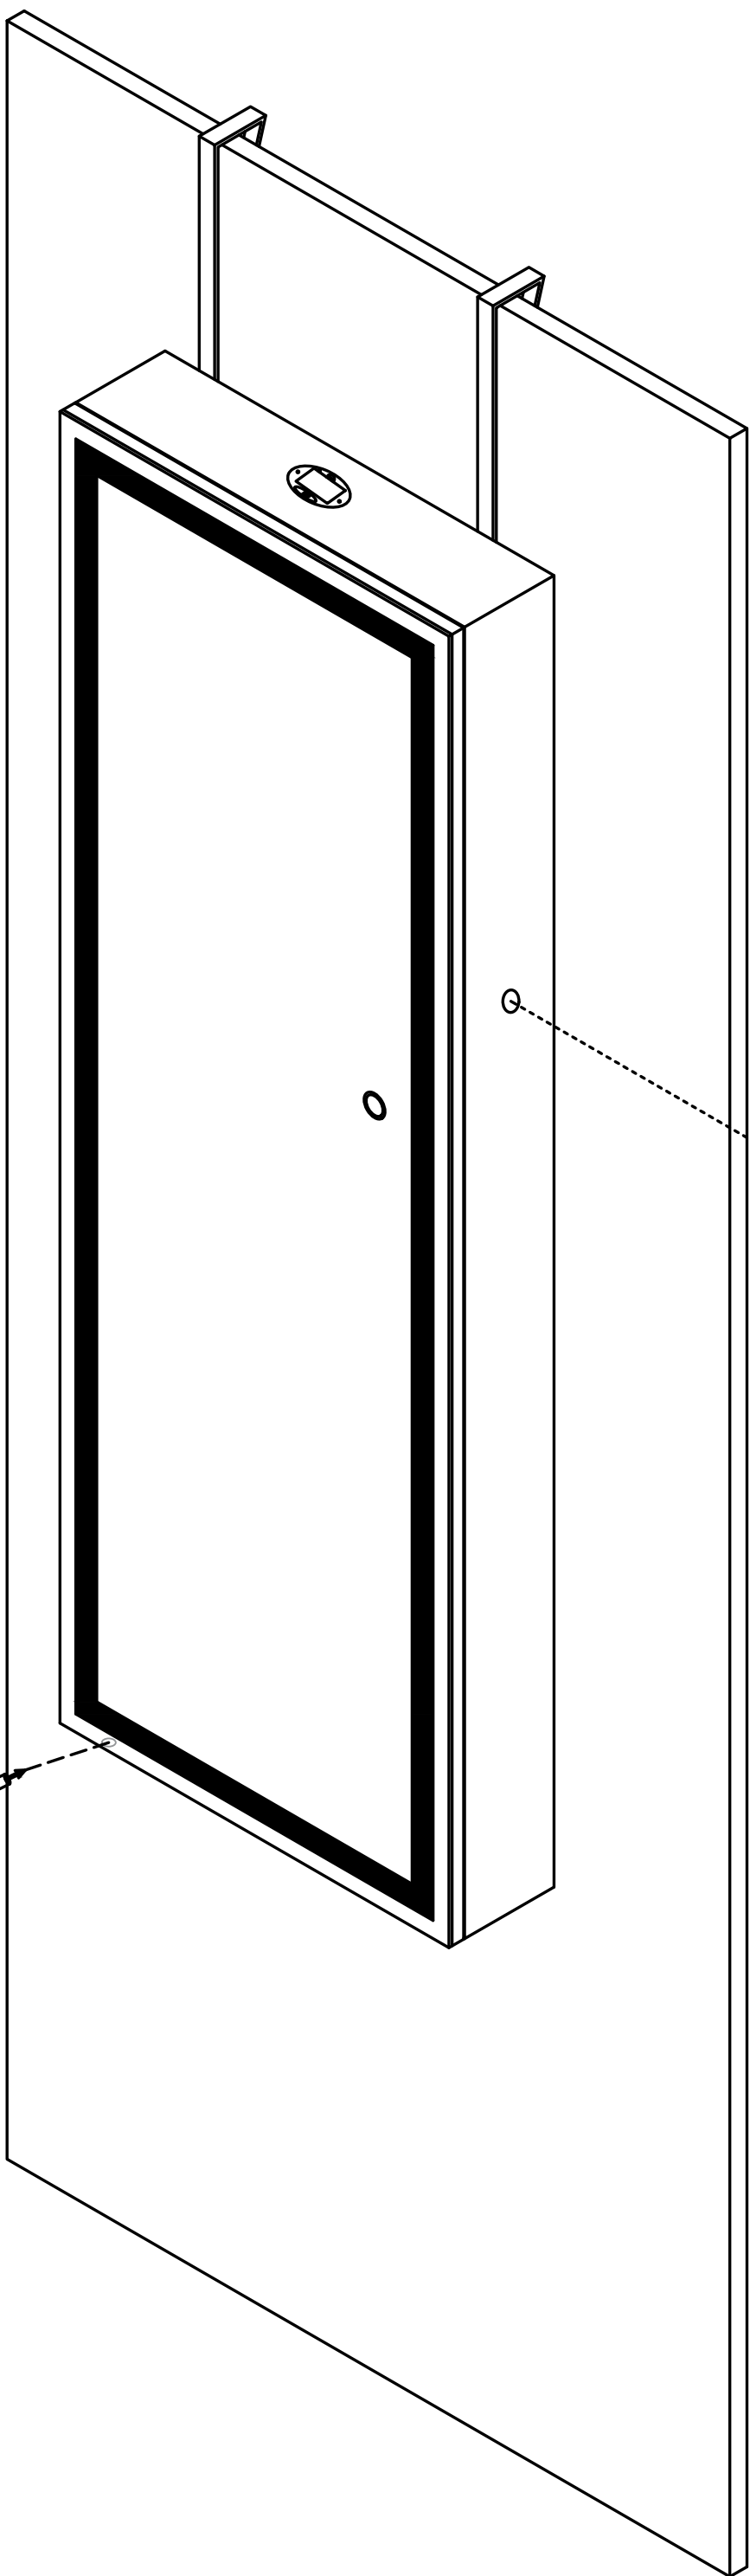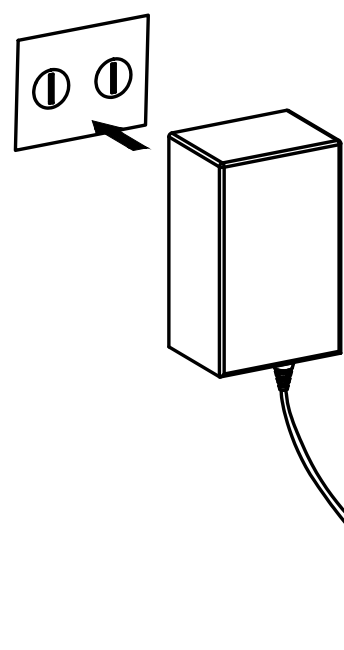
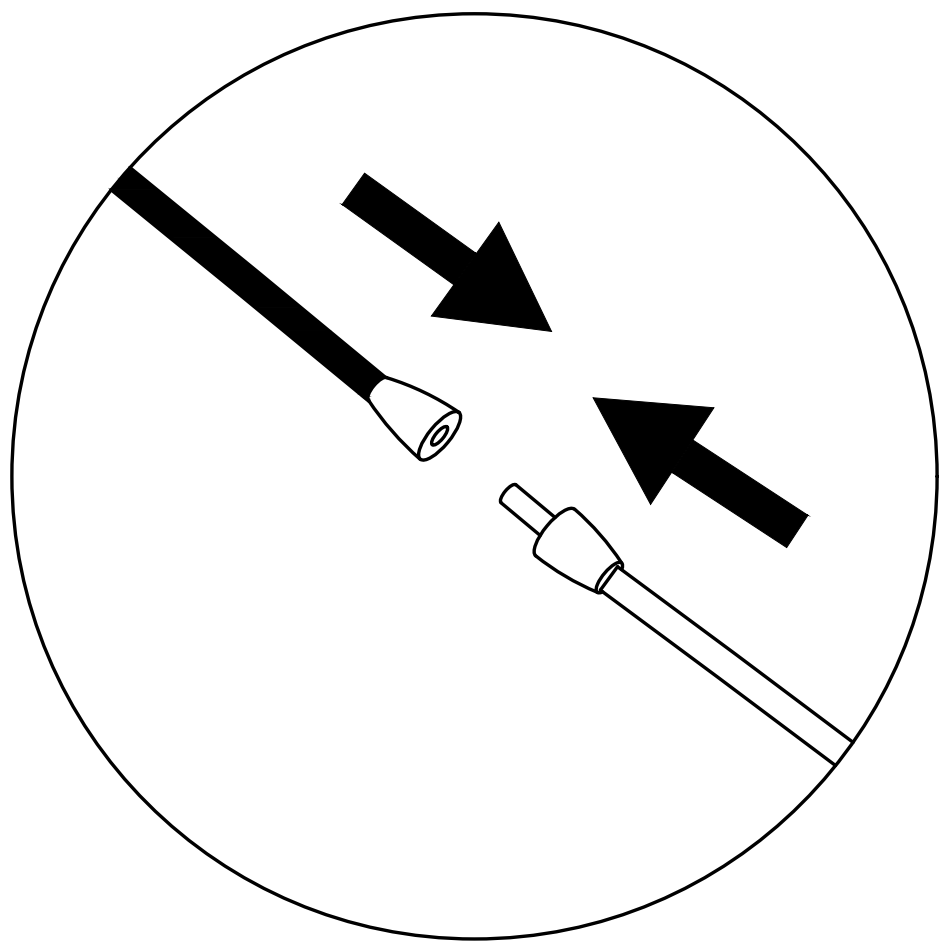


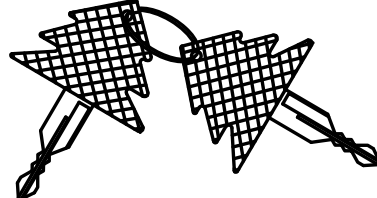
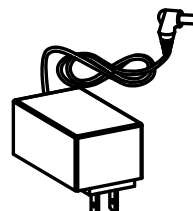
B		x 1
		x 1




Wall Mount



(Tip: Please use your own tools)

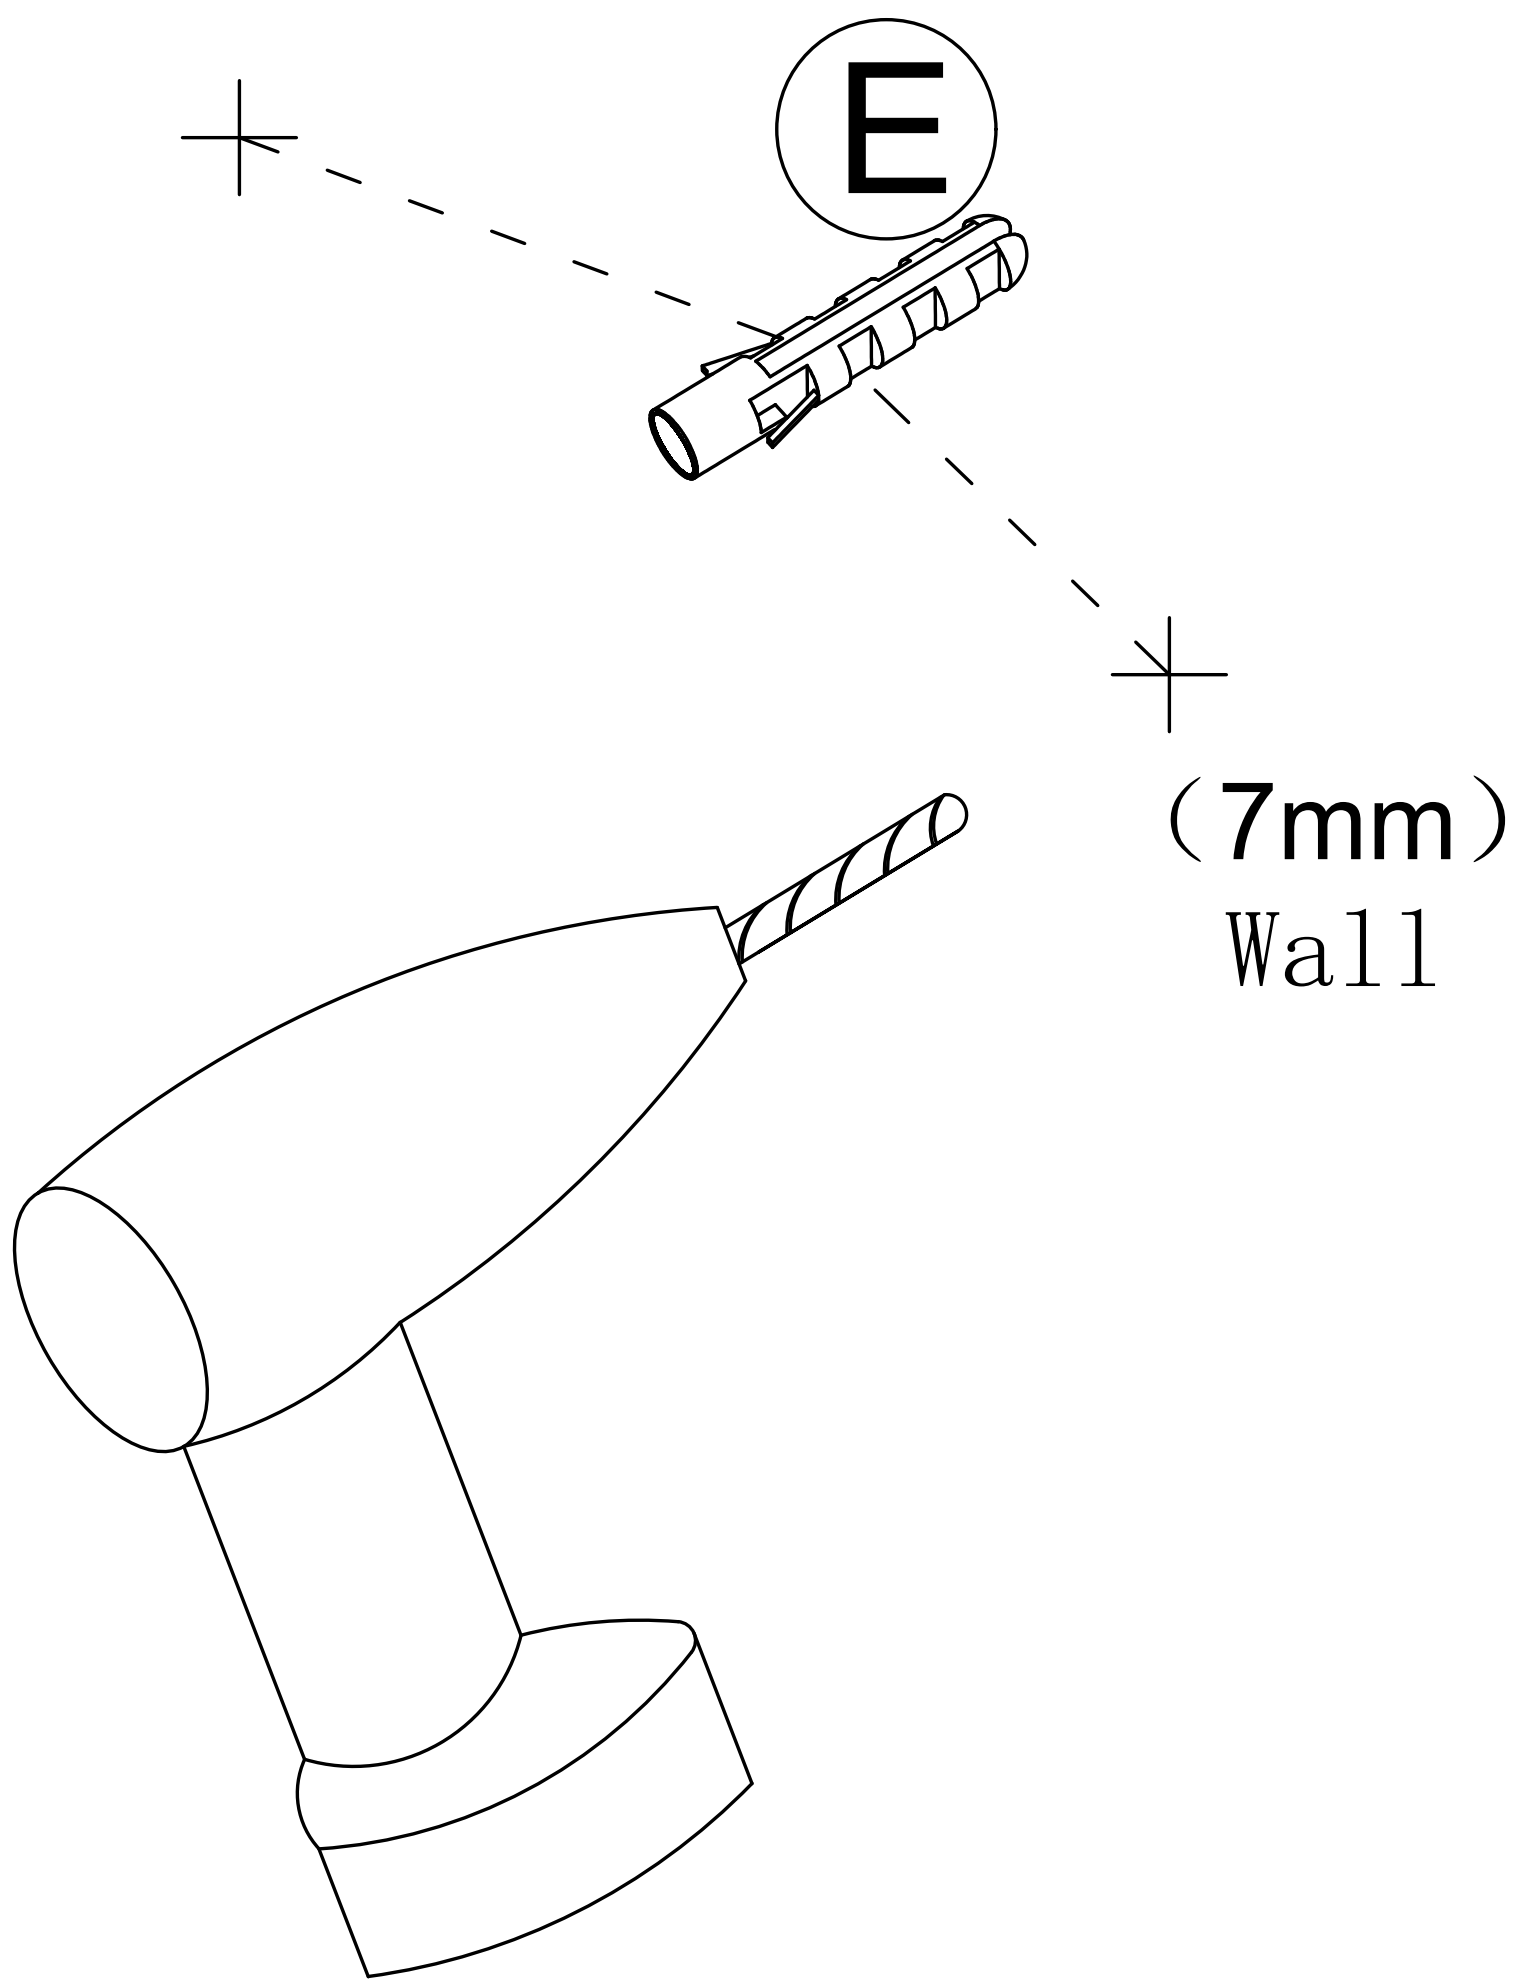

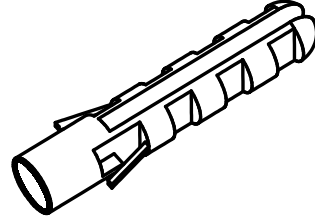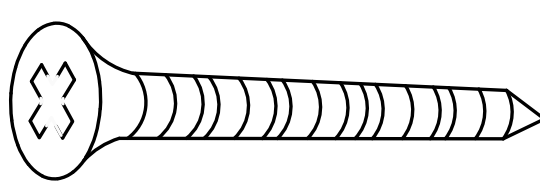E		x 2
D		x 2

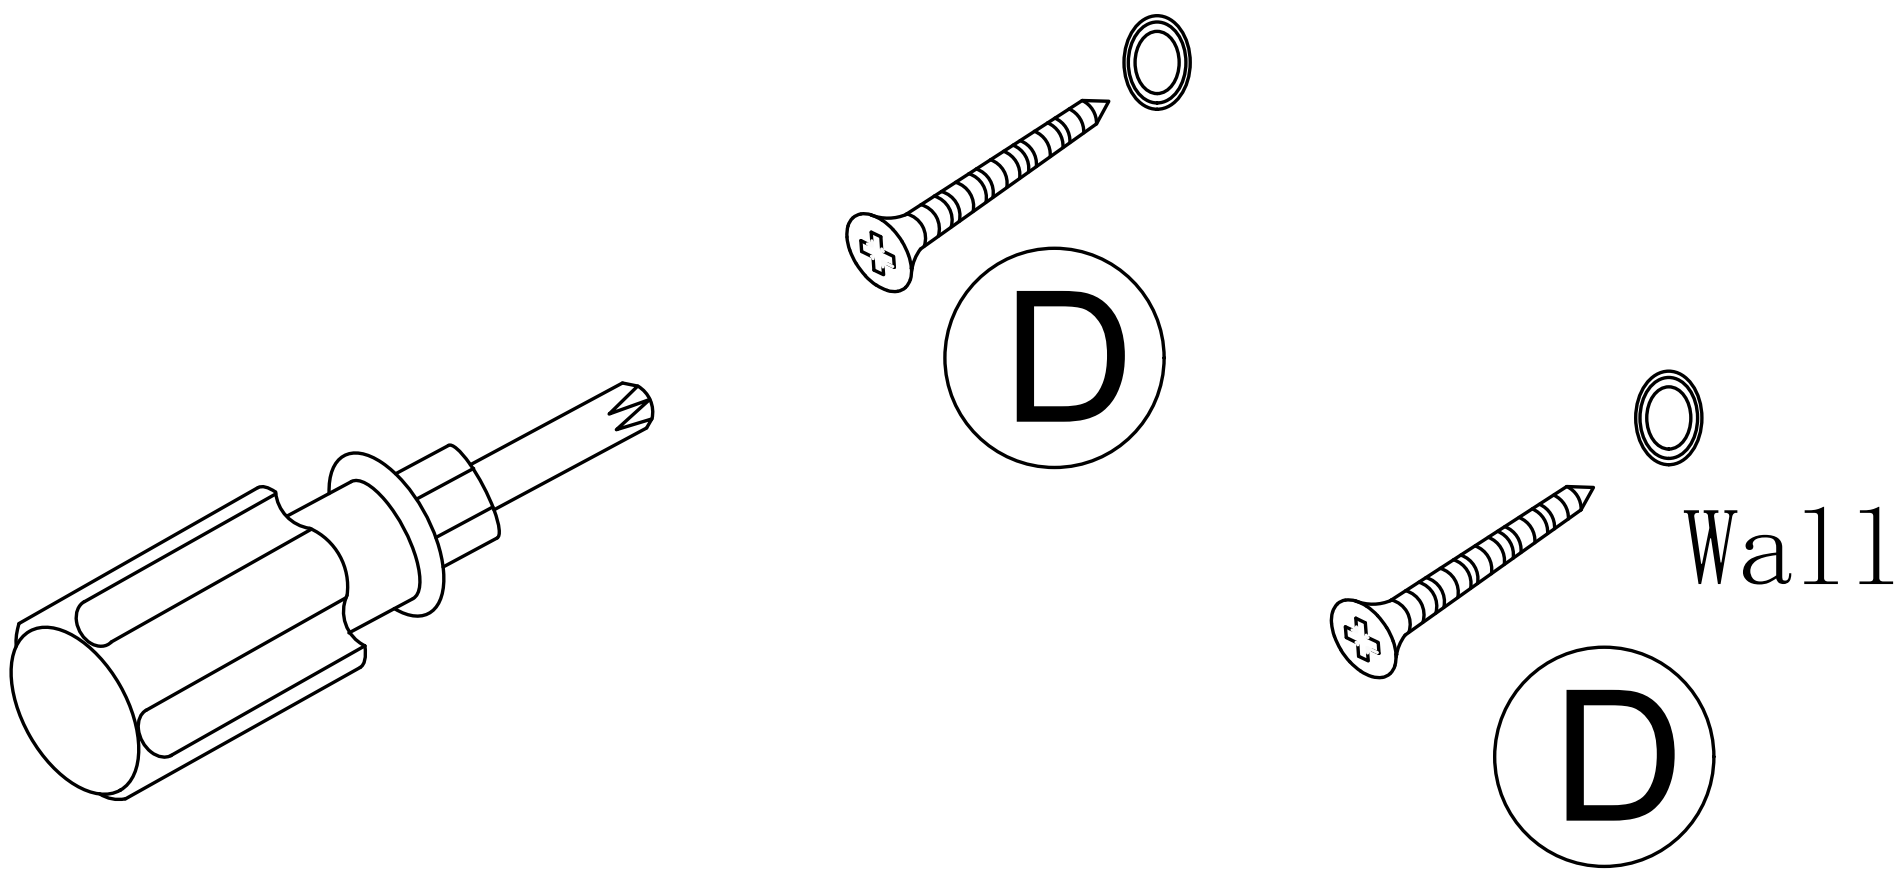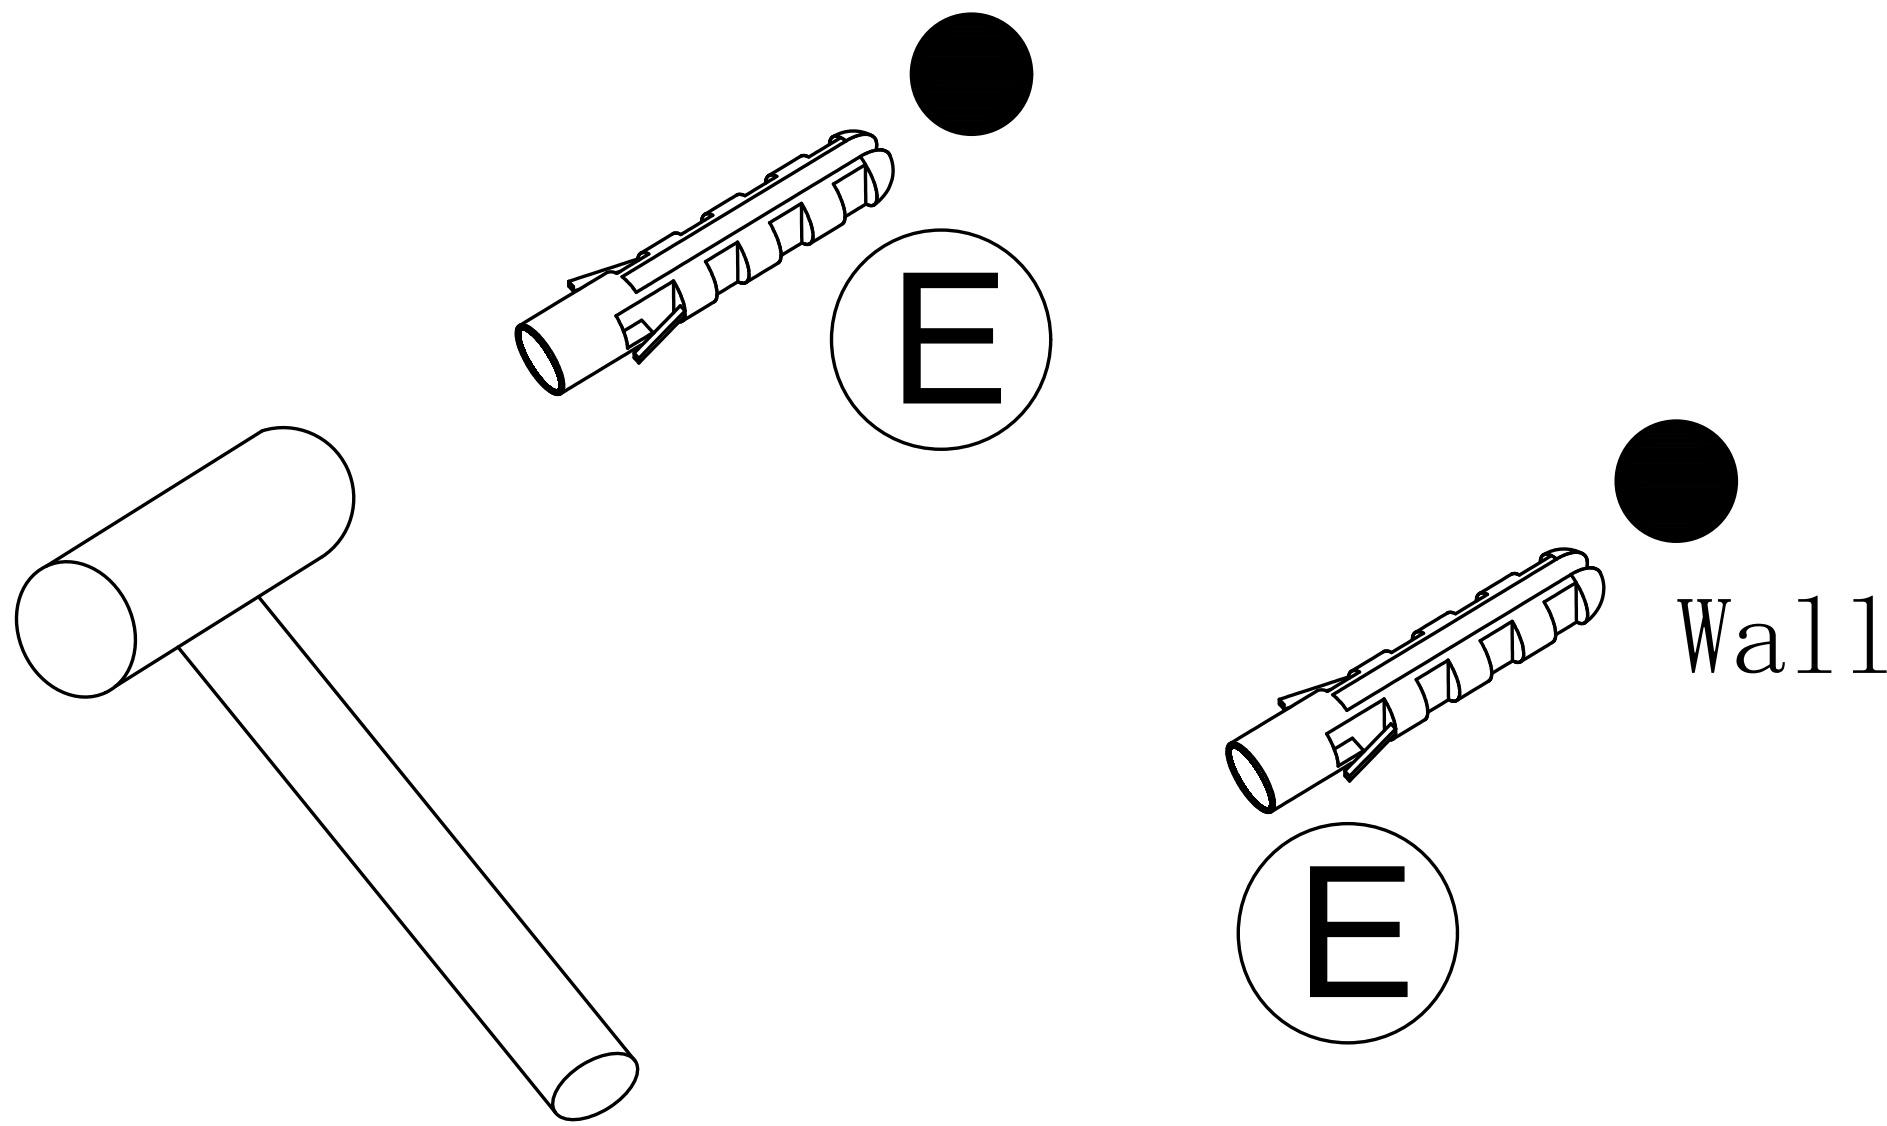

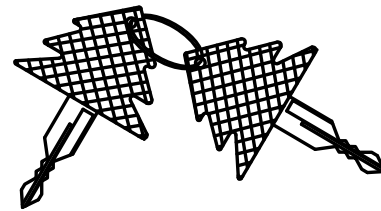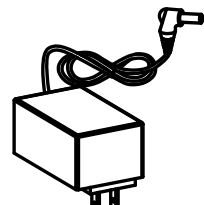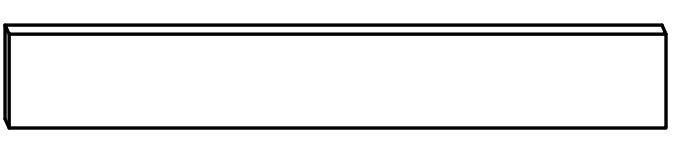B		x 1
		x 1
G		x 1

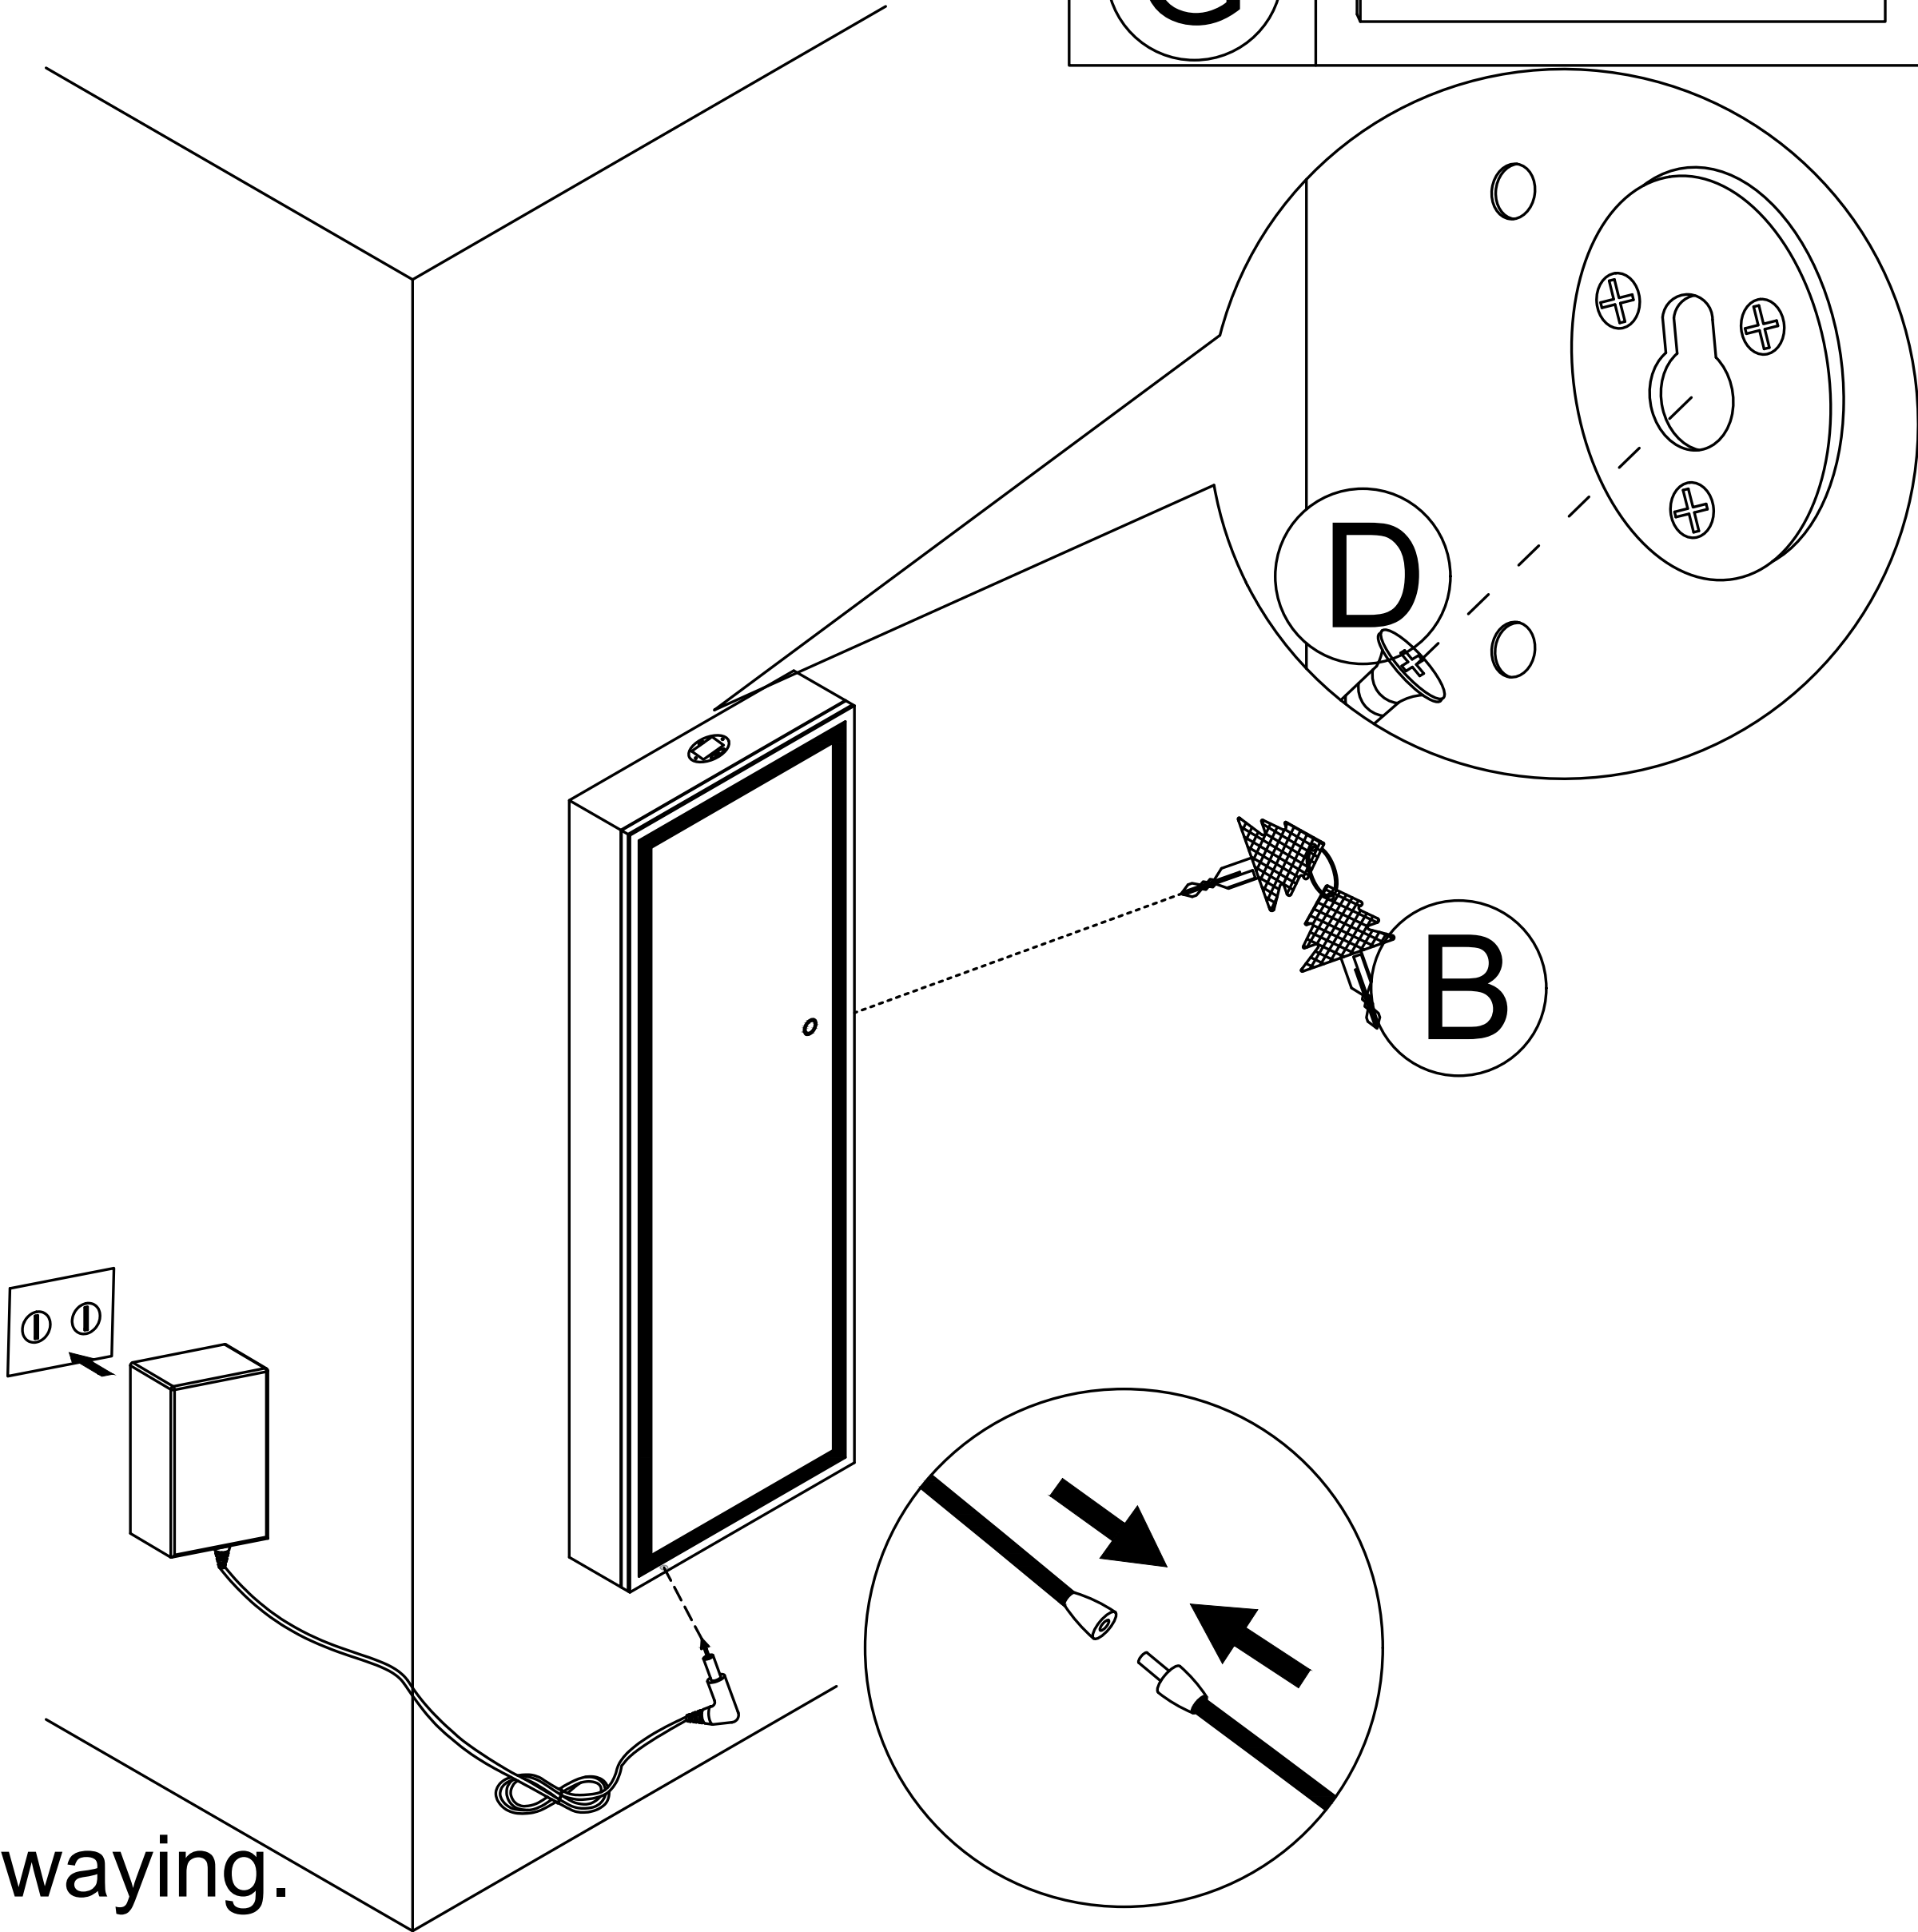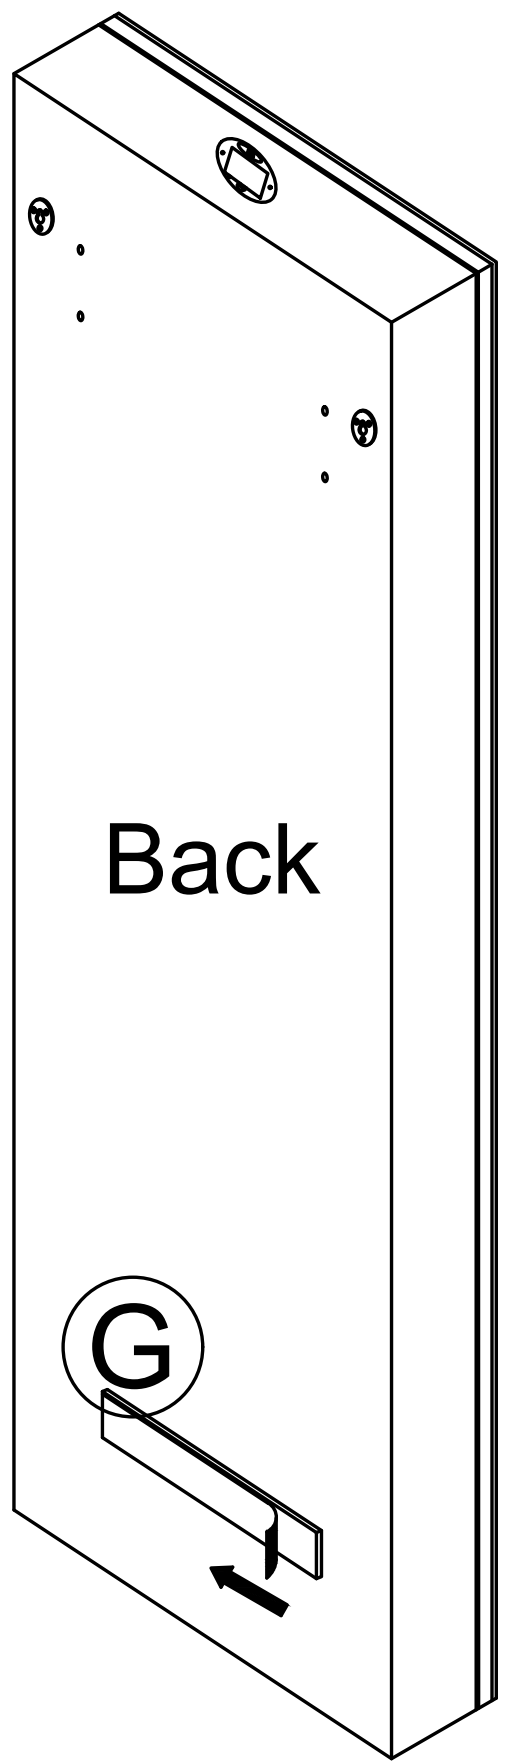

Fixed on the door to prevent swaying.