


Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGLEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

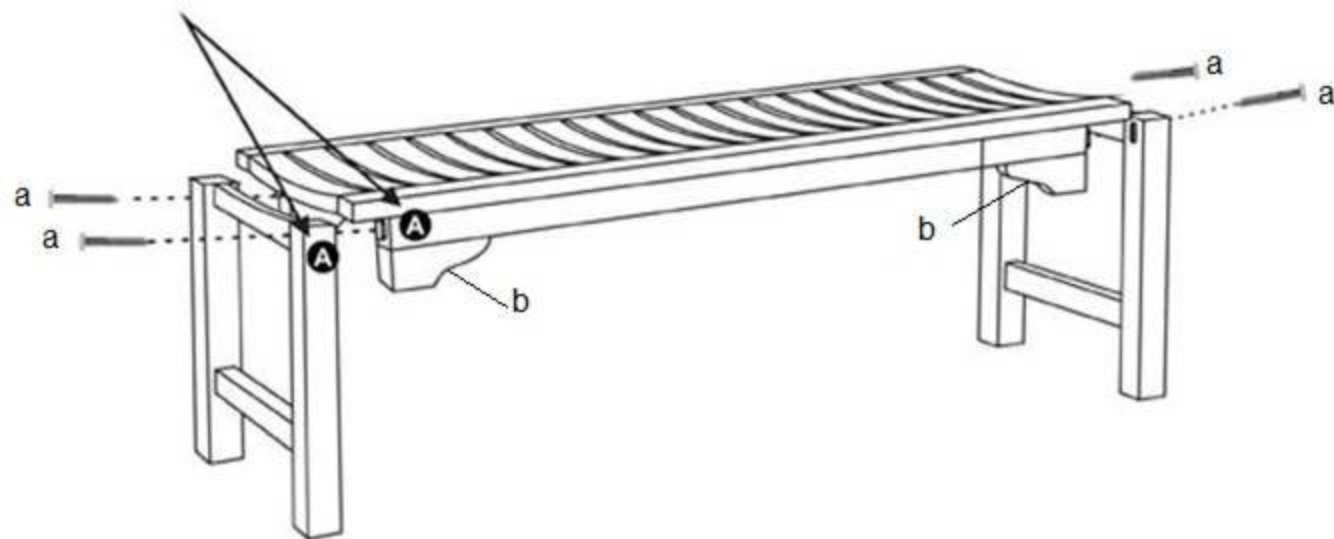


**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Hardware

a. 60 mm Bolt x 4pcs



b. 30 mm Screw x4pcs



Tool



Socket Wrench 4m/m Ht

Total Section

3 Section