

# POK-B002BB

one Corner,two Middle and storage cabinet

## [Guarantee]

If you have questions or quality problem, Email us:  
service@foresthomes-us.com  
we will reply you in 12hour.Great shopping  
experience.




## [Installation Video]

The installation video on YOUTUBE for your reference  
.The Youtube code is **Se7OnRmAxfE** you just  
search the code on YOUTUBE,the video will be  
there. Scan it.




# Assembly Instruction

①




M6×35mm 56PCS

②




M6×45mm 21PCS

③




1PC

④



130PCS

⑤




53PCS

⑥




1PC


⑦




1PC

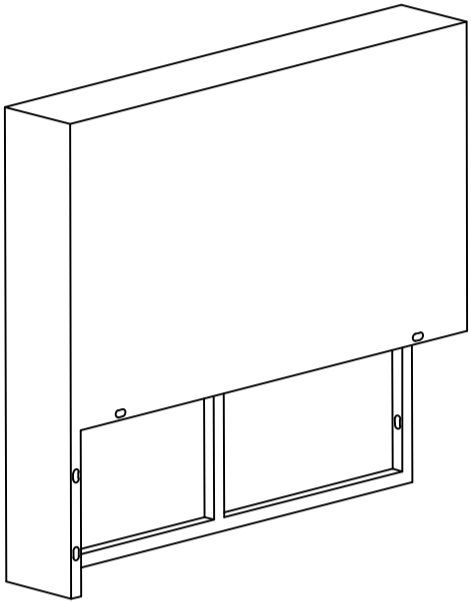


A×1

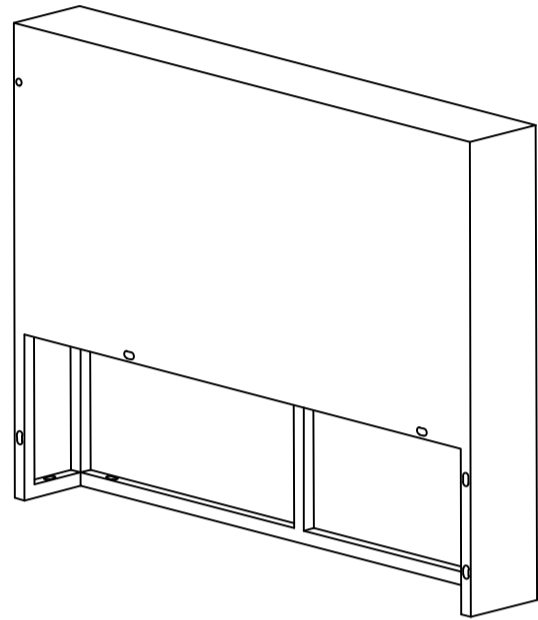


B×1

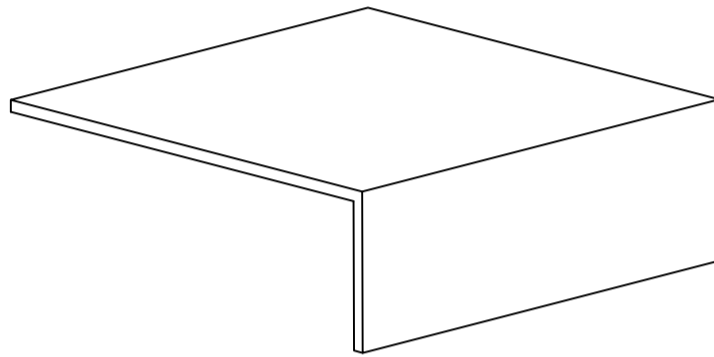


C×1

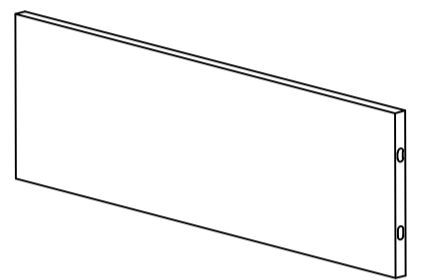


D×3

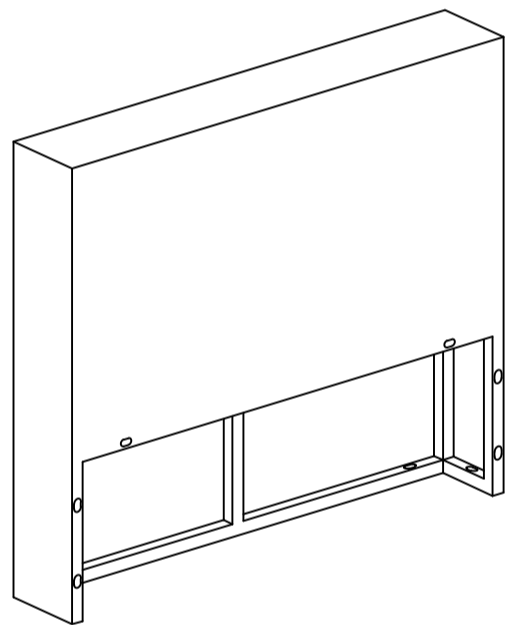


E×2

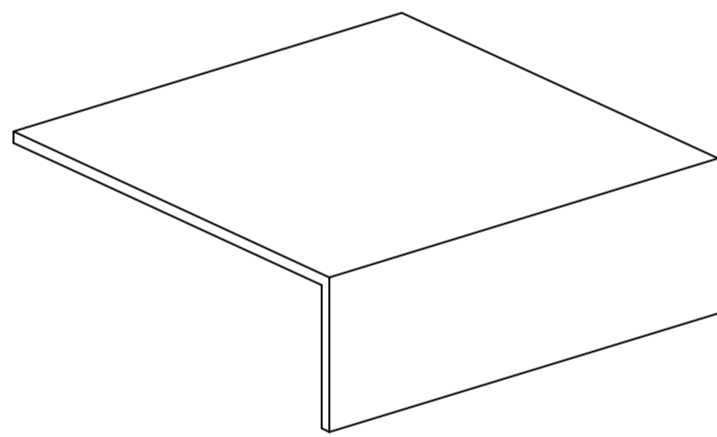


F×2

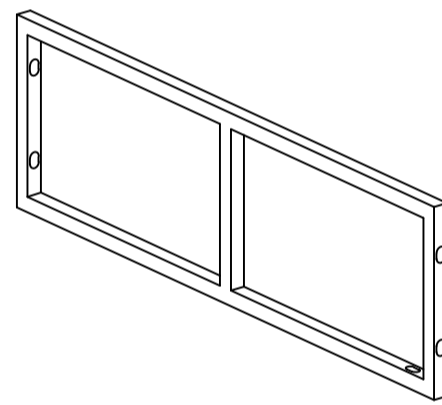


G×2

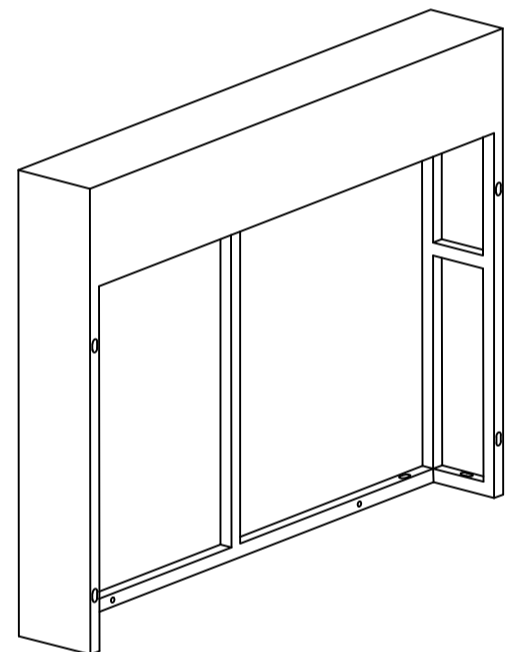


H×1

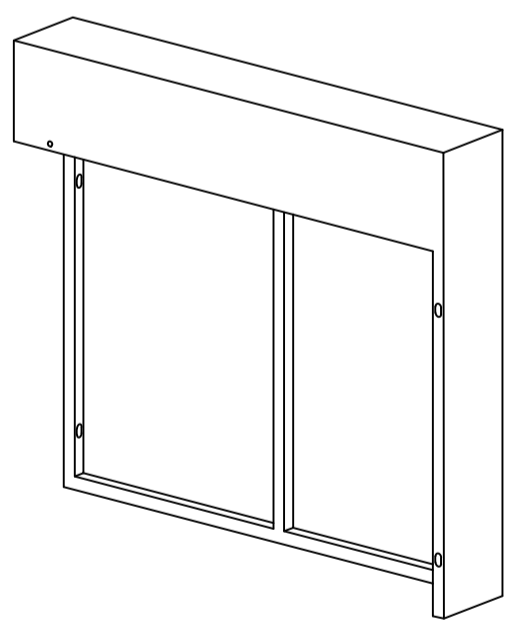


I×1

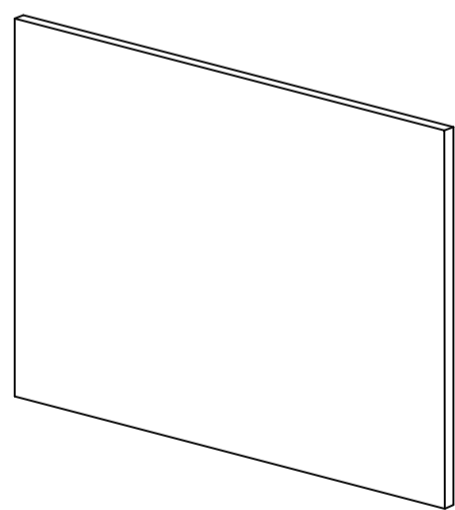


J×1

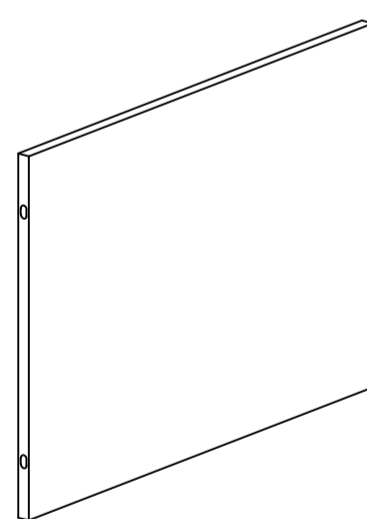


K×1

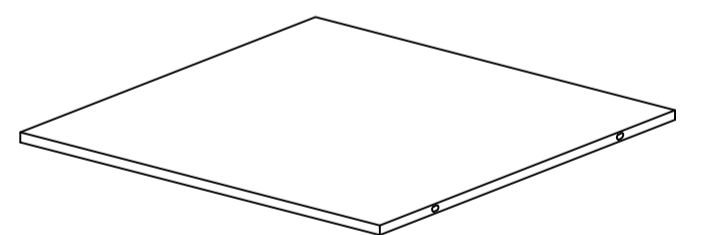


L×1

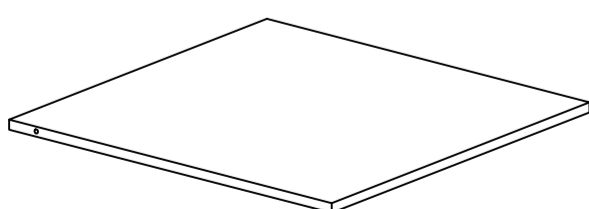


M×1

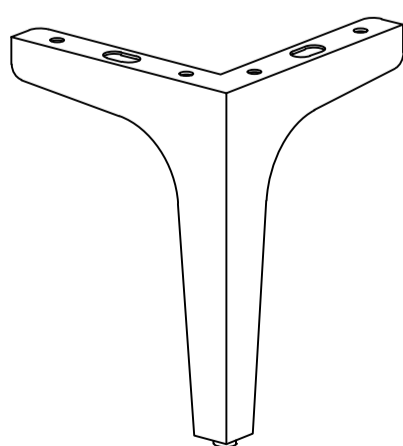


N×16

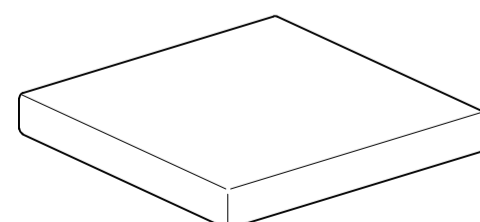

O×3

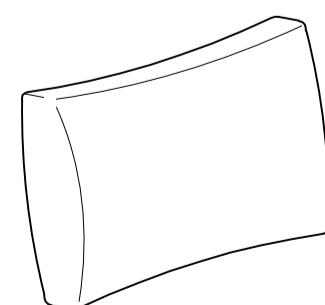


P×3

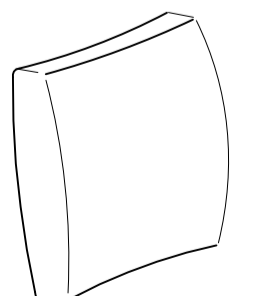


U×1


### STEP 1

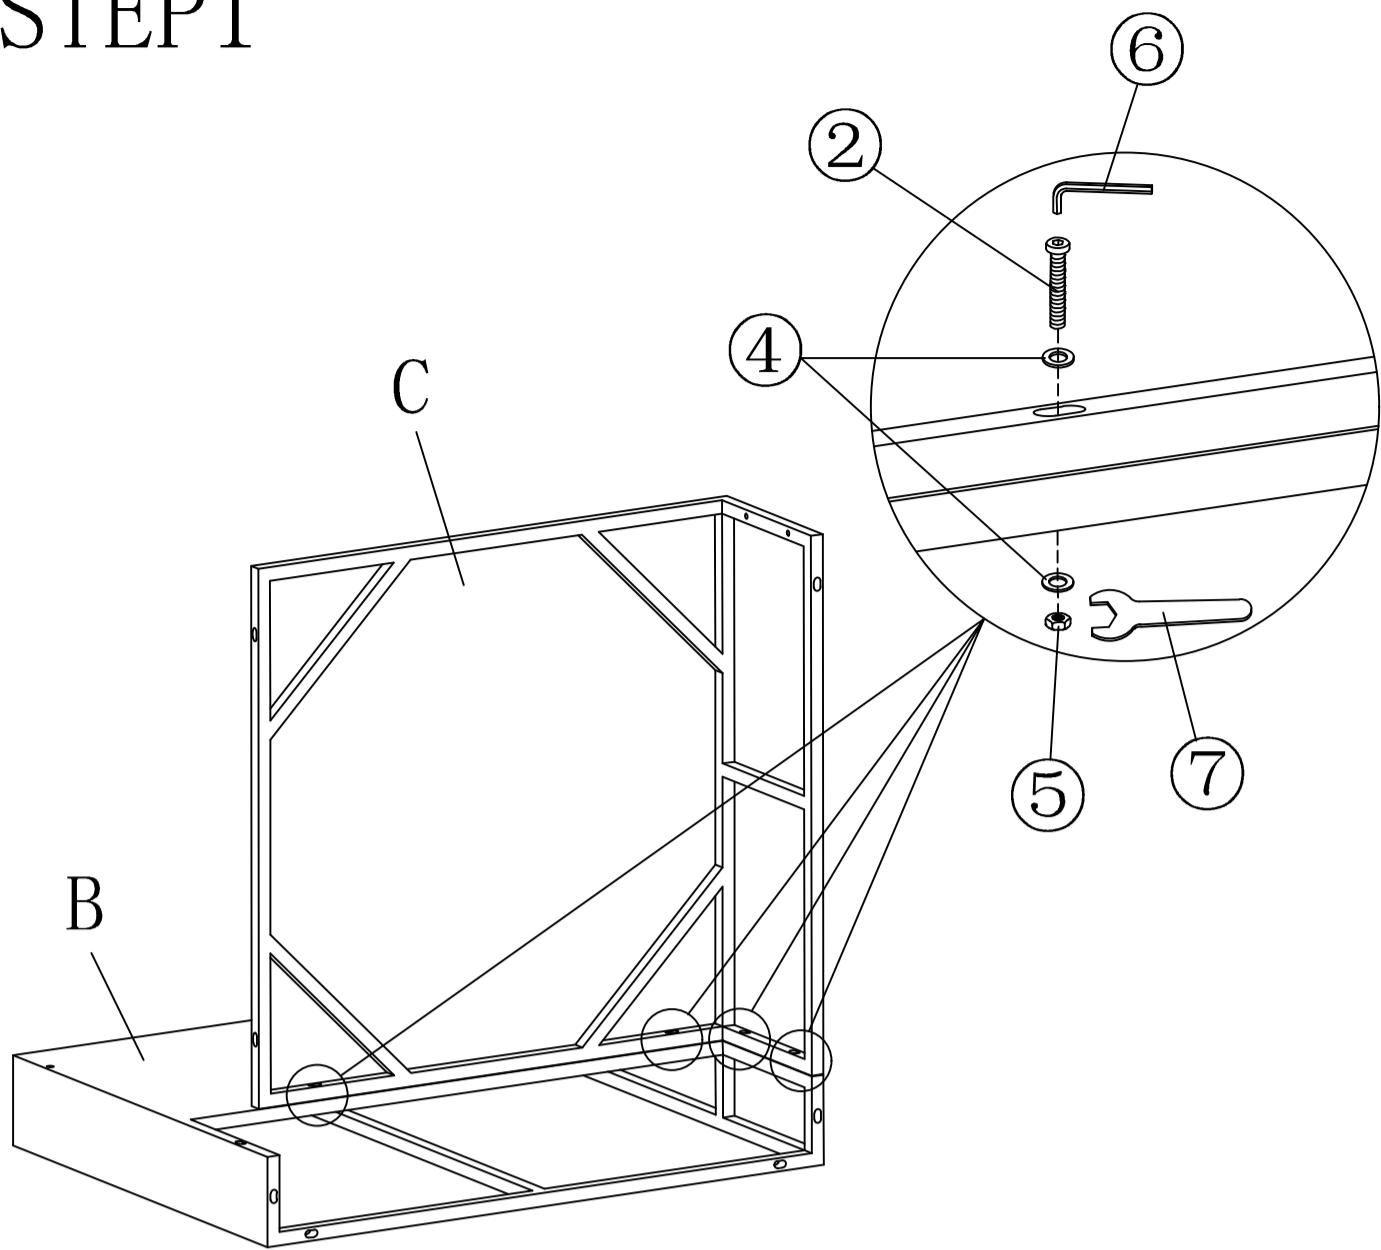


### STEP 2

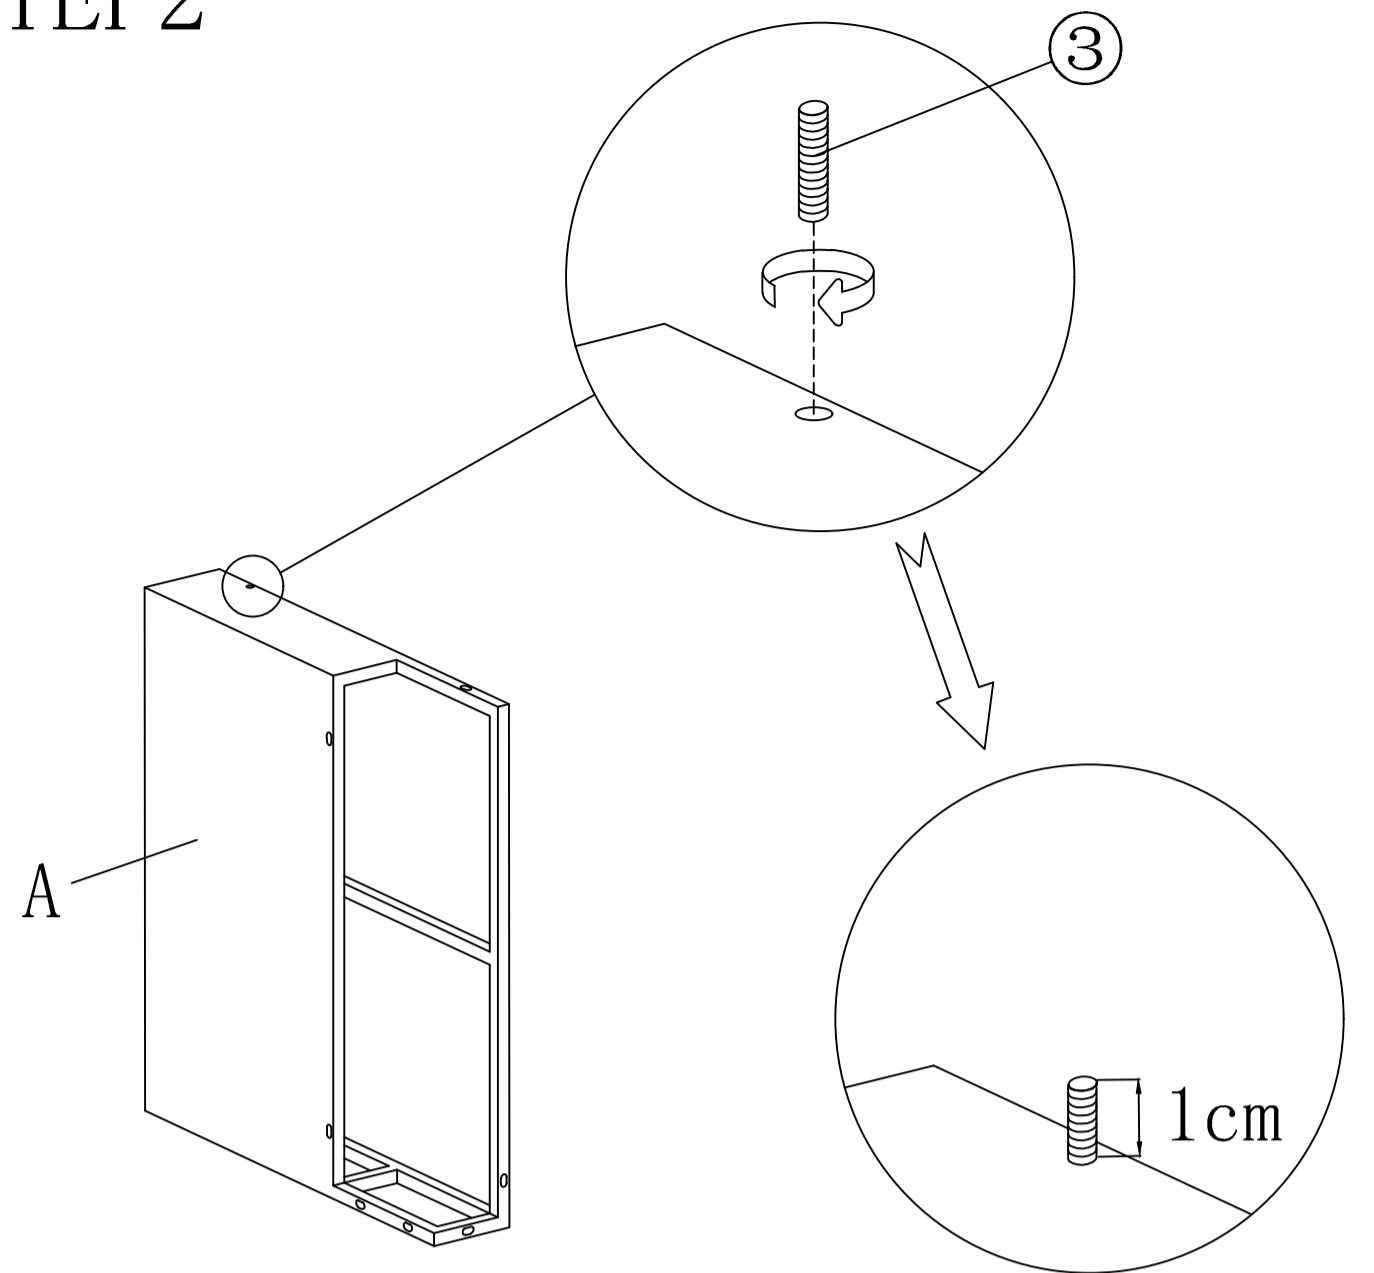


### STEP 3

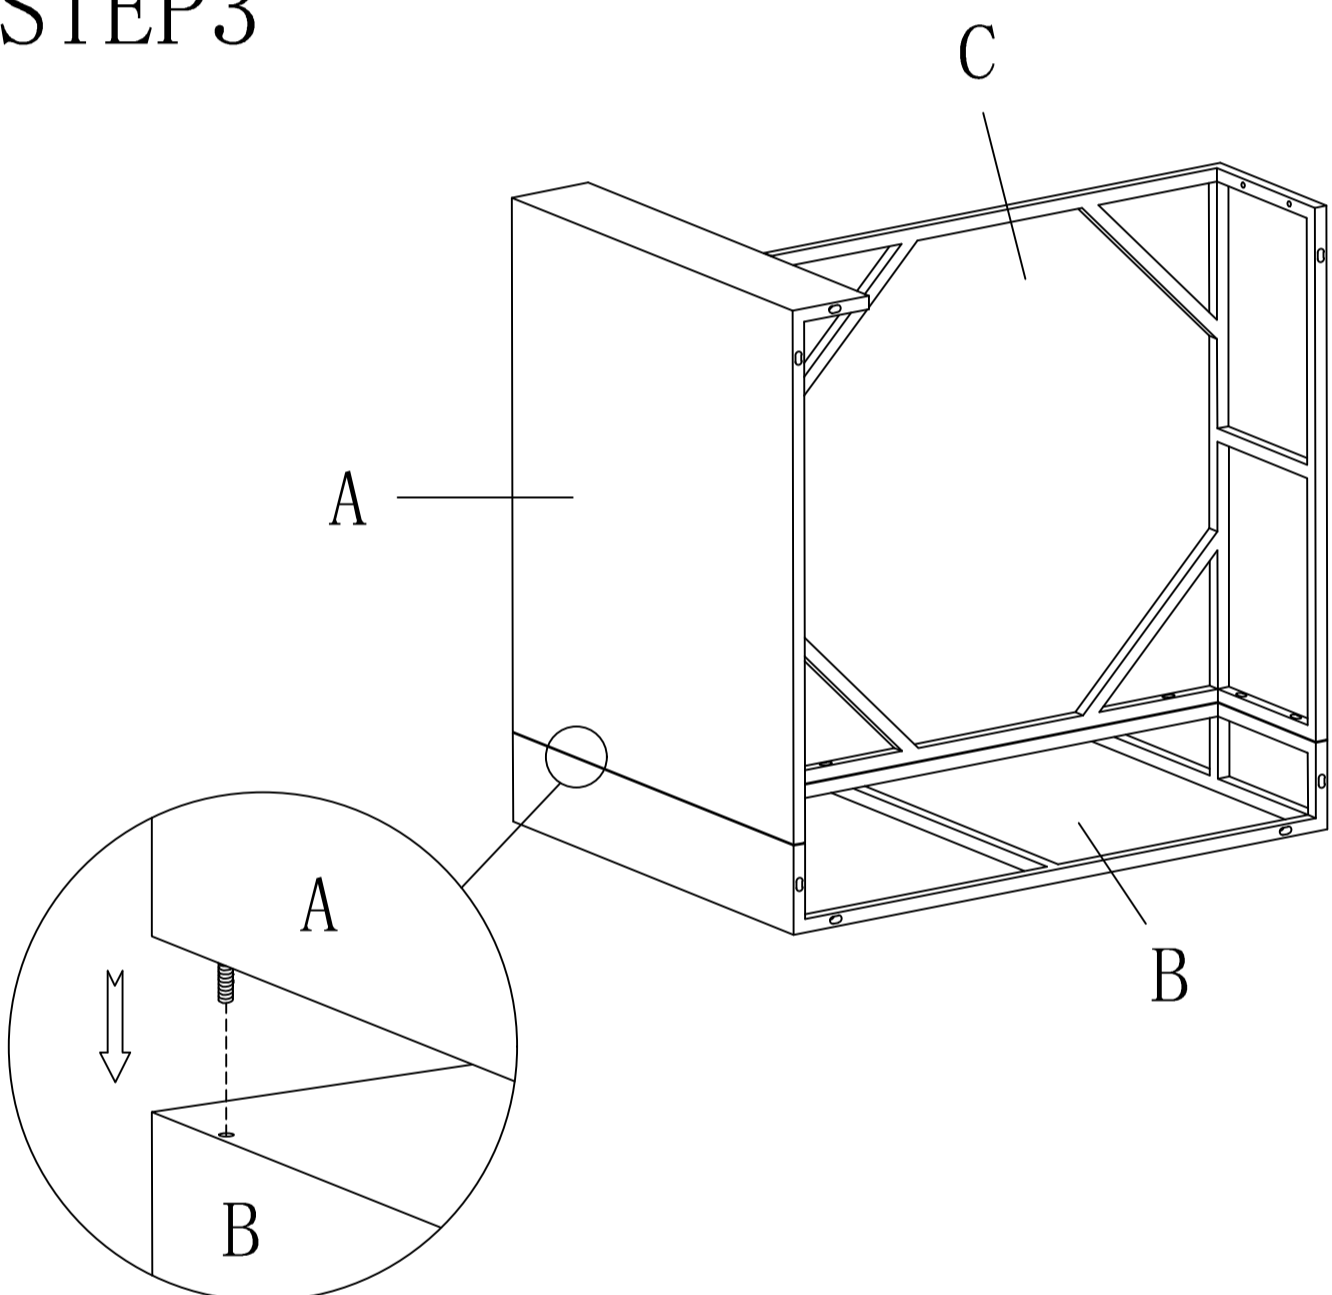


### STEP 4

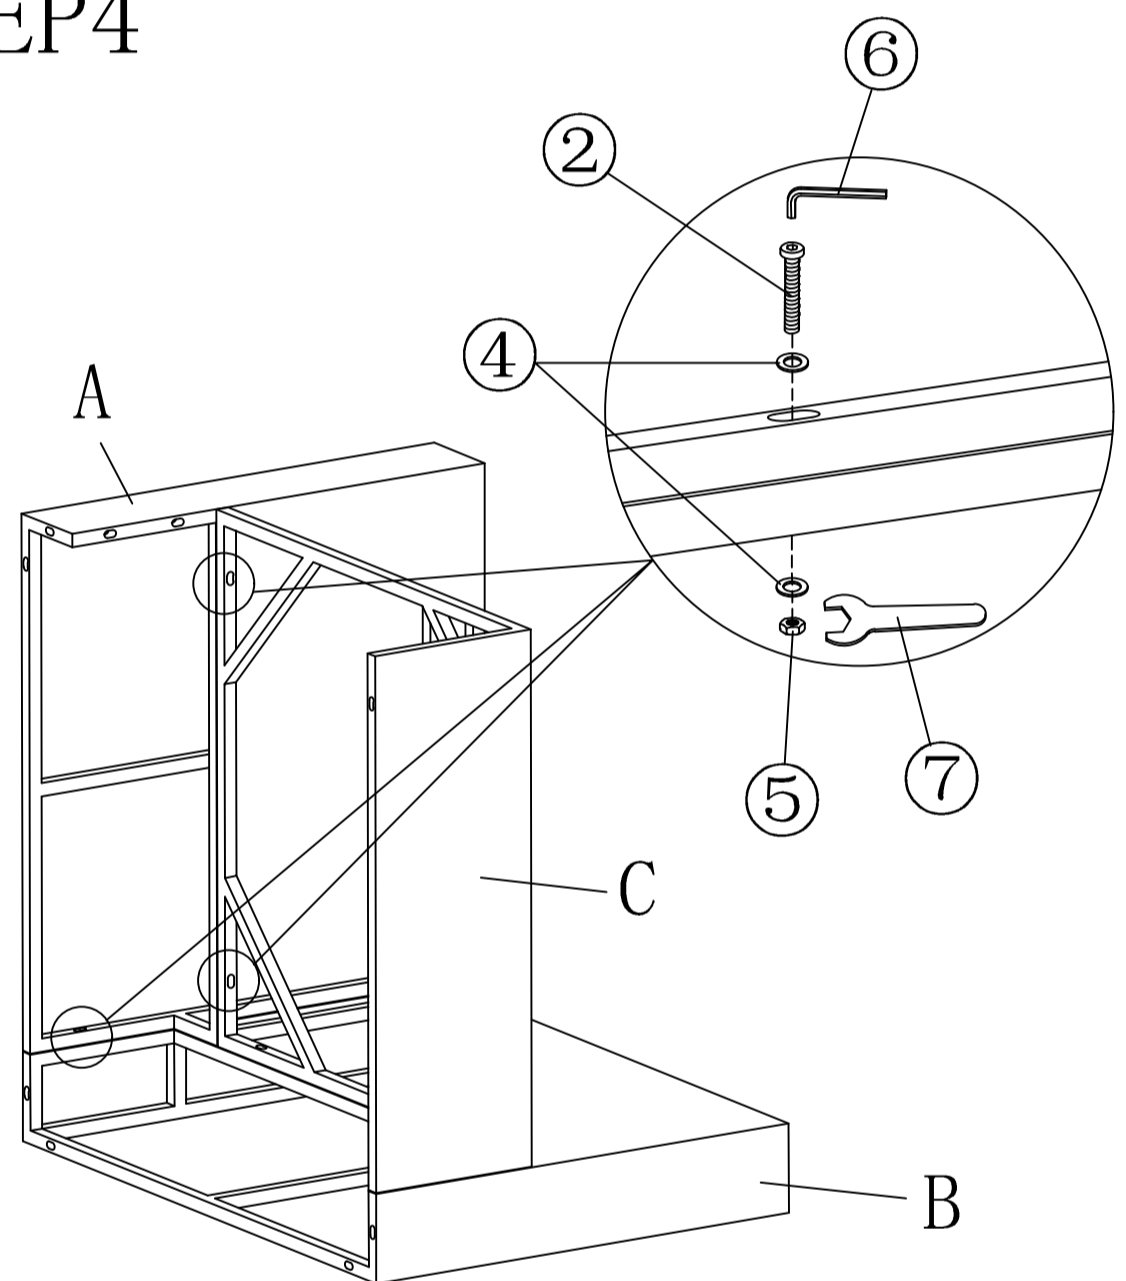


### STEP 5

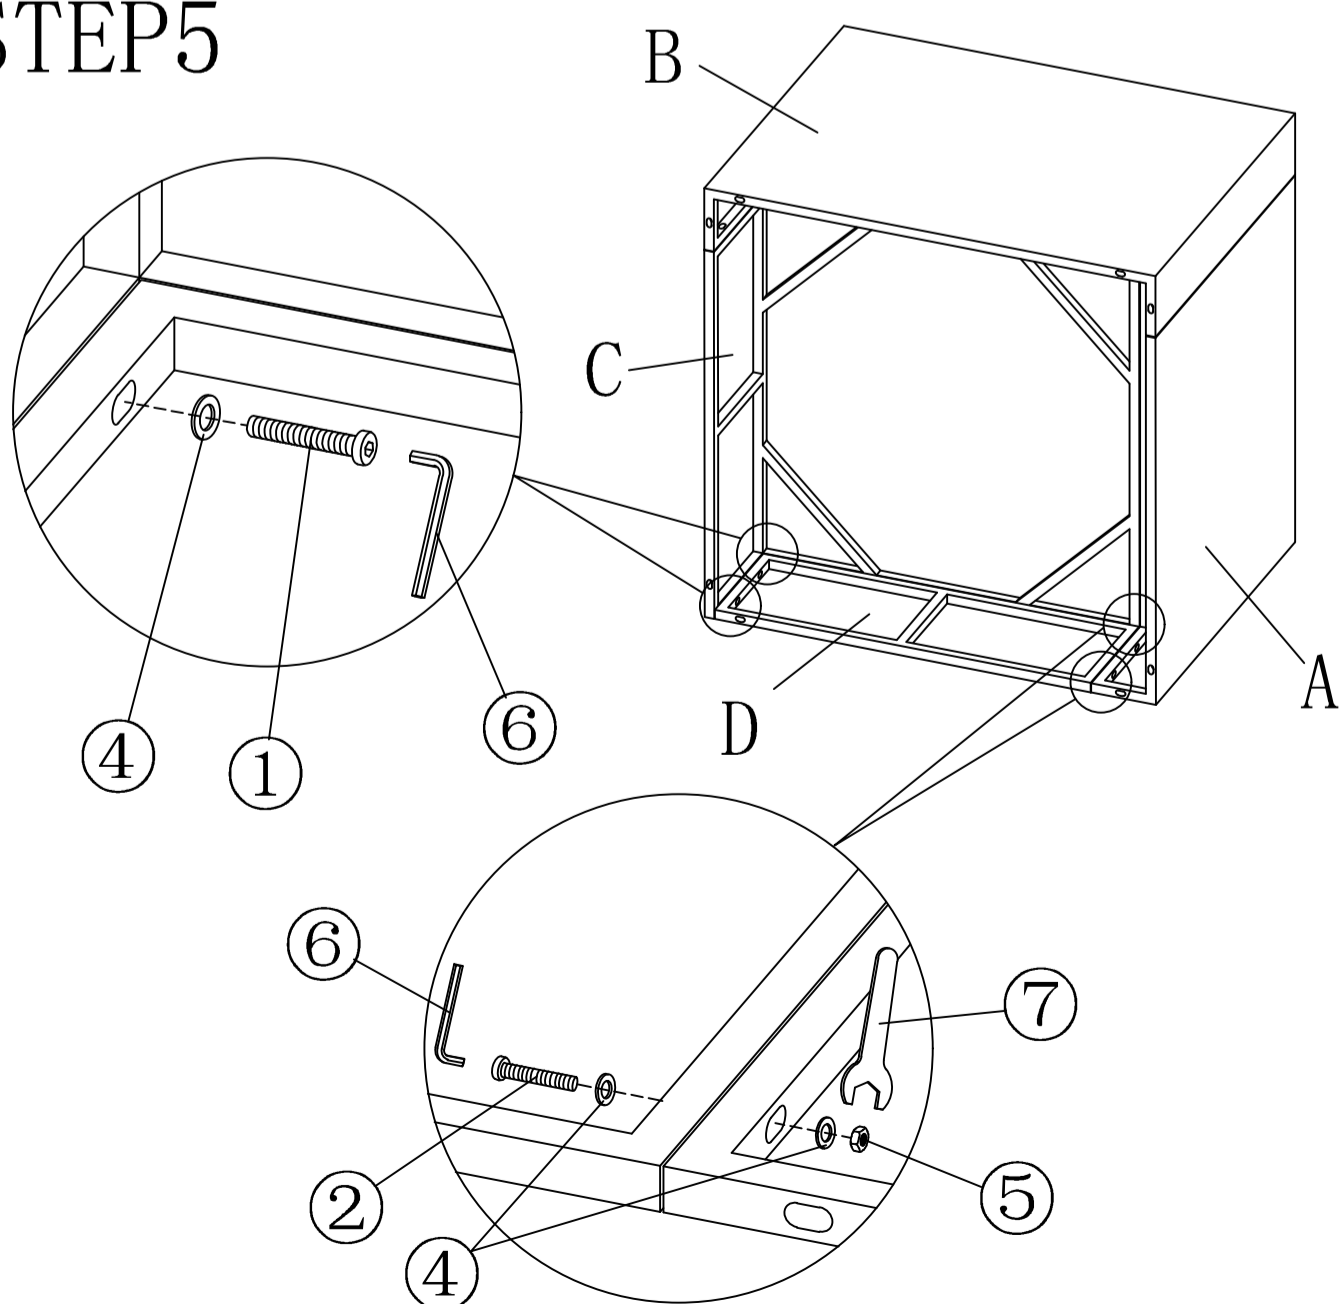


### STEP 6

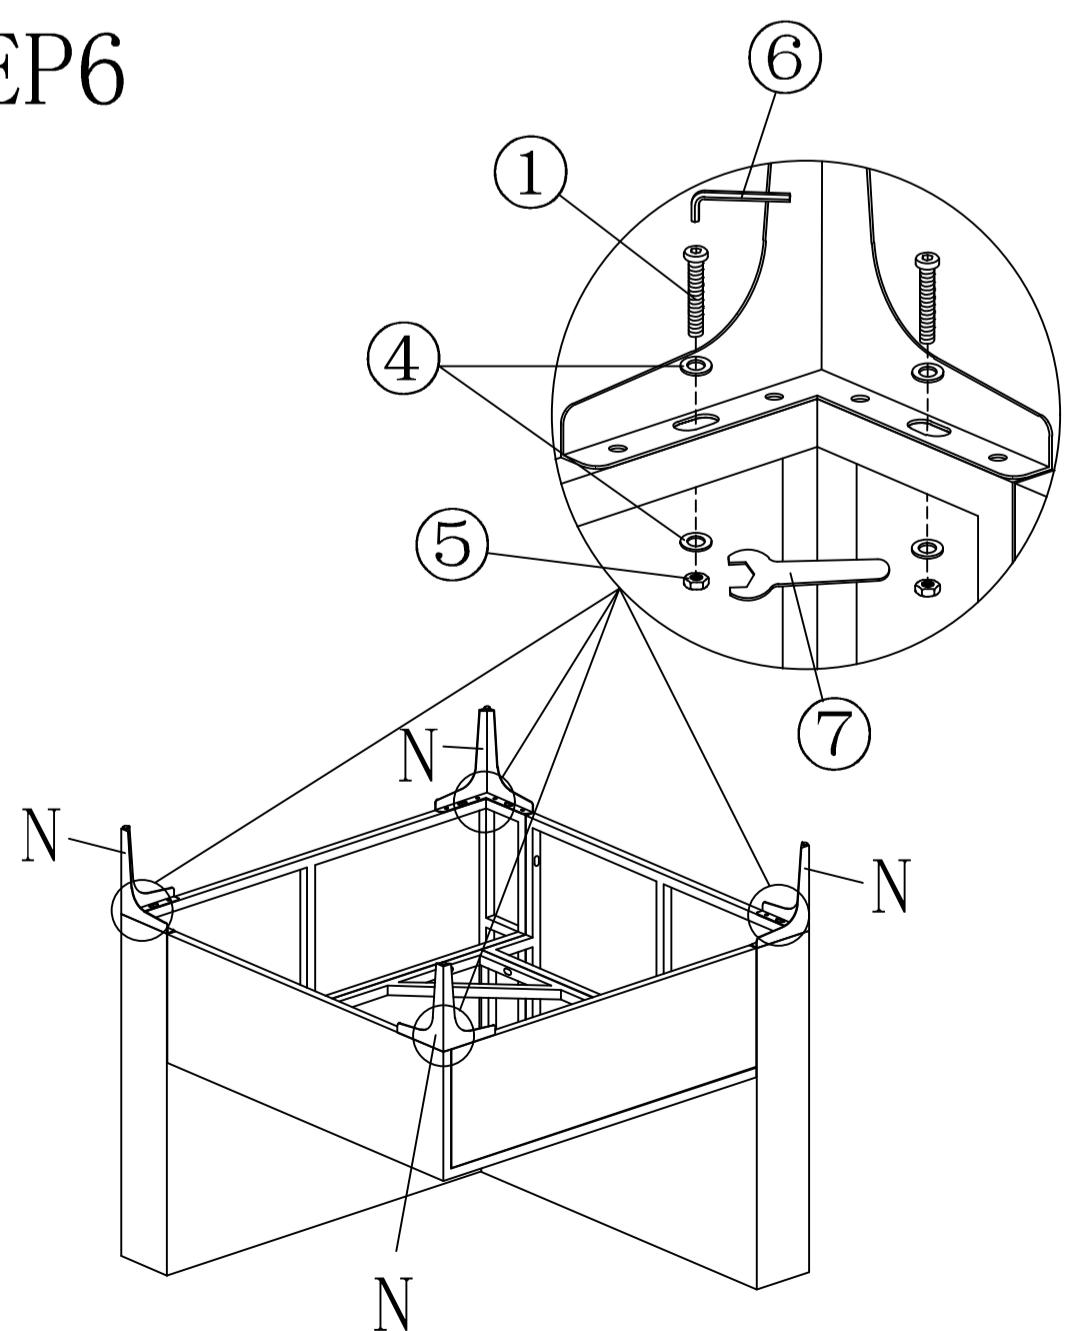


STEP7

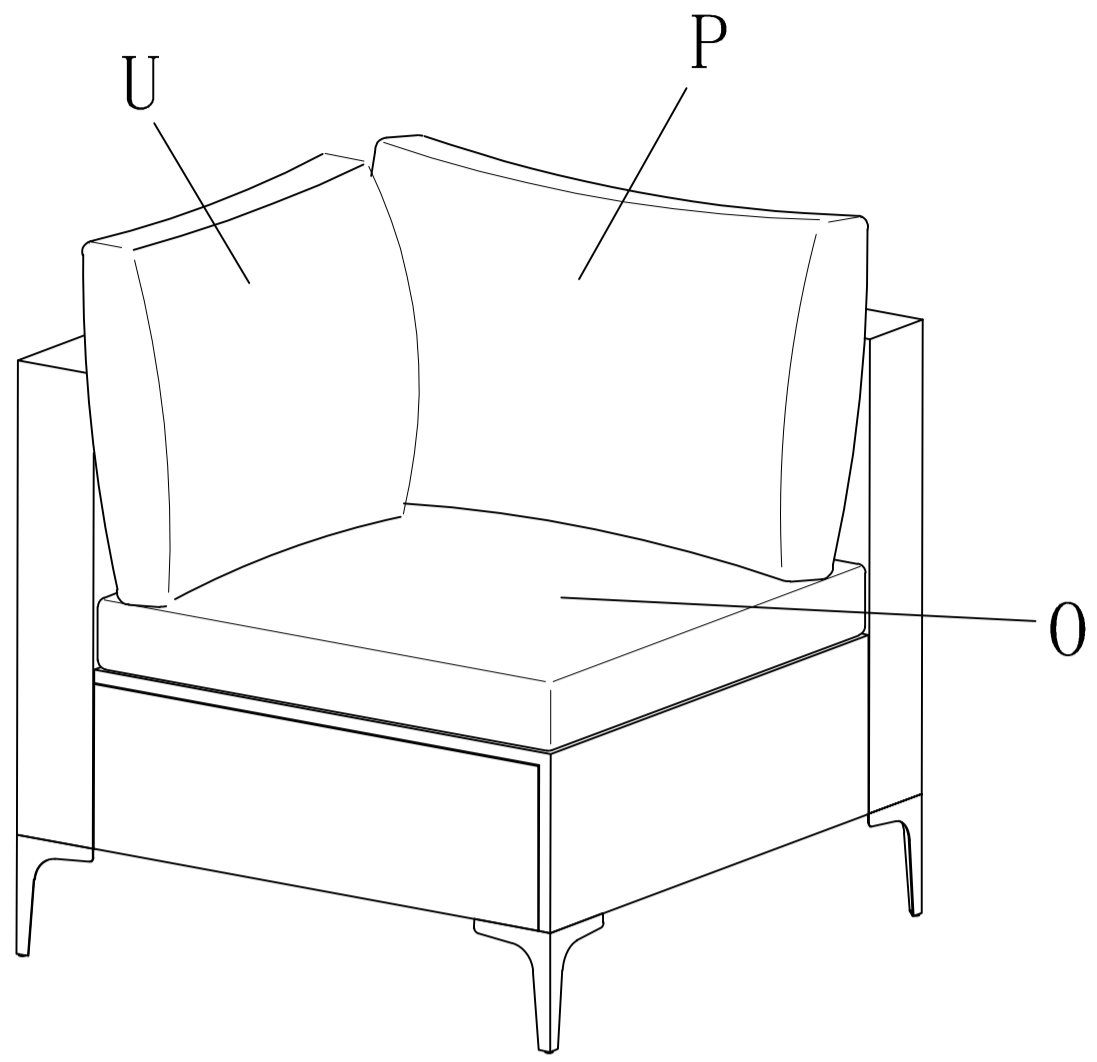


STEP8

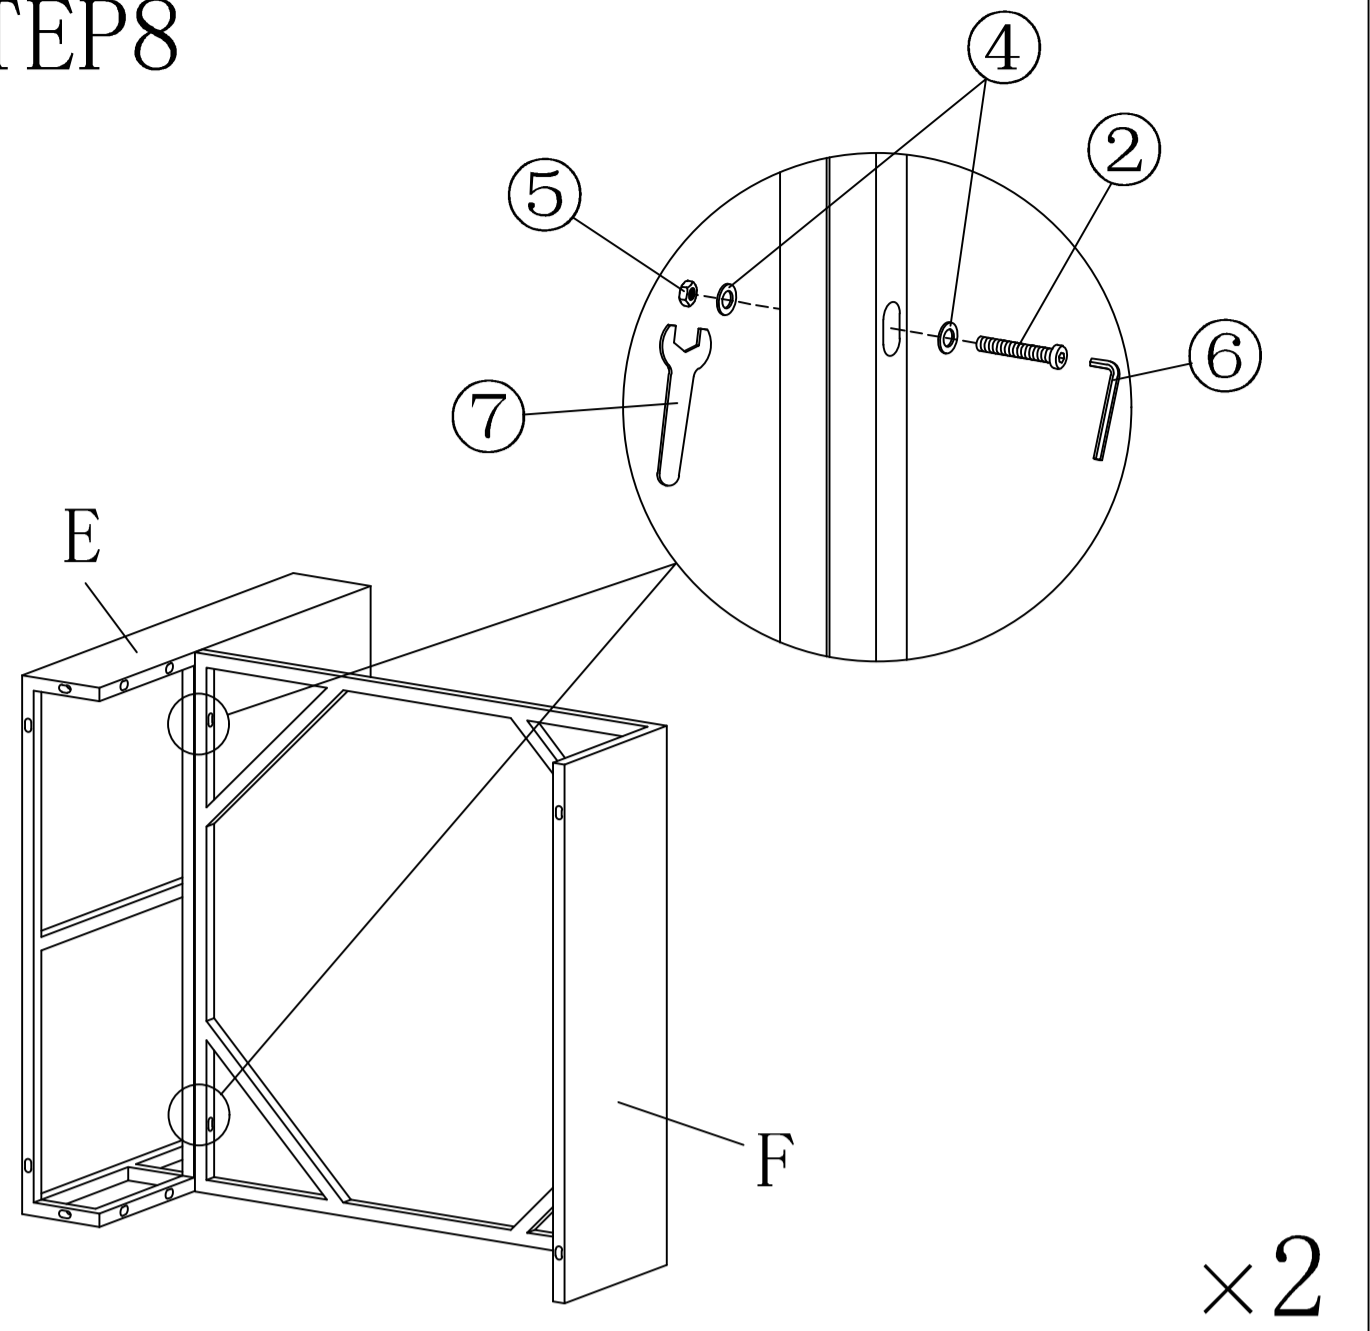


STEP9

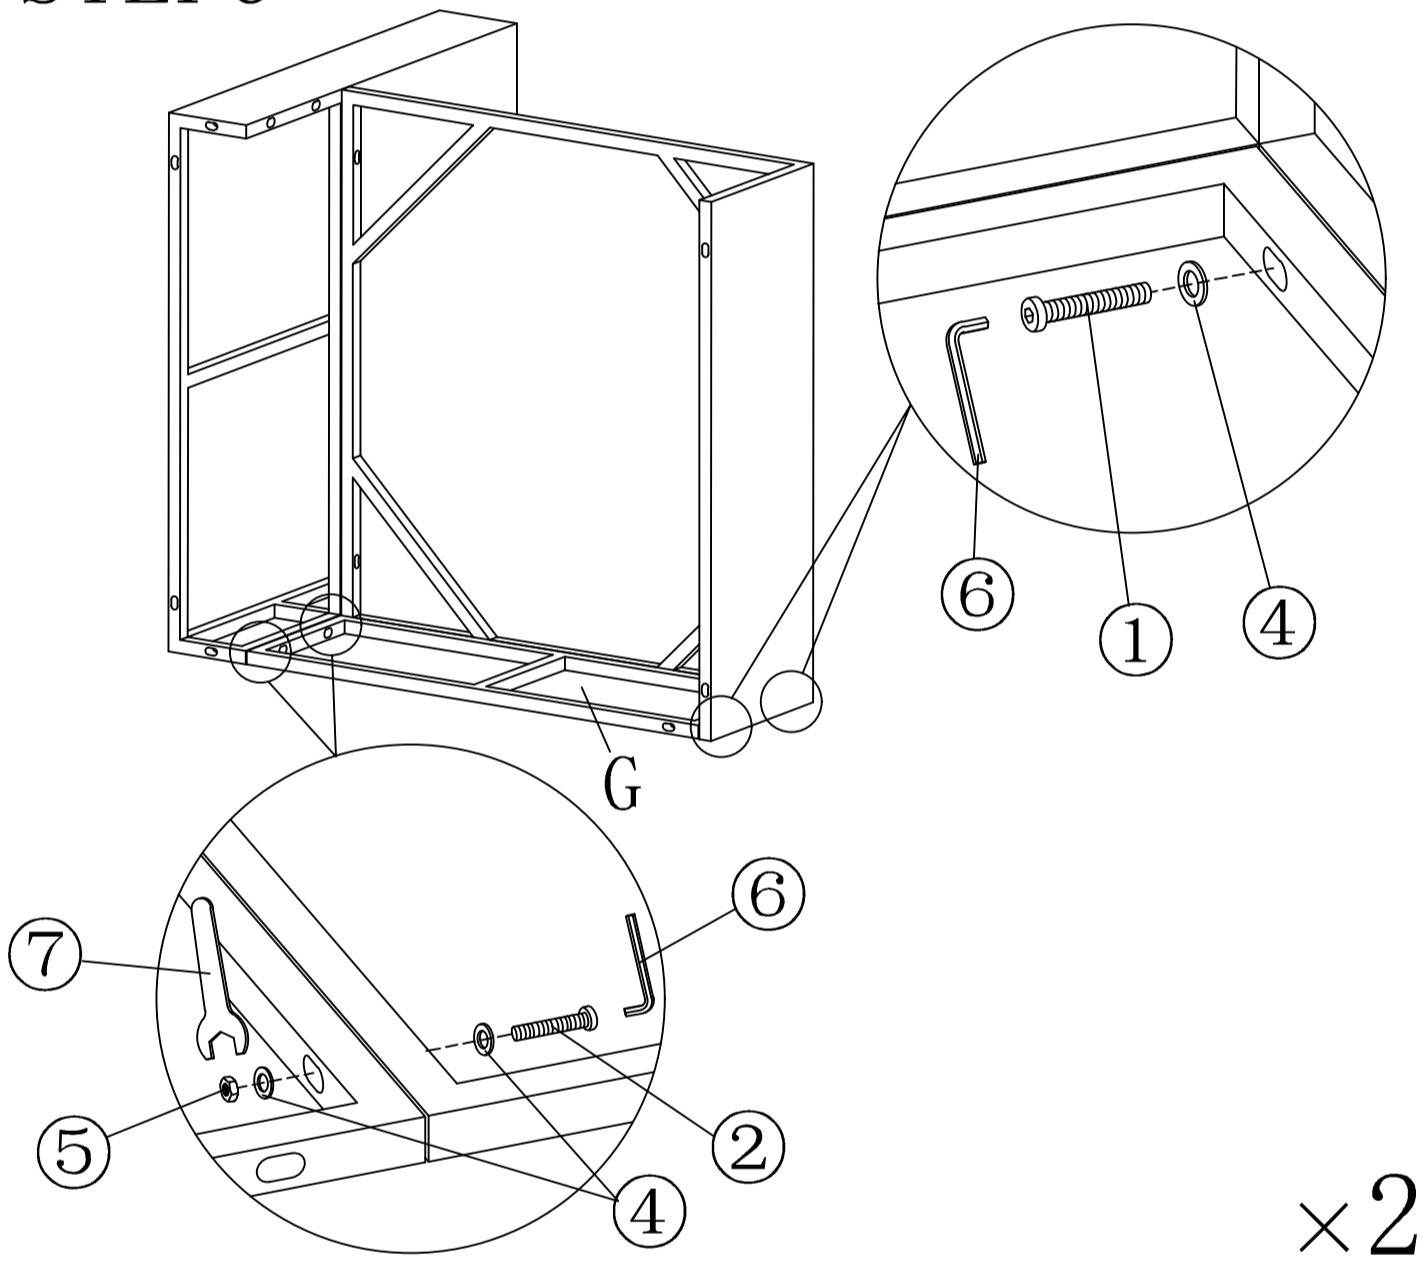


STEP10

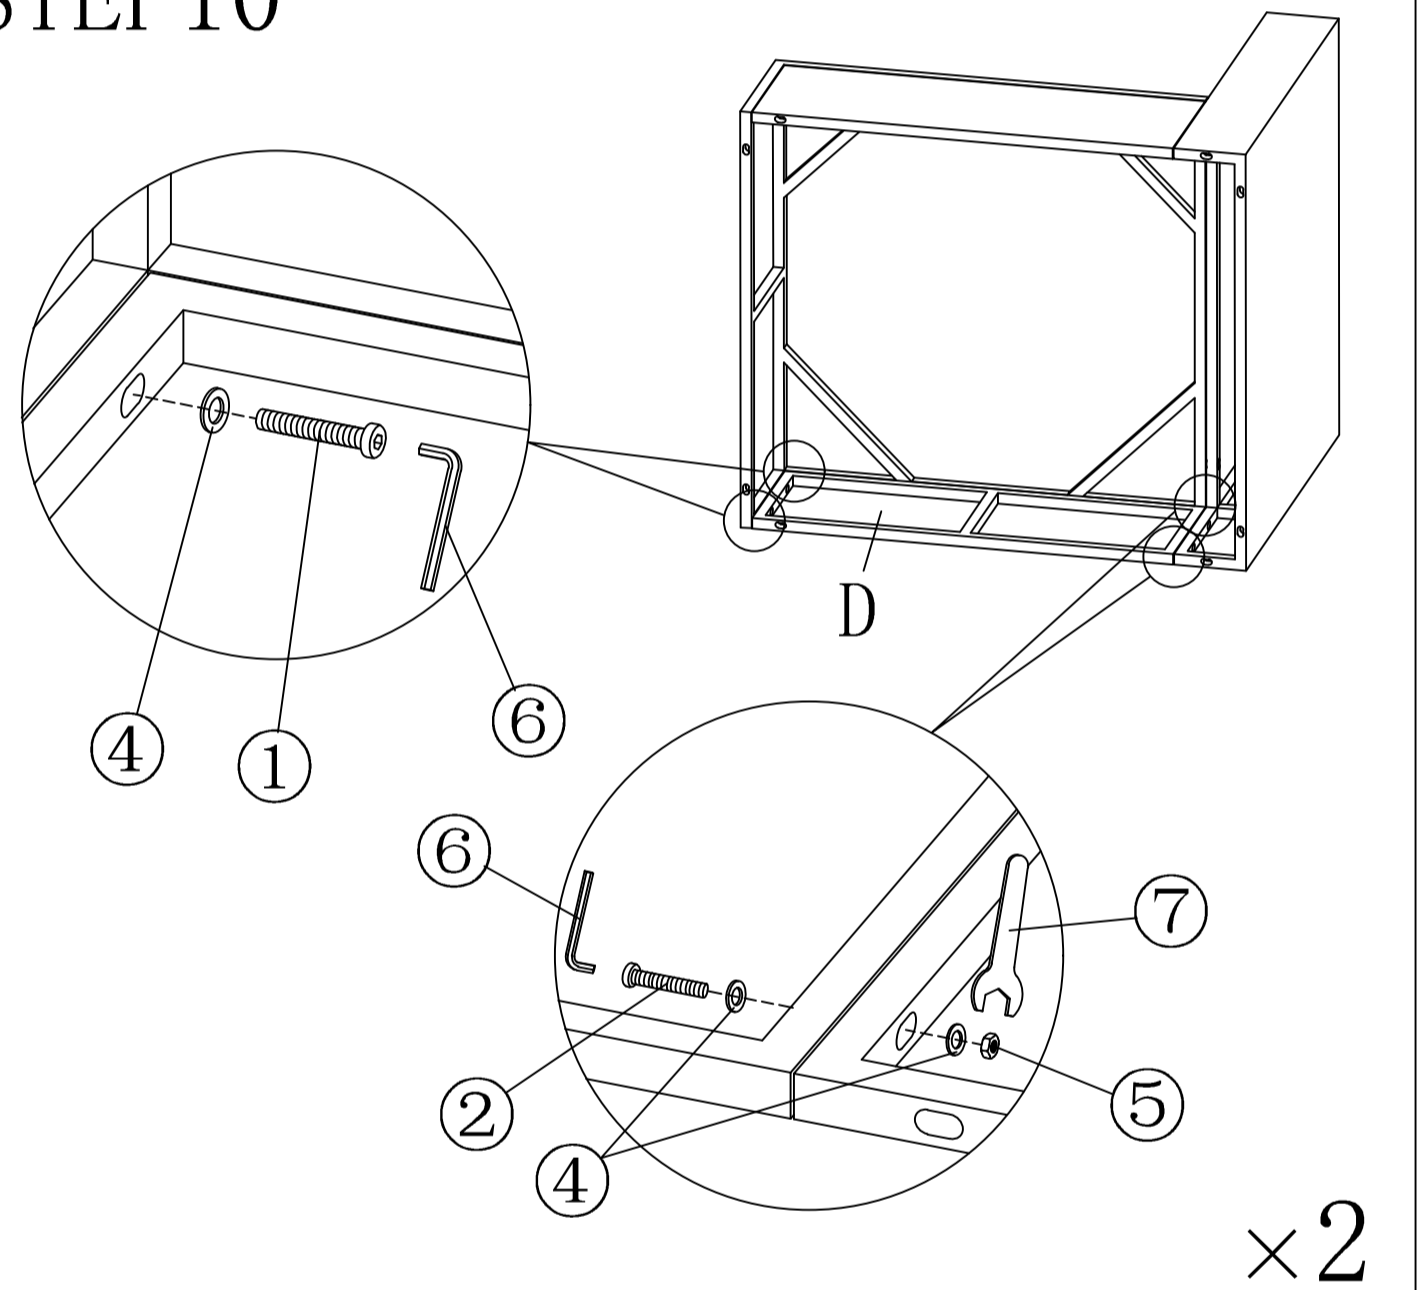


STEP11

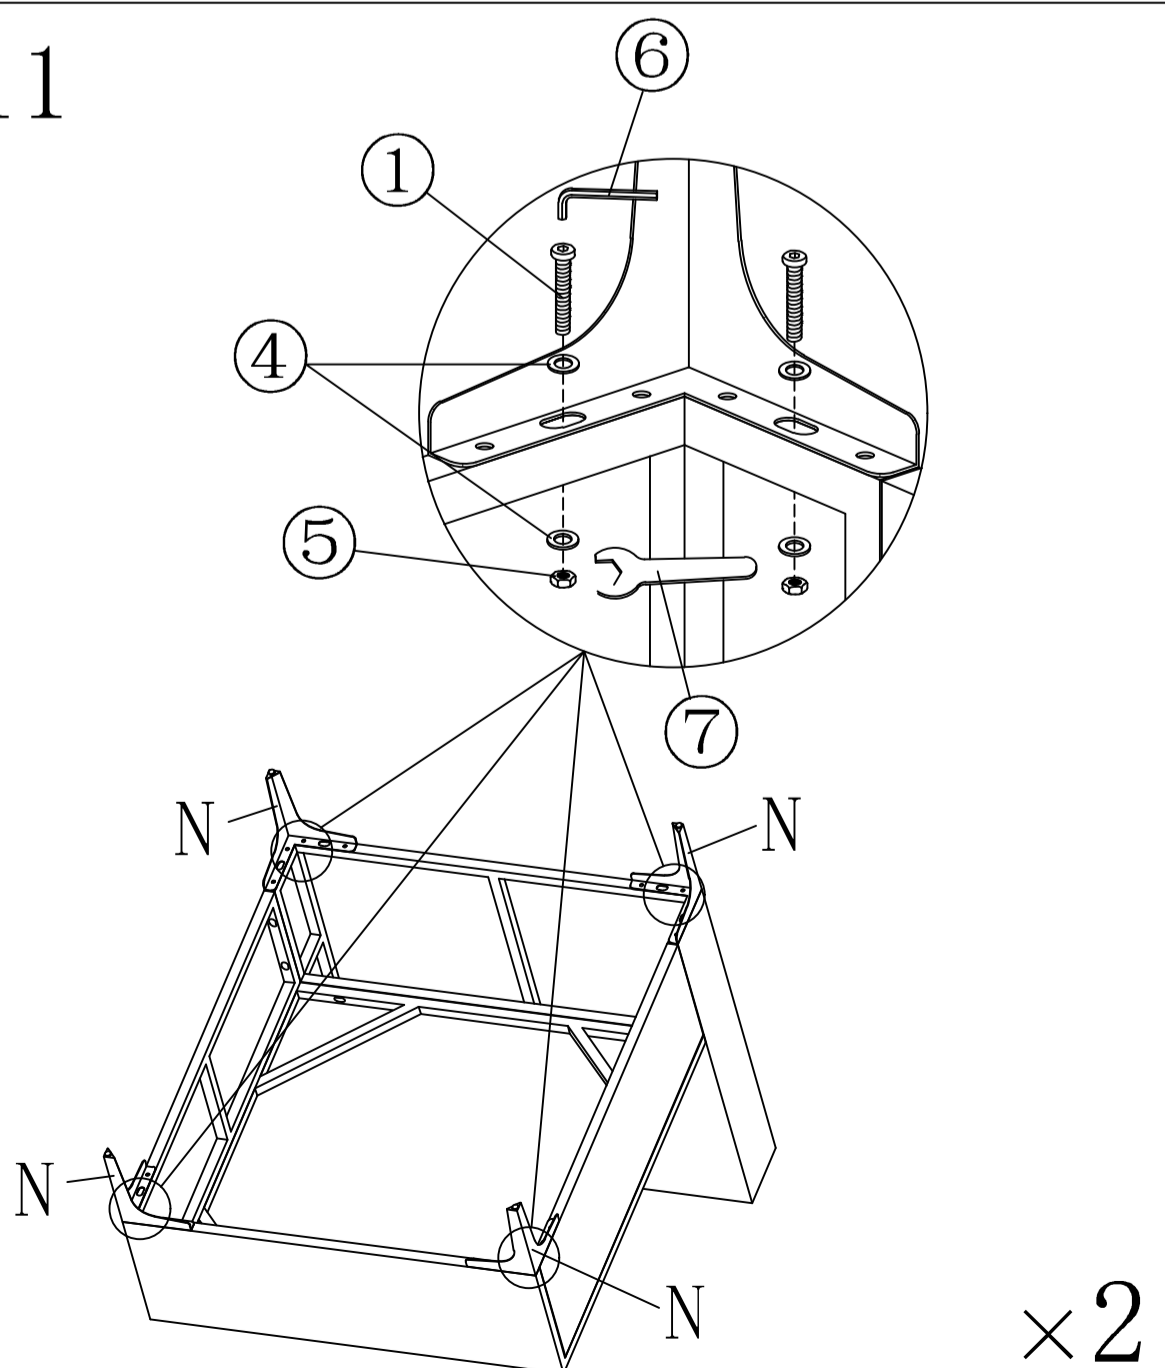


STEP12

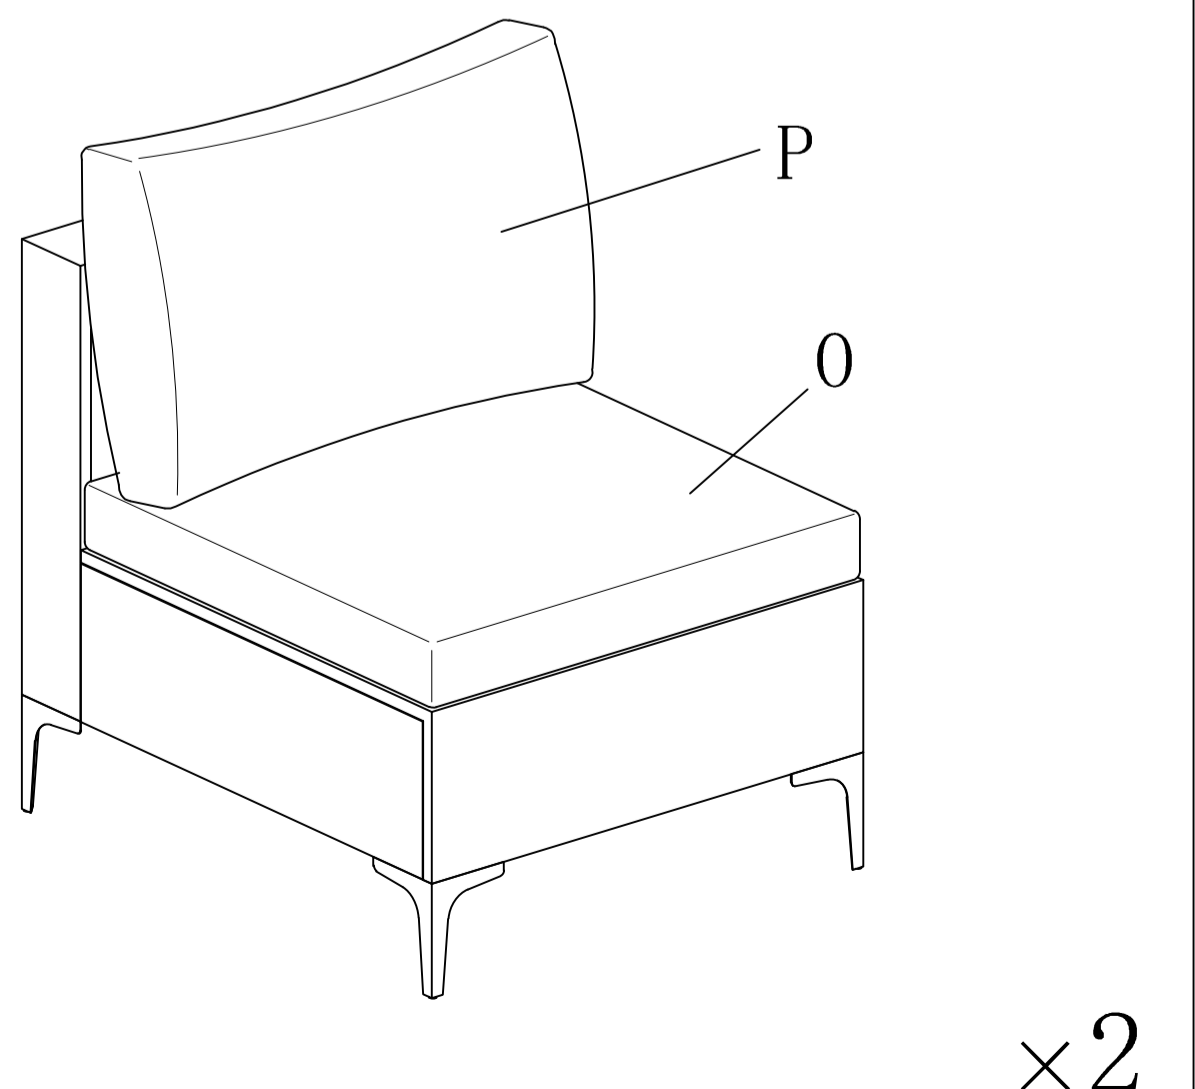


### STEP13

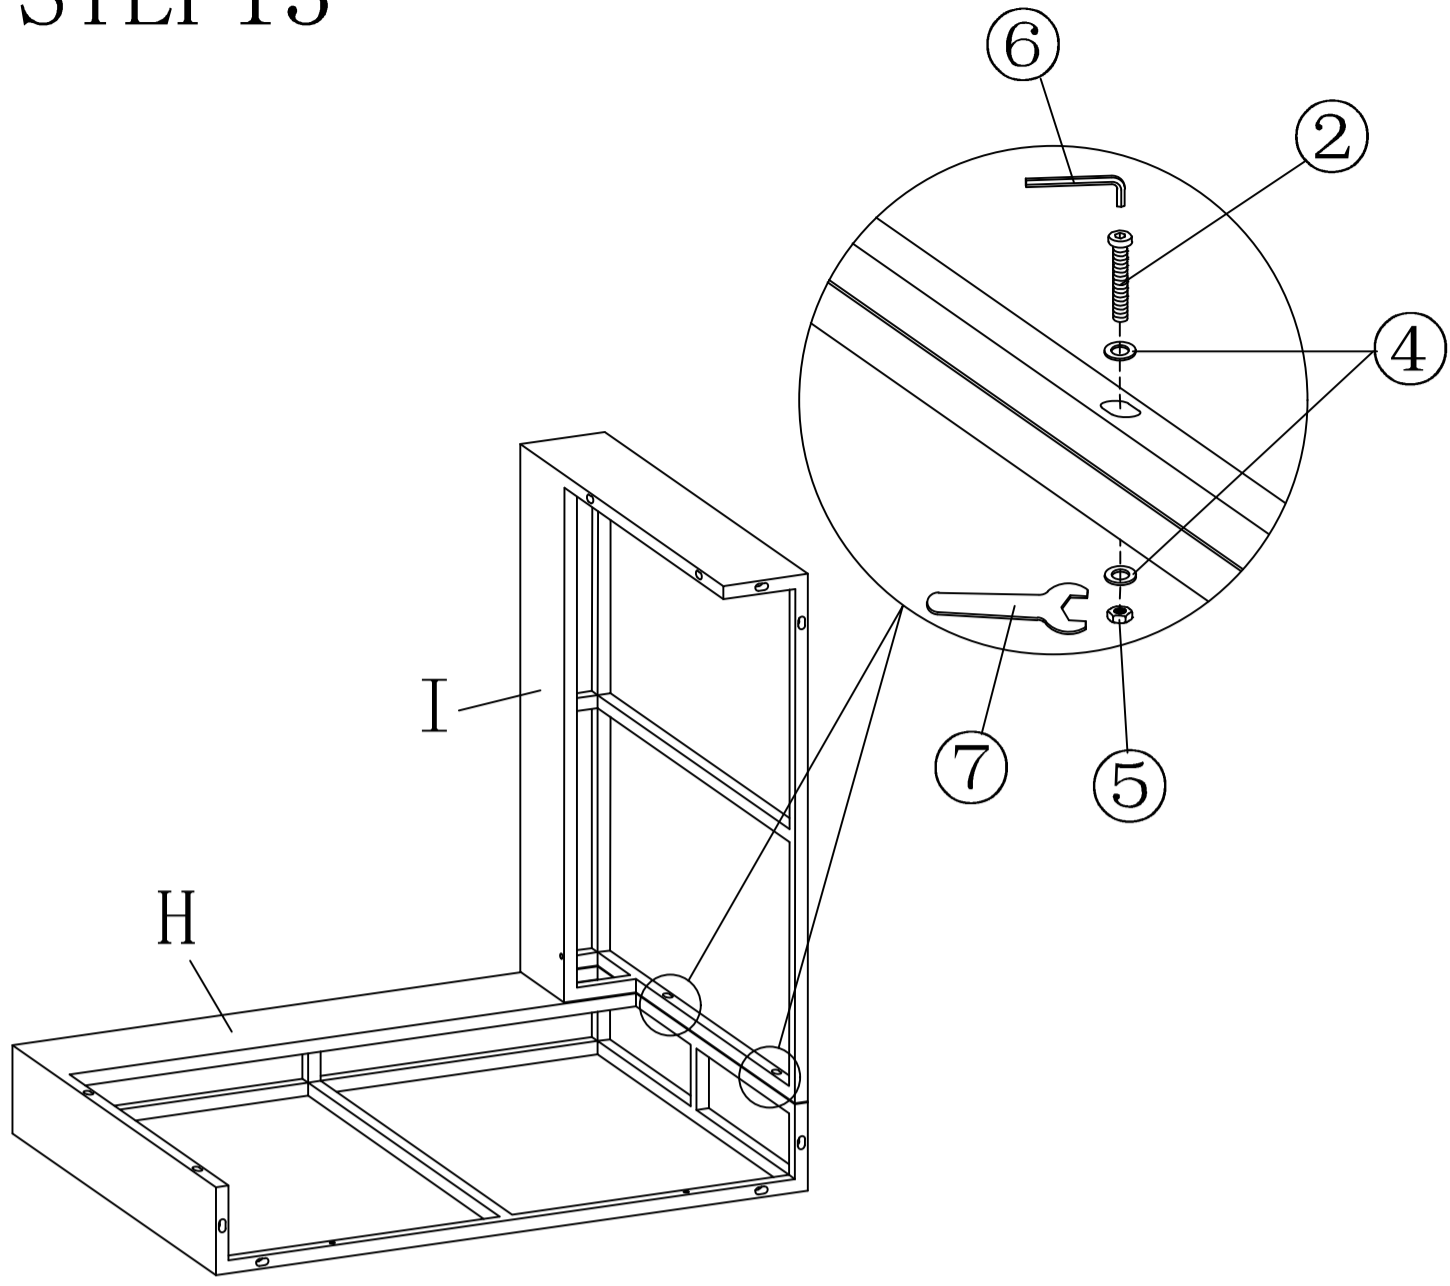


### STEP14

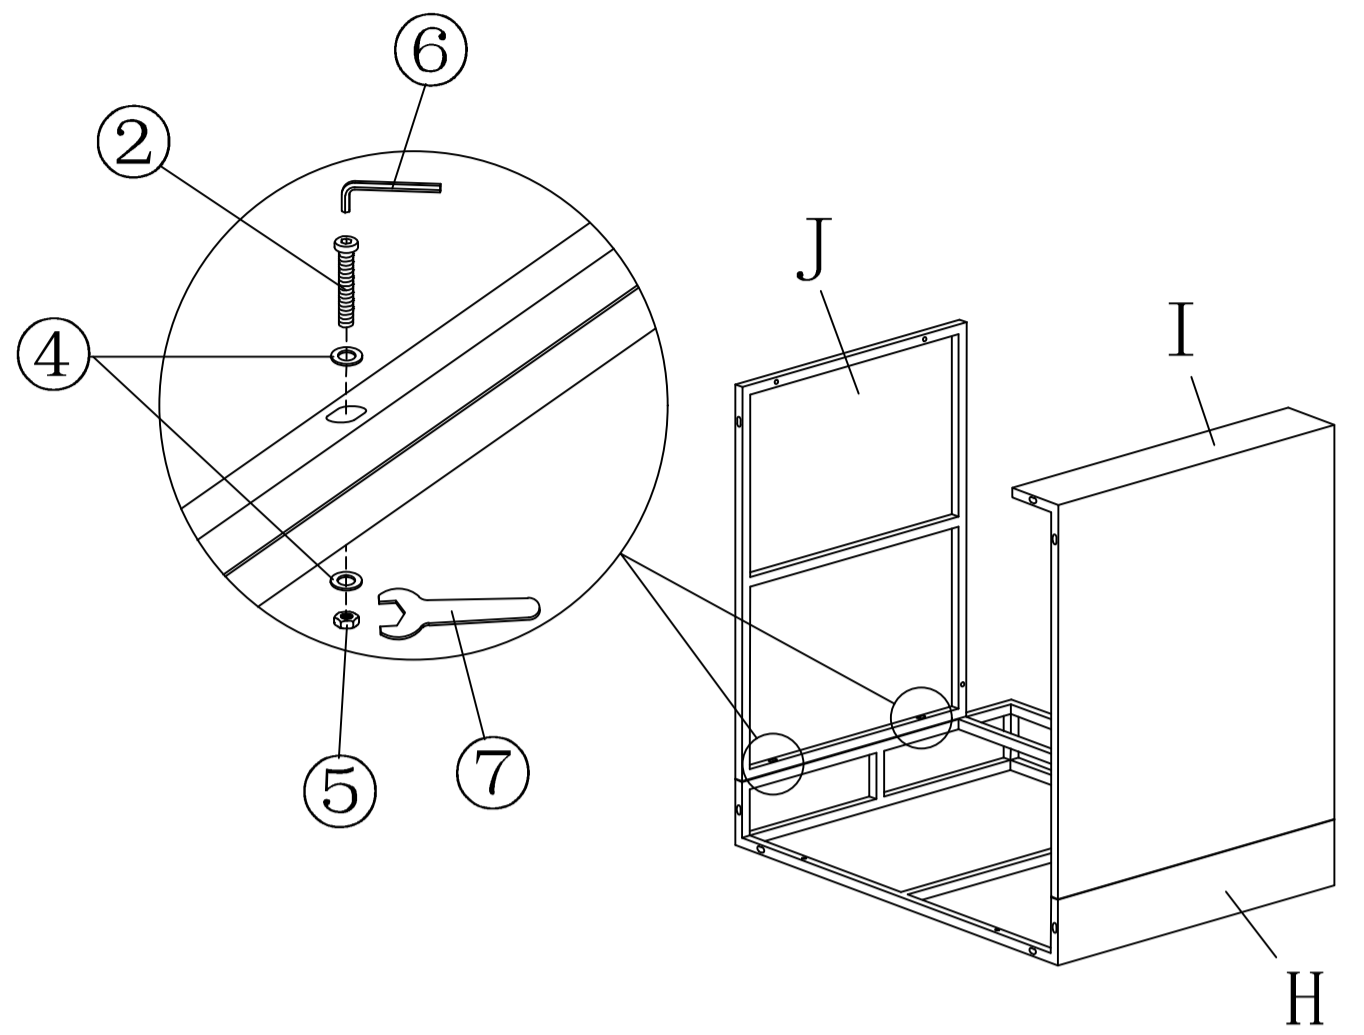


### STEP15

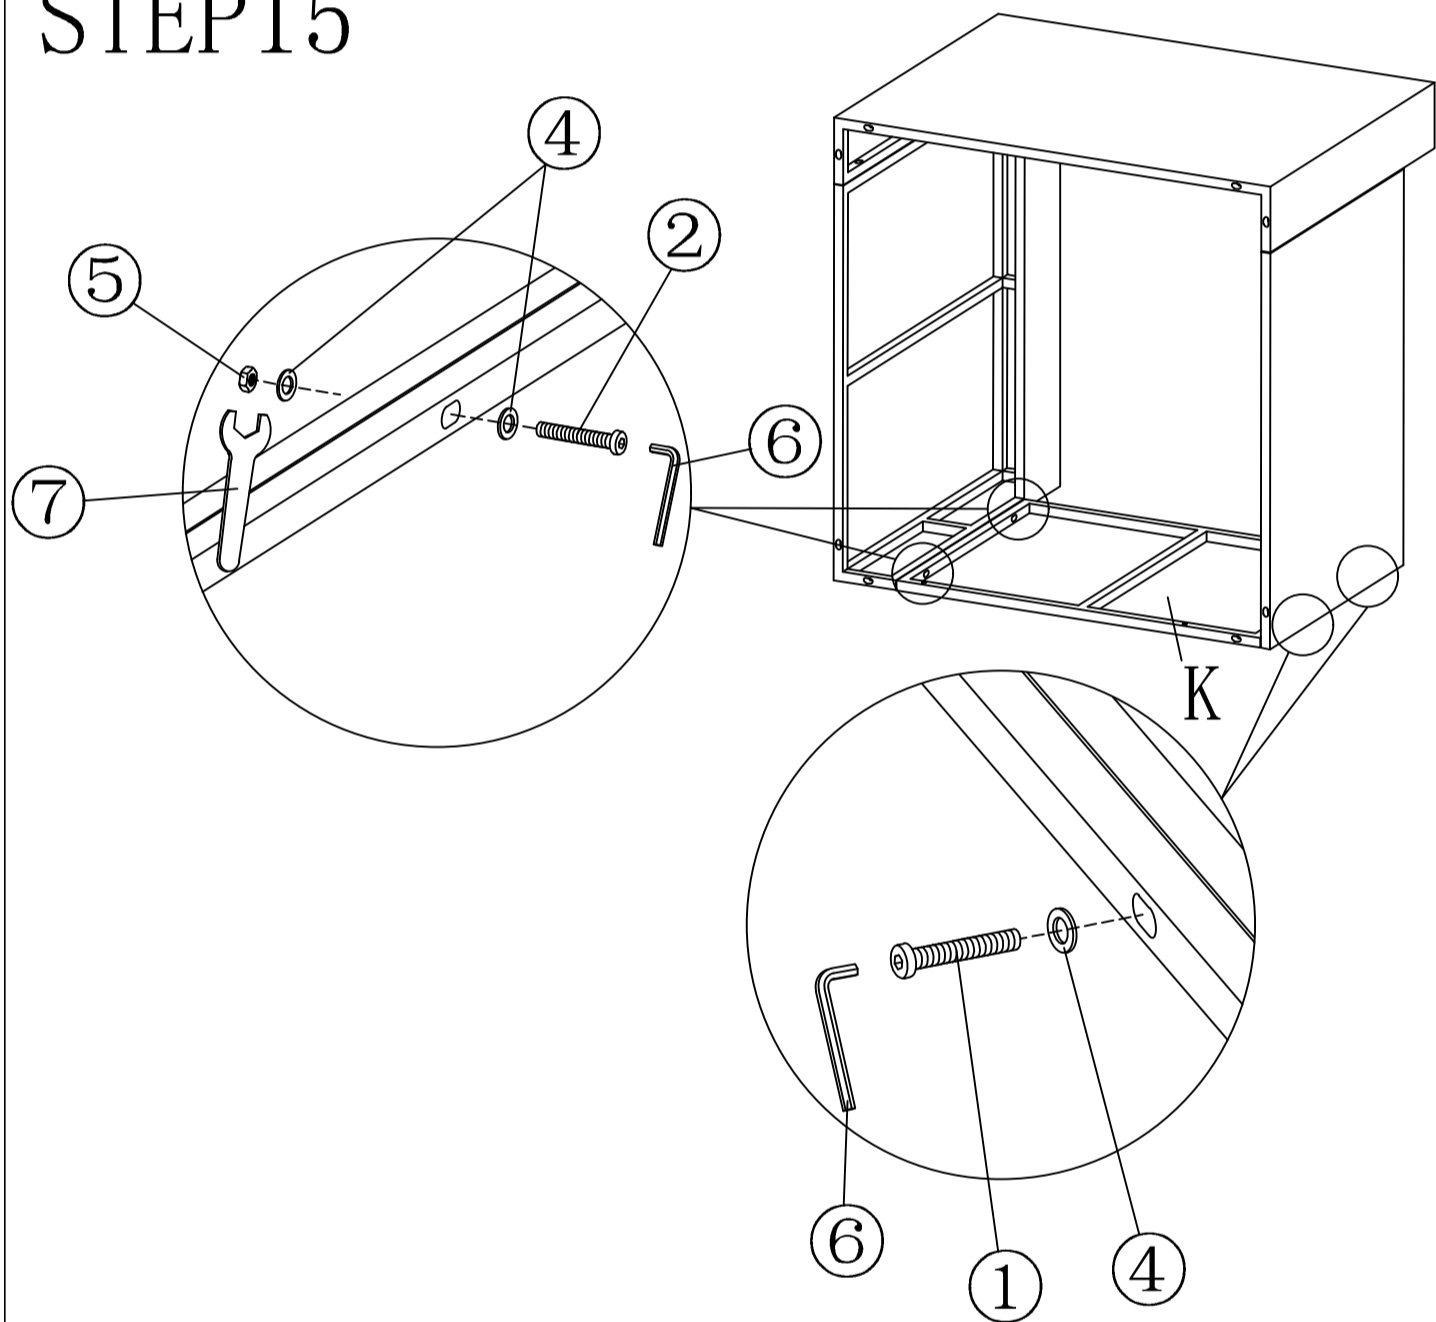

### STEP16

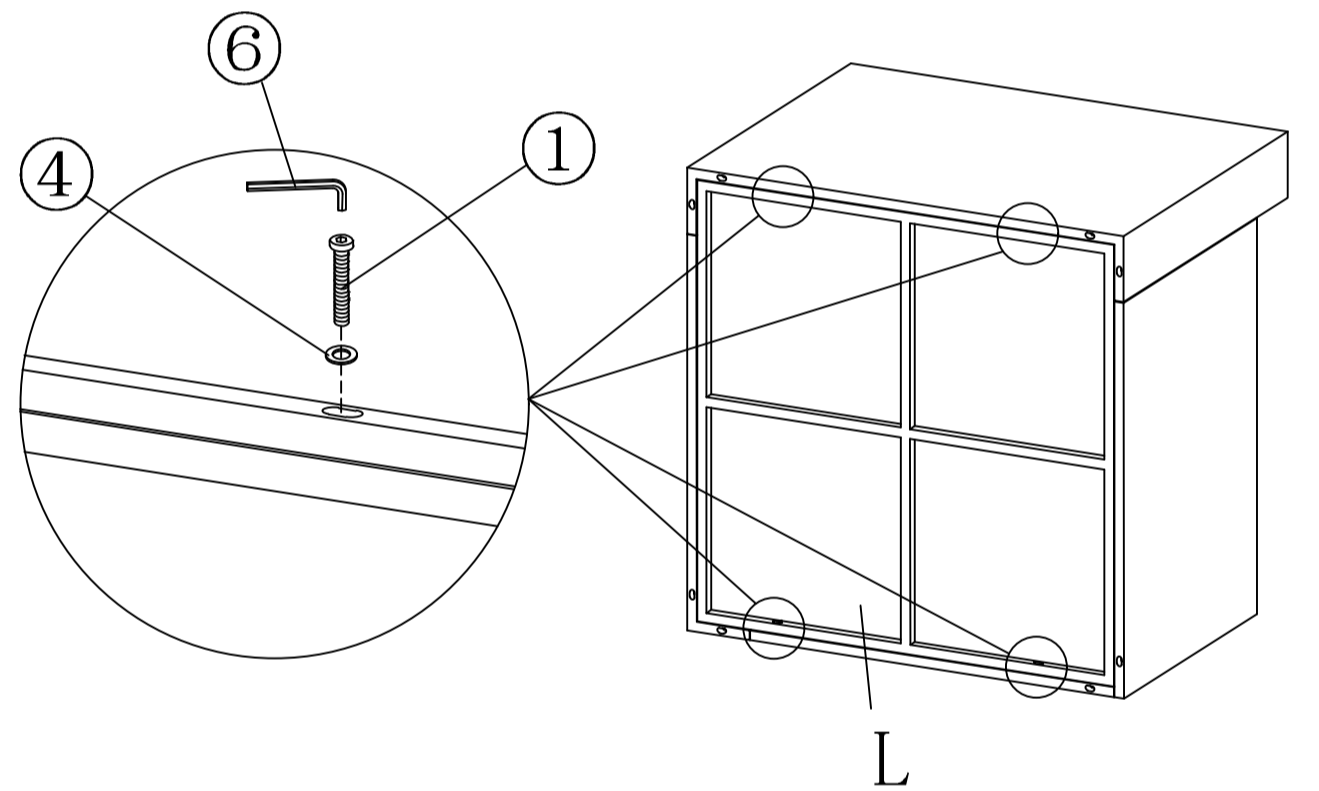

### STEP17

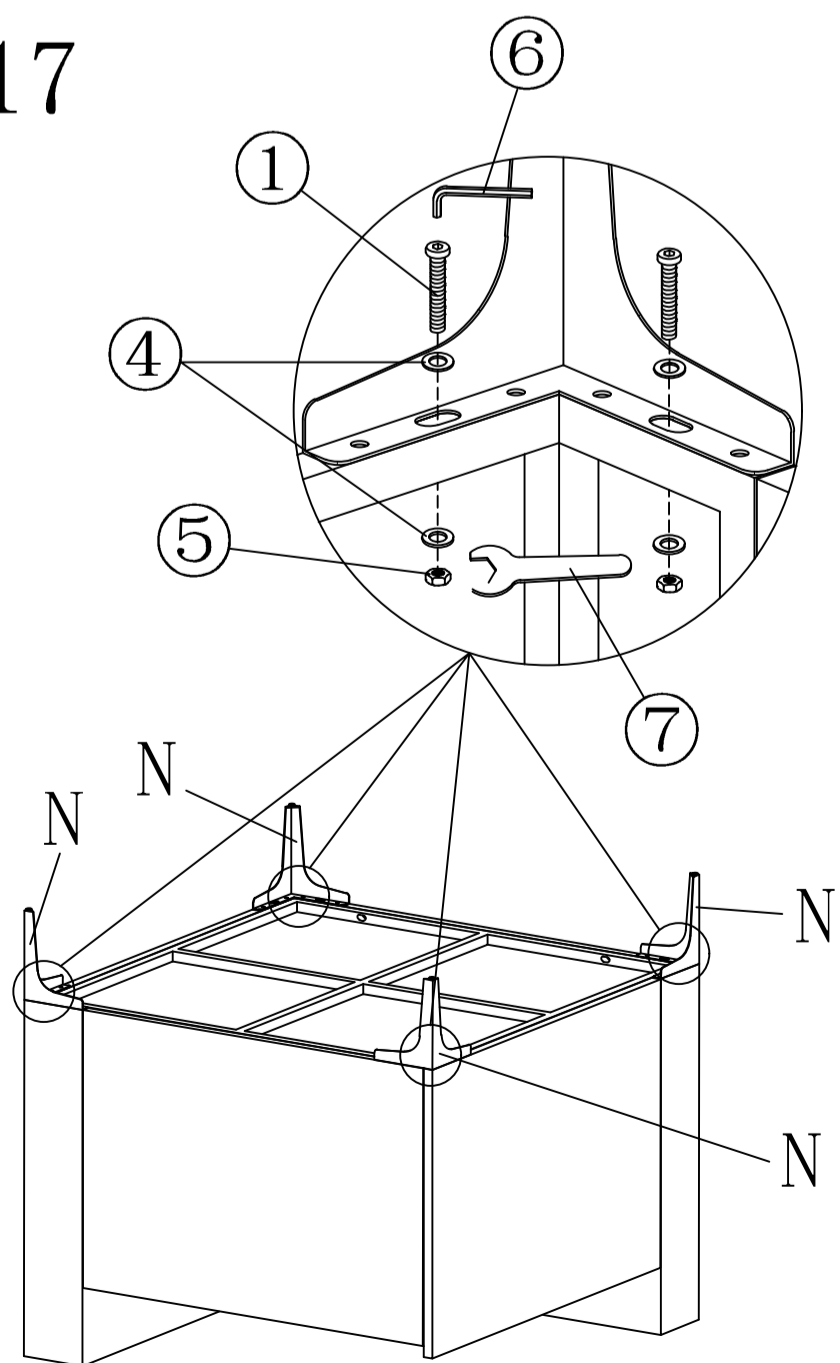

### STEP18

