


SOFA TABLE

ASSEMBLY INSTRUCTION

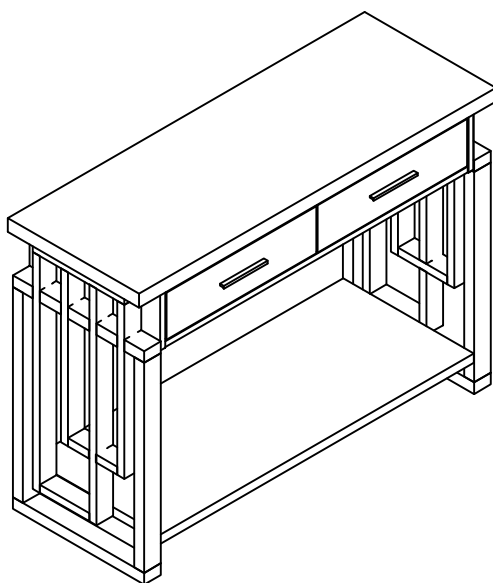

ASSEMBLY INSTRUCTION


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



















Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

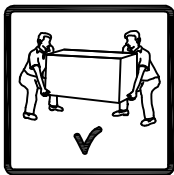





ASSEMBLY TIME PER UNIT: 30 MINUTES

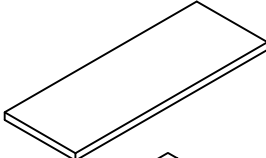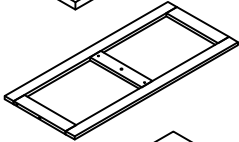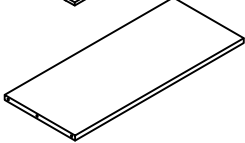PARTS IDENTIFICATION

(A) TOP		1 PC	(H) LEFT LEG FRAME		1 PC
(B) BASE FRAME		1 PC	(I) RIGHT LEG FRAME		1 PC
(C) SHELF		1 PC	(J) LEFT DRAWER FRONT		1 PC
(D) CROSSBAR		1 PC	(K) RIGHT DRAWER FRONT		1 PC
(E) LEFT SIDE PANEL		1 PC	(L) DRAWER LEFT SIDE PANEL		1 PC
(F) RIGHT SIDE PANEL		1 PC	(M) DRAWER RIGHT SIDE PANEL		1 PC
(G) DIVIDER PANEL		1 PC	(N) DRAWER BACK PANEL		1 PC
			(O) DRAWER BOTTOM PANEL		1 PC
			(P) DRAWER BOTTOM PANEL		1 PC


ASSEMBLY INSTRUCTION

Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q' TY
1	LARGE CAMBOLT L=29mm		14pcs
2	LARGE CAMLOCK Ø15mm		14pcs
3	SMALL CAMBOLT L=20mm		8pcs
4	SMALL CAMLOCK ET12mm		8pcs
5	SMALL CAMLOCK L=24mm		4pcs
6	SMALL CAMLOCK ET12mm		4pcs
7	SHORT DOWEL Ø8×25mm		10pcs
8	LARGE SCREW Ø4x30mm		10pcs
9	WRENCH M5mm		1pc
10	WASHER Ø8X16X2mm		4pcs
11	INNER HEX SCREW M8x35mm		4pcs
12	INNER HEX SCREW M6x30mm		4pcs
13	NAIL		22pcs
14	METAL SCREW 80x25x82mm		1pc
15	EXTRA LARGE SCREW Ø4x16mm		2pcs
16	HANDLE #96mm		2pcs
17	HANDLE SCREW M4X20mm		4pcs
18	THE RESTRAINT STRAP 197×5×1mm		1pc
19	PLASTIC ANCHOR Ø8X40mm		1pc
20	SMALL SCREW Ø4X25mm		1pc
21	WALL SCREW Ø5X40mm		1pc
22	BRACKET 12×12×1mm		2pcs
23	LARGE STICKER Ø22mm		4pcs
24	GLUE		1pc

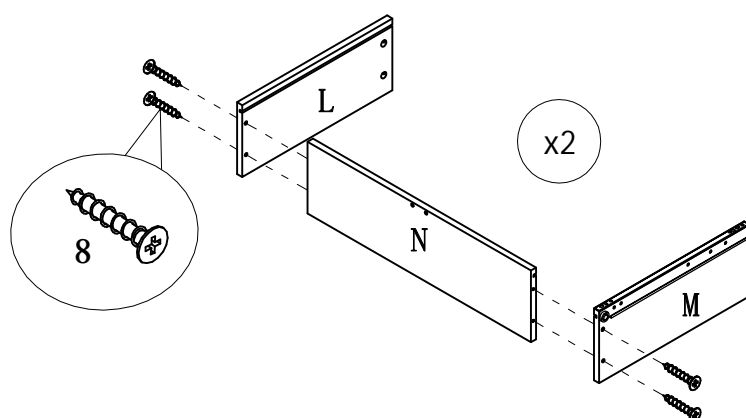


STEP1



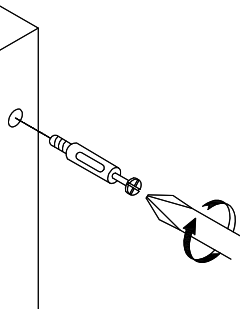
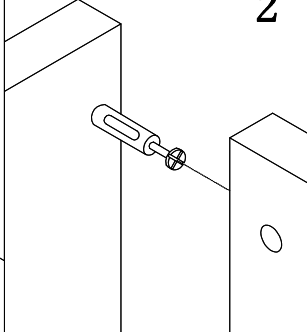
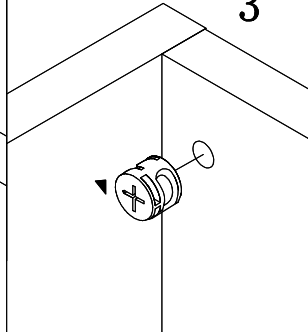
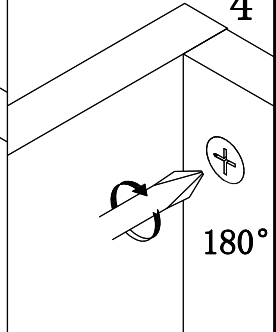
STEP2


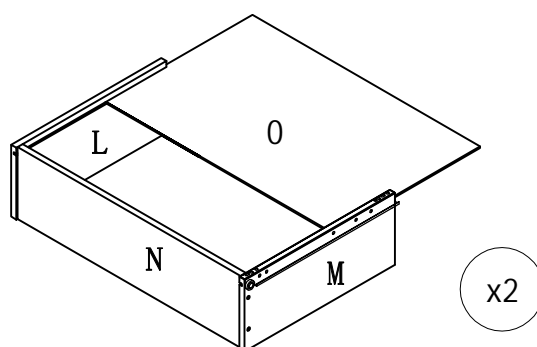



STEP3

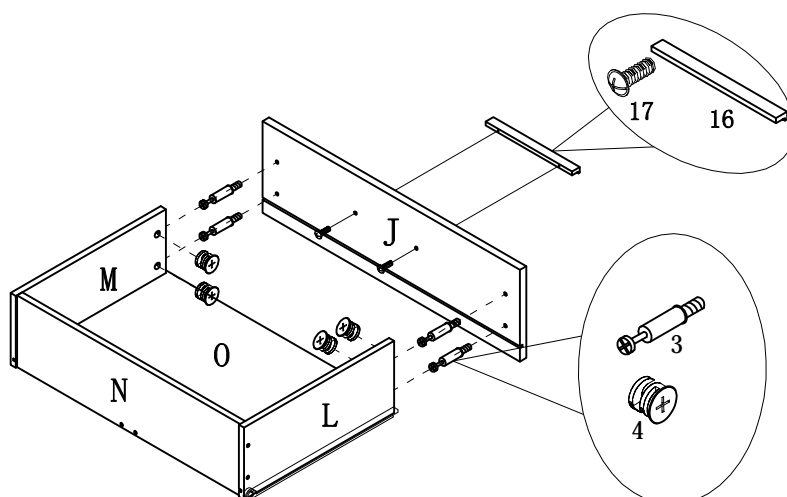

ASSEMBLY INSTRUCTION


HOW TO	1	2	3	4
 Cam Bolt  Cam Lock	 1. Screw Cam Bolt into panel.	 2. Insert Cam Bolt into bolt hole of joining panel.	 3. Insert Cam Lock. arrow facing bolt.	 4. Gently turn Cam Lock clockwise to lock position.

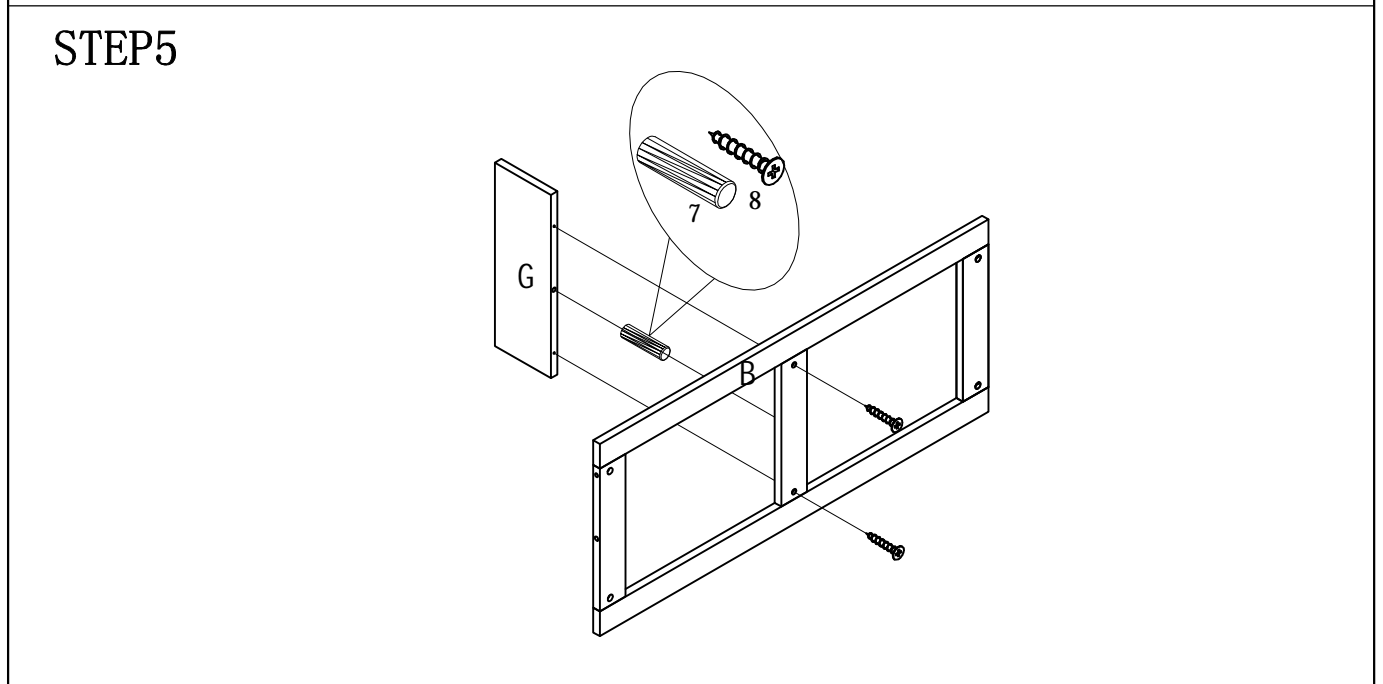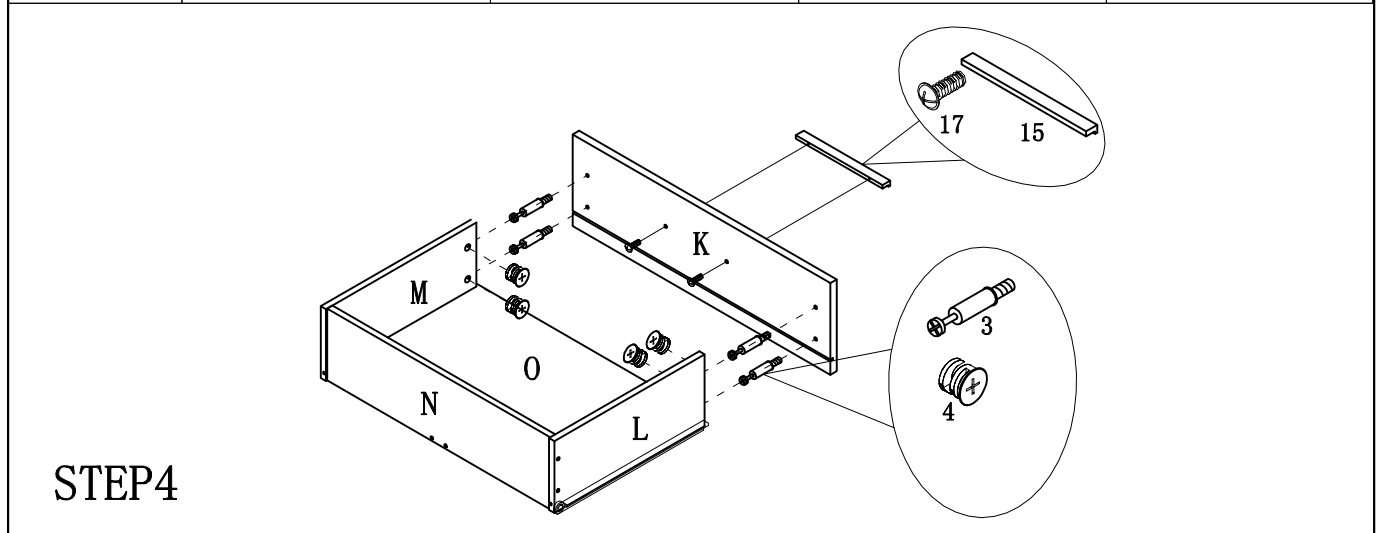


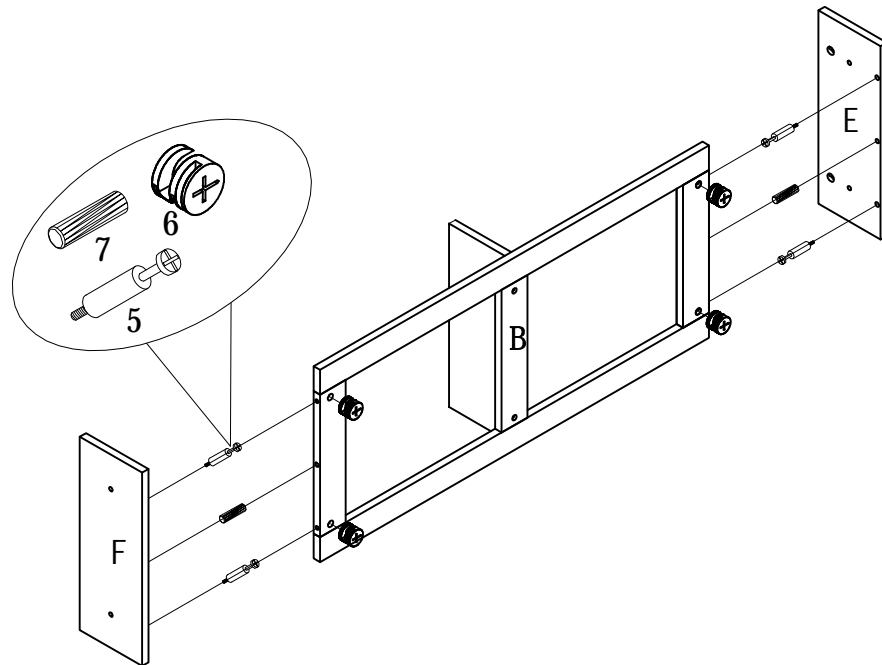

STEP 6


STEP 7

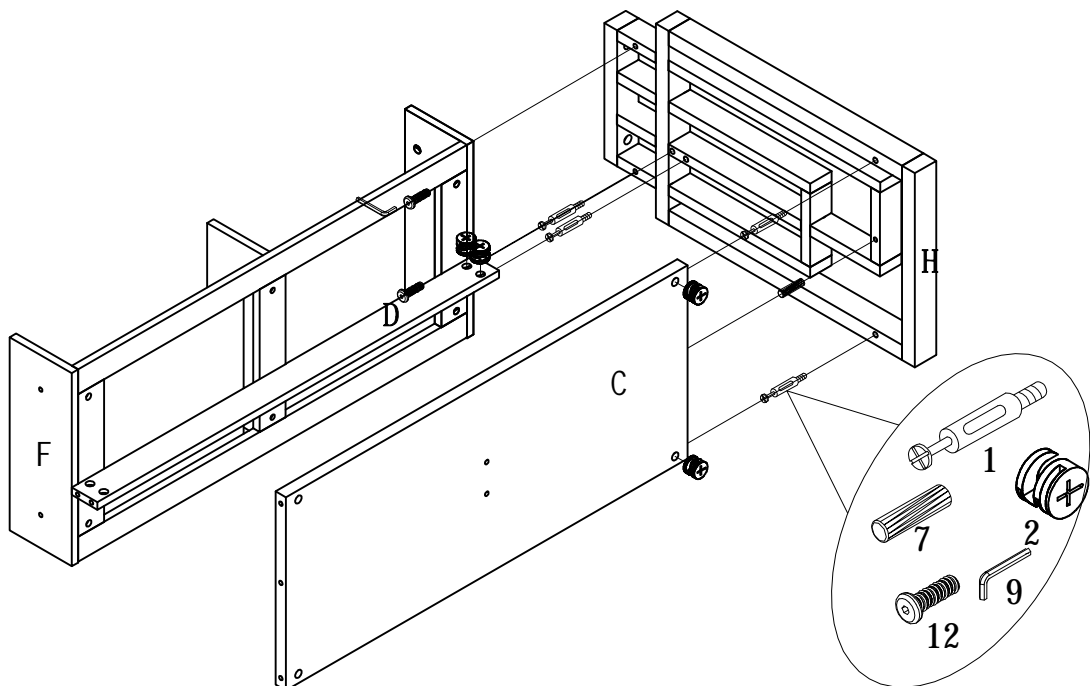

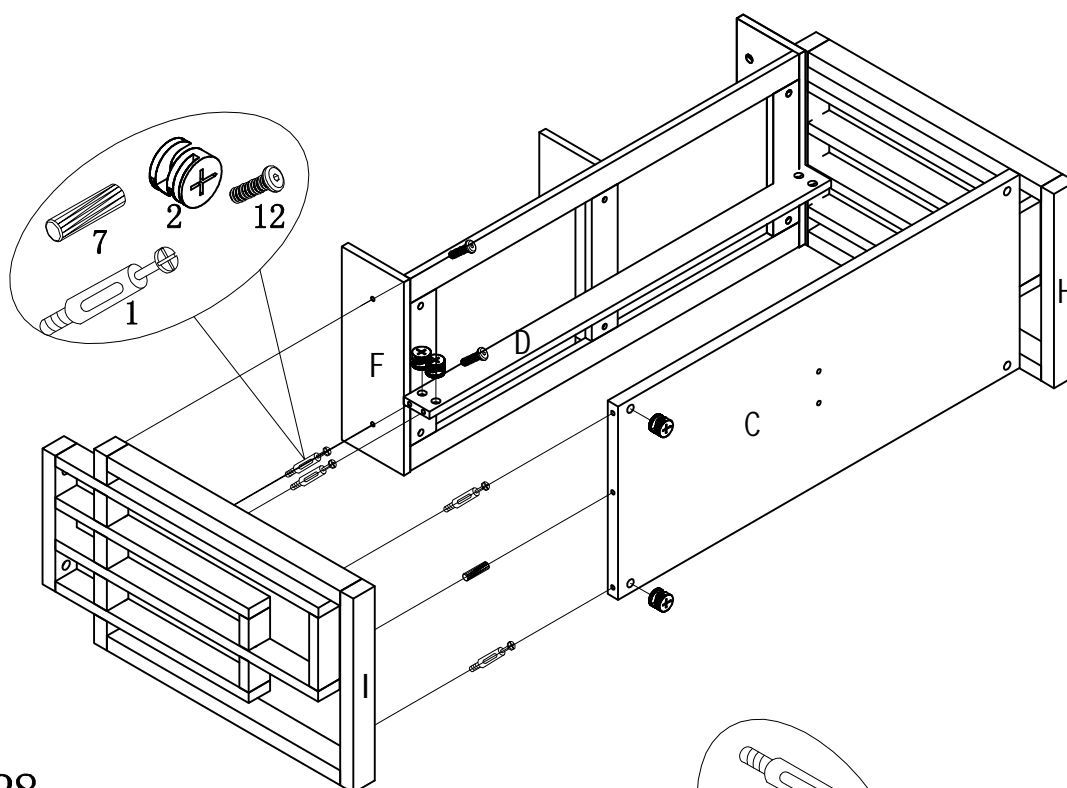


STEP8

STEP9



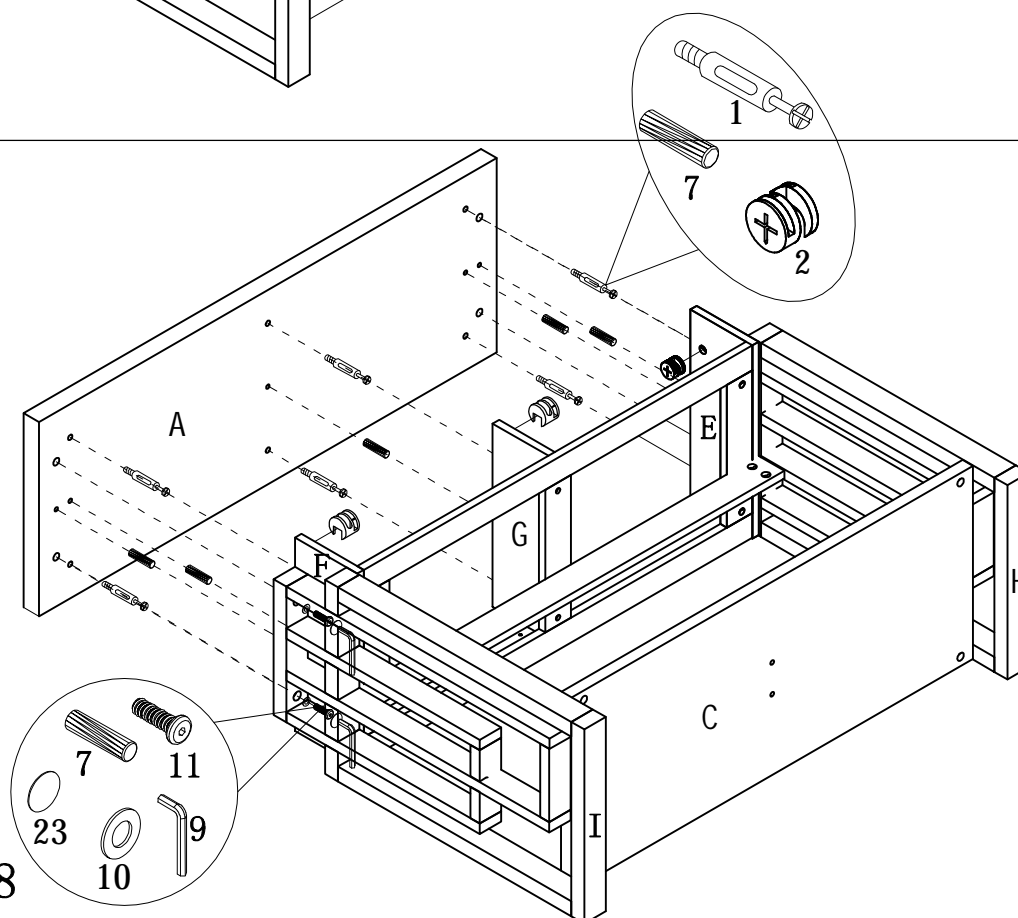


STEP8

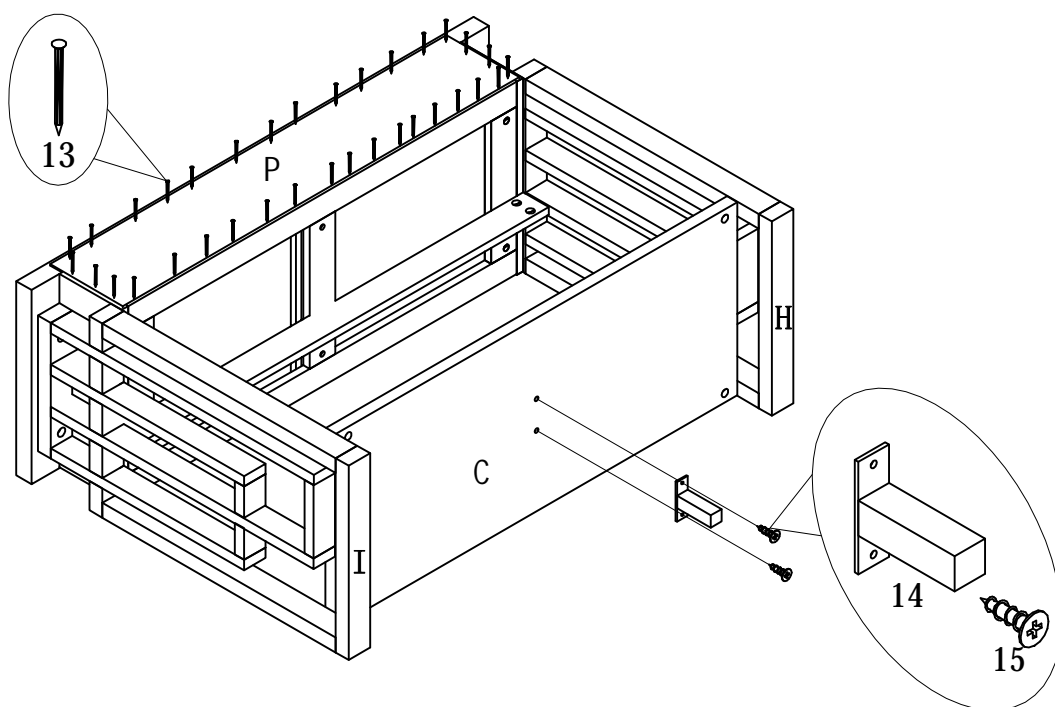

STEP 10

STEP 11

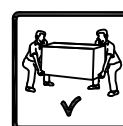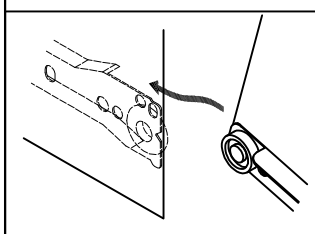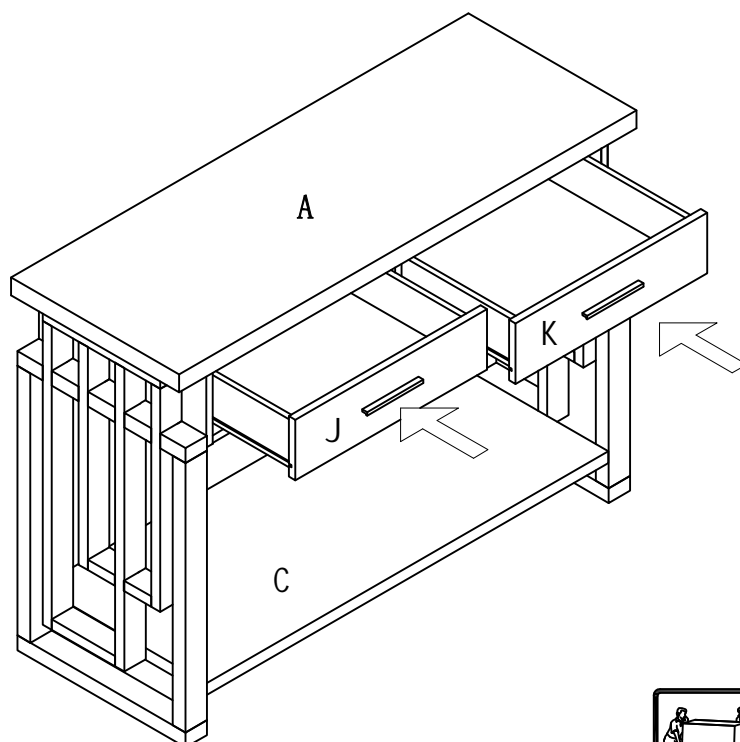


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED)

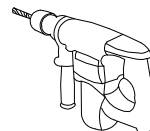


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

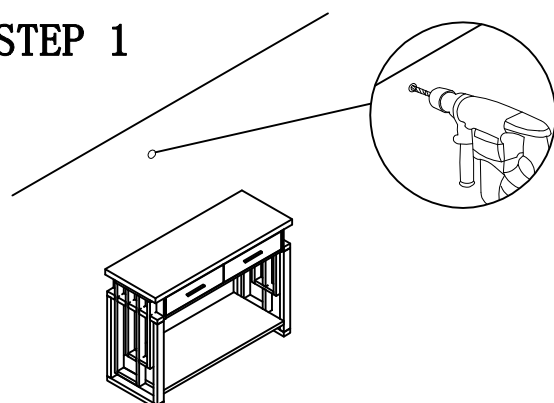


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

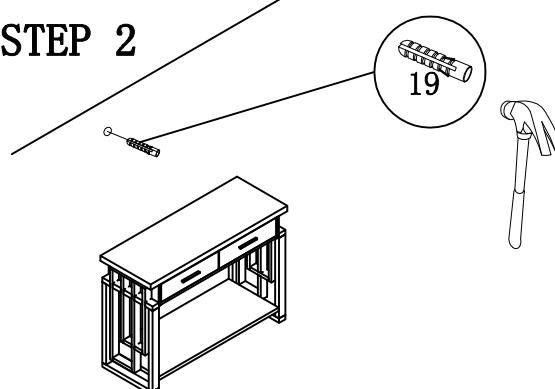


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

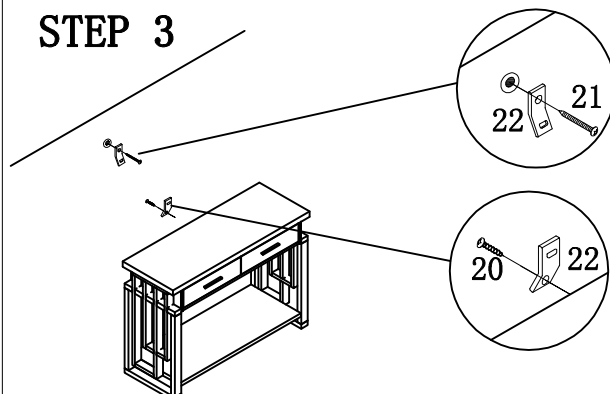

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

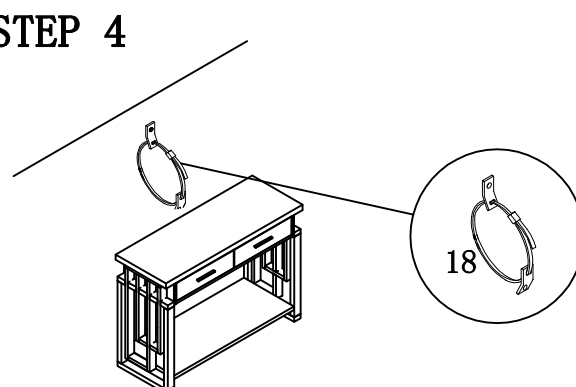

1. Insert strap thru bracket attached to wall. then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.