

SD04-4 Sliding Shower Door Installation Instructions



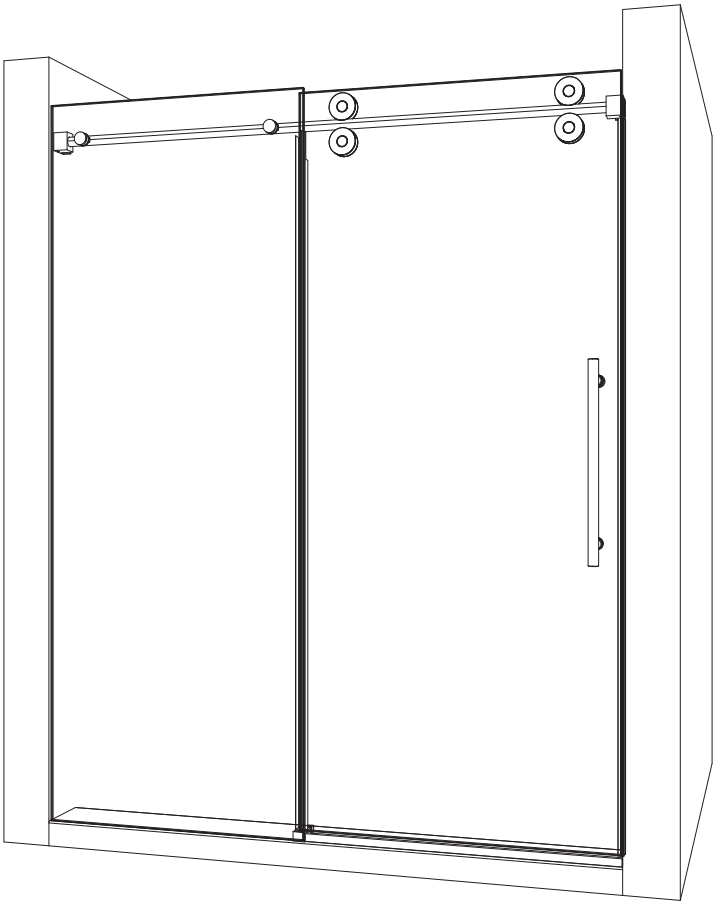





Detail Diagram

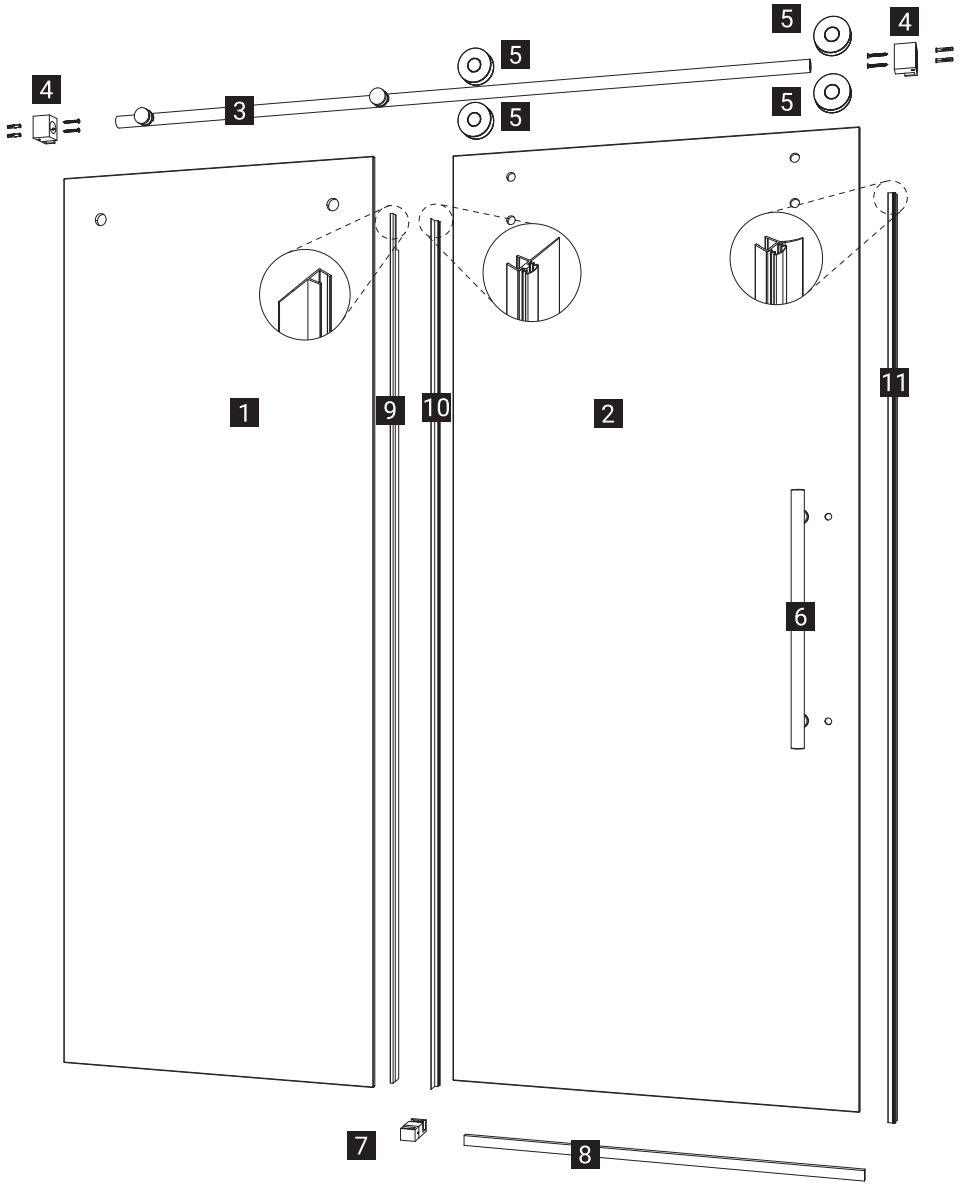


Part List


Check all parts according to the list before assembly
Feel free to contact us if you need assistance

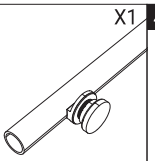
1 X1	2 X1	3 X1	4 X2	5 X4
				
Fixed Panel	Active Panel	Top Rail	Wall Mount Fitting	Roller

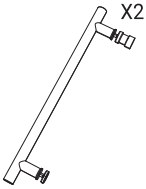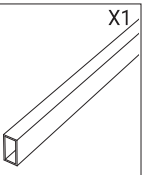6 X2	7 X1	8 X1
		
Handle	Bottom Guide	Threshold

Rubber Tape (3 pcs)


X1
9


X1
10



X1
11

Screws and Expansion Anchors (8 pcs)


ST5x40 Phillips Countersunk Self-Tapping Screw
(4 pcs)



Ø8x38 Gray Expansion Anchor
(4pcs)


Allen Wrenches(5 pcs)

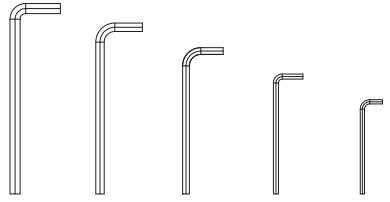

5mm 4mm 3mm 2.5mm 2.0mm

Recommended Tools

*Utilize Safety Glasses and Safety Gloves when installing this shower door

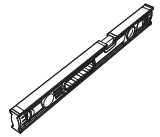	 Ø8 & Ø5			
Silicone	Drill	Level	Screw Driver	Pencil

				
Safety Gloves	Tape Measure	Safety Glasses	Rubber Mallet	Hand Saw

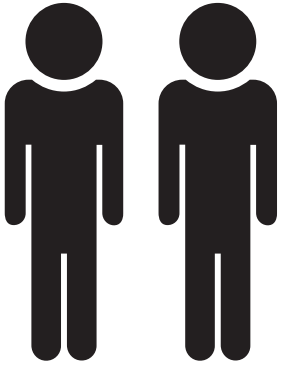


General Information


Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted.Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.


Notes: Safety glass can not be re-worked

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.
Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.
Please keep these instructions for aftercare and customer service details.


04 As shown in the diagram, drill holes according to the marked positions and install expansion bolts.

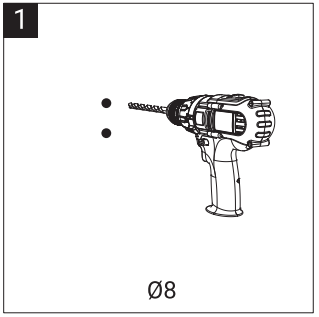


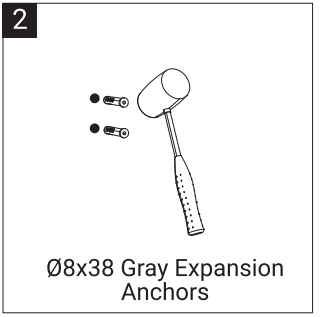

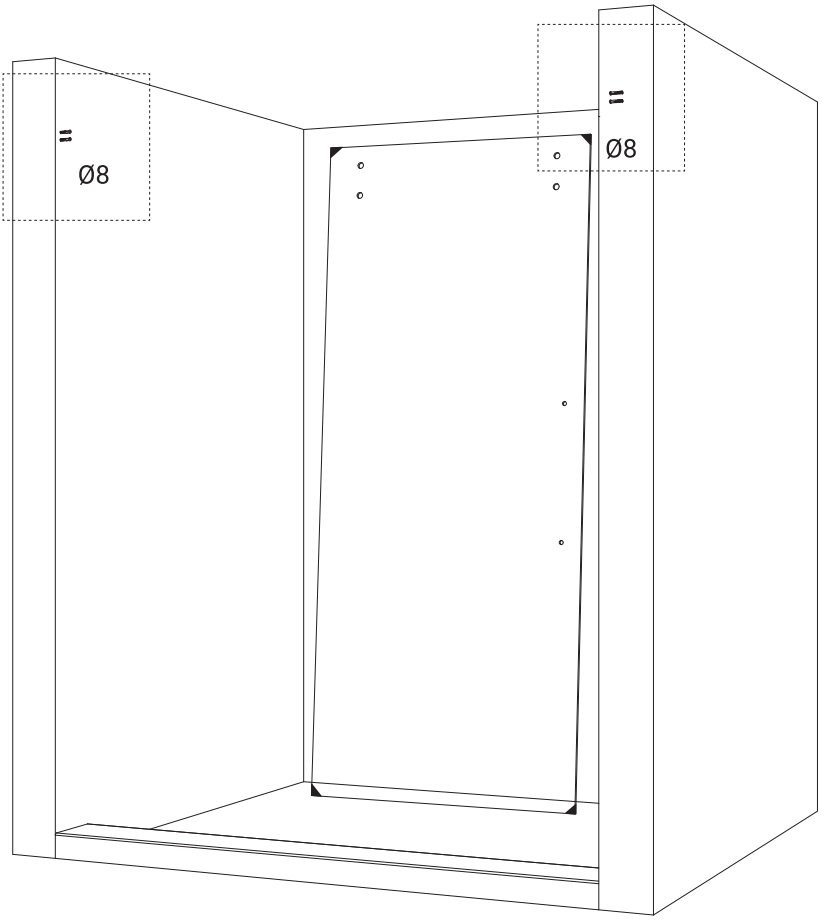

05 As shown in the diagram, first remove the screws from the top and bottom of the wall mount fitting. Then use screws to secure the remaining components to the wall.
Please safely store the screws removed from the sides for later steps.
Note: The installation process for the wall mount fitting on both sides is the same in this step.

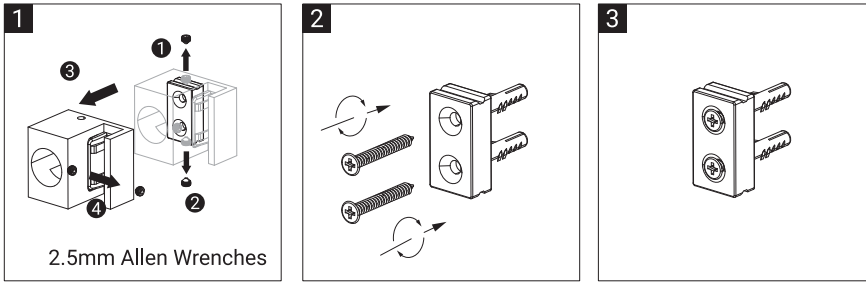


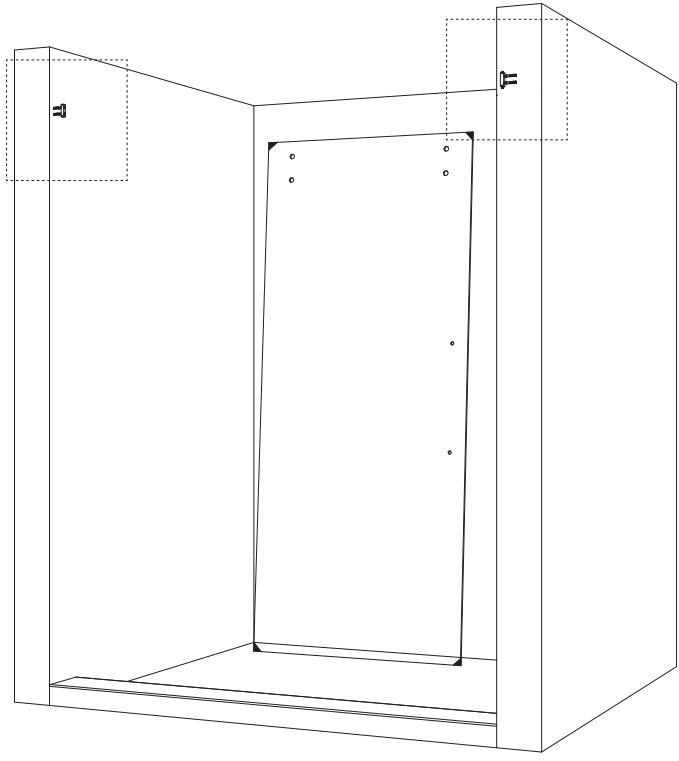


06 First, remove the decorative covers from the pipe clamps on the guide rail. Then, insert the stopper and wall mount fitting on both sides into the guide rail in the correct orientation. Finally, retighten the top and bottom screws of the wall sleeves on both sides.


After installing the guide rail, ensure the side with the decorative cover is oriented vertically facing outward to facilitate the subsequent installation of the fixed glass.

Note: The hex socket screw on the inner side of the wall mount fitting can help secure the guide rail to some extent, but fully tightening it will prevent adjustment of the guide rail during fixed glass installation.

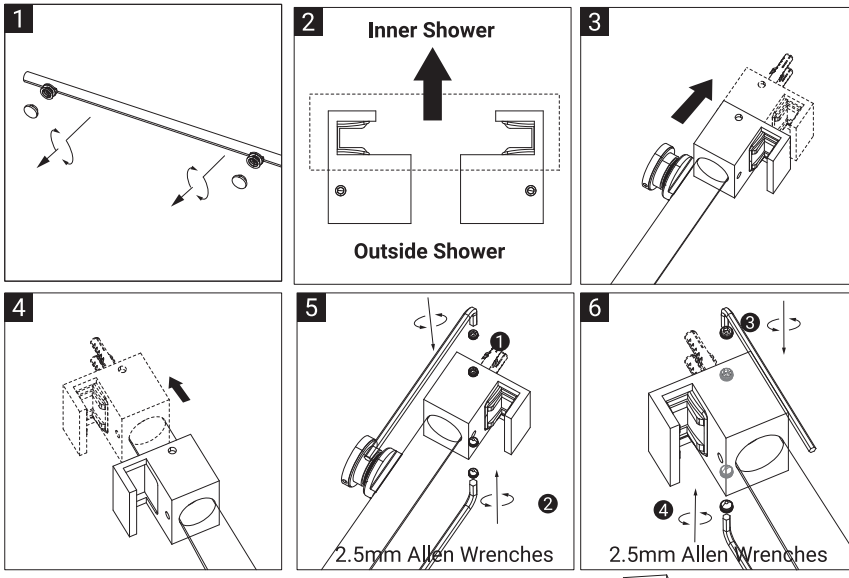


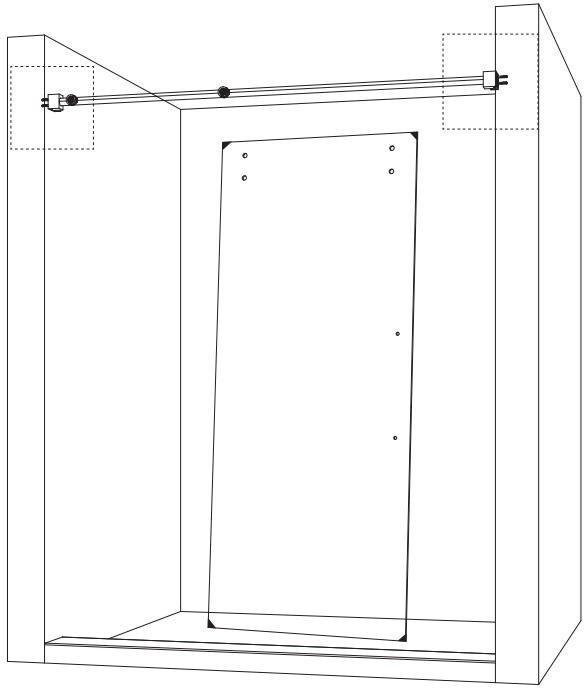

07 After securing the fixed glass into the corresponding position of the pipe clamp, tighten the decorative cover. It is important to note that once the decorative cover is tightened, the fixed glass should be gently pushed against the wall. Finally, tighten the screws on both sides of the wall sleeve to ensure the guide rail remains secure.

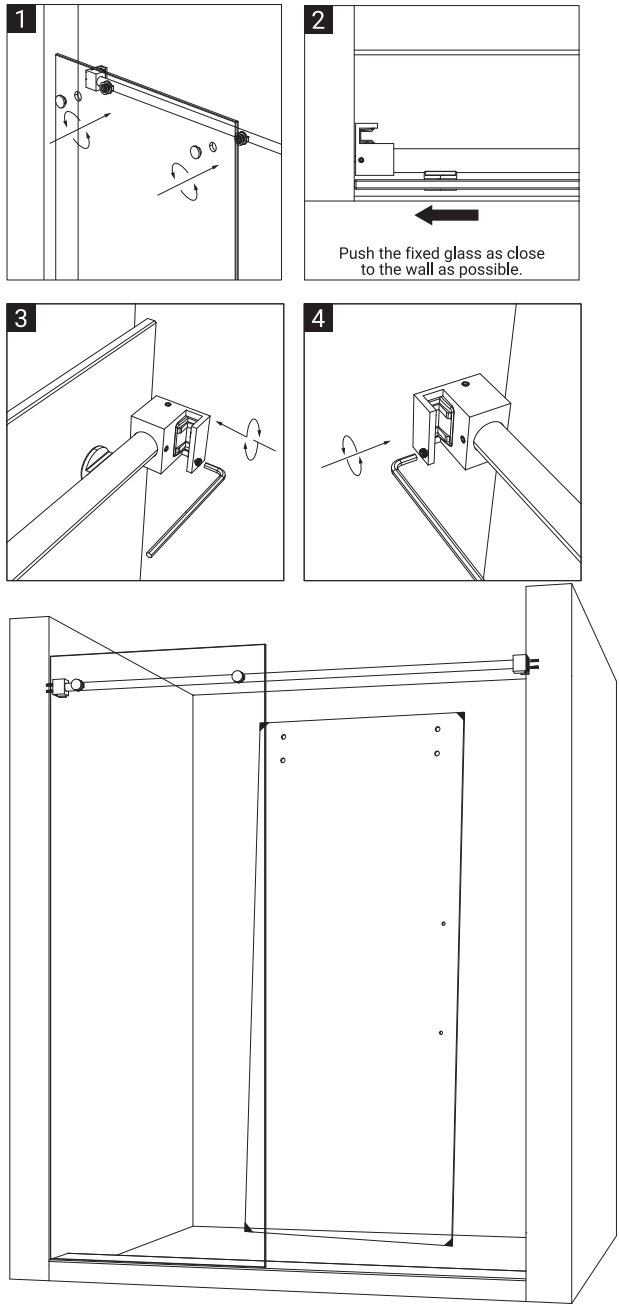


08 As shown in the diagram, install the two rollers above the active glass.

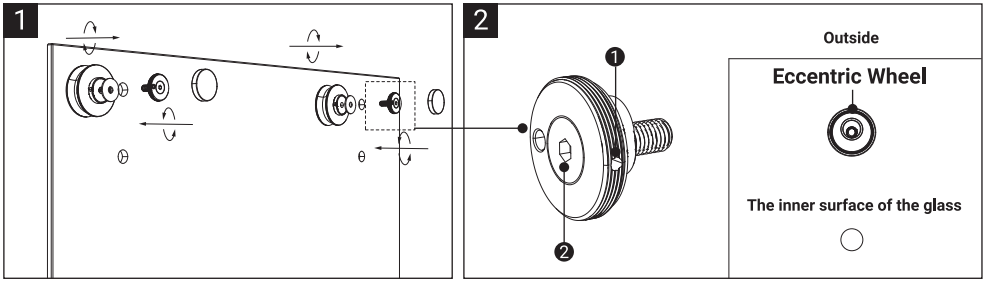



❶ 2.5mm Allen Wrenches,Adjusting this hole position can be used to regulate the glass tilt.


❷ 5mm Allen Wrenches,Adjusting this hole position can be used for the installation and removal of the pulley.

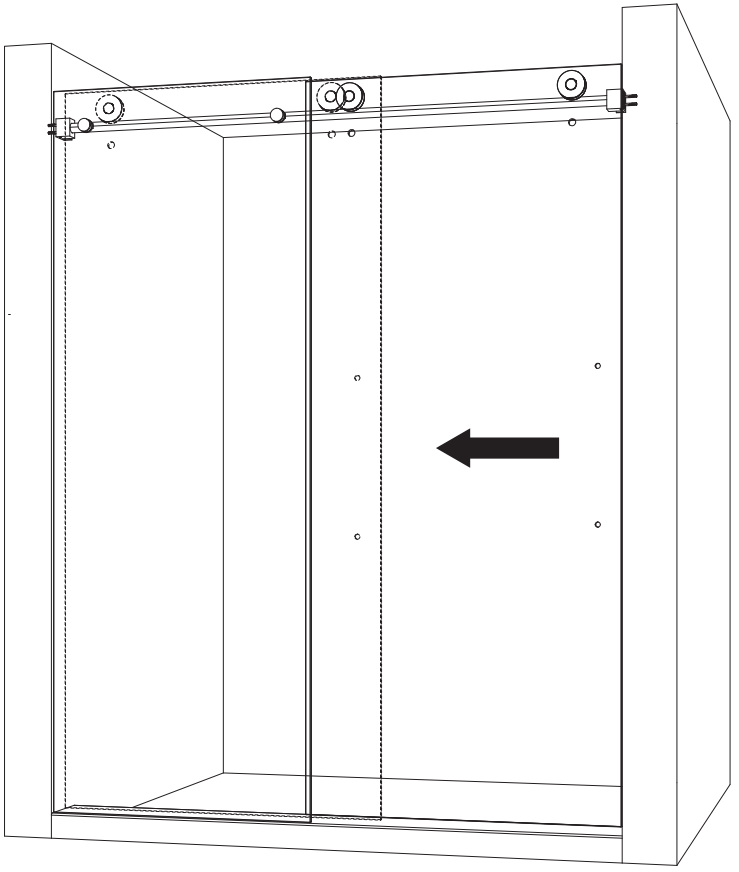



09 Before installing the bottom guide, push the active glass to one side (exercise caution during this process to avoid tipping the glass). Then install the bottom guide as shown in the diagram, **noting that in step 5, care must be taken to avoid pushing over the active glass.**

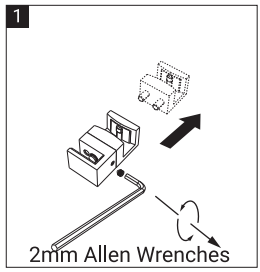


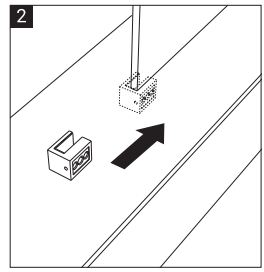


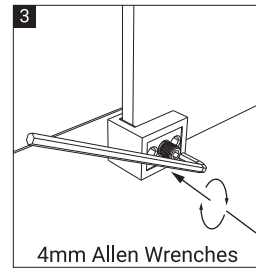

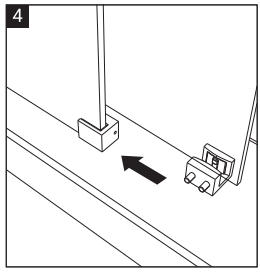


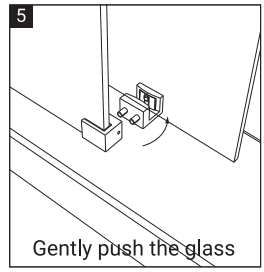


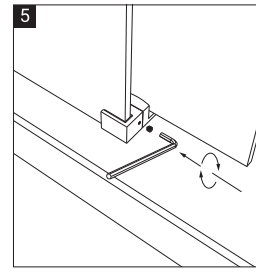

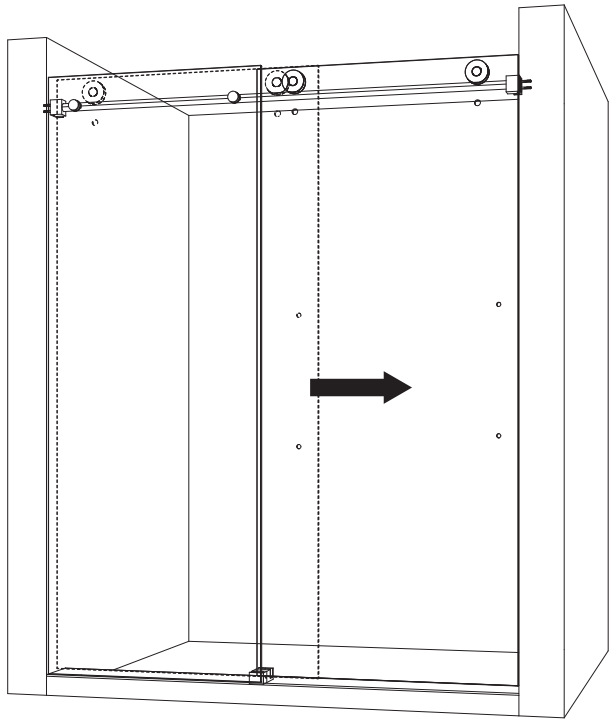



10 As shown in the diagram, after installing the bottom guide, check whether the active glass is level. If tilting occurs, adjust the eccentric wheel to level the active glass before proceeding to the next step.

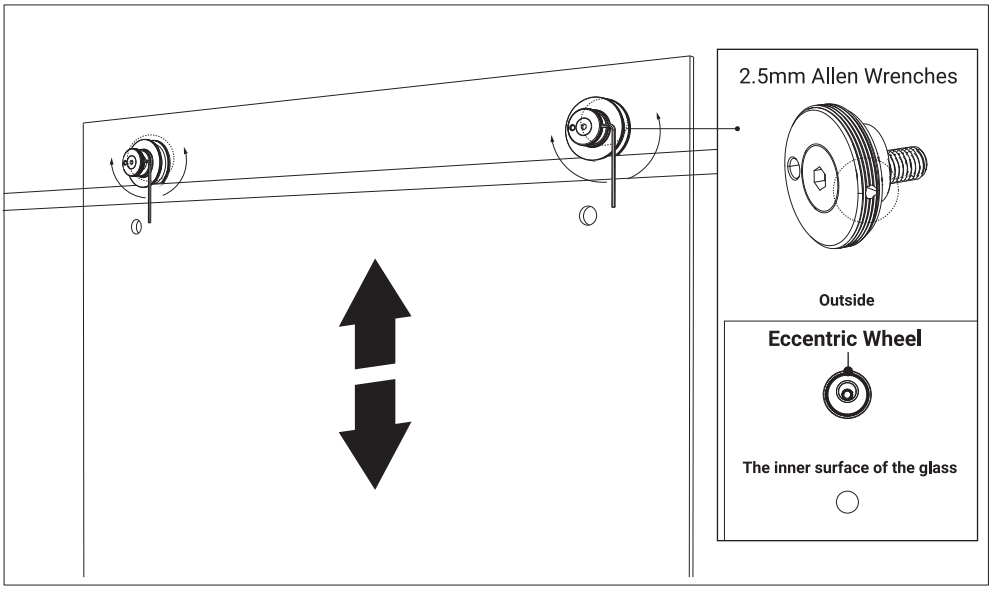


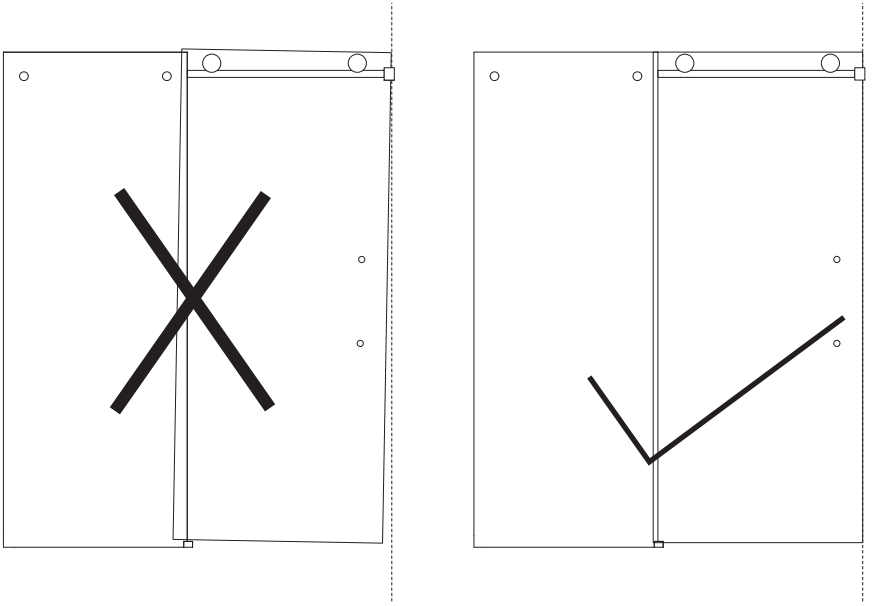


10 As shown in the diagram, install the two rollers at the bottom of the movable glass, then attach the handle and the rubber tapes. **Before installing the threshold, measure the required length and cut it if necessary.If necessary, flip the threshold and apply sealant to the bottom.**

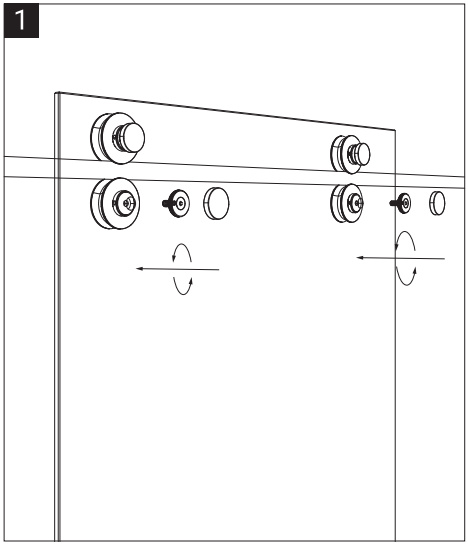


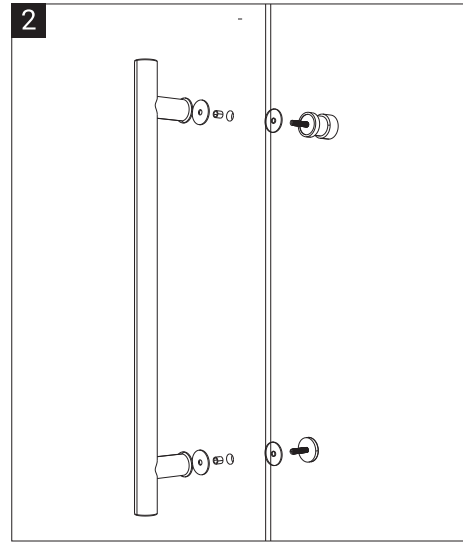

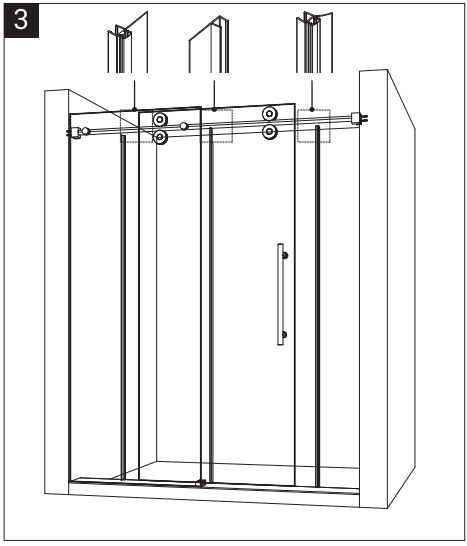

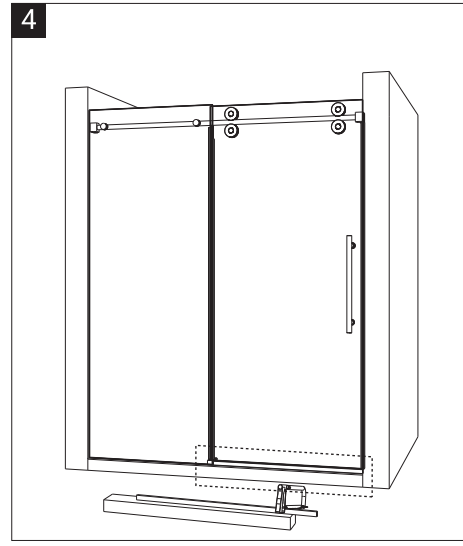

11 After installation is complete, remove any debris and use a soft cloth to wipe away water stains and clean any remaining dirt. Then, apply silicone sealant along the dashed line as indicated in the diagram.

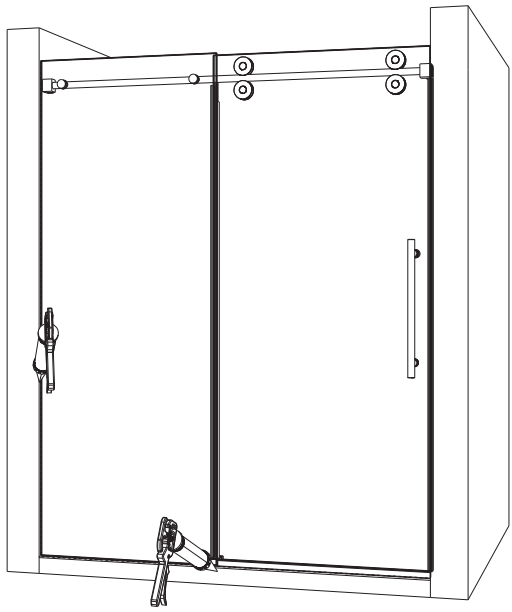

12 After applying the silicone sealant, allow it to dry for 24 hours before using the shower door.



