

## Bedside Table A188A with Cabinet Installation Diagram


								
Foot Pad	Caster	Caster	Plum Blossom Screw	6cm Pointed Screw	2.5cm Flat Head Screw	Minimum Self tapping Screw	Plastic Part	Nut
A*4	B*4	C*2	D*4	E*12	F*4	G*27	H*2	I*2

							
3.5cm Flat Head Screw	Eccentric screw	Eccentric Bolt	4cm Pointed Screw	Door Stopper	Door Pivot	Metal Pin	Wrench
J*2	K*2	L*2	M*10	N*1	O*1	P*3	

Installation Principle of Eccentric Piece:

**Warm Tip:** Tighten the screws by 70% during installation, and then tighten them after the installation is completed!

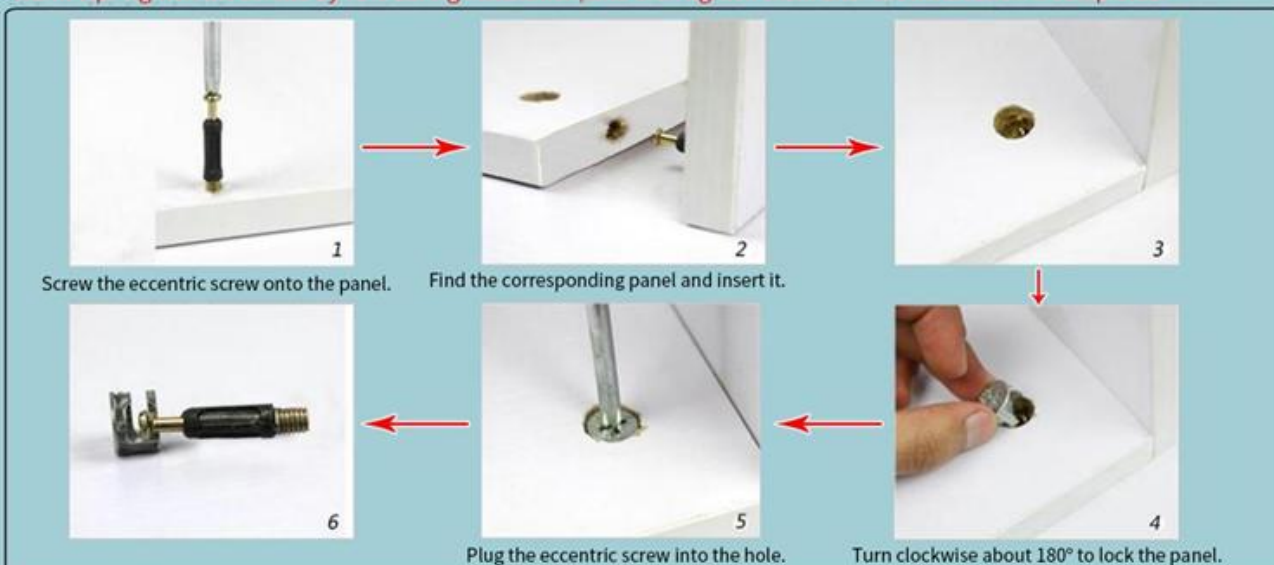

1 Screw the eccentric screw onto the panel.

2 Find the corresponding panel and insert it.

3 Plug the eccentric screw into the hole.


4 Turn clockwise about 180° to lock the panel.

5 Plug the eccentric screw into the hole.

6 Turn clockwise about 180° to lock the panel.

### Step 1: Drawer Section Installation

<1>

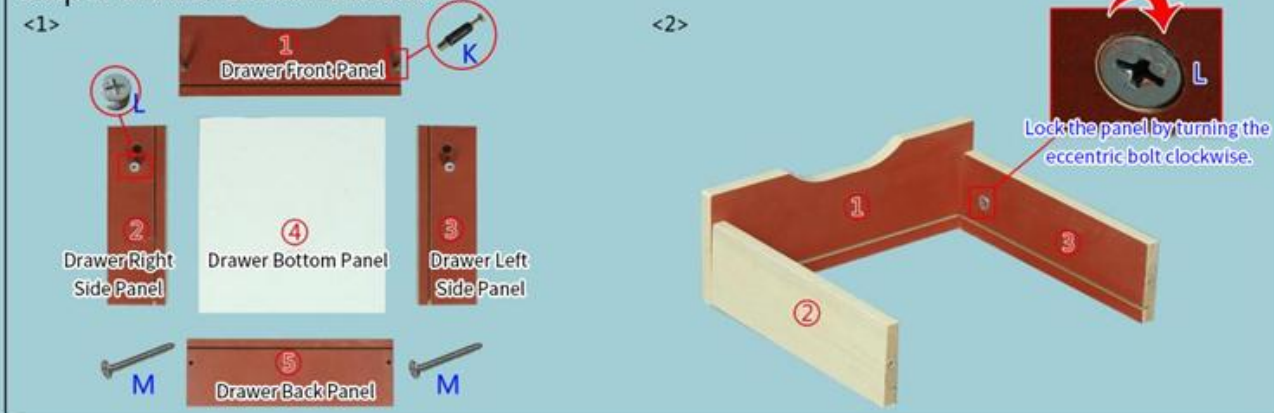

1 Drawer Front Panel

2 Drawer Right Side Panel

4 Drawer Bottom Panel


3 Drawer Left Side Panel

5 Drawer Back Panel

K

M

<2>

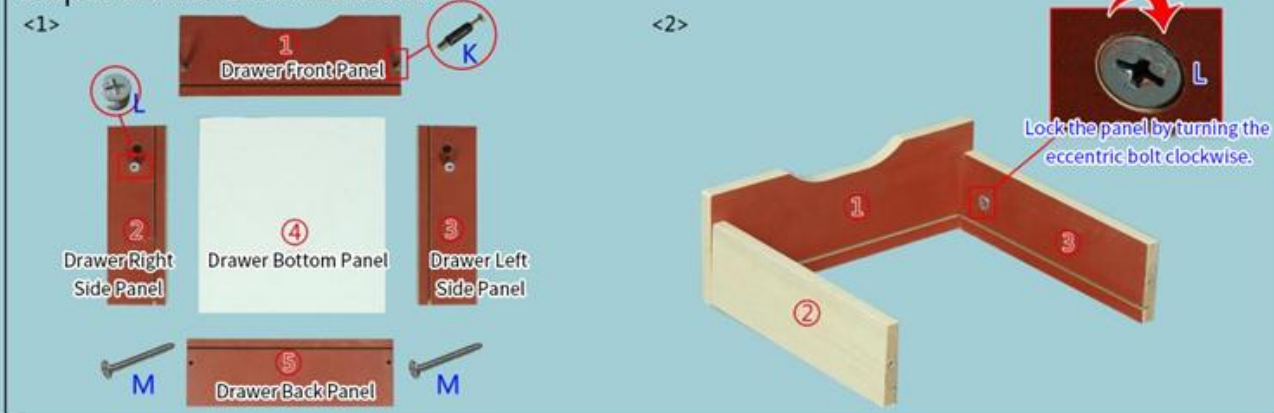

1 Drawer Front Panel

2 Drawer Right Side Panel

4 Drawer Bottom Panel

3 Drawer Left Side Panel

5 Drawer Back Panel

K

M

Lock the panel by turning the eccentric bolt clockwise.

<3>





<4>



Drawer Installation is Complete!

### Panel Names and Panel Numbers:

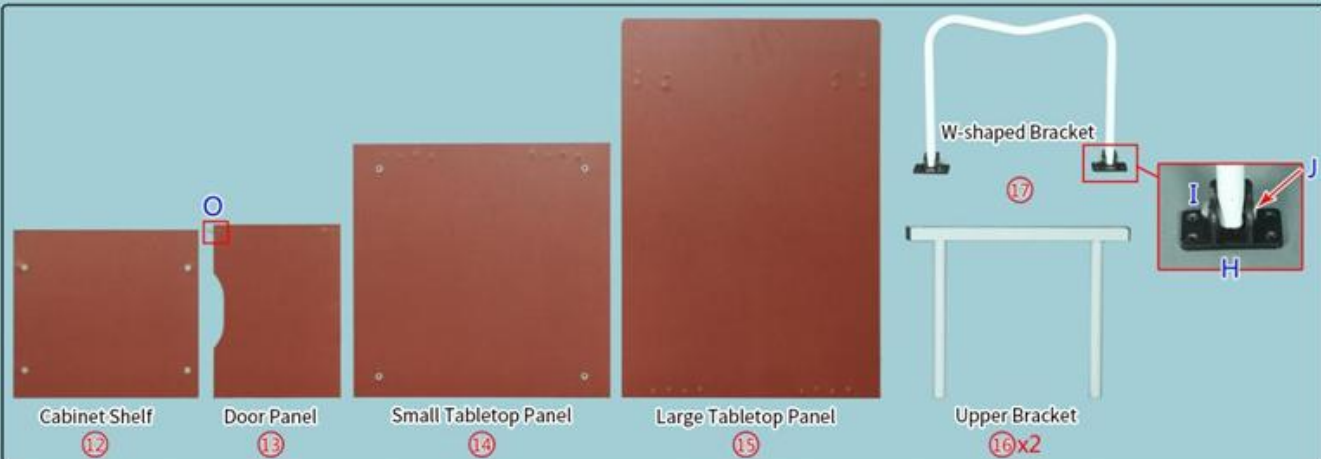
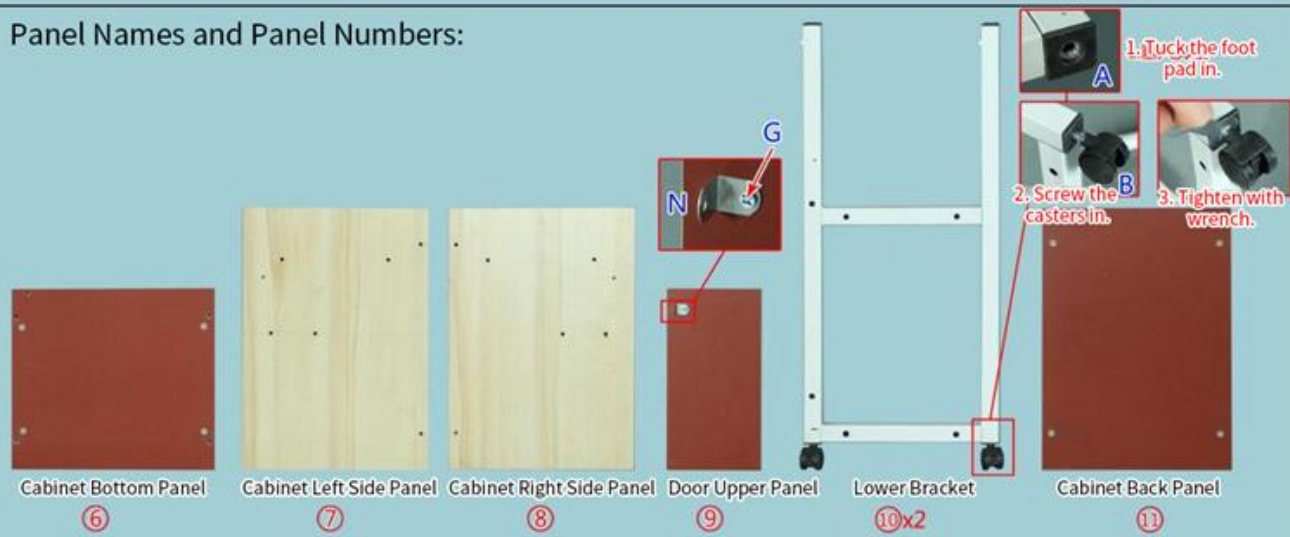


### Step 2: Cabinet Boy Installation



<1>

Two holes are opposite to each other and are positioned upwards.



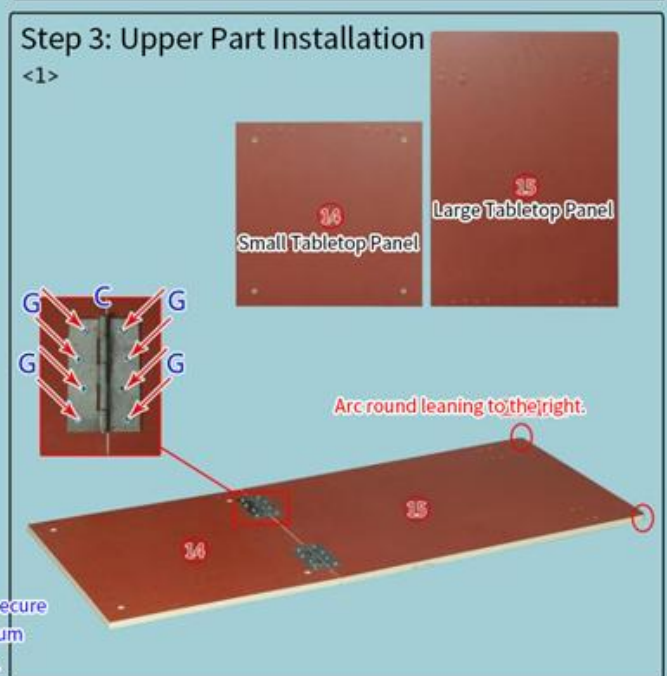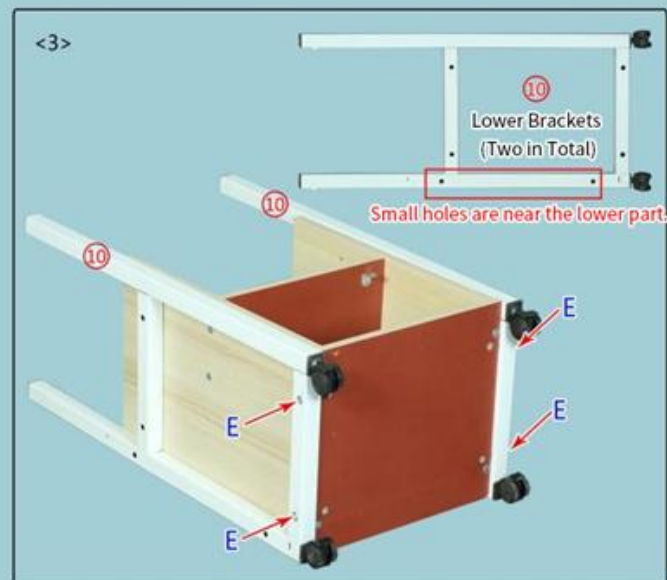



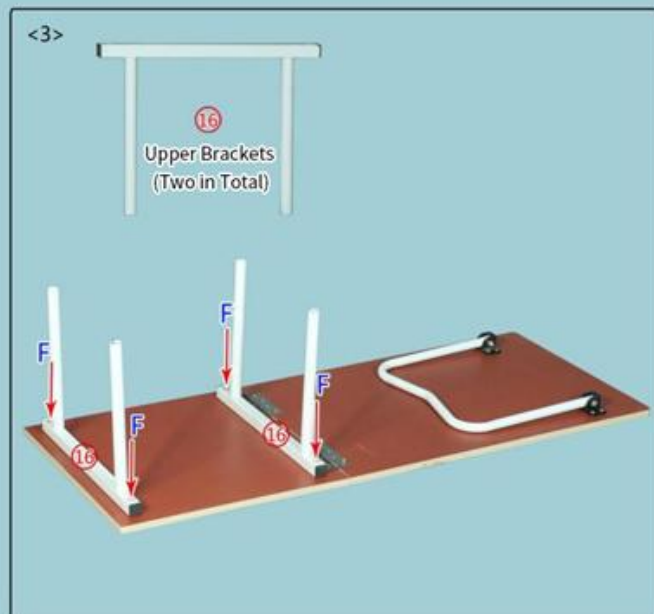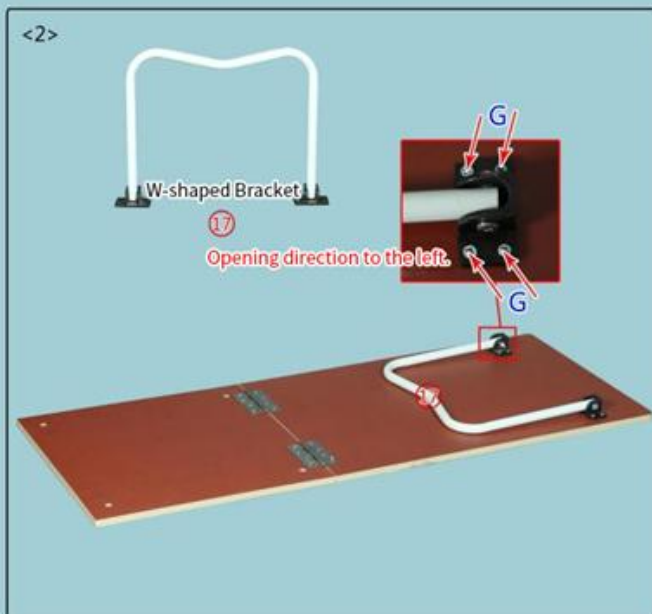

#### Step 4: Integral Part Installation



<2> Push the drawer in slowly.  
Method 1: Insert the metal pin after pushing the drawer in.  
Method 2: Insert the metal pin and push the drawer in at a 45 degree angle.



<3> Installation Completed

Completed Image

