



FSDL-V1

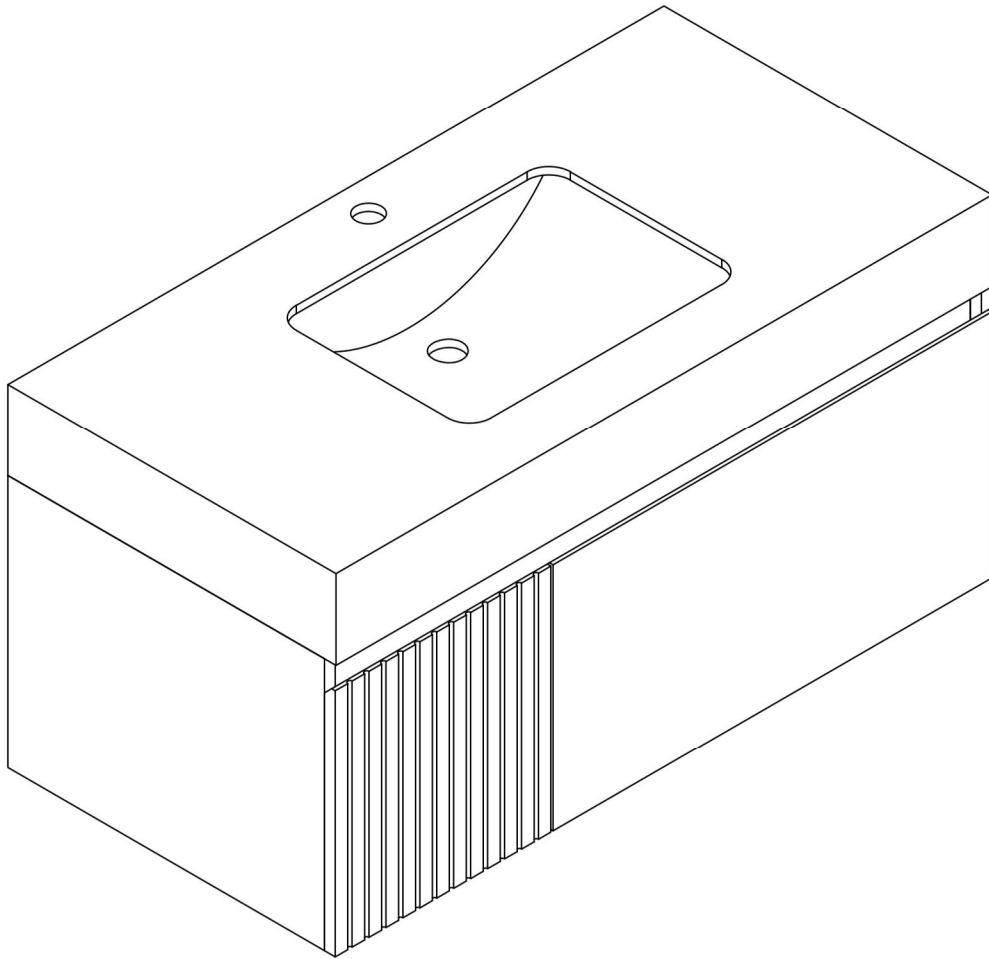


Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

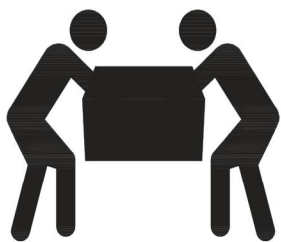

Recommended installers: 2

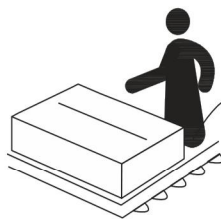


Put a carpet on the floor
before unpacking















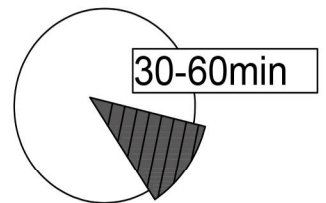


Estimate installation time:
60 minutes








ASSEMBLY INSTRUCTION

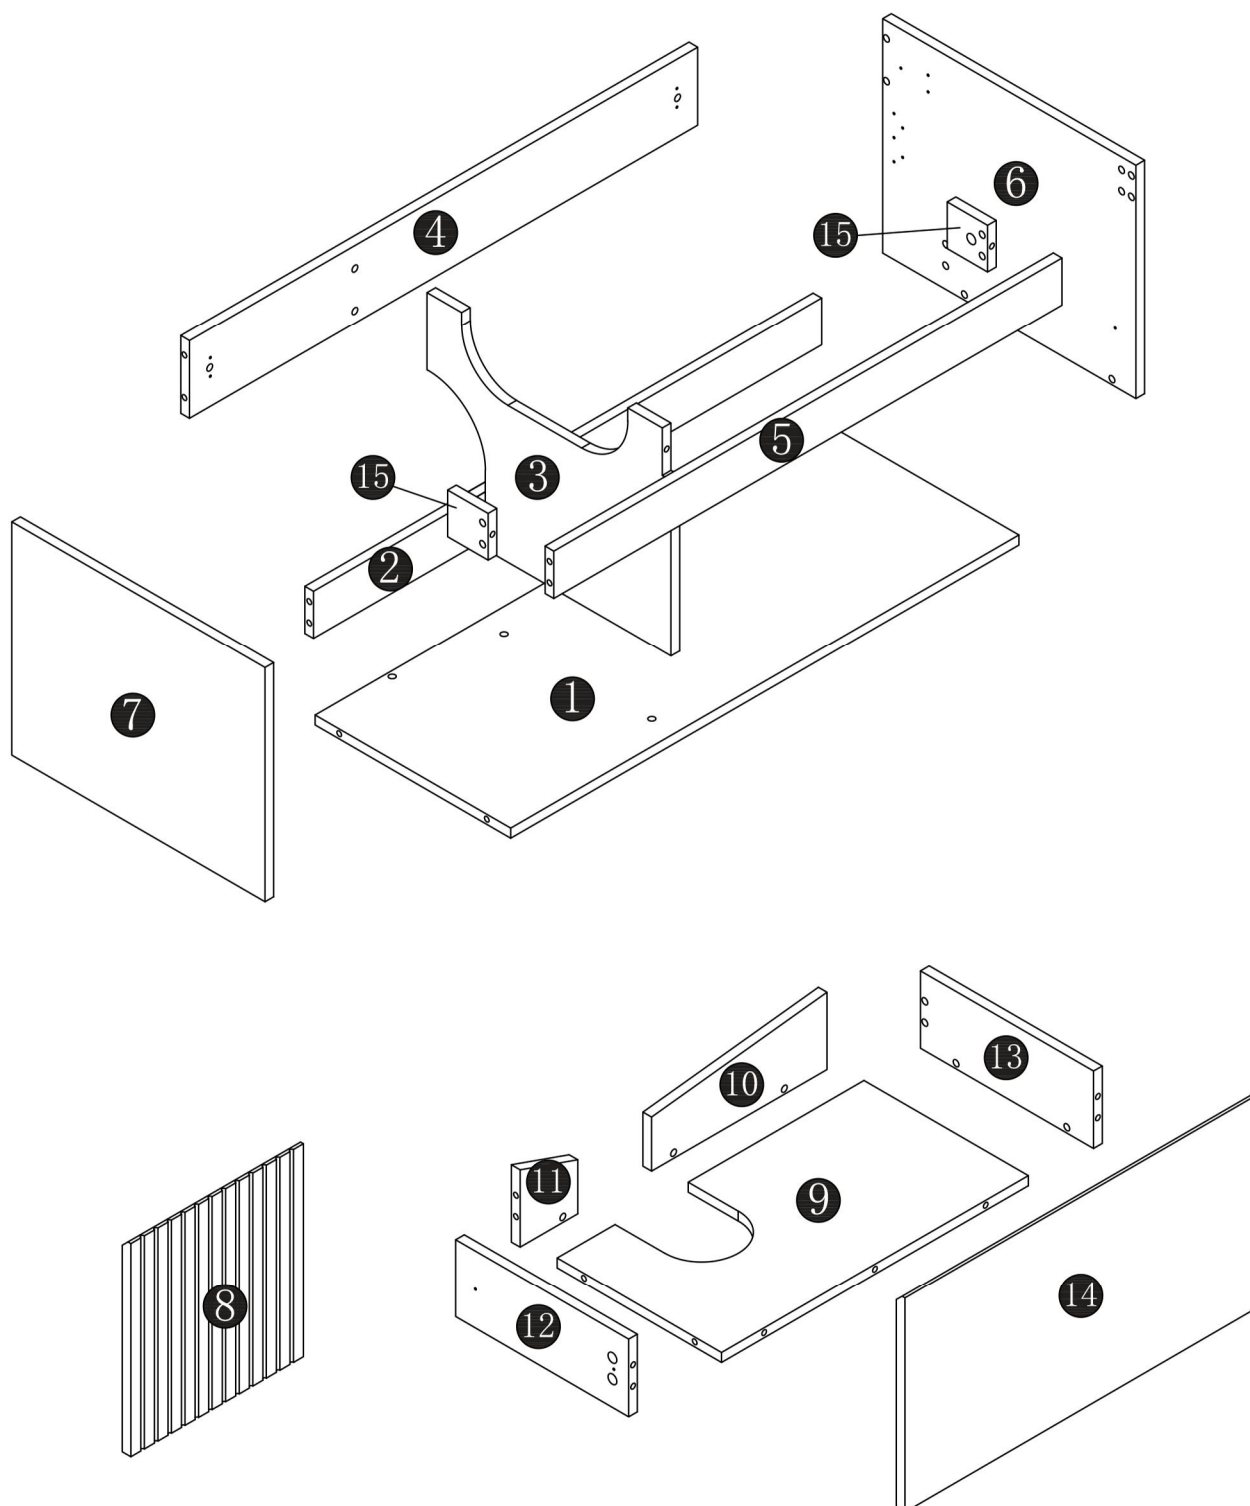

ASSEMBLY INSTRUCTION

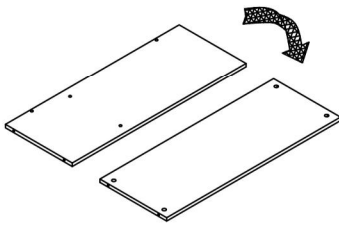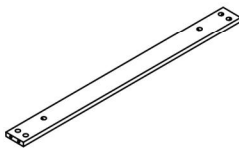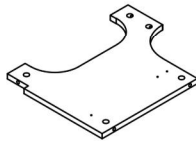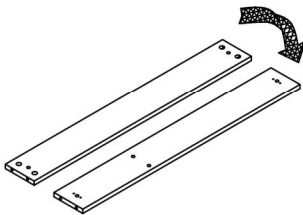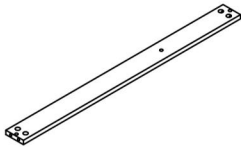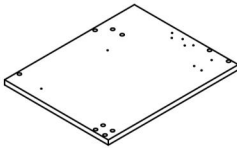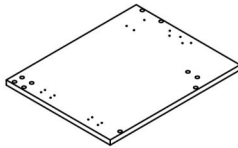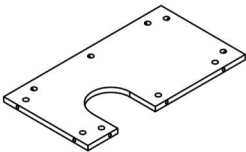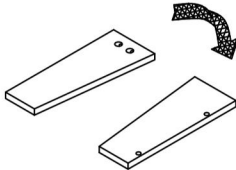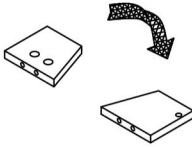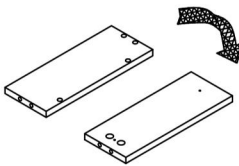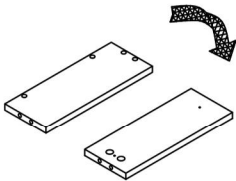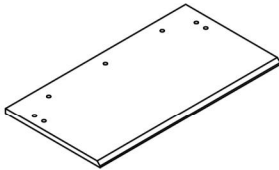1 1PC 	2 1PC 	3 1PC 	4 1PC 
5 1PC 	6 1PC 	7 1PC 	8 1PC 
9 1PC 	10 1PC 	11 1PC 	12 1PC 
13 1PC 	14 1PC 	15 2PCS 	


ASSEMBLY INSTRUCTION

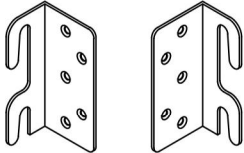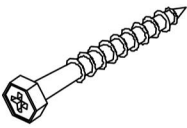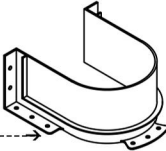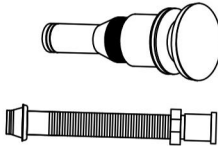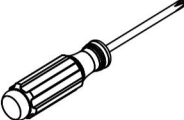A 43PCS +5PCS  M6*40	B 43PCS +5PCS  φ15*10	C 2PCS  12"	D 4PCS  M6*25
E 41PCS  φ3.5*14	F 41PCS 	G 2PCS 	H 2PCS 
I 4PCS 	J 4PCS 	K 4PCS 	L 1PC 
M 2PCS 	N 8PCS 	O 1set 	Friendly Reminder: This accessory is in a separate package.
			


ASSEMBLY INSTRUCTION

Use the Cam Lock and Eccentric Wheel ECCENTRIC WHEEL

Tighten the bolt until the shoulder is aligned with the panel.
Be suer not to tighten too much or too little.

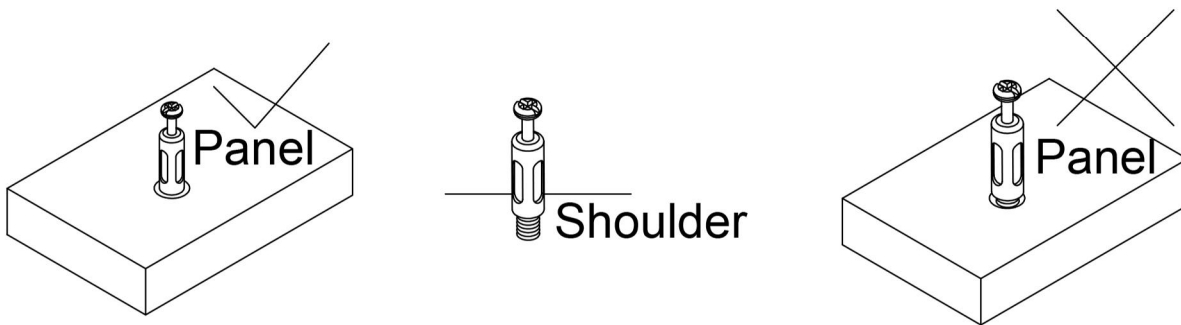

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.










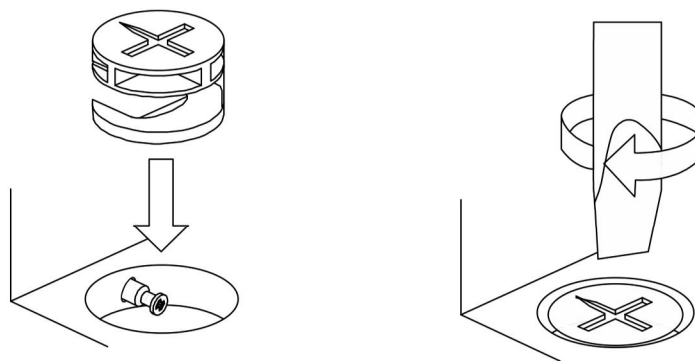


Turn the cam lock clockwise to tighten

ASSEMBLY INSTRUCTION

Step 1


A 41PCS
M6*40

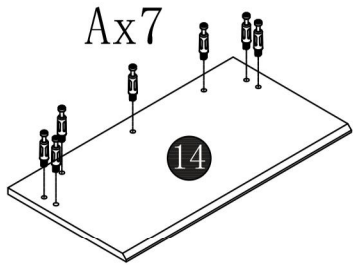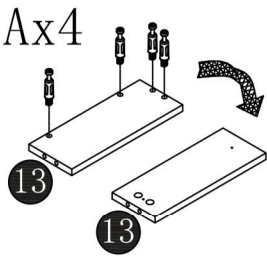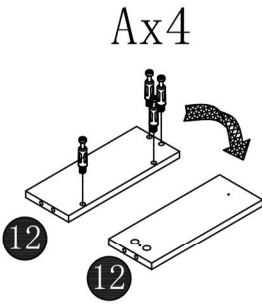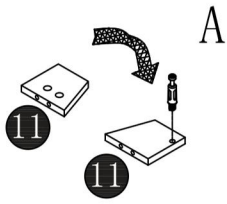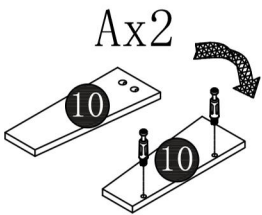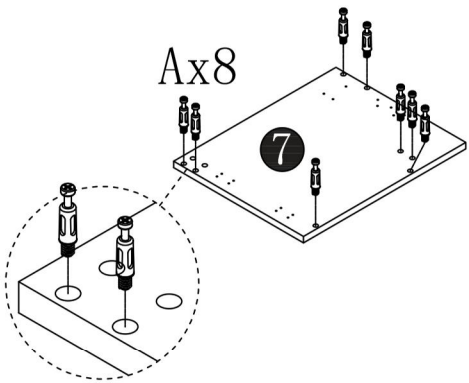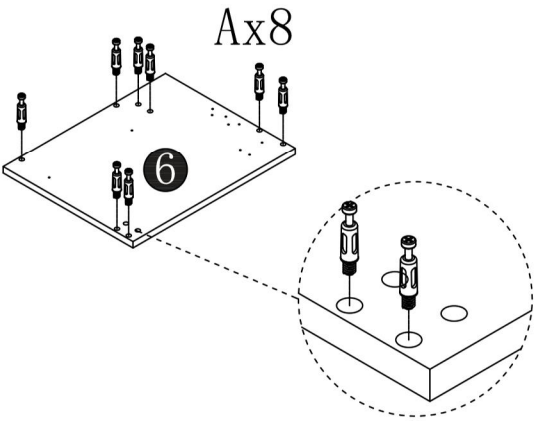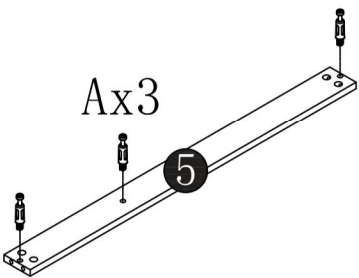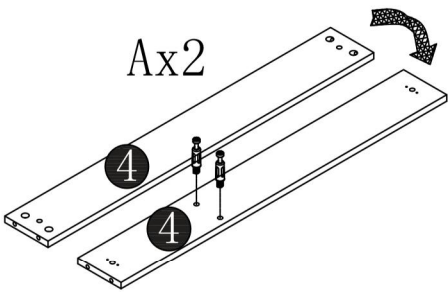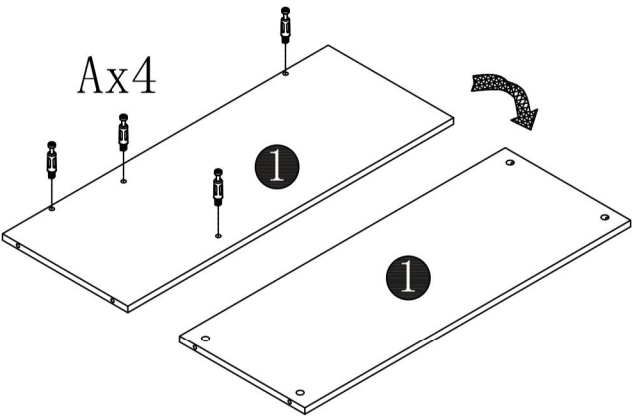

ASSEMBLY INSTRUCTION

Step 2


C 2PCS
12"

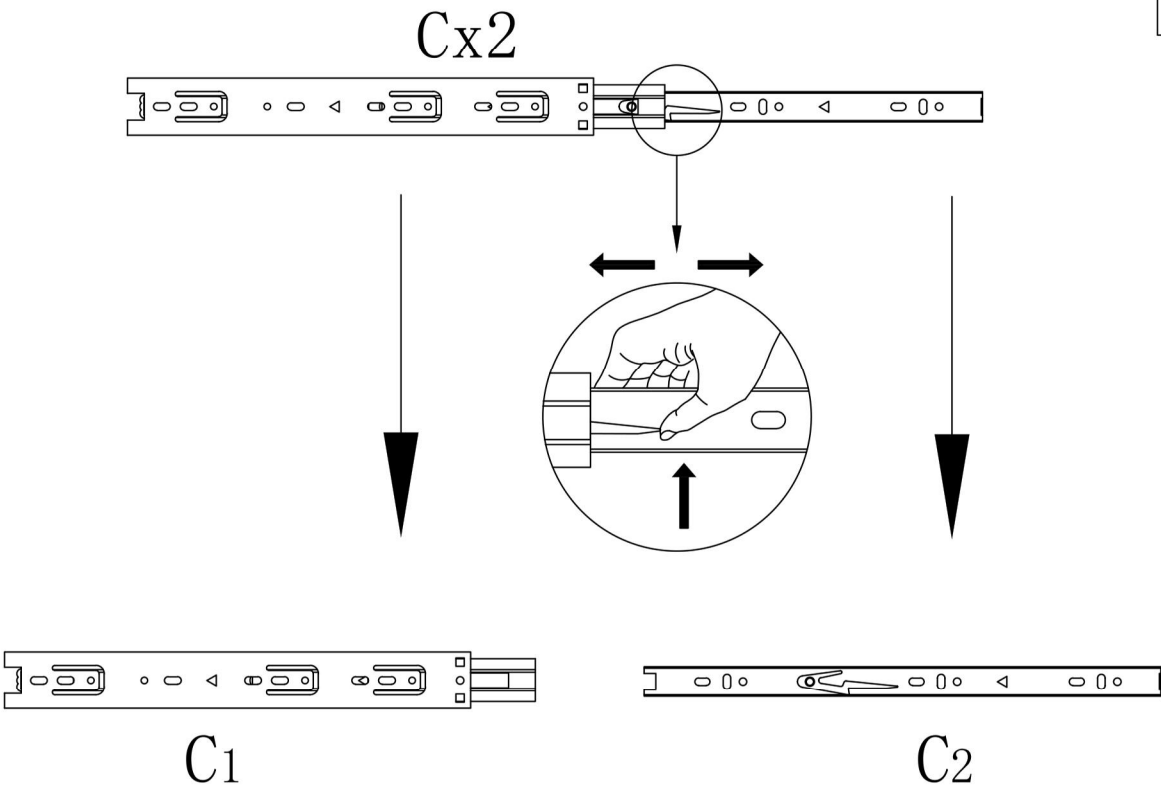

Step 3

C_1 2PCS
12"

E 4PCS
 $\phi 3.5 \times 12$

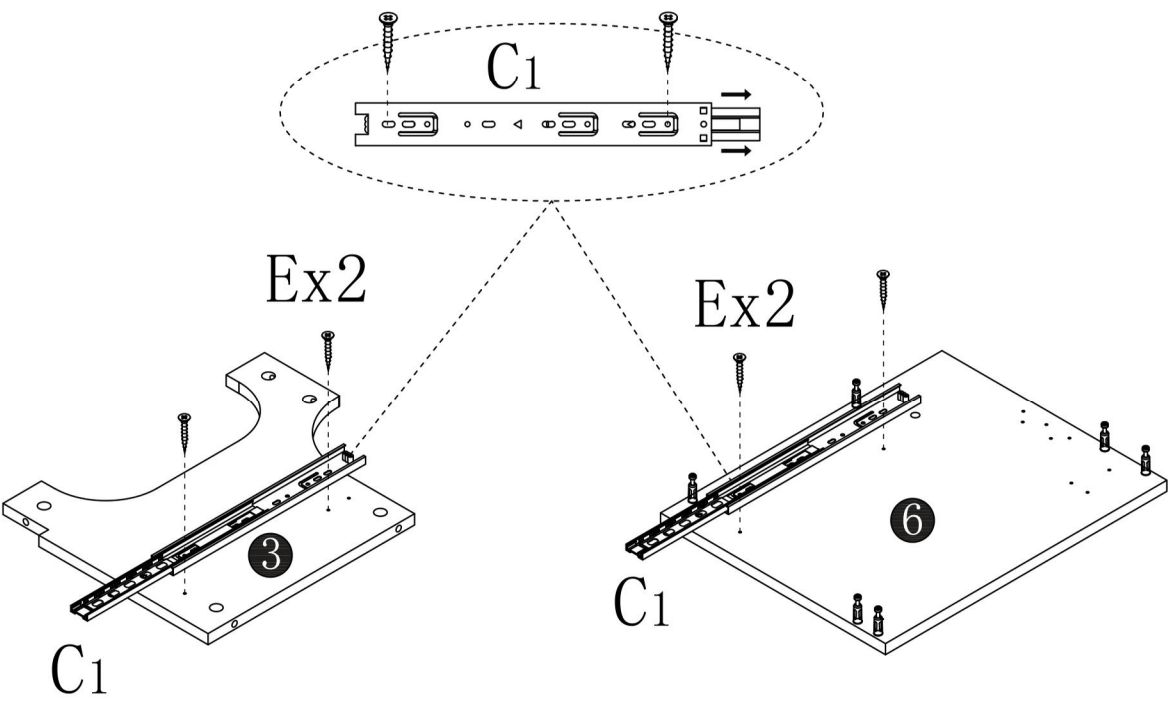


ASSEMBLY INSTRUCTION

Step 4

B 7PCS



Ø15*10mm

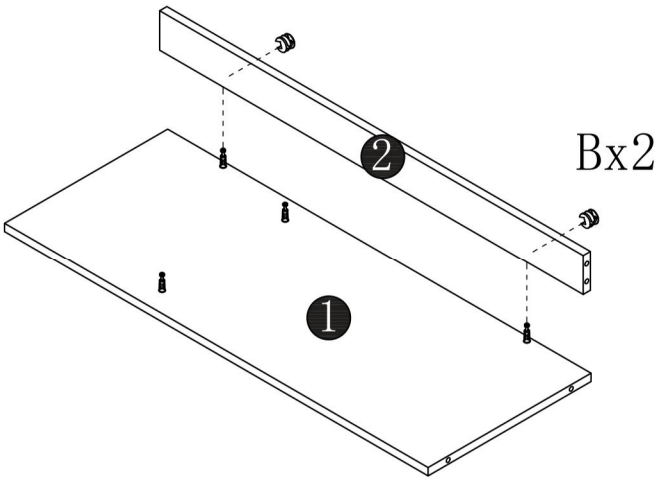


Step 5

B 7PCS



Ø15*10mm

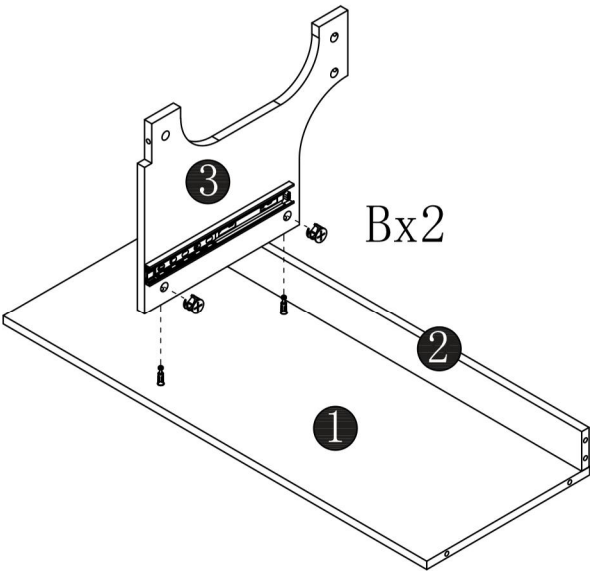


ASSEMBLY INSTRUCTION

Step 6

B 3PCS



Ø15*10mm

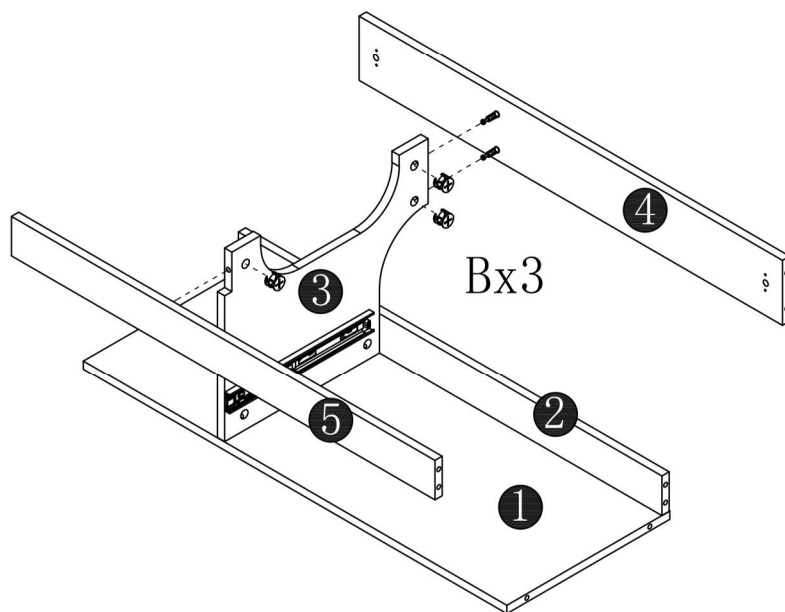


Step 7

B 16PCS





Ø15*10mm

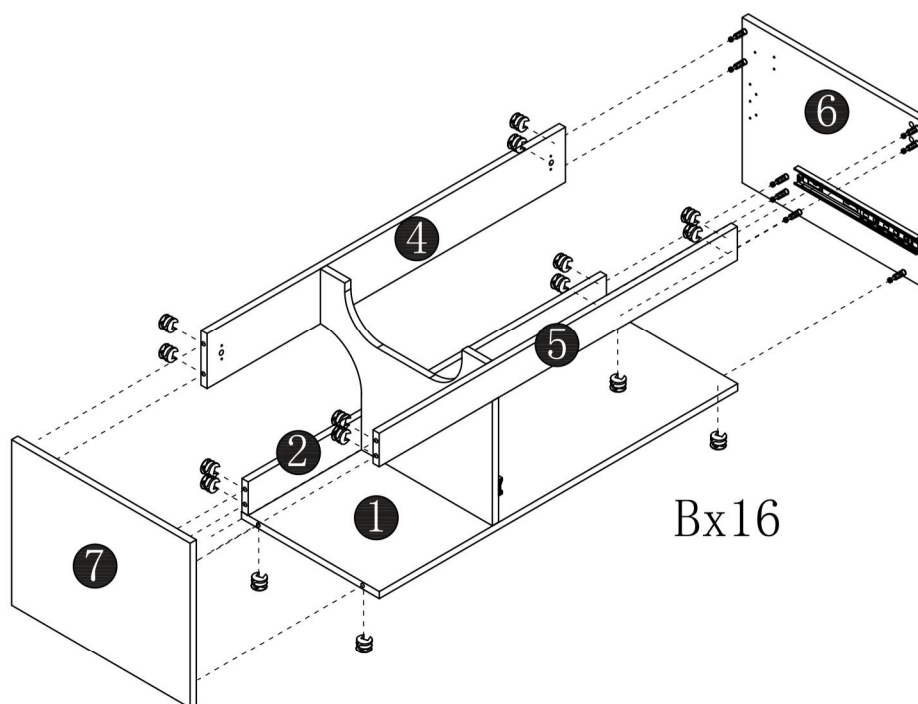

ASSEMBLY INSTRUCTION

Step 8

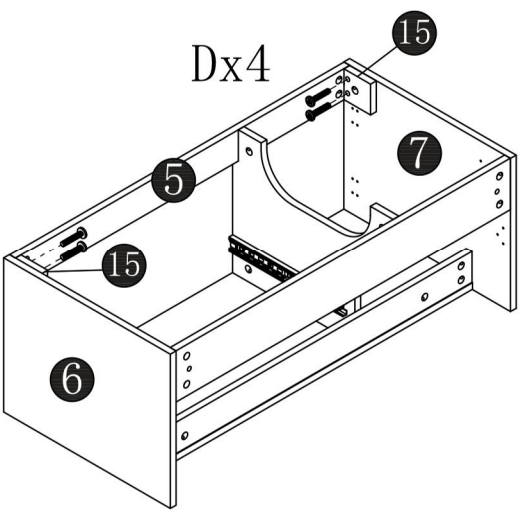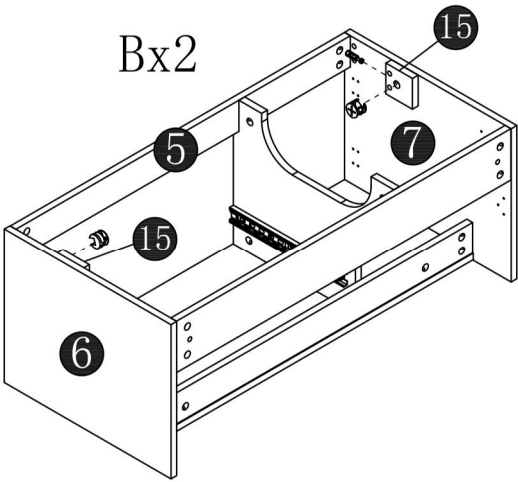

B 3PCS





Ø15*10mm

D 4PCS



M6*25

Step 9

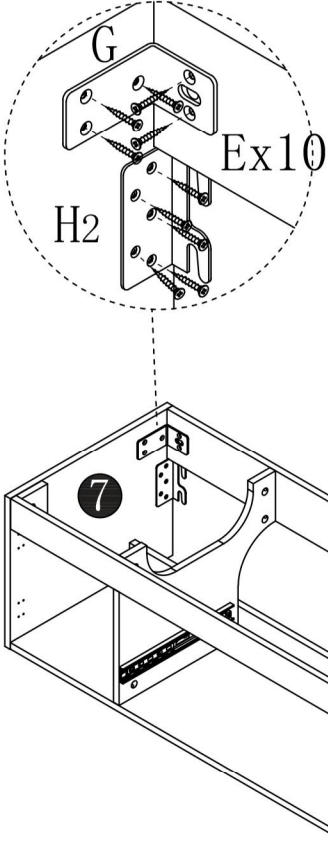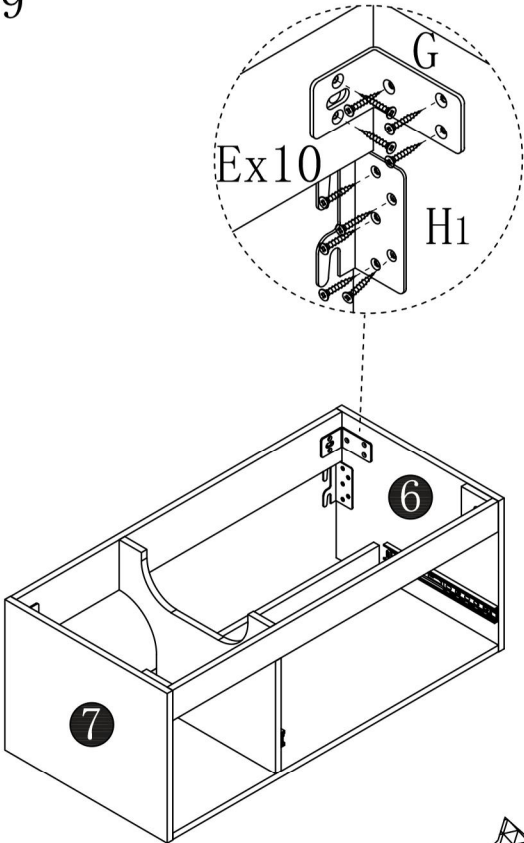

E 20PCS




Ø3.5*14

G 2PCS




H 2PCS




ASSEMBLY INSTRUCTION


Step 10

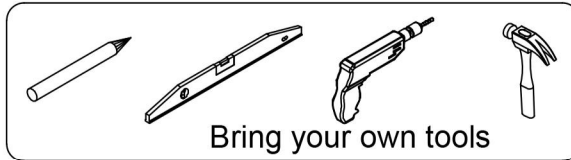

I 4PCS

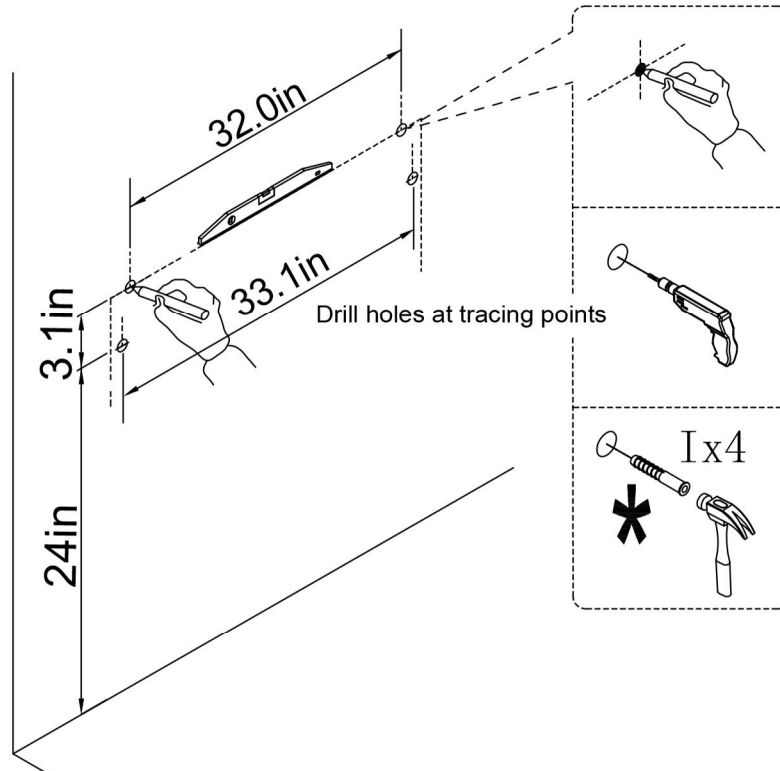

Step 11

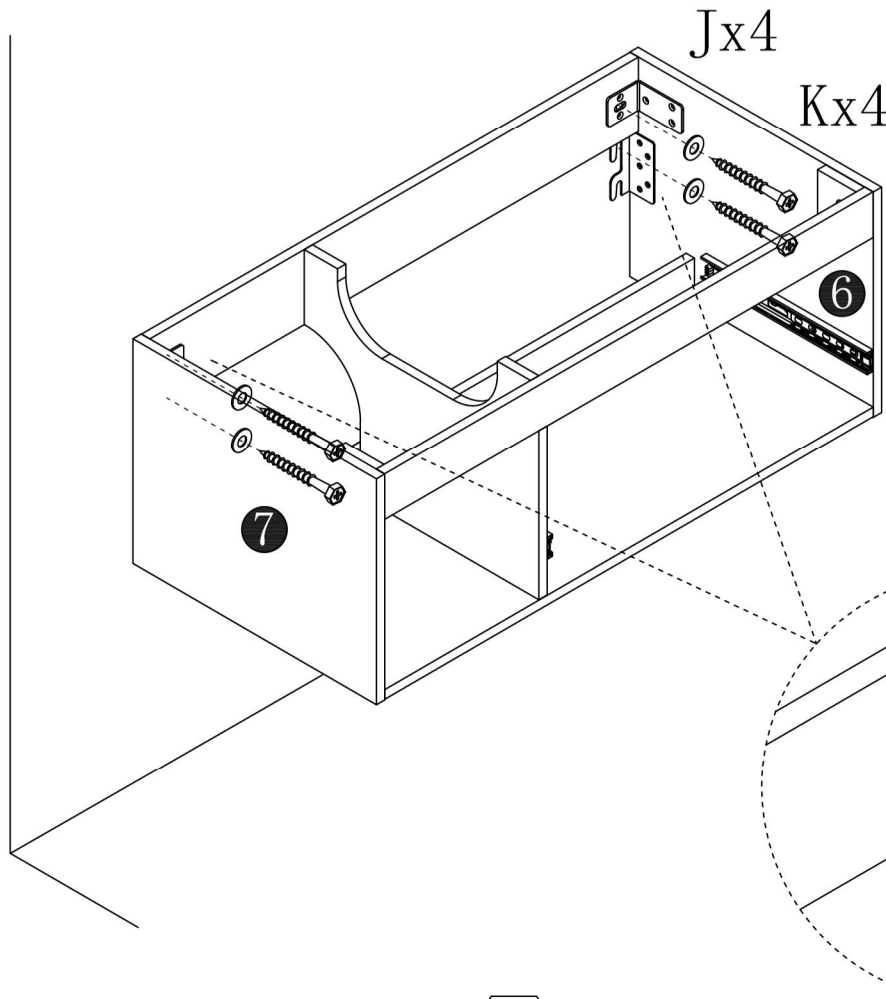

J 4PCS




K 4PCS



ASSEMBLY INSTRUCTION

Step 12

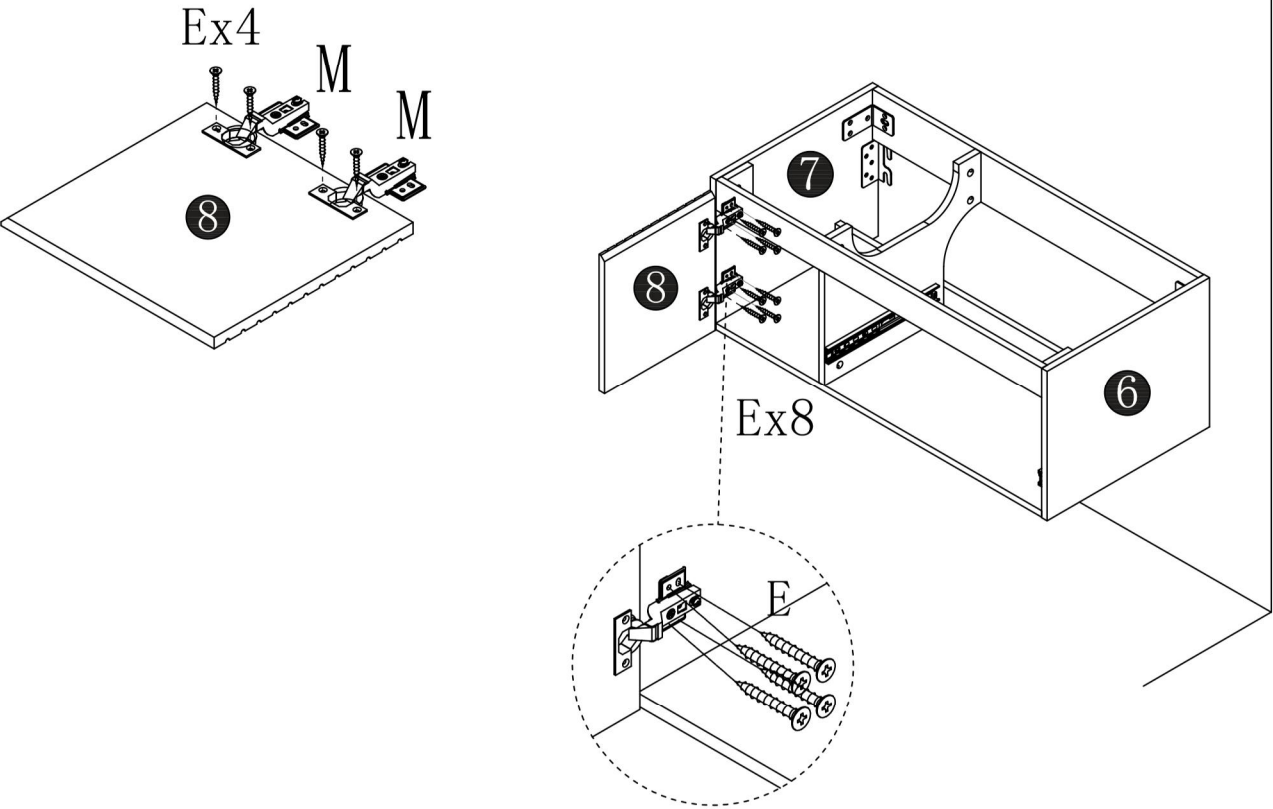

E 12PCS




Ø3.5*14

M 2PCS



Step 13

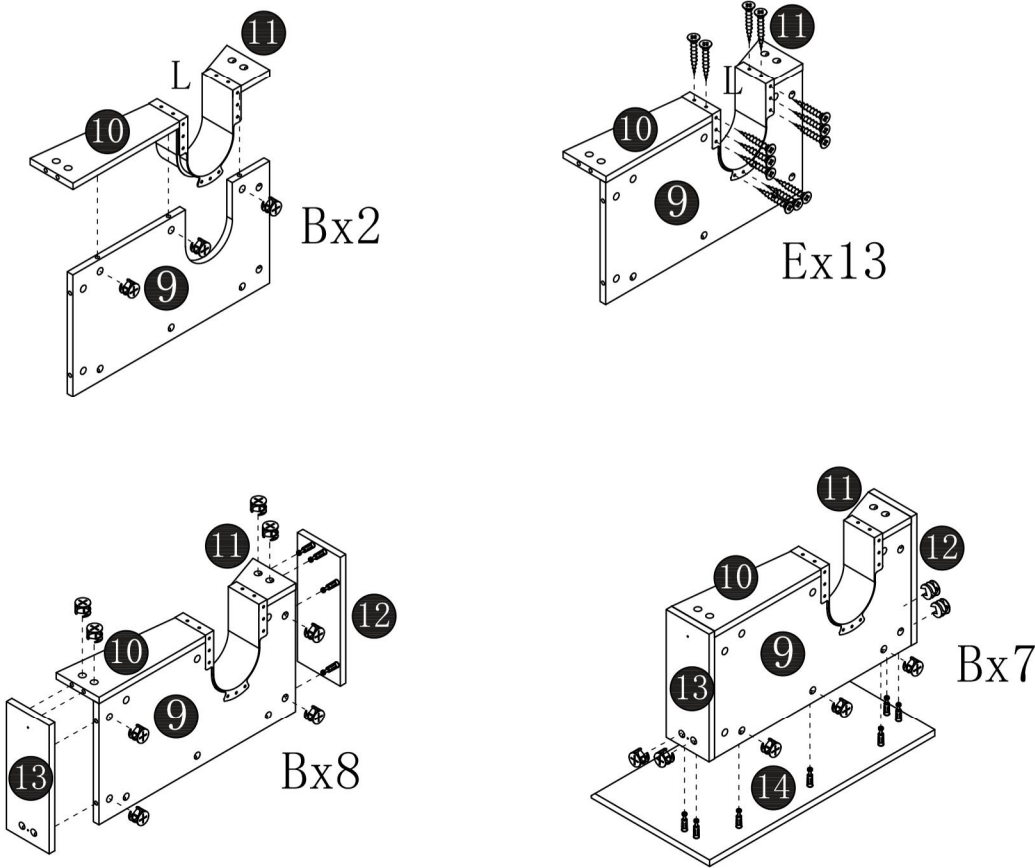

B 17PCS



Ø15*10mm

E 13PCS




Ø3.5*14

L 1PC



ASSEMBLY INSTRUCTION


Step 14

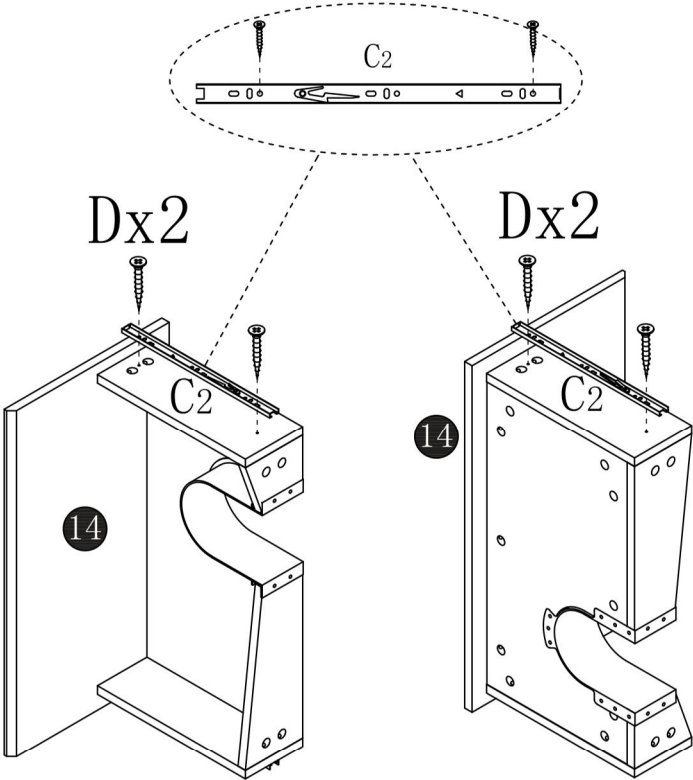


C2 2PCS



E 4PCS



Step 15

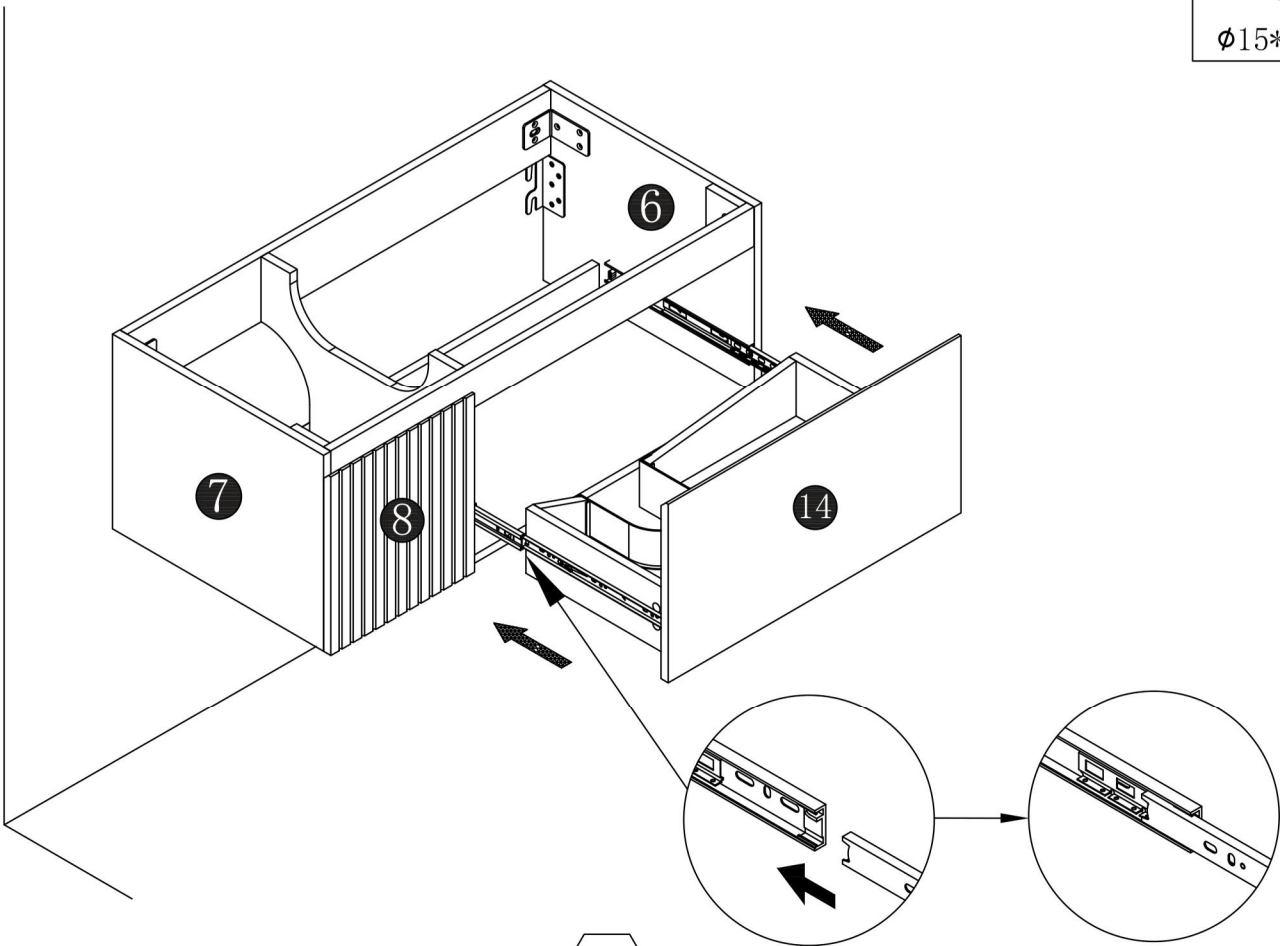

B 20PCS




Ø15*10mm

ASSEMBLY INSTRUCTION


Step 16

N	8PCS
	
0	1set
	

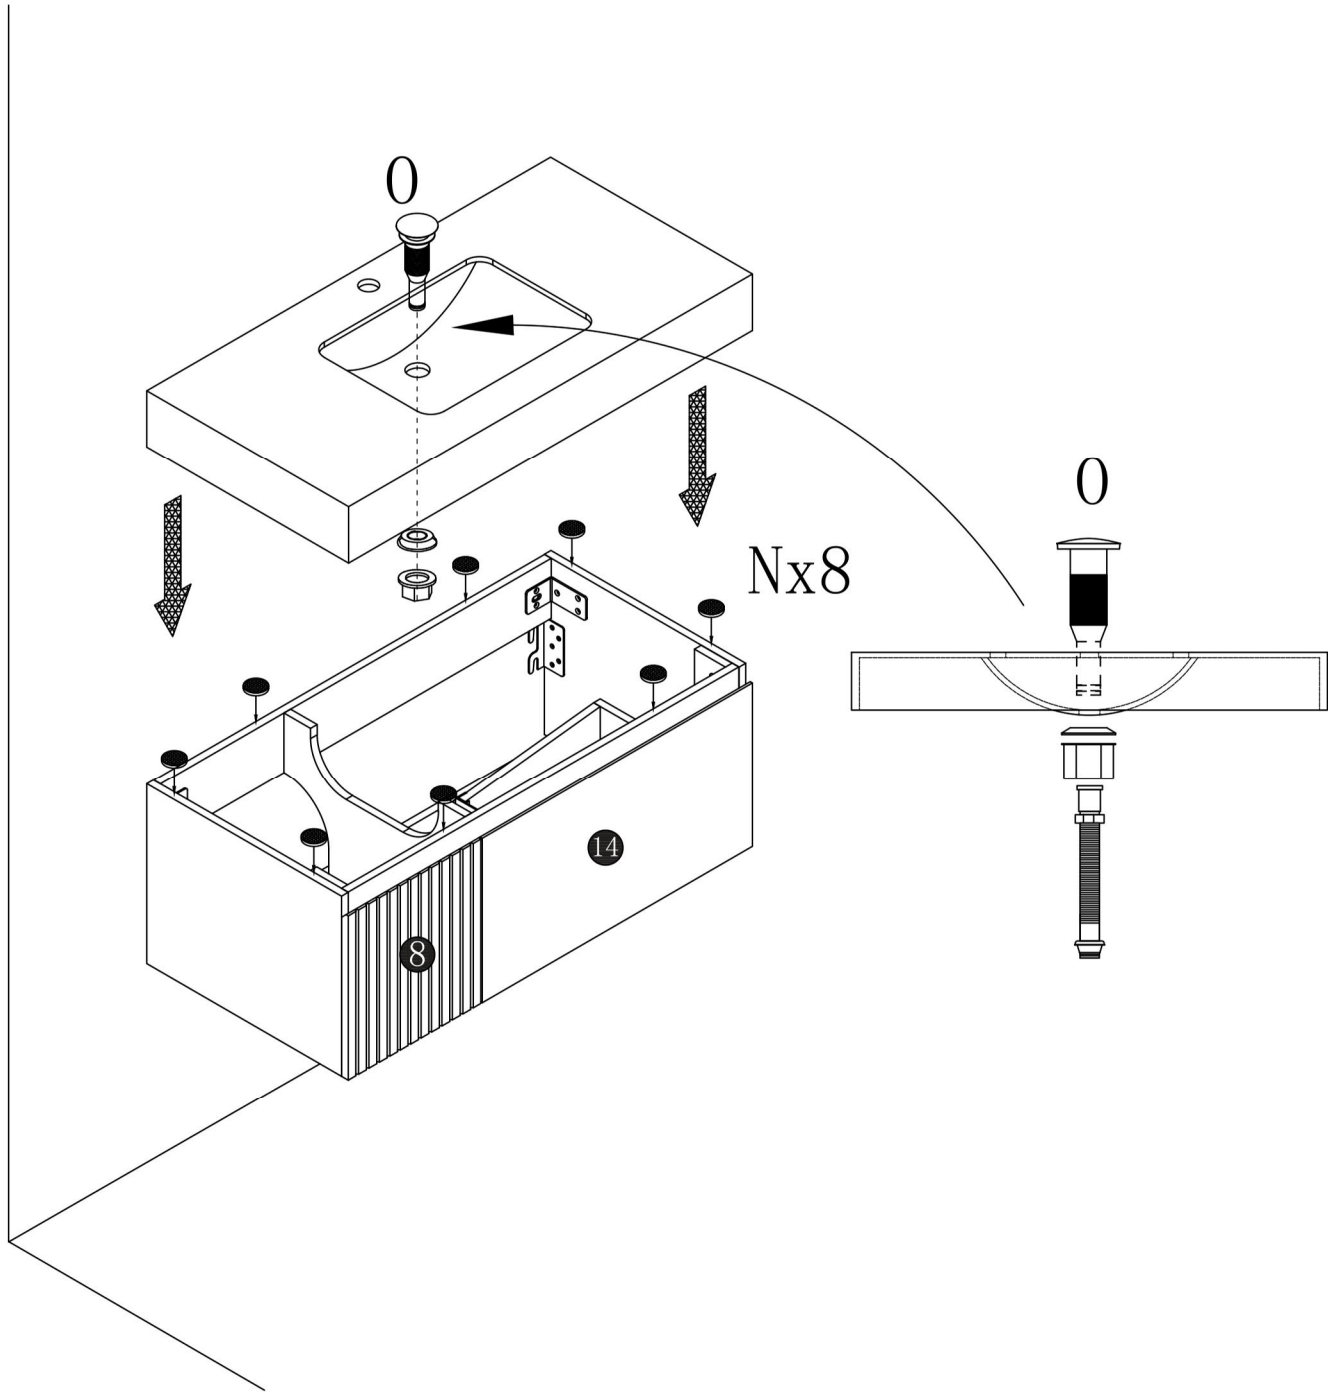

ASSEMBLY INSTRUCTION

Step 17

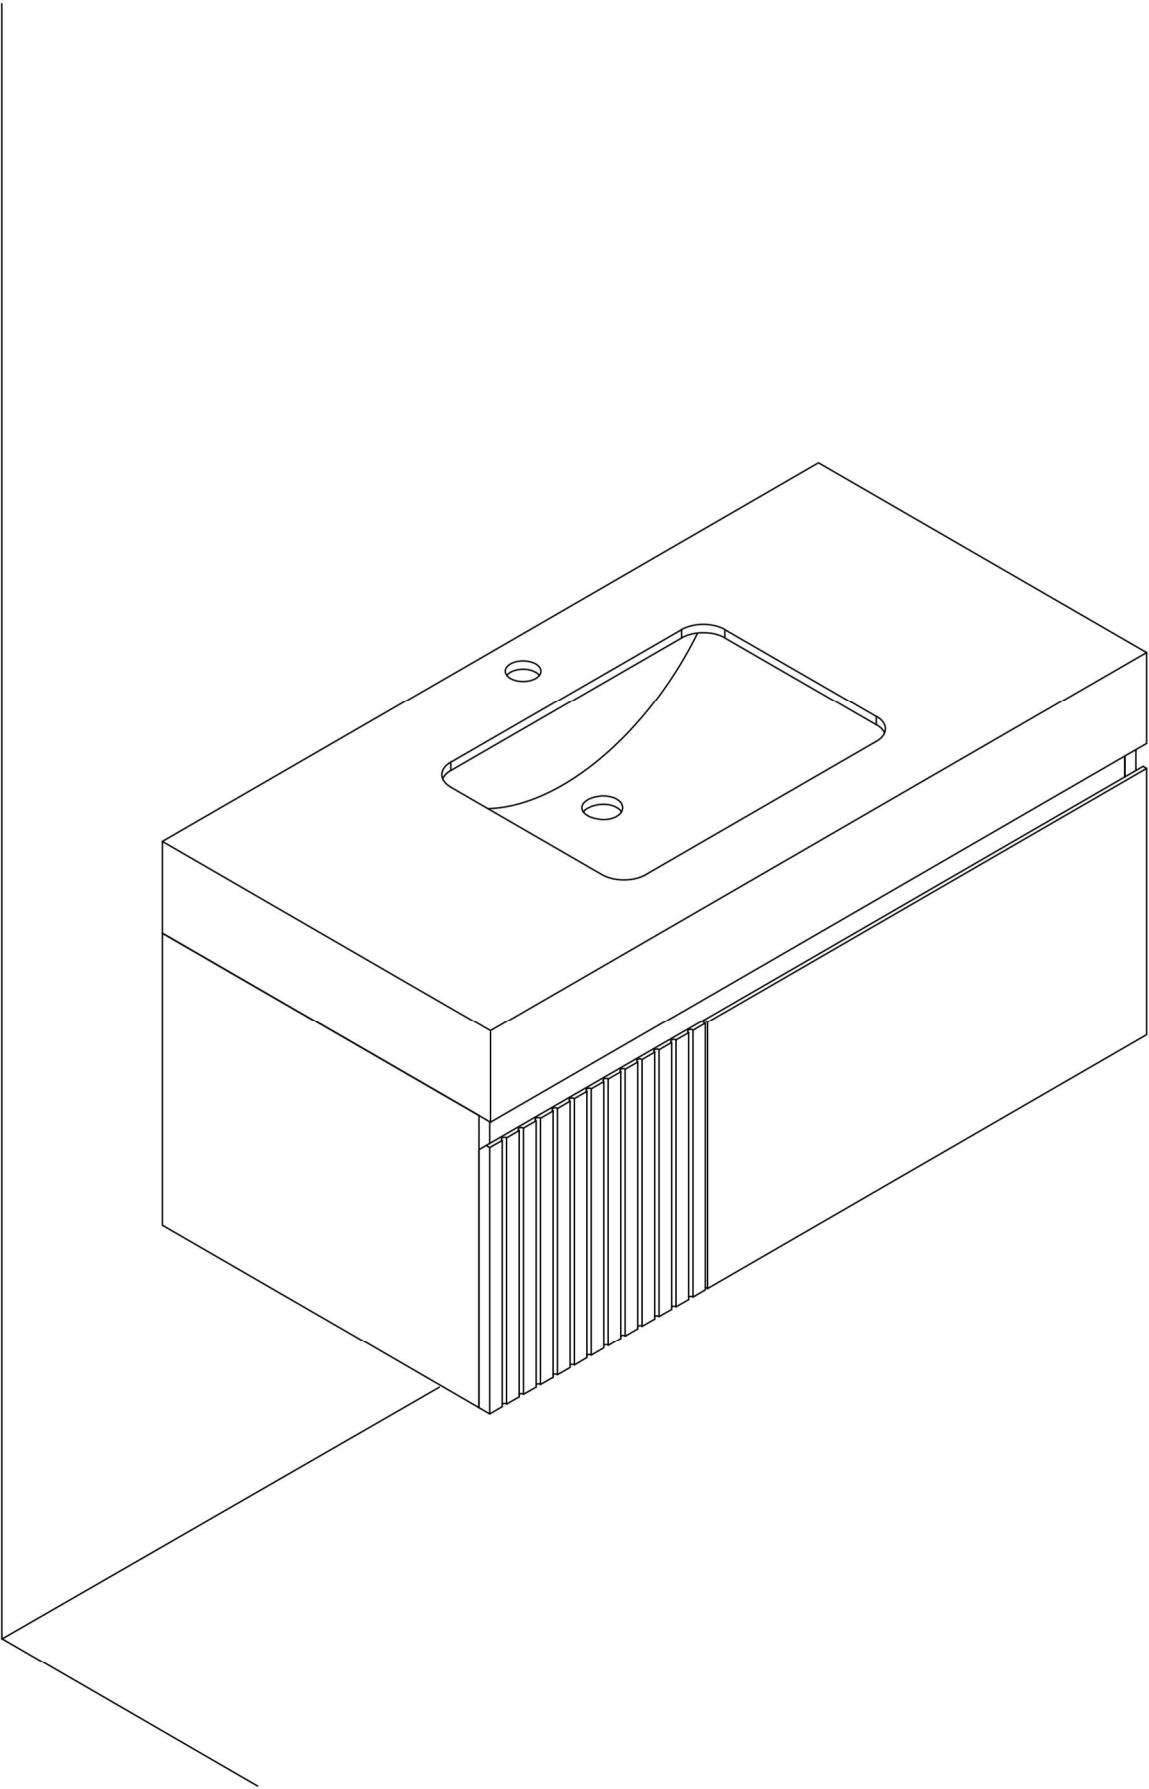

OK