ASSEMBLY INSTRUCTIONS



Description	:	KING BED	
Product Dimension	:	78.7”Wx83.9”Lx42”/43.5"H	
Cube Size	:	84.5"x22"x6"	NW : 110 LBS
			GW : 118.8 LBS


BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.
Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.
If hardware is missing or you have difficulty assembling this product, please contact us.

IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT TIGHTEN all screws and bolts until product is completely assembled.
- Keep all hardware parts out of reach of children.

Estimated time for assembly	People recommended for assembly	Tools Needed	Use power tools with caution
 Allow 60 minutes.	 2 People Build Make it a team effort! Grab a friend for quicker, easier assembly.	 Grab a Phillips head screwdriver to conquer this assembly.	 Use power tools with caution.

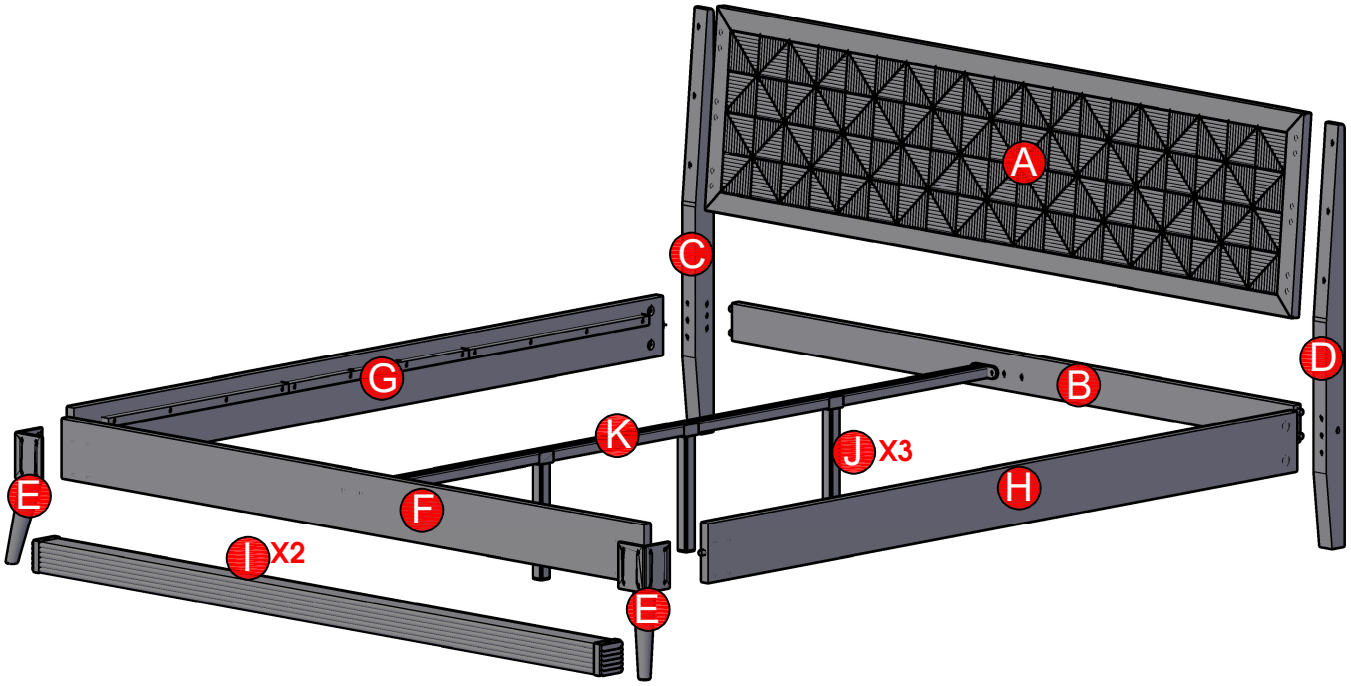

PART LIST

- **When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts.**

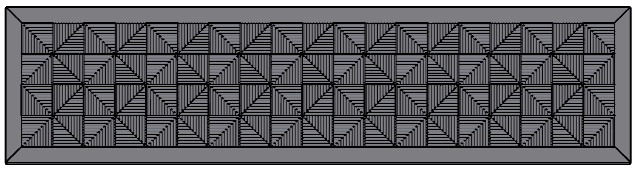
A x 1pc


B x 1pc



C x 1pc


D x 1pc


E x 2pcs


F x 1pc


G x 1pc


H x 1pc


I x 2pcs

J x 3pcs



K x 1pc

HARDWARE LIST

Bolt (M6x15)	1 x 16pcs
Bolt (M6x80)	2 x 4pcs
Half moon washer	3 x 4pcs
Flat washer (Ø6.5x16)	4 x 16pcs
Lock washer (Ø6.5x9)	5 x 16pcs
Bolt (M8x20)	6 x 4pcs
Bolt (M8x40)	7 x 9pcs
Bolt (M8x50)	8 x 2pcs
Flat washer (Ø8.5x19)	9 x 7pcs
Lock washer (Ø8.5x13)	10 x 7pcs
Screws (M4x25)	11 x 12pcs
Wooden cap	12 x 2pcs
Allen key	13 x 1pc

STEP 1

- Attach Headboard legs (C) & (D) to Headboard stretcher (B) using Bolts (8).
- Tighten with Allen key (13).

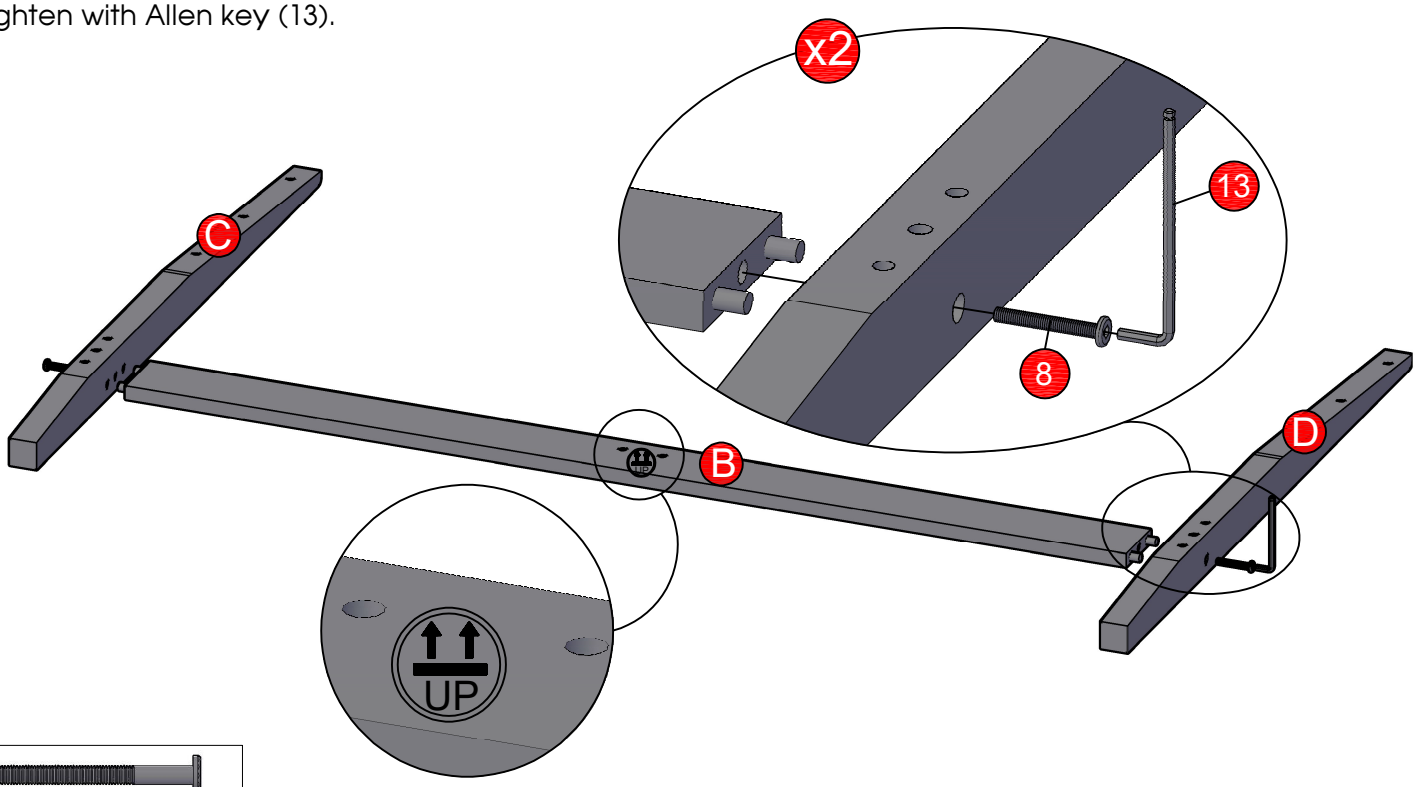


8 x 2pcs

STEP 2

- Attach the Headboard legs (from step 1) to Headboard panel (A) using Bolts (7)
- Tighten with Allen key (13).

Note: the headboard panel can be moved up and down (about 1.5 inches).

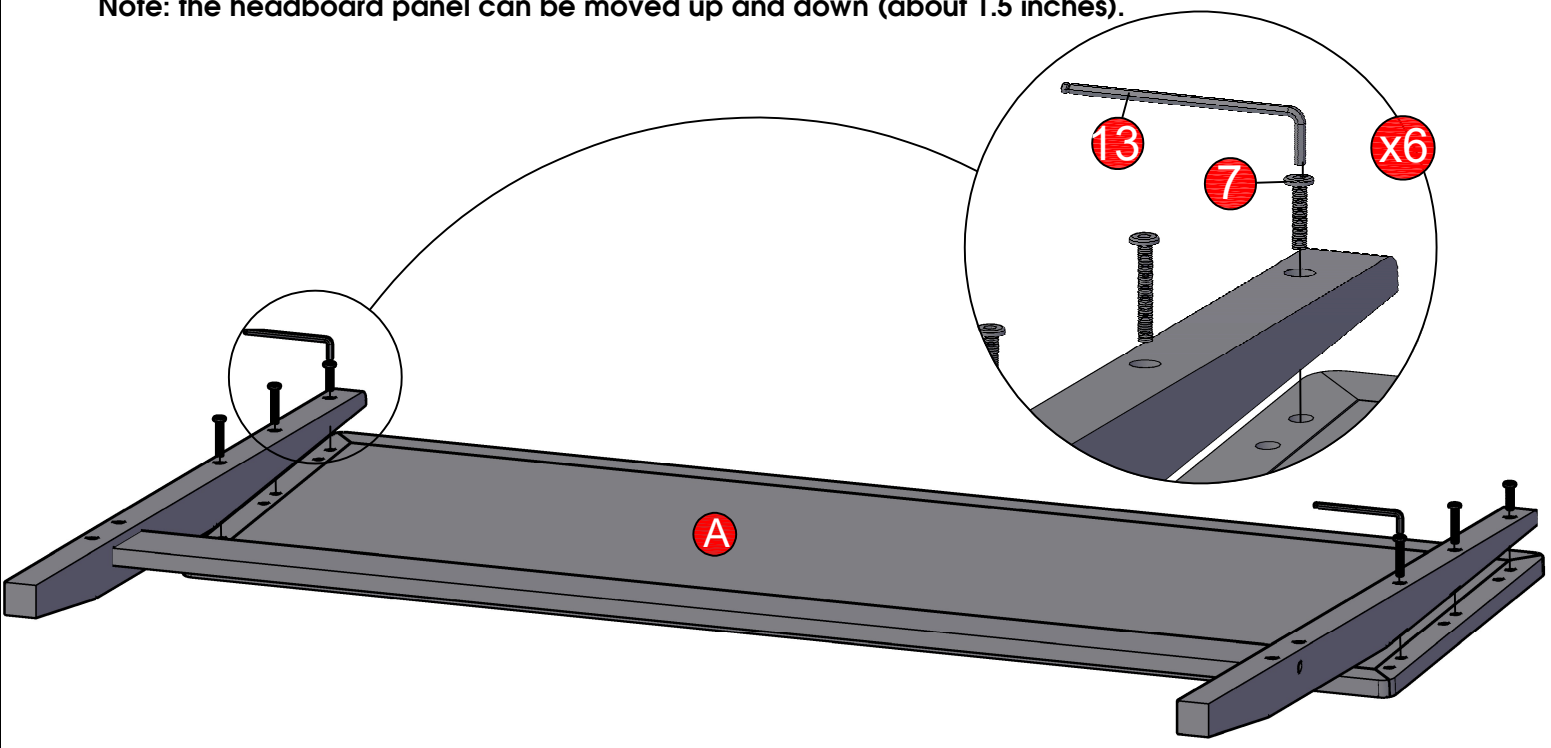





7 x 6pcs

STEP 3


- Attach Legs (E) to Footboard (F) using Bolts (1), Flat washers (4) and Lock washer (5).
- Tighten with Allen key (13).

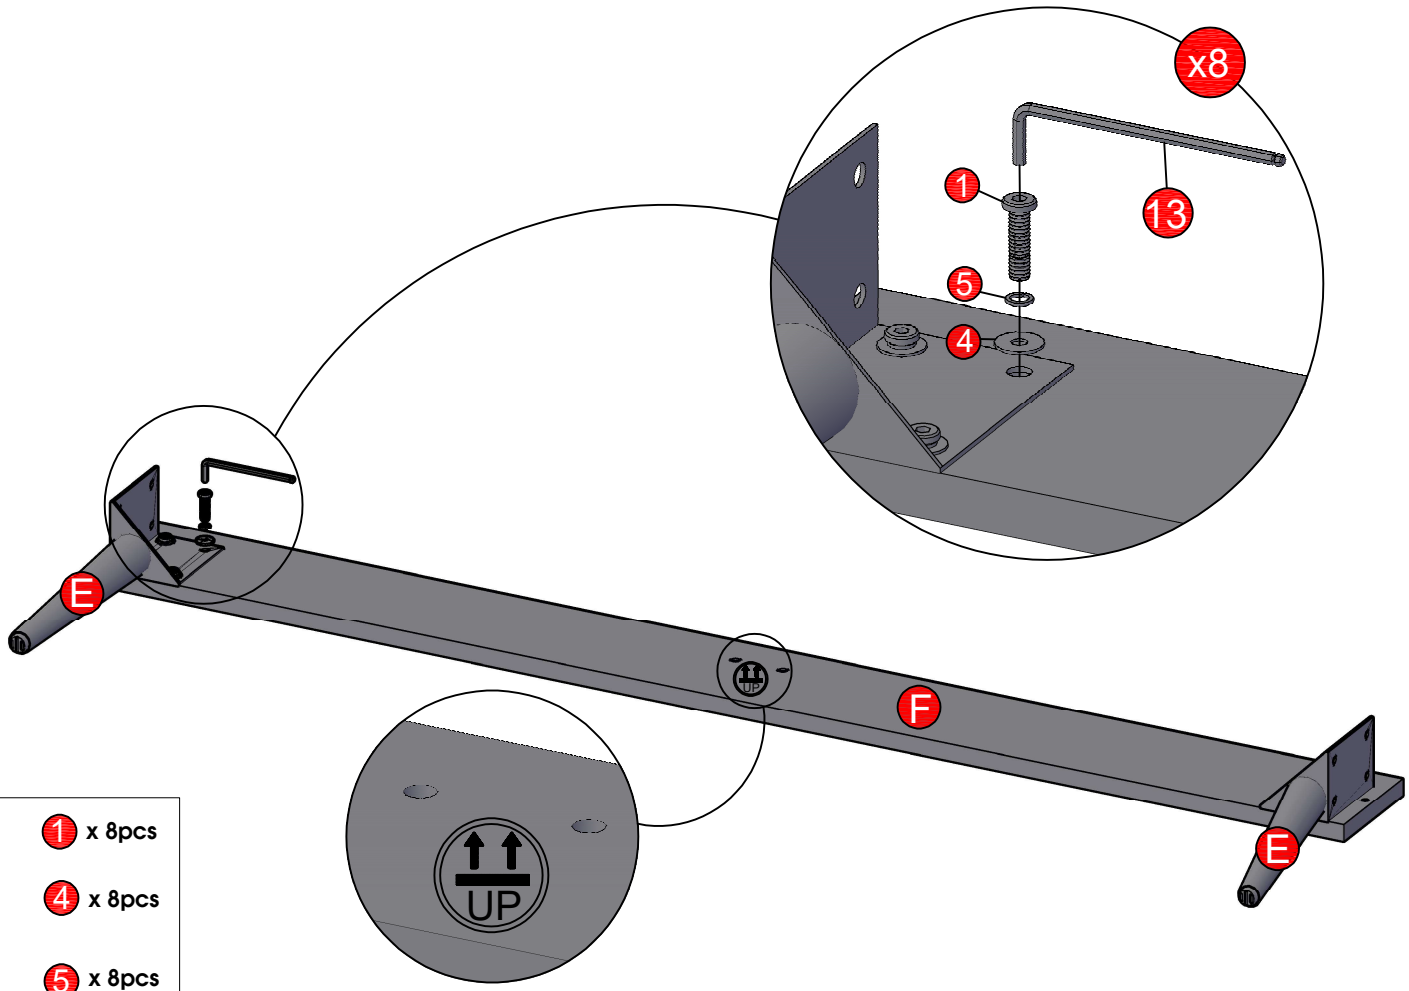

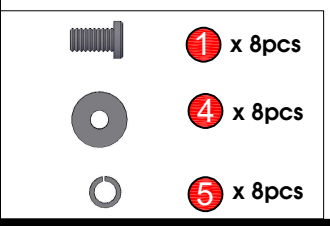


STEP 4

- Find some blocks or anything you have available to prop up Side Rails (H) & (G) while attaching them to the Headboard.
- Attach Side rails (H)&(G) to the Headboard leg (from step 2) using Bolts (2), Half moon washer(3).
- Tighten with Allen key (13).

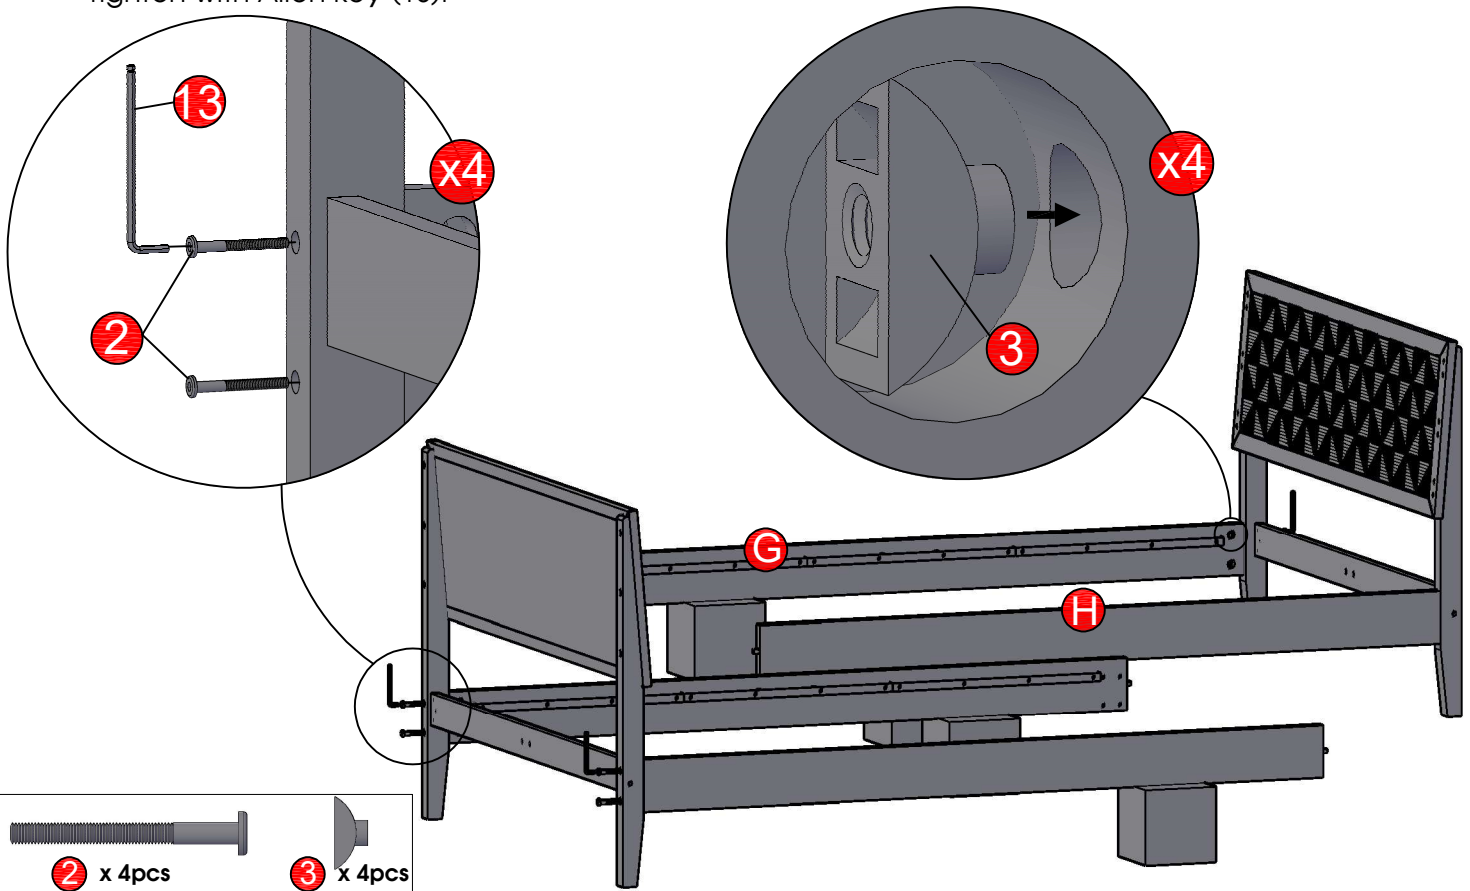


STEP 5

- Attach Side rails (from step 4) to the footboard legs (from step 3) using bolts (1), Flat Washers (4) and Lock Washer (5).
- Tighten with Allen key (13).

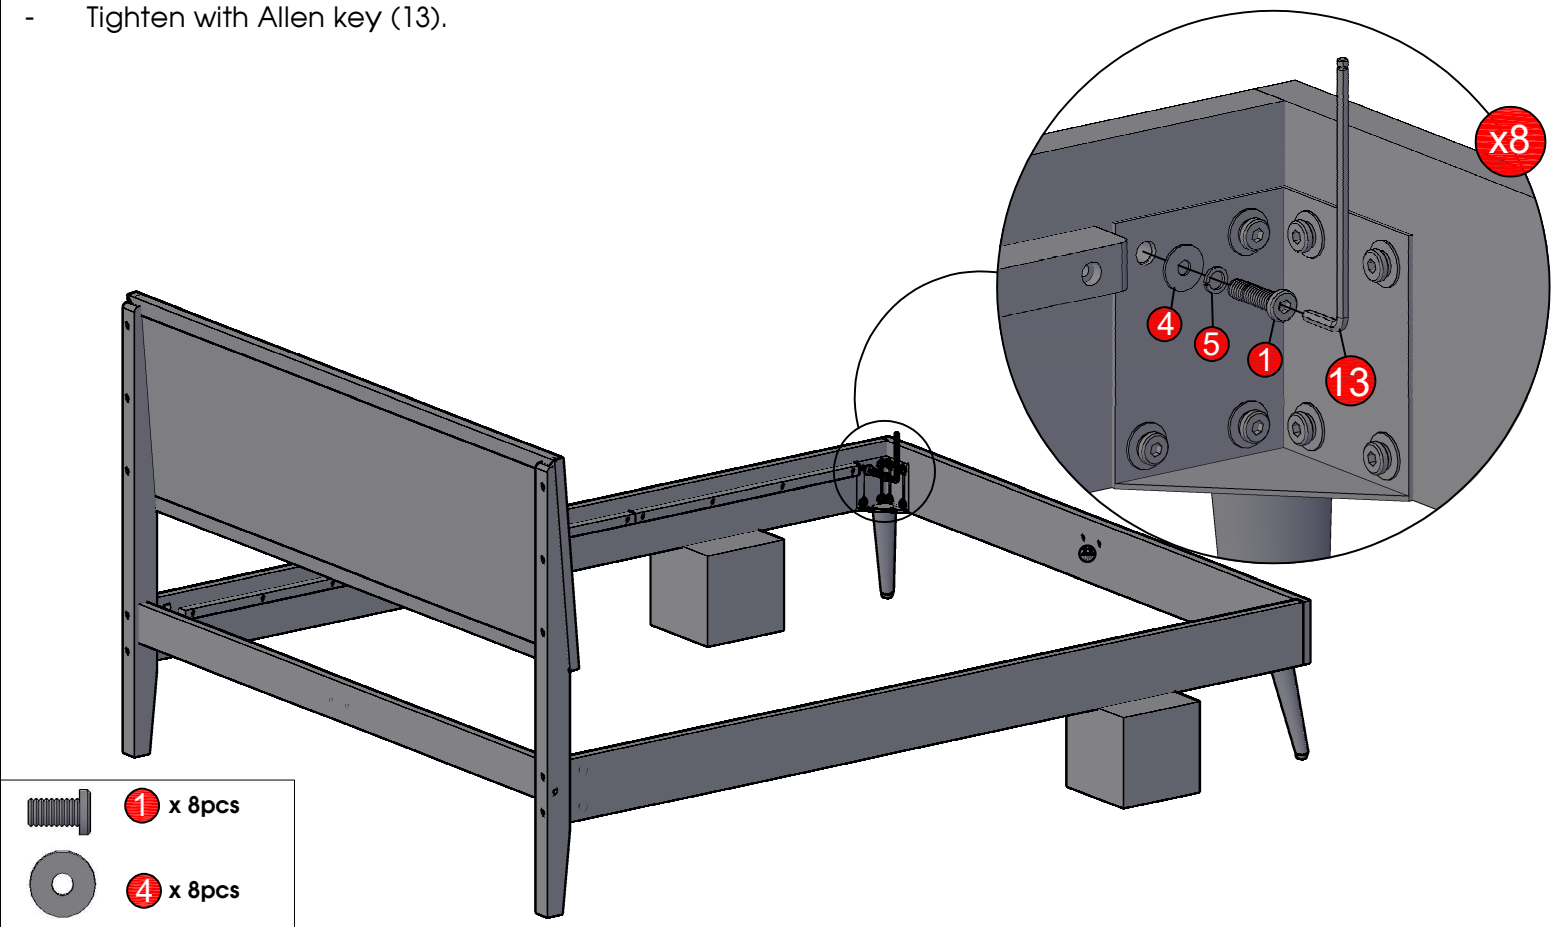


STEP 6

- Attach Support legs (J) to Centre rail (K) using Bolts (7), Flat washers (9) and Lock washers (10).
- Tighten with Allen Key (13).

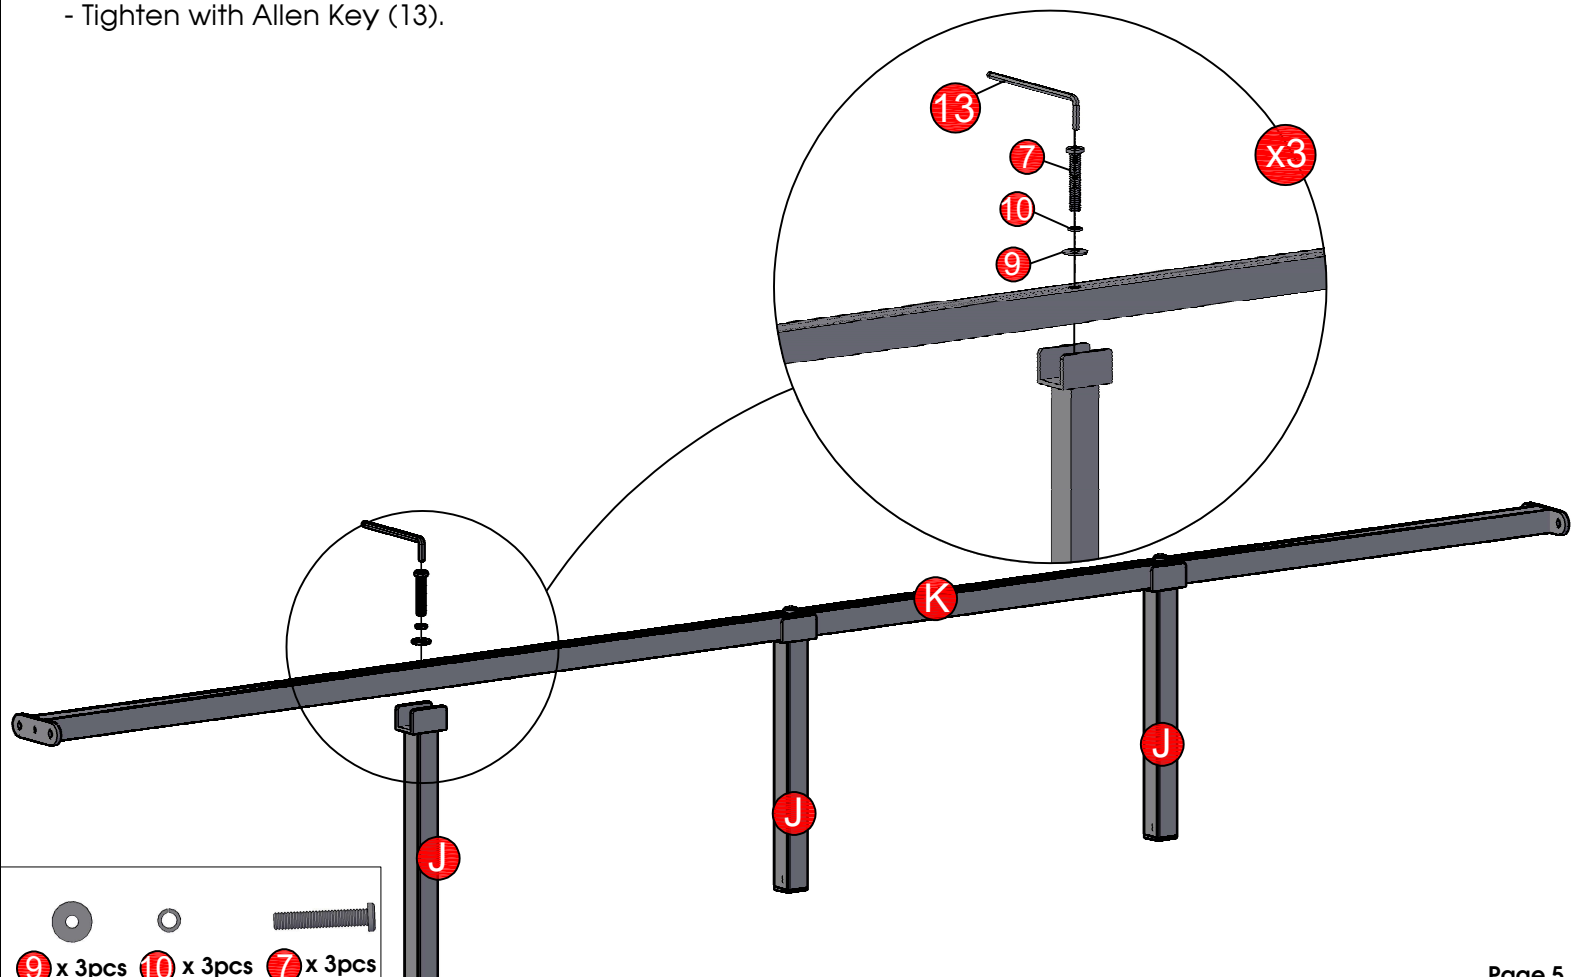


STEP 7

- Attach Centre rail (From step 6) to the Headboard and Footboard using Bolts (6), Flat washers (9) and Lock washers (10).
- Tighten with Allen key (13).

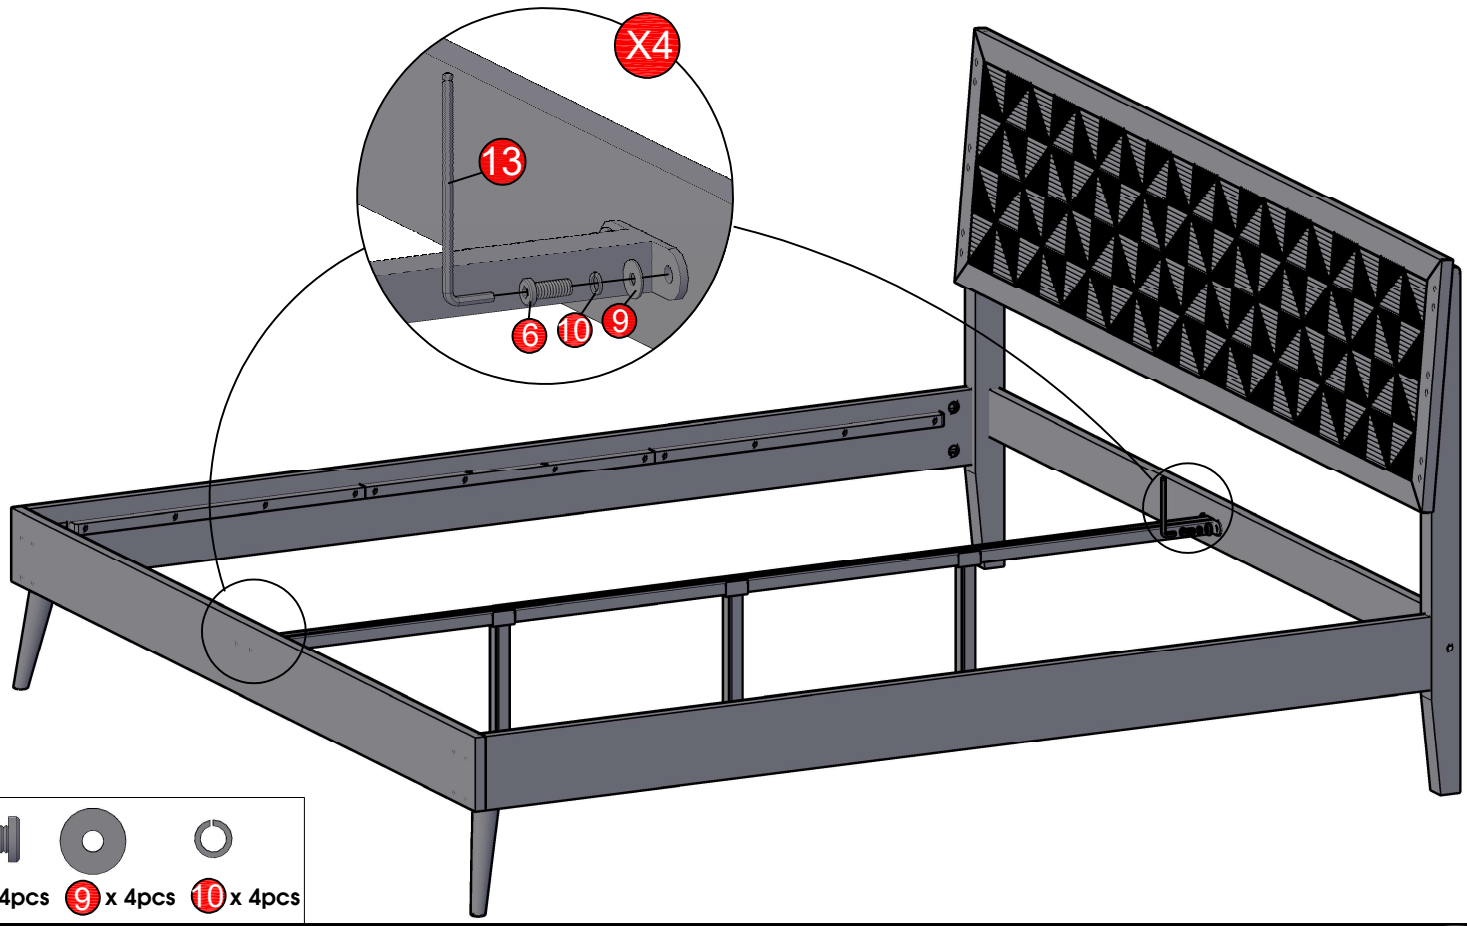

STEP 8

- Attach Wooden cap (12) to the Headboard.
- Secure Slats (I) on bed frame with Screws (11), and complete the assembly.

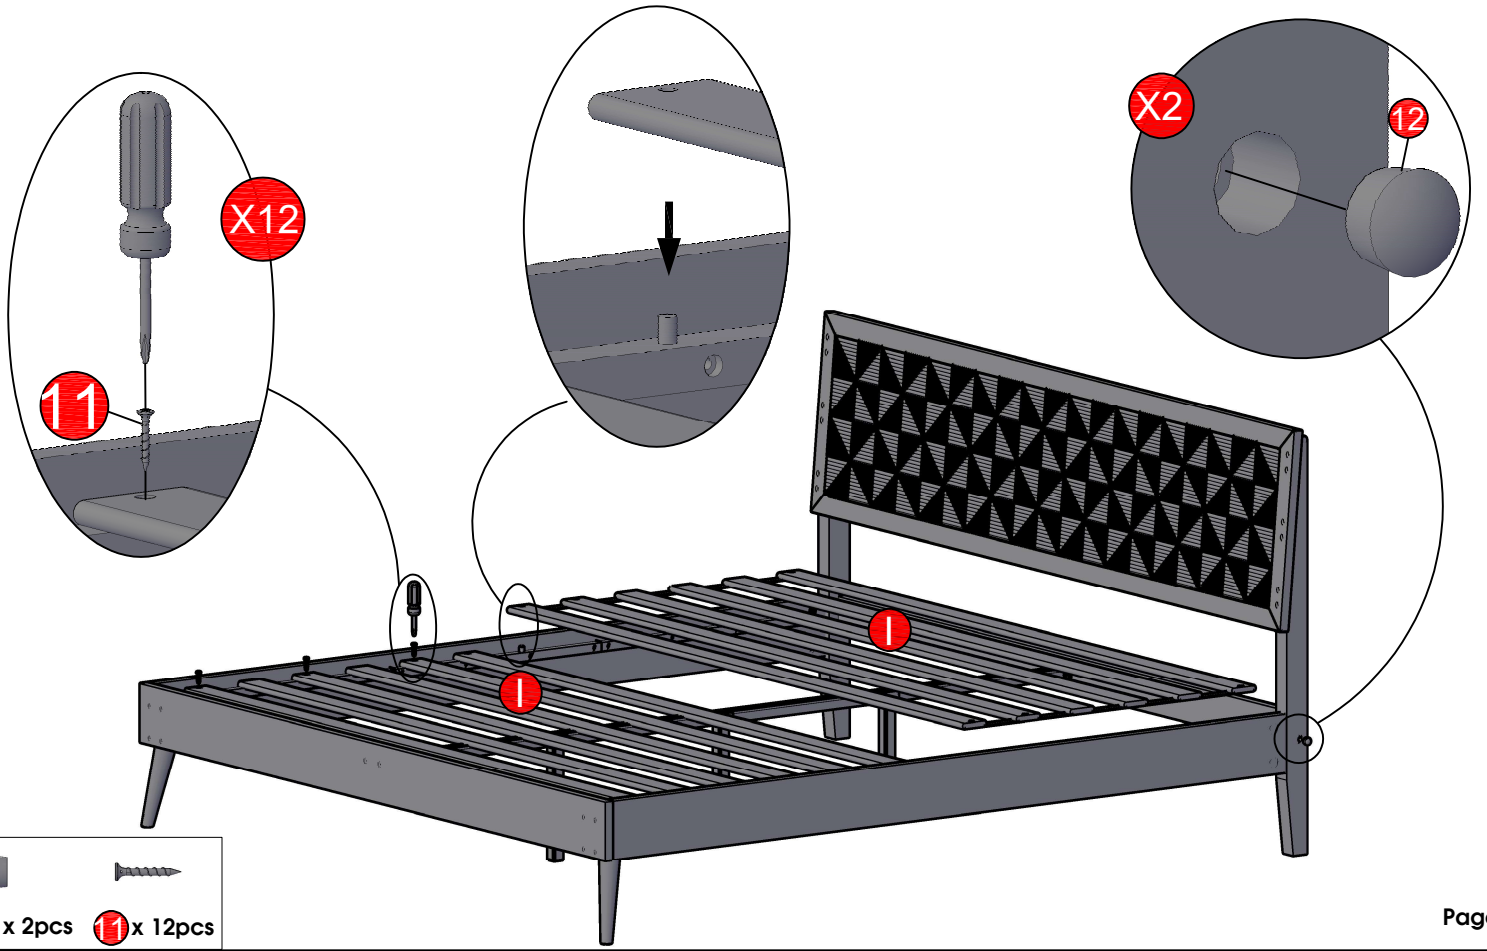

ASSEMBLY IS COMPLETE

