

HW-AM557708
CUSTOMER MANUAL

-V0.1

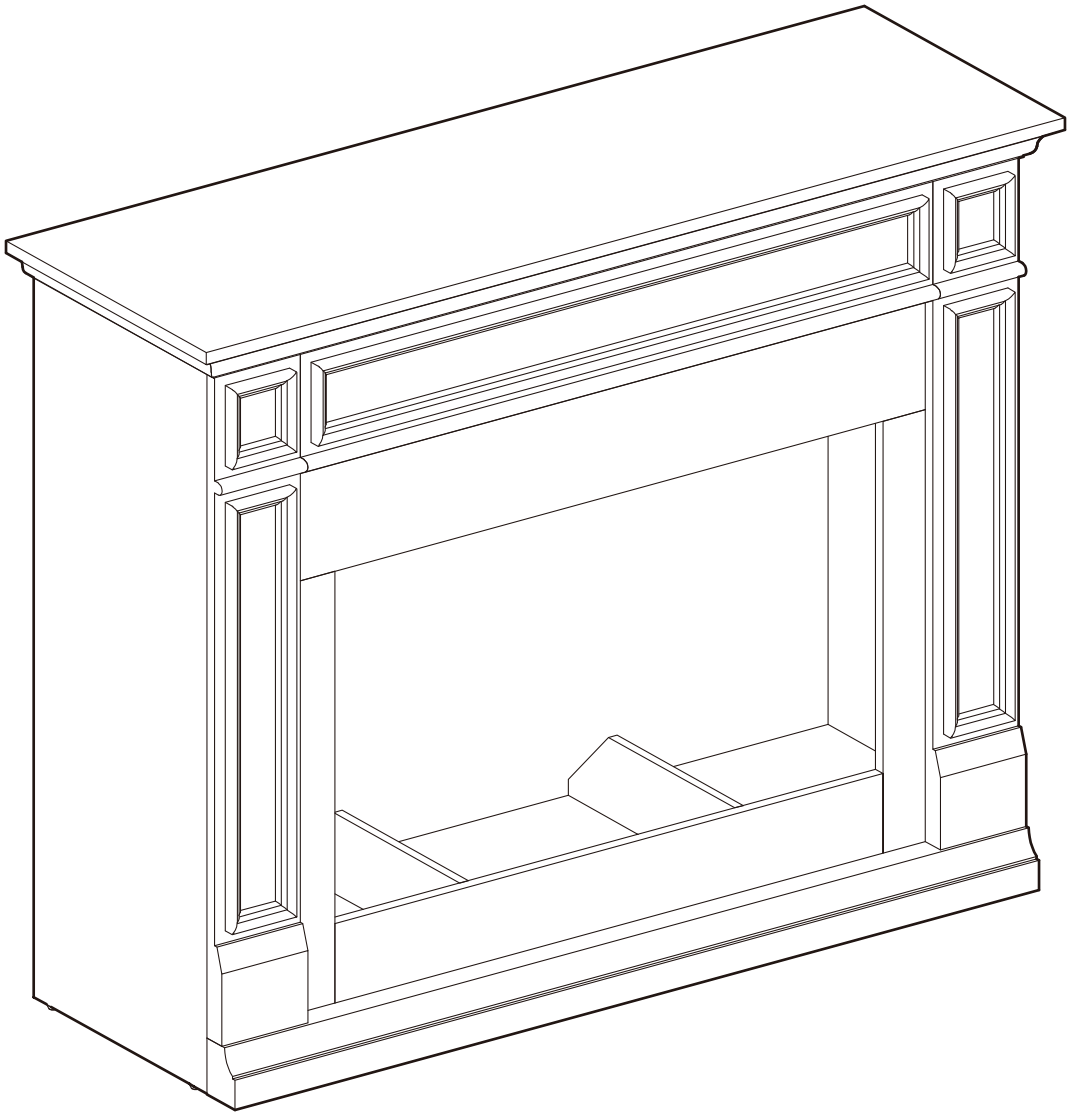


Contact us： Support@lghm.vip

ASSEMBLY STRUCTURE REFERENCE DIAGRAM

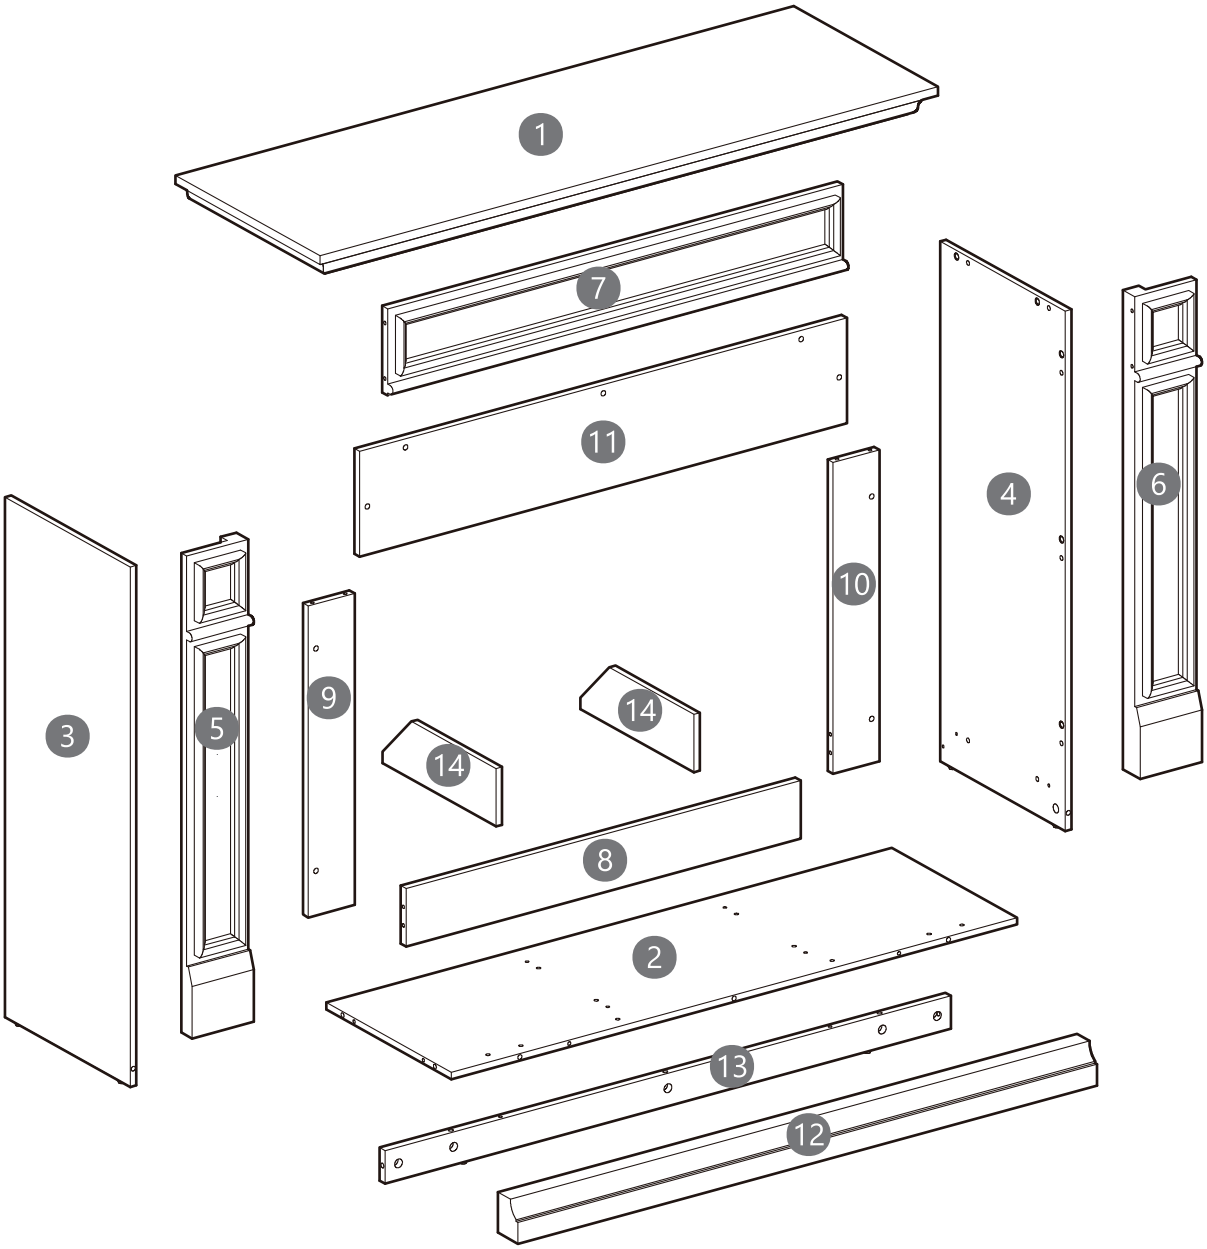

PARTS

A

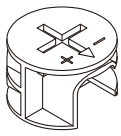

X 18+2

B




X 18+2

C



Ø6 x 30mm
X 30+2

D




Ø3 x 12 x 6mm
X 16+1

E




X 6

F




Ø3 x 14mm
X 2

G




M6 x 12mm
X 24+2

H

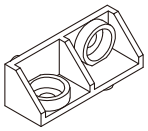

X 12

I




M6 x 25mm
X 9+1

M



X 2

N




X 2

O




Ø4 x 35mm
X 2

P

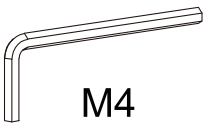

X 1


Q




X 1

PARTS

V

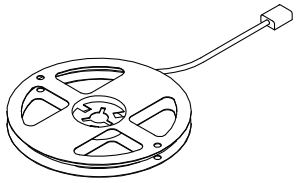


V1

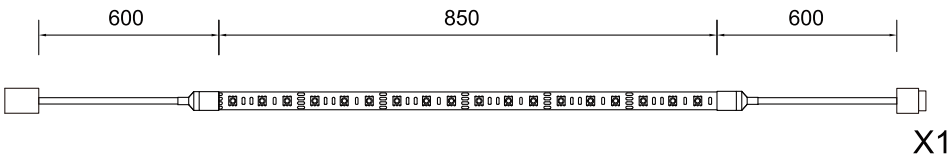


X1


V3

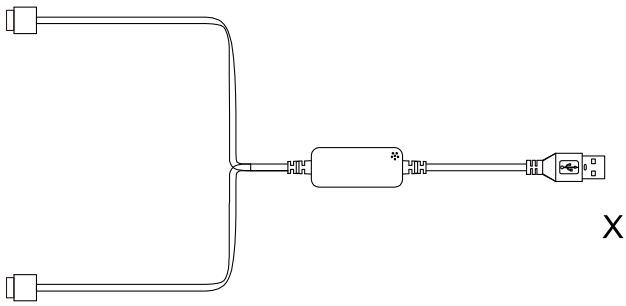


X1





V4
X 4

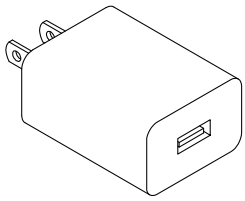


V5
X 1

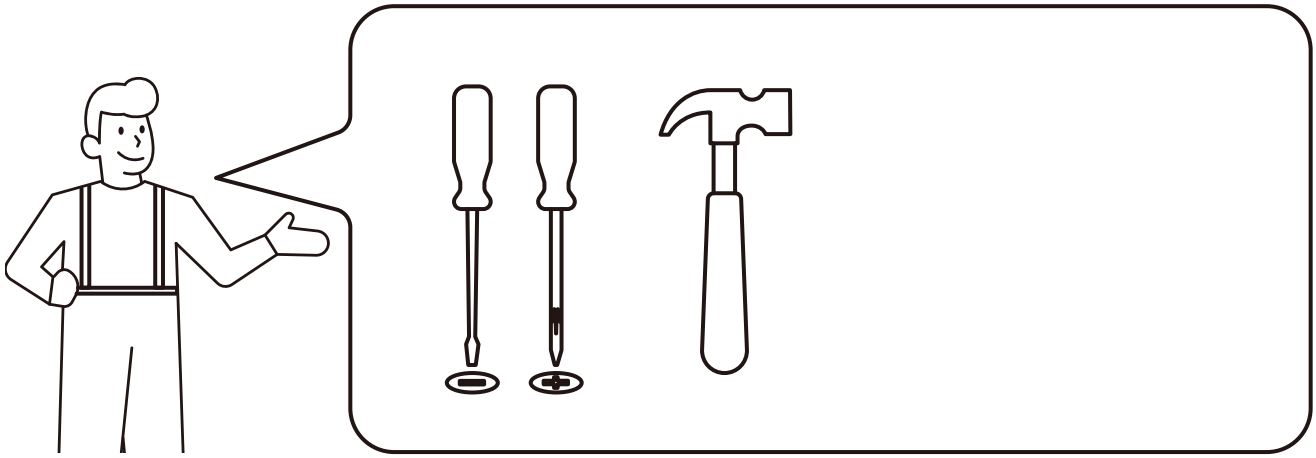


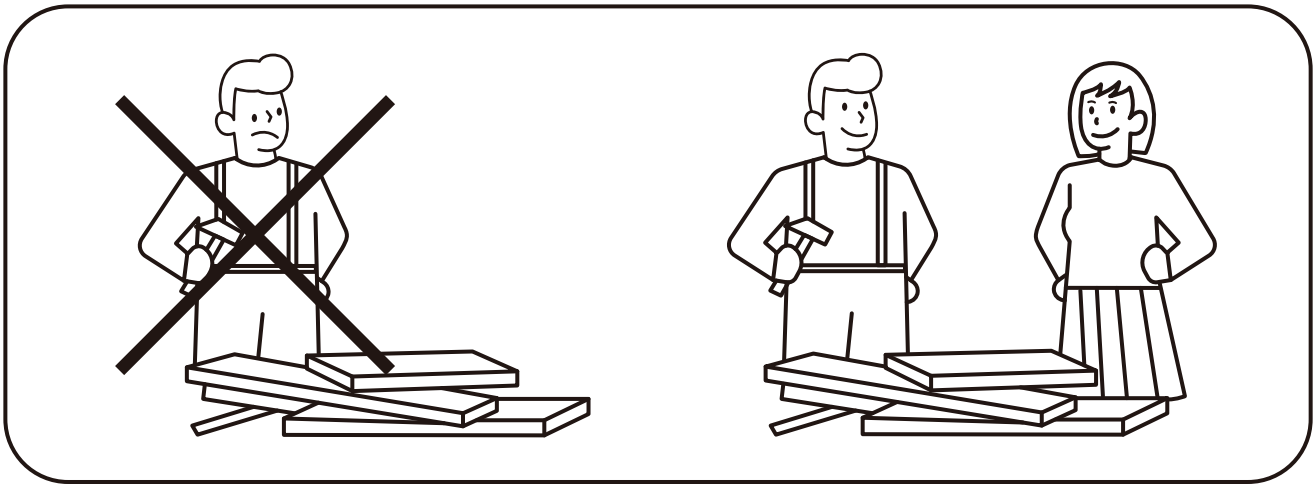

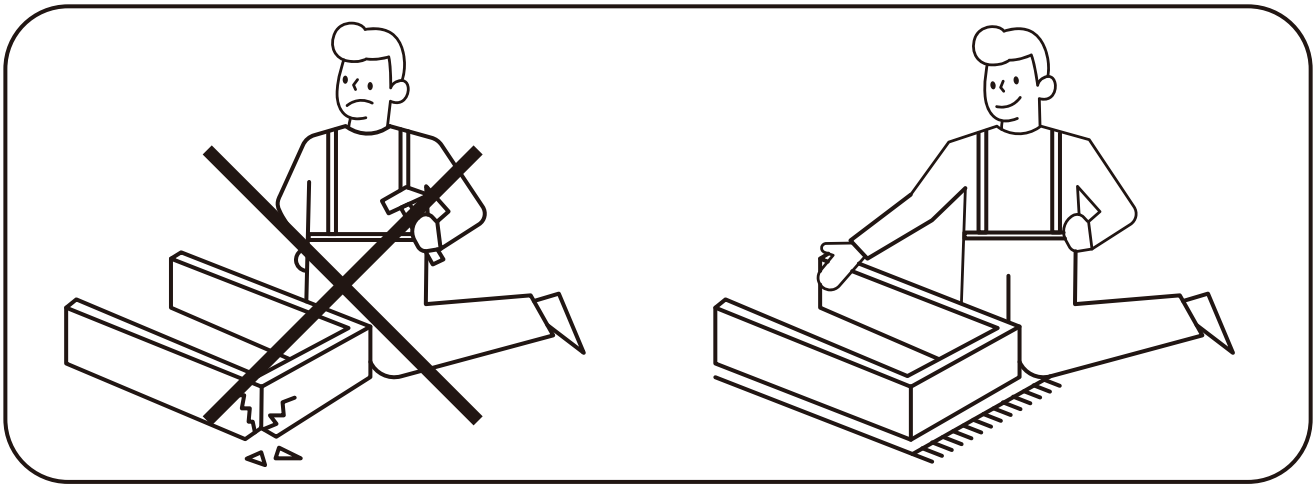

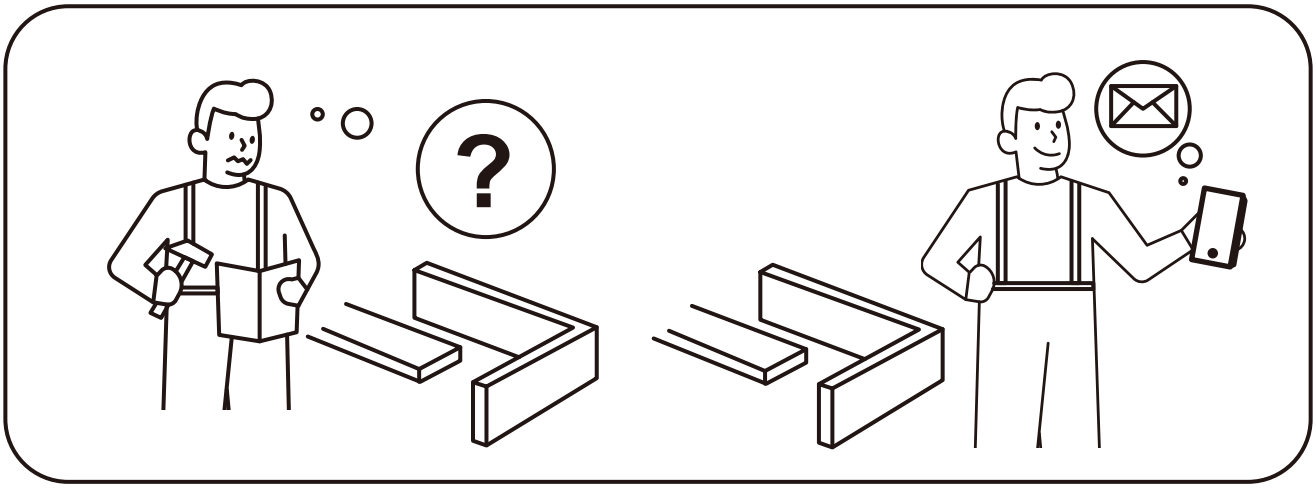


How to work the Knock Down (kd) assembly system

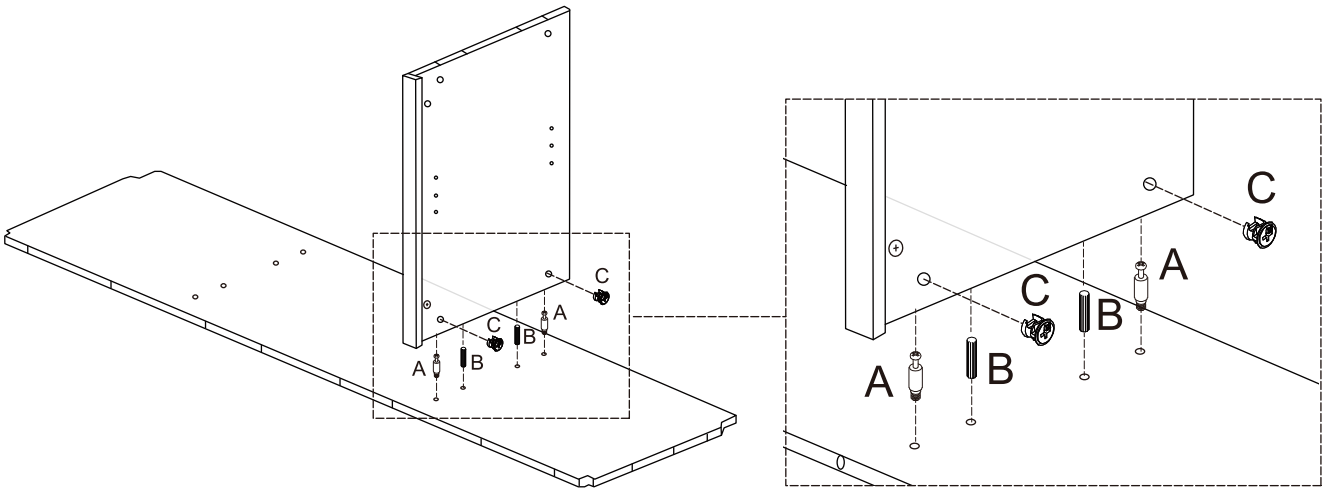


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

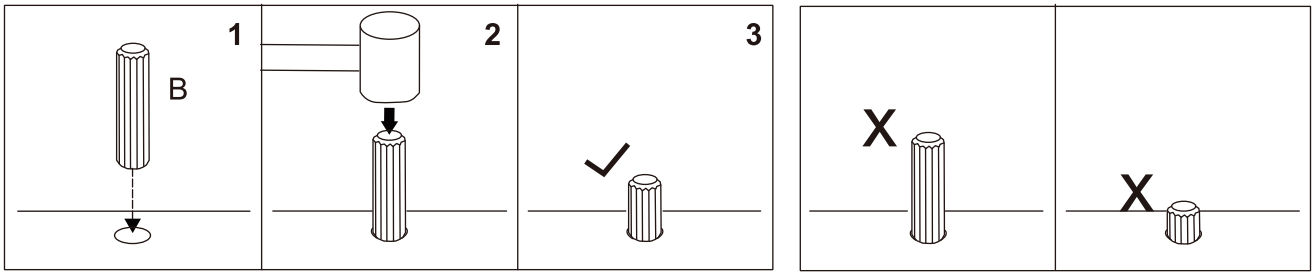

How to use the Cam Lock system

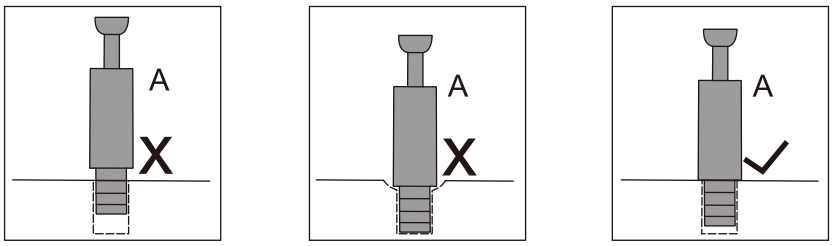


1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-driled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

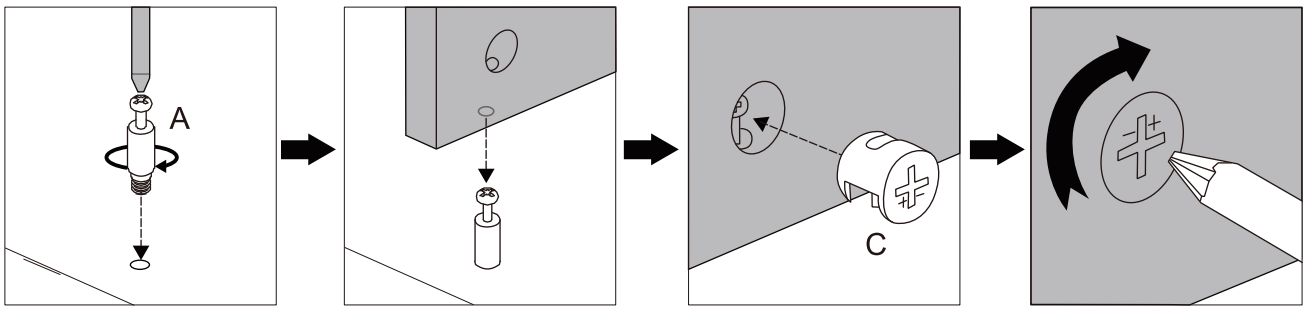


Step 1

Securing Cam Bolt (B) into Board (③&④).

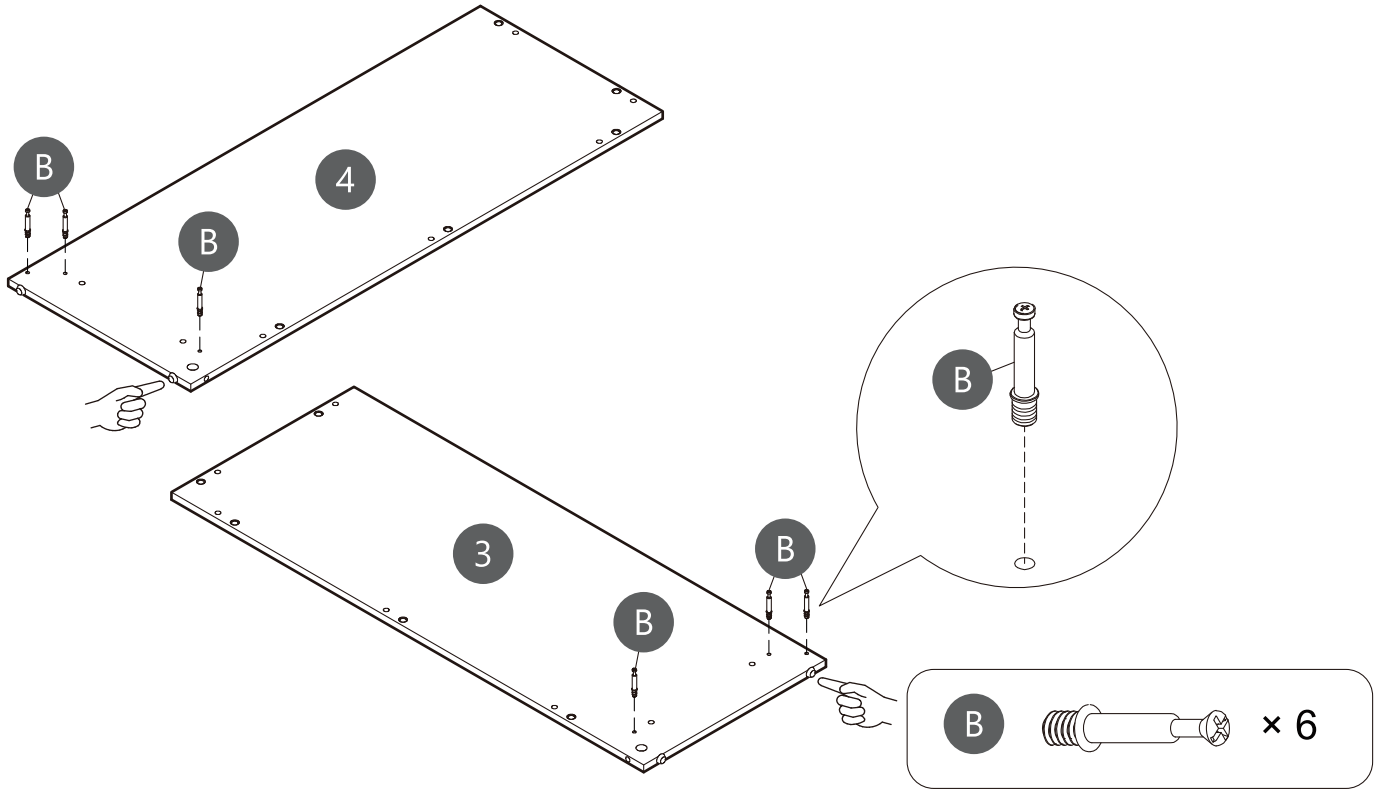


Step 2


Using Screws (G) and a 7-Shaped Wrench (P) secure Connector (H) to Board (③&④).

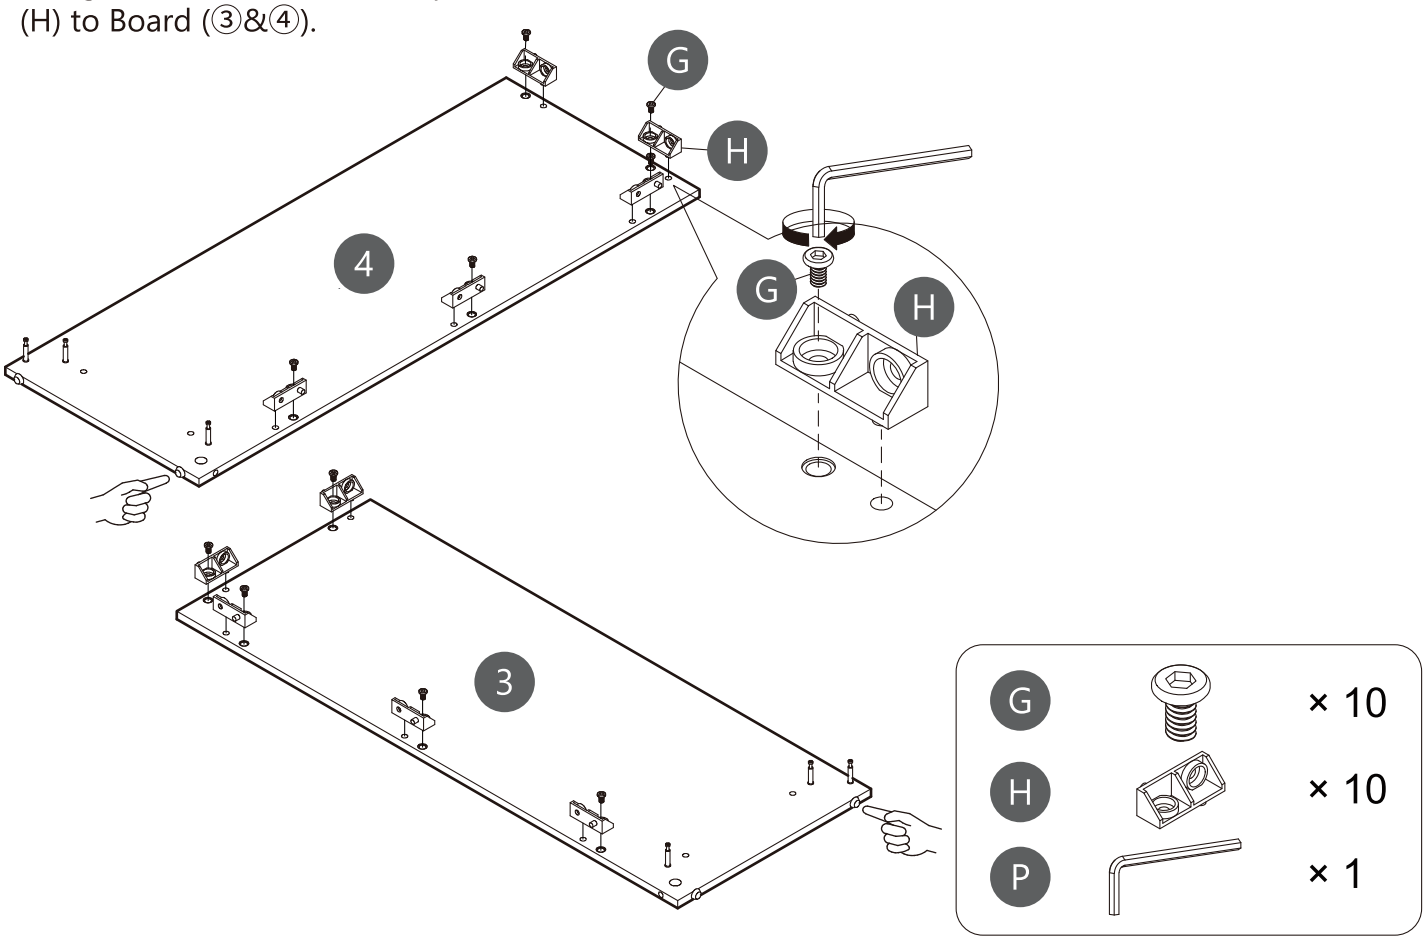

Step 3


Securing Cam Bolt (B) into Board (②).
Then flip 180 degrees, Securing Cam Bolt (B) into Board (②).

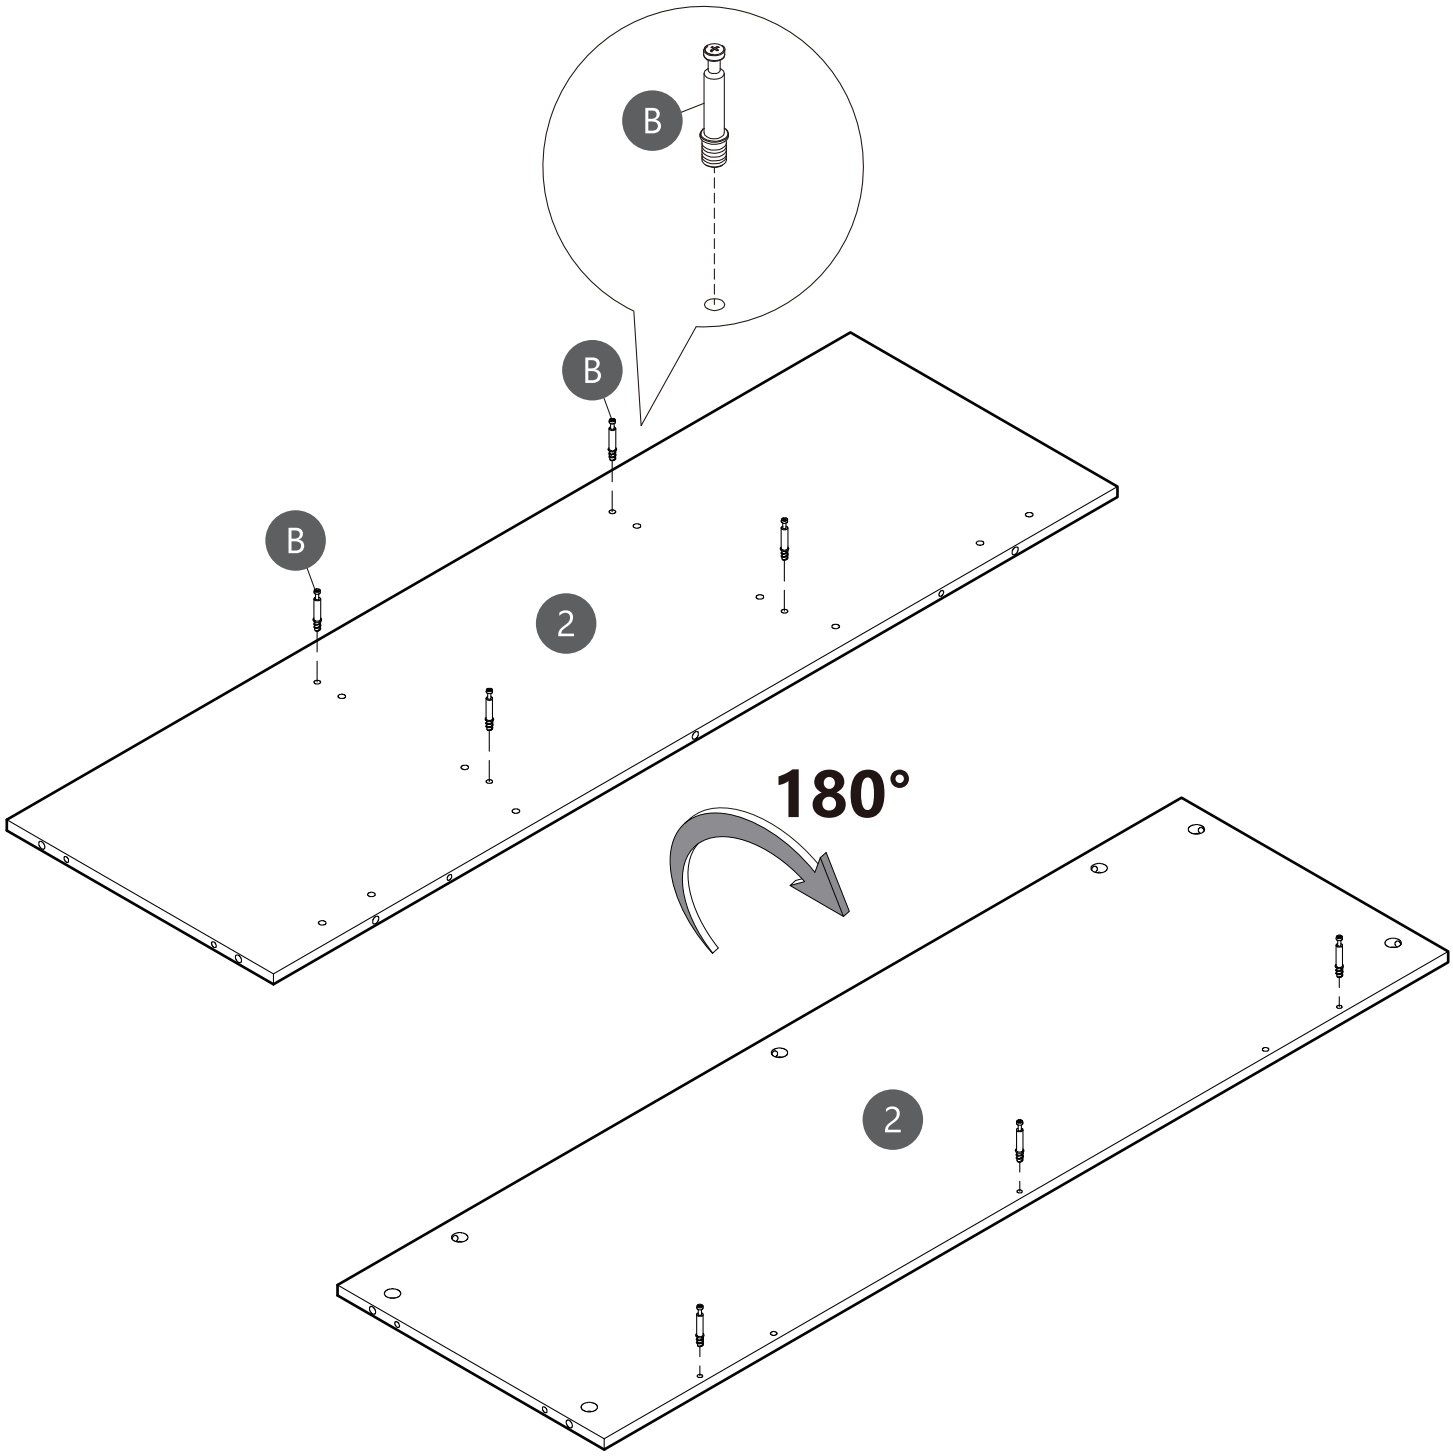

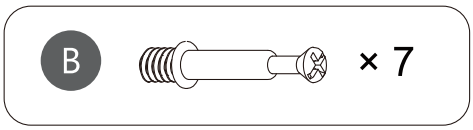


Step 4


Inserting Wooden Dowel (C) into Board (②), then attach Board (⑬) to Board (②).
Using Cam Lock (A) secure Board (⑬) to Board (②).

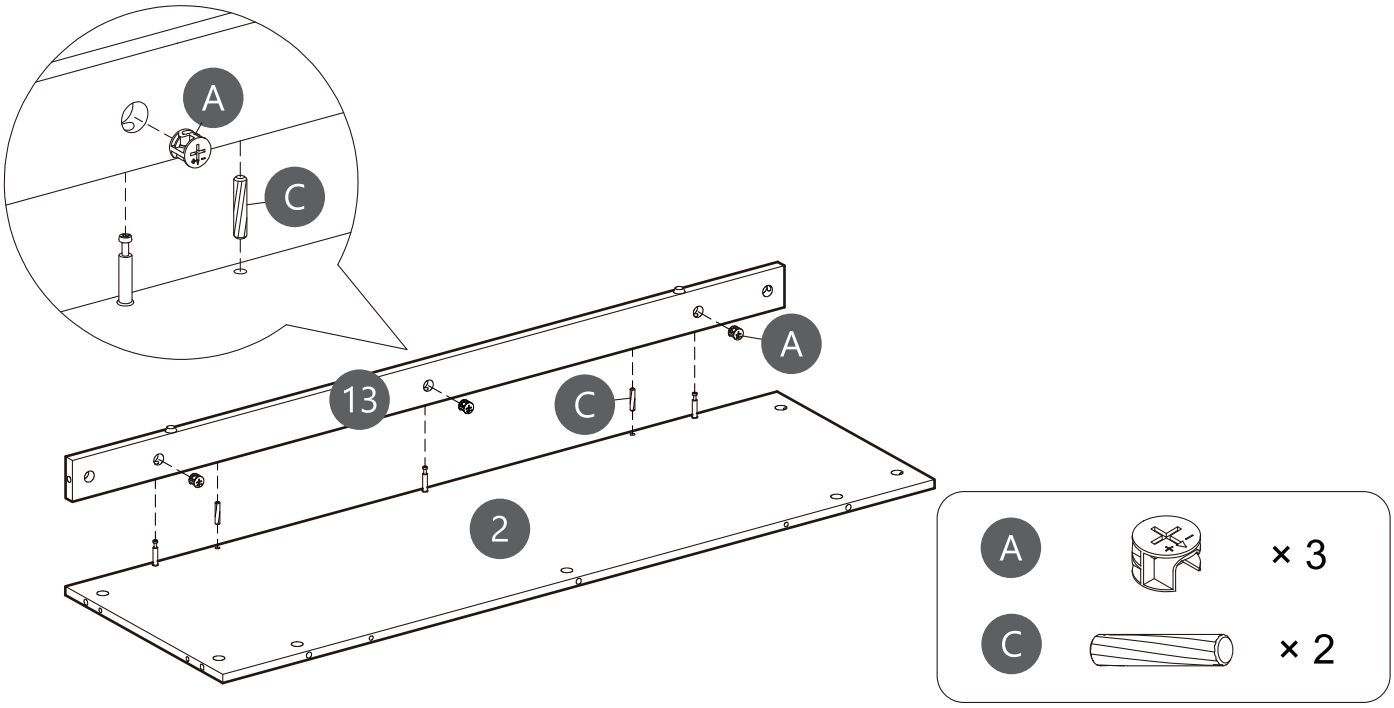

Step 5


Inserting Wooden Dowel (C) into Board (②), then attach Board (③&④) to Board (②&⑬).
Using Cam Lock (A) secure Board (③&④) to Board (②&⑬).

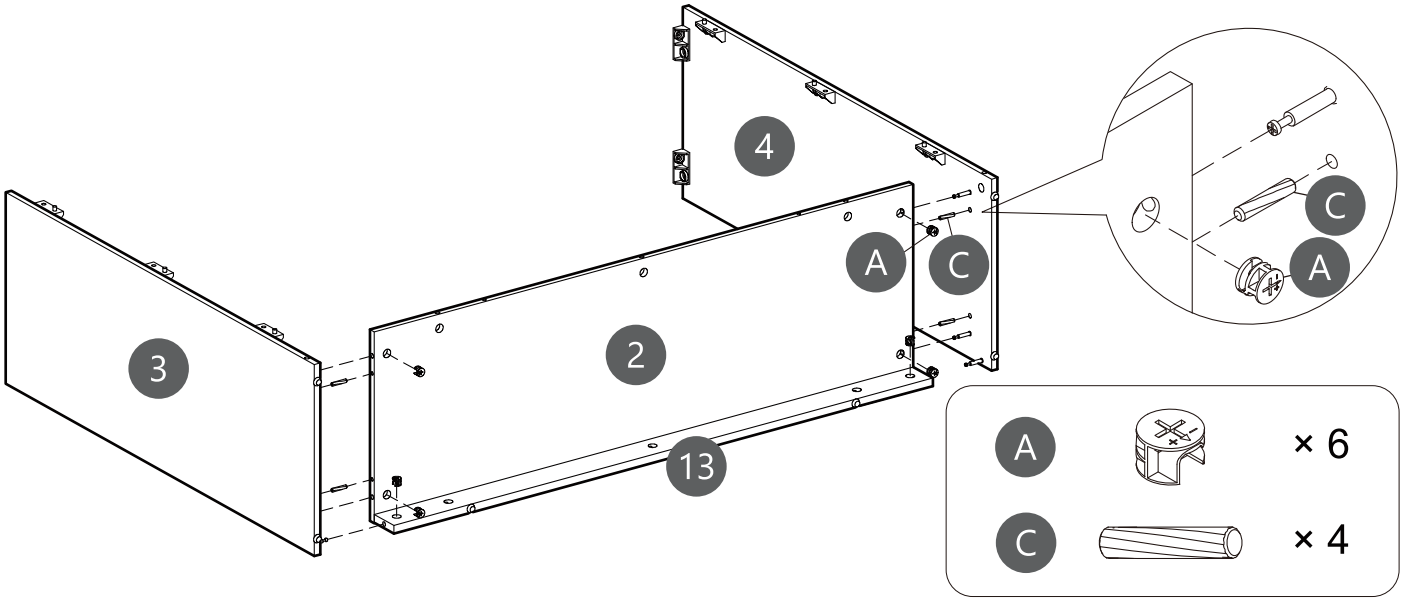

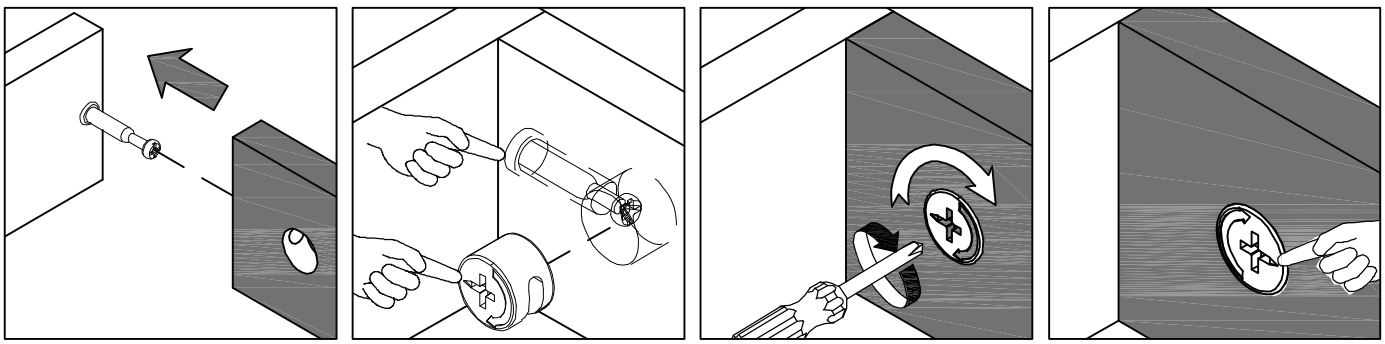


Step 6


Securing Cam Bolt (B) into Board (⑫).

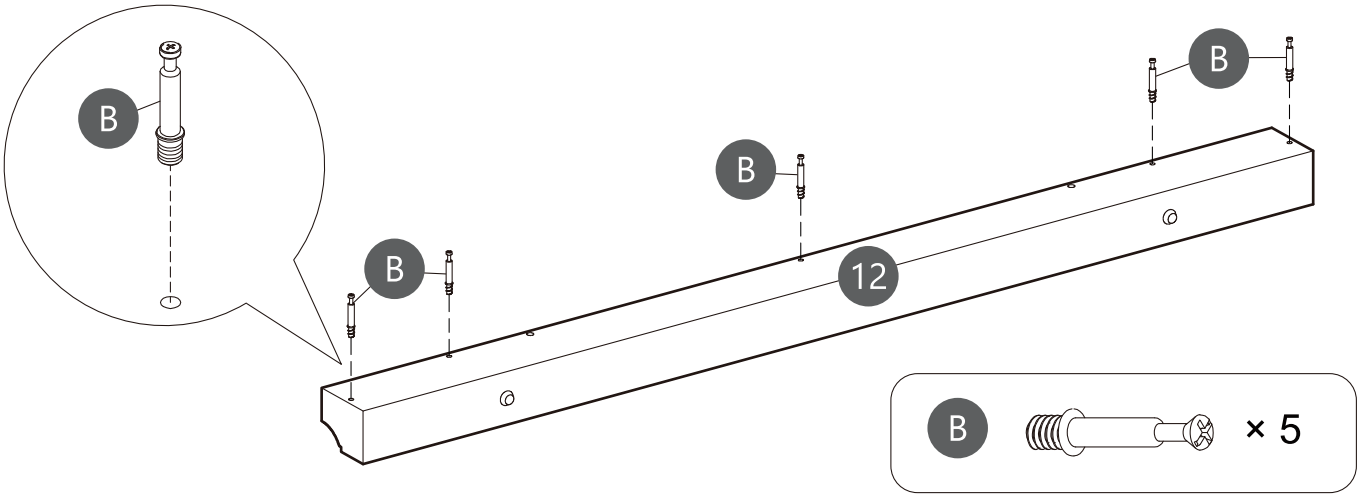

Step 7


Inserting Wooden Dowel (C) into Board (②), then Attach Board (⑫) to Board (②&③&④).
Using Cam Lock (A) Secure Board (⑫) to Board (②&③&④).

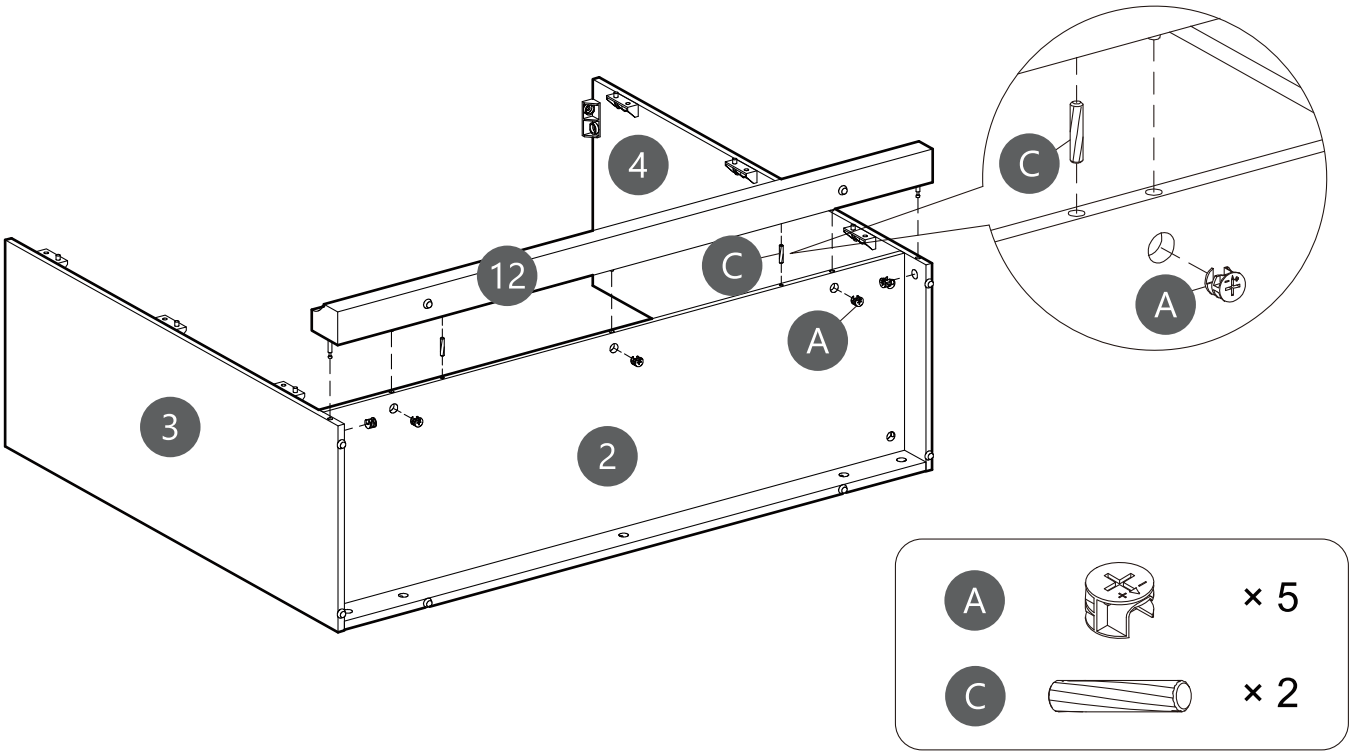

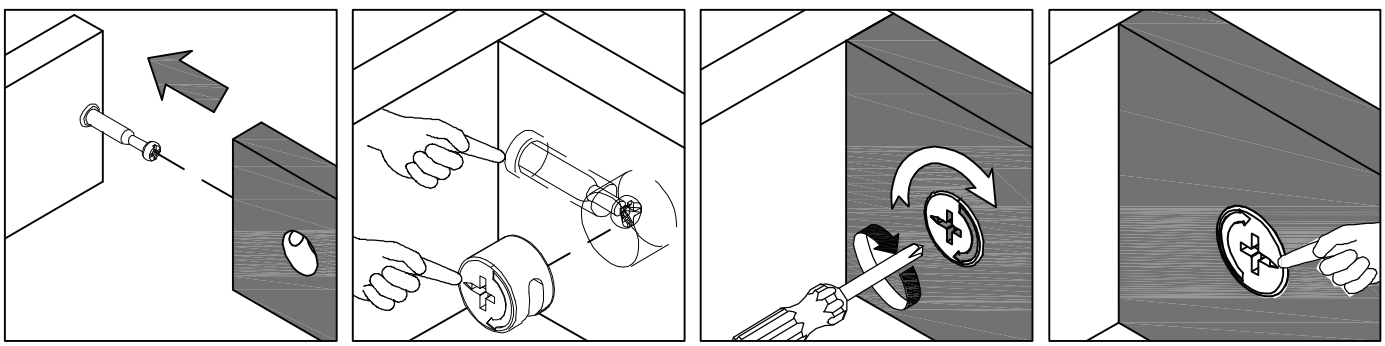


Step 8

Using Screws (G) and a 7-Shaped Wrench (P) Secure Connector (H) to Board (⑦).

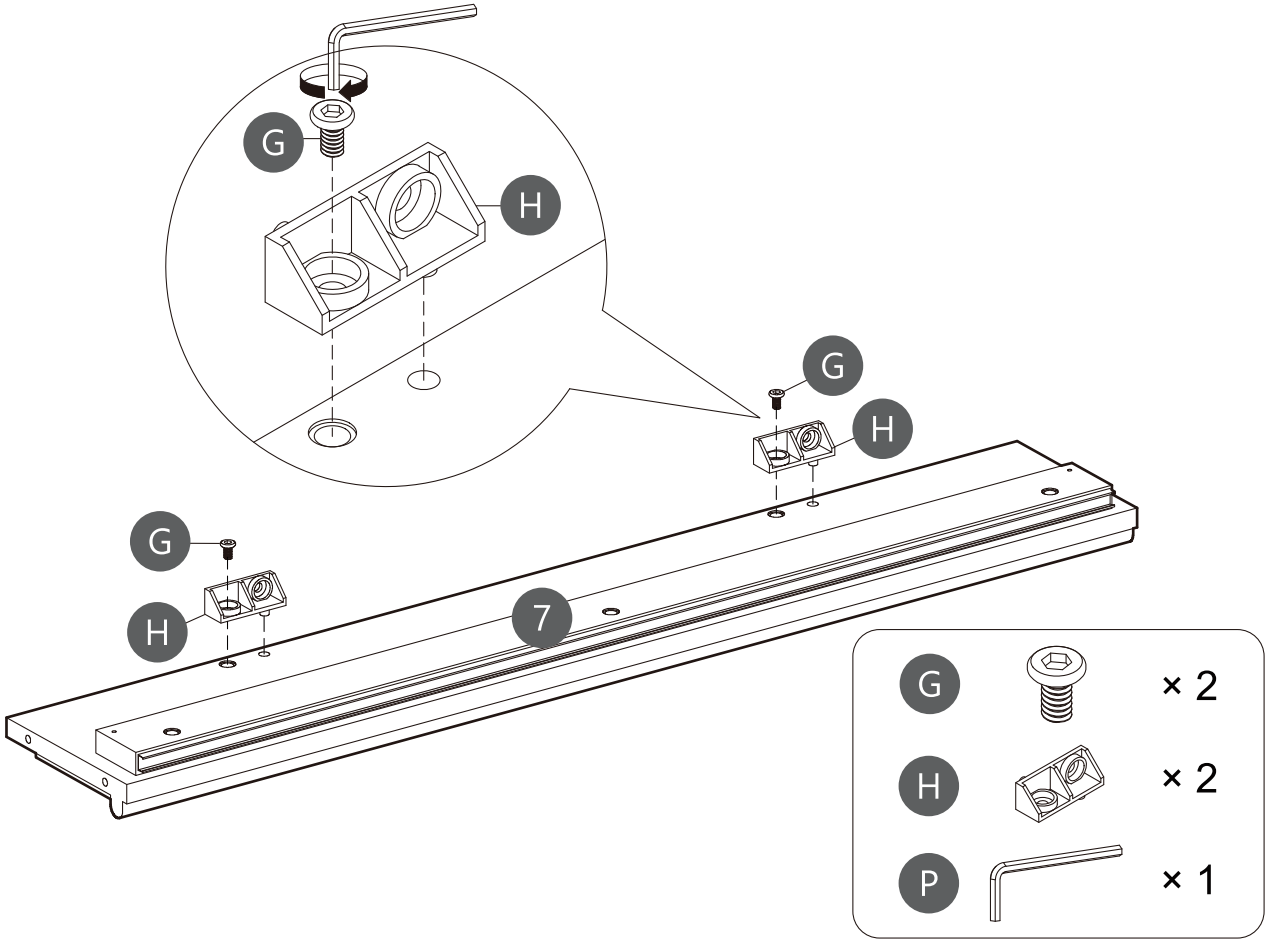


Step 9


Inserting Wooden Dowel (C) into Board (⑦), then attach Board (⑤&⑥) to Board (⑦).

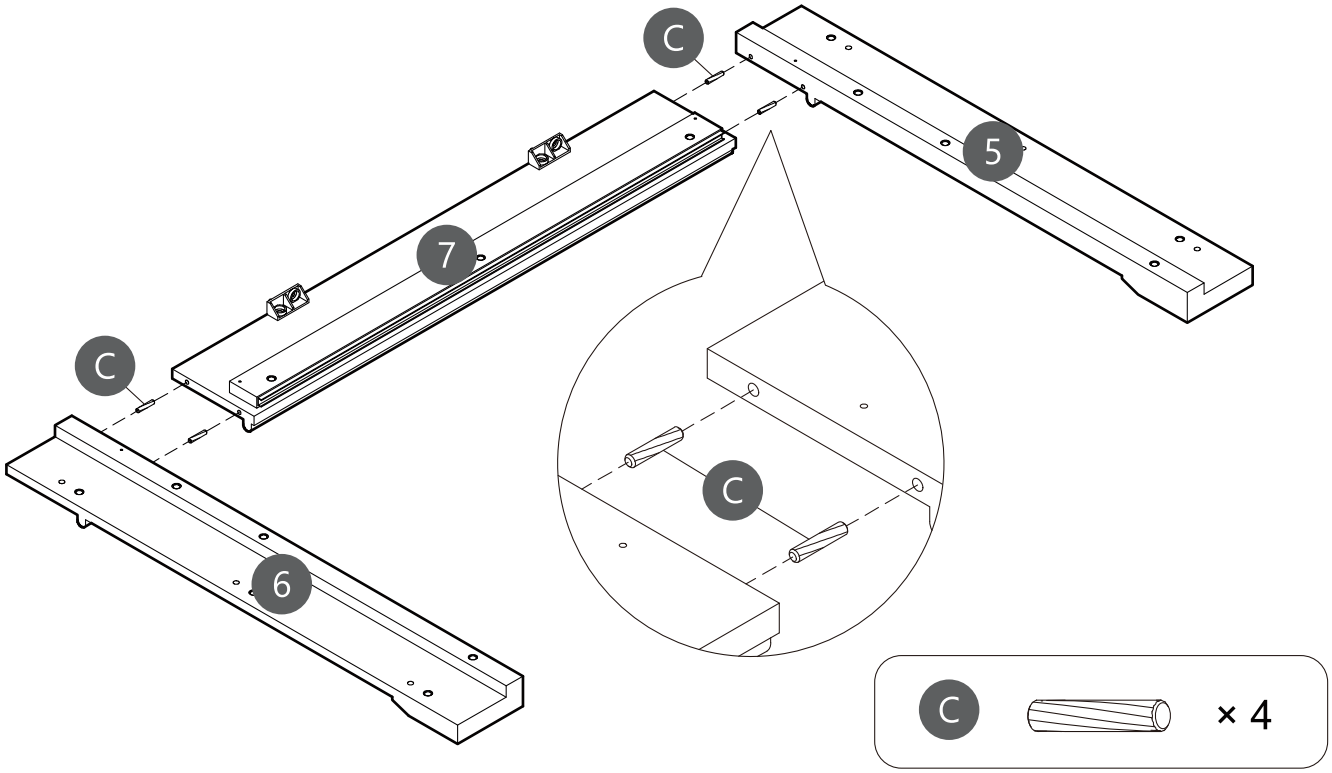

Step 10


Using Screws (D) secure Connector (E) to Board (⑤&⑦,⑥&⑦).

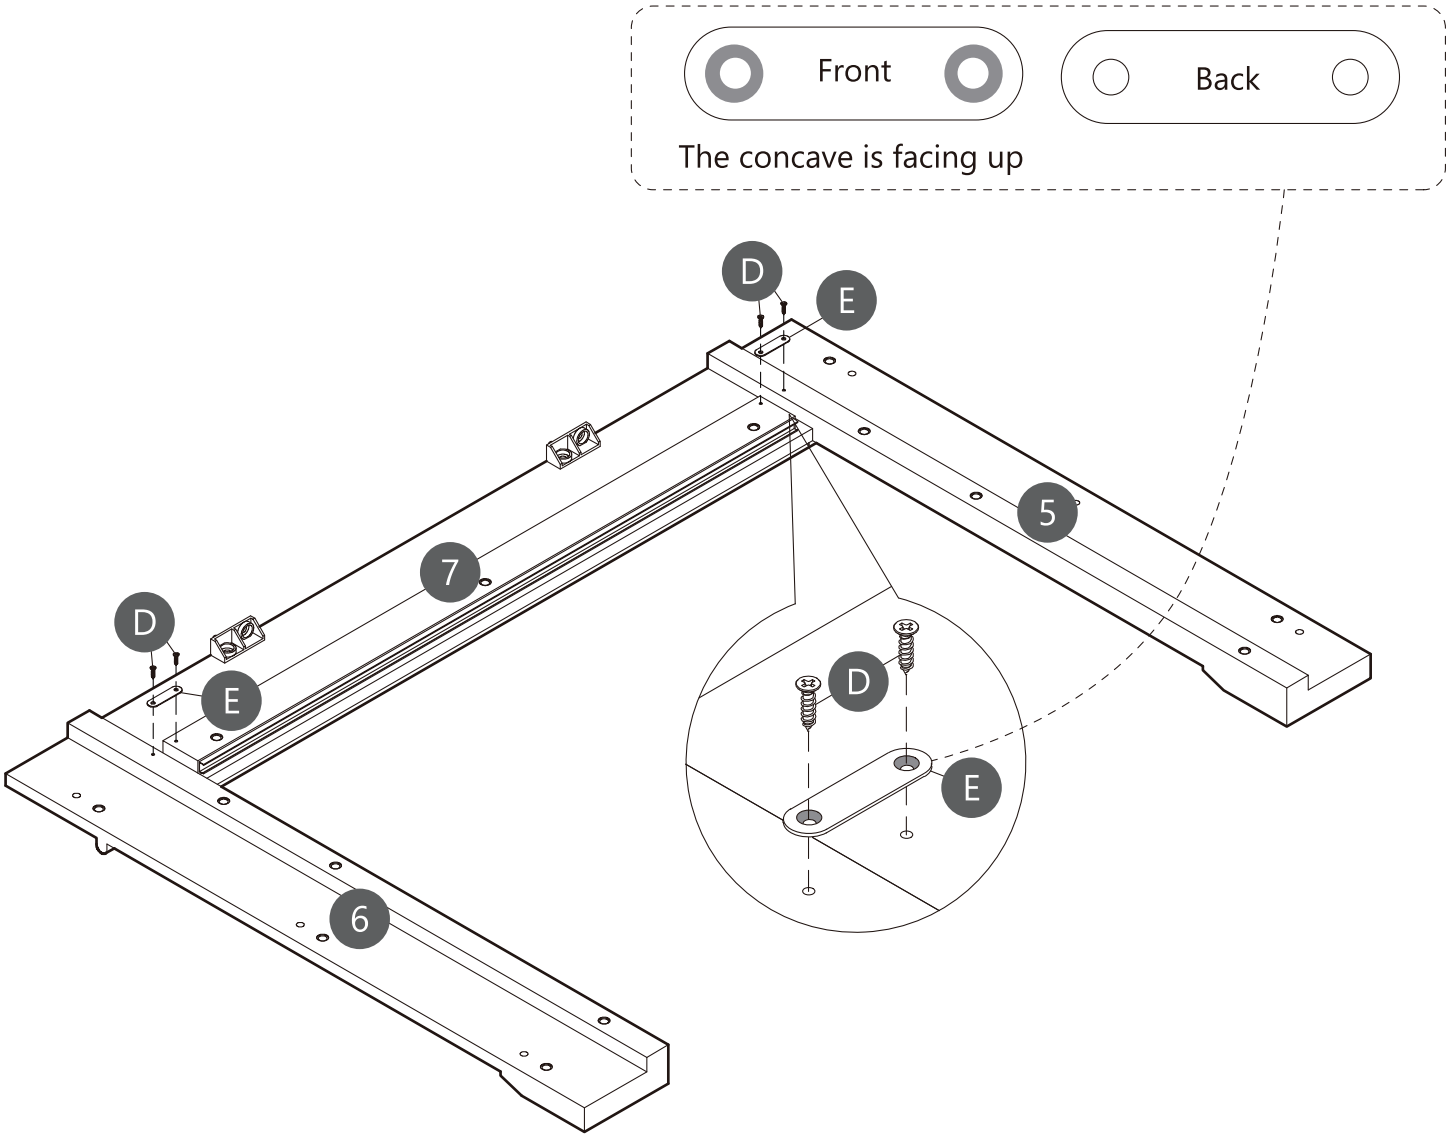


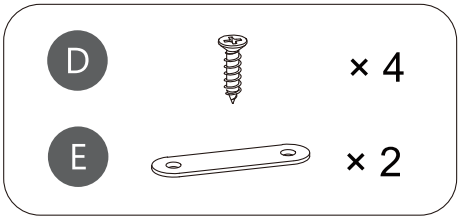

Step 11


Using Screws (G) and a 7-Shaped Wrench (P) secure Board (⑤&⑥) to Board (③&④).

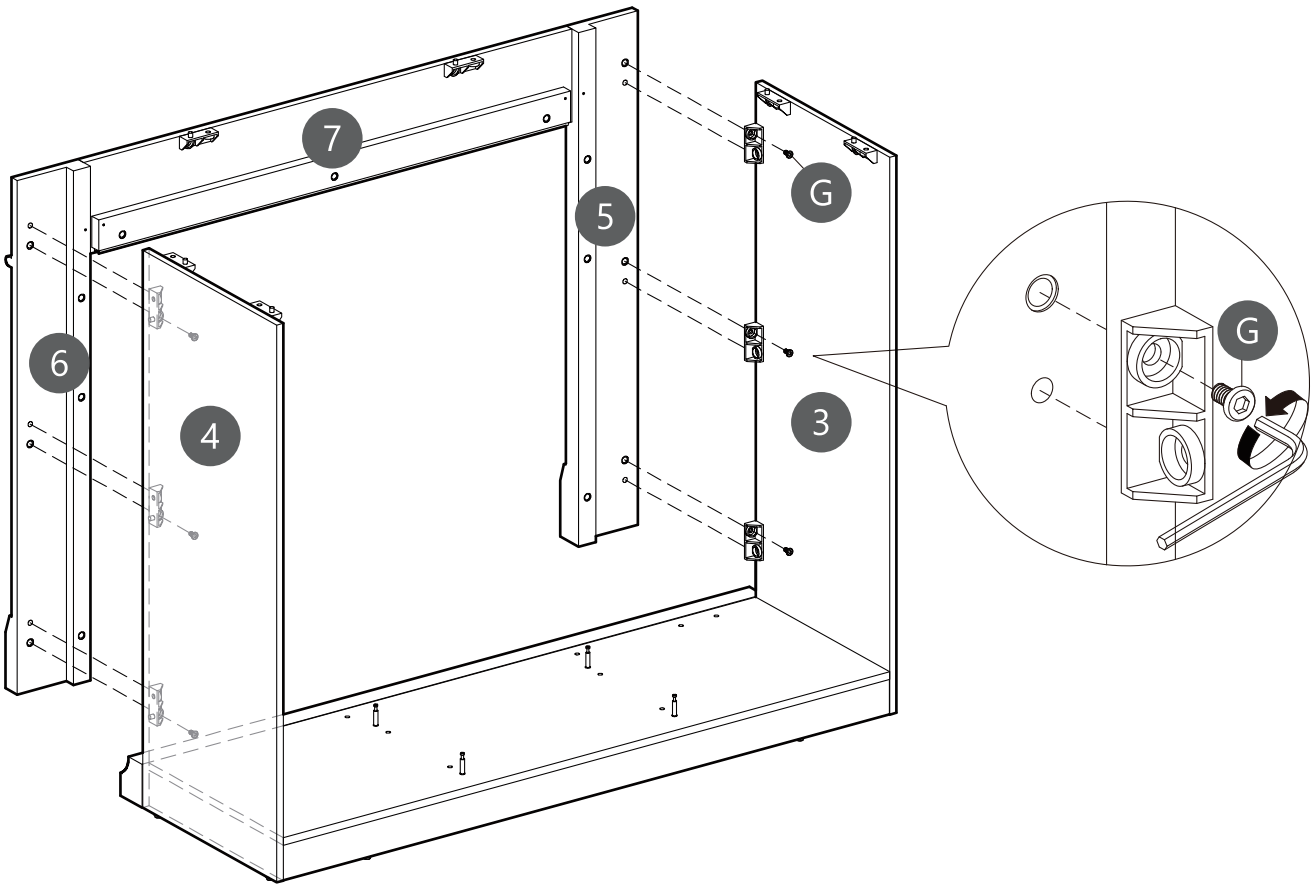

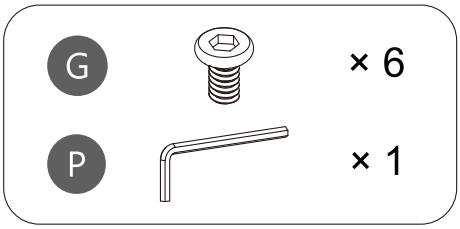

Step 12


Attach the LED Strip Light (V1) to Board (⑦).

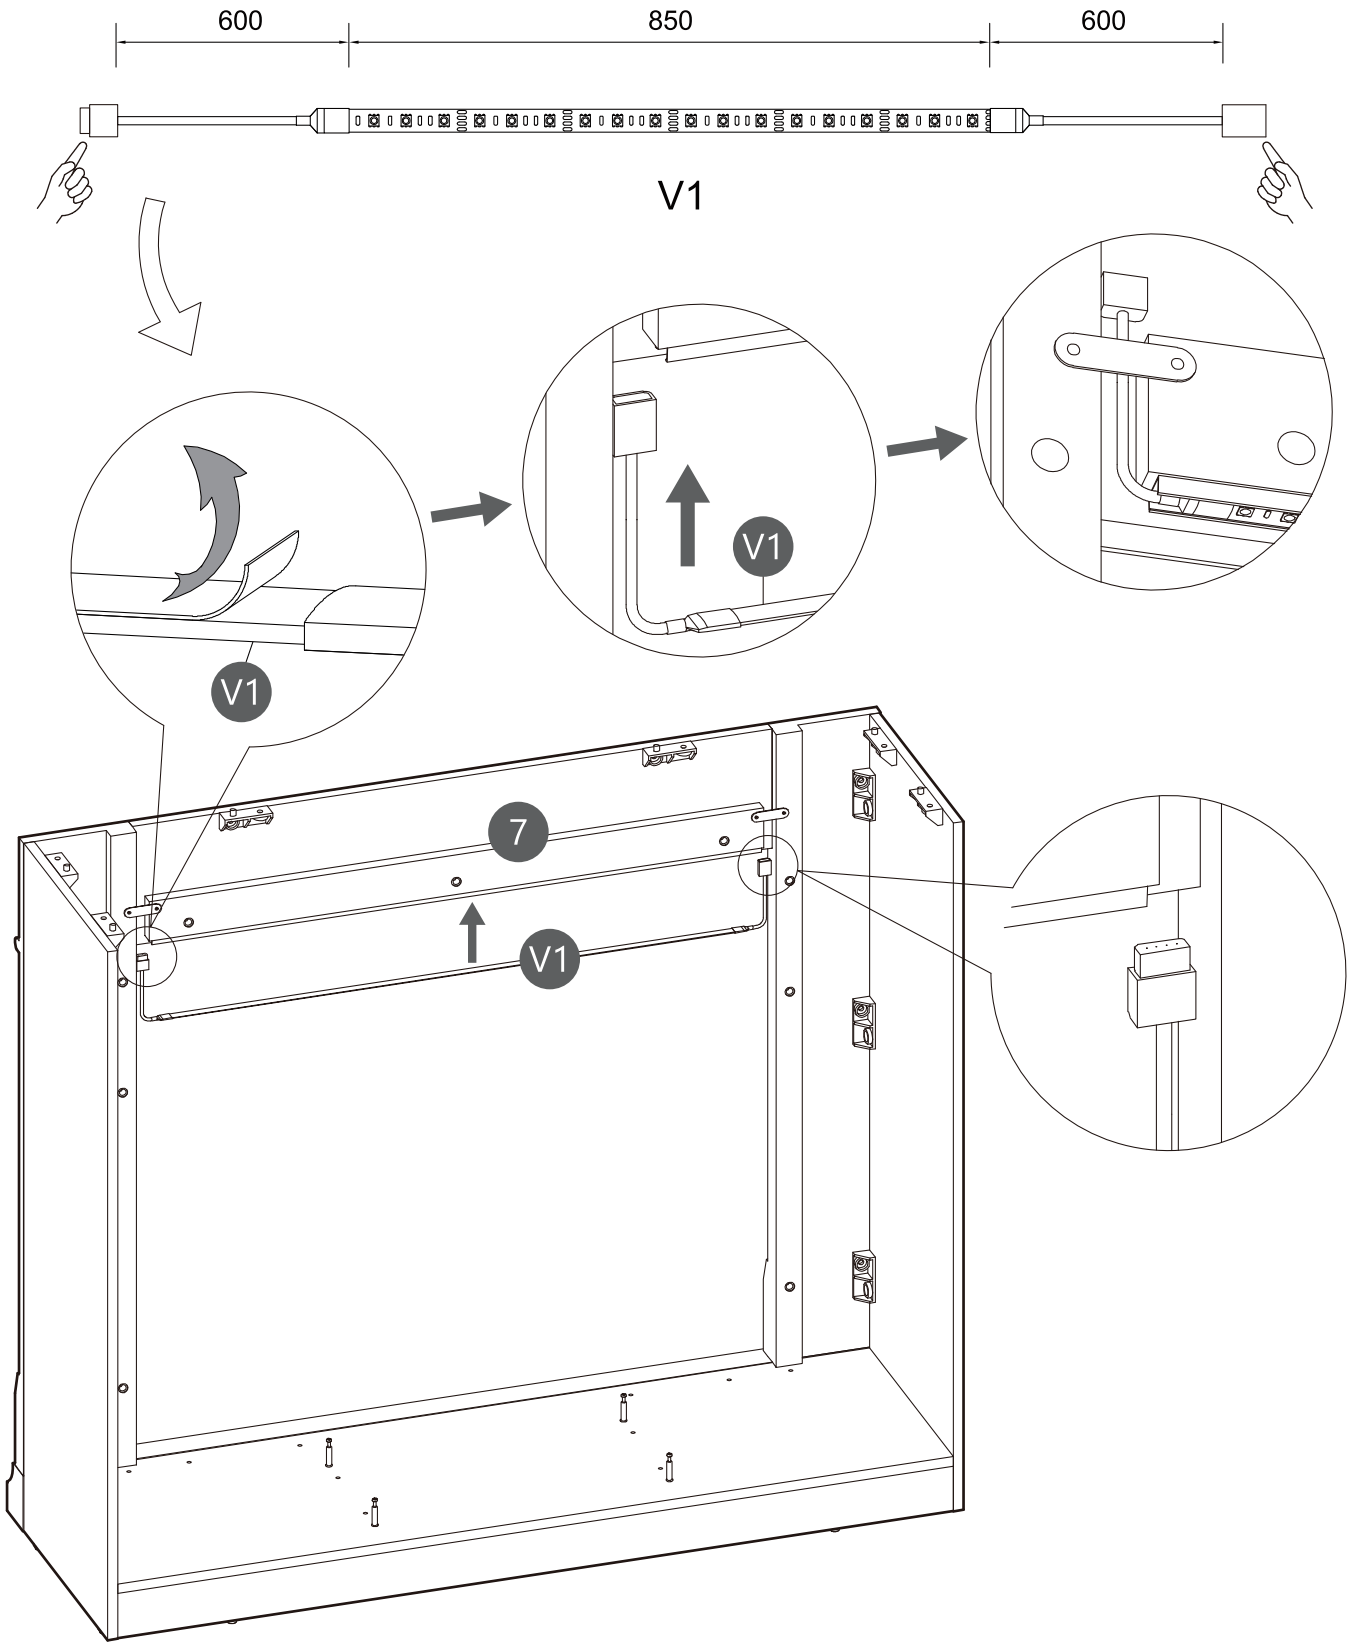

V1 × 1


Step 13

Inserting Wooden Dowel (C) into Board (⑧), then attach Board (⑨&⑩) to Board (⑧).

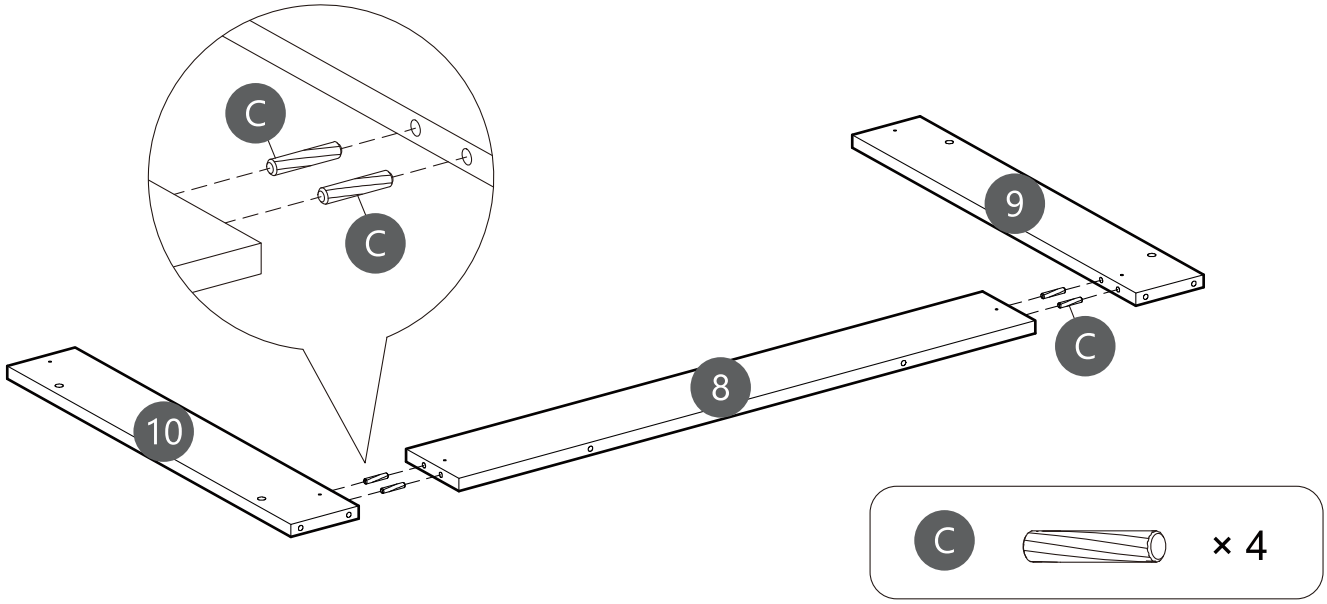


Step 14

Using Screws (D) secure Connector (E) to Board (⑧&⑨,⑧&⑩).

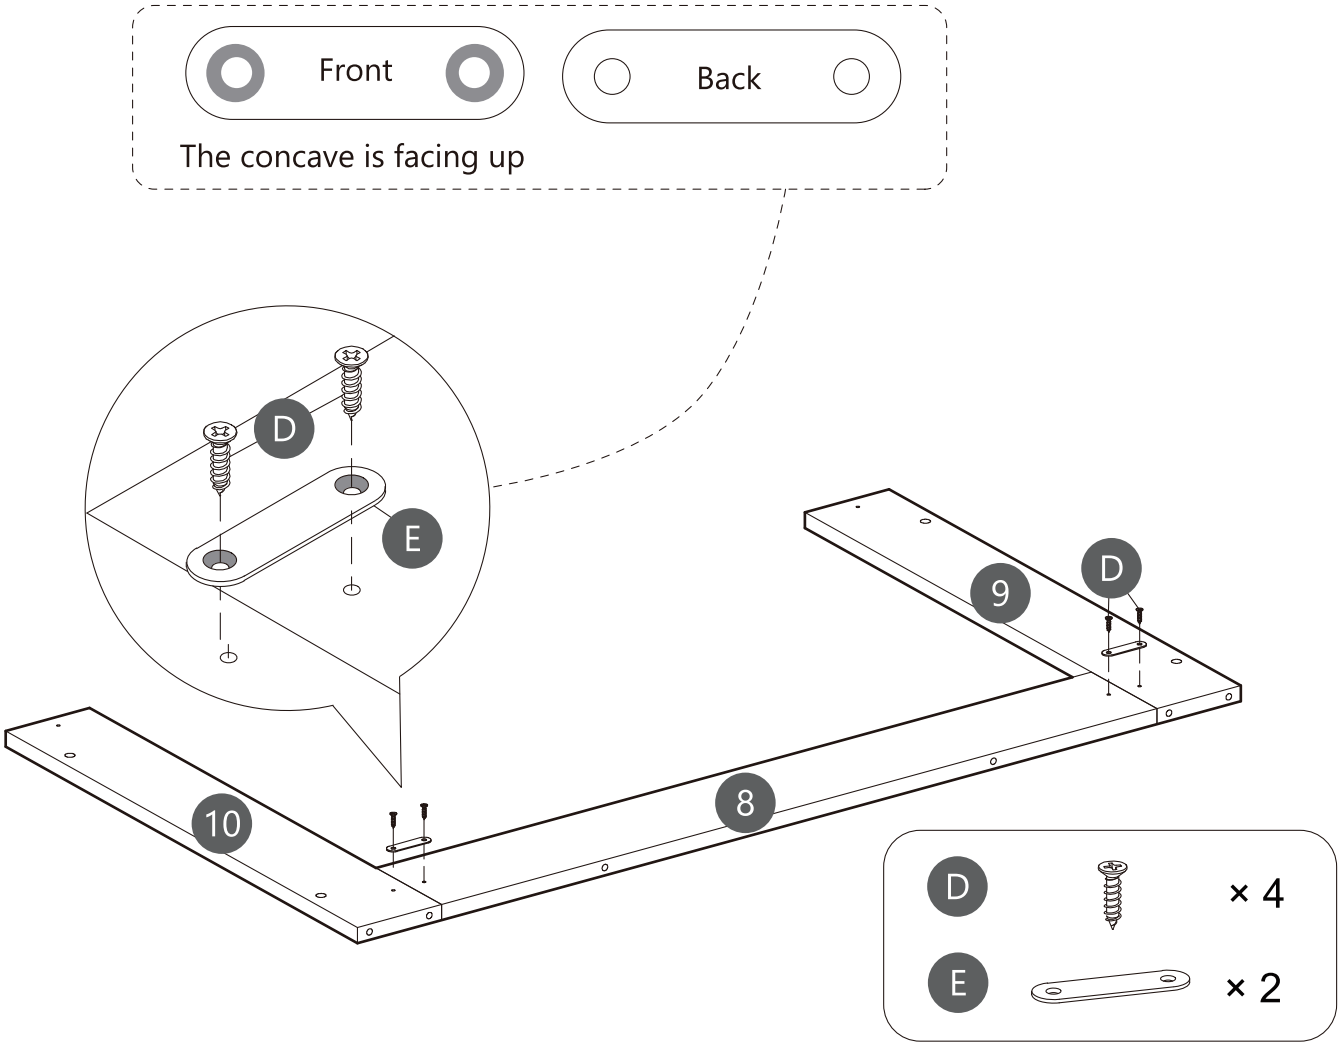


Step 15

Inserting Wooden Dowel (C) into Board (②), then attach Board (⑧&⑨&⑩) to Board (②).

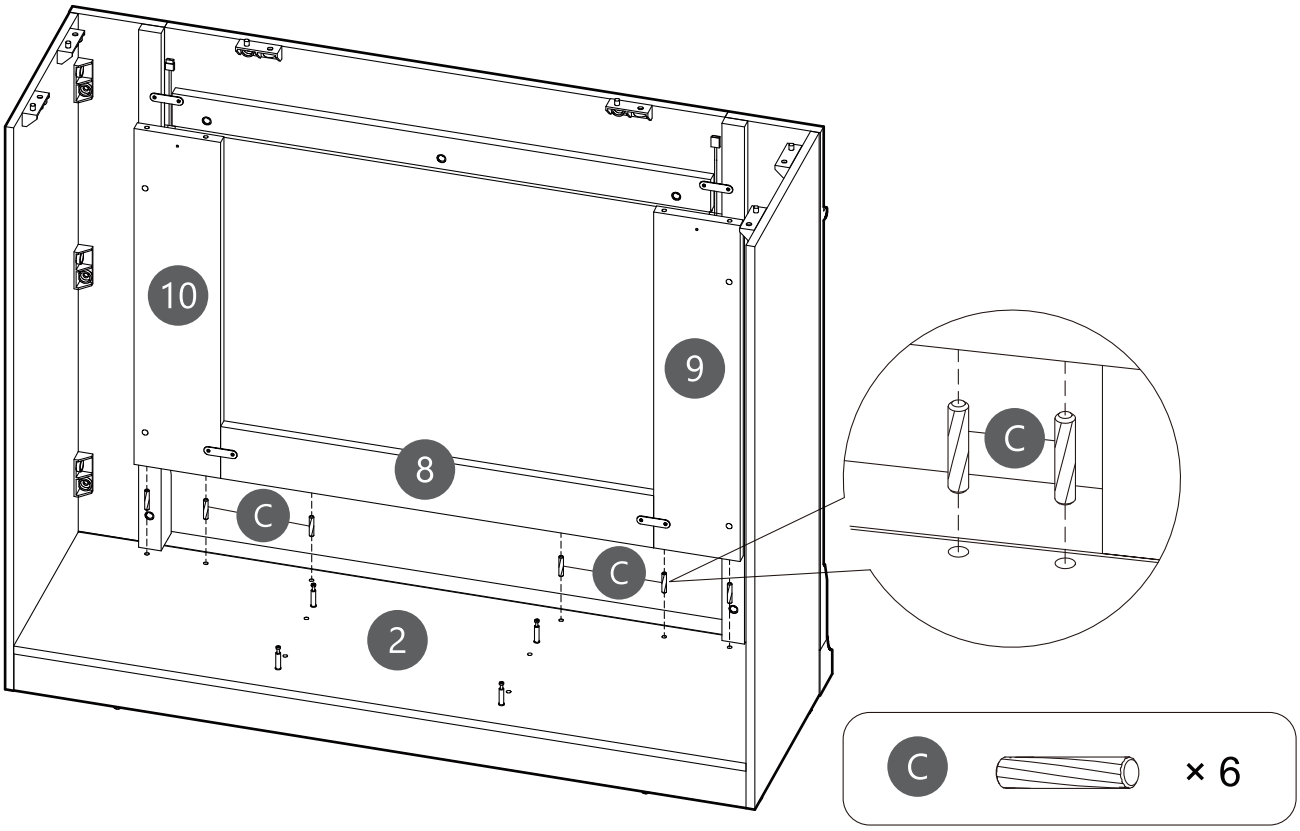


Step 16


Inserting Wooden Dowel (C) into Board (⑨&⑩), then attach Board (⑪) to Board (⑨&⑩).

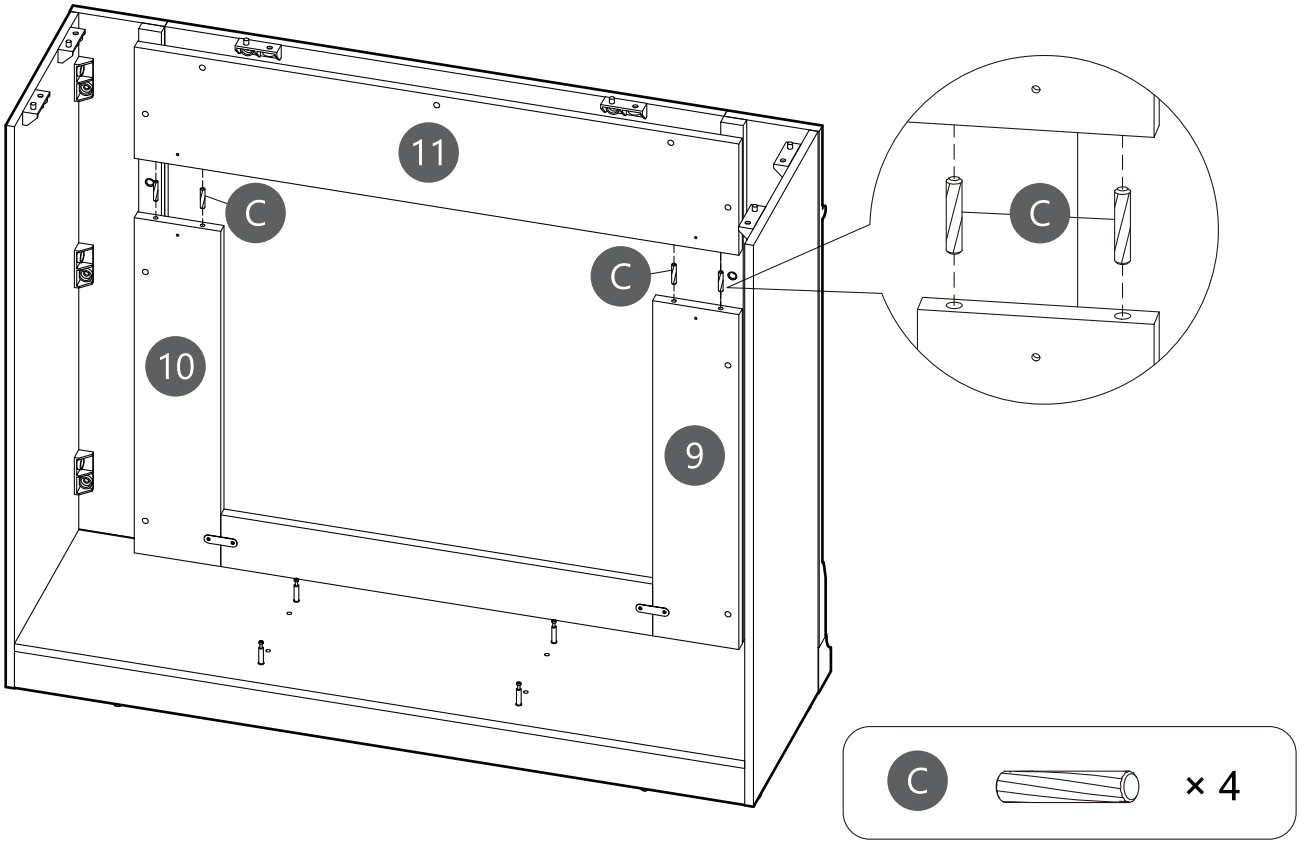

Step 17


Using a 7-Shaped Wrench (P) secure Screws (I) into Board (⑨&⑩&⑪).

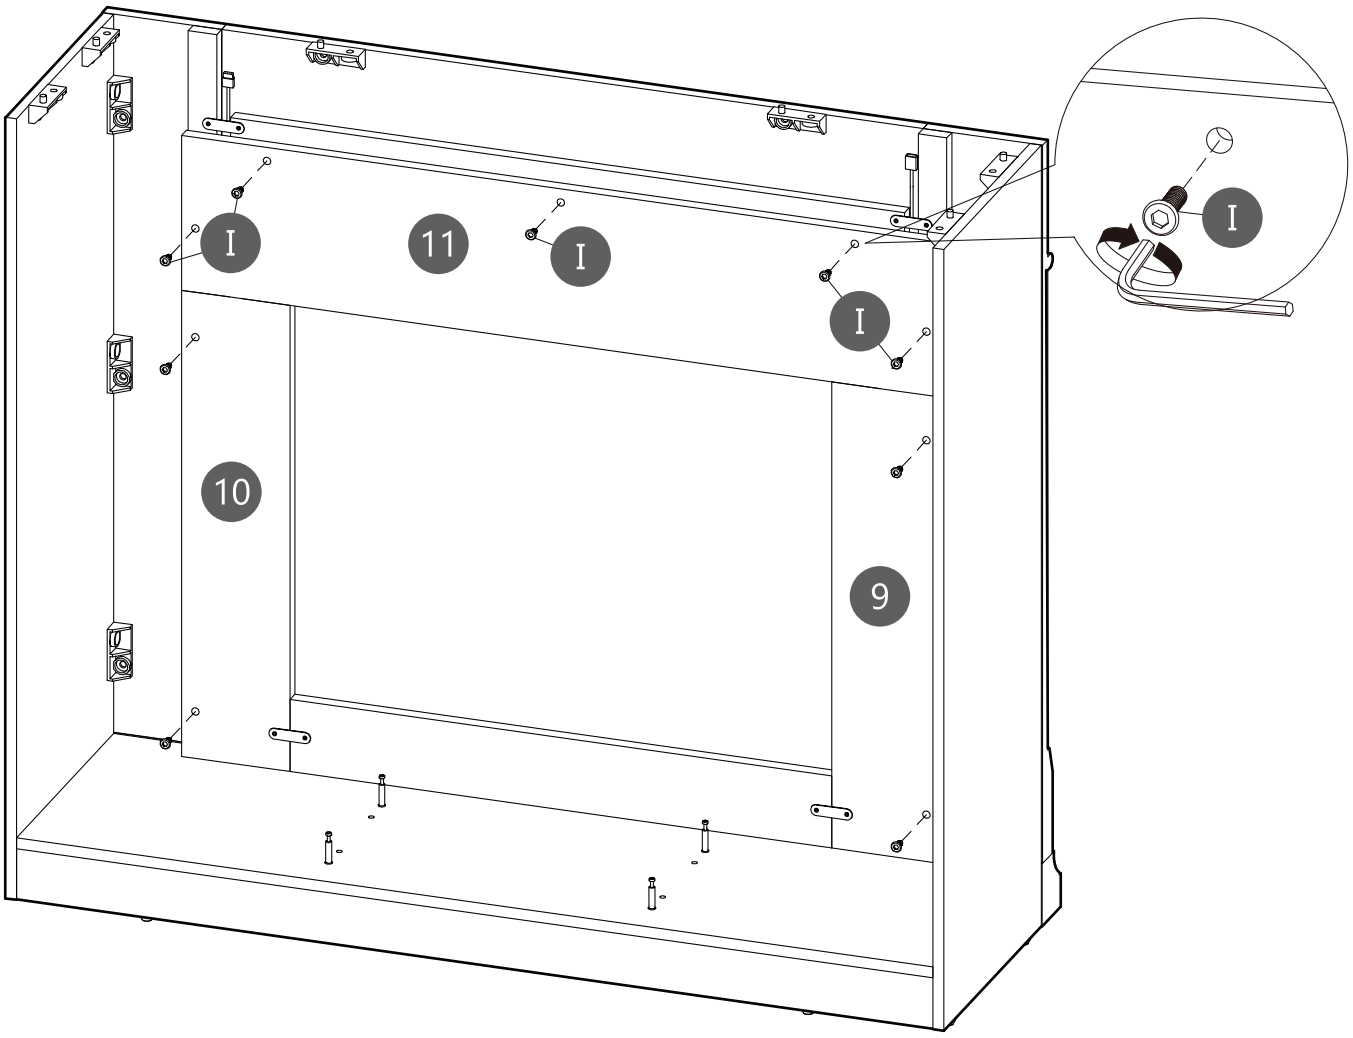


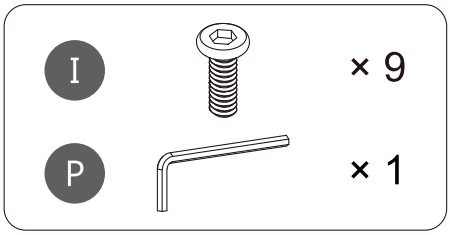

Step 18


Using Screws (D) secure Connector (E) to Board (⑨&⑪,⑩&⑪).

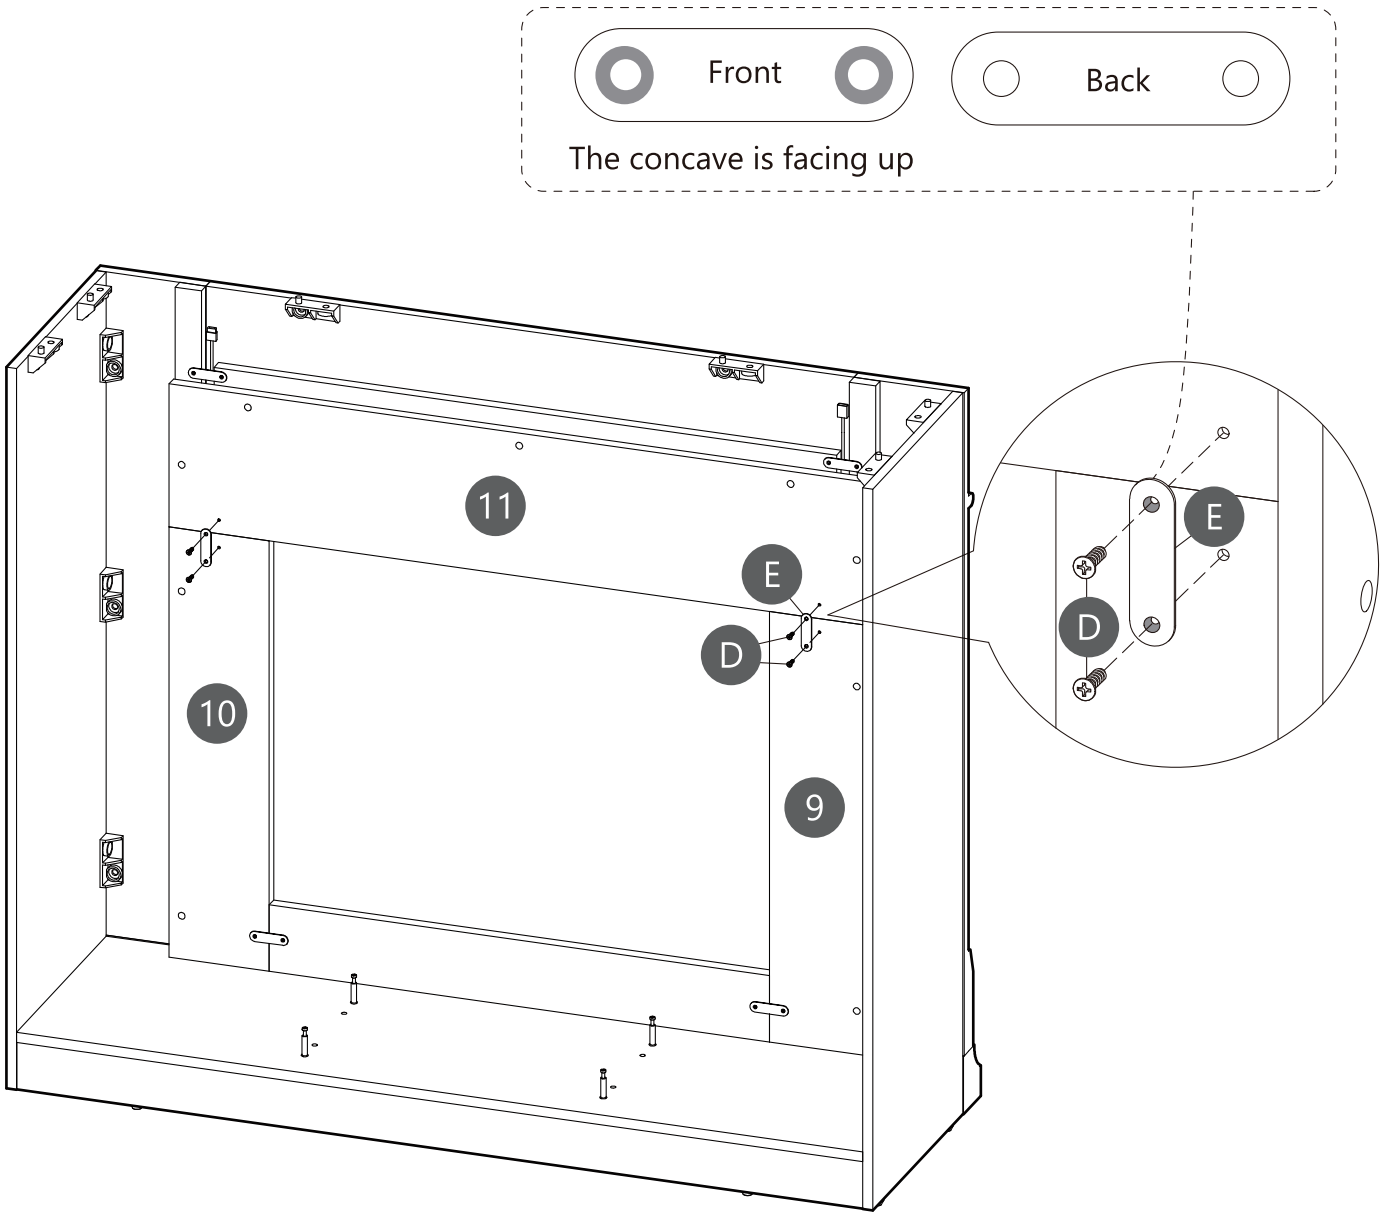


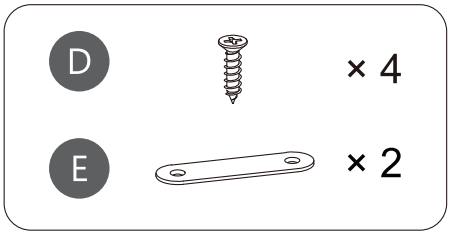


Step 19

Inserting Wooden Dowel (C) into Board (②), then attach Board (⑭) to Board (②).
Using Cam Lock (A) secure Board (⑭) to Board (②).

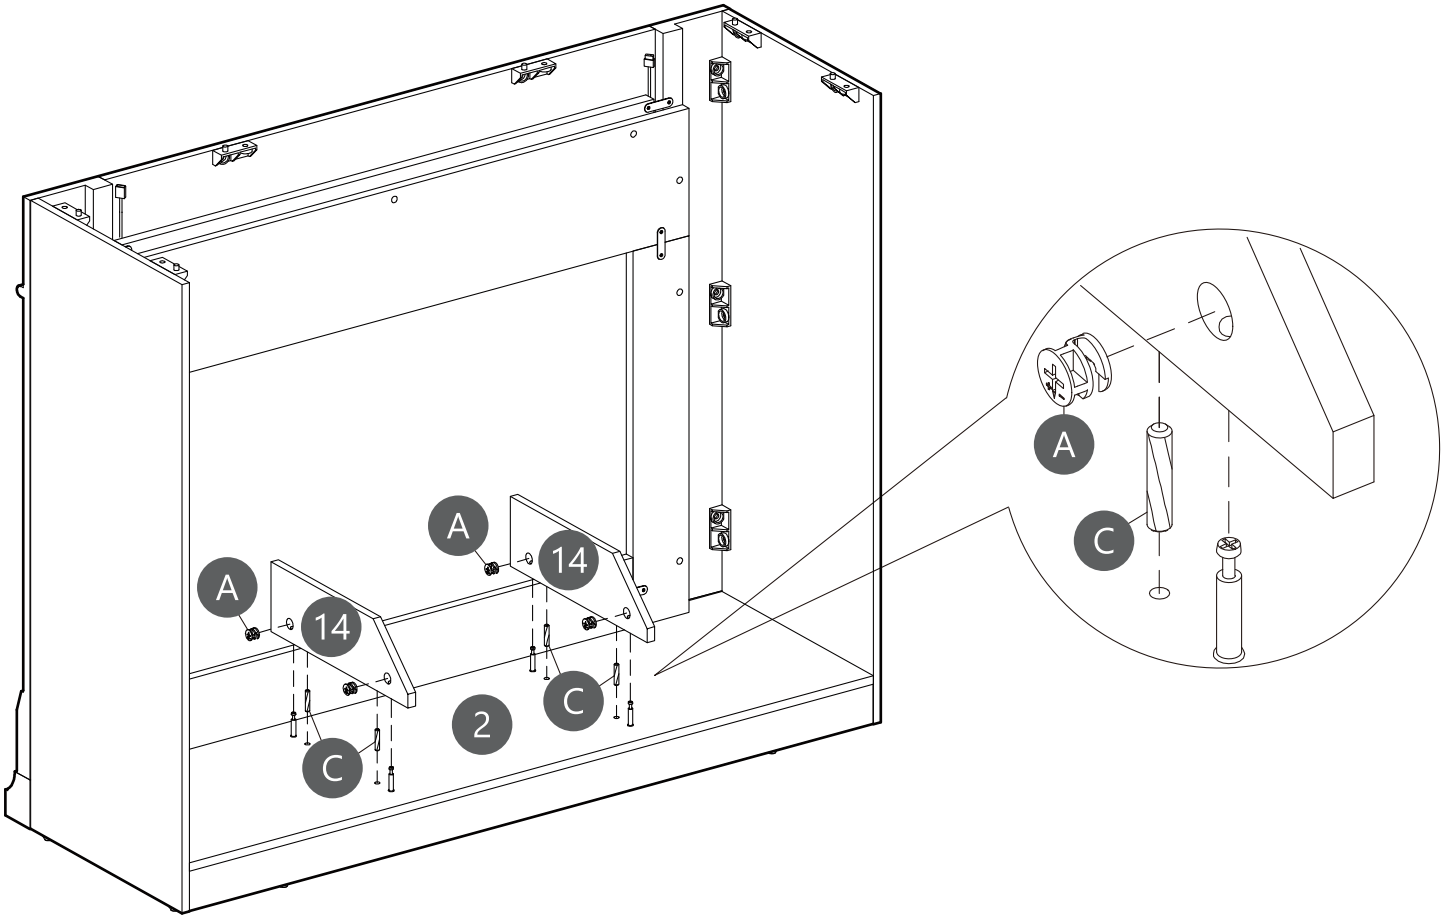


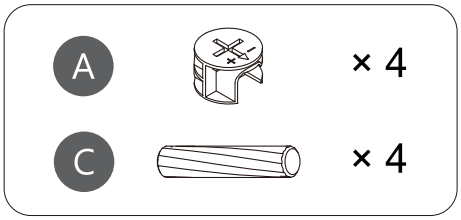


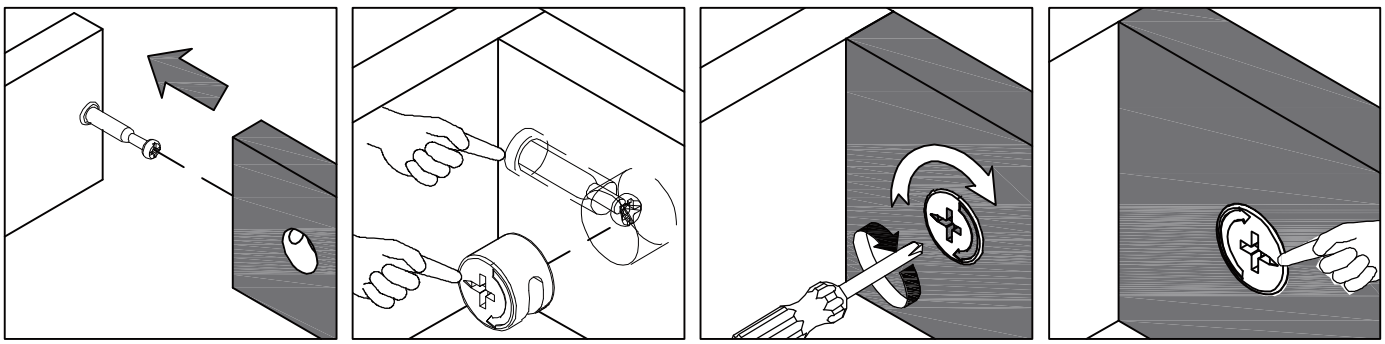

Step 20


Using a 7-Shaped Wrench (P) secure Screws (G) Through Connector (H) secure Board (①) to Board (③&④&⑦).

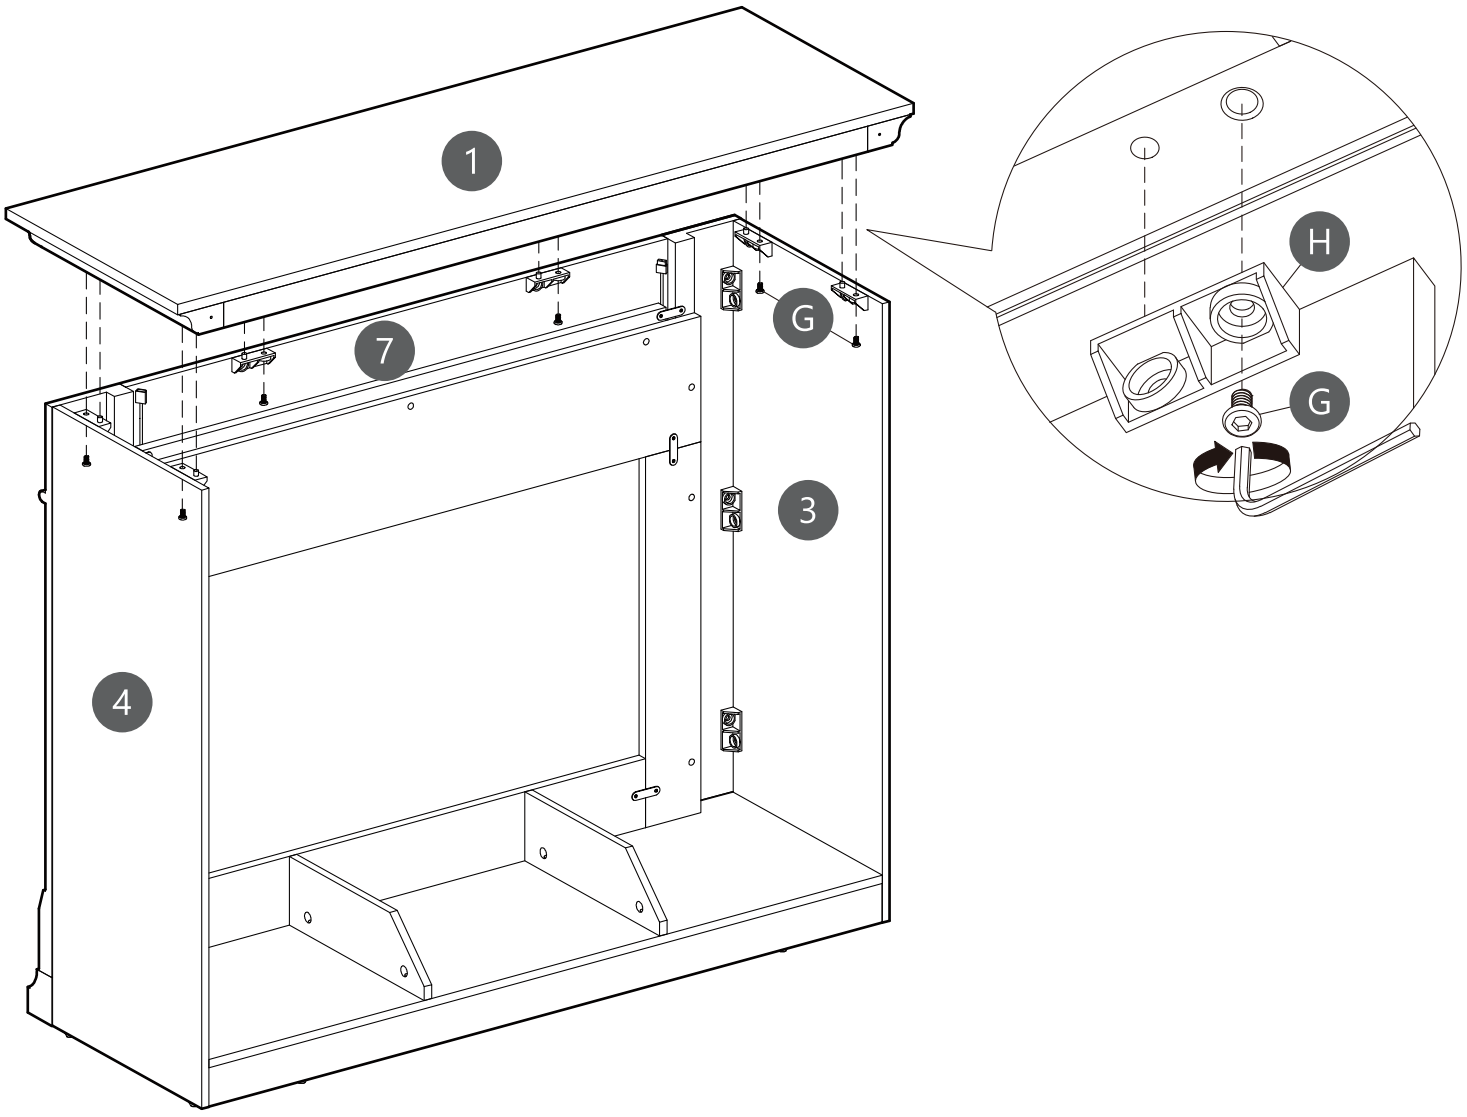


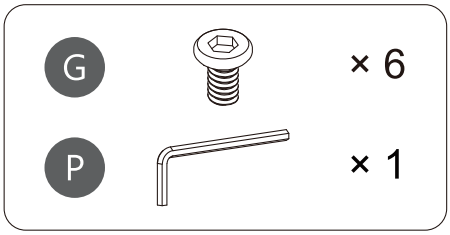

Step 21


Connect Accessories(V3)&(V5) to the Light Strip (V1).

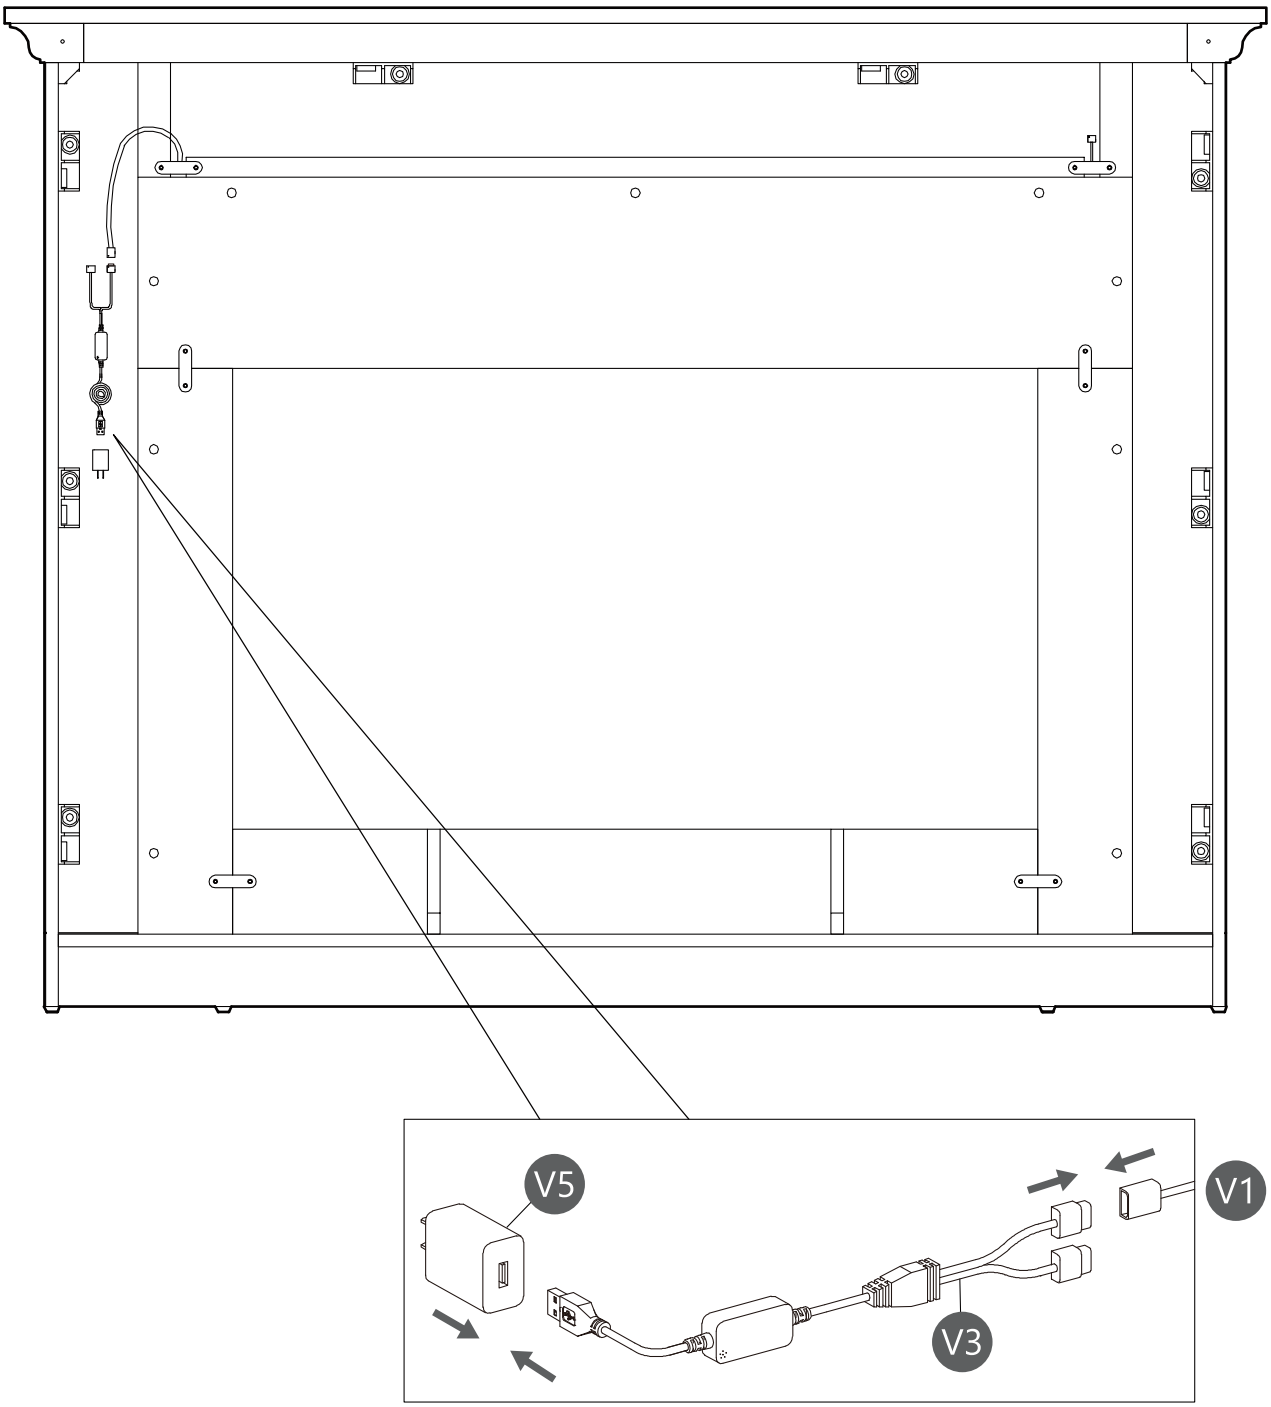


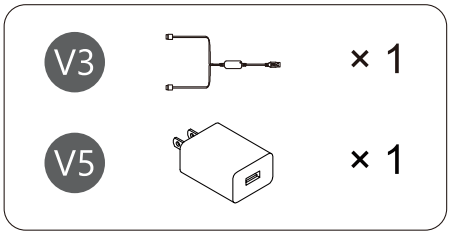

Step 22


Using Screws (D&V4) attach Light Strip to Board (④).

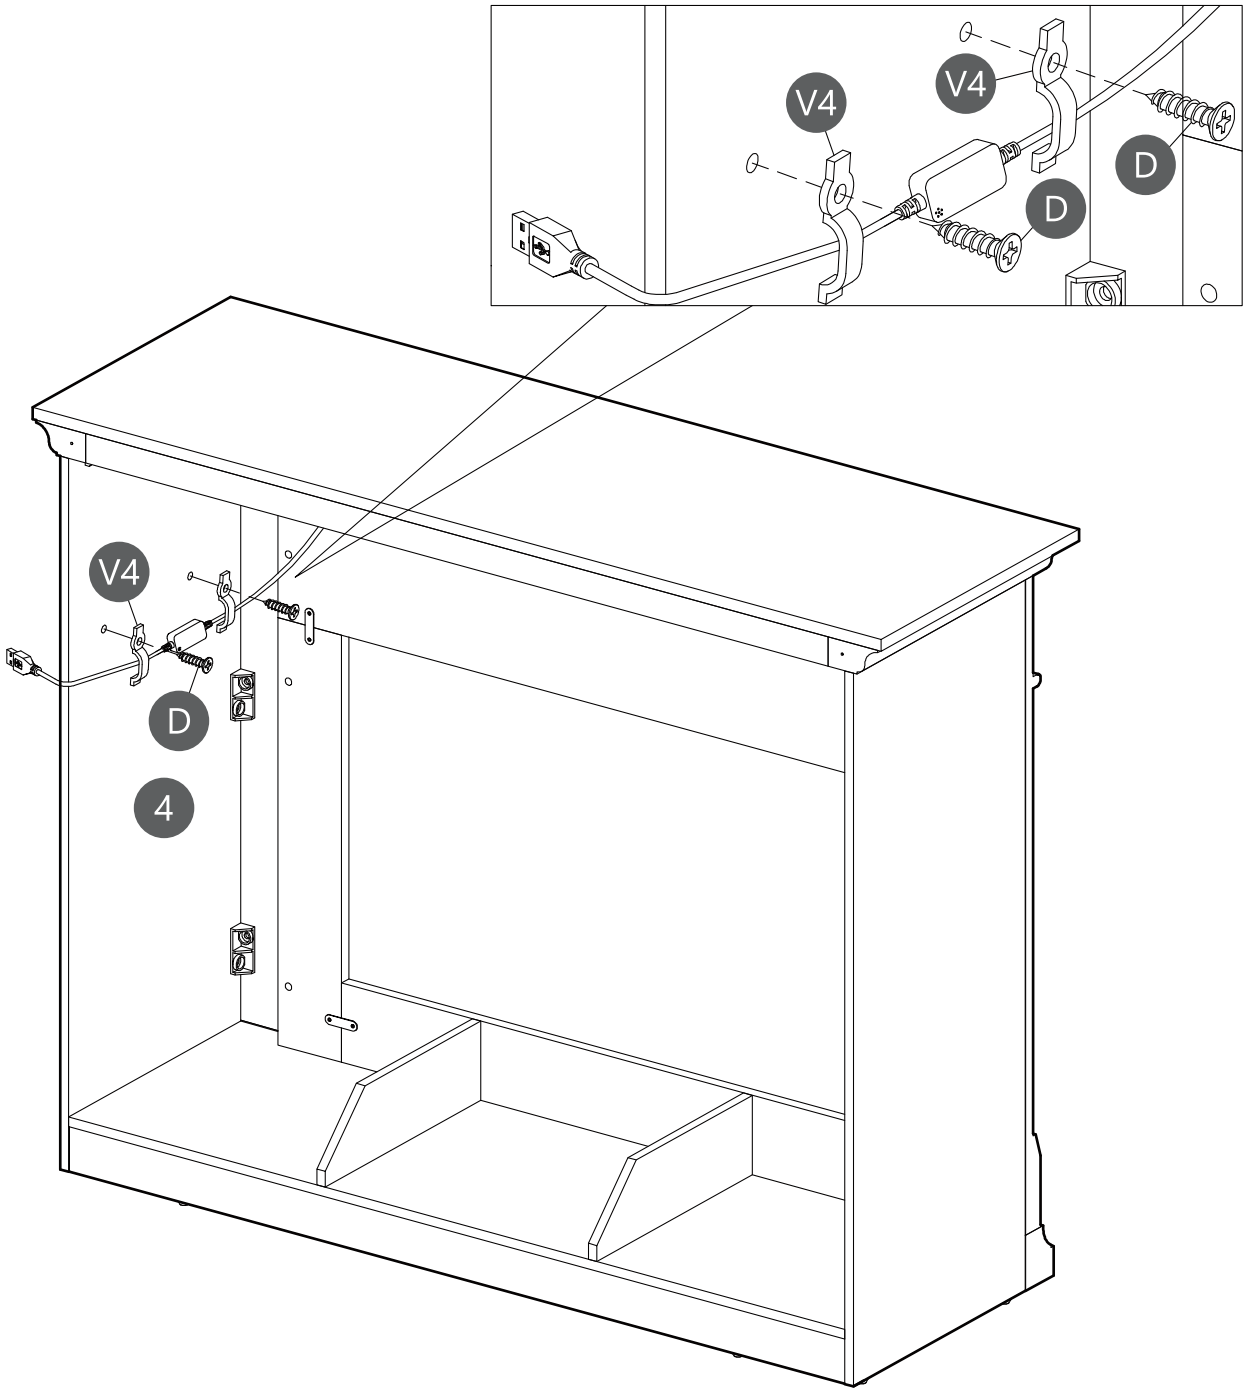


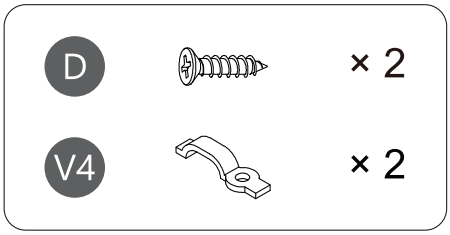

Step 23


Using Screws (F) secure Anti-tipping Belt (M) to Board (①).

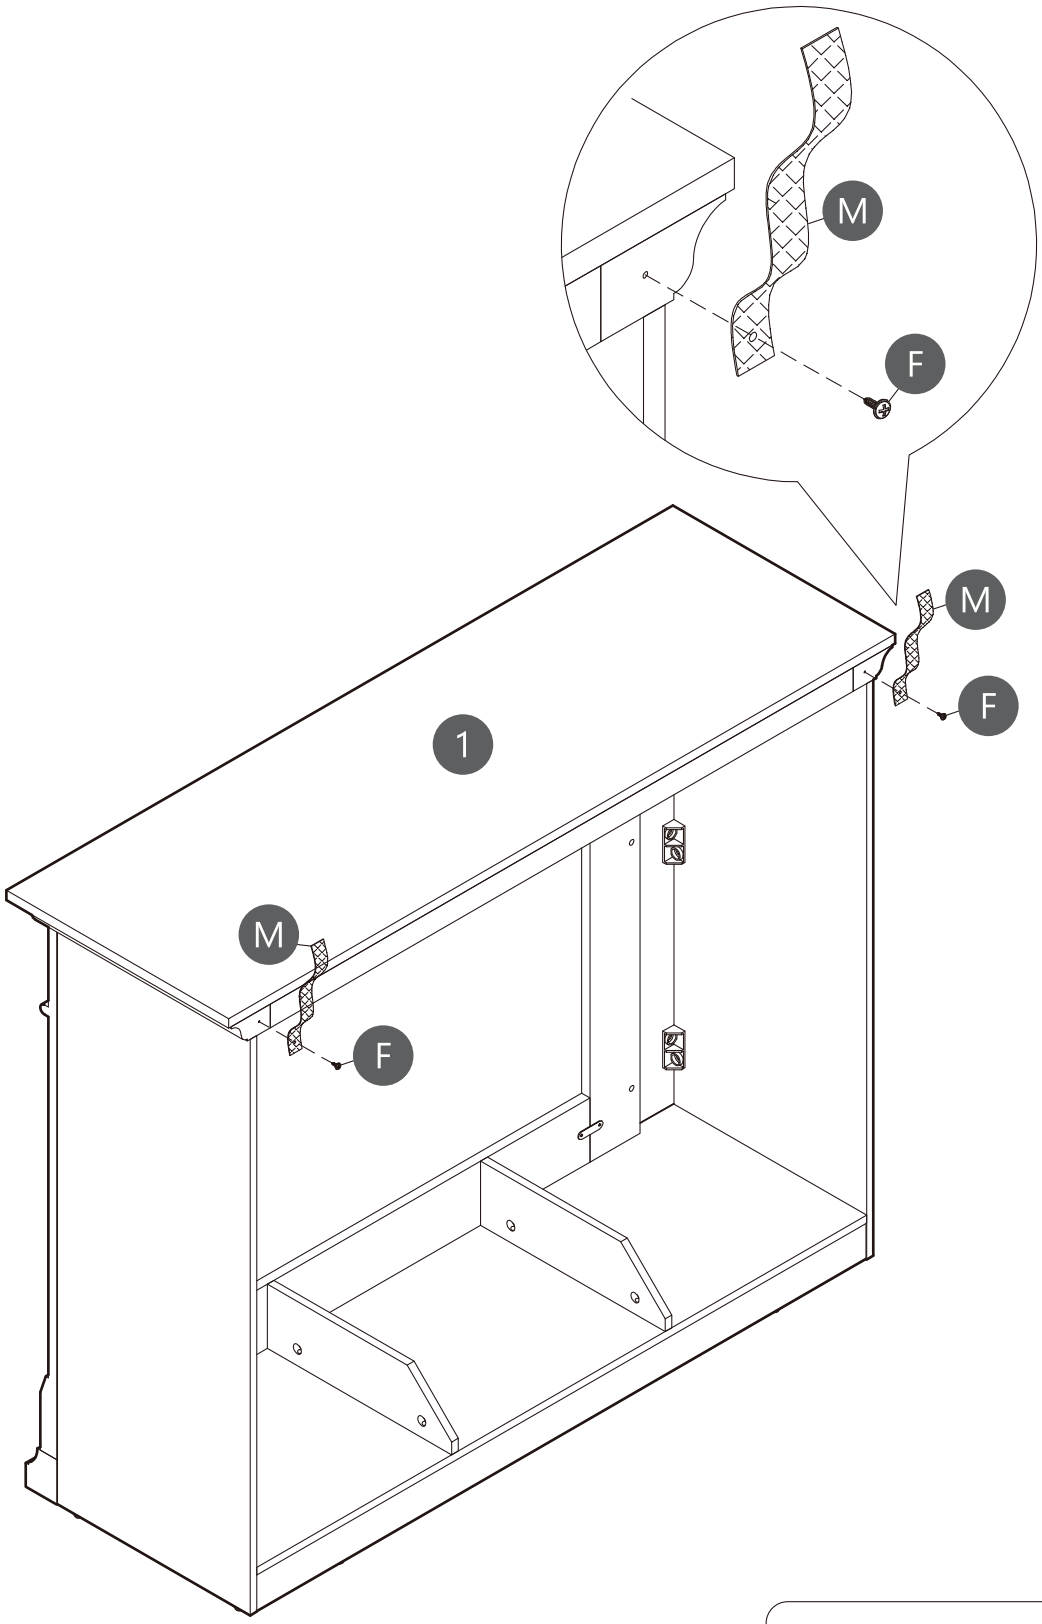


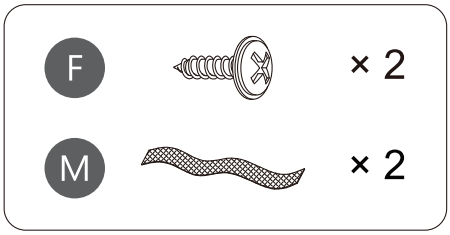

Step 24


Drill 2 holes in the wall and Hammer the (N) in.

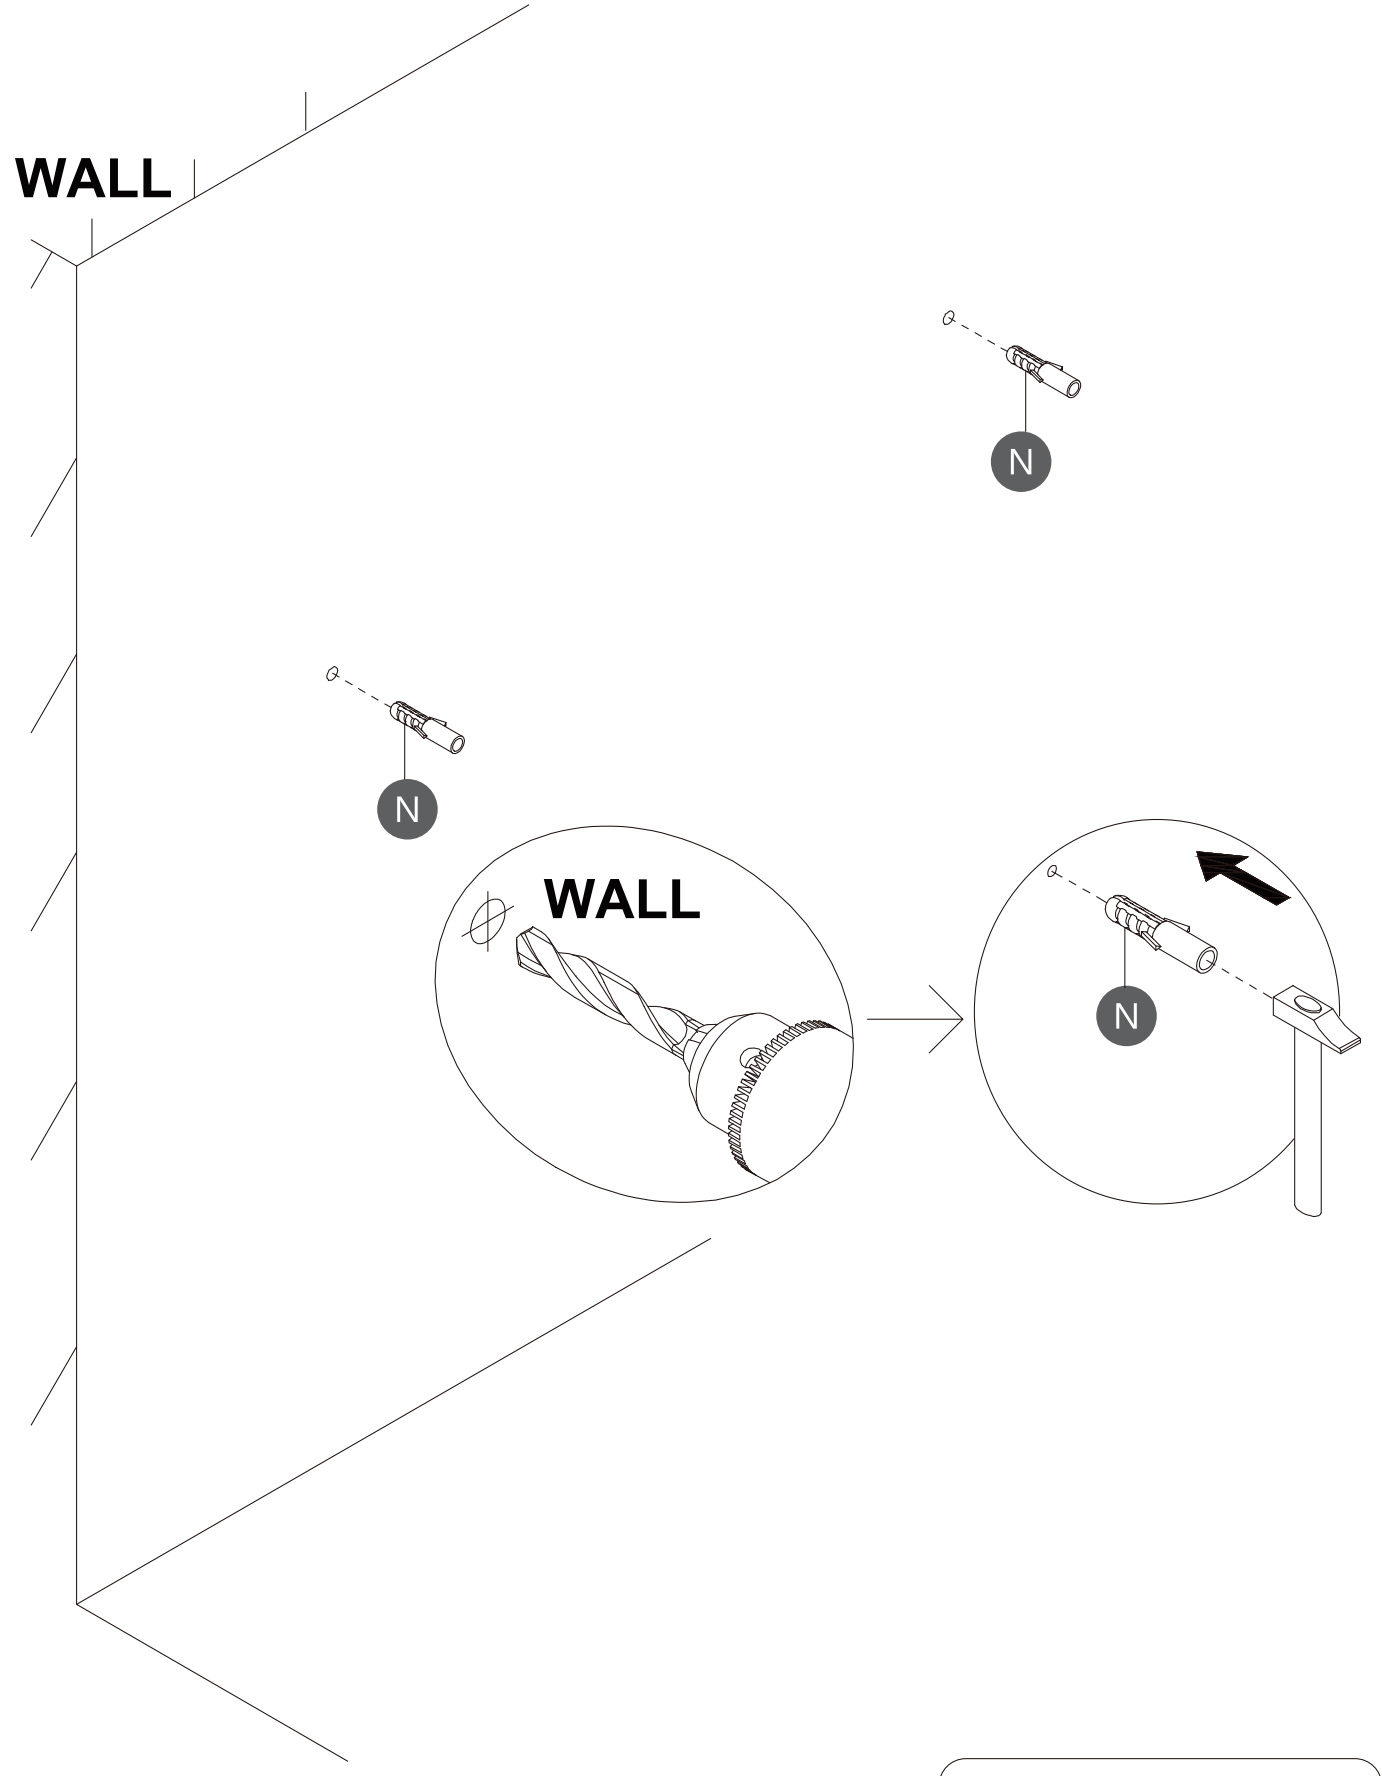

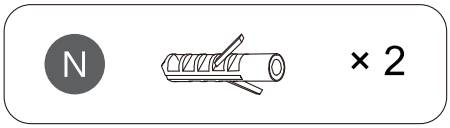

Step 25


Using Screw (O) attach Anti-tipping Belt (M) into Nut (N) to wall.

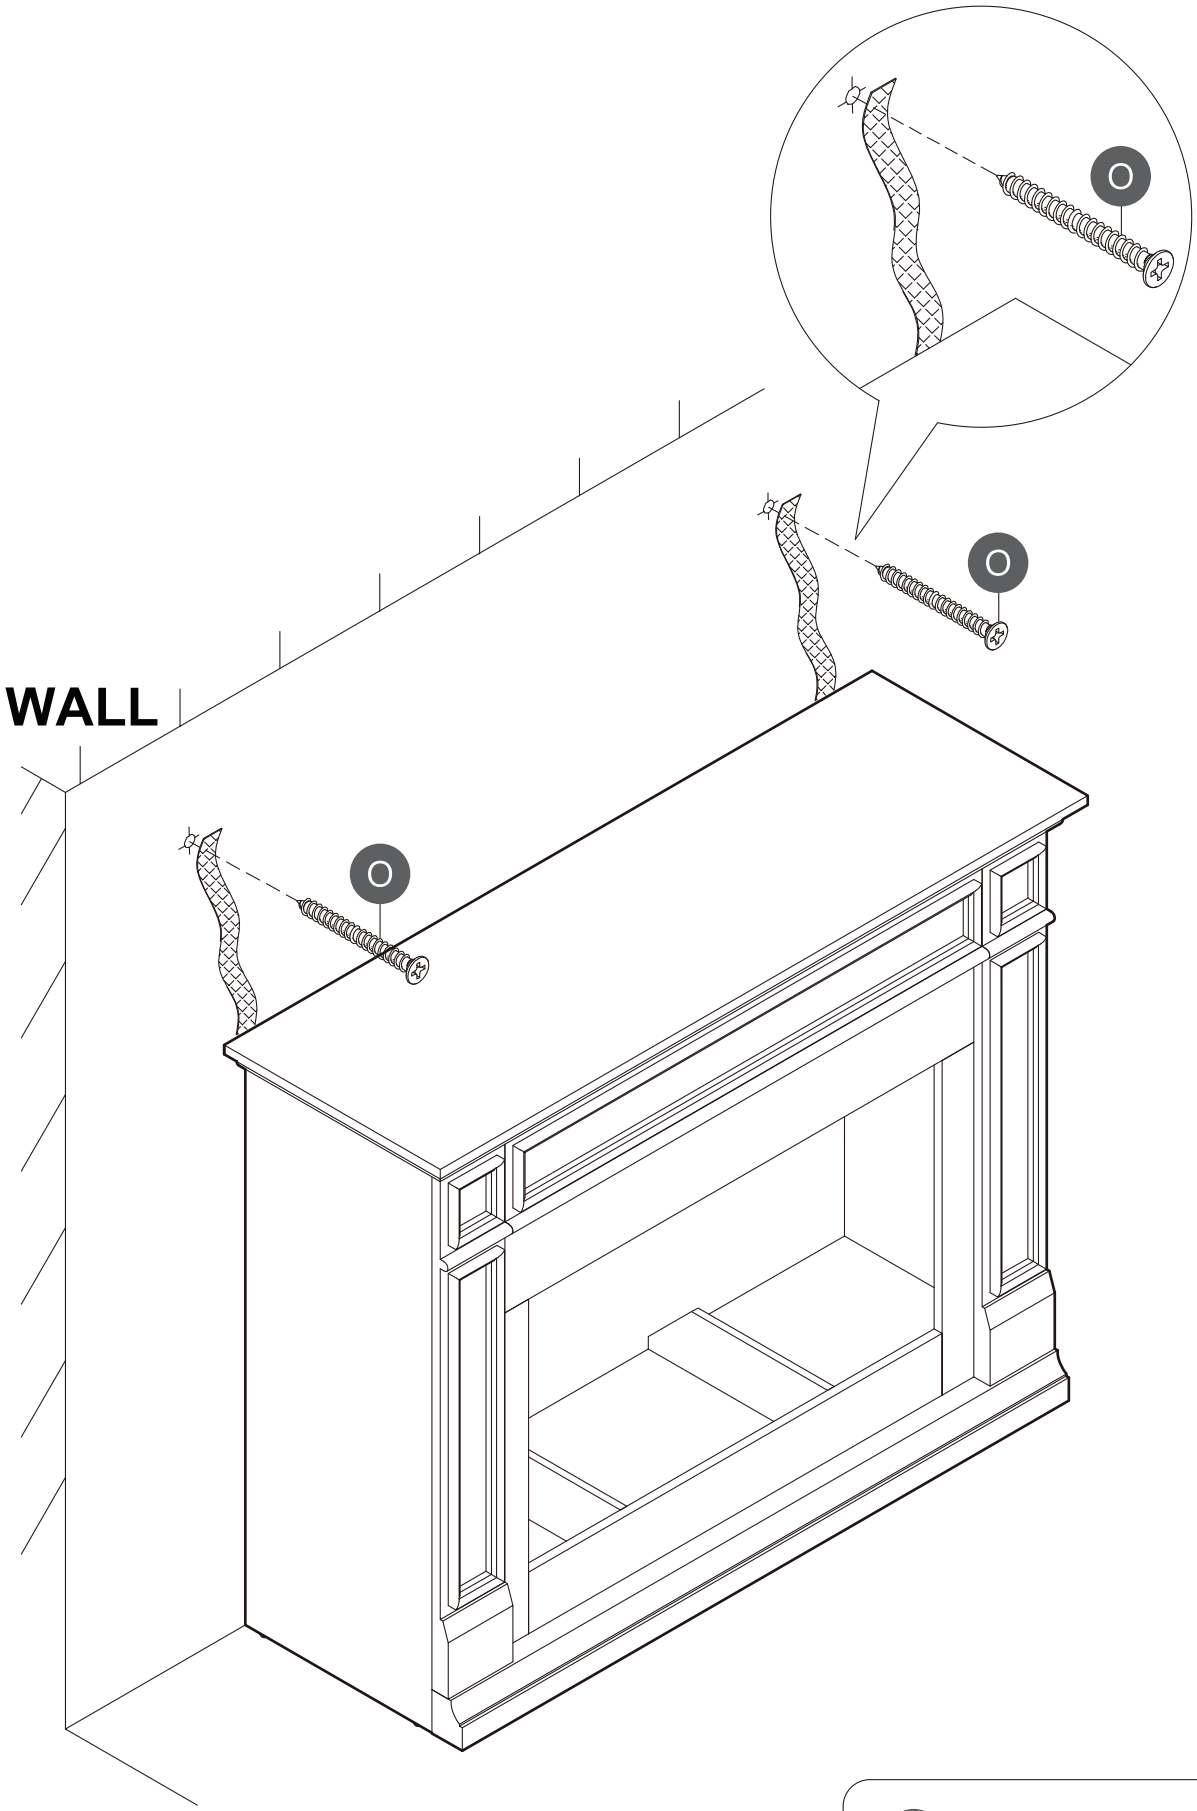


O × 2

Step 25


Using Screw (O) attach Anti-tipping Belt (M) into Nut (N) to wall.

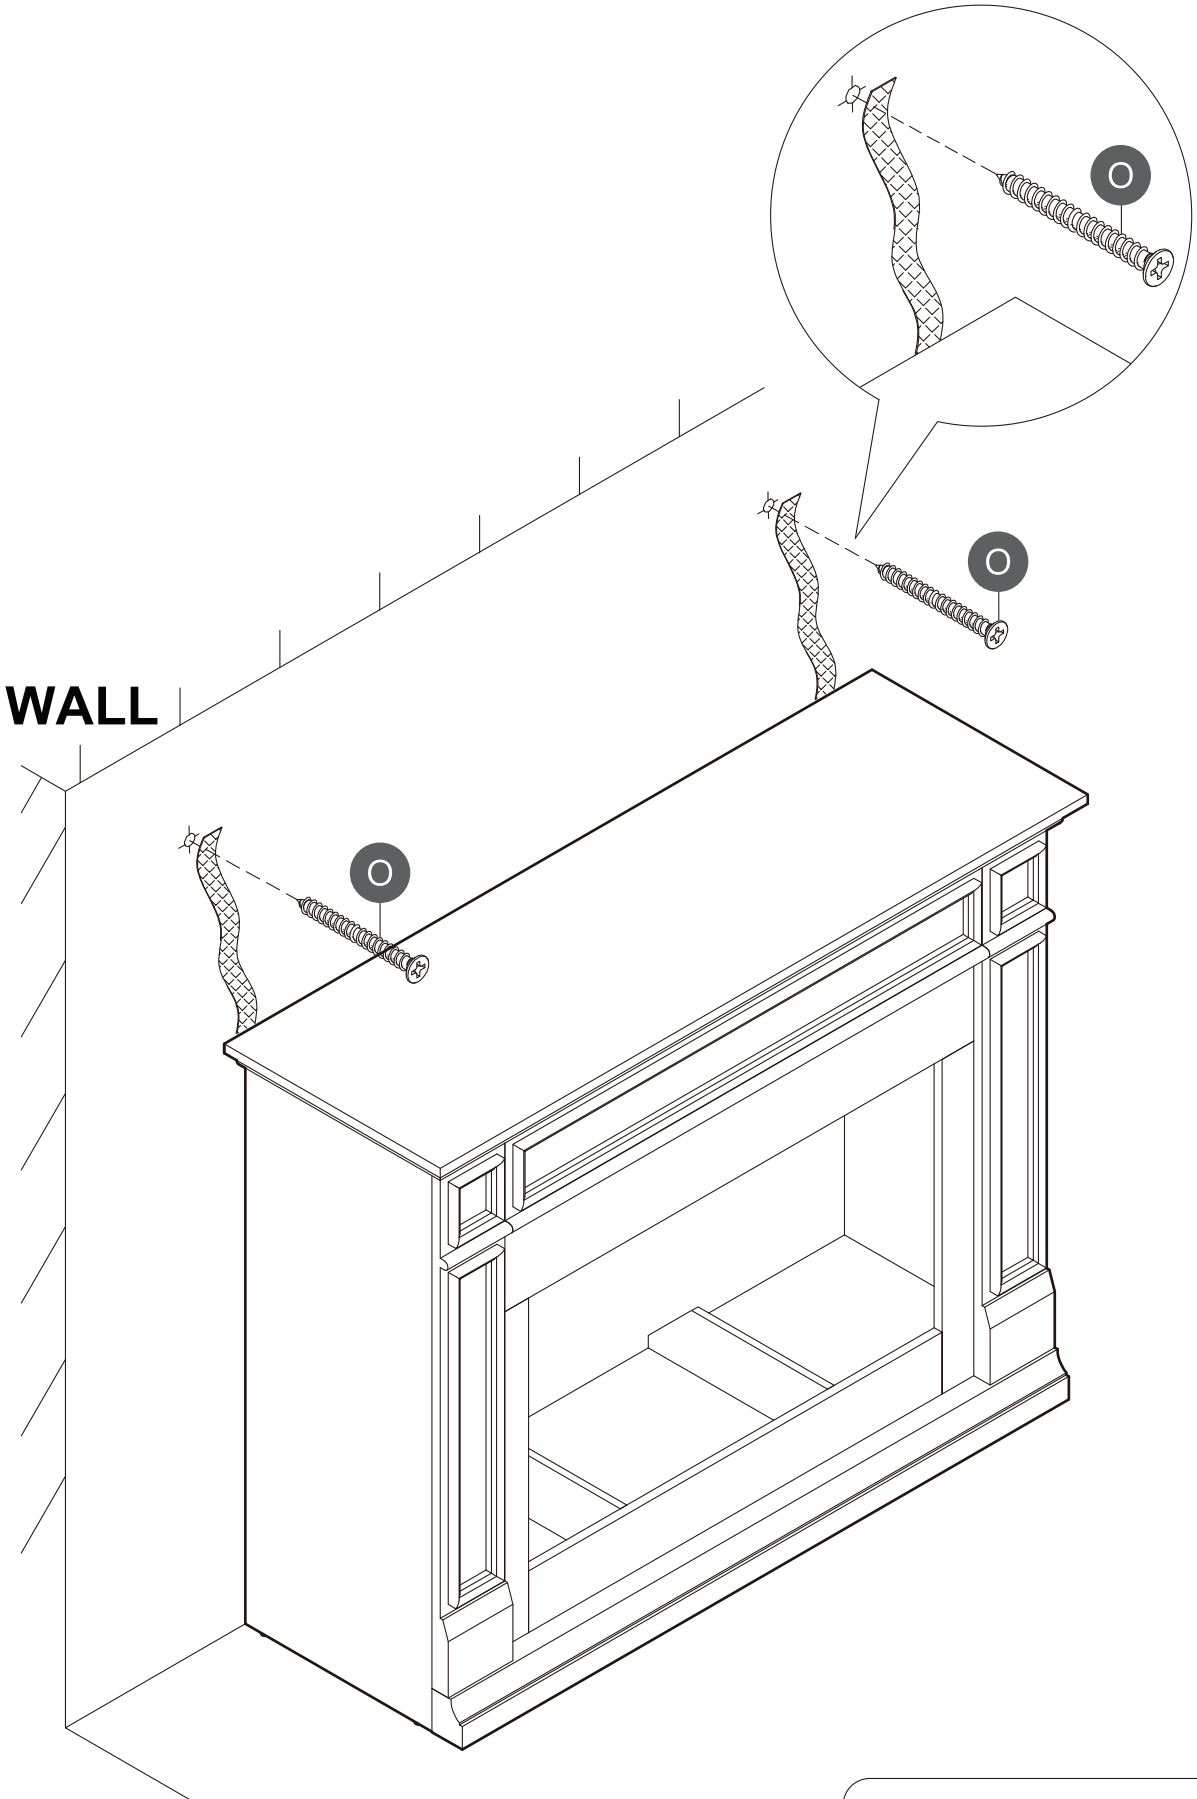


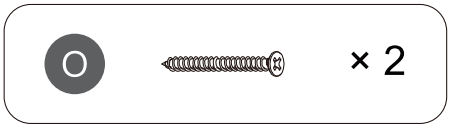



This 47-inch fireplace AM557708 can be combined with the storage cabinet AM557709 sold separately in our store to create a 100-inch fireplace unit. Should you wish to create this configuration, we recommend purchasing both items together.
When assembling the combination: Using Screws (D&V4) attach Light Strip to Board (③), as shown.


HW-AM557708+HW-AM557776


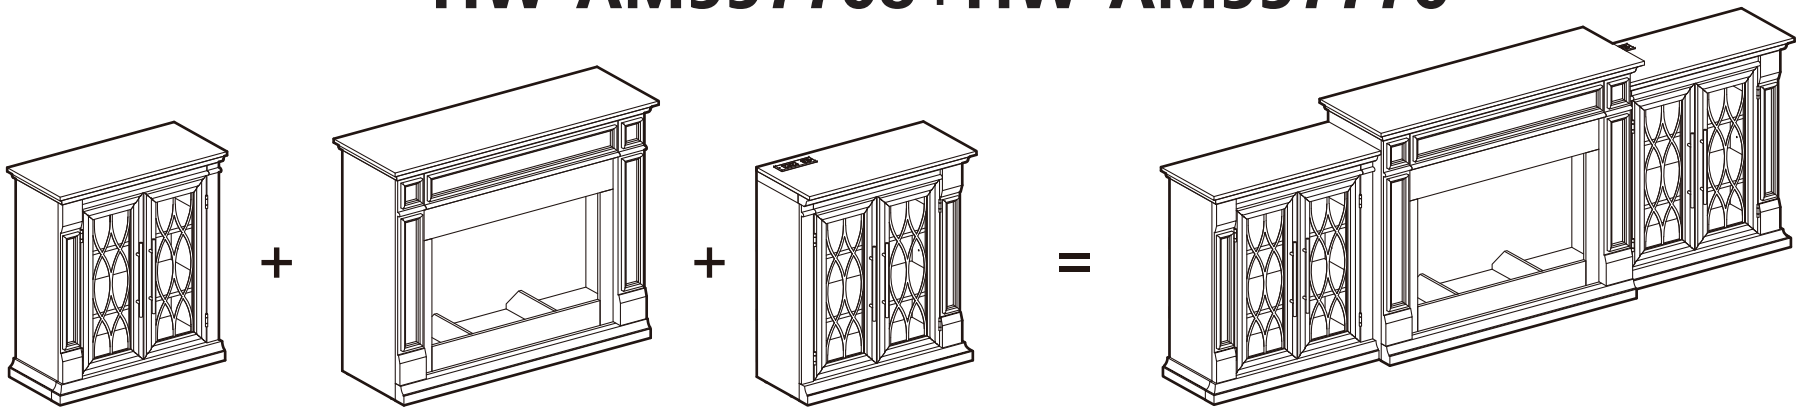


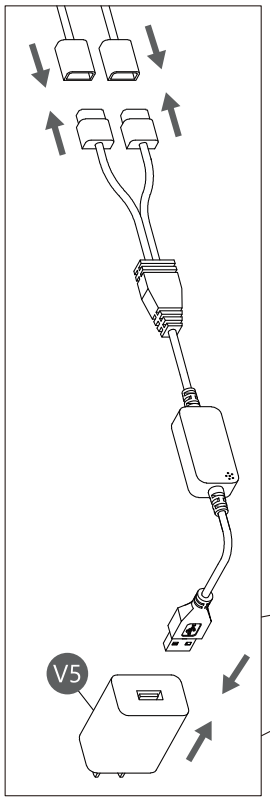

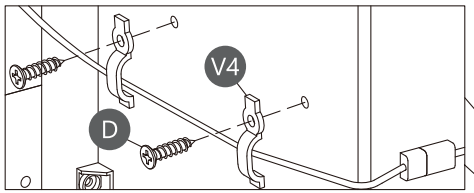

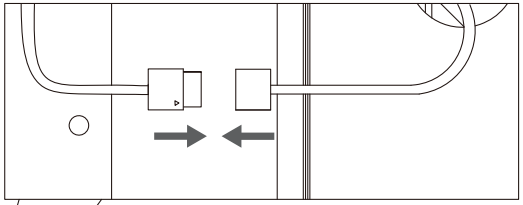

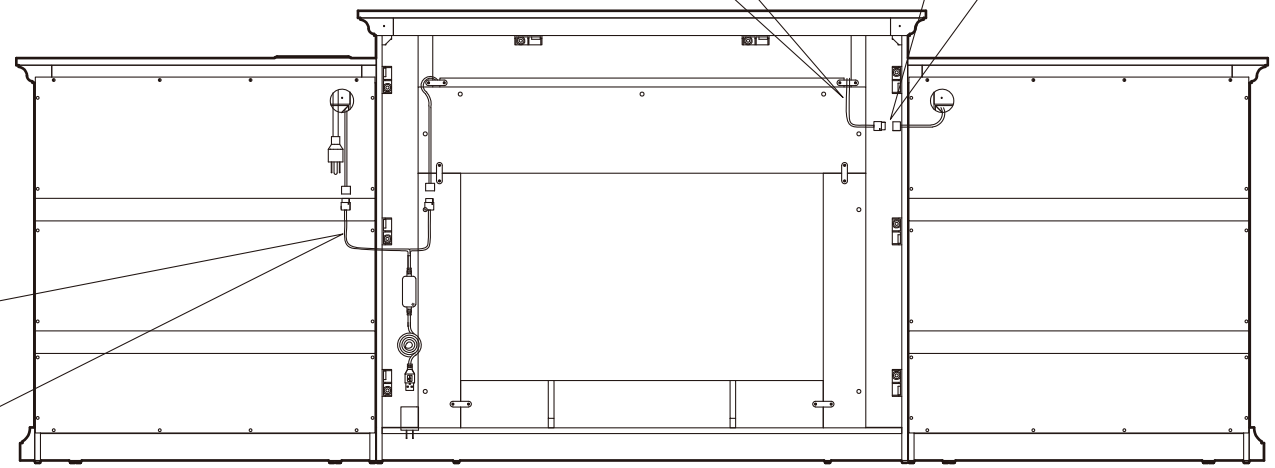

D		× 2
V4		× 2