

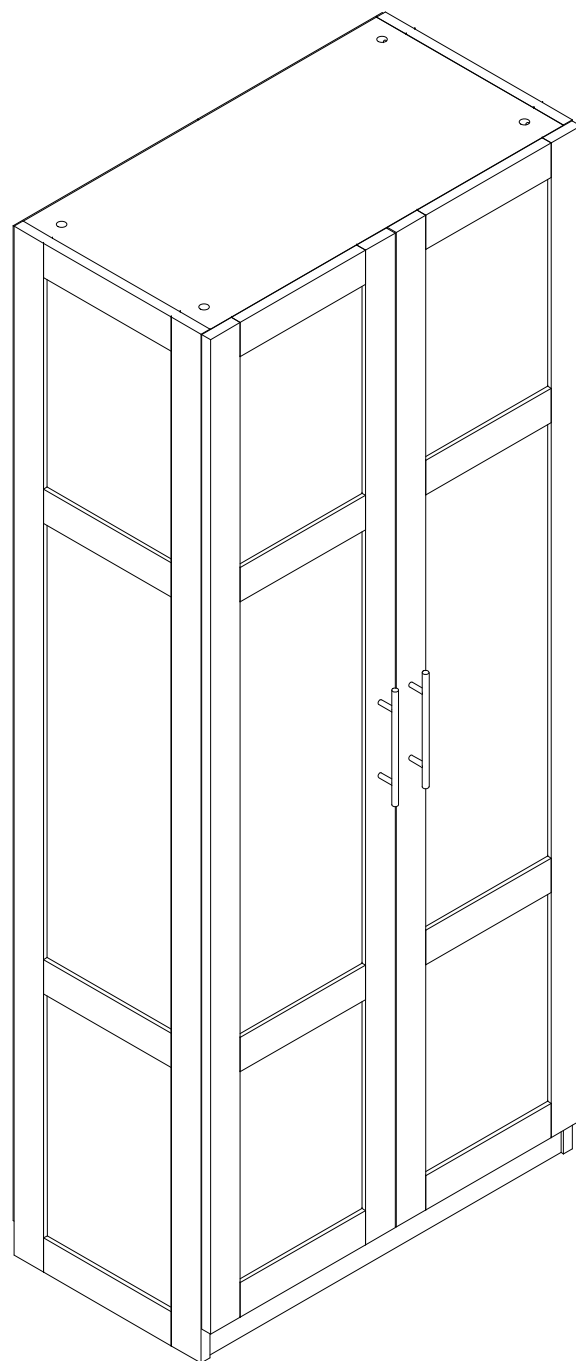
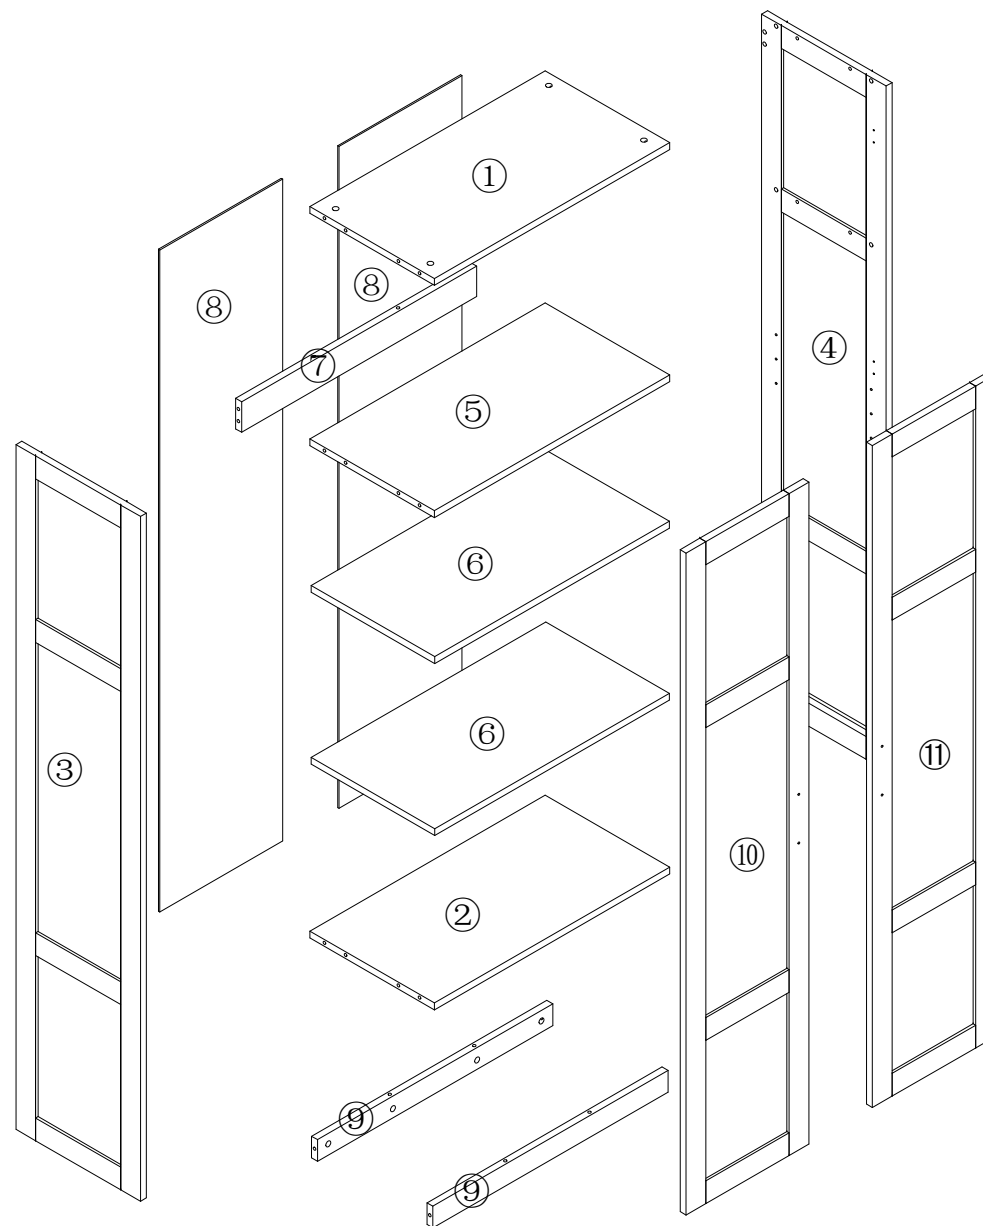
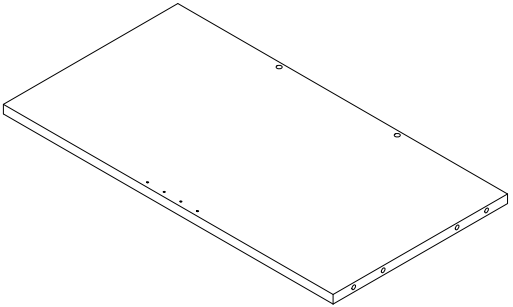
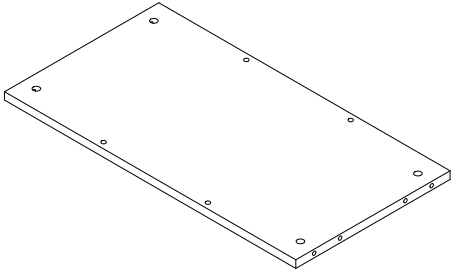
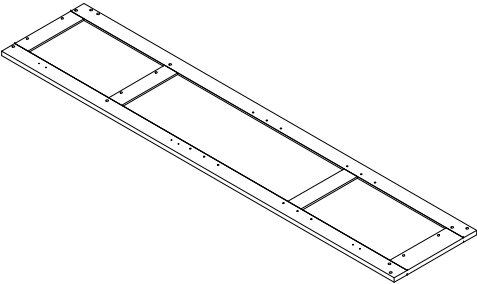
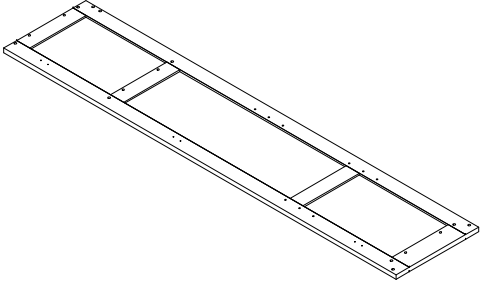
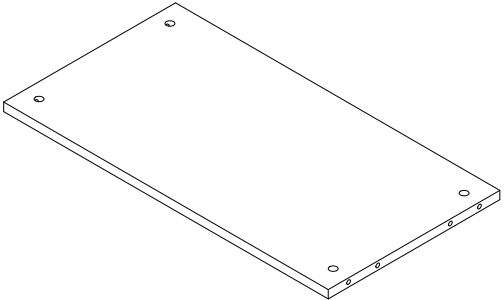
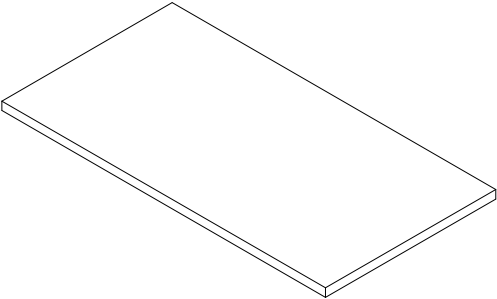
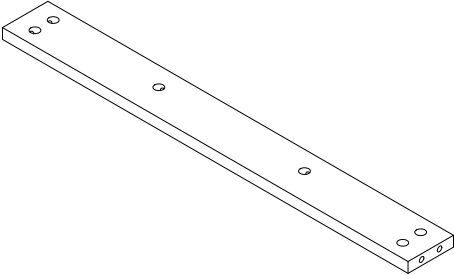
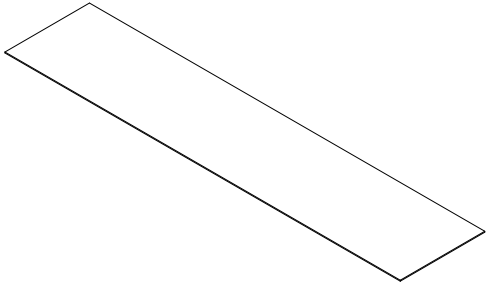
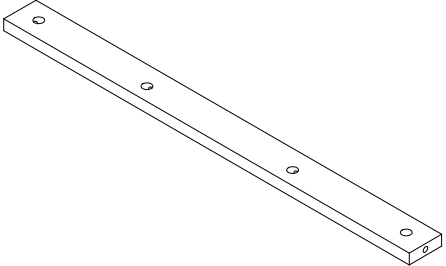


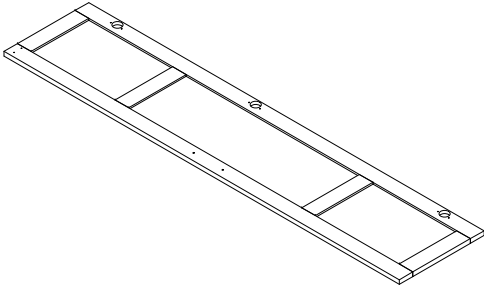

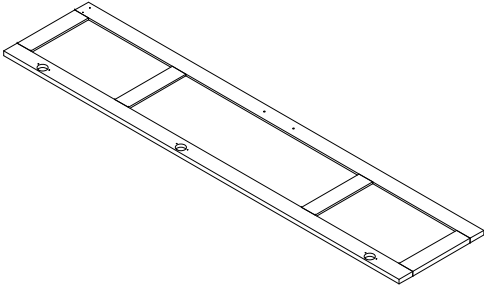

K	L Ø3.5*14mm
26PCS	44PCS

A	B	C Ø8*40mm	D	E 128mm	F Ø4*25mm	G	H	I	J
						 G2			
26PCS	26PCS	12PCS	6PCS	2PCS	4PCS	G1 2PCS	1PCS	40PCS	8PCS


1 714*378  1PCS	2 714*378  1PCS	3 1800*378  1PCS	4 1800*378  1PCS
5 714*378  1PCS	6 712*375  2PCS	7 714*80  1PCS	8 1740*373  2PCS
9 714*57  2PCS	10 1740*373  1PCS	11 1740*373  1PCS	




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

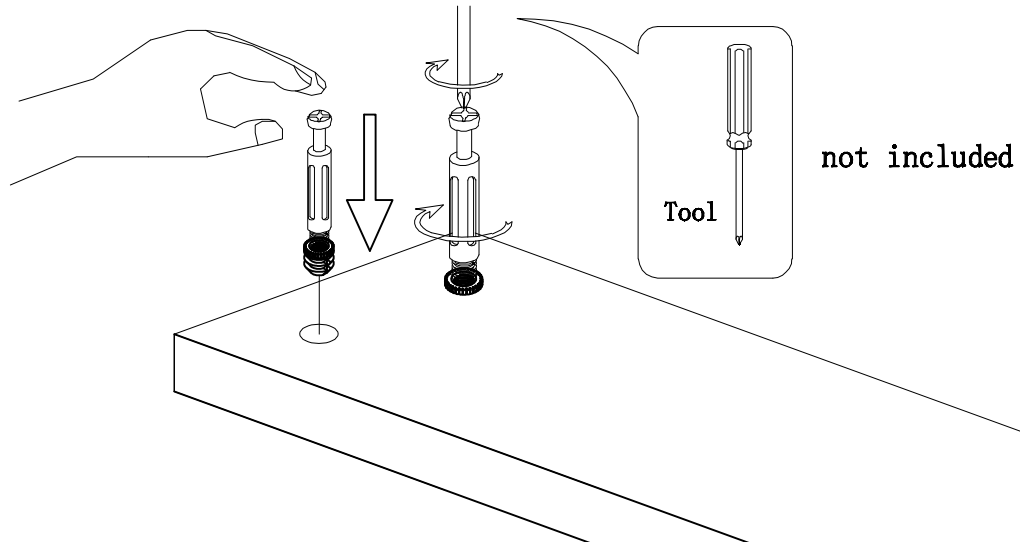


II

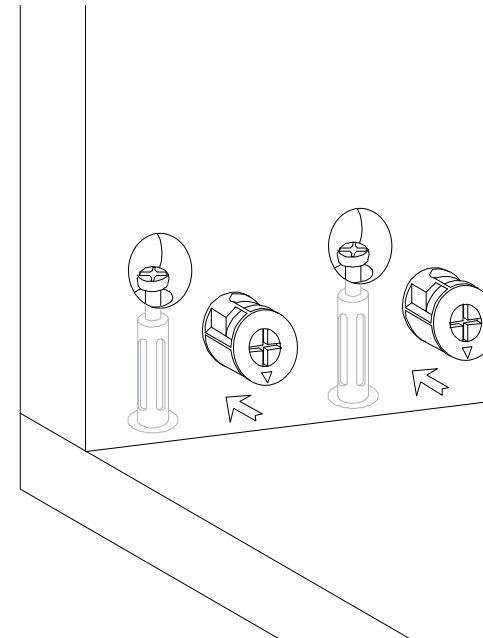

III

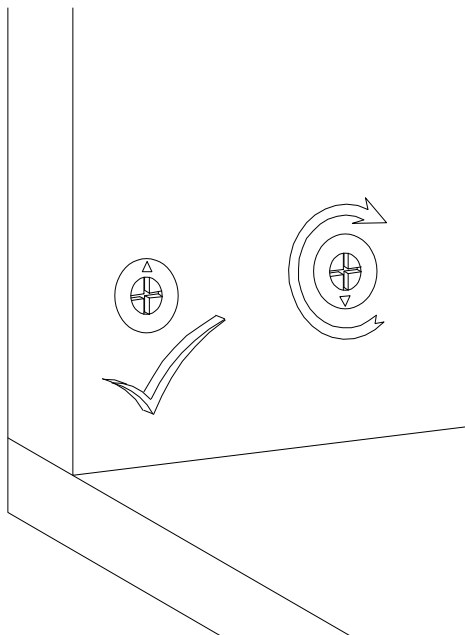


1

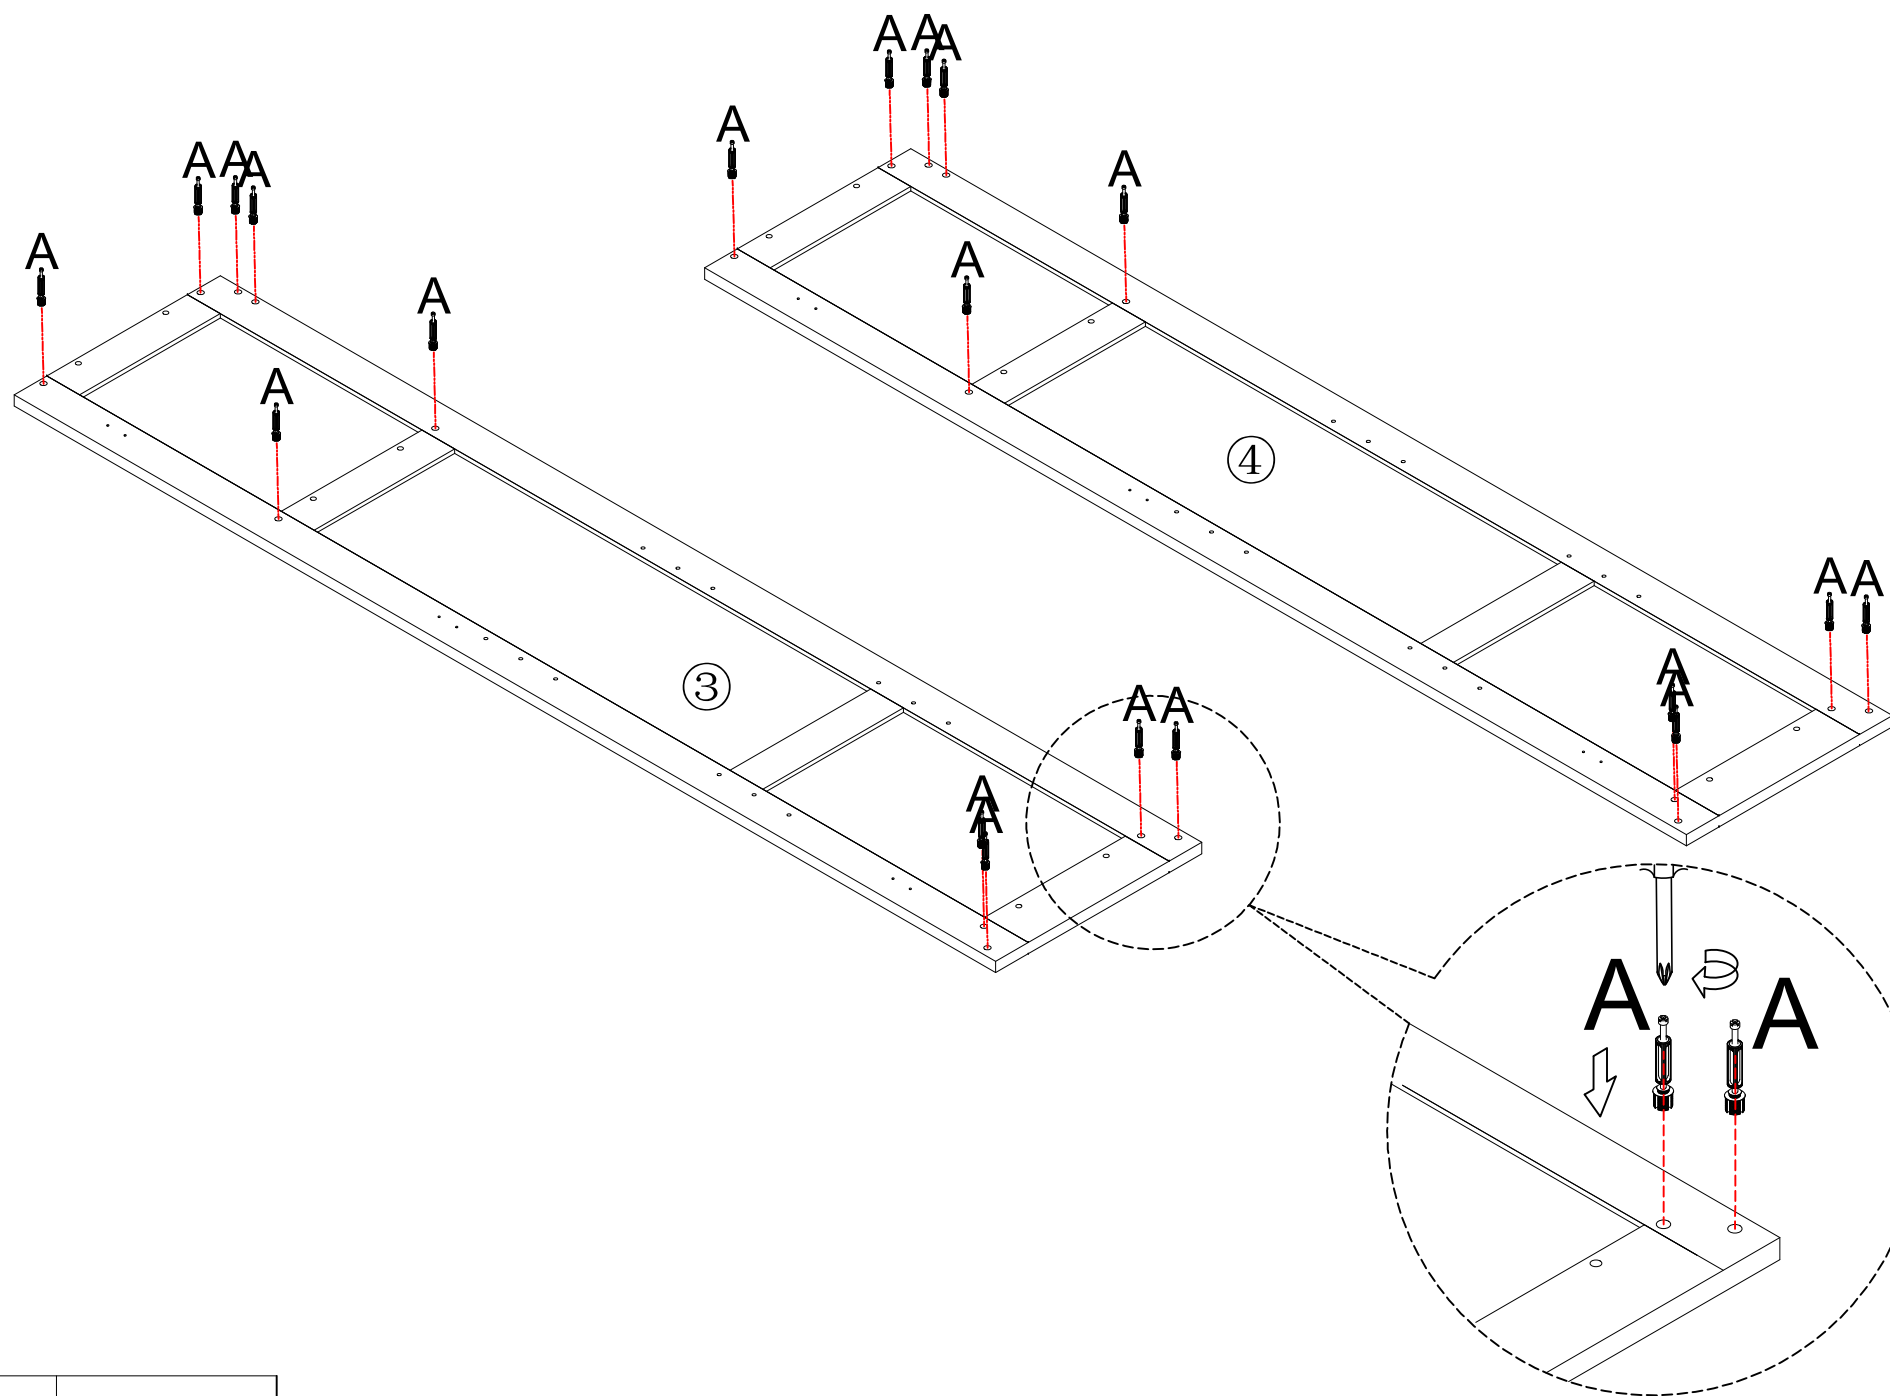

A*20

Put A on board ③④

2

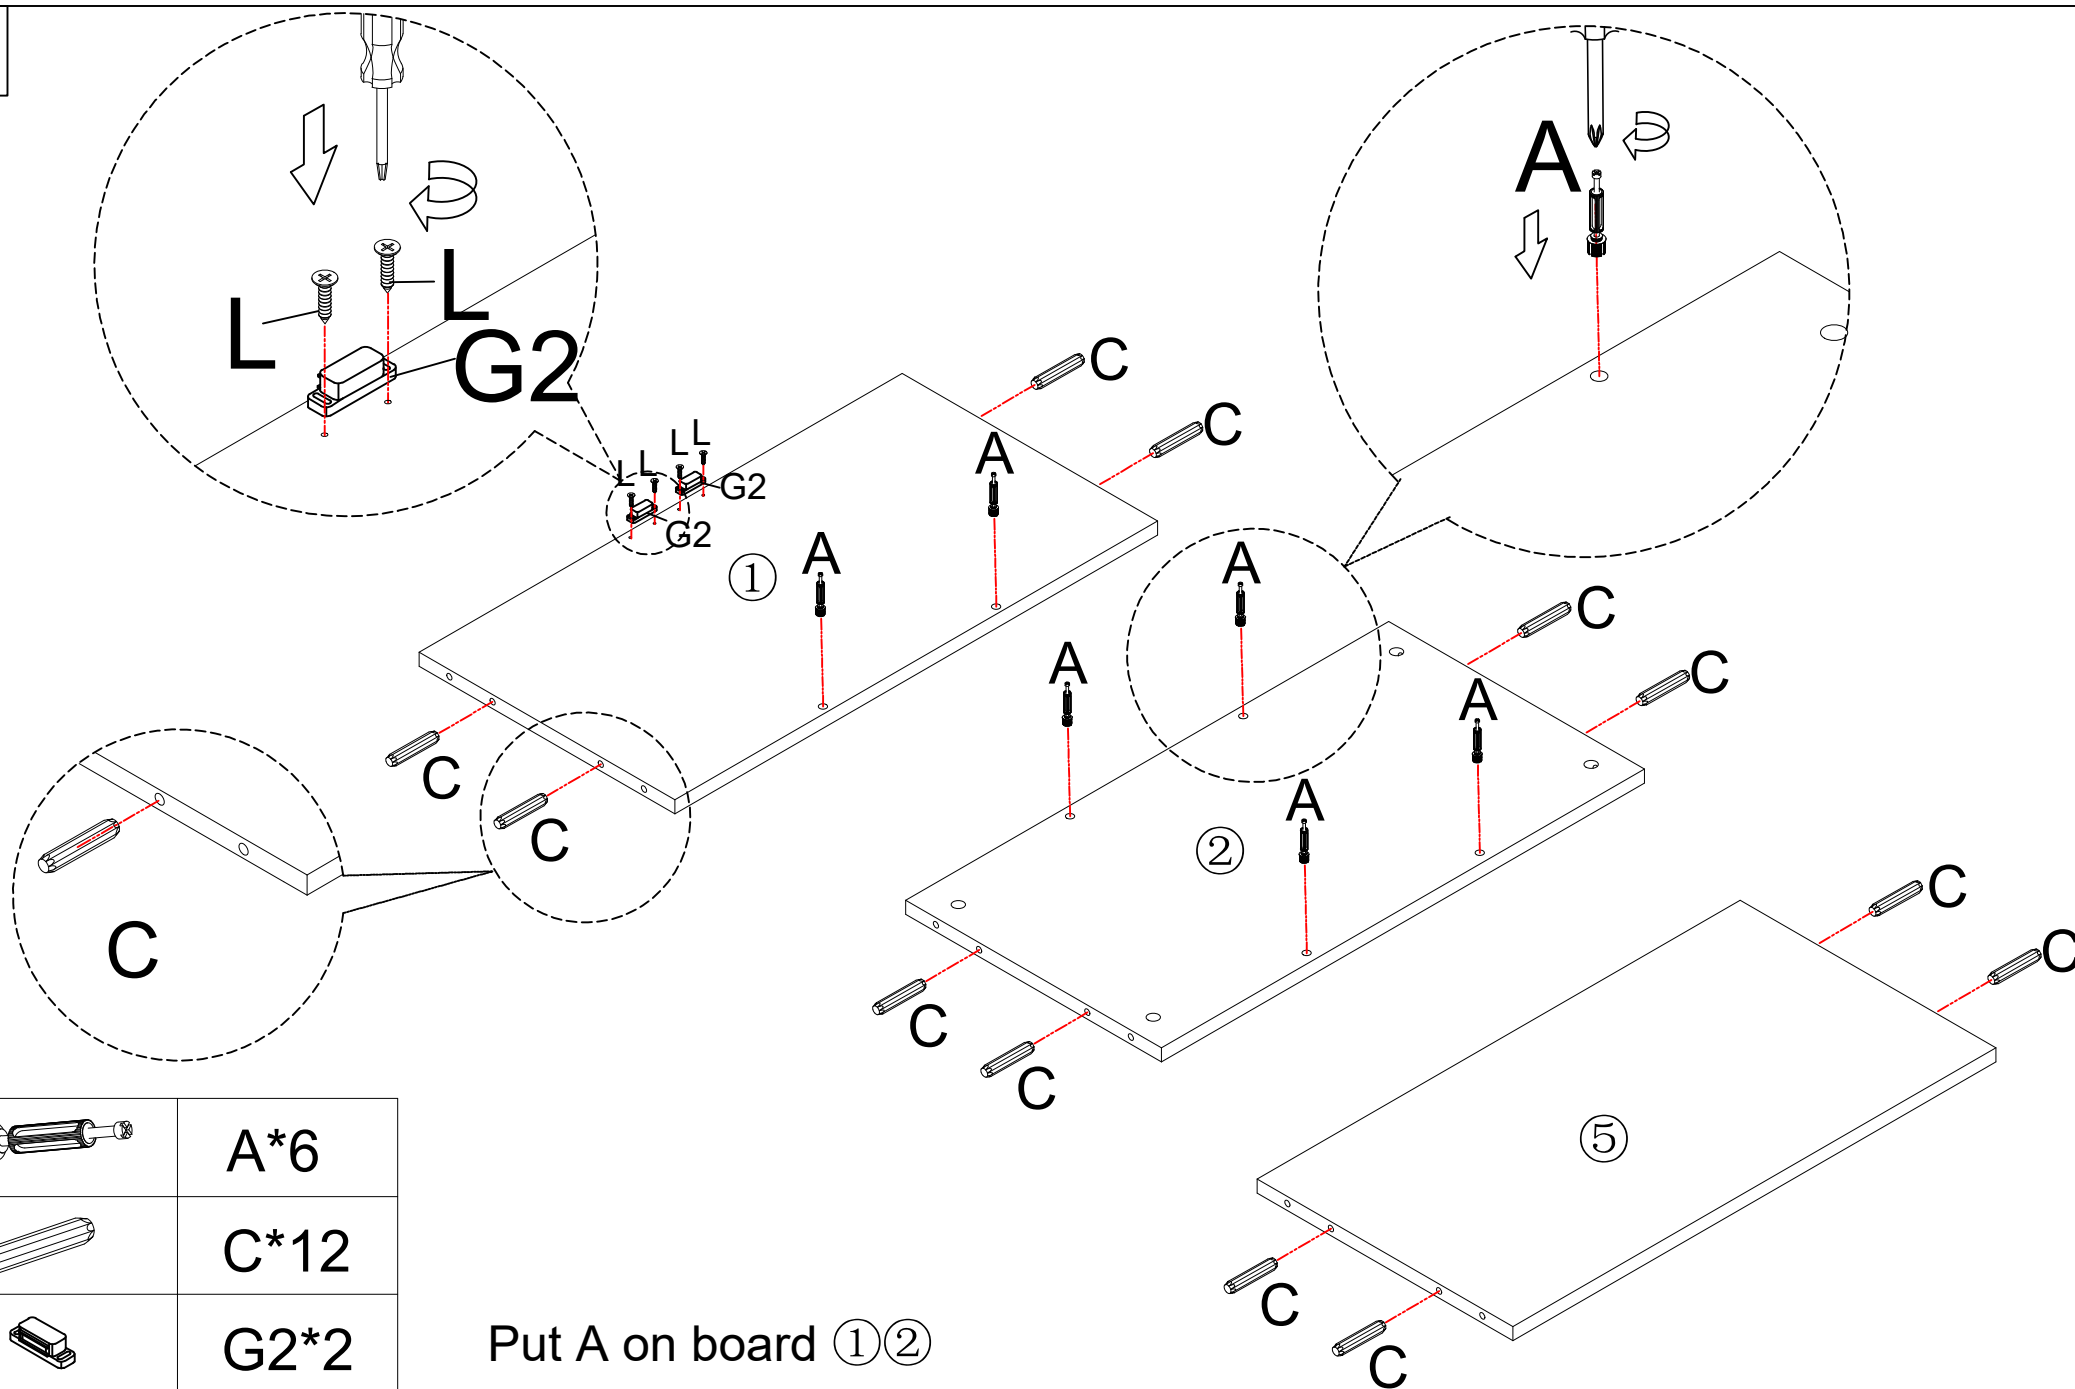

A*6



C*12



G2*2




L*4

Put A on board ①②

Put C on board ①②⑤

3 Make sure the arrow on the screw align to the hole on the side

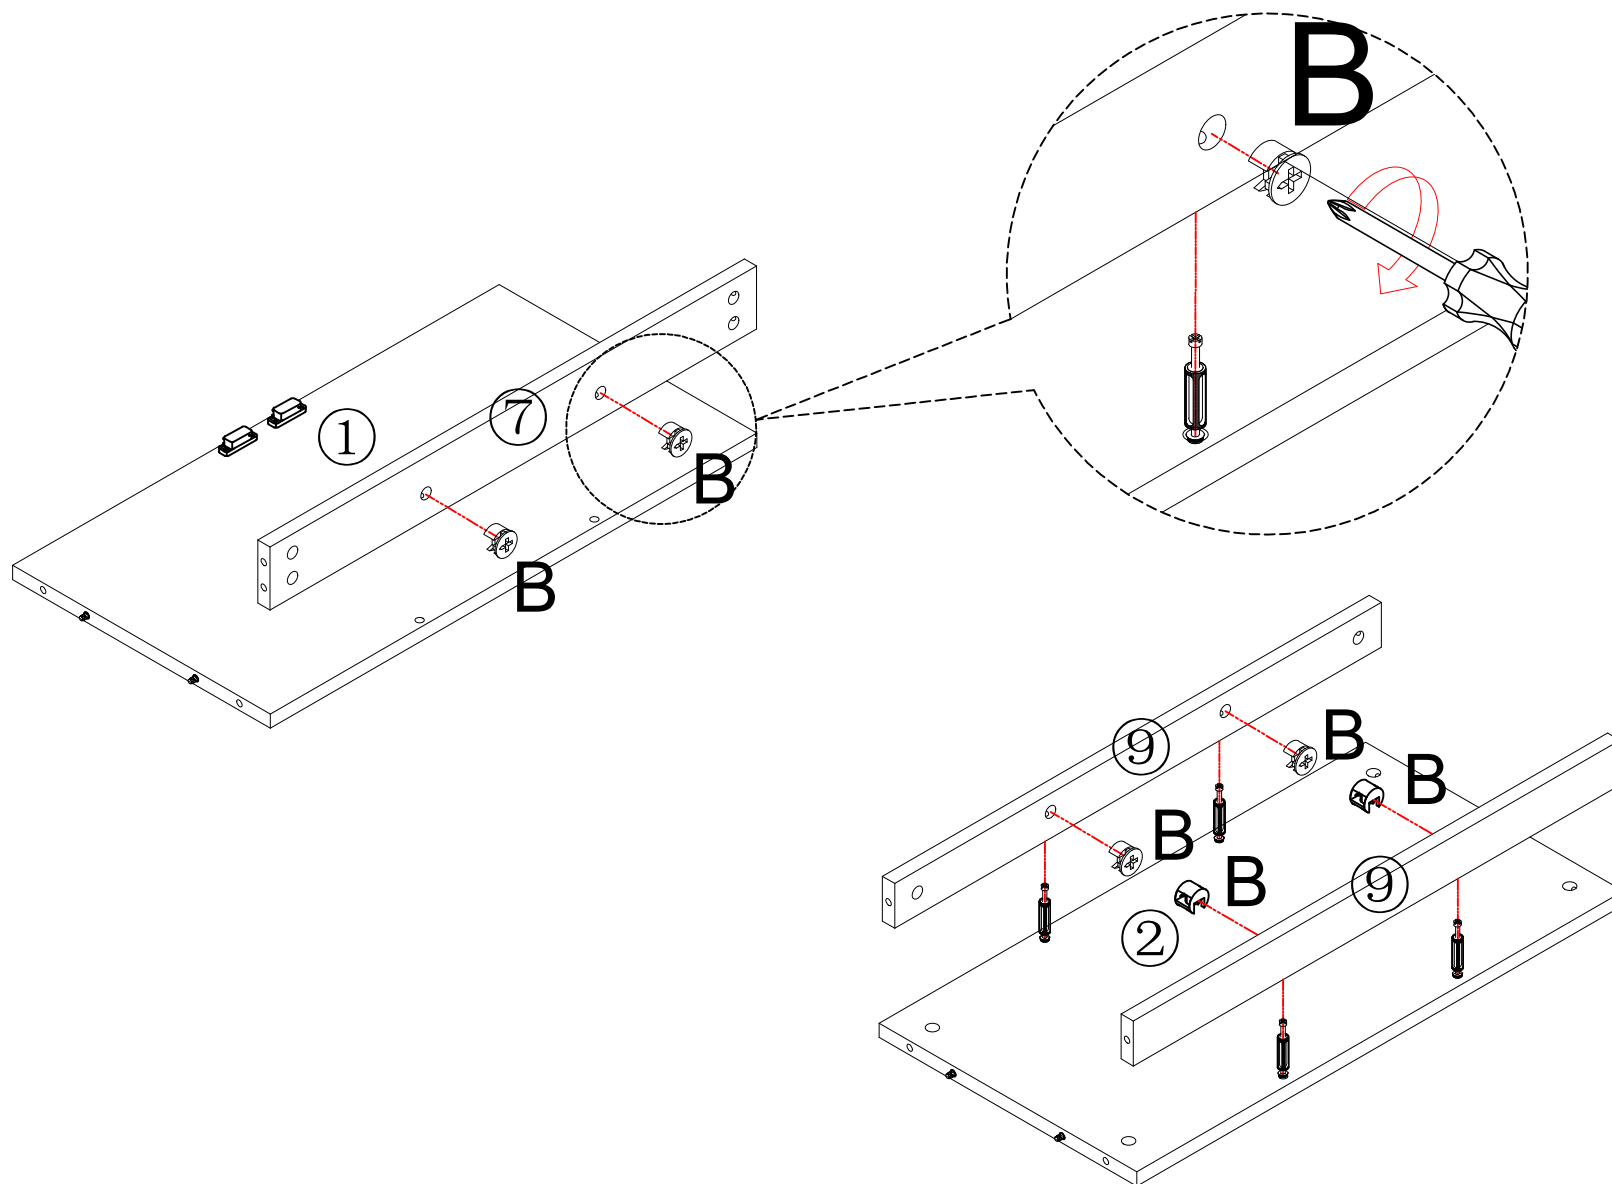


B*6

Put B on board ⑦⑨

4

Make sure the arrow on the screw align to the hole on the side

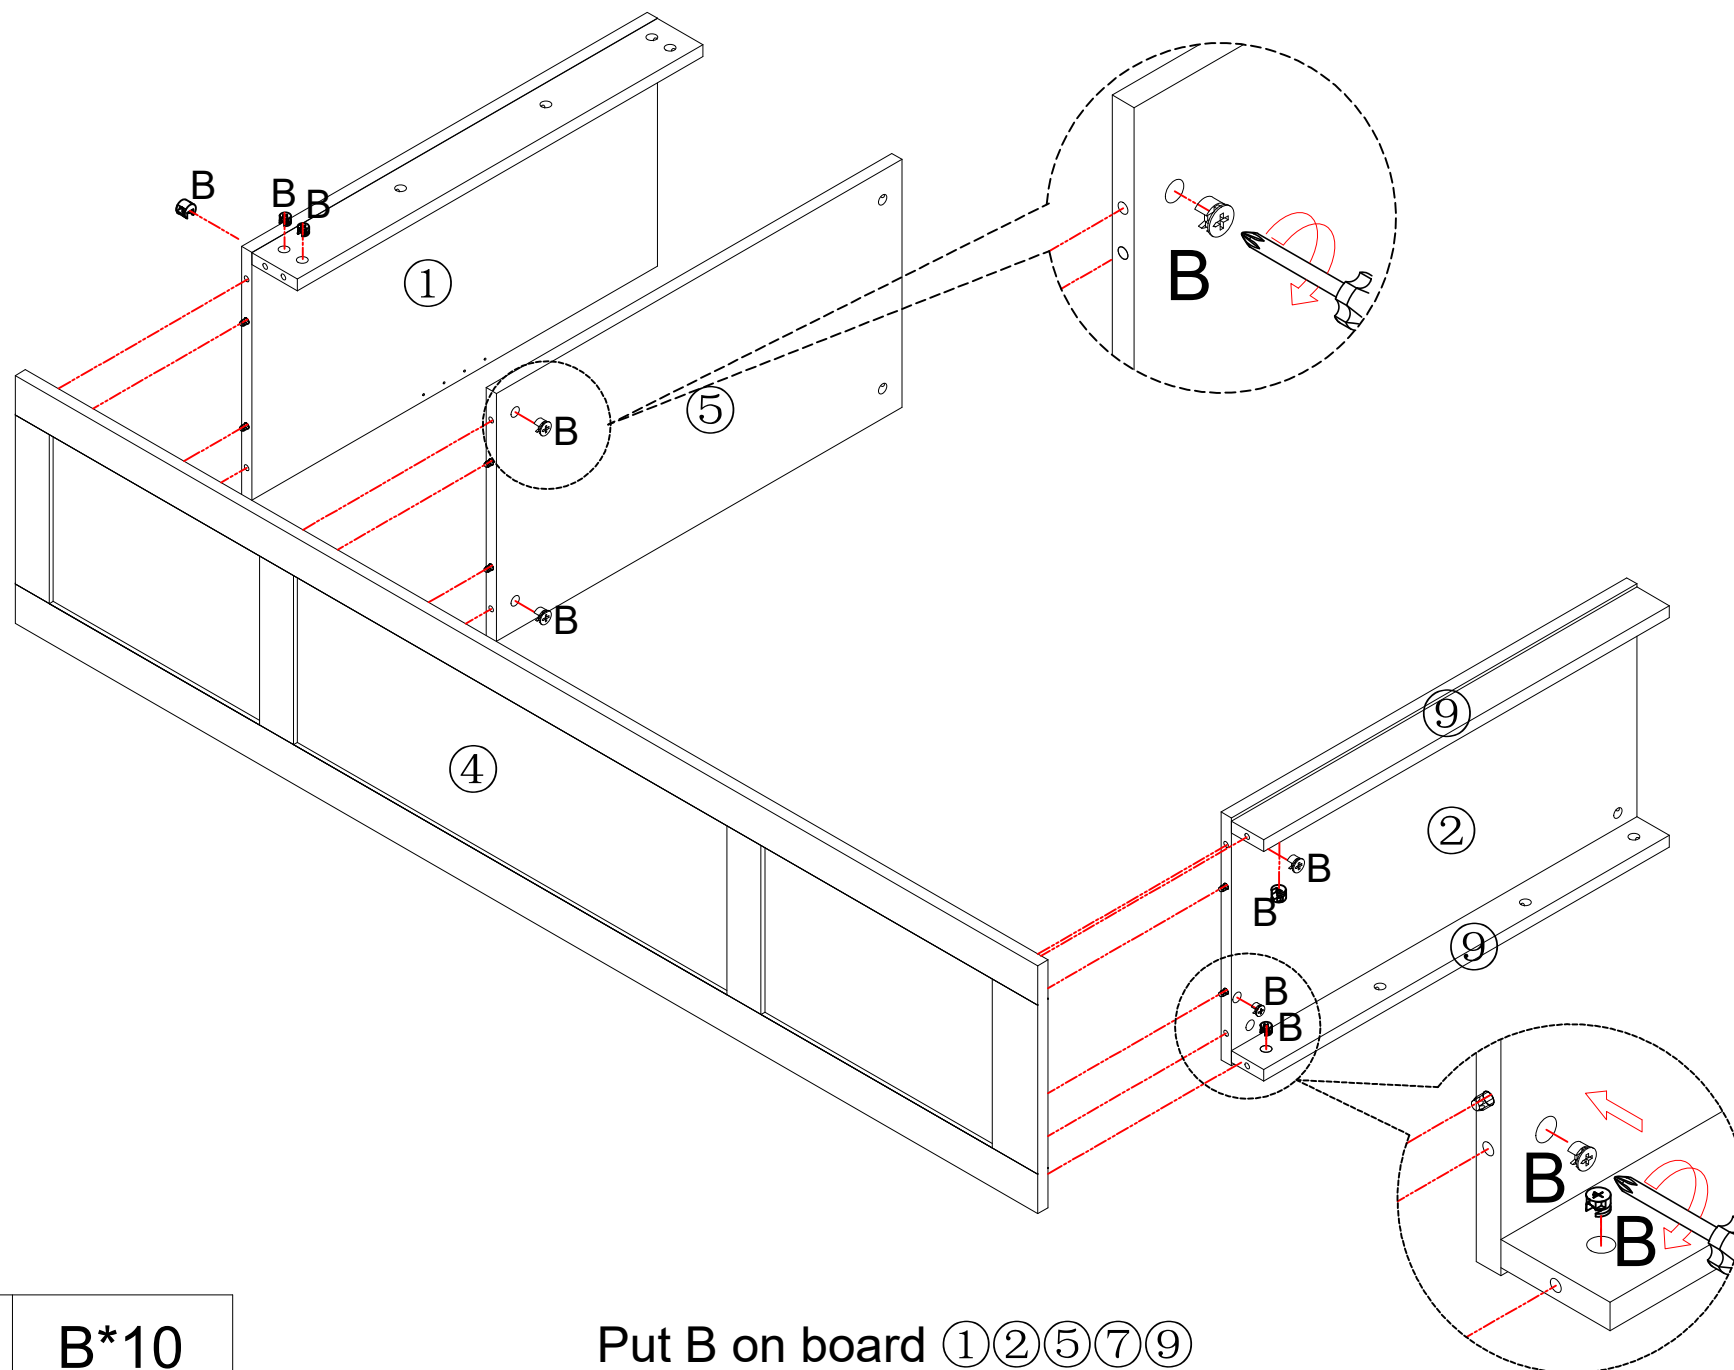


B*10

Put B on board ①②⑤⑦⑨

5



Make sure the arrow on the screw align to the hole on the side

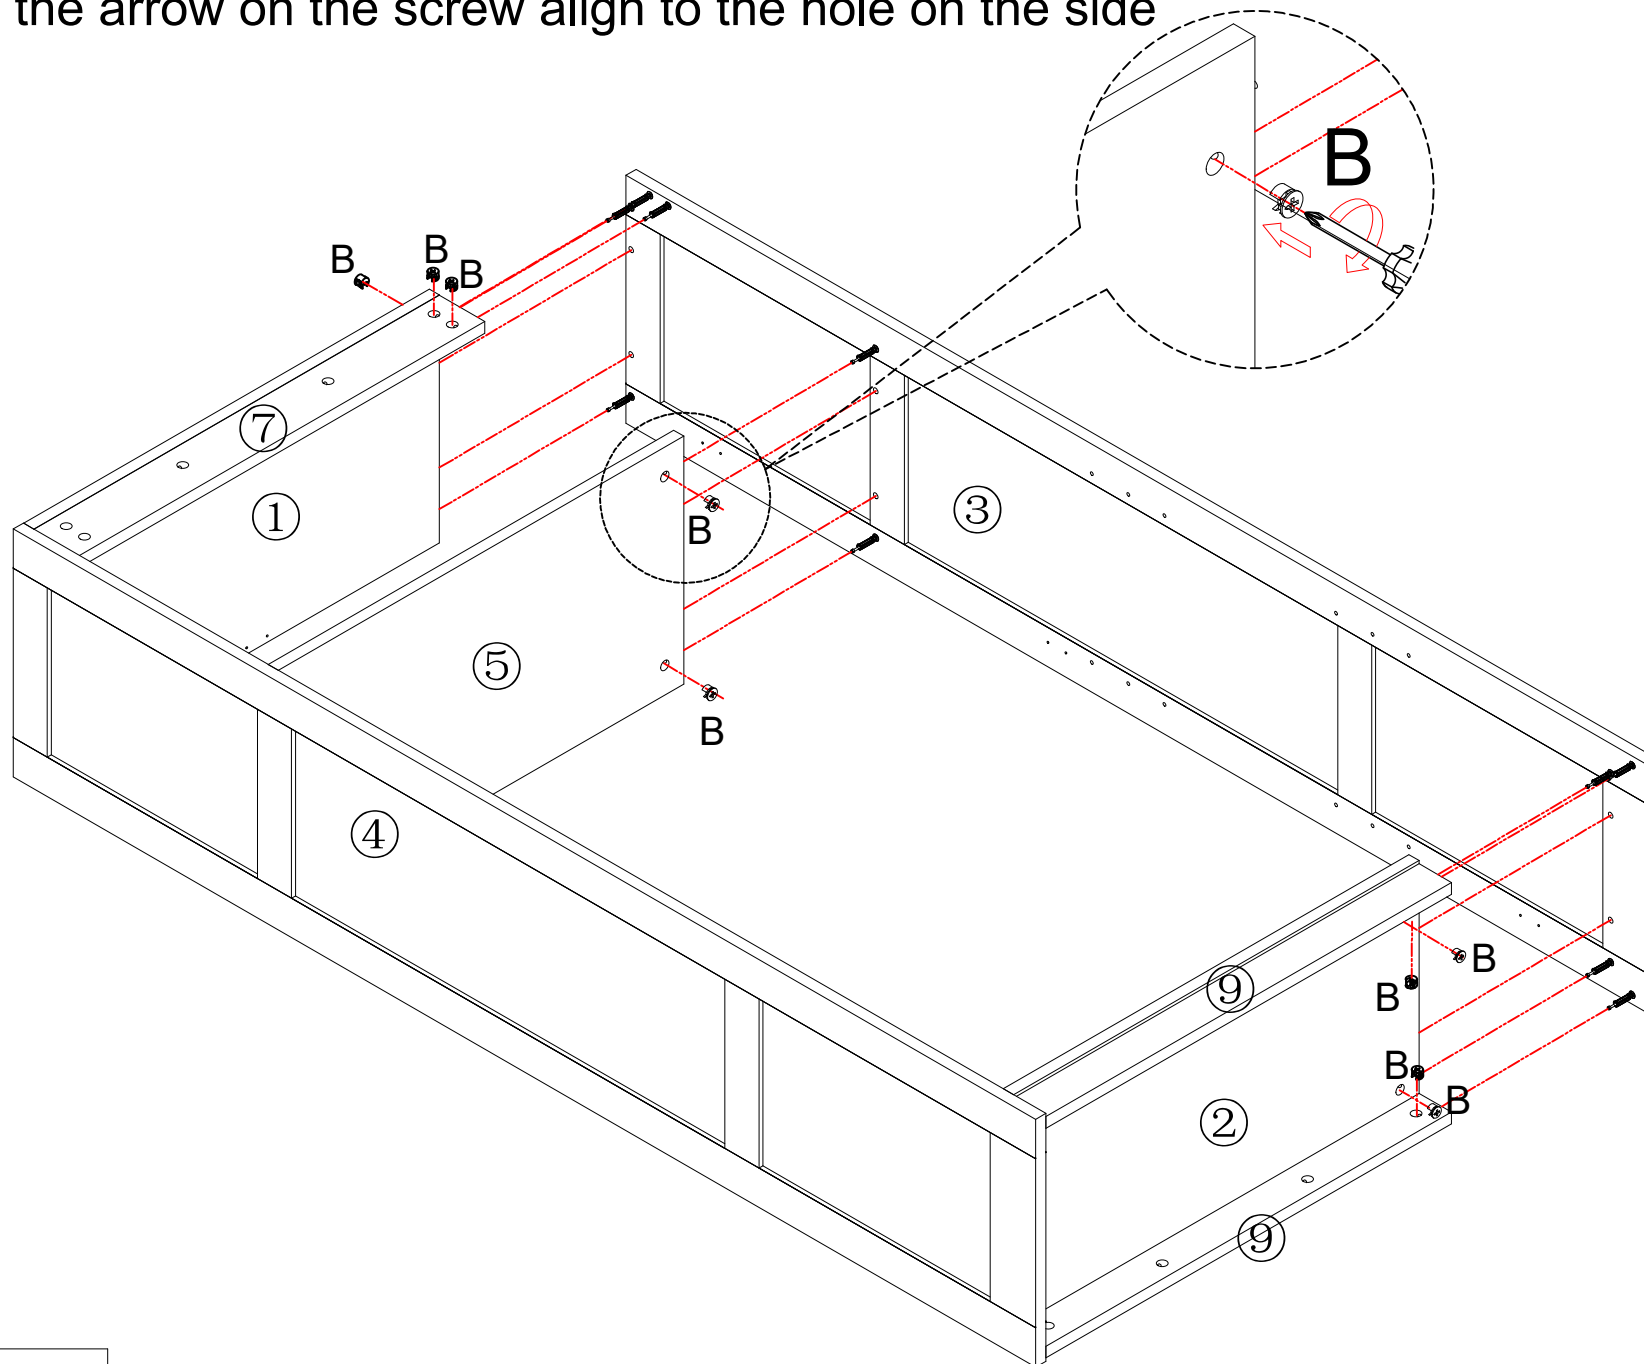

B*10





Put B on board 1 2 5 7 9

6

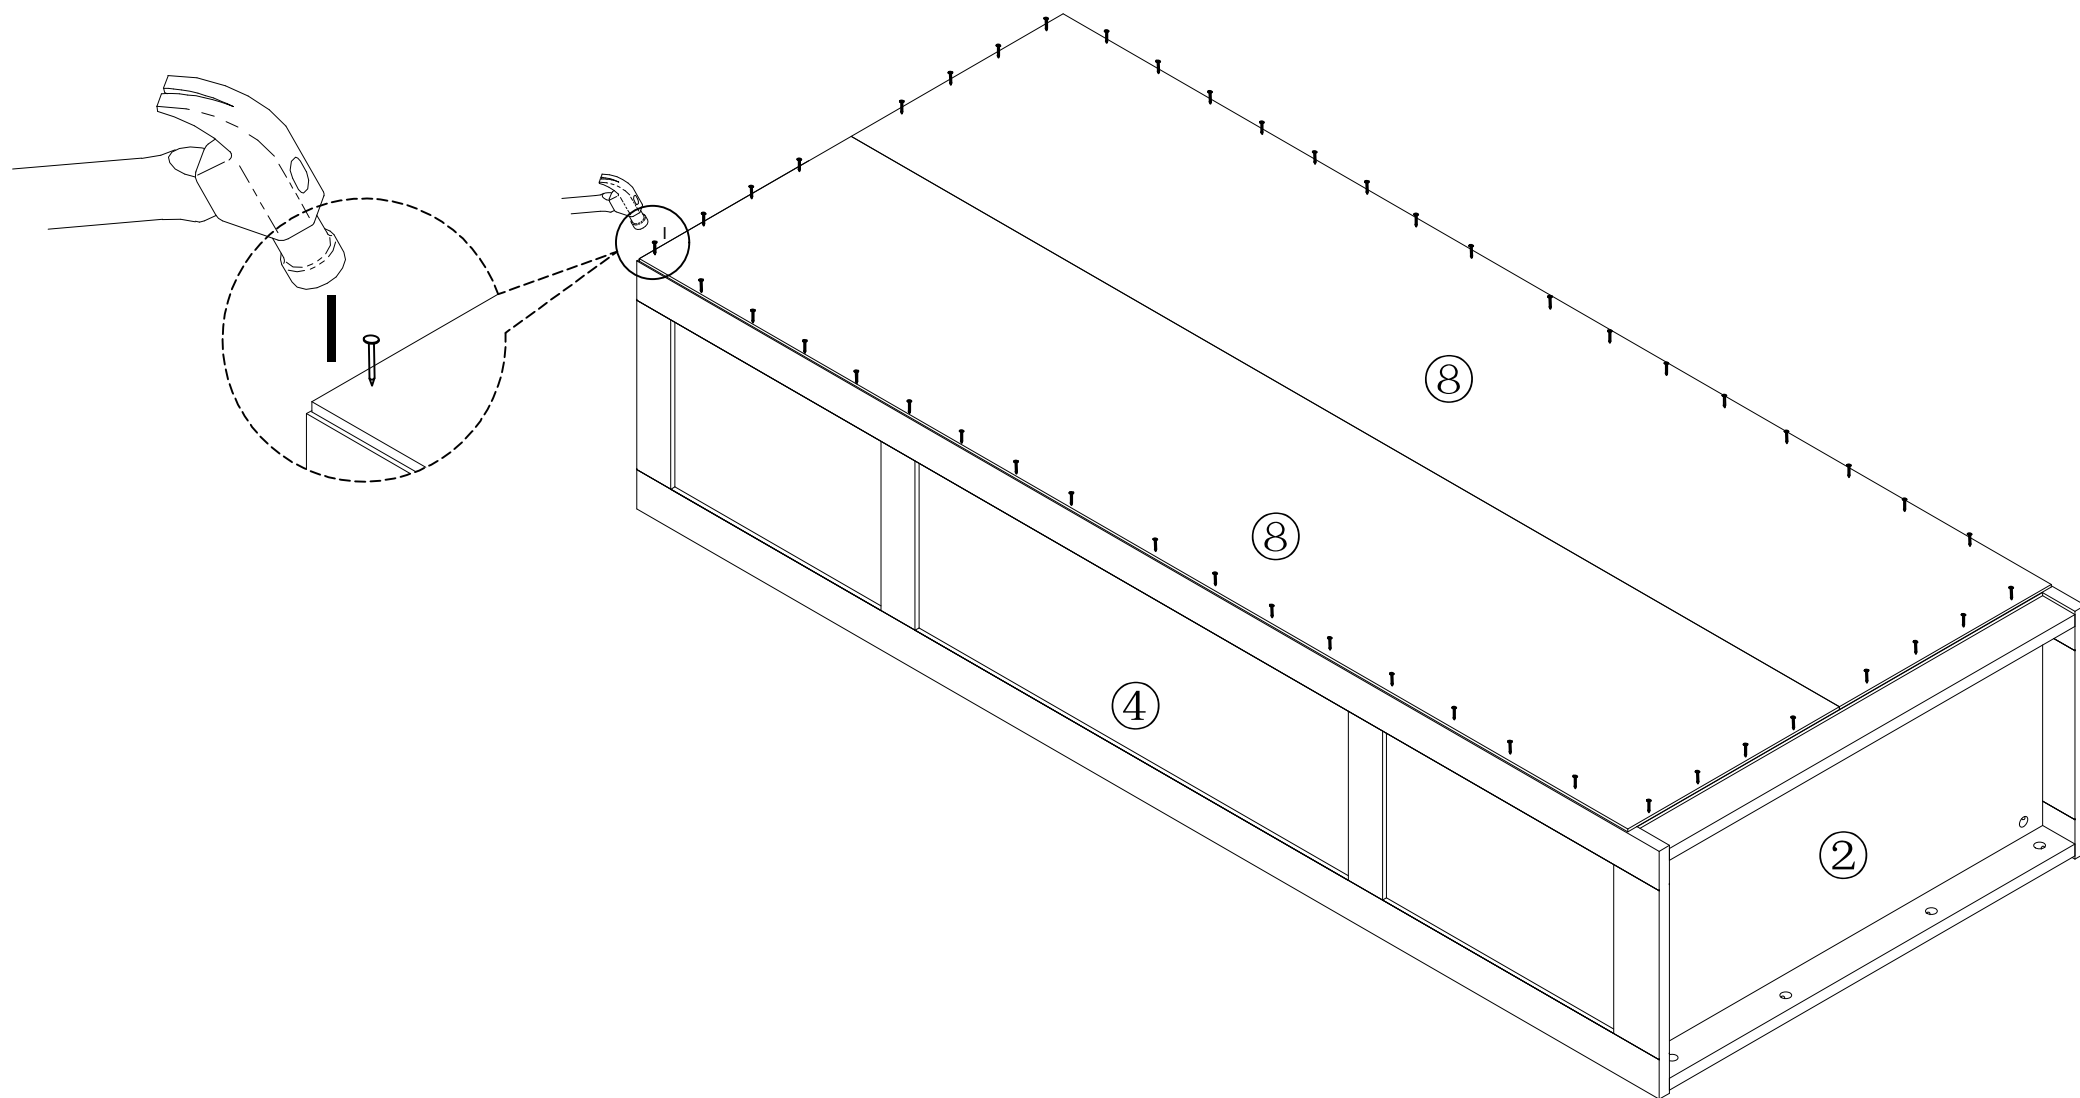

I*40


7

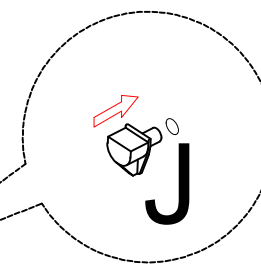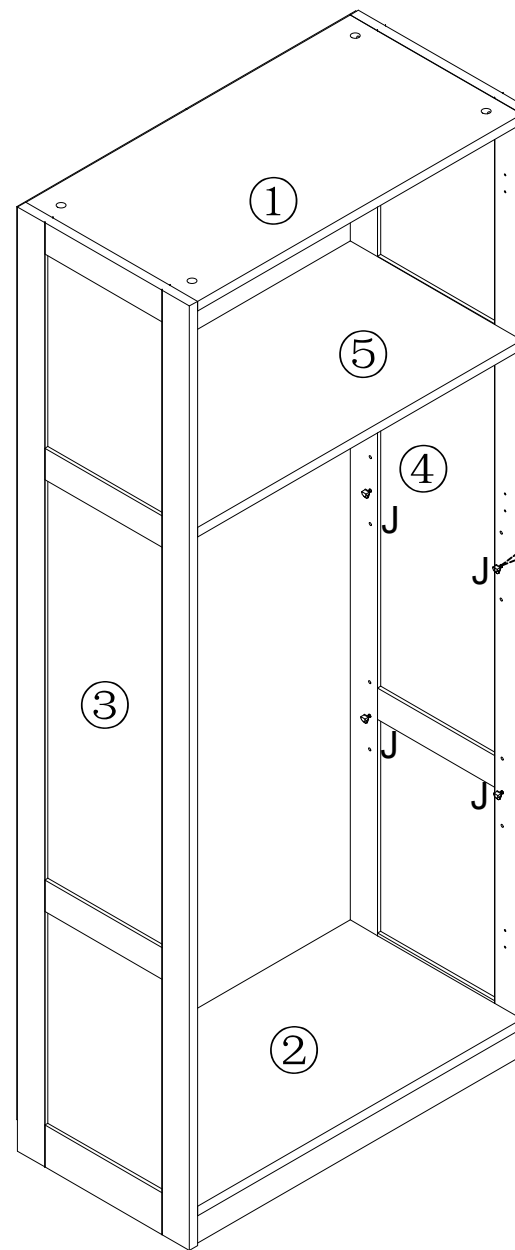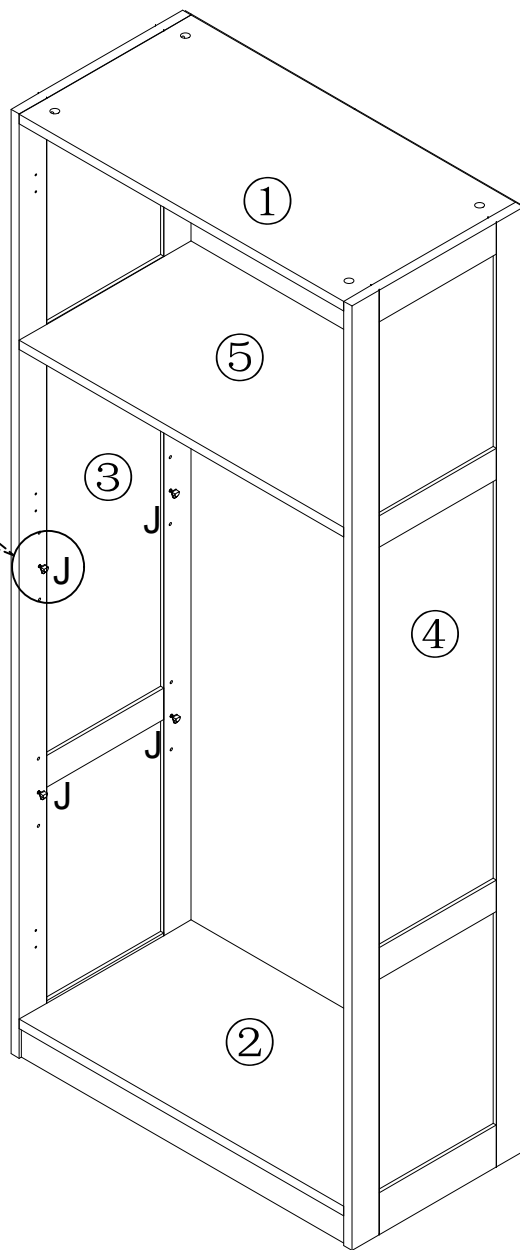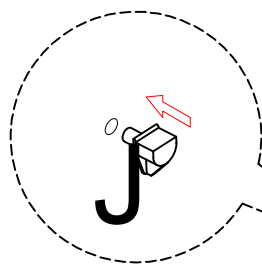


J*8


Put J on board ③④

8


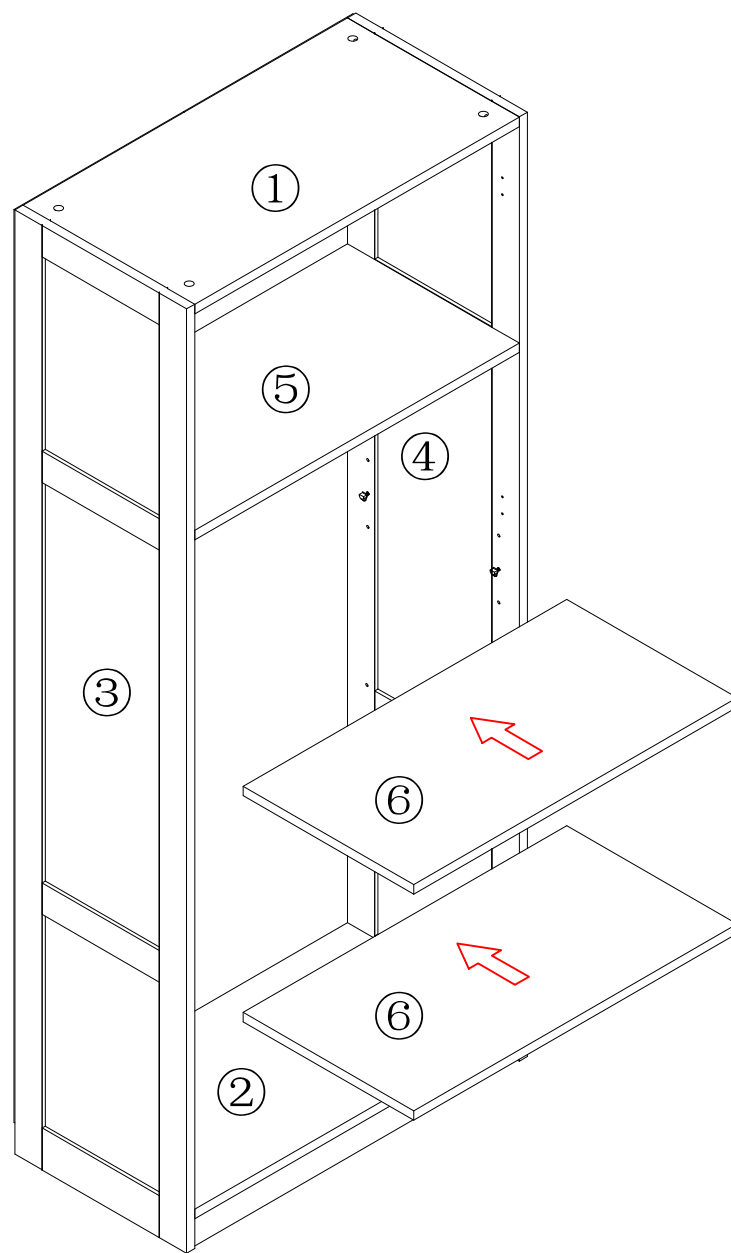


9

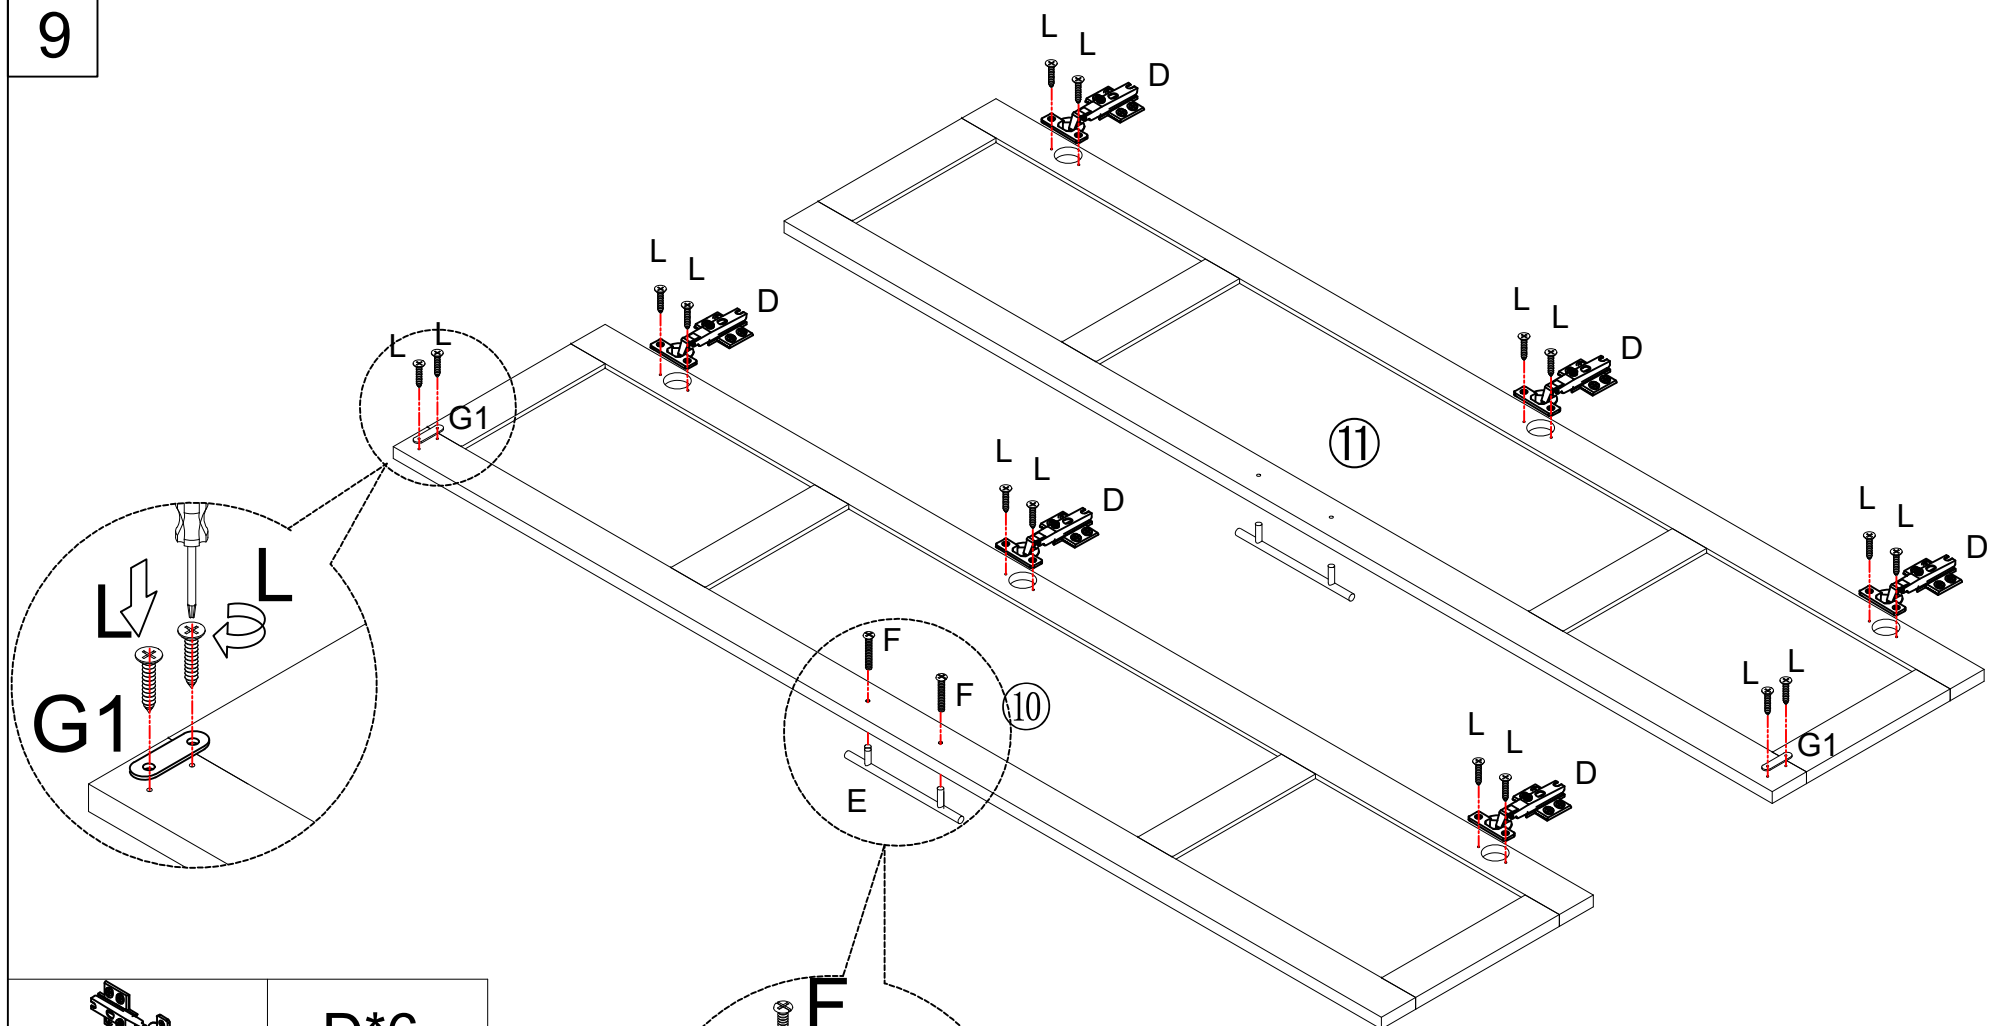





	D*6
	E*2
	F*4
	G1*2
	L*16

10




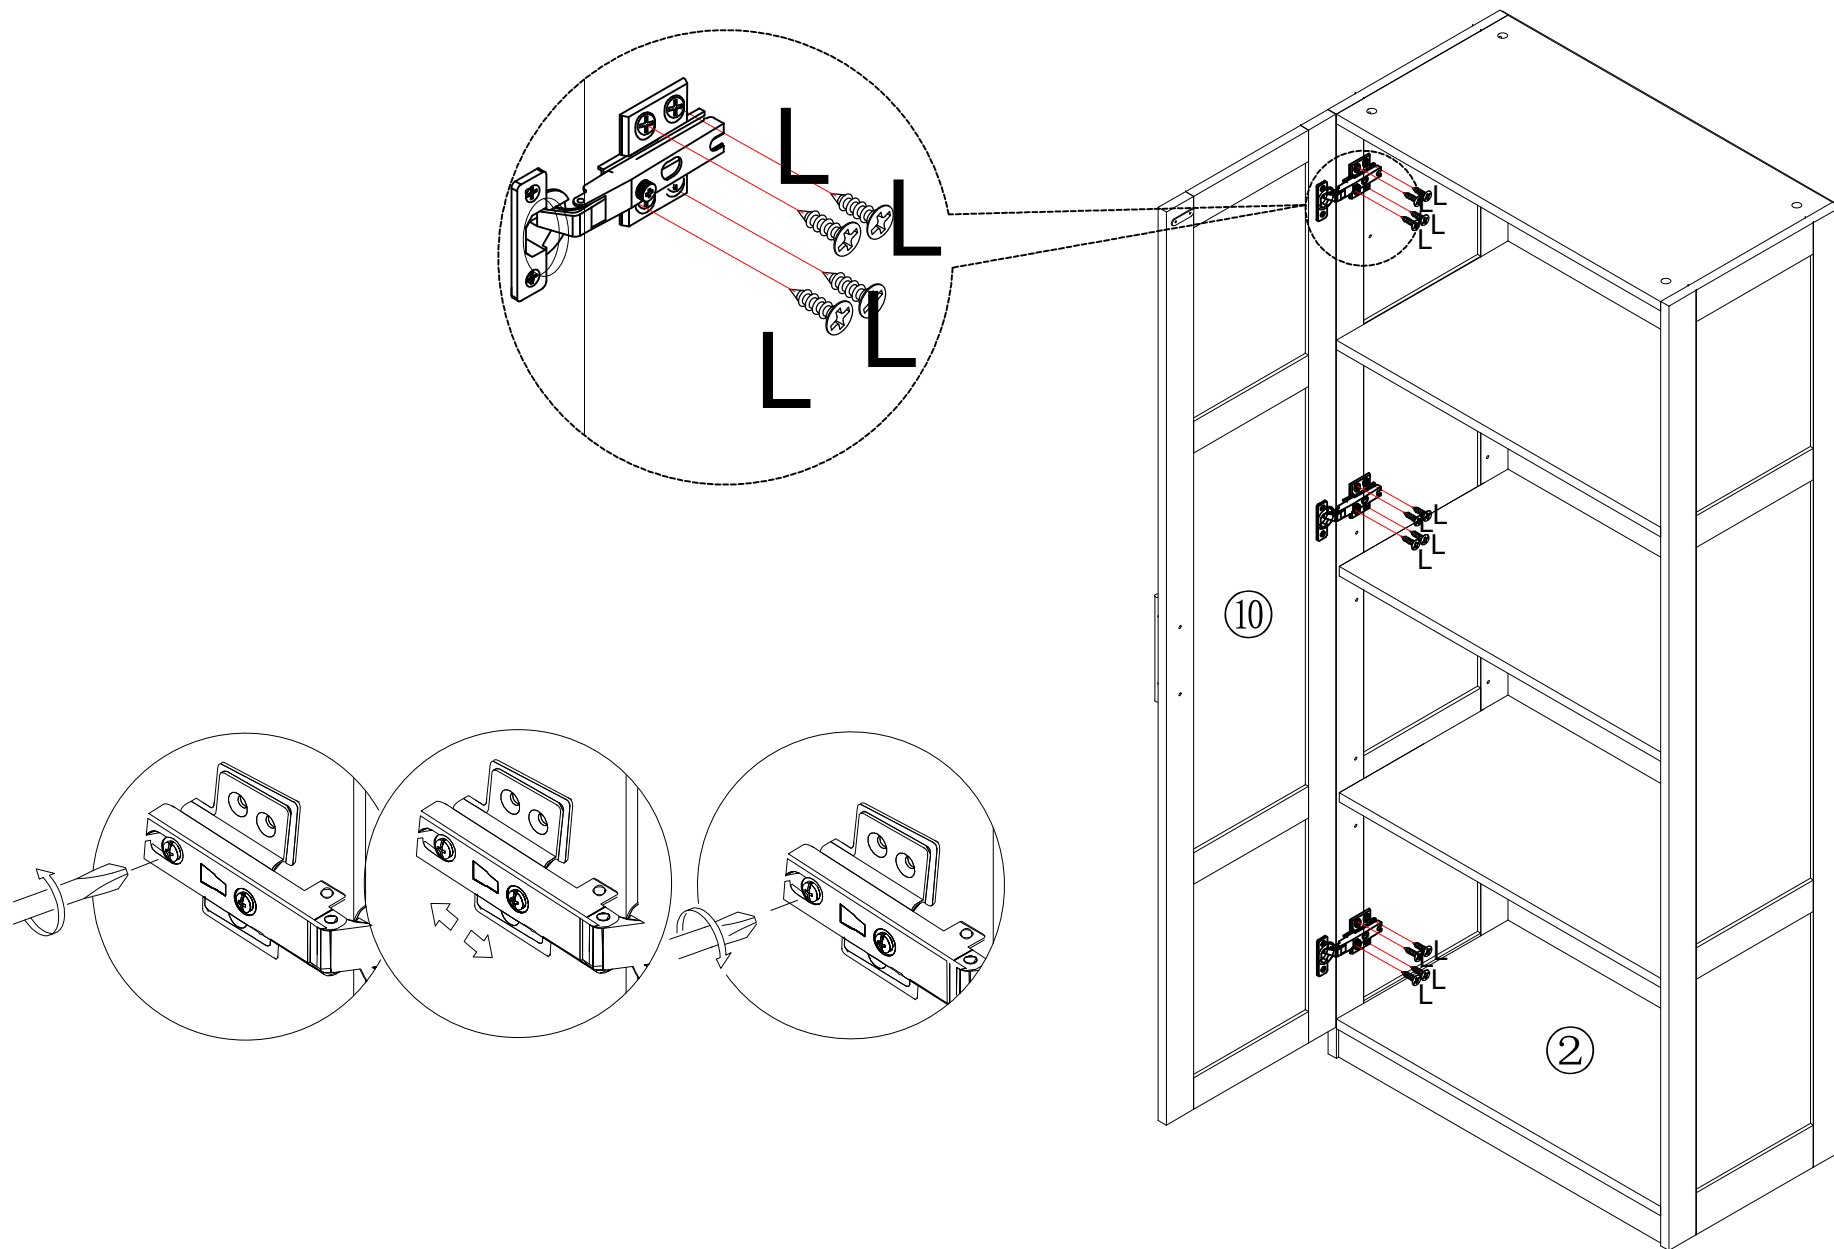


L*12



11

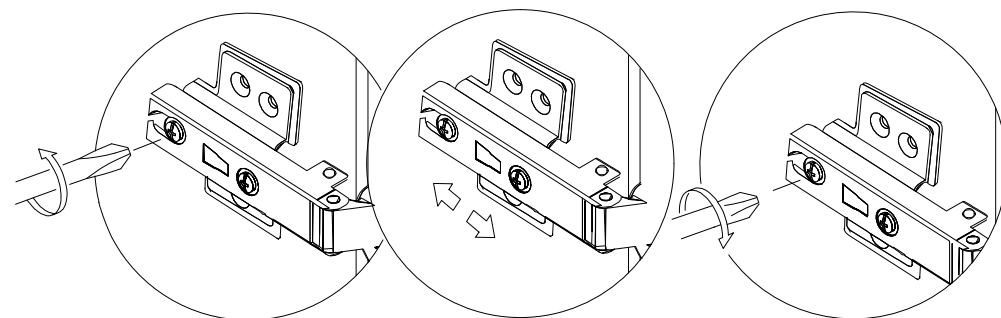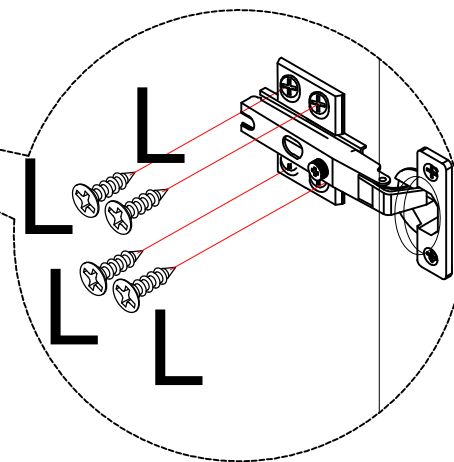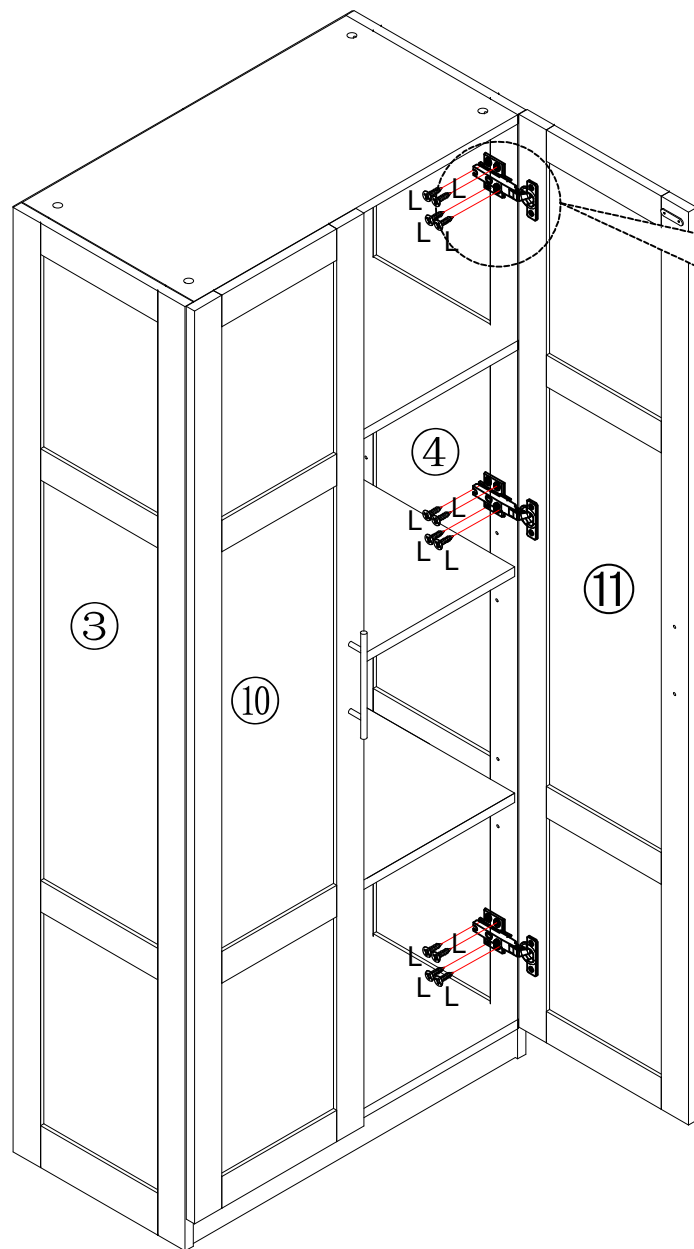


L*12

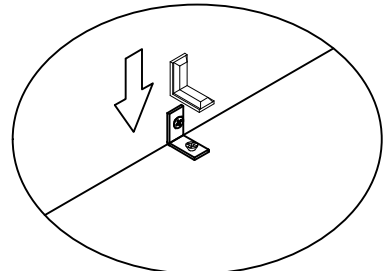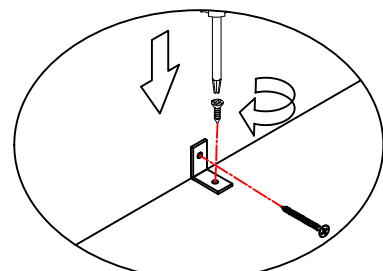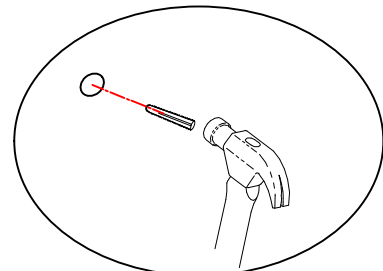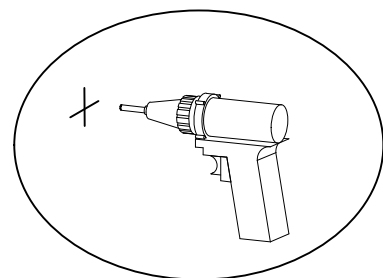

WALL

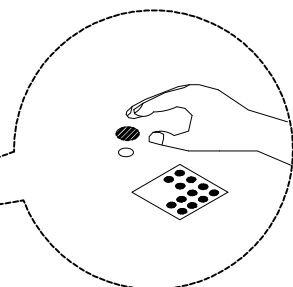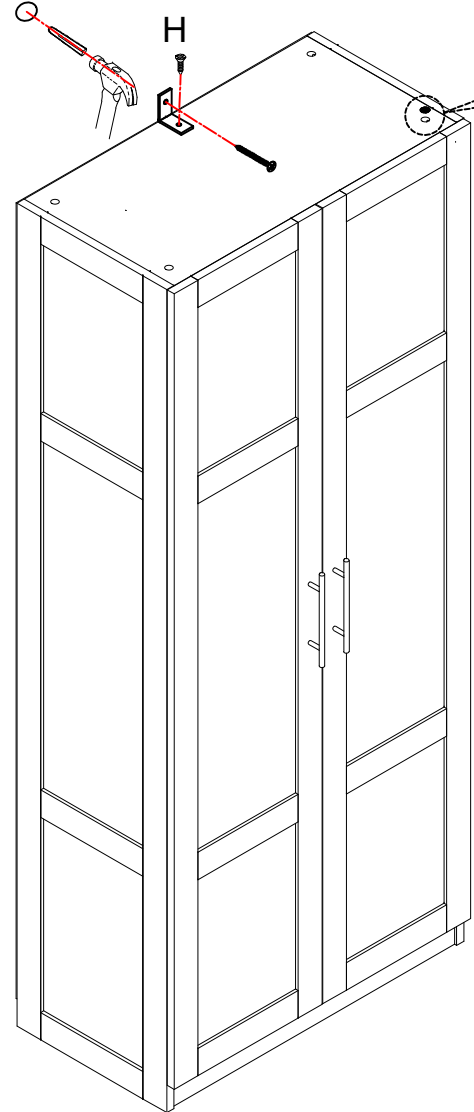

	H*1
	K*26

END